 


Features & Functions Guide



Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

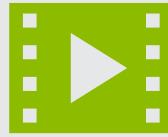

**Getting Started
With Your
New Kia**

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com

Consumer Affairs - Roadside Assistance^{†12}: 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.




The video resources should not be accessed while you are operating your Kia vehicle.



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:
www.youtube.com/KiaFeatureVideos

This document is interactive: from the Table of Contents page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (). For longer sections that cover more than one page, you can navigate between pages using the arrows ( ).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

The video resources should not be accessed while you are operating your Kia vehicle.

Getting Started



**Getting Started
With Your
New Kia**



**Vehicle Cameras
Important Tips**



**How-To Resources:
Videos & Online**



Matte Paint Care



**Your New Kia
Important
Care Tips**



**Kia Connect
Infotainment
System**

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key Remote Start / Remote Smart Parking Assist (RSPA)*	131
2	Front Seat Headrest Adjustment / Power Adjustable Driver's Seat	123-124
3	Seat Warmers / Ventilated Seats*	116
4	Folding Rear Seats	126
5	Windshield Wipers & Washers	91
6	Smart Cruise Control (SCC)	61-64
7	Normal Maintenance Schedule	151
8	Vehicle Settings - Infotainment System	27
9	Bluetooth® Wireless Technology	95-97
10	Kia Connect Activation / Kia Connect Assistance	100-101
11	Kia Access App Download / Features Guide	102-103
12	Kia Connect with Smart Navigation	104-105
13	Android Auto™ / Apple CarPlay® Setup	93-94

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Table Of Contents

WELCOME TO THE KIA FAMILY!	02
VIDEOS & NAVIGATION	03
GETTING STARTED	04
INSTRUMENT CLUSTER	
EV Instrument Cluster Overview	08
Indicators & Warning Lights	10
Electric Vehicle (EV) Indicators	11
Energy Consumption	13
Charge Warning Messages on Instrument Cluster LCD	14
Tire Pressure Monitoring System (TPMS)	18
Drive Mode Integrated Control System	20
VEHICLE SETTINGS	
Instrument Cluster LCD Modes	22
Trip Computer / Trip Modes	23
Head-Up Display (HUD)*	24
Service Interval Mode	26
Vehicle Settings - Infotainment System	27
ELECTRIC VEHICLE (EV) FEATURES	
Charging Connector - Auto/Lock Mode	29
Scheduled Charging	30
Charging Your EV	32
EV Charge Transfer / Vehicle to Load (V2L)	35
EV Mode - Infotainment System	37
Regenerative Braking with Paddle Switches	39
ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)	
Forward Collision-Avoidance Assist 2 (FCA2)	43
Blind-spot Collision-Avoidance Assist (BCA)	47
Lane Keeping Assist (LKA)	50
Blind-spot View Monitor (BVM)*	53
Safe Exit Assist (SEA)	54
Driver Attention Warning (DAW)	55
Leading Vehicle Departure Alert (LVDA)	57
Lane Following Assist (LFA)	59
Smart Cruise Control (SCC)	61
Navigation-based Smart Cruise Control (NSCC)	65
Highway Driving Assist (HDA)	66
Surround View Monitor (SVM)*	68
Remote Smart Parking Assist 2 (RSPA2)*	70
Rear View Monitor (RVM)	73
Rear Cross-traffic Collision-Avoidance Assist (RCCA)	75
Reverse/Forward*/Side* Parking Collision-Avoidance Assist (PCA)*	77
Forward/Reverse/Side* Parking Distance Warning (PDW)	78
Intelligent Speed Limit Assist (ISLA)	79

[Continued on next page](#)

Table Of Contents

[Continued from previous page](#)

DRIVER'S PANEL

Instrument Cluster Illumination Control	81
Electronic Stability Control (ESC)	81
Hill-start Assist Control (HAC)	82
Power Button	83
Power Windows, Window Lock & Central Door Lock	85
Automatic Door Lock/Unlock	86
Power/Heated Outside Mirrors	86
Electronic Child Safety Lock System*	86
Power Folding Outside Mirrors*	87

STEERING WHEEL CONTROLS

Headlights & High Beams	88
High Beam Assist (HBA)	89
Turn Signals	90
Windshield Wipers & Washers	91
Power Tilt/Telescoping Steering Wheel	92

INFOTAINMENT SYSTEM

Android Auto™ Setup	93
Apple CarPlay® Setup	94
Bluetooth® Wireless Technology	95
Steering Wheel Audio Controls	99
Kia Connect Activation	100
Kia Connect Assistance	101
Kia Access App Download	102
Kia Access App Features Guide	103
Kia Connect Infotainment System - (Non-Navigation & Navigation)*	104

CENTER PANEL

Digital Clock - Infotainment System	108
USB-C Charger Ports*	108
Multimedia USB Ports & Power Outlets	109
Wireless Smartphone Charging System	110
Automatic Climate Control System	112
Heated Steering Wheel*	116
Rotary Dial Shifter	117
Electronic Parking Brake (EPB)	118
Auto Hold	119
Seat Warmers / Ventilated Seats*	121

SEATING

Infotainment System Seat Settings*	122
Integrated Memory System*	122
Front Seat Headrest Adjustment	123
Power Adjustable Driver's Seat	124
Manual Adjustable Driver's Seat	125
Folding Rear Seats	126
Rear Occupant Alert (ROA) with Door Monitoring	127

[Continued on next page](#)

Table Of Contents

[Continued from previous page](#)

OTHER KEY FEATURES

Hood Release Lever and Latch / Sun Visor	128
Exterior Flush Door Handle Operation	129
Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)*	131
Double-Turn Lock/Unlock All	132
Digital Key 2.0 Advanced	134
Smart Power Liftgate*	138
Manual Liftgate* / Liftgate Release Button	141
Map/Room Lamps	142
Sunroof Operation	143
Cargo Cover Storage	145
Tire Mobility Kit	146
Child-Protector Rear Door Lock*	147

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	148
Seat Belts	149

MAINTENANCE CHART	150
-----------------------------------	---------------------

LEGAL DISCLAIMERS	151
-----------------------------------	---------------------



EV Instrument Cluster Overview

 
- A** POWER (PWR) - Energy consumption rate
- B** CHARGE (CHG) - Charge status of the regenerative brakes
- C** Battery State of Charge (SOC) gauge
- D** Speedometer
- E** Distance to Empty / Range
- F** Reduction gear shift indicator
- G** Odometer
- H** Regenerative braking level indicator
- I** EV energy economy



Instrument Cluster LCD Overview



EV Overview & Operation

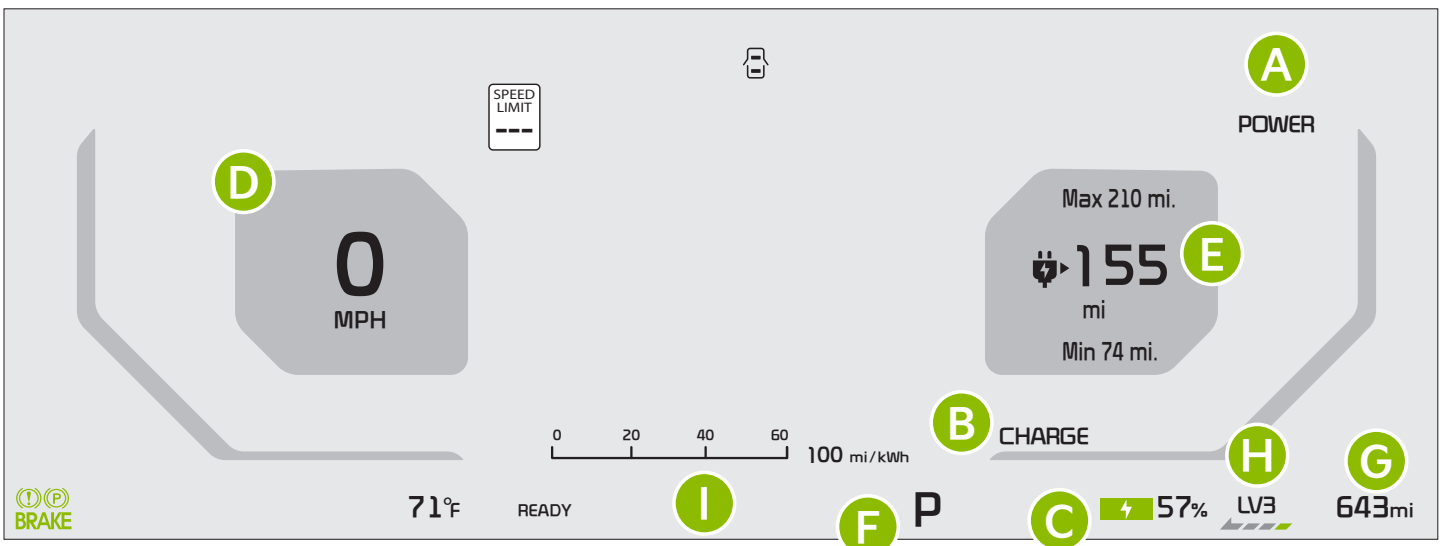

Distance To Empty (DTE) or Range **E** is the estimated distance an EV can be driven with the remaining electric energy until the battery reaches zero. DTE can vary depending on the selected drive mode, current driving conditions, traffic, driving patterns, air conditioner or heater use, and how much cargo you are carrying.

[Continued on next page](#)

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

Illustrations are for demonstration purposes only. Some indicators and warning lights may not appear in illustrations. On the vehicle, they may appear in the LCD.



Distance To Empty (DTE) / Range

[*Continued from previous page*](#)

QUICK TIPS

- When decelerating or driving downhill, regenerative braking charges the high voltage battery which minimizes energy loss and increases the Distance to Empty or Range
- When you set a destination via the on-board navigation system, DTE is calculated based on the route selected. By setting a final destination, DTE accuracy may improve. By knowing the final location, the vehicle can better predict the amount of battery energy it will need to reach that destination
- When operating the climate control, use the DRIVER ONLY function to conserve energy
- In cold weather, use scheduled heating to reduce the amount of energy consumption
- In the EV Settings, select Battery Conditioning Mode to increase the battery temperature in cold weather


REMINDERS:

- If DTE displays “Zero Miles,” you need to charge the vehicle immediately
- Most electric vehicles can drive an additional two to five miles depending on driving conditions
- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style
- Operating the climate control system may reduce the Distance to Empty



INSTRUMENT CLUSTER

Indicators & Warning Lights

-  High Beam Indicator
-  High Beam Assist Indicator
-  Light ON Indicator
-  Low Beam Indicator
-  AUTO HOLD Indicator
-  Master Warning Light
-  Electronic Brakeforce Distribution (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)
-  Icy Road Warning Light*
-  Immobilizer Indicator*
-  Seat Belt Warning Light
-  Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator*
-  Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator
-  Electronic Stability Control (ESC) OFF Indicator
-  Parking Brake & Brake Fluid Warning Indicator
-  Motor Driven Power Steering (MDPS)
-  Airbag Warning Indicator
-  All-Wheel Drive (AWD) Warning Light*
-  Anti-lock Braking System (ABS) Warning Indicator
-  LED Headlamp Warning Light*
-  Electronic Parking Brake (EPB)
-  Forward Safety Warning Light
-  Lane Safety Indicator*
-  Highway Lane Change Assist Indicator*
-  EV Service Warning Light
-  READY Indicator
-  EV Temperature Warning*
-  Charging System Warning Light
-  Regenerative Brake Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)
-  Charging Cable Connection Light
-  Power Down Warning Light
-  High Voltage Battery Low Level Warning Light
-  SNOW Mode Indicator
-  ECO Mode Indicator
-  SPORT Mode Indicator
-  Battery conditioning mode Indicator
-  Lane Following Assist Indicator
-  Drift mode indicator (DRIFT)

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD. For more information please refer to section 5 in the Owner's Manual



Electric Vehicle (EV) Indicators

A State of Charge (SOC) gauge

The State of Charge gauge displays the high-voltage battery charge status.



EV Energy Consumption

B Power / Charge Gauge

The Power / Charge gauge provides information on the energy consumption rate of the vehicle and the charge status of the regenerative brakes.

 


Tips for Economical Driving

- **POWER** - Shows the energy consumption rate of the vehicle when driving uphill or accelerating. The more electric energy used, the higher the gauge level
- **CHARGE** - Shows the charging status of the battery when it is being charged by the regenerative brakes. The more electric energy charged, the lower the gauge level

C Distance To Empty (DTE)

DTE is the estimated distance the vehicle can be driven with the remaining high-voltage battery level. The DTE will vary according to the selected drive mode and Climate Control settings.

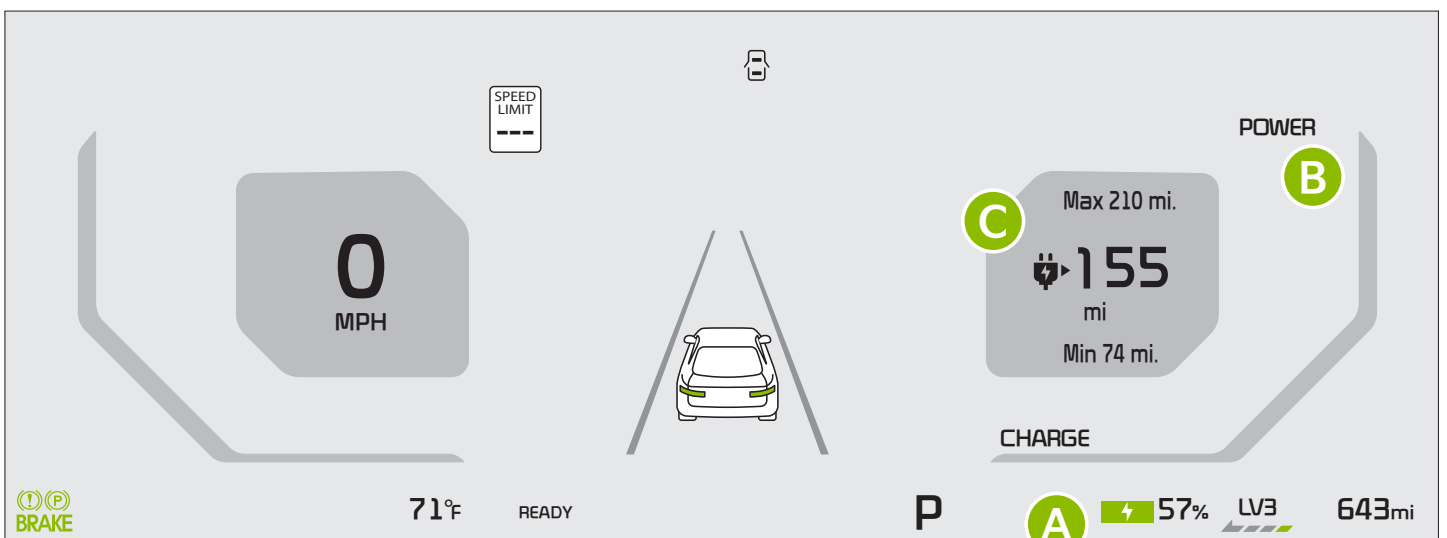








[Continued on next page](#)

Images are for illustrative purposes only.



Electric Vehicle (EV) Indicators

[Continued from previous page](#)

- READY** **Ready indicator light** - Illuminates when the vehicle is ready to drive. When the ready indicator light is blinking, the vehicle has detected a possible malfunction. Have an authorized Kia dealer address the concern as soon as possible.
-  **EV Service warning light** - Illuminates when there is a malfunction related to the electric vehicle control system. Have an authorized Kia dealer address the concern as soon as possible.
-  **Power down warning light** - Illuminates when the vehicle's speed and performance are limited for the safety of the electric vehicle.
-  **Charging cable indicator light** - Shows the charging status of the high-voltage battery. When charging, the green indicator turns on. The indicator turns off when not charging.
-  **High-voltage battery low level warning light** - Illuminates when the high-voltage battery charge level is insufficient.
-  **Regenerative brake warning lights (when both indicators are lit)** - Illuminates when the regenerative brake system is not functioning correctly.
-  **Regenerative brake warning lights (when both indicators are lit)** - Illuminates when the regenerative brake system is not functioning correctly.
-  **Battery conditioning mode indicator light** - Illuminates when the battery conditioning mode is activated.

The vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only.

Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.



Energy Consumption

There are several factors that contribute to your electric vehicle's energy consumption, including maintenance of your vehicle, driving style, weather, durability of the battery and environmental conditions.



EV Energy Consumption

Below are tips to help reduce energy consumption:

- Use Scheduled Climate settings to preheat or precool the vehicle while plugged in before driving
- Keep your vehicle in good condition with regular maintenance
- Don't "ride" the brake pedal
- Use the climate control system less often. Use the Driver Only setting
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Ensure wheels are aligned correctly
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information, refer to section 1 of the Owner's Manual.



Charge Warning Messages on Instrument Cluster LCD

Low EV Battery



Low Battery Warning - When the high-voltage battery level reaches 8% or less, this warning message appears on the Instrument Cluster LCD and the warning indicator light illuminates. Charge the high-voltage battery immediately.

Charge immediately.
Power limited



Charge immediately. Power limited - When the high-voltage battery level reaches 3% or less, this warning message appears on the Instrument Cluster LCD, the warning indicator light illuminates and the power down warning light turns on simultaneously.

The vehicle's power will be reduced to minimize the energy consumption of the high-voltage battery. Charge the high-voltage battery immediately.

Power limited



Power limited - This warning message appears when the vehicle's power is limited for the following reasons:

1. When the high-voltage battery is below a certain level, or voltage is decreasing
2. When the temperature of the motor or high-voltage battery is too high or too low
3. When there is a problem with the cooling system or a failure that may interrupt normal driving

[Continued on next page](#)

These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.



Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Power limited due to low EV battery temperature. Charge battery

Power limited due to low EV battery

temperature. Charge battery - When the outside temperature is low and you turn the vehicle on or off, this warning message may appear on the Instrument Cluster LCD. If the battery level is low and the vehicle is parked outside for a long time, vehicle power may be limited. Charging battery before driving helps increase power.

EV Battery Overheated! Stop vehicle



EV Battery Overheated! Stop Vehicle -

When the high-voltage battery temperature is too high, this warning message will appear on the Instrument Cluster LCD. Stop the vehicle and turn off the Power button so that the battery temperature decreases.

Stop vehicle and check power supply



Stop vehicle and check power supply -

When there is a failure in the power supply system, this warning message appears on the Instrument Cluster LCD. Park the vehicle in a safe location and have it towed to the nearest Kia dealer for inspection.

REMINDERS:

- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

[Continued on next page](#)

Images are for illustrative purposes only.



Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Unplug vehicle to start



Unplug vehicle to start - When starting the vehicle while the charging connector is still connected, this warning message will appear. Remove the charging connector and then start the vehicle.

Charging Door Open



Charging Door Open - When starting the vehicle while the charging door is still open, this warning message will appear. Close the charging door after charging is complete and then start the vehicle.

Remaining Time

10 h 18m (90%)



Remaining Time - Displays the remaining time to charge the battery to the selected target battery charge level, current SOC and the charging rate.

Check regenerative brakes



Check Regenerative Brakes - Displays when the regenerative brake system does not work properly. In this case, have your vehicle inspected by an authorized Kia dealer.

[Continued on next page](#)

Not all warnings and messages are displayed. These illustrations are for demonstration purposes only. Some messages may appear differently. See section 1 in the Owner's Manual for more information.



Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Charging Stopped.
Check the AC charger



Charging Stopped.
Check the DC charger



Charging Stopped.
Check the cable
connection



Charging Stopped. Check the AC/DC

charger - When there is a problem with the external AC or DC charger, when the AC charger stops charging or when the charging cable is damaged, this message will appear. Check whether there is a problem with the charger or cable. If no problem is found, see an authorized Kia dealer for further assistance.

Charging Stopped. Check the cable

connector - When the charging connector is not correctly connected to the charging inlet or the charging connector lock release button is pressed, this message will appear. If this occurs, separate the charging connector and reconnect it. Check whether there is any problem (external damage, foreign substances, etc.) with the charging connector and charging inlet. If the problem continues, see an authorized Kia dealer for assistance.

REMINDERS:



- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected



Illustrations are for demonstration purposes only. Some messages may appear differently. See section 1 in the Owner's Manual for more information.




Tire Pressure Monitoring System (TPMS)^{†21}



The TPMS indicator  functions as both a Low Tire Pressure Light and TPMS Malfunction Indicator. The indicator  will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the tire pressure drops due to the outside temperature becoming significantly lower.

The LCD screen in the Instrument Cluster will display the Low Tire Pressure indicator  showing which tire(s) is underinflated. Inflate the tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification.

 
When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate — see dealer for service.



Tire Pressure Monitoring

A

Low tire pressure

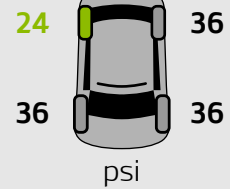

[Continued on next page](#)

These illustrations are for demonstration purposes only.

Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with TPMS system, which may cause the Malfunction Warning Indicator to illuminate.

For more information, refer to section 7 in the Owner's Manual.



Tire Pressure Monitoring System (TPMS)^{†21}

[Continued from previous page](#)

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal EV economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)

 
For more information, refer to section 7 in the Owner’s Manual.




Drive Mode Integrated Control System

There are four distinct driving modes, as well as GT* **A** and MY DRIVE* modes. Press the DRIVE MODE button **B** to select the following modes:


- **SPORT** - This mode provides enhanced acceleration and dynamic drivability. The electric energy efficiency may decrease in this mode
- **NORMAL** - This mode balances drivability and efficiency. Normal mode automatically changes the vehicle to 2WD or AWD depending on the road conditions
- **ECO** - This mode can help enhance electric energy efficiency by managing battery usage. The acceleration response may be slightly reduced in this mode. ECO mode automatically changes the vehicle to 2WD or AWD depending on the road conditions
- **GT*** - Provides sportier and firm riding for maximum performance

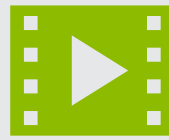

Drive Mode /
Tow Mode

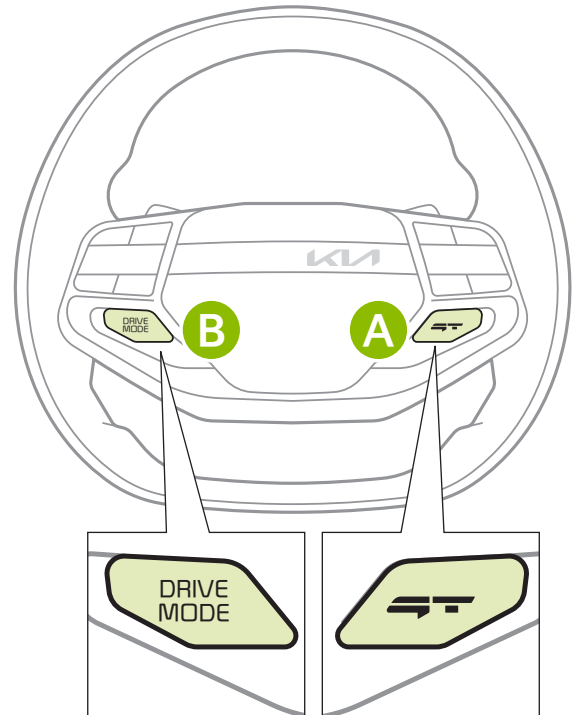 

 (Buttons located on lower sides of steering wheel)

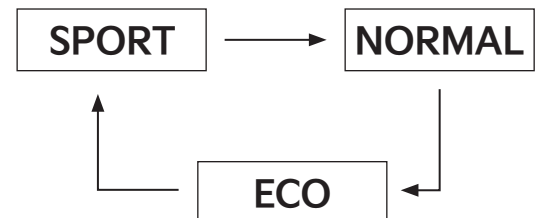

[Continued on next page](#)

Images are for illustrative purposes only. For more information on driving modes, refer to section 6 in the Owner's Manual or contact your local dealership.



 
 
 
Drive Mode Integrated Control System

[Continued from previous page](#)

An indicator in the Instrument Cluster will illuminate to show which drive mode you have selected (no indicator will appear for the NORMAL mode).

Press the GT button* **A** to select the following modes:

- **GT Mode*** - This provides a sportier and firm riding experience
- **MY DRIVE Mode*** - In MY DRIVE mode, the driver can select separate modes and combine them on the Infotainment System

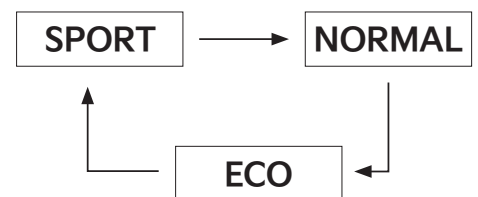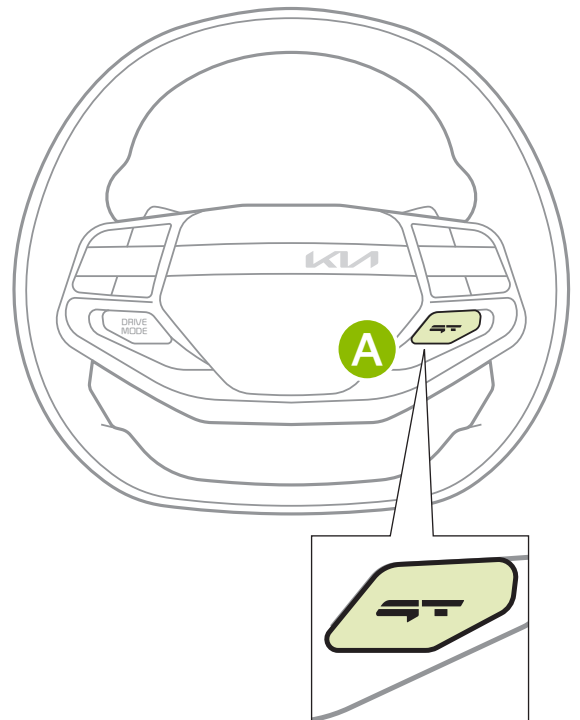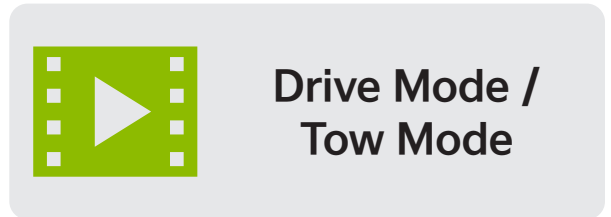

QUICK TIP

- To help reduce energy consumption:
 - Drive at a moderate speed, accelerating smoothly and at a moderate rate
 - Keep tires inflated to the recommended pressure and wheels aligned properly

Images are for illustrative purposes only. For more information, refer to section 5 in the Owner's Manual.



Instrument Cluster LCD Modes

Press Mode button  **A** to scroll through different Instrument Cluster LCD Modes.



Driving Assist: Displays information for Driver Assistance Systems



Trip Computer Mode: Displays drive info, after recharging info and accumulated info for trip distance, average energy consumption, total driving time as well as energy flow info



 
Turn-by-Turn Mode*: Displays the route guidance and destination info




Information Mode: Displays the tire pressure information and the energy flow* (AWD model)



Master Warning Mode: Displays warning messages related to the vehicle when a function is not operating normally

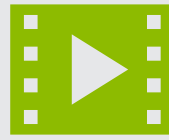

Instrument Cluster LCD Overview

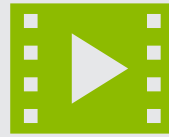 

Steering Wheel Controls



(Buttons located on left side of Steering Wheel)


Images are for illustrative purposes only. For more information, refer to section 5 in the Owner's Manual.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.



Trip Modes / Trip Computer

 The Trip Computer is a driver information system that displays information related to driving, such as average and instant accumulated info, drive info, and after recharging. It appears on the LCD display when the Power button is in the ON position and the Instrument Cluster LCD is in the Information Mode.

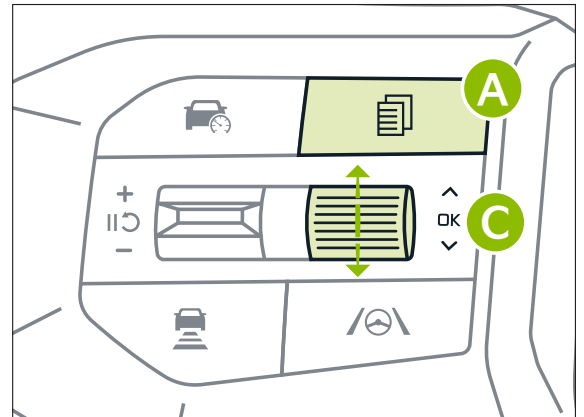


(Buttons located on left side of Steering Wheel)

To cycle through the Instrument Cluster LCD modes **B**, press the Mode button **A** on the Left side of the Steering Wheel.

When in the Trip Computer mode **B**, press the OK button **C** up/down to cycle through the screens. When displaying information screens, press and hold the OK button **C** to reset to zero.

REMINDERS:

 - Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

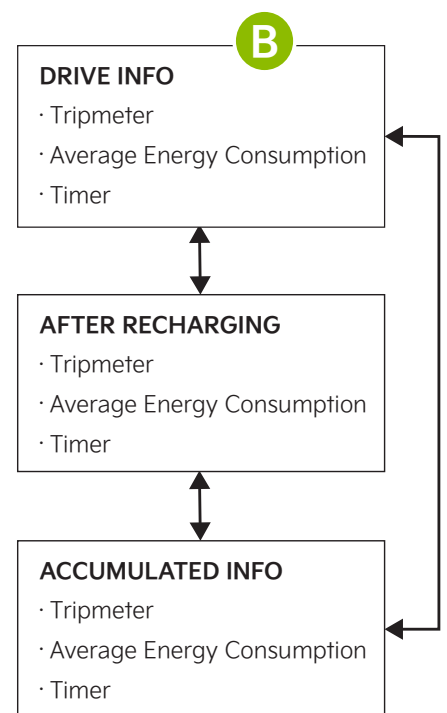

Images are for illustrative purposes only. For more information, refer to section 5 in the Owner's Manual.

 


Head-Up Display (HUD)*†4,8

Head-Up Display (HUD) is a semi-transparent display that is designed to project a snippet of information from the Instrument Cluster and Navigation System onto the windshield glass.

When in augmented reality mode, HUD shows:

- Turn By Turn (TBT) navigation information
- Traffic information
- Speedometer information
- SCC set speed information
- SCC Vehicle Distance information
- Blind-spot Safety information
- Highway Auto Speed Change information
- Lane Safety information
- Highway Driving Assist information*
- Lane Following Assist information
- Surrounding Vehicle information

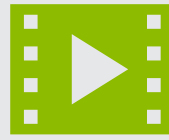

Head-Up Display



EV Features & Settings



Image is for illustrative purposes only and may not reflect actual feature or operation

[Continued on next page](#)

Images are for illustrative purposes only. When engaged, HUD is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road. See section 5 in the Owner's Manual for more information.



Head-Up Display (HUD)*†4,8

[Continued from previous page](#)

Head-Up Display (HUD) Vehicle Settings

Drivers can adjust the HUD settings from the Vehicle Settings. Press the **SETUP** key/button on the Infotainment System.

Select **VEHICLE**, then HEAD-UP DISPLAY.

HUD settings include:

- Display Mode
- Display Control
- AR Matching Adjustment: Adjusts the position of the augmented reality content
- Content Selection: Select which features display on the windshield

REMINDERS:

- The HUD image on the windshield glass may not be visible in these cases:
 - The driver has poor sitting posture
 - The driver is wearing polarized sunglasses
 - There is an object covering the HUD
 - The driver is driving on a wet road
 - There is excessive lighting inside or outside the vehicle
 - Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
 - If Turn By Turn navigation information is selected as HUD content, TBT information will not be displayed on the LCD

When engaged, HUD is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road. See section 5 in the Owner's Manual for more information.



Service Interval Mode

To enter Service Interval mode, press the **SETUP** button on the Infotainment System screen. Select **VEHICLE**, then CLUSTER.

Select SERVICE INTERVAL. The system will display the number of miles remaining until next service is due, as well as type of service. When service is required, the following will be displayed: **Service Required**.

To reset the Service Interval, go to RESET when in SERVICE INTERVAL menu.



Settings - Service Interval Mode & Maintenance



(Message on Cluster Display)

Images are for illustrative purposes only. Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

For more information, refer to section 5 in the Owner's Manual.



Vehicle Settings - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the **SETUP** key or the onscreen **SETUP** button, when the vehicle is at a standstill, Rotary Dial Shifter Knob in Park, and while the Power button is in the ON position. Then select **VEHICLE** to enter the Vehicle Settings menu.



Vehicle Settings

Type 1 Vehicle Settings*:

Driver Assistance*:

 
- Warning Methods
- Smart Cruise Control
- Driving Convenience
- Speed Limit
- Driver Attention Warning
- Driving Safety
- Parking Safety

Drive Mode*:

- MY DRIVE MODE
- Brake Mode
- Drive Mode Change Alert
- Set the Trailer Weight
- Climate Control ECO mode

Active Sound Design*:

- Largest, Moderate, Smallest, Change/Off

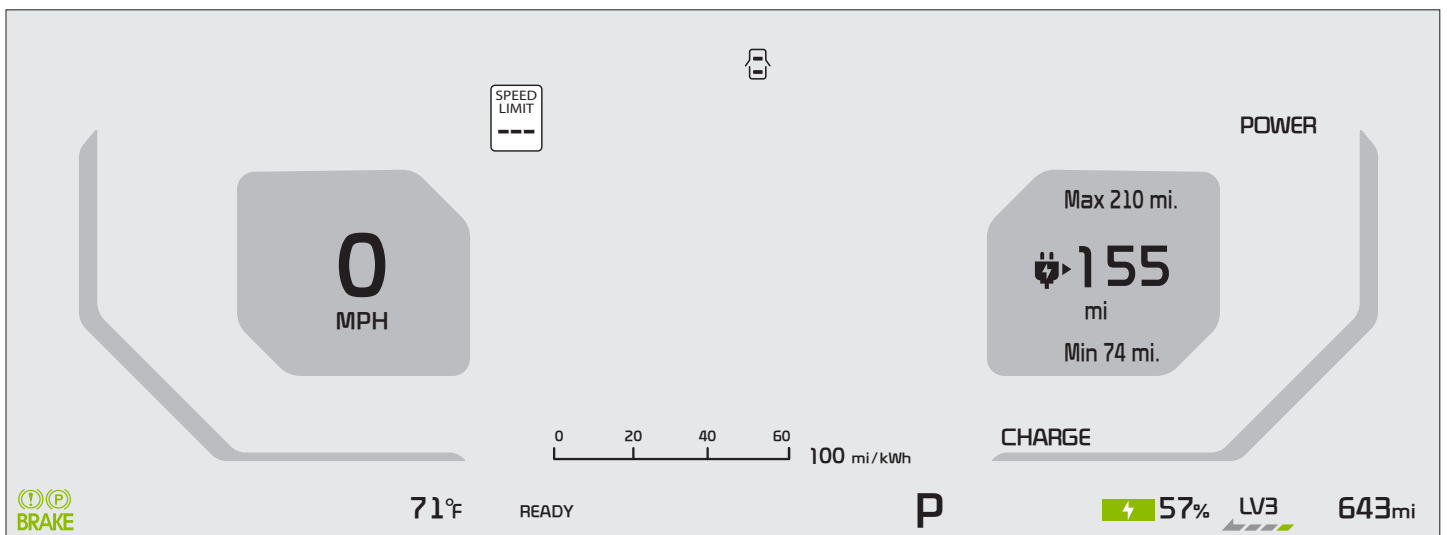

[Continued on next page](#)

Images are illustrative purposes only. Display and buttons may vary.



Vehicle Settings - Infotainment System

[Continued from previous page](#)

Climate:

- Recirculate Air
- Automatic Ventilation
- Defog/Defrost Options
- Climate Features
- Link to Climate Settings for Auto-Adjustment

Seats*:

- Link to Climate Settings for Auto-Adjustment
- Seating Easy Access
- Seat Position Change Alert
- Smart Posture Care
- Smart Support
- Ergo-Motion Seat

Lights:

- Ambient Lighting
- One-Touch Turn Signal
- Welcome Mirror/Light
- Headlight Delay
- Lighting Patterns
- Travel Mode
- High Beam Assist
- Intelligent High Beams
- Interior Lights Always On

Door:

- Auto Lock
- Auto Unlock
- 2-Press Unlock
- Power Trunk/ Liftgate
- Power Trunk/ Liftgate Opening Speed
- Power Trunk/ Liftgate Opening Height
- Smart Trunk/ Liftgate
- Open Windows Remotely

Digital Keys*:

- Smartphone Key
- NFC Card Key
- Digital Key Information

Convenience:

- Rear Occupant Alert*
- Service Interval
- Oil Change Reminder
- Wireless Charging System for Mobile Devices
- Auto Rear Wiper (in R)
- Smart Glass Tint
- Trailer Checklist

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving. Actual vehicle settings may vary by model. For more information, refer to the Car Infotainment System Quick Reference Guide.



Charging Connector - Auto/Lock Mode



The Charging Connector can be set to various locking modes while in the charging inlet and charging (always lock, lock while charging, or do not lock). To

select the locking mode, go to Vehicle Settings in the Infotainment System. Press the **SETUP** key on the Infotainment System. Select **EV**, and CHARGING CONNECTOR LOCKING MODE **A**.



Emergency Release: If the charging connector is not unlocking, then use the emergency release lever inside the trunk. Turn the Emergency Release cover to open **B** and remove. Pull the Emergency Release lever **C** to unlock the charging connector.

<p>Smart Regeneration System Medium deceleration</p> <p>Charging connector locking mode A Always lock</p> <p>Smart Regeneration System Low</p>	<p>Eco vehicle</p> <p>Always lock The standard charging connector will lock upon connection. It will unlock when the doors are unlocked.</p> <p>Lock while charging The connector will lock when standard charging starts. It will unlock when charging is complete.</p> <p>Do not lock The connector will not lock during standard charging</p>
--	---

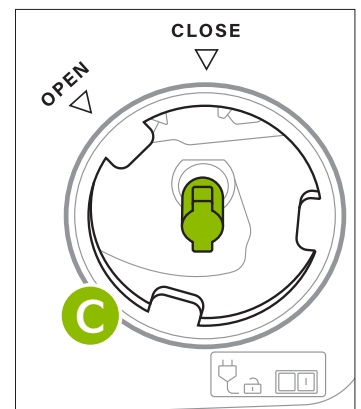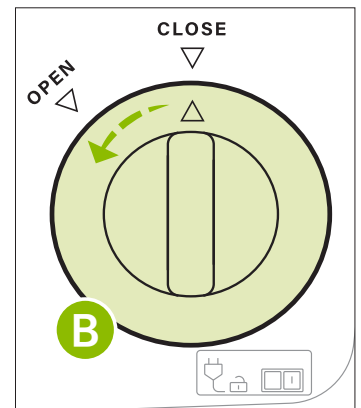  

(Cover is located on right side panel inside the liftgate)

QUICK TIPS

- If in lock mode & the doors are unlocked, the charging connector unlocks, but if the charging cable is not disconnected within 15 seconds, the connector will automatically lock again
- If the charging connector is unlocked but all the doors are locked, the connector will automatically lock
- If charging does not work, disconnect the connector and try charging again

Images are for illustrative purposes only and may not reflect actual feature or operation.



Scheduled Charging

Charging times can be set through the Infotainment System Vehicle Settings. Select EV, then CHARGING AND CLIMATE. You can also use the Scheduled Charging* feature on the Kia Access app^{†2}.

The Kia Access app^{†2} can help you find the nearest charging station, and also displays charging status and Scheduled Charging information. On your smartphone, go to an app store or marketplace to download the Kia Access app^{†2}.

 


REMINDERS:

- When Scheduled Charging is set and the charger is plugged in, charging of the electric vehicle will not begin until the time and date set.

Deactivate Scheduled Charging:

Depress the Charging button **A** to temporarily disable the scheduled charging feature when immediate charging is required.

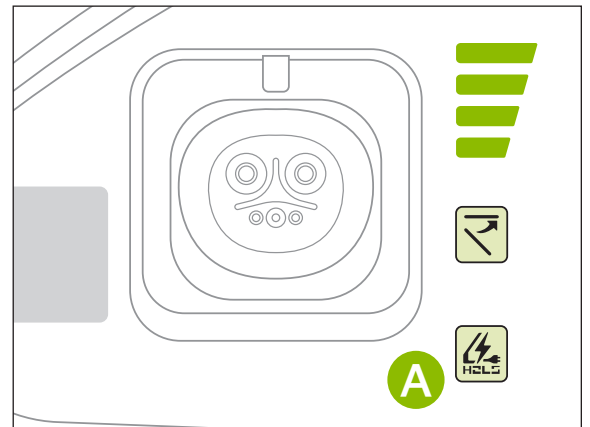

[Continued on next page](#)

Images are for illustrative purposes only.



Scheduled Charging

[*Continued from previous page*](#)

QUICK TIP

- When you press the Deactivate Scheduled Charging button the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting in the Infotainment System's Vehicle Settings or the Kia Access⁺² smartphone app.

REMINDERS:

- For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 1 in the Owner's Manual
- Scheduled charging may not be available at public chargers



Charging the EV

AC Charging or “Normal” / Level 2 Charging

An AC Charger or Level 2 Charger, 240-volt/50-amp, is the recommended charging system for your EV. This type of charger uses 240 volts of electricity and

takes approximately 9 hours for a full charge (extended batteries may take longer). This charger may be able to be installed at your home by a professional electrician or can be found at a public charging station.



EV Charging Settings

REMINDER: The shape of the charger and how to use the charger may be different for each manufacturer. Please see section 1 in the Owner’s Manual for more information.

DC Charging or “Fast” / “Ultrafast” / Level 3 Charging

A DC Charger or “Fast” / “Ultrafast” / Level 3 Charger is usually found at public charging stations. When the vehicle battery is low, this type of DC charge may charge an EV 10-80% in as little as 63 minutes (extended batteries may take longer). An ultra fast DC charger may charge from 10-80% on a 350kW charger in approximately 18 minutes.

REMINDER: Kia recommends minimizing the frequent use of DC fast charging because it can reduce the lifespan of the battery.

QUICK TIP

- An AC Charger or Level 2 Charger, 240-volt/50-amp, is recommended for regular charging of the vehicle.

REMINDER: For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 1 in the Owner’s Manual.


[Continued on next page](#)

 


Charging the EV



[Continued from previous page](#)

To charge your EV:


- Press the “P” button **A** on the Rotary Dial Shifter to place the transmission in Park. Engage the parking brake by pulling up the Electronic Parking Brake (EPB) button **B** and then power off the vehicle
- Ensure scheduled charging is not set on the Infotainment System or the Kia Access App^{†2}. You can also press the Scheduled Charging Off button **C** near the charge port
- To open the charge port door, you can use a Voice Recognition command, or press the left edge of the charge port door **D** or press the Charging Door Open button **E** on the Driver’s Panel inside (the charging door can be opened when the vehicle is unlocked)
- Hold the charging connector handle and connect it to the charging inlet **F** by pushing the connector until you hear a clicking sound
- Charging begins automatically (ensure the charge indicator light  is illuminated red on your Instrument Cluster, indicating the vehicle is charging, and ensure scheduled charging is not set)

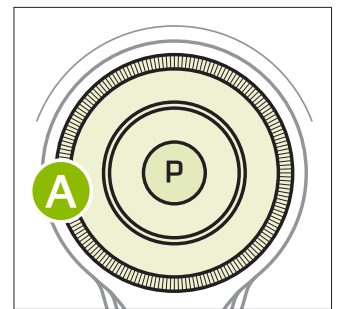

  (Located on center console below Power button)

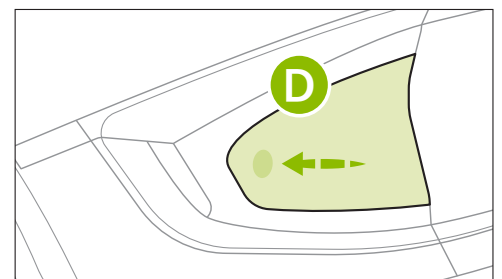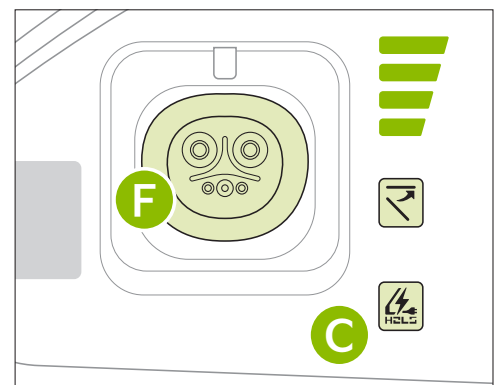

(Charger door on left rear of vehicle)

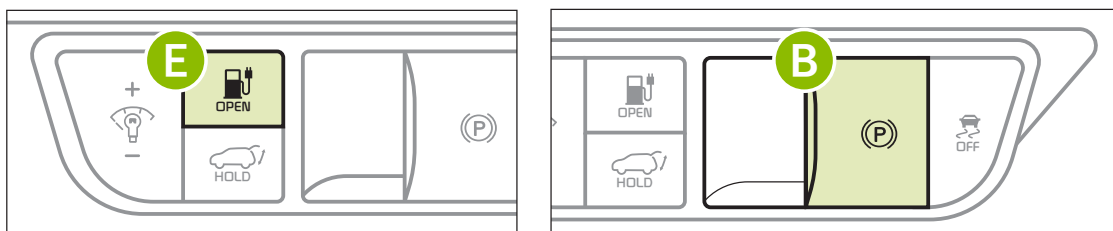 

(Panel located on left side of Steering Wheel)

REMINDER: If Scheduled Charging is set, charging may not begin immediately until the set time.

[Continued on next page](#)

Images are for illustrative purposes only.

 


Charging the EV

[Continued from previous page](#)

Checking the Charging Status

The charging status can be checked by viewing the charging status indicator **A** next to the charging inlet or on the dash panel, in the Instrument Cluster, or by using the Kia Access App^{†2}. The lights will progressively become lit as the vehicle approaches a full charge.

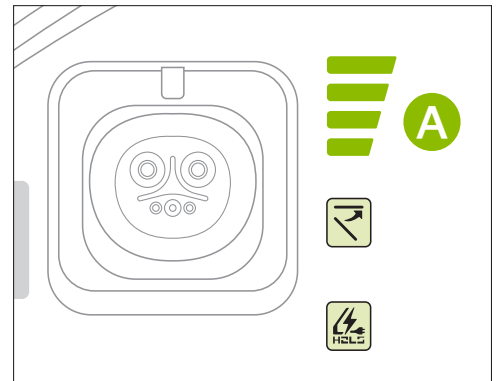

REMINDER: For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 1 of the Owner's Manual.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
 
 


EV Charge Transfer / Vehicle to Load (V2L)*

EV Charge Transfer / Vehicle to Load (V2L) allows you to use the vehicle's high voltage battery to power certain electrical devices like home appliances or other small electronic devices. V2L can also be used to charge items like electric bikes or another electric vehicle.

If equipped, there are two ports in the interior and exterior. The interior port **A** is under the rear seat and the other is the charging port for your EV. If your EV's high-voltage battery discharges to the limit set, the system will automatically stop supply to the ports. Set your EV's battery discharge limit in the Infotainment System's Settings **B**. Press the EV button onscreen. Select VEHICLE TO LOAD (V2L), and EV CHARGE TRANSFER SETTINGS.

Interior Port - The EV Power button needs to be on to operate the port. Check the indicators on the port to ensure power is on.

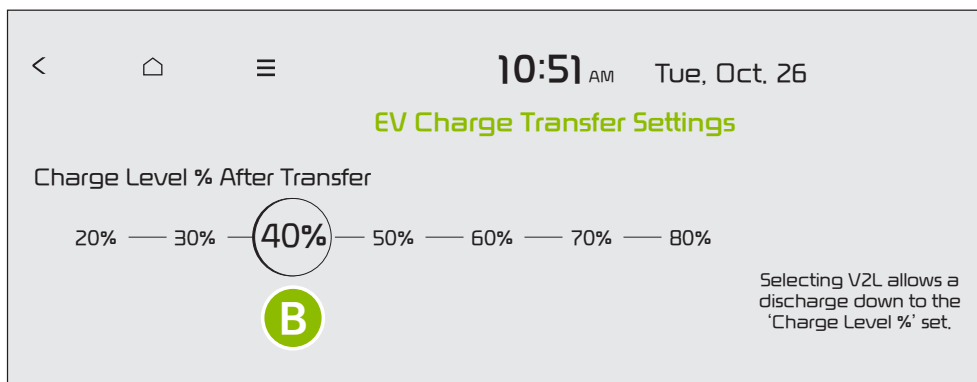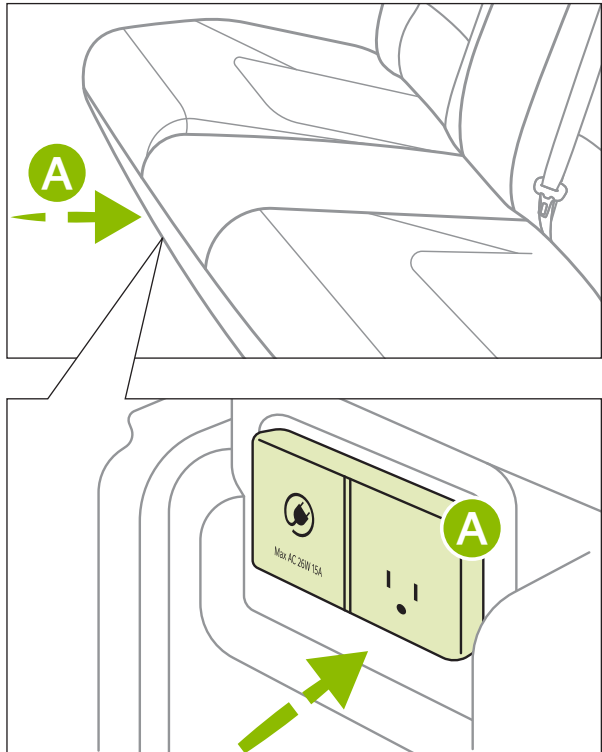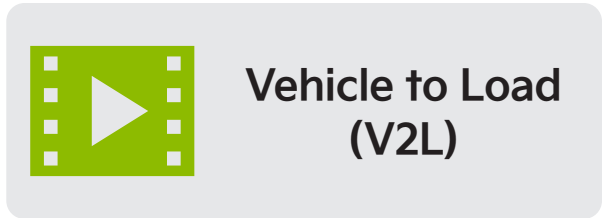

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 1 in the Owner's Manual for more information.



 
EV Charge Transfer / Vehicle to Load (V2L)*

[Continued from previous page](#)

Exterior Port - Open the cover of the V2L connector **A** and connect your appliance or electronic device. Connect the V2L connector to the charging inlet on the EV, and press the button **B** on the connector.



Vehicle to Load (V2L)

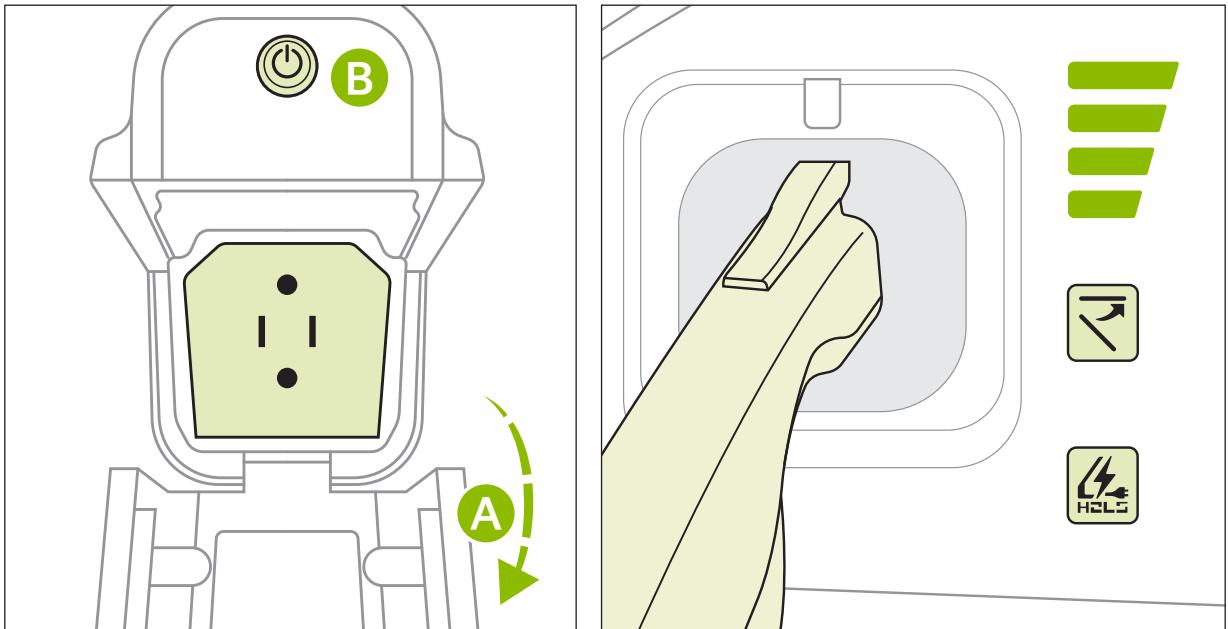

(Trickle / normal charge shown)


REMINDER: Maximum wattage is 1.9 kW, or 1,900 watts.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 1 in the Owner's Manual for more information.




EV Mode - Infotainment System

 EV Mode on the Infotainment System screen allows you to navigate several menus that include information on available range, energy information, next departure setting, charging and climate info, vehicle-to-load (V2L) setting, nearby charging stations and EV settings. To go to EV Mode, swipe the Home screen to see the menu buttons. Press the EV button to enter EV Mode.

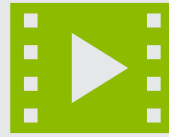

EV Modes & Settings

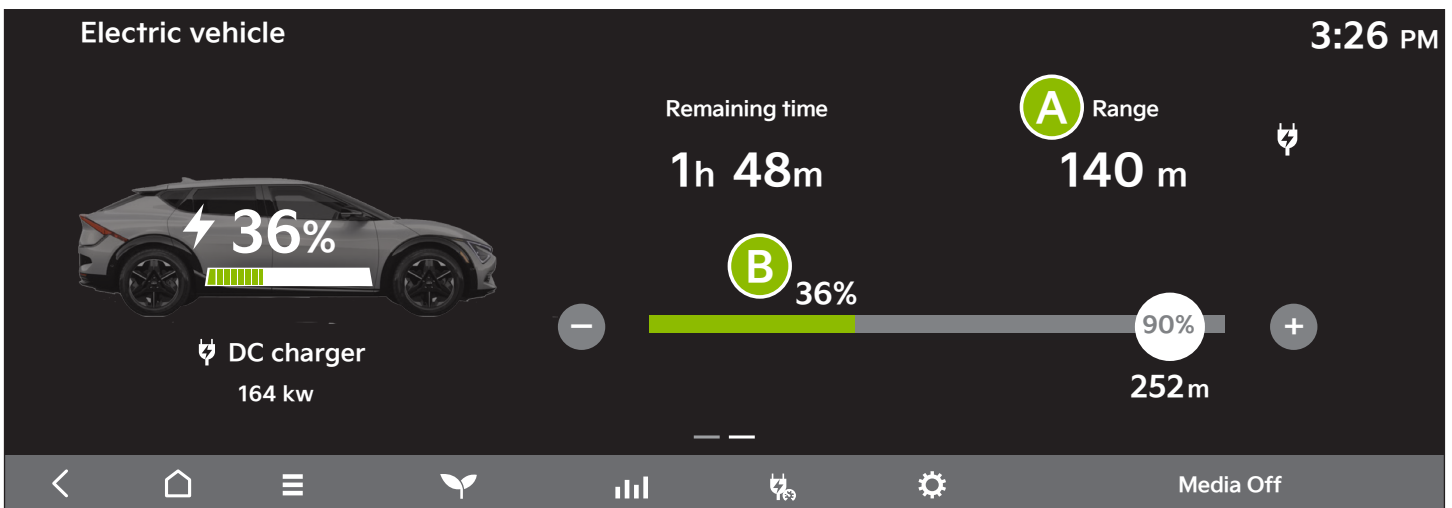 

A Available Range - Displays the estimated available driving distance according to the vehicle's current location and charge amount. The first distance is with the Climate Control on. The second is with the Climate Control off

The estimated range is based on a number of factors and assumes optimal driving conditions, efficient driving habits and a straight road. Actual range will vary with options, driving conditions, driving habits, vehicle maintenance, charging practice, battery age, weather, temperature and your vehicle's condition. Battery capacity will decrease with time and use. For more information on range, please see www.fueleconomy.gov

B Energy Information - Displays battery charge information and electrical power consumption

[Continued on next page](#)


Images are for illustrative purposes only.



ELECTRIC VEHICLE (EV) FEATURES

EV Mode - Infotainment System

 [Continued from previous page](#)

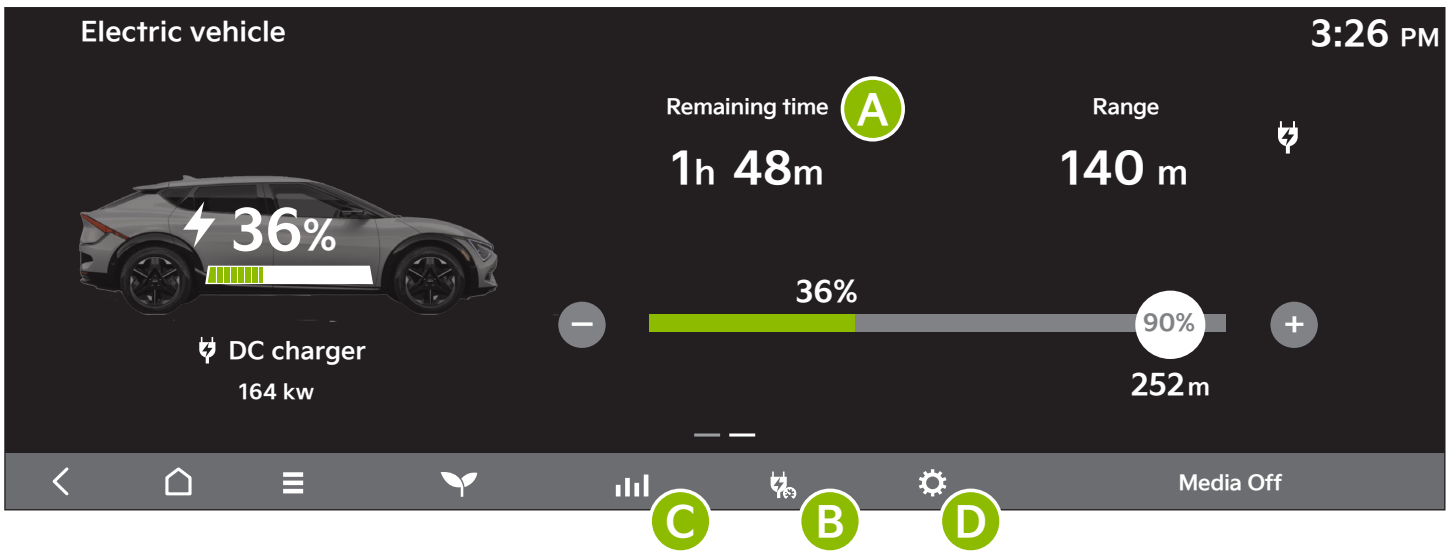

- A Next Departure** - Displays the date and time set for the next battery charge
- B Schedule Charging and Climate** - Allows the user to set the charging schedule and climate
- C Vehicle to Load (V2L) / EV Charge Transfer** - Displays the battery discharge limit when powering external equipment and devices
- D EV Settings** - Allows the user to change the Battery Conditioning, warning and EV Route settings

See section 1 of the Owner's Manual or the Car Infotainment System's Quick Reference Guide for more detailed information on screens.

Illustration is for demonstration purposes only. Some items may appear different or vary in illustrations.



 
Regenerative Braking with Paddle Switches

The regenerative braking system charges the battery when coasting or when you use the brakes to stop the vehicle. Use the Paddle Switches to adjust the regenerative braking level from 0 to 3 during decelerating or braking. The level will be displayed on the Instrument Cluster **A**.

- Pull the left paddle switch **B** to increase regenerative braking and deceleration
- Pull the right paddle switch **C** to decrease regenerative braking and deceleration

The Paddle Switches do not operate when:


- Both paddle switches are pulled at the same time
- The vehicle is decelerating by depressing the brake pedal
- Cruise Control or Smart Cruise Control (SCC) is active

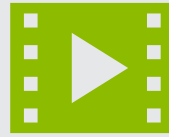


Regenerative Braking - Paddle Switches, Drive Mode



 Smart Regeneration

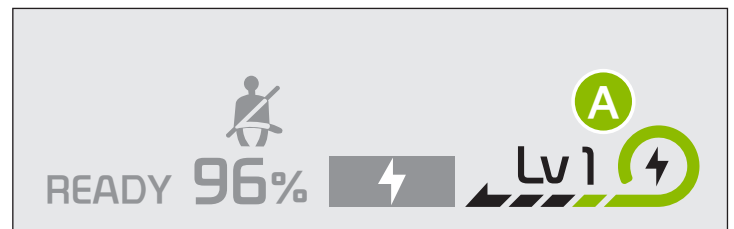

 (Indicator on lower left corner of Instrument display)

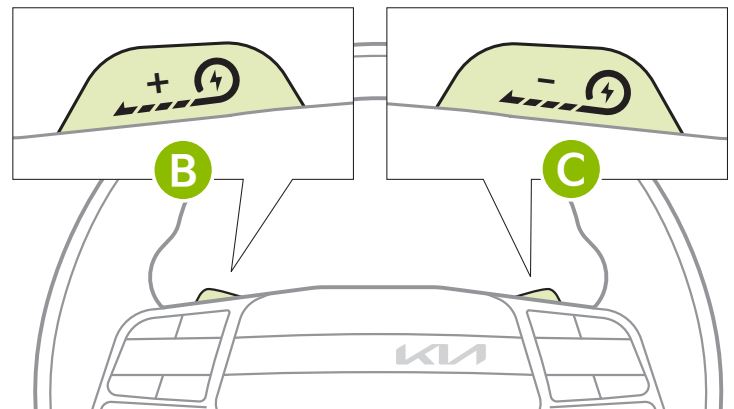

[Continued on next page](#)

For illustrative purposes only. Your actual operation, display, buttons and/or features may vary.

For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.



Regenerative Braking with Paddle Switches

[Continued from previous page](#)

i-Pedal

i-Pedal driving controls the vehicle speed by the accelerator pedal, both acceleration and deceleration. To activate i-Pedal:

- Pull the left side paddle switch **A** to Level 3 regenerative braking (see indicator on Instrument Cluster)
- Then pull the left side paddle switch **A** once again when the regenerative braking level is set to Level 3

 
The i-Pedal indicator symbol will be illuminated on the Instrument Cluster.



Regenerative Braking - i-Pedal



Regenerative Braking - Paddle Switches, Drive Mode

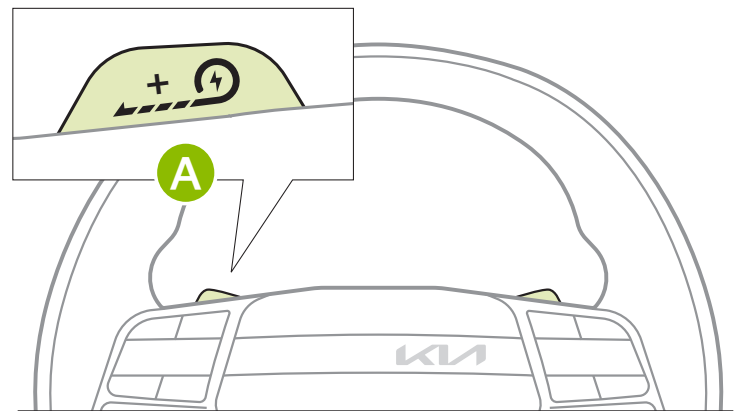

QUICK TIP

- Each of the different Drive Modes allows the regenerative braking level to be set at the driver's preference.

REMINDERS:

- The driver's seat belt must be fastened to operate i-Pedal driving
- i-Pedal will reset after each vehicle power cycle

[Continued on next page](#)

Images are for illustrative purposes only.

Do not solely rely on i-pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Always use pedal braking when necessary. Pay attention to the road condition ahead and apply the brake if necessary.

For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.



 
 
Regenerative Braking with Paddle Switches

[Continued from previous page](#)

One-pedal driving

One-Pedal Driving increases the regenerative braking amount to above level 3 and may slow the vehicle down by pulling down the left switch.

- Pull and hold the left paddle switch **A** while coasting to activate One-Pedal Driving
- When the vehicle speed is above 2 mph, release the left paddle switch **A** for less than 0.5 seconds to return to the previously set level of regenerative braking
- When the vehicle speed is below 2 mph, One-Pedal Driving can stop the vehicle even though the left paddle switch is released

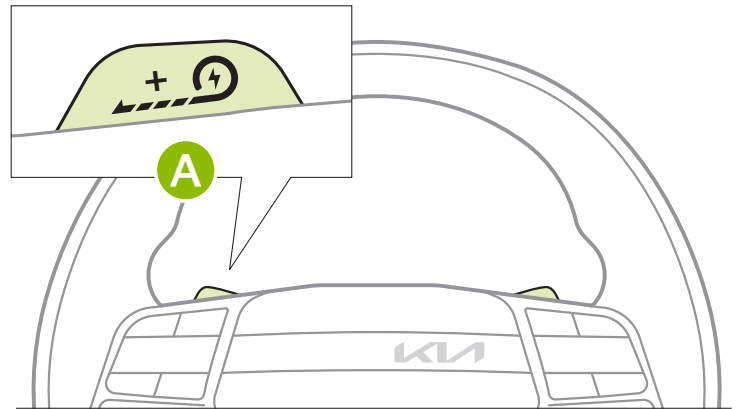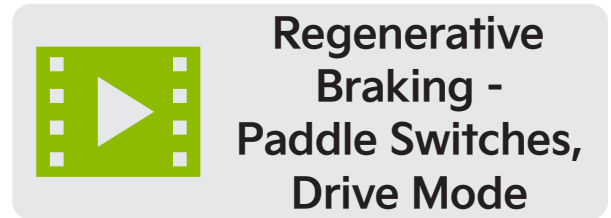

REMINDER: The driver's seat belt must be fastened to operate one-pedal driving.

[Continued on next page](#)

Images are for illustrative purposes only.

Do not solely rely on one-pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Always use pedal braking when necessary and pay attention to the road conditions ahead and apply the brake if necessary.



Regenerative Braking with Paddle Switches

 
 
[Continued from previous page](#)

Smart Regeneration System

This system is designed to automatically adjust the regenerative braking level based on a vehicle being detected in front and road conditions.

- Pull and hold the right paddle switch **A** for more than 1 second to turn on/off the automatic change of the regenerative braking. The minimum regenerative braking level can be adjusted when in AUTO mode by using the left and right Paddle Switches

- Adjust the Smart Regeneration levels in the Vehicle Settings on the Infotainment System by pressing SETUP, EV, and then SMART REGENERATION and select STRONG/MEDIUM/GENTLE will be displayed on the Instrument Cluster. AUTO regenerative brake **B** adjusts regenerative braking based on the distance with the vehicle in front and its speed

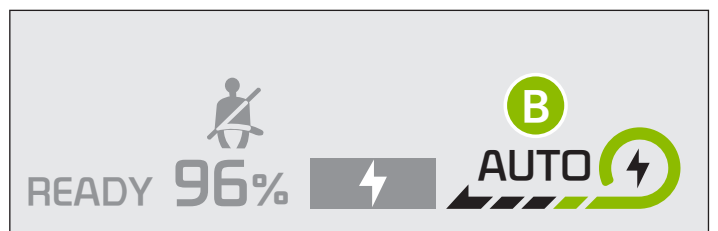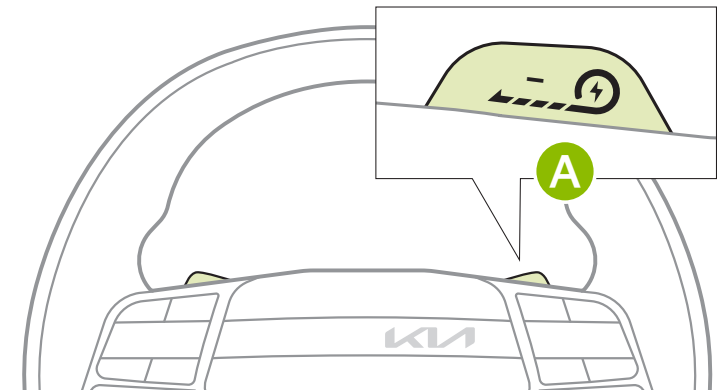

(Indicator on lower left corner of Instrument display)

Images are for illustrative purposes only.

Smart Regeneration is a supplemental system for the driver's convenience. Do not solely rely on this system to stop the vehicle or avoid collisions. Always cautiously look ahead to prevent unexpected or sudden situations.



Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

Forward Collision-Avoidance Assist 2 is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA2 detects an increased risk of collision, it may automatically apply the brakes or steer the vehicle* to potentially reduce the effects of a possible collision **B**.

Junction Turning function **C** may help avoid a collision with an oncoming vehicle in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.

 
Junction Crossing function* **D** may help avoid a collision with oncoming vehicles on the left or right side when crossing an intersection by applying emergency braking.

Direct Oncoming Response function may reduce the vehicle speed and temporarily apply braking when FCA2 detects a vehicle is approaching directly in front.




[Continued on next page](#)




Forward Collision-Avoidance Assist (FCA) - Advanced Features

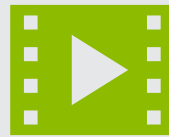

   Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

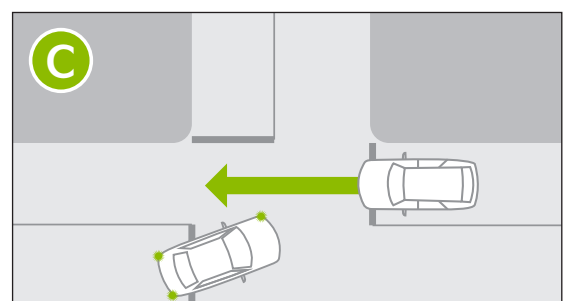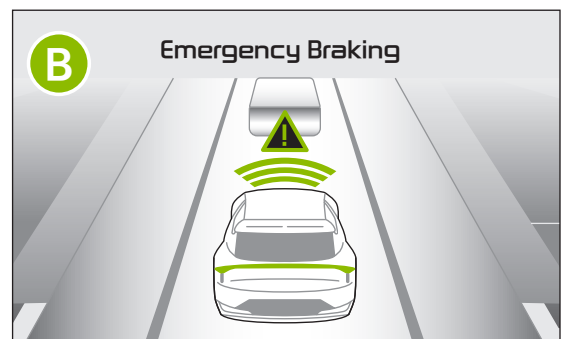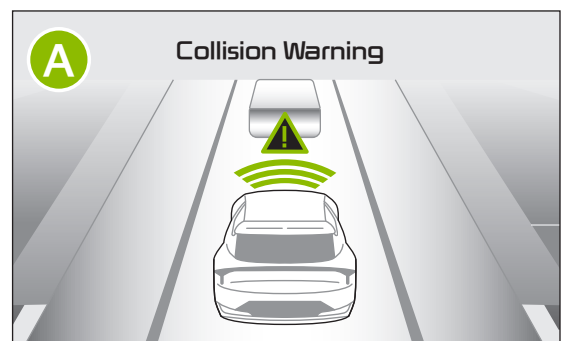

(Junction Turning)

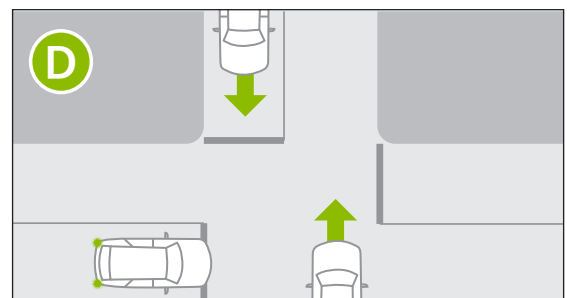 

(Junction Crossing)

For illustrative purposes only. Your actual operation, display, buttons and/or features may vary.



Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

[Continued from previous page](#)

Lane-Change Oncoming function* **A**

A may help avoid a collision with an oncoming vehicle when changing lanes by assisting the driver's steering.

Lane-Change Side function* **B** may help avoid a collision with the vehicle ahead in the next lane when changing lanes by assisting the driver's steering.

 
Evasive Steering Assist function* **C** may help avoid a collision with a vehicle, pedestrian or cyclist ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering. If a pedestrian or cyclist is ahead in the same lane when a risk of collision is detected, FCA may warn the driver and if there is space to avoid collision in the lane, it will assist the driver's steering.




Forward Collision-Avoidance Assist (FCA) - Advanced Features




Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

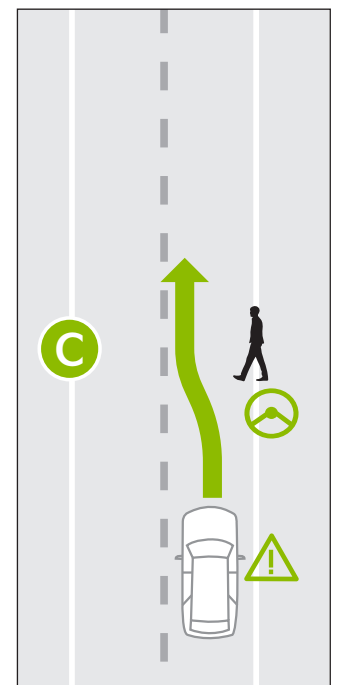

(Evasive Steering Assist)

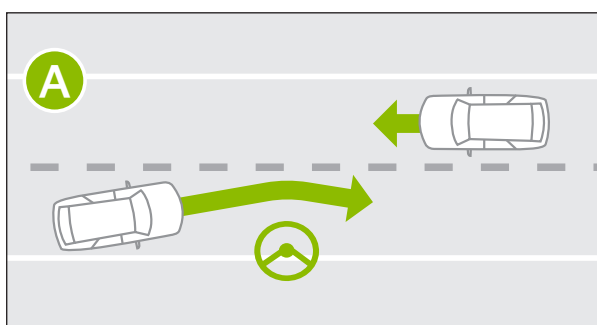 

(Lane Changing - Oncoming Traffic)

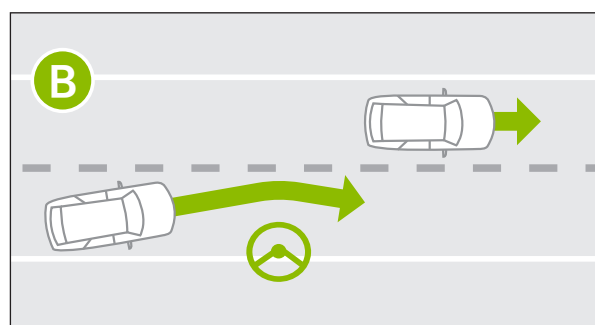 

(Lane Changing - Side)

REMINDER:

- Once the risk factors are not detected, these functions will deactivate, and the driver must steer the vehicle.

[Continued on next page](#)

For illustrative purposes only. Your actual operation, display, buttons and/or features may vary.



Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

[Continued from previous page](#)

FCA2 Settings:

- FCA2 can be turned ON/OFF by going to the Vehicle Settings in the Infotainment System
- To access FCA2, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVING SAFETY, scroll through the selections and press the button to toggle the features on or off
- **Forward safety:** Collision warning or emergency braking will operate in a collision-imminent situation. If you deselect the setting, Forward safety will turn off and the Forward Safety warning light will appear on the cluster
- **Forward Cross-Traffic Safety*:** Select to turn on/off the Junction Crossing function
- **Forward/Side Safety*:** Collision warning or emergency steering will assist the driver in a collision-imminent situation. If the setting is deselected, Forward safety will turn off and the Emergency steering warning light will appear on the cluster
- **Forward Safety Warning Timing:** When in DRIVING SAFETY, select STANDARD or LATE. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'
- **Warning Methods:** To adjust the Warning Volume settings, go to Vehicle Settings, Driver Assistance, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority



Forward Collision-Avoidance Assist (FCA) - Advanced Features



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

[Continued on next page](#)

Forward Collision-Avoidance Assist 2 (FCA2) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

[Continued from previous page](#)

FCA2 will become active when the:

- Ignition is on or the Power button* is ON
- Vehicle is traveling faster than about 5 mph
- Electronic Stability Control (ESC) is ON




Forward Collision-Avoidance Assist (FCA) - Advanced Features



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

REMINDERS:

- FCA2 will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- FCA2 may warn the driver if the vehicle detected ahead is decelerating to turn or to pass a speed bump
- When the FCA2 system is off, the FCA2 warning indicator is on in the Instrument Cluster 
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

Forward Collision-Avoidance Assist 2 (FCA2) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

BCA is designed to detect approaching vehicles in the driver's blind spot areas and warn the driver of a possible collision with a warning light and a warning sound.

 
 
 
If there is a collision risk when exiting a parallel space, BCA may assist with braking to help avoid a collision.

Initially, BCA provides Blind-spot Collision Warning (BCW) when it detects a potential collision with a vehicle, emitting an auditory warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, BCA automatically applies the opposite side front brake to try and mitigate a potential collision.

Vehicle detection: When another vehicle is detected within the BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**, on the Instrument Cluster and the head-up display.*

Collision warning: When the vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning, and the steering wheel may vibrate.*

Collision Warning Assist: When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it may help avoid collision by applying the brake.

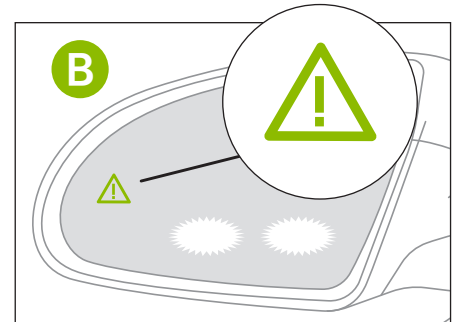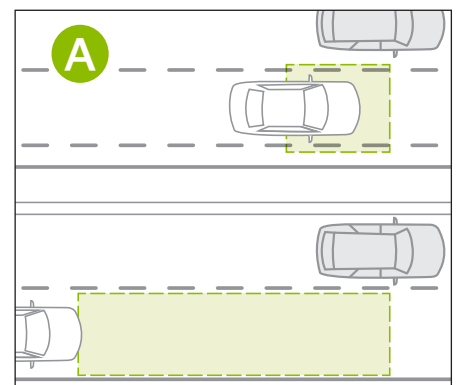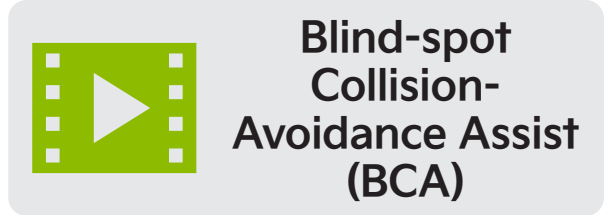

[Continued on next page](#)

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 7 in the Owner's Manual for more information.





Blind-spot Collision-Avoidance Assist (BCA)^{†4}

[Continued from previous page](#)

BCA Settings:

- To enable BCA, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter Vehicle Settings. Select DRIVER ASSISTANCE and then BLIND-SPOT SAFETY
- **Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



**Blind-spot
Collision-
Avoidance Assist
(BCA)**



**Driver Safety -
Forward/Lane/
Blind-Spot Safety
& Safe Exit**



**Driver Assistance -
Warning Methods
& Warning Volume**

[Continued on next page](#)

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 7 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

[Continued from previous page](#)

QUICK TIPS

- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle, and those vehicles' speed is above 7 mph
 - Vehicle speed is above approximately 12 mph

REMINDERS:

- The BCA warning may sound when turning left into an intersection. Maintain a proper distance from oncoming vehicles
- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 7 in the Owner's Manual for more information.

 


Lane Keeping Assist (LKA)*†4

Lane Keeping Assist is designed to detect the lane markers on the road or the road edges, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, LKA may give an audible warning and display a Lane Departure Warning on the Instrument Cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

When LKA is enabled, press and hold the Lane Safety button  **A to turn LKA on or off.**

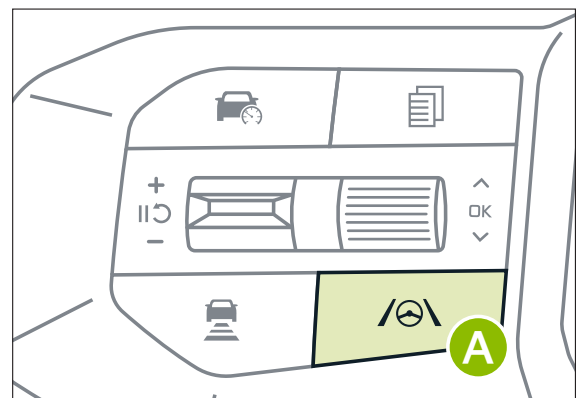

(Buttons located on left side of Steering Wheel)

[Continued on next page](#)

Images are for illustrative purposes only. Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

 


Lane Keeping Assist (LKA)*†4

[Continued from previous page](#)

LKA Settings:

To enable LKA, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE then LANE SAFETY.

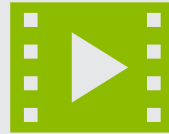


Driver Assistance - Warning Methods & Warning Volume



- **Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



 When the front-view camera does not detect the lane markers, they are displayed gray

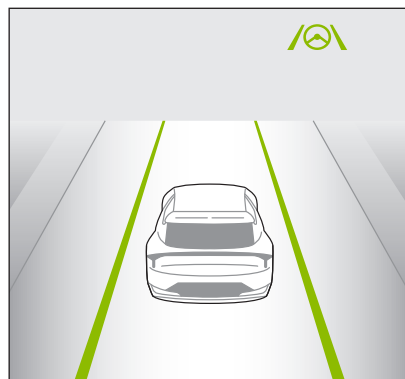

  When the front-view camera detects the lane markers, they are displayed white

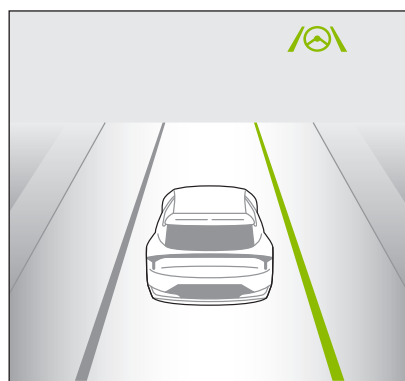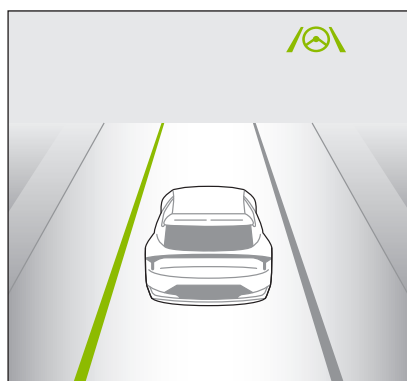

When the front-view camera detects the vehicle moving outside of the lane being traveled in, a yellow marker will illuminate either on the left or right lane (shown in both images above)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Lane Keeping Assist (LKA)*†4

[Continued from previous page](#)

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA detects the lane the vehicle is traveling in
- The vehicle is between the lane markers.

QUICK TIP

- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems.

REMINDER: LKA will not issue a warning if the turn signals or hazard lights are activated.



 
Blind-spot View Monitor (BVM)*†4

Blind-Spot View Monitor uses the wide-side view cameras to display the rear blind spot areas of the vehicle on the Instrument Cluster **A**, when the turn signal is activated, to help with safe lane changes.

To turn BVM on press the **SETUP** key/button on the Infotainment System. Select **VEHICLE**, then DRIVER ASSISTANCE, DRIVING SAFETY then BLIND-SPOT VIEW MONITOR.

When operating the turn signal **B**, BVM displays video of the blind-spot view for the direction indicated.


BVM will not operate when the Power button is OFF, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

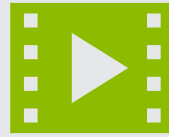


Blind-spot View Monitor (BVM)



 Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

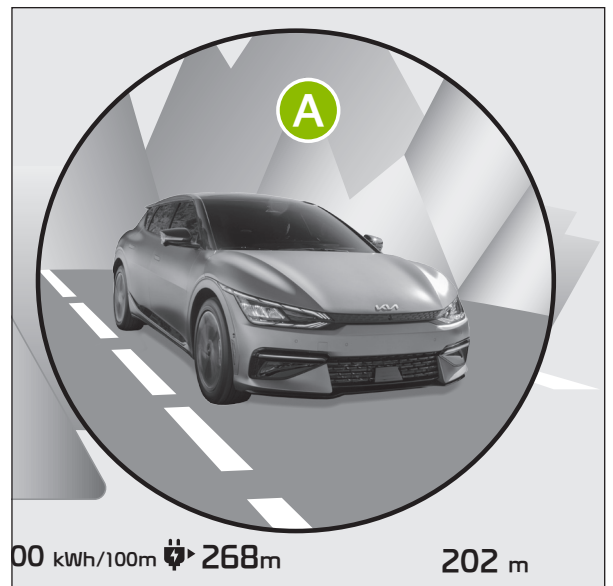

 (LCD display showing right side of vehicle)

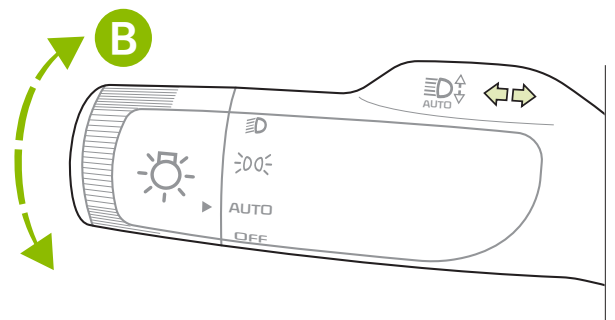

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information



Safe Exit Assist (SEA)^{†4}

While the vehicle is stopped, and if Safe Exit Assist detects a vehicle approaching the rear corner of the vehicle and the driver or passenger opens a door, SEA is designed to warn the driver with a message and sound a warning to help avoid a collision **A**.

SEA is designed to keep the doors closed in certain situations. When opening a door, SEA may warn the driver of the risk of collision with a vehicle approaching the blind spot area.

 
In addition, when the Electronic Child Safety Lock button **B** is ON or in the LOCK position and an approaching vehicle, that the system detects approaching the blind spot area, the Electronic Child Safety Lock button will not unlock the rear doors, even if the driver presses the button to open the doors.

To turn on SEA, press the **SETUP** key/button on the Infotainment System. Select **VEHICLE**, then select DRIVER ASSISTANCE, and under DRIVING SAFETY, select SAFE EXIT.

Warning Methods: To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off.

REMINDER: Adjusting the Warning Methods will adjust settings for other driver assistance systems.

When engaged, these systems are not substitutes for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.

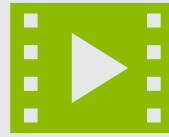


Safe Exit Assist (SEA)



Driver Assistance - Warning Methods & Warning Volume



 Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

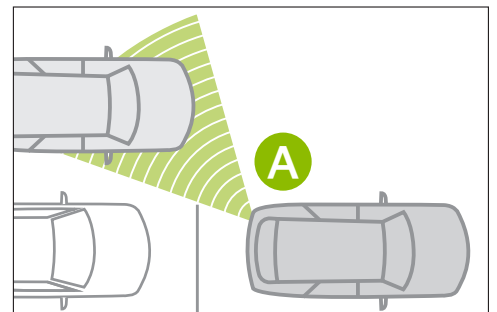



Driver Attention Warning (DAW)*†5

Driver Attention Warning is designed to alert the driver if it detects inattentive driving patterns and, in certain situations, can give a warning signal to take a break. When the driver's attention level has become low, the message "Consider taking a break" appears on the LCD **A** and a warning sounds to suggest the driver take a break.

DAW Settings:

- To turn LVDA on/off, with the ignition on, press the SETUP key/button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER ATTENTION WARNING and INATTENTIVE DRIVING WARNING
- **Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



 
Driver Attention Warning (DAW)



Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Assist



Driver Assistance - Warning Methods & Warning Volume

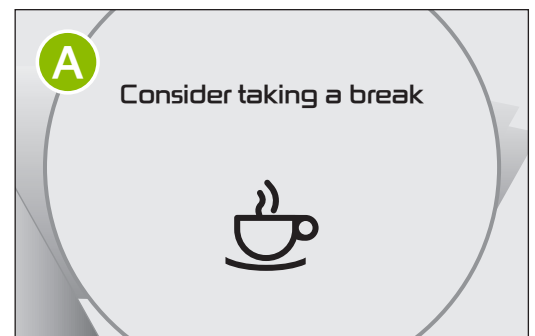

[Continued on next page](#)

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



Driver Attention Warning (DAW)*†5

[Continued from previous page](#)

QUICK TIP

- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems.

REMINDERS:

- When the vehicle power is cycled, DAW returns to its previous state, on or off
- When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Refer to section 7 in the Owner’s Manual for more information.

 


Leading Vehicle Departure Alert (LVDA)^{†4}

Leading Vehicle Departure Alert, or LVDA, is designed to alert the driver if the LVDA system detects the vehicle directly in front start to move or depart from a stop. When LVDA is on, your vehicle is stopped and detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.

LVDA Vehicle Settings:

- To enable LVDA, press the **SETUP** key/button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER ATTENTION WARNING and then LEADING VEHICLE DEPARTURE ALERT
- **Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

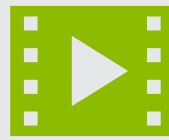

Leading Vehicle Departure Alert (LVDA)



Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Assist



Driver Assistance - Warning Methods & Warning Volume



[Continued on next page](#)

The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Leading Vehicle Departure Alert (LVDA)^{†4}

[Continued from previous page](#)

REMINDERS:

- When the vehicle power is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems



Leading Vehicle
Departure Alert
(LVDA)




Driver Assistance -
Driver Attention
Warning & Leading
Vehicle Departure Assist

The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Lane Following Assist (LFA)*†4

Lane Following Assist (LFA) is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The Instrument Cluster indicator will initially illuminate white  when turned ON. It will remain GRAY when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon will illuminate green **B**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster LCD, and an audible warning will sound. If both hands are not detected on the Steering Wheel, LFA will cancel.

LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 110 mph

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual Vehicle Settings steps may vary by model. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.

 
When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.



Lane Following Assist (LFA)



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

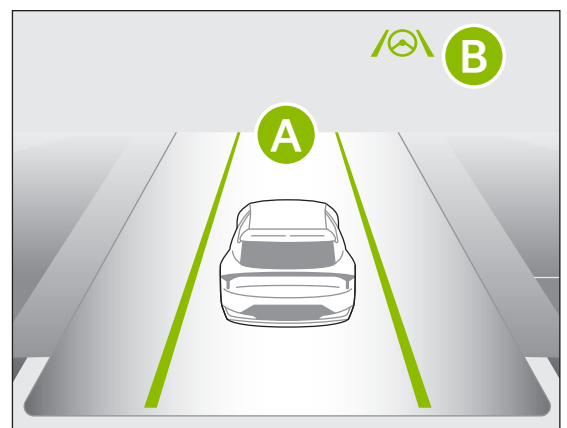




Lane Following Assist (LFA)*†4

[Continued from previous page](#)

LFA Settings:

 - Press the Lane Safety button **A** to turn on Lane Following Assist
- **To access Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

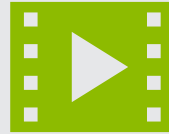


Lane Following Assist (LFA)



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



 Driver Assistance - Warning Methods & Warning Volume

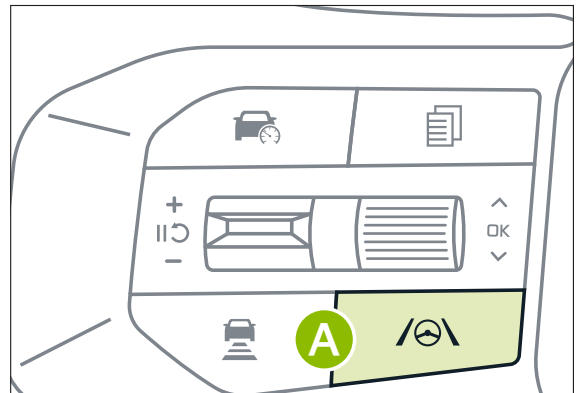

(Buttons located on left side of Steering Wheel)

QUICK TIP

- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems.

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.


Actual Vehicle Settings steps may vary by model. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.

When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.



Smart Cruise Control (SCC)^{†4}

Smart Cruise Control is designed to detect a vehicle ahead and help maintain the set distance from the vehicle ahead and the set speed. When SCC detects the driver is attempting to overtake a vehicle, SCC may help by accelerating the vehicle speed.

When SCC is on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, SCC can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the  button **A** must be pressed to start moving the vehicle.

Smart Cruise Control will operate based on the driver's driving style, such as inter-vehicle distance, acceleration, reaction speed. To enable SCC feature Based on Driving Style, go to Vehicle Settings in the Infotainment System. Press SETUP, VEHICLE, DRIVER ASSISTANCE, SMART CRUISE CONTROL and BASED ON DRIVING STYLE.

To turn on, set/adjust the SCC speed: Press the Driving Assist button **B** to turn the system ON & set to the current vehicle speed (One-Touch Set). The cruise indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front. With Hands-On Detection and the In-Cabin Camera, when the driver's steering wheel grip changes and the system detects signs of inattentive driving, a warning will be issued. If the driver is unresponsive, SCC maintains the vehicle in the center of the lane while decelerating, and may bring the vehicle to a complete stop.

[Continued on next page](#)

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

 
See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Cruise Control (SCC) with Overtaking Acceleration Assist



Driver Convenience - Smart Cruise Control & Highway Driving Assist

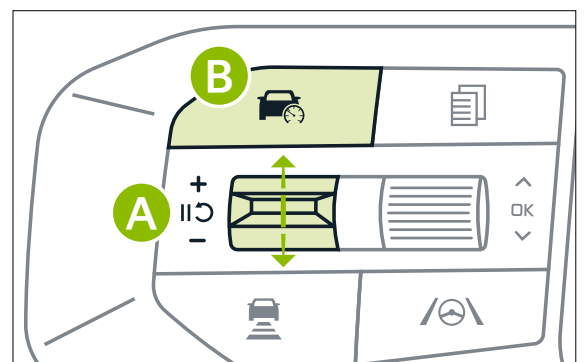

(Buttons located on left side of Steering Wheel)



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

SCC Operation:

- **Increase speed:** Press the [+] switch **A** up to increase the set vehicle speed
- **Decrease speed:** Press the [-] switch **A** down to decrease the set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Panel screen **B**

 
To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. The image on the Instrument Cluster LCD **B** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **D**.




Smart Cruise Control (SCC) with Overtaking Acceleration Assist




Driver Convenience - Smart Cruise Control & Highway Driving Assist

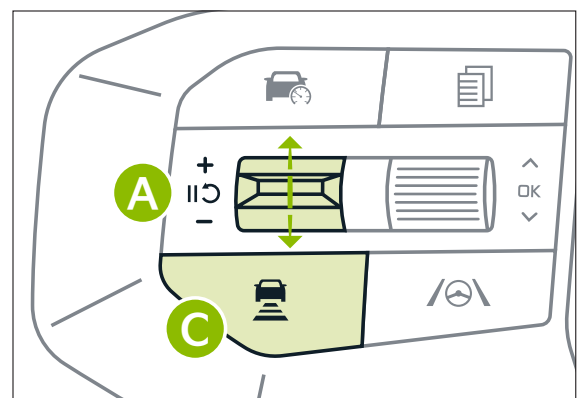

 (Buttons located on left side of Steering Wheel)

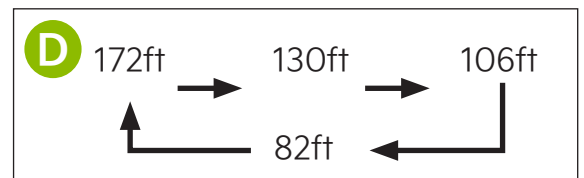

 The distance settings are approximations and may vary depending on the vehicle speed at the time.

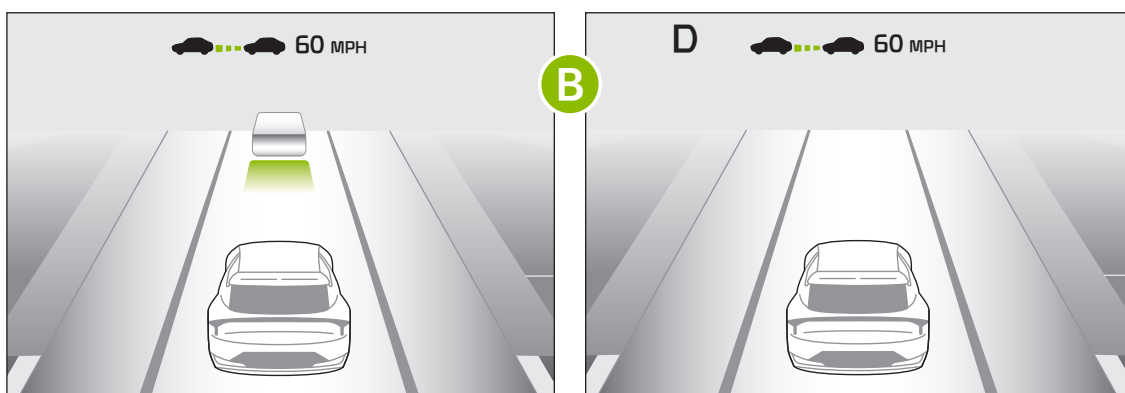

(Set speed and selected distance level are displayed on the LCD)

[Continued on next page](#)

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

To pause or resume SCC operation:

Press the pause/resume  switch **A**.

The SCC indicator on the Instrument Panel will turn OFF.

To turn SCC OFF: Press the Driving Assist button **B**. The SCC indicator on the Instrument Panel will turn GRAY.

 
To adjust the sensitivity of the SCC system: Go to Vehicle Settings in the Infotainment System by pressing the **SETUP** button. Go to DRIVER ASSISTANCE, SMART CRUISE CONTROL and select either BASED ON DRIVING STYLE or BASED ON DRIVING MODE.



Smart Cruise Control (SCC) with Overtaking Acceleration Assist



Driver Convenience - Smart Cruise Control & Highway Driving Assist

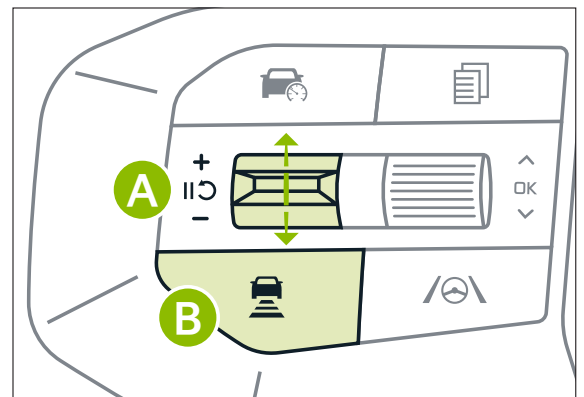

(Buttons located on left side of Steering Wheel)

QUICK TIPS

- The speed setting for SCC can be adjusted under the following conditions:
 - When following a vehicle, there is no minimum speed requirement
 - If your vehicle speed is less than 20 mph, when SCC is turned on and activated, the vehicle speed will be set to 20 mph
 - Always keep the front-view camera and front radar sensor areas clean and free from debris to maintain optimal performance

[Continued on next page](#)

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

REMINDERS:

- The cruise control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starts
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- SCC may decelerate if surrounding vehicle intervenes in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed

When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Navigation-based Smart Cruise Control (NSCC)*†4,8

 
 
While Smart Cruise Control is operating, Navigation-based Smart Cruise Control helps maintain a safe speed, depending on the road conditions, by using information from the navigation system, when driving on certain highways.

To enable NSCC features, go to the Vehicle Settings in the Infotainment System, select Driver Assistance, Driving Convenience, and Auto Highway Auto Speed Change. When SCC is on and operating, the vehicle is driving on limited/controlled access highways and NSCC is turned on, then NSCC is enabled and the NAV icon **A** will illuminate white on the Instrument Cluster.

When NSCC detects a curve ahead, and NSCC activates and reduces the vehicle speed, the NAV icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

REMINDER:

- NSCC is only available on certain controlled access roads and highways.

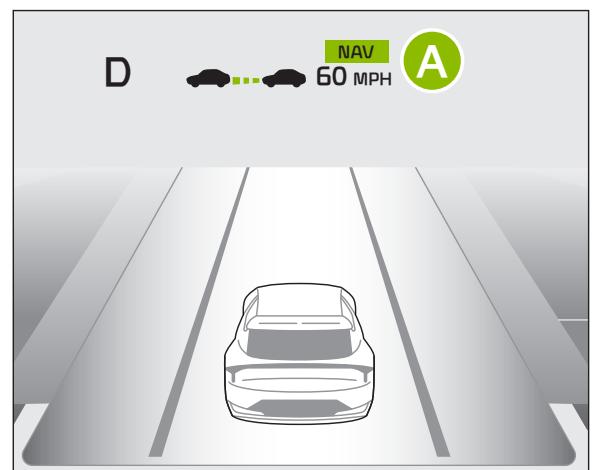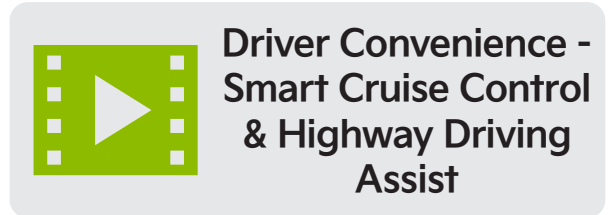

(Display on LCD screen)

See section 7 in the Owner's Manual for more information.

For more setting information, refer to the Car Infotainment System Quick Reference Guide.

NSCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Highway Driving Assist (HDA)*†4

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.

Highway Lane Change Assist may assist in changing lanes, if it detects the driver has turned on the turn signal and if the lane change is possible.

When HDA is activated and conditions are met, the Instrument Cluster indicator **A** will illuminate green. If proper conditions are not met, HDA will be in standby mode and the HDA indicator light **B** will illuminate gray. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **A**.



If HDA is activated, conditions are met and the SCC speed is set by the driver (at the posted highway speed limit or slower), HDA will enter the automatic speed setting mode. The set speed and AUTO will be displayed **B** in green and an audible alert will sound.

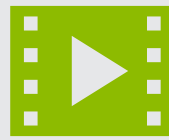

Highway Driving Assist (HDA) with Lane Change Assist



  Driver Convenience - Smart Cruise Control & Highway Driving Assist

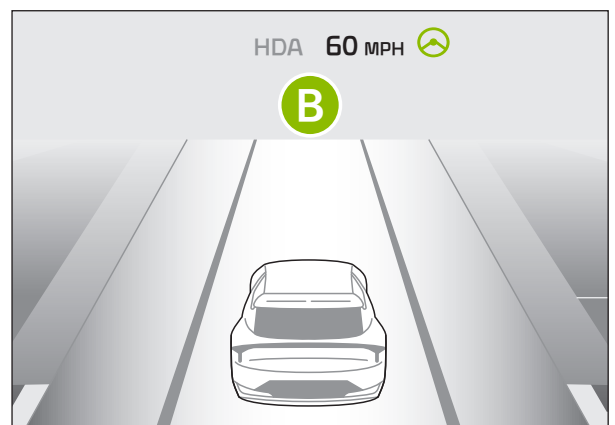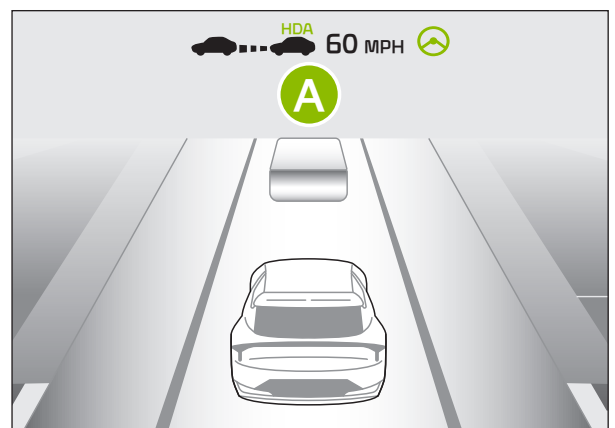

[Continued on next page](#)

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist (HDA)*†4

[Continued from previous page](#)

HDA will operate when these conditions are met:

- Driving on the main road of highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of highways while Lane Following Assist and Smart Cruise Control are operating

HDA Settings:

- **To enable HDA:** press the **SETUP** key/button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, under DRIVER CONVENIENCE, select HIGHWAY DRIVING ASSIST
- **To access Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off


REMINDERS:

- When vehicle power is cycled, the system returns to its previous state, on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 See section 7 in the Owner's Manual for more detailed information, limitations and conditions.

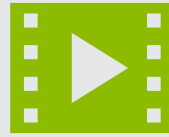

Highway Driving Assist (HDA) with Lane Change Assist



Driver Convenience - Smart Cruise Control & Highway Driving Assist



 
Driver Assistance - Warning Methods & Warning Volume




Surround View Monitor (SVM)*†4

Surround View Monitor uses the wide view cameras and displays images around the vehicle through the Infotainment System screen to assist with parking.

- Press the Parking/View button **A** or shift into reverse to turn on Surround View Monitor
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen
- **Surround View Monitor Auto On:** With Driver Assistance → Parking Safety → Surround View Monitor Auto On selected from the Vehicle Settings menu, the front parking assist view screen is displayed when Parking Distance Warning warns the driver Rotary Dial Shifter is in Drive
- **To access Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

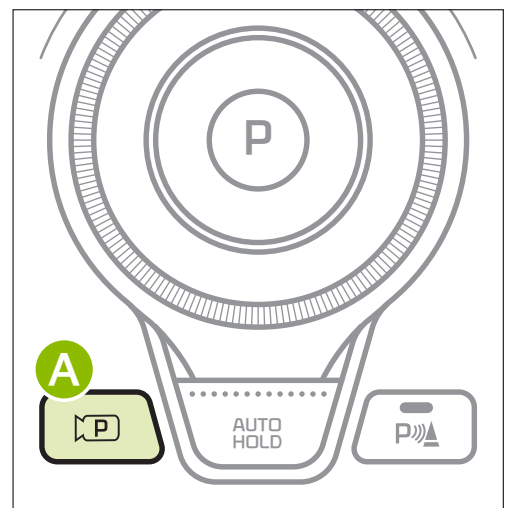

(Button located below gear shift)

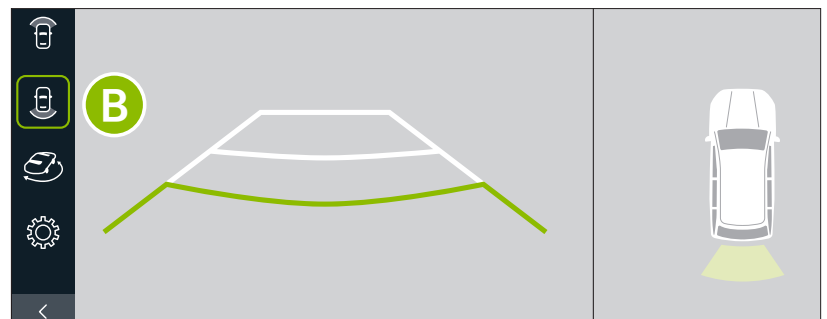 

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, Surround View Monitoring is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.



 
Surround View Monitor (SVM)^{*†4}

[Continued from previous page](#)

To change the SVM settings, press the onscreen settings icon  **A** while SVM is operating or pressing Setup, on the Infotainment System, select Vehicle, Driver Assistance, Parking Safety and Camera Settings.



Surround View Monitor (SVM)

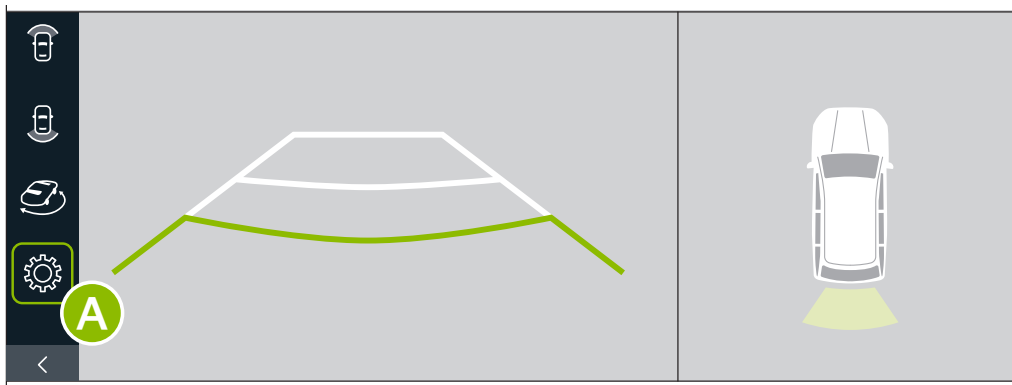

QUICK TIP

- The Front View of SVM will turn off when the Rotary Dial Shifter is moved into Park or Reverse or the Parking/View button is pressed.

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- You can also select PARKING SAFETY PRIORITY so the audio system volume will lower while SVM is activated
- Through normal use and after inclement weather or washing, the rear camera may become dirty or obstructed. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, Surround View Monitoring is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

See section 7 in the Owner's Manual for more information.

 


Remote Smart Parking Assist 2 (RSPA2)*†4


Remote Smart Parking Assist is designed to use the vehicle sensors to help park and exit parking spaces remotely.

To park with Remote Parking (from outside the vehicle), using the Smart Key:


1. While in the vehicle, with the vehicle stopped in front of the parking space, vehicle aligned, and the shifter in Park, press and hold the Parking/View button **A**
2. Operating instructions will be displayed on the Infotainment System screen. When ready, exit the vehicle
3. Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how you want to park, and the vehicle will move in the direction of whichever button you press
4. Press and hold the Remote Start button **D** to turn off the vehicle

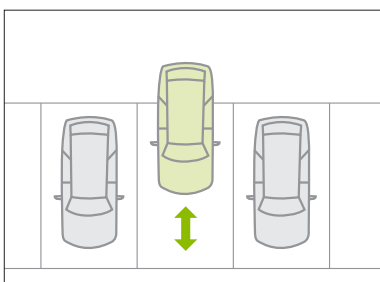


Remote forward/reverse

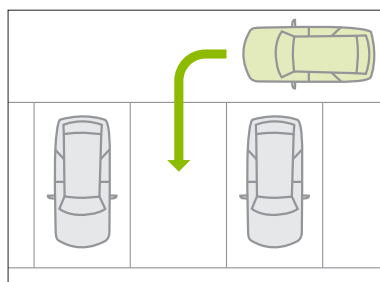 

Remote parking/smart parking

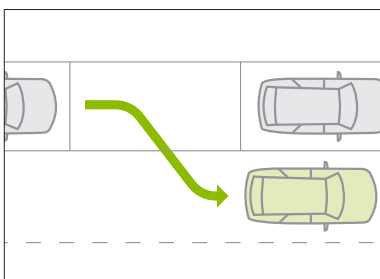 


Smart pulling out

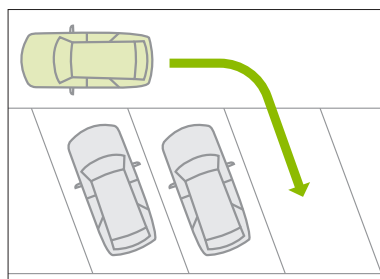 


Diagonal parking



 Remote Smart Parking Assist (RSPA)

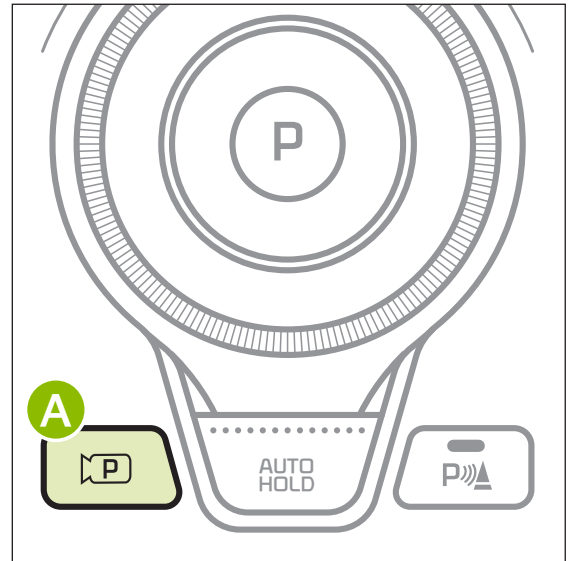

(Buttons located below gear shifter)

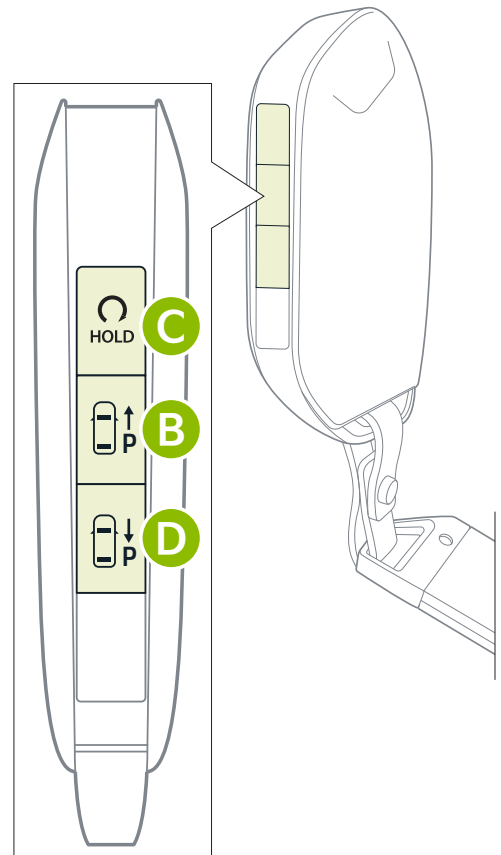 

[Continued on next page](#)

Images are for illustrative purposes only. For additional RSPA features, review the vehicle's Owner's Manual.



 
Remote Smart Parking Assist 2 (RSPA2)*†4

[Continued from previous page](#)


To exit a parking space remotely, when outside the vehicle and vehicle is off:

1. Press the lock button on the Smart Key
2. Press and hold the Remote Start button **A** within four seconds to start the vehicle
3. Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how your vehicle is parked. The vehicle will move in the direction of whichever button you press
4. Release the button to stop the vehicle

To turn off RSPA at any point while it's operating: press the Parking View button **D** or Parking Safety button **E**, press the Park button on the Rotary Dial Shifter **F** or press the Remote Start button **A** on the Smart Key.

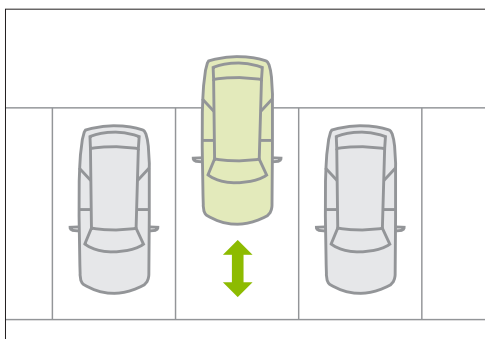


Remotely moving forward or backwards

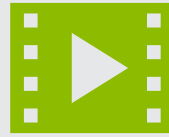 


Remote Smart Parking Assist (RSPA)



 Driver Assistance - Warning Methods & Warning Volume

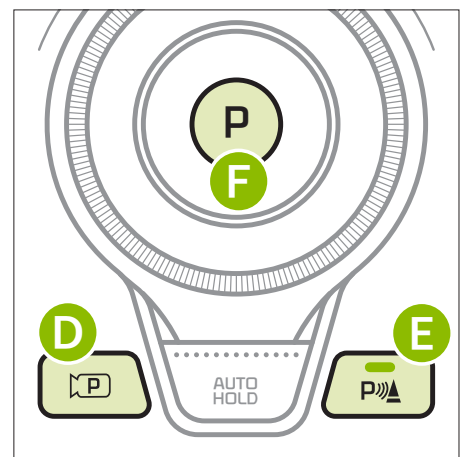

(Buttons located below gear shifter)

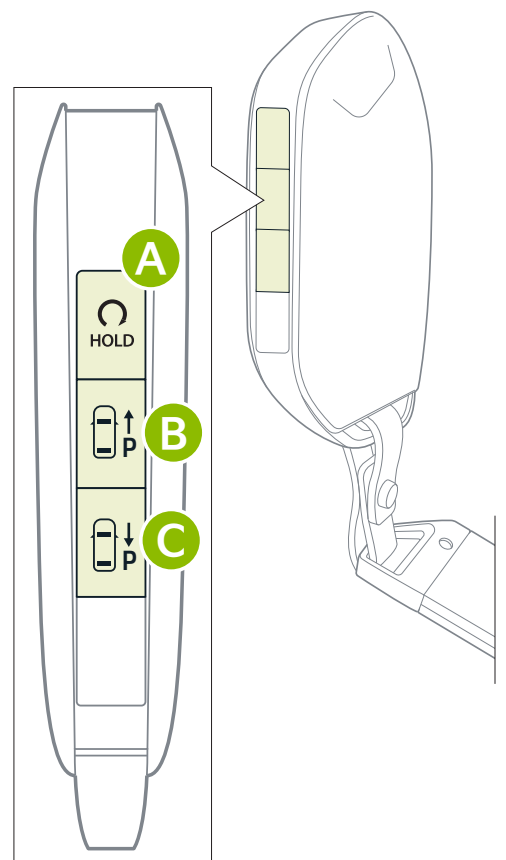 

[Continued on next page](#)

Images are for illustrative purposes only. For additional RSPA features, review the vehicle's Owner's Manual.



Remote Smart Parking Assist 2 (RSPA2)*†4

 
 
[Continued from previous page](#)

To turn off RSPA at any point while it's operating, press the Parking View button **A** or Parking Safety button **B**, press the Park button on the Rotary Dial Shifter **C** or press the Remote Start button **D** on the Smart Key.

To adjust the Warning Volume: To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off.

REMINDERS:

- Remote Smart Parking Assist will only operate if you are within 13 feet of the vehicle, with the Smart Key in your possession
- Remote Smart Parking Assist will not function when:
 - There is a parking space open, with a vehicle on one side only
 - When trying to park in a diagonal space
 - When the parking space is too narrow or near a wall
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

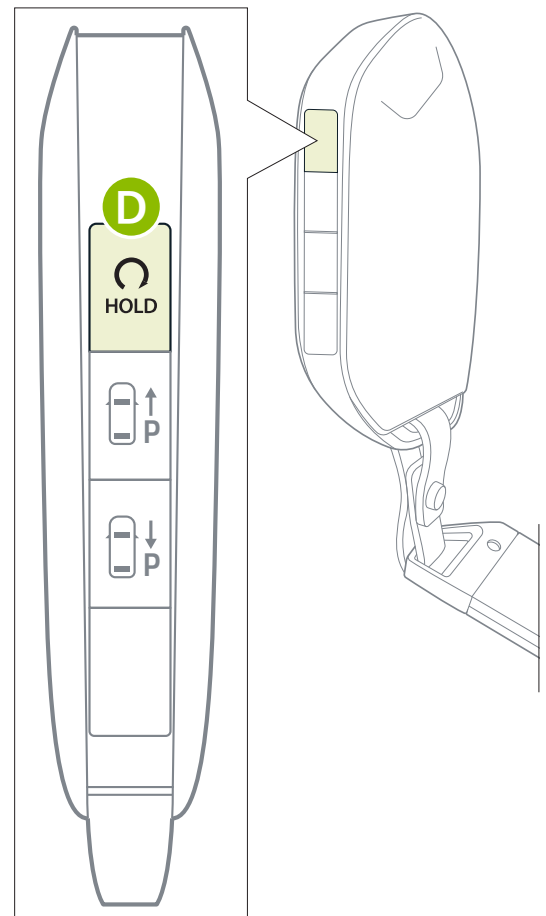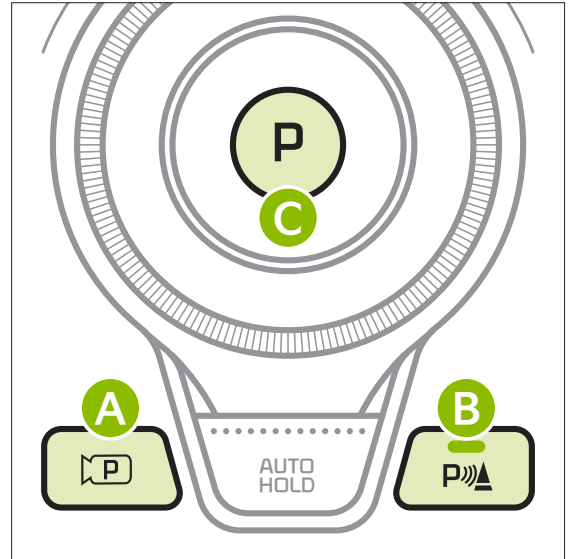


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.



Rear View Monitor (RVM)^{†4}

 Rear View Monitor displays the area behind the vehicle to assist when parking or backing up. To turn RVM on/off, press the Parking/View button **A** on the center console or shift Rotary Dial Shifter into Reverse.

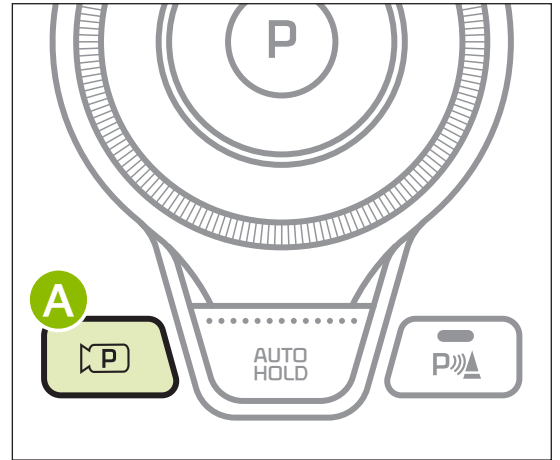

(Button located below gear shift knob)

 
RVM Vehicle Settings:

- **To access Camera Settings:** press the SETUP key/button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS
- **To access Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

The Rear View Monitor activates when the:

- POWER button is in the ON position
- Rotary Dial Shifter Knob is in the Reverse position

Press the Parking/View button when rotary dial shifter knob is in the Neutral or Drive position.

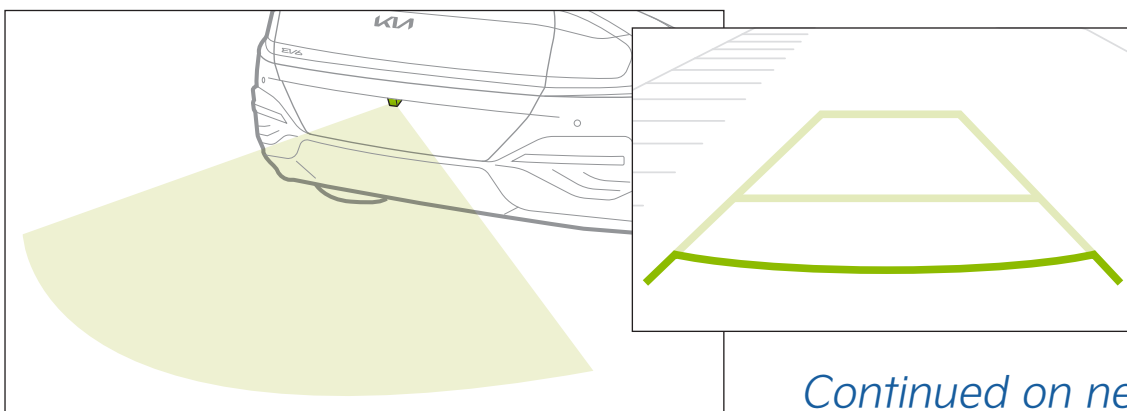

[Continued on next page](#)

The images shown are for illustration purposes only and may not reflect actual operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

 


Rear View Monitor (RVM)^{†4}

[Continued from previous page](#)

REMINDERS:

- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Instrument Cluster LCD. All other features are disabled
- Rear View Monitor may not display every object behind the vehicle
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems
- The horizontal lines of the Rear View Parking Guidance indicate distances of approximately 20, 40 and 91 inches from the vehicle

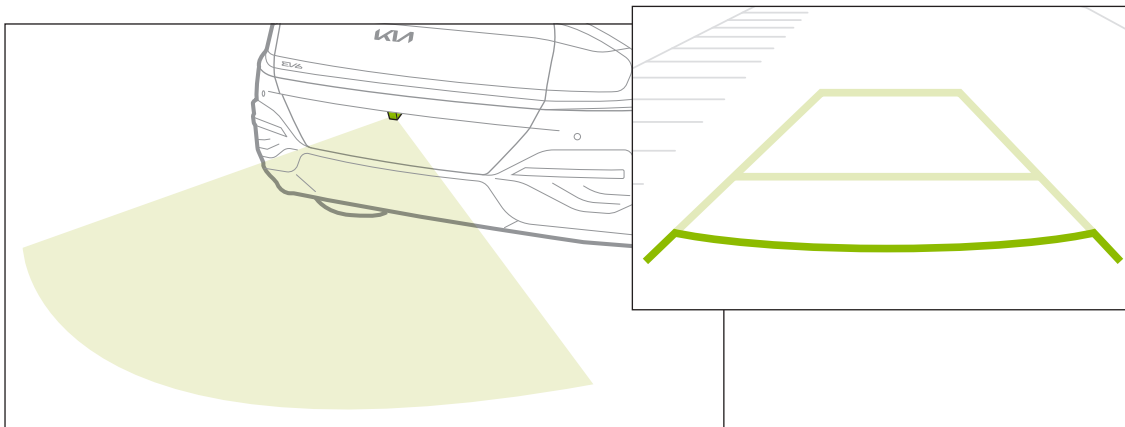

The images shown are for illustration purposes only and may not reflect actual operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.



Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the rear left or right while the vehicle is in Reverse. RCCA warns the driver of a possible collision with a warning message and a warning sound. Also, RCCA may assist with braking to help avoid a collision.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System screen. If RCCA

detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:




- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

[Continued on next page](#)

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 7 in the Owner's Manual for more information.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

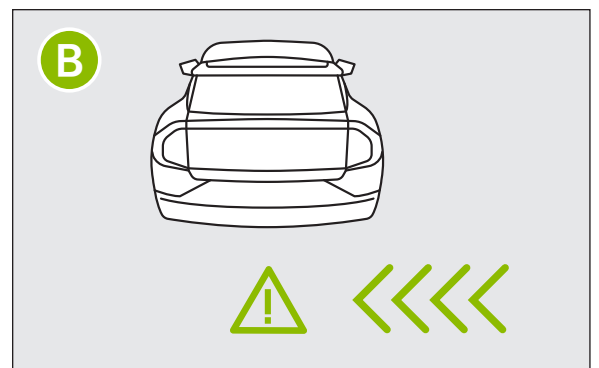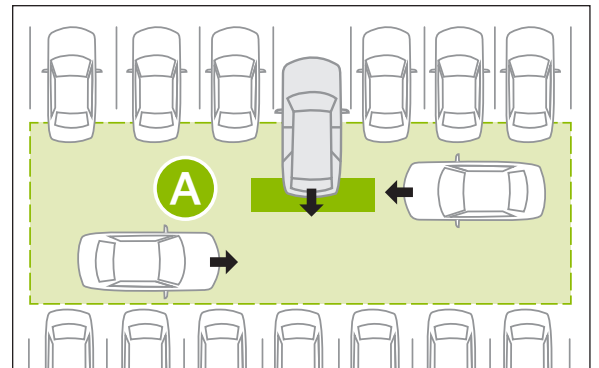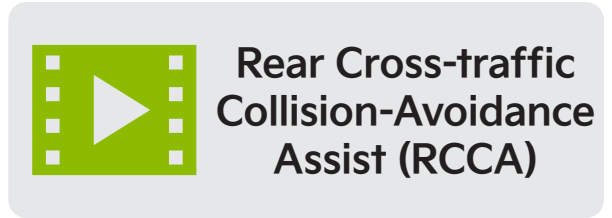   



Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

[Continued from previous page](#)



Driver Assistance -
Warning Methods
& Warning Volume

RCCA Settings:

- To enable RCCA: press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, PARKING SAFETY, scroll through the selections and press REAR CROSS-TRAFFIC SAFETY to toggle the features on or off
- **To access Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

QUICK TIP

- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems.

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range and coming up faster than 3 mph, the RCCA system will show a warning

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 7 in the Owner's Manual for more information.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.



Reverse/Forward*/Side* Parking Collision-Avoidance Assist (PCA)^{†4}

Reverse/Forward/Side PCA is designed to detect pedestrians or objects behind the vehicle **A** and may warn the driver or assist with braking to help avoid a collision while the vehicle is backing up.

PCA Settings:

To enable PCA: press the **SETUP** key/button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY, scroll through the selections and press the button to toggle **Backward Safety** and/or **Forward/Side Safety** on or off

- Press and hold the Parking Safety button **B** for approximately 2 seconds to turn PCA on or off
- **Warning Methods:** To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

REMINDER: Adjusting the Warning Volume may adjust timing and volume levels for other driving assist systems.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



 
 
Parking Collision-Avoidance Assist (PCA) - Forward/Side/Reverse



Driver Assistance - Parking Safety



Driver Assistance - Warning Methods & Warning Volume

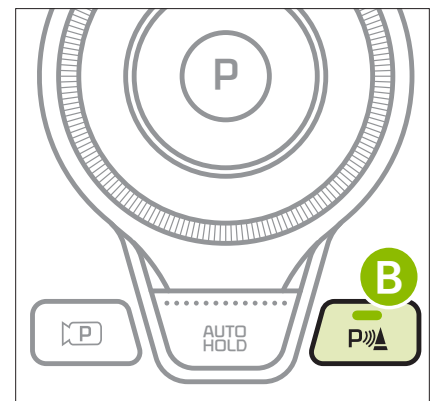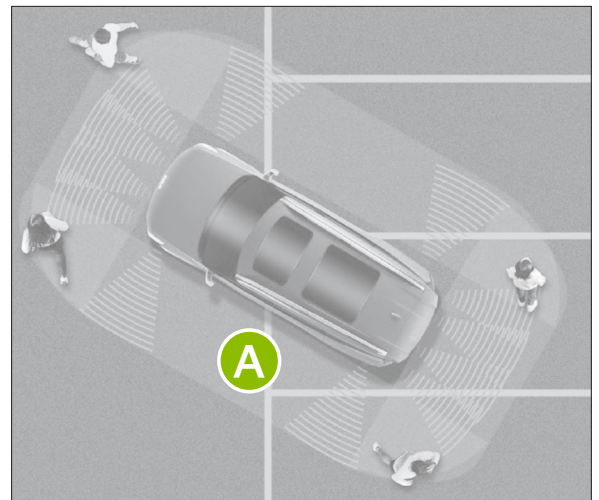

(Button located below gear shift knob)



Forward/Reverse/Side* Parking Distance Warning (PDW)^{†4}

While driving at low speed, Forward*/Reverse Parking Collision-Avoidance Assist is designed to detect pedestrians or objects and may warn the driver or assist with braking to help avoid a collision.

PDW is activated when the Power button is on and the vehicle is in Reverse. To deactivate PDW, press the PDW button **A** (LED illuminated), when vehicle is in Drive or Reverse. To activate, press button **A** again (LED not illuminated).

PDW Settings: To enable Parking Distance Auto On, with the ignition on, press the **SETUP** key/button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, PARKING SAFETY, then PARKING DISTANCE WARNING AUTO ON

To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

REMINDERS:

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

When engaged, PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object in front of or behind the vehicle. Refer to section 7 in the Owner's Manual for more information. Images are for illustrative purposes only. Operational details, buttons and sensor locations may vary.



 
Parking Collision-Avoidance Assist (PCA) - Forward/Side/Reverse



Driver Assistance - Parking Safety



Driver Assistance - Warning Methods & Warning Volume

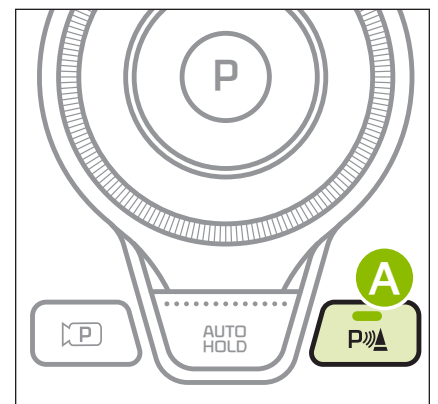

(Button located below gear shift knob)



Intelligent Speed Limit Assist (ISLA)*†4

Intelligent Speed Limit Assist uses information from the detected road signs and the navigation system data to inform the driver of the speed limit and to help maintain within the speed limit.

When ISLA is on and active, the speed limit information will display an alert on the Instrument Cluster LCD of the detected speed limit. When driving at a speed higher than the displayed speed limit, the speed limit is displayed in red.

Manual Speed Limit Assist assists the vehicle to adjust its speed according to the speed limit. When the cruising speed is set as the same as the speed limit, the vehicle automatically adjusts its speed if the speed limit changes.

ISLA Settings:

- To enable ISLA on, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, SPEED LIMIT, and then select one of the options:
 - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message and may change the set speed to help the driver stay within the posted speed limit
 - **Speed Limit Warning:** Informs the driver of the posted speed limit **A** and warns the driver when the vehicle is traveling faster than the posted speed limit
 - **Off:** ISLA is disabled

[Continued on next page](#)

 
ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.



Intelligent &
Manual Speed
Limit Assist (ISLA)



Driver Assistance -
Intelligent Speed
Limit Assist

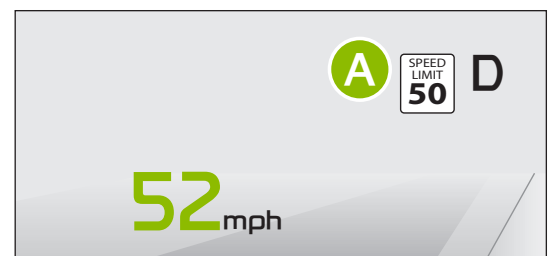



Intelligent Speed Limit Assist (ISLA)^{*†4}

[Continued from previous page](#)

QUICK TIP

- You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on.

REMINDERS:

- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected

 
ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

See section 7 in the Owner's Manual for more detailed information, limitations and conditions.



Instrument Cluster Illumination Control

Press switch **A** up or down to adjust display brightness of the Instrument Panel illumination.

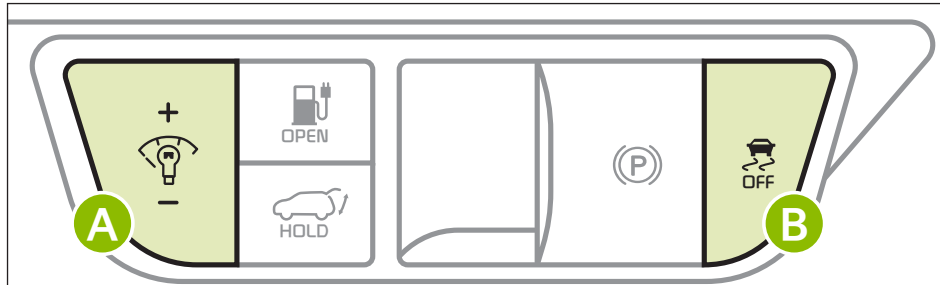

(Button is located on panel to the left of the Steering Wheel)


Electronic Stability Control (ESC)^{†6}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** for more than 3 seconds (ESC OFF indicator will illuminate and an alert sounds).

REMINDERS:

- ESC is active by default at vehicle startup
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Hill-start Assist Control (HAC)^{†6}

The HAC system is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC system automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDERS:

- The HAC system does not operate when the Rotary Dial Shifter Knob is in the Park or Neutral position
- In the event of an HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 5 in the Owner's Manual for more information.



Power Button^{†10}

To start the vehicle:

1. Depress the brake pedal
2. Press the POWER button **A** while Rotary Dial Shifter Knob is in Park **B** or Neutral **C**

To turn the vehicle power OFF, press the POWER button.

 
To use the POWER button, you must have the Smart Key fob on your person.

Power Button positions:

- **OFF** - The vehicle is off
- **ACC (Accessory)** - The vehicle is in accessory position. Limited functions are available
- **ON** - Some vehicle functions are on. Warning lights can be checked
- **START/RUN** - The READY indicator will illuminate and the vehicle is ready to drive



EV Power Button

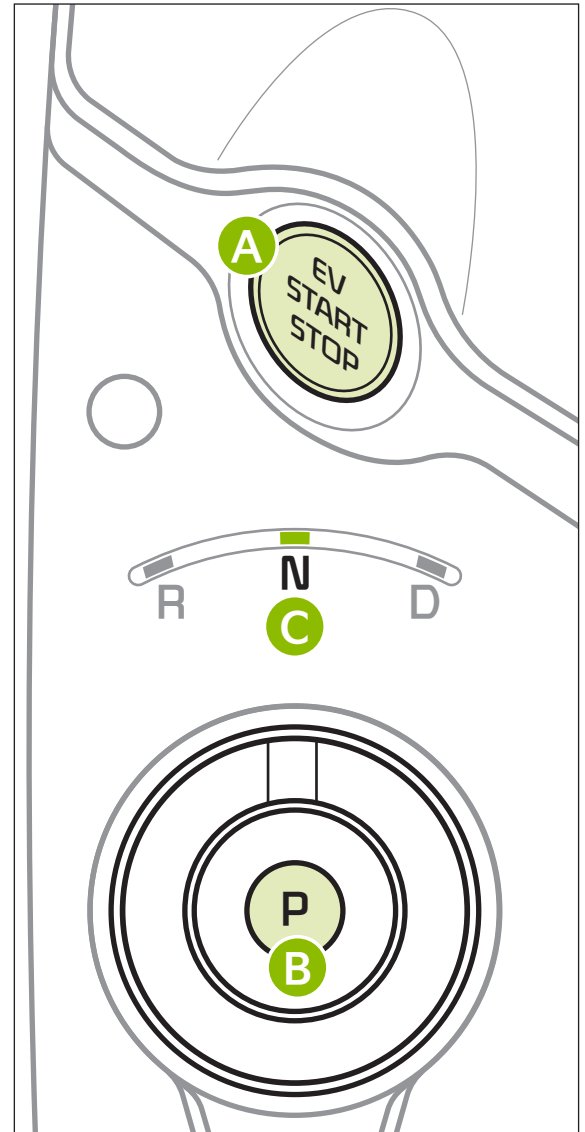

(Button on console above gear shift knob)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Power Button^{†10}

[Continued from previous page](#)

QUICK TIPS

- To use electrical accessories:
 - **ACC position**
 - When in the OFF position and without depressing the brake pedal, press the POWER button once
 - **ON position**
 - When already in the ACC position and without depressing the brake pedal, press the POWER button again
 - When in the OFF position (not illuminated) and without depressing the brake pedal, press the POWER button twice

REMINDERS:

- **In an emergency situation while the vehicle is in motion, you are able to turn the vehicle off and to the ACC position by pressing the POWER button for more than 2 seconds or 3 times successively within 3 seconds**
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the POWER button (Lock button side closest) and press to start vehicle
- Do not turn the vehicle off by pushing the POWER button while the vehicle is in motion. If the vehicle has been turned off, the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

Refer to section 5 in the Owner's Manual for more information.



Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down

 
QUICK TIP

- Press the button again to stop Auto Up/Down function.

- B** Press to Unlock/Lock All Doors
- C** Press to disable Rear Passenger Windows and enable the Electronic Safety Lock* system

QUICK TIPS

- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

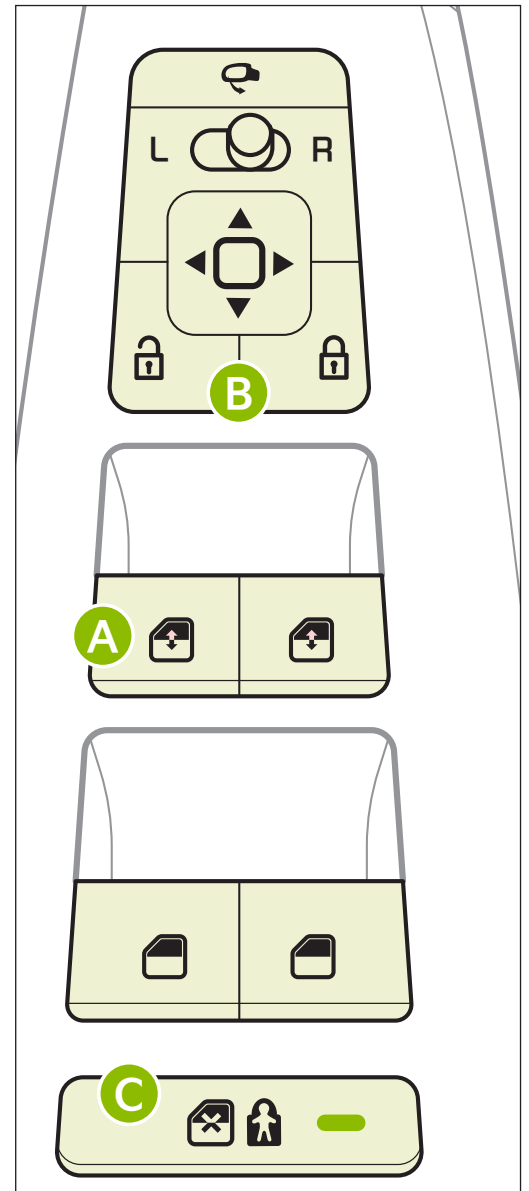

REMINDERS:

- When pressed **C**, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

Images are for illustrative purposes only. Refer to section 5 in the Owner's Manual for more information.



Automatic Door Lock/Unlock

Auto Door Lock will engage when the Rotary Dial Shifter Knob is moved into or out of the Park position. Refer to the Vehicle Settings in the Infotainment System on how to turn Auto Door Lock/Unlock ON/OFF.

Power/Heated Outside Mirrors

 
Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button* is located on climate control system panel.

Electronic Child Safety Lock System*

Press button **A** to lock the rear passenger doors. An indicator will illuminate showing the system is active. This system is activated once the button is pressed.

To deactivate, press the button again.

Refer to section 6 in the Owner's Manual for more information.

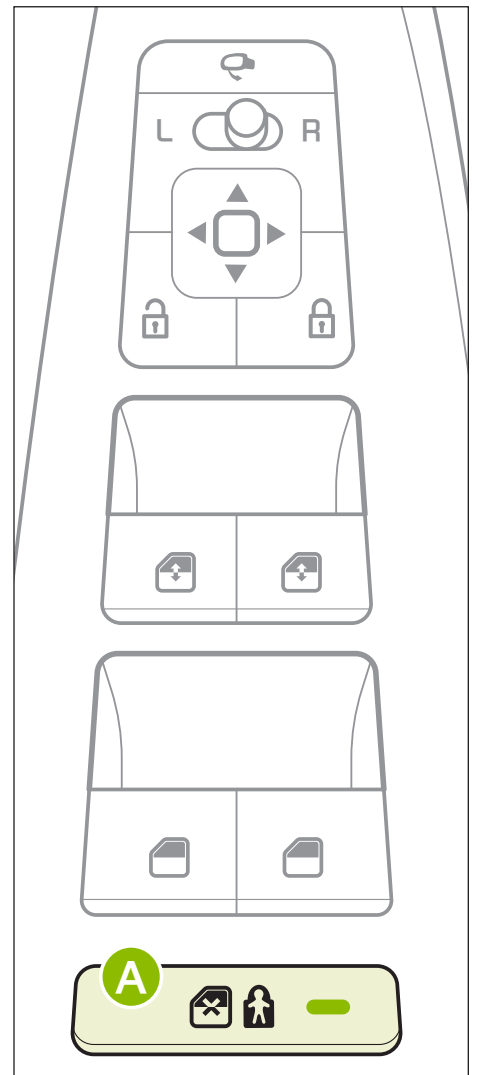


Button configuration may vary depending on vehicle model. Refer to section 5 in the Owner's Manual for more Information.



Power Folding Outside Mirrors*

Press mirror switch to the left or right **A** to select mirrors. Then press arrows **B** to adjust mirror position.

 To automatically fold and unfold both the outside rearview mirrors, press the folding mirror button **C**.

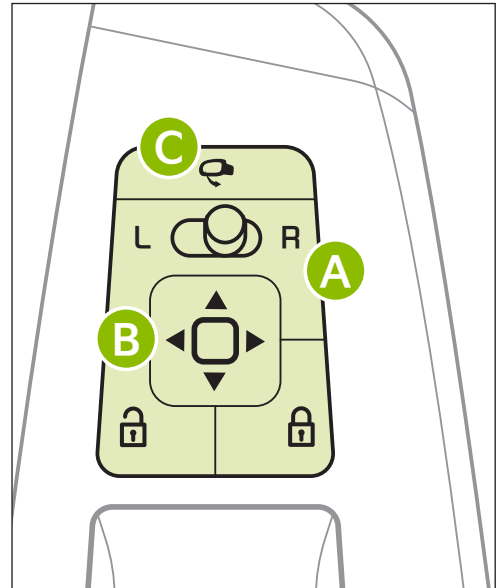

QUICK TIP

- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Headlights & High Beams

To operate:

 - Rotate the lever to change the Headlight function
- Push the lever to turn High Beams ON
- Pull the lever to flash Headlights/High Beams

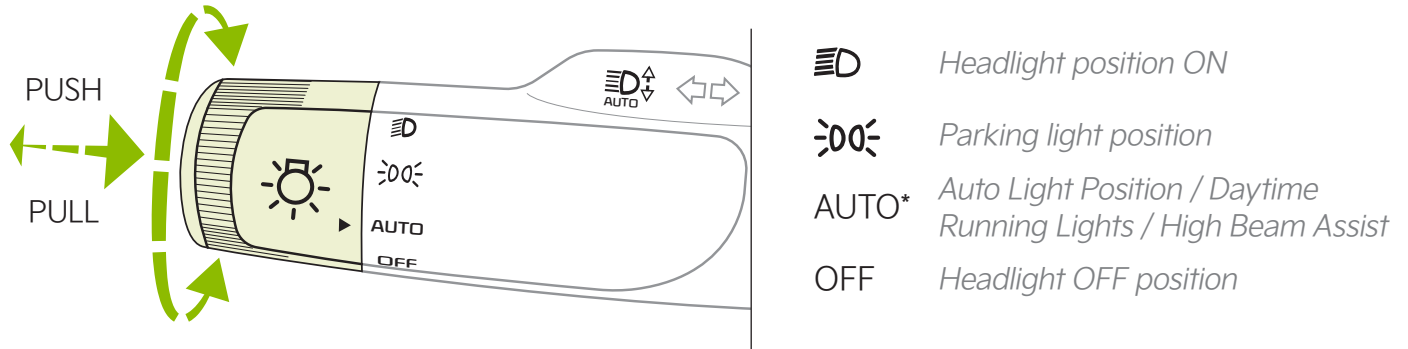

AUTO Light position - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights* (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or POWER button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Parking brake is applied
- Engine is turned off

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.



High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.



High Beam Assist (HBA)

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

HBA does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams.

REMINDERS:

- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- The DRL system turns off when parking brake is applied
- DRL only operates during the daytime

 
Refer to section 5 in the Owner's Manual for more information.



Turn Signals

To operate:


Turn Signals - Slightly move the lever up/down to activate One-Touch Lane Change Signal. Move the lever Up/Down for Right/Left Turn Signal

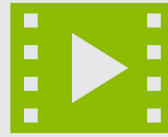

Steering Wheel Controls

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly up or down for less than 1 second and then releasing. The lane change signal will blink 3-7 times.

 To adjust the number of times the Lane Change Signal blinks (3, 5, or 7), access the settings through the Infotainment System. Navigate to Vehicle, select Lights, and then choose One-Touch Turn Signal to modify the blink count.

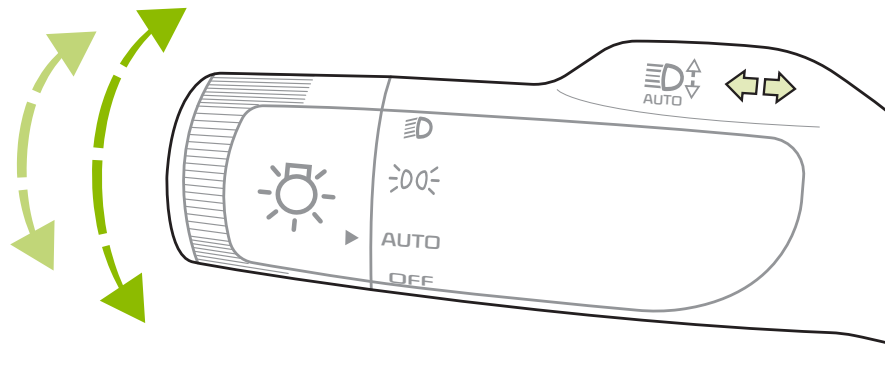

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.



 
Windshield Wipers & Washers

To operate Windshield Wipers and Washers:

- Move the lever Up/Down to change front Wiper modes
- Press the switch **A** Up (fast) / Down (slow) to adjust Intermittent Wipe Speed
- Pull the lever to spray and wipe front windshield



Wipers and Wiper Stalk

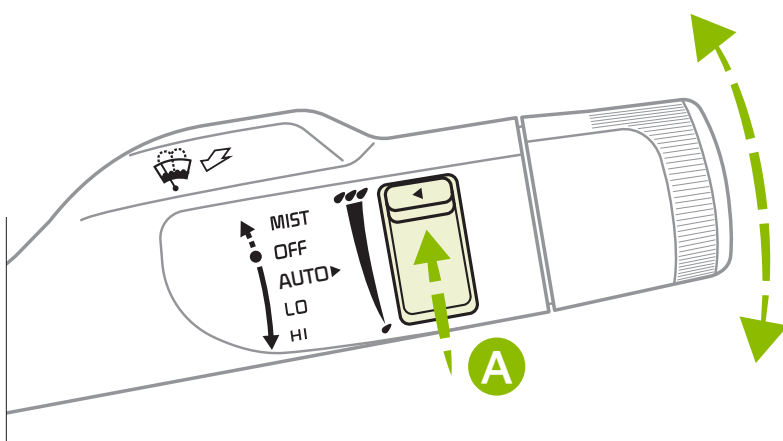

WINDSHIELD

MIST: Single wipe

OFF: Wiper off

INT/AUTO: Auto control wipe (rain sensing)

LO: Slow wipe

HI: Fast wipe

Rain Sensing (Auto Control Wipe):

- The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops
- To vary the speed setting, press the Wiper Switch **A** up/down
- If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system

QUICK TIPS

- Pressing switch **A** up increases Intermittent wipe frequency and wipe speed. Pressing switch **A** down decreases frequency of wipes
- When the wiper is not in use or washing the vehicle, set the wiper switch in the OFF position to stop the auto wiper operation

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.

 


Power Tilt/Telescoping Steering Wheel^{†20}

To adjust the Steering Wheel to the desired angle and distance, press the power steering wheel switch **A** up/down and forward/backward.



Power Tilt/
Telescoping/
Heated Steering
Wheel

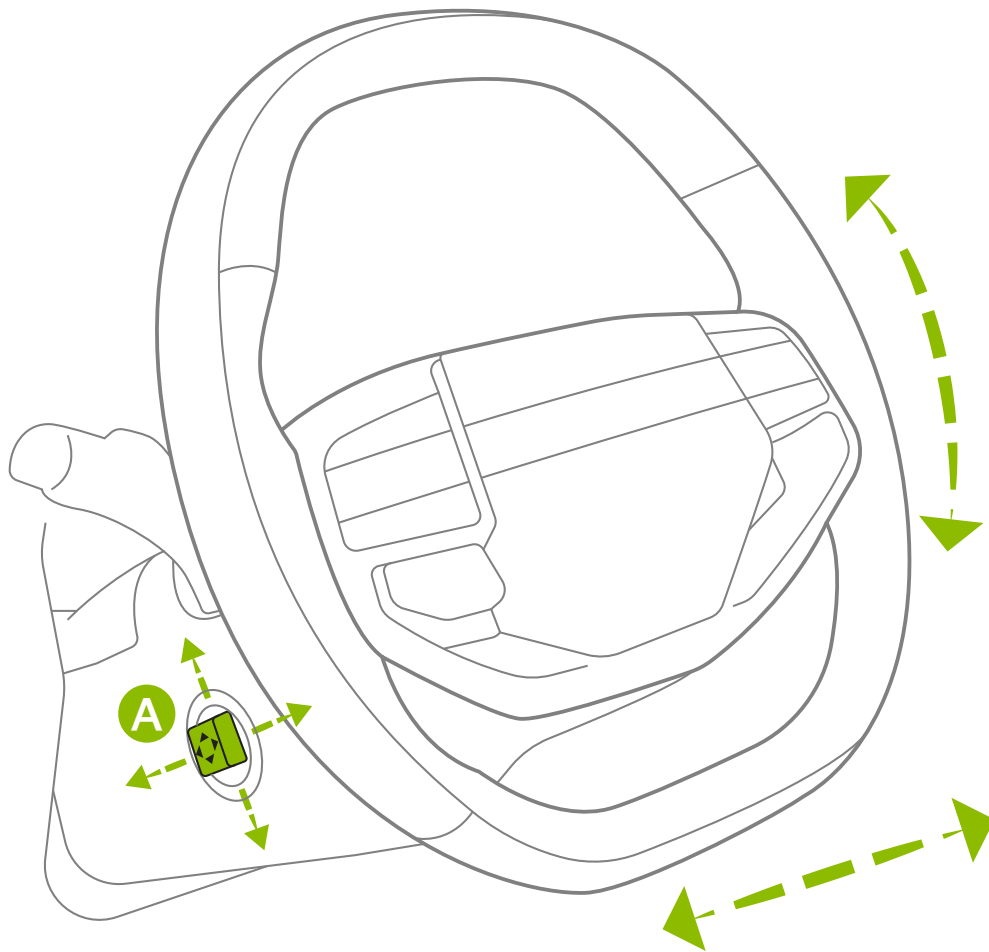

Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.

Refer to section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.



Android Auto™†³ Setup

Android Auto™ compatible smartphone

setup — Download the Android Auto™ app from the Google Play™ Store. Open the app and proceed with the onscreen instructions to complete setup on the mobile device.



**Wireless
Android Auto**

Cable Connection setup for Android Auto™: Press the **SETUP** key on the Infotainment System

1. Press DEVICE CONNECTIONS, select Android Auto™, then ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone. If you agree, accept them in order to use Android Auto™
2. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
3. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data. Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ app concerns

REMINDERS:

- Android Auto™ compatibility requires Kia Connect†¹ with Navigation (USB cable connection only). OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
- Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply. Always update your phone to the latest operating system
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Apple CarPlay^{®†3} Setup

Cable Connection setup for Apple CarPlay[®]:

Connect the Apple CarPlay[®] compatible iPhone[®] with the vehicle's USB port using the manufacturer's cable provided with your iPhone[®]



Wireless
Apple CarPlay

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION on the screen and select Apple CarPlay[®]
3. Select ENABLE APPLE CARPLAY[®]. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay[®]
4. From the audio head unit home screen, select the Apple CarPlay[®] button, where you'll see all the Apple CarPlay[®] supported apps

QUICK TIPS

- If Apple CarPlay[®] randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data. Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Apple CarPlay[®] app concerns

REMINDERS:

- Apple CarPlay[®] compatibility requires Kia Connect^{†1} with Navigation (USB cable connection only), iOS[®] software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
- Always update your phone to the latest operating system release. Apple CarPlay[®] runs on your smartphone's cellular data service. Normal data rates will apply
- Use the manufacturer's USB cable when wireless feature is not available

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Refer to the Car Infotainment System Quick Reference Guide for more information.



Bluetooth® Wireless Technology†3,18

A Volume button: Press up/down to raise/lower speaker volume

Mute button: Push to mute the microphone during a call

B Voice Recognition button: Press to activate voice recognition/bring up menus with voice command prompts from the system. Press and hold to exit voice recognition; Press and hold to start voice recognition of a connected smartphone via phone projection (button operation may vary depending on smartphone specifications)

C Call / End button: Press to receive/place/end calls.

 
In vehicles with navigation, if no phone is paired, press button to pair a phone



Steering Wheel Controls



Automatically Activated Bluetooth®

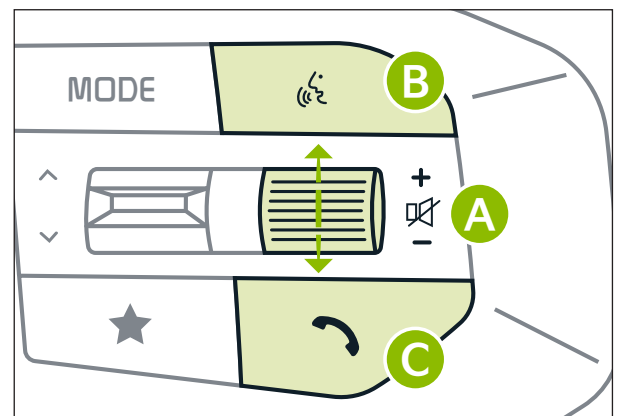

(Button on right side of steering wheel)

QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- When using the voice command feature, wait for the system to BEEP before speaking the command
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System's Quick Reference Guide for more information on setup and limitations

[Continued on next page](#)

Images are for illustrative purposes only.



Bluetooth® Wireless Technology†^{3,18}

 
[Continued from previous page](#)

Pairing a Phone:

For instructions on how to pair a phone, refer to the Car Infotainment System's Quick Reference Guide or your vehicle's Quick Start Guide.

How to Place a Call:

- **Option 1:** Press the Call / End Call button **A** (displays the phone screen with call history)
- **Option 2:** Press the Voice Recognition button **B**. Then say the command "Call {name}" or "Dial {number}" followed by contact name or number

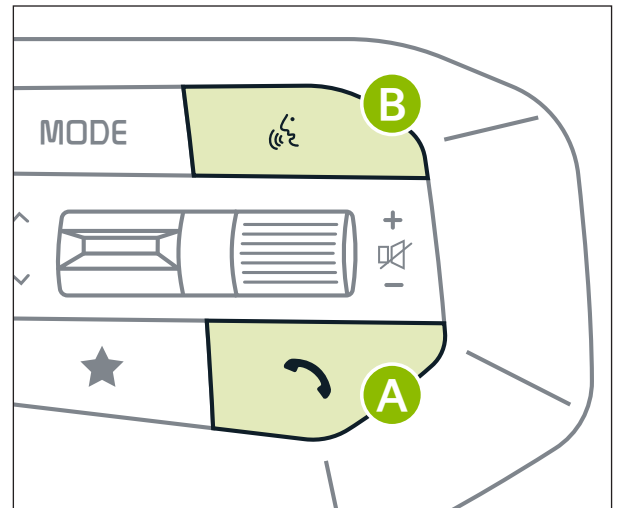

(Button on right side of steering wheel)

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future Bluetooth® connection requests.

[Continued on next page](#)

Bluetooth® wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device (sold separately).

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.



Bluetooth® Wireless Technology†3,18

[Continued from previous page](#)

Voice Recognition & Phone Contact Tips

 
The system may have difficulty understanding some accents or uncommon names. Improve the performance by

making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (e.g., "John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (e.g., @, &, #, /, -, *, +, etc.)
- Avoid using acronyms (e.g., "In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations (e.g., "Doctor Smith" vs. "Dr. Smith")



Voice Recognition

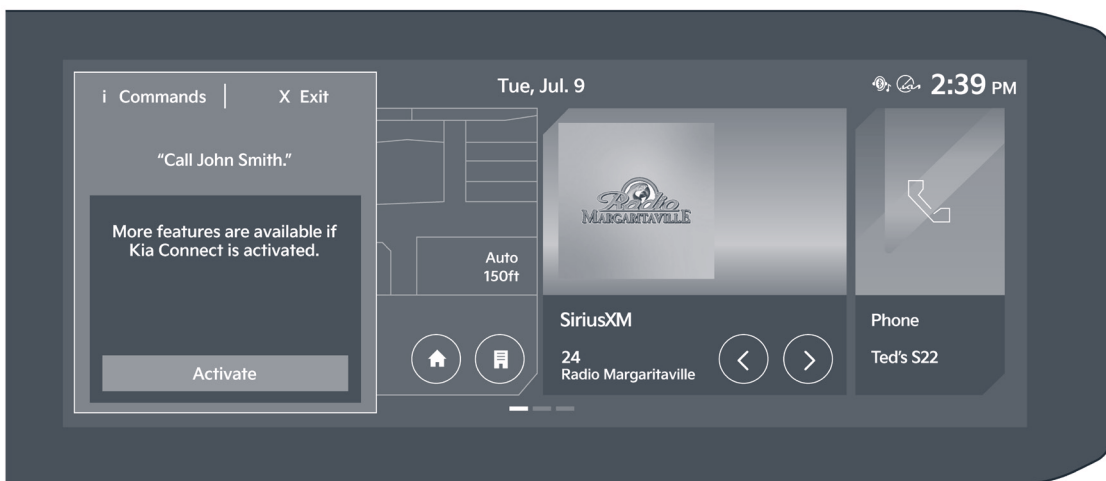

[Continued on next page](#)



Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

QUICK TIPS

- *Bluetooth*® Music Streaming - If the *Bluetooth*® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and turn off A/C - Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say "Commands" to get a list of available commands
- The system may register or pair multiple *Bluetooth*® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations



Steering Wheel Audio Controls^{†18}

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®/Media modes

Audio System ON/OFF: Press to turn power on; Press and hold to turn power off

B Seek/Preset button:

FM/AM/SiriusXM® Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek

Media Mode: Press up/down to move Track Up/Down. Press & hold up/down to fast forward/rewind (except for *Bluetooth*® Audio)

C Volume button: Press up/down to raise/lower volume

Mute button: Press to mute/unmute all audio (Media pauses in some Media modes when pressed)

 
D Custom button ★: Press to access user-selected feature. Press and hold the button to select one of the features available



Steering Wheel Controls



Button Settings

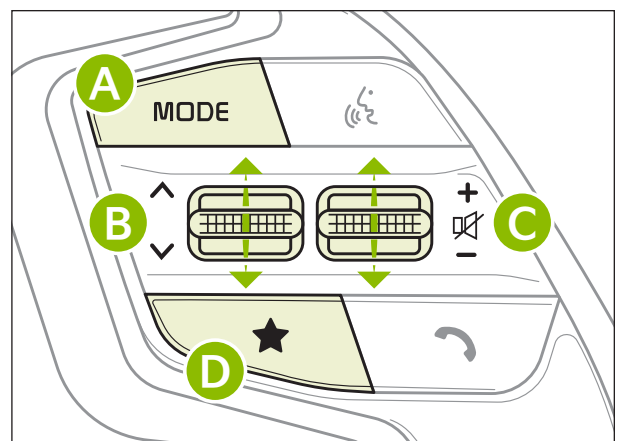

(Button on right side of steering wheel)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

 
Your vehicle's steering wheel buttons may differ from those in the illustrations. See the Owner's Manual or the Car Infotainment System Quick Reference Guide.



Kia Connect Activation^{†1}

Follow these steps to activate your Kia Connect system:

- To enter the activation screen on your Infotainment System:
 - Press the **SETUP** key, then DATA/NETWORK
 - In KIA CONNECT, press ACTIVATE SERVICE
 - Then press ACTIVATE
- Read and agree to Terms of Service and Privacy Policy and press AGREE and SUBMIT
- Enter a phone number or email address to receive a verification code, then press OK and SUBMIT
- Click on the link and a page will open requesting you to create an account
- Provide the information needed and select SAVE to create the account
- A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
- On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App^{†2}. After installing the app, log in and enjoy

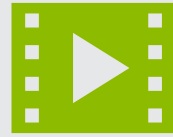

**Kia Connect
Activation**



 
**Kia Connect & Kia
Access app**

Note: If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code.




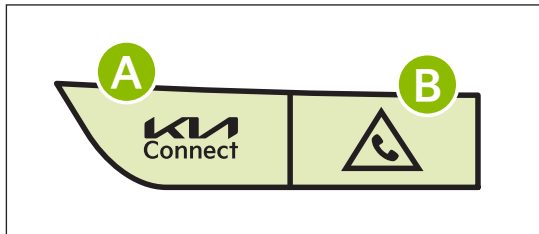 
Kia Connect Assistance^{†1}

Kia Connect  **A** - Press to connect to a virtual assistant to hear information about the Kia Connect features

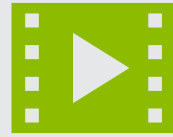 


Kia Connect Assistance

Roadside Assist  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services



(Buttons located on overhead console*)

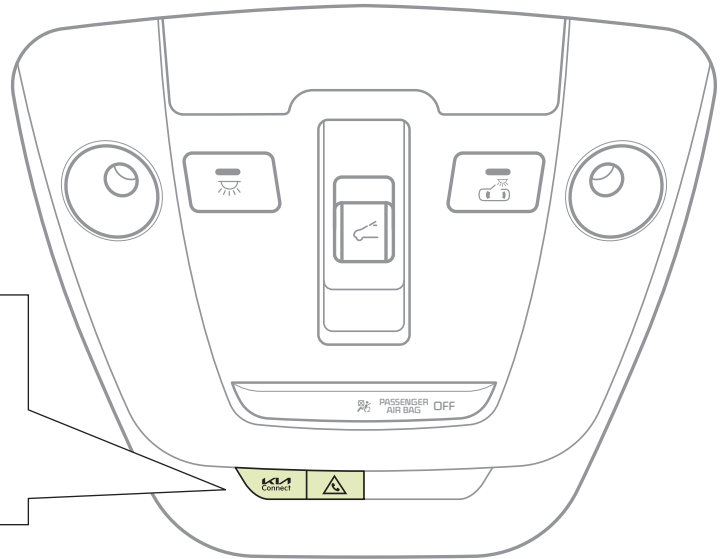

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle. Images are for illustrative purposes only and may not reflect actual feature or operation.



Kia Access App^{†2} Download

Go to an app marketplace to download the Kia Access App. Once you download the app,



**Download the
Kia Access App**

make sure you register your vehicle and start an account (refer to Kia Connect^{†1} Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect^{†1}. If these conditions are not met, remote commands may not execute or may take longer to execute. It will also affect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect^{†1} app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect^{†1} app, restart the vehicle

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.



Kia Access App^{†2} Features Guide

The Kia Access App Features Guide is a guide to help you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles



**Kia Access App
Features Guide**




Images are illustrative purposes only. Display and buttons may vary.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.



 Kia Connect Infotainment System - (Non-Navigation & Navigation †9)*

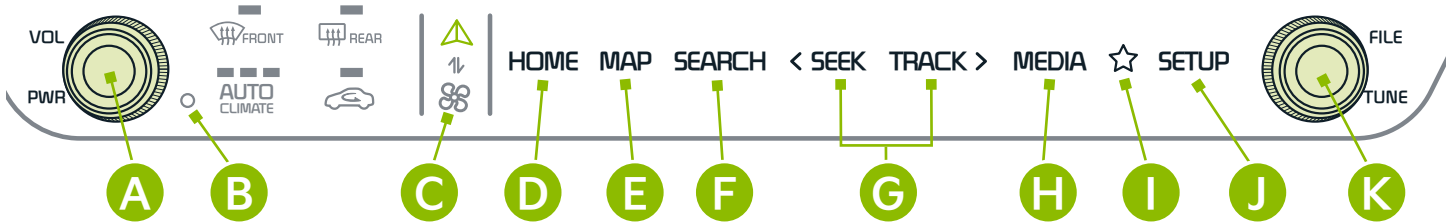

- A** Press to Power ON/OFF. Rotate to adjust Volume
- B** Restarts the system
- C** Infotainment System / Climate Control mode switching button
- D** Press to navigate HOME. Press and hold to turn on or off the Quick Control function
- E** Press the MAP button to return to the current map location. When receiving guidance on the map screen, press to repeat voice guidance
- F** Press to display the Search screen
- G** **Press briefly to do the following:**
 - FM/AM mode: Play the previous/next frequency
 - SiriusXM® mode: Change the channel
 - MEDIA mode: Change the track, file or title (except for AUX)**Press and hold to do the following (over 0.8 seconds):**
 - FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
 - MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth® Audio)
- H** Press to run the connected media. Press and hold to display the Media Home Screen
- I** Press to display the user-defined function. Press and hold the Custom STAR button to display the function settings screen
- J** Press to display SETUP/Settings mode. Press and hold to display the version information screen
- K** In Radio/SiriusXM®/ Media modes, rotate knob to search for stations/channels/tracks/songs/files. While on the Map screen, zoom in or out on the map

[Continued on next page](#)

Images are for illustrative purposes only.



Kia Connect Infotainment System - (Non-Navigation & Navigation †9)*

[Continued from previous page](#)



Switchable Controller **A:** Press to toggle between Infotainment System and Climate Control Modes. Press and hold the Switchable Controller button to set the default button display mode

To adjust the sound settings: Press the **SETUP** key on the Infotainment System and select SOUND.

Select the menu item to adjust settings.


Radio Presets: To save a preset, press the ADD STATION button.

SiriusXM® Smart Favorites: In Radio mode, choose SiriusXM®, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

 **Kia Connect Infotainment System**

 **Climate Control - Switchable Controller**

 **Navigation System Important Tips**

 **Driver User Profiles**

 **Wifi Hotspot**

[Continued on next page](#)

Images are for illustrative purposes only. For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.



Kia Connect Infotainment System - (Non-Navigation & Navigation^{†9})*

[Continued from previous page](#)



Custom Key ☆ **A**: To program the Custom Button to one of the available features, press and hold the Custom Button ☆. Select one of the available features you would like the Custom Button to open.

Map/software updates - To keep your map and software up to date, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>.

Note, visiting a dealer for a software update may include an additional charge.



Climate Control - Switchable Controller



Navigation System Important Tips



Driver User Profiles



Wifi Hotspot

[Continued on next page](#)

Images are for illustrative purposes only. For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.



Kia Connect Infotainment System - (Non-Navigation & Navigation^{†9})*

[Continued from previous page](#)

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto[™] or Apple CarPlay[®] on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto[™] and Apple CarPlay[®] (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the vehicle power is on to prevent battery discharge

REMINDER:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.



Digital Clock - Infotainment System

Press SETUP on the Infotainment System, select General, then select Date/Time from the menu to adjust.

QUICK TIPS

- The clock can be set to adjust automatically. To enable auto time setting, DAYLIGHT SAVINGS must be selected in the Settings Screen
- To manually set the time and date, the GPS time must be turned off in the Clock Settings

 
USB-C Charger Ports*

The USB-C Charger Ports **A** are located on the center panel and behind the Center Console. Devices can be recharged using a USB-C cable. The Power button needs to

be in the ACC/ON/RUN/START position to operate the USB Charger Ports.



USB-C Ports & Power Outlets

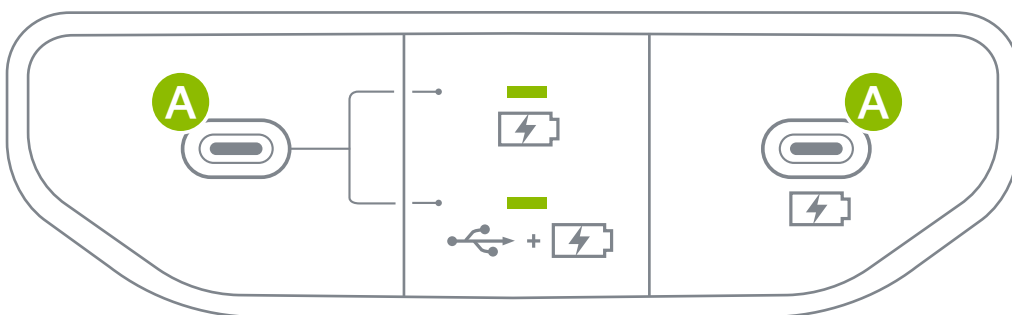

(Located on center dash above gear shift console)

Refer to section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Multimedia USB Ports & Power Outlets*

 
Multimedia USB-C Port (A): Use the Multimedia USB-C port to connect audio devices and smartphones.

The USB-C port (A) can also be used to stream data.


Press the button (B) to cycle between charging and streaming data. When the top LED is illuminated, the port is charging only.

When the bottom LED is illuminated, the port is streaming and charging.

Power Outlets (C): Use the power outlet for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

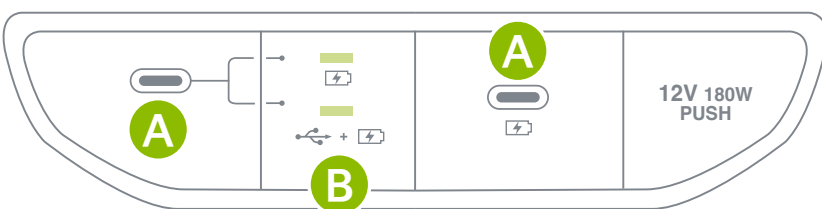

 (Located on center dash above gear shift console)

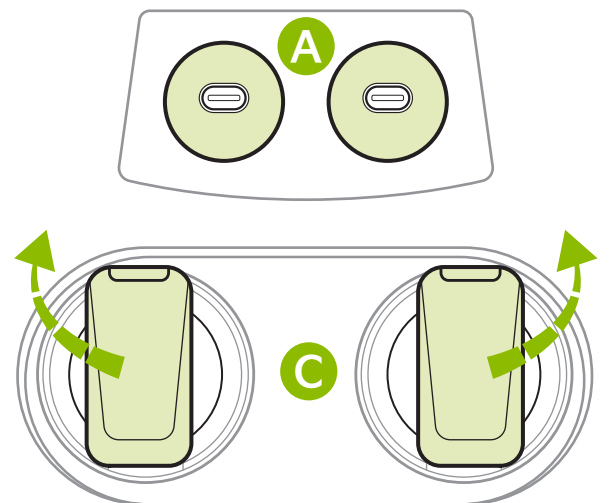

Rear USB-C Ports and Power Outlets

QUICK TIP

- The power outlets are inactive when ignition is in the OFF position.

REMINDERS:

- Only use cables made by your device manufacturer. Third party cables may damage your device
- The Multimedia USB data port is located between the Power Outlet and USB Charger Port. The USB Charger Port does not support data transfer

Refer to section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.





Wireless Smartphone Charging System

 
Charge a compatible Qi™ Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



Wireless Smartphone Charging

1. Enable Wireless Charging in the Vehicle Settings on the Infotainment System. Press the SETUP button, VEHICLE to enter Vehicle Settings, CONVENIENCE then select WIRELESS CHARGING SYSTEM FOR MOBILE DEVICES
2. Place a compatible smartphone on the center of the charging pad **A**
3. Indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

Requires Qi™ enabled device or Qi™-enabled case

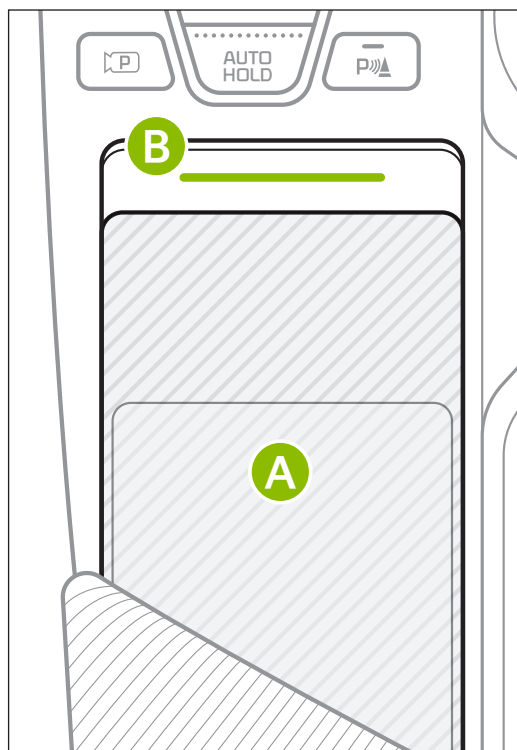

[Continued on next page](#)

Refer to the section 4 in the Owner's Manual for warnings and instructions.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Wireless Smartphone Charging System

[Continued from previous page](#)

QUICK TIPS

- The smartphone must be a compatible phone with Qi™ function available
- Wireless charging must be enabled in vehicle settings
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging so as to not to impede the charging area
- Removing the phone case may improve charging efficiency and ensure a secure connection
- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle and the driver's seat belt must be on

REMINDERS:

 
 
- Some smartphone models are not Qi™ certified, which may effect the speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases.
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance.
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

Refer to the section 4 in the Owner's Manual for warnings and instructions.



Automatic Climate Control System

- A** POWER button/Driver's temperature control knob
- B** Front windshield defrost button
- C** Rear window defrost button
- D** AUTO mode button
- E** Air intake button
- F** Infotainment/Climate switch button
- G** Driver's seat temperature display
- H** DRIVER ONLY select button
- I** A/C button on or off
- J** Fan speed control button
- K** Mode selection button
- L** SYNC button*
- M** Passenger temperature display
- N** Passenger temperature control knob

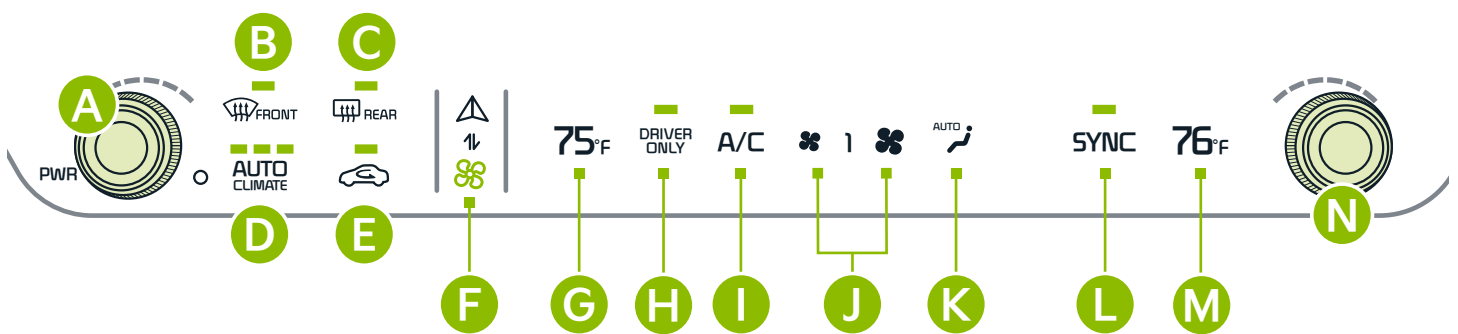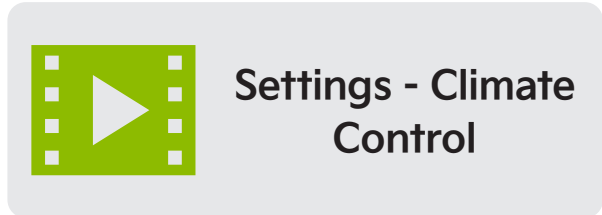

[Continued on next page](#)

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.



Automatic Climate Control System

[Continued from previous page](#)

Climate Control Auto Function

Press AUTO to select Full Auto Operation.



The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected. Turn temperature control knob **A** to the desired temperature.



Settings - Climate Control



Auto Defogging System: Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press and hold the Front Defrost button  for three seconds when the vehicle power is on (the defrost button light will flash three times and the ADS OFF icon will illuminate). To turn Auto Defogging on again, press and hold the Front Defrost button  again for three seconds and the defrost button light will flash six times and ADS OFF icon will turn off.

[Continued on next page](#)


Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.




Automatic Climate Control System


[Continued from previous page](#)

 Driver Only Ventilation: Driver Only Ventilation restricts air flow to the driver's side vents only. This can help to improve driving range by limiting the power drawn from the battery. Press DRIVER ONLY button **A** to enable air flow through the driver's side vents only.

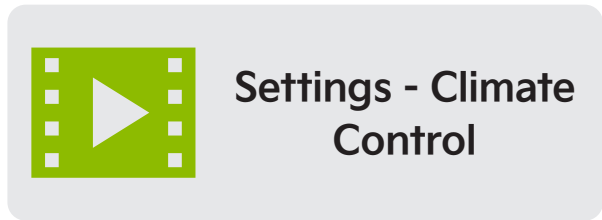

Defrost Outside and/or Inside Windshield:

 1. Set Front Fan Speed **B** to the highest position
2. Set **Temperature** to **Hot** **C**
3. Press the **Front Defrost** button  **D**

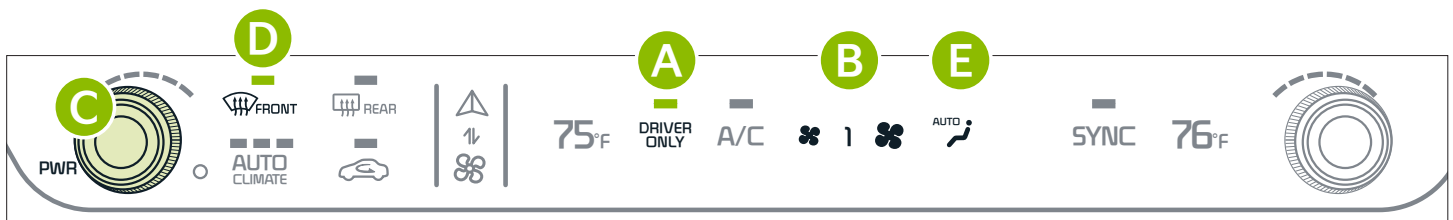

Air Flow Modes **E:** To select one of the following Air Flow Modes, press the Mode selection button:



After Blow System: Prevent odor by dehumidifying the condensate produced during air conditioning operation:

Vehicle	Climate features
Active sound design	<input checked="" type="checkbox"/> Air conditioner auto-drying After the vehicle is turned Off, the fan will run automatically to dry the inside of the air conditioner to prevent mold growth.
N/A	
Built-in Cam	<input type="checkbox"/> Indirect ventilation A three-dimensional, diffuse air flow for cooling the cabin.
Climate	
Seats	

[Continued on next page](#)

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.






Automatic Climate Control System

[Continued from previous page](#)

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve defog performance
- During Auto Operation, the A/C indicator will not illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the A/C and heater may allow the Energy Consumption to increase, especially excessive use of the heater

Refer to section 5 in the Owner's Manual for more information.



Heated Steering Wheel*

Press button **A** to turn ON/OFF the steering wheel heater while the POWER button is in the ON or READY position.

The steering wheel heater will turn off automatically after 30 minutes, or when button is pressed again to deactivate.



**Tilt/Telescoping/
Heated Steering
Wheel**



(Located on center console above Power button)

QUICK TIP

- If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

REMINDER:

- If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Rotary Dial Shifter

Rotate dial for the following:

P: Park - Press to place in Park. To move out of Park, rotate dial to R, D or N

R: Reverse

N: Neutral

 
D: Drive

REMINDER:

- The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.



Rotary Dial Shifter

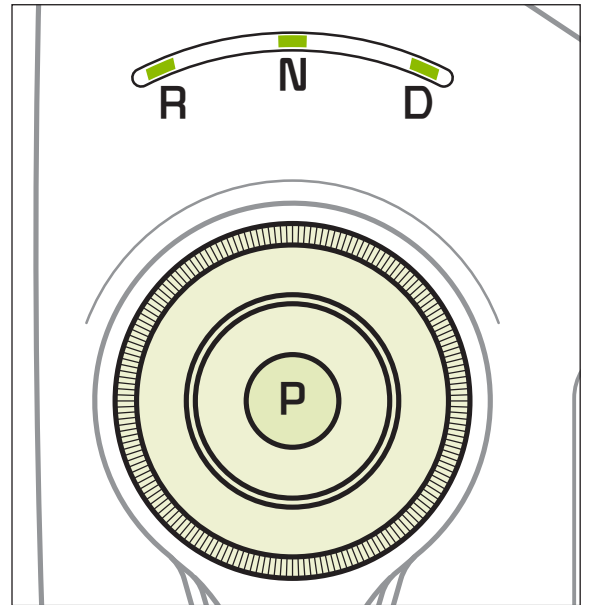

(Located on center console below Power button)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.




Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.




Electronic Parking Brake (EPB) / Auto Hold

 
Applying the Parking Brake

Pull up the EPB switch **A**. Ensure that the indicator light  BRAKE is illuminated on the Instrument Cluster.

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of Park to Drive, or to Reverse or shifted out of Neutral to Drive, or to Reverse.

Manually, depress the brake pedal, then press the EPB switch **A** down with the ignition switch in the ON position. Ensure that the indicator light  BRAKE is OFF.

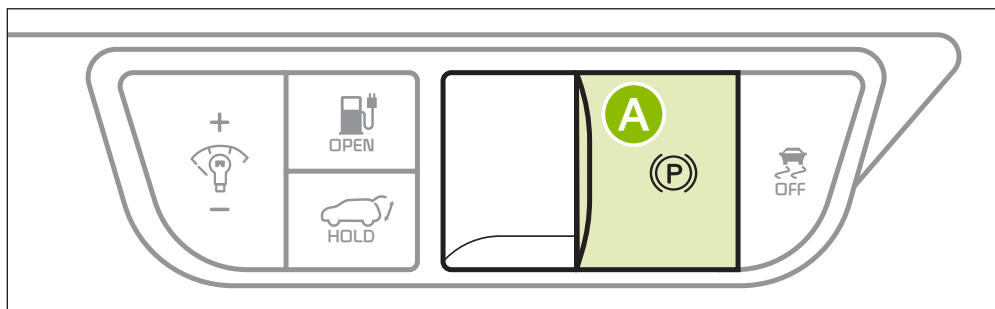

(Located on panel to the left of steering wheel)

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- With the EPB system activated, pull up and hold the EPB switch again to increase brake pressure if parked on a decline or incline

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Electronic Parking Brake (EPB)

[Continued from previous page](#)

REMINDERS:

 
- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned on
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly



Electronic Parking Brake (EPB) / Auto Hold

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned on/off using the AUTO HOLD switch **A** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

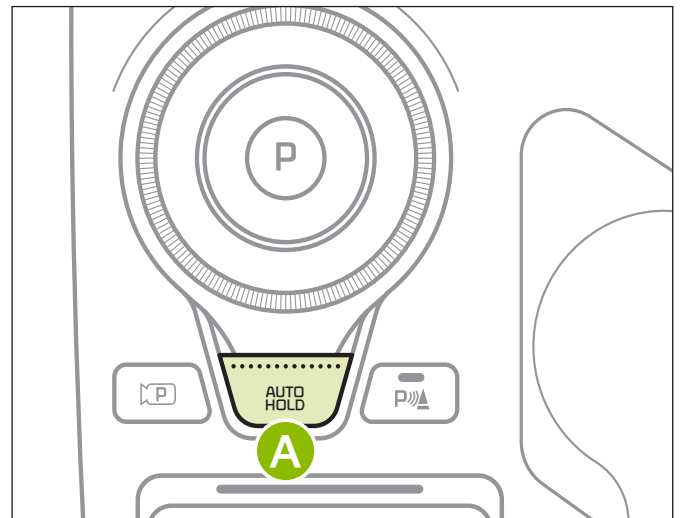

(Located on center console below gear shift knob)

The Auto Hold indicator has four states:

Standby (white): With vehicle in Park, at a standstill, and AUTO HOLD switch **A** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Auto Hold

[Continued from previous page](#)

 
Engaged (green): When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

OFF (not illuminated): The indicator will turn off when the AUTO HOLD switch **A** is turned off or when the EPB is manually turned on.

Malfunction (yellow): When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.



Electronic Parking Brake (EPB) / Auto Hold

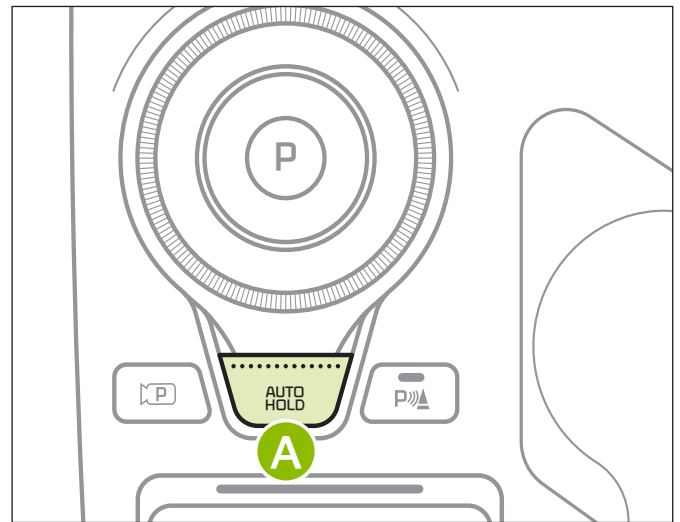

(Located on center console below gear shift knob)

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold turns off when ignition is cycled
- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Seat Warmers / Ventilated Seats*†15

(Driver & Front Passenger)


 
A Seat Warmers — Press the top of the button once for high setting (3 amber LEDs lit), again for middle setting (2 amber LEDs lit), again for low setting (1 amber LED lit). Press again to turn OFF.

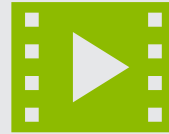

**Seat Warmers /
Ventilated Seats**

B Ventilated Seats — Press the bottom of the button once for high setting (3 blue LEDs lit), again for middle setting (2 blue LEDs lit), again for low setting (1 blue LED lit). Press again to turn OFF.

  C Rear Seat Warmers — Press the button to turn the rear seat warmers on. Rear seat warmers only have LOW & HIGH settings.

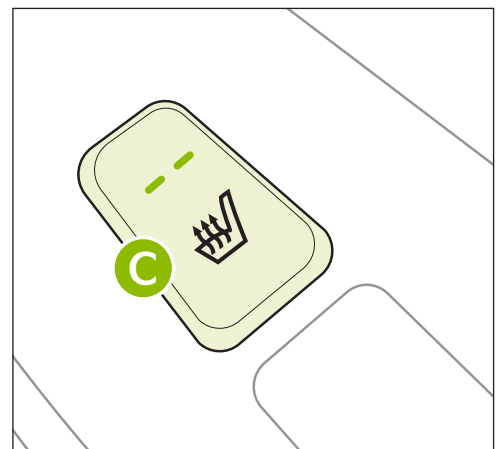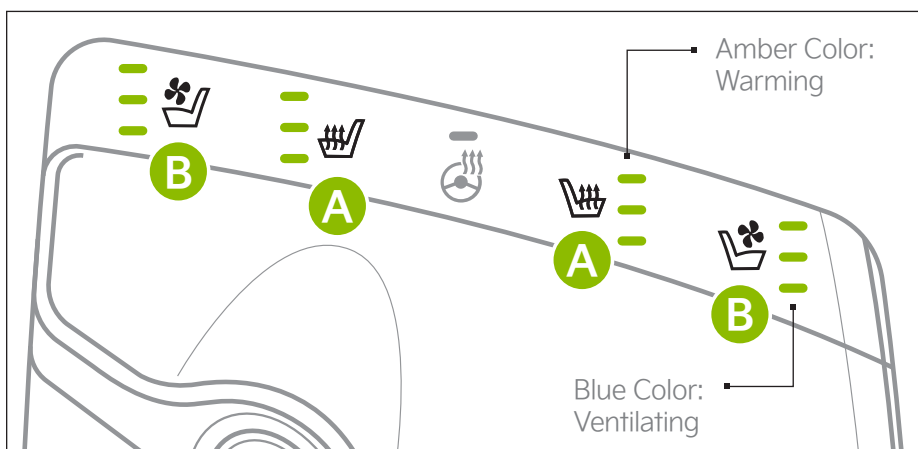

(Located on center console above Power button)

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default

REMINDER:


- Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information
- You can also press and hold buttons to turn off the seat warmer / ventilation

Images are for illustrative purposes only.




Infotainment System Seat Settings*

 To adjust the settings for Seat Position Change Alert, Auto Heating/Ventilation and Steering Wheel/Seat Easy Access, press the SETUP button on the Infotainment Screen. Press the **VEHICLE** button, then SEATS to access the settings.

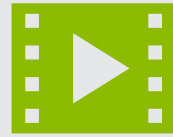

 2nd-Row Seats Settings - Infotainment System

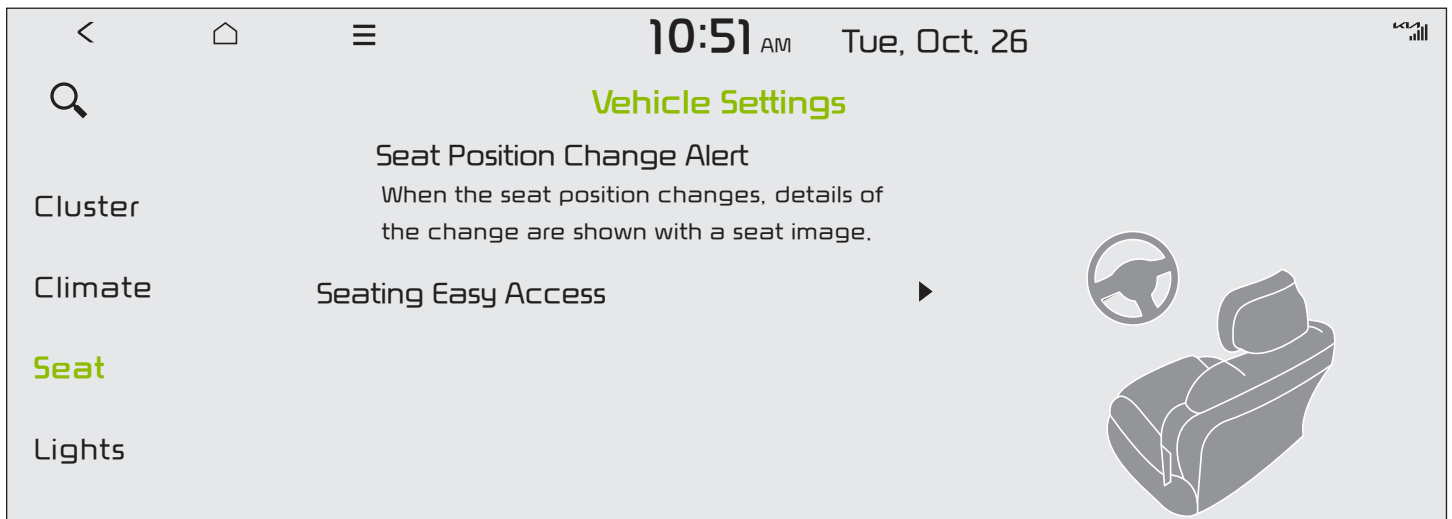


Integrated Memory System*

The integrated system stores into memory the position of the Driver's Seat, the Outside Rearview Mirrors, the Head-Up Display and Steering Wheel settings..

To store settings into memory,

1. Press Park on the Rotary Dial Shifter with the vehicle power on.
2. Adjust the Driver's Seat, Outside Mirrors and other settings.
3. Press and hold one of the memory buttons 1 or 2 **A**.

 The system will beep once when memory has been stored.

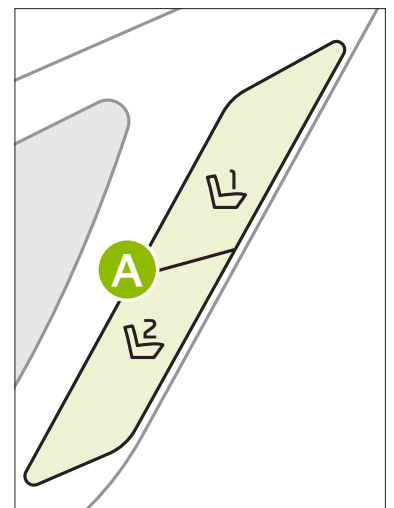

(Located on driver's door)


Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.



Front Seat Headrest Adjustment^{†7}

To raise headrest: Pull headrest up.

 To lower headrest: Press lock **A**, then press the headrest down.

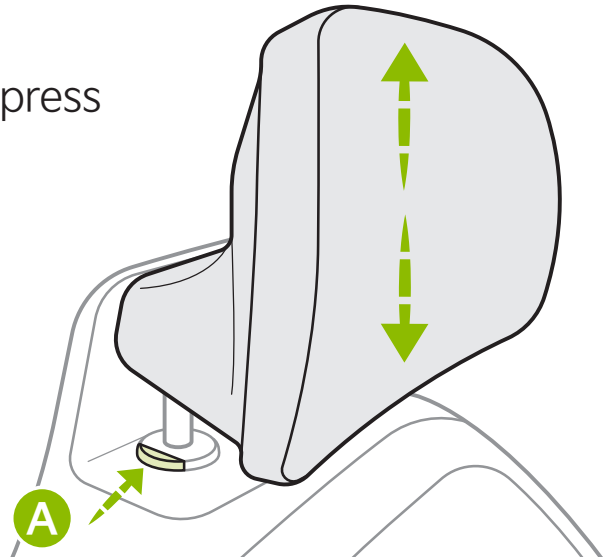

QUICK TIP

- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDER:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.

 
 


Power Adjustable Driver's Seat*† 13

Move/Press controls to adjust the Seat forward/backward, the Seat Cushion tilt up/down, the Seatback forward/backward or Lumbar* forward/backward.



Power Adjustable Driver's Seat with Memory Settings

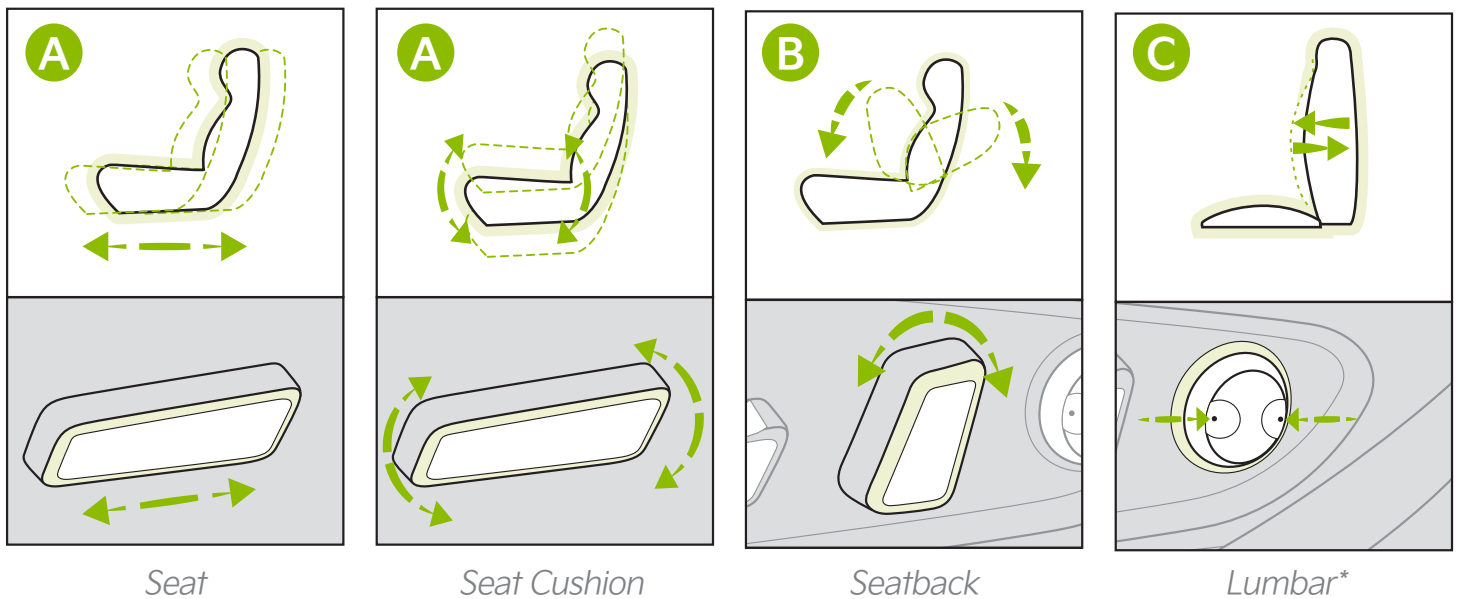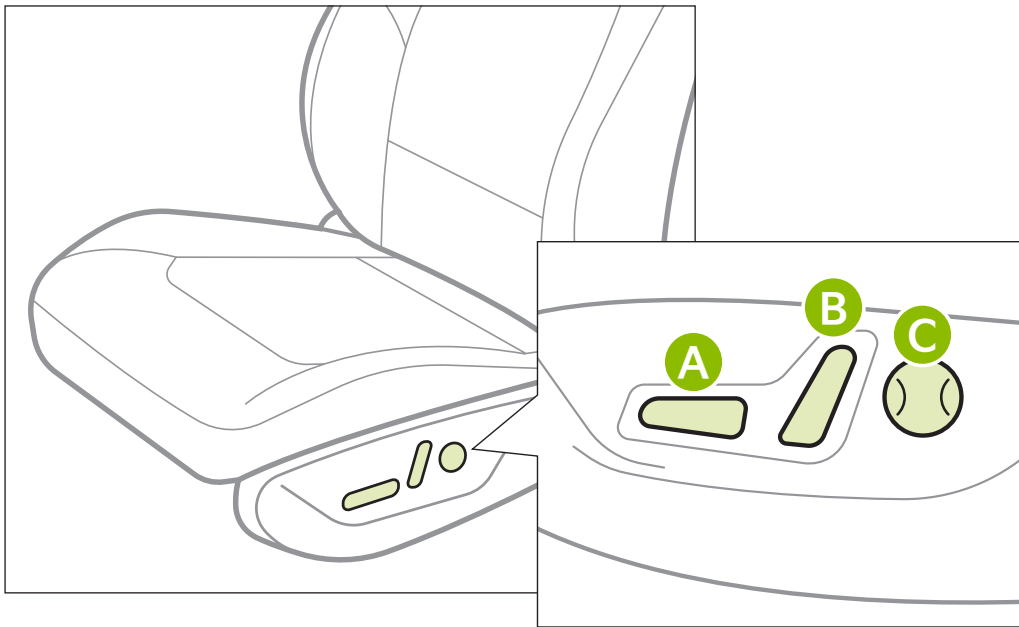

REMINDER: Do not attempt to adjust the Seat while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.

 


Manual Adjustable Driver's Seat*† 13

- Pull lever **A** to slide Seat forward/backward
- Pull/press lever **B** up/down one or more times to adjust Seat height*
- Pull lever **C** to adjust Seatback recline



Manual Seat Adjustment

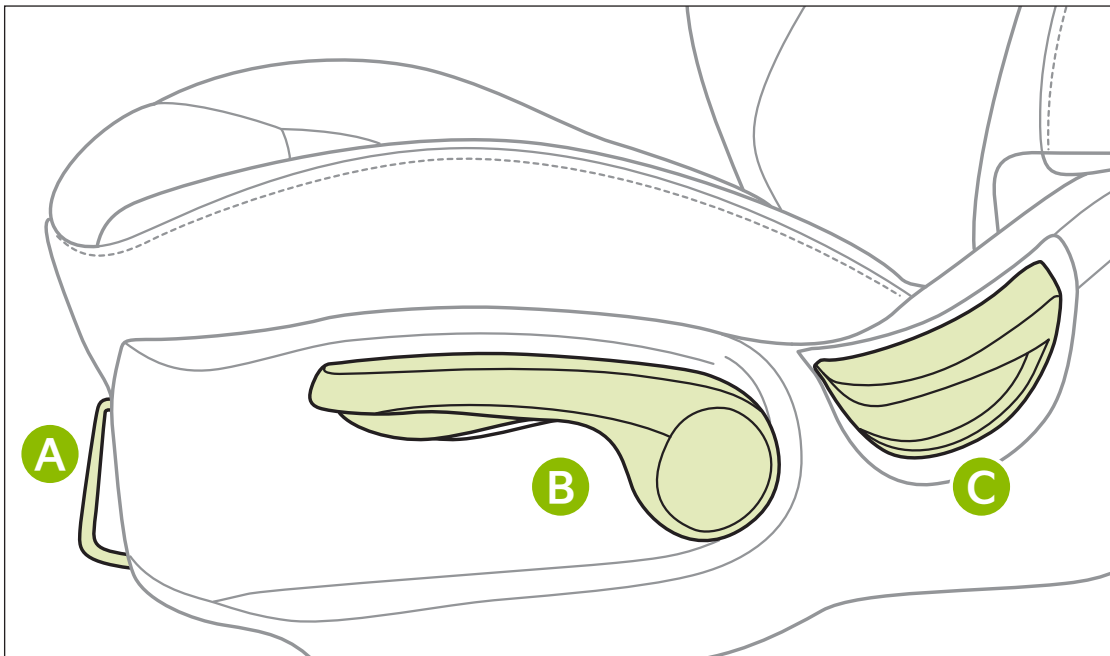

QUICK TIP

- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

REMINDER:

- Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Folding Rear Seats^{† 13}

To Fold:

 
1. Ensure the belt strap is out of way of the Seatback folding
2. Adjust the Front Seatback to the upright position and lower the rear headrest(s) to the lowest position
3. Pull on the Rear Seat recliner lever **A**, then fold the seat toward the front



**2nd Row Seats-
Remote Folding /
Unfolding Seats
and Seat Straps**

To Unfold:

1. Pull the Rear Seat recliner lever **A** and lift the Seatback backward until it clicks firmly in place
2. Return the rear seat belt to the proper position

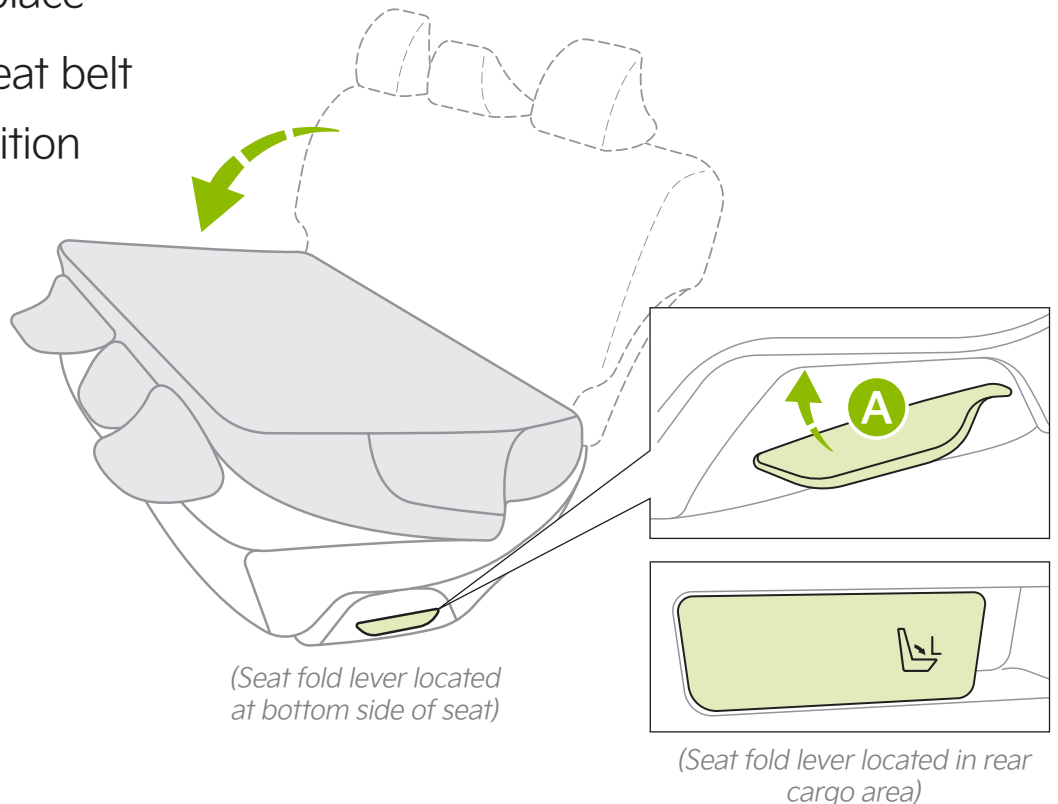

QUICK TIP

- It may be necessary to adjust the Front Seatbacks to fully lower rear seats.

REMINDER:

- Always make sure the Seatback is locked in place when unfolded.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Rear Occupant Alert (ROA) with Door Monitoring^{†11}

Rear Occupant Alert (ROA) with Door Monitoring is designed to help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster LCD stating to “Check rear seats” **A** and an alert will sound.

To activate or deactivate ROA, go to Vehicle Settings on the Infotainment System by selecting VEHICLE, then select Convenience, then Rear Occupant Alert and check/uncheck the box.



Rear Occupant Alert (ROA) with Door Monitoring



(Message on Cluster Display)

REMINDERS:

- Always be sure to check the passenger areas before leaving the vehicle
- ROA uses a rear door opened/closed history, which is reset after the driver turns the vehicle off, exits the vehicle and locks the door remotely. So even if a rear door does not reopen, Rear Occupant Alert (ROA) alert can occur
- ROA notifications also require a Kia Connect^{†1} subscription, a compatible smartphone, and a wireless signal with good coverage to function. Normal cellular service rates may apply

When engaged, Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle interior when exiting the vehicle.

Images are for illustrative purposes only. See section 5 in the Owner's Manual for more information.

 


Hood Release Lever and Latch



Opening the Hood:

Pull the Secondary Hood Release Lever **A** to unlatch the Hood.

In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** inside of the Hood's center to the left and lift the Hood.

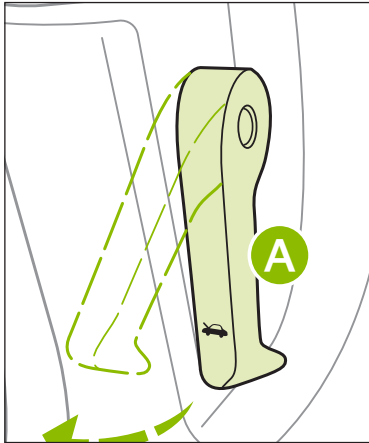

(Located on Driver side kick panel)

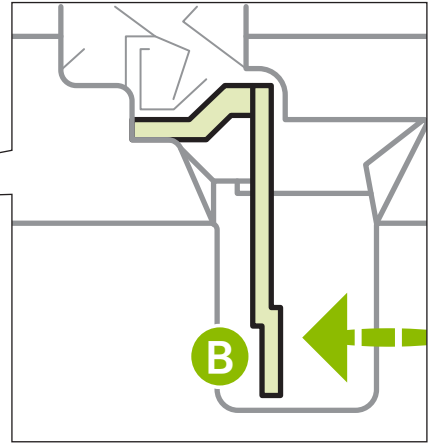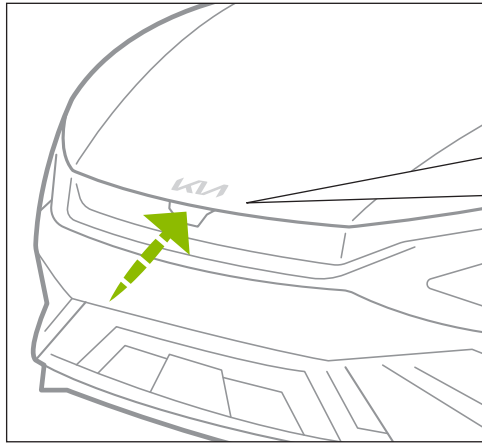  


(Latch located inside hood)

Closing the Hood: Lower the Hood about halfway and then press down to securely lock in place.

Sun Visor^{†19}

 Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

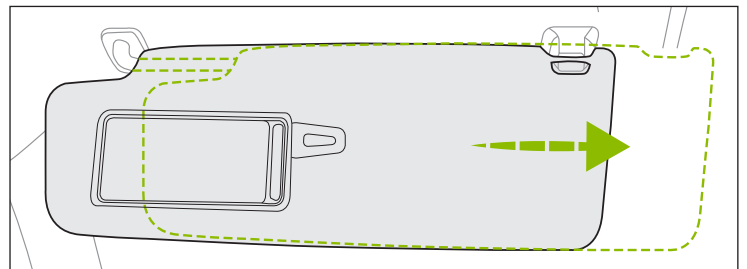

REMINDERS:

- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.



Exterior Flush Door Handle Operation

Manual Type - To unlock the driver's door, with the Smart Key in your possession:

- Push the engraved button **A** on the door handle - the hazard lights will blink twice, a chime will sound twice, and the door unlocks
- Press on the front of the door handle. Then the rear handle will pop out
- Pull on the door handle to open the door

 
 
 
To lock the doors using the Smart Key, press the lock button **B**.

Electric type - When the "Approach Unlock" feature is activated in Vehicle Settings, the door handles will automatically unlock when you approach the vehicle with the Smart Key in your possession.

To activate the "Approach Unlock" feature: press the SETUP button/key on the Infotainment System. Select VEHICLE, then DOOR and select ACTIVATE APPROACH UNLOCK

When you're within one foot of the vehicle with the Smart Key in your possession, the outside door handles will slide out, the doors will unlock, the Hazard Warning Flashers will blink twice, and a chime will sound twice. Then pull the door handle to open the door.

To lock the electric door handles, press the sensor/engraved button **A** on the door handle or use the lock button on the Smart Key.

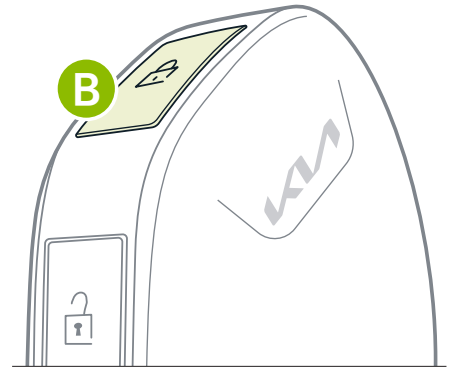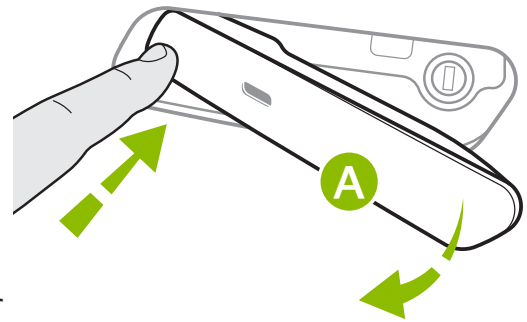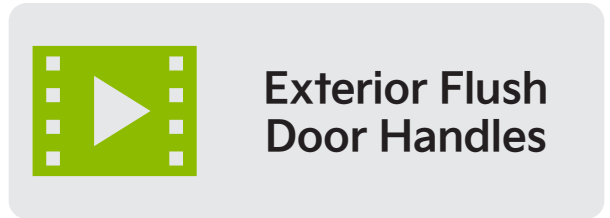

[Continued on next page](#)

Images are for illustrative purposes only.



Exterior Flush Door Handle Operation

[Continued from previous page](#)

QUICK TIP

- To remove ice from door handles, tap around the door handle perimeter using your hand until the door handle pops out, when unlocking the door. Press in and pull out a few times to remove any ice residue

REMINDER:

- After unlocking the doors, if one of the doors has not been opened, the doors will re-lock automatically after 30 seconds.



Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)^{†10}

 
 
 
- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate. **Manual liftgate:** Lift the Liftgate handle to manually open Liftgate



REMINDER: The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle Liftgate.

- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Driver's Door Lock/Unlock button:
 - Press the button once to unlock Driver's Door
 - Press again within 4 seconds to unlock All Doors
 - Press again to lock All Doors

- F** **Emergency Key:**
 - Use to lock/unlock Driver's Door by turning once or all doors by turning twice
 - Use to enable/disable Child Safety Locks
 - Use to unlatch rear center seatbelt lower anchor

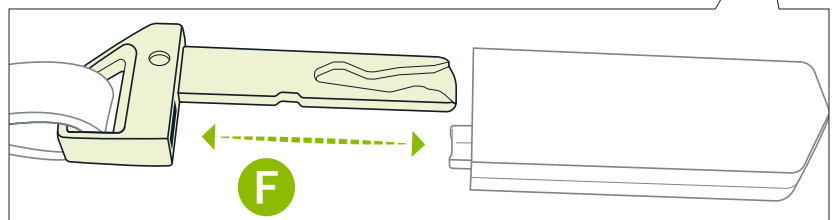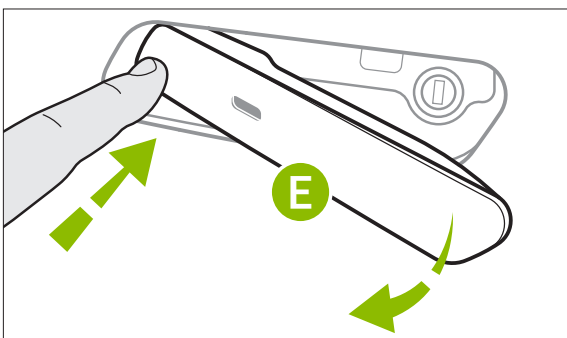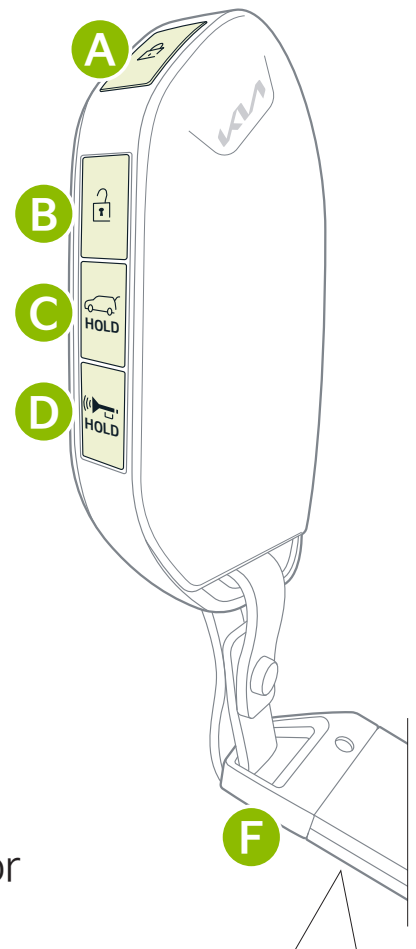

[Continued on next page](#)

Images are for illustrative purposes only.



 
Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)^{†10}

[Continued from previous page](#)

A Remote Start*: Lock the doors by pressing the door lock button **B** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **B**, press and hold the Remote Start button **A** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If the driver does not enter vehicle within 3 minutes of starting the vehicle, the vehicle will automatically turn off.



Remote Smart Parking Assist (RSPA)* - To park or exit a parking space remotely press **C** and **D** as needed, see instructions on page 70.

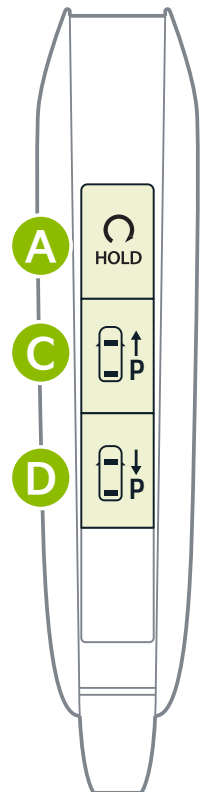

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the POWER button (Lock button side closest) and press to start vehicle
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDERS:

- Remote button configuration may vary depending on vehicle options
- One/two button turn logic can be changed in Vehicle Settings
- When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Double-Turn Lock/Unlock All

With Mechanical Key **A**:

 - Turn counterclockwise once to unlock Driver's Door **B**
- Turn counterclockwise again within 4 seconds to unlock All Doors **B**
- Turn clockwise once to lock All Doors **B**

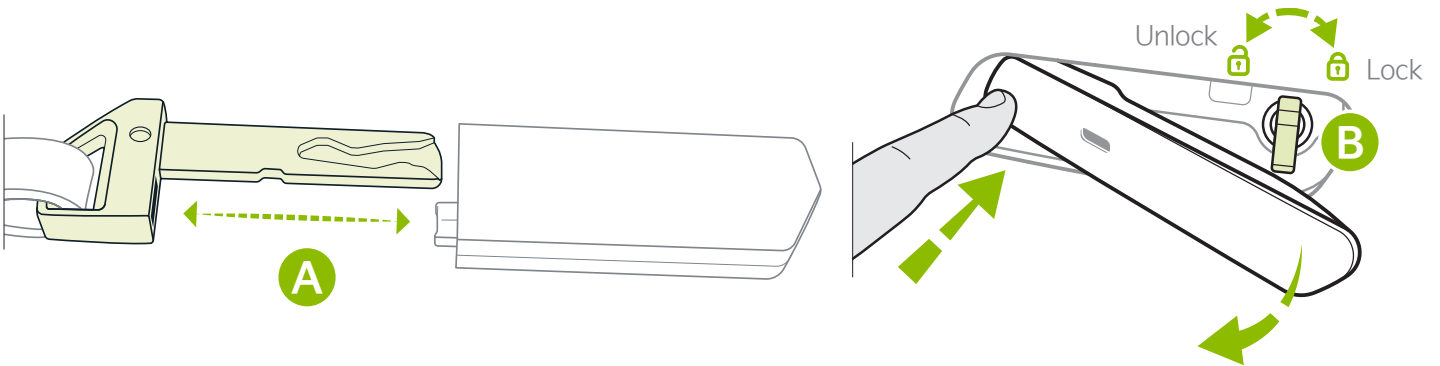

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.



 
Digital Key 2.0 Advanced^{*†4}

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
3. Open the Kia Access App and select **DIGITAL KEYS** **A**
4. Press **CREATE OWNER KEY**
5. When your vehicle's infotainment system detects your device, the **CONTINUE TO WALLET APP** button will illuminate. Select it to open the wallet app
6. Press **CONTINUE** and the wallet app will pair and add your digital key


REMINDER: Actual steps may vary between devices.

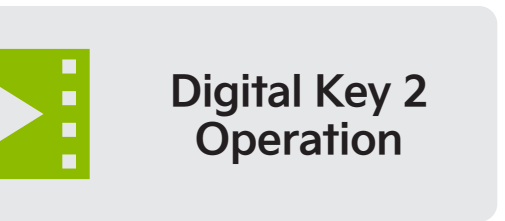

Digital Key 2 Operation



 Digital Key 2 Setup, Registration & Sharing

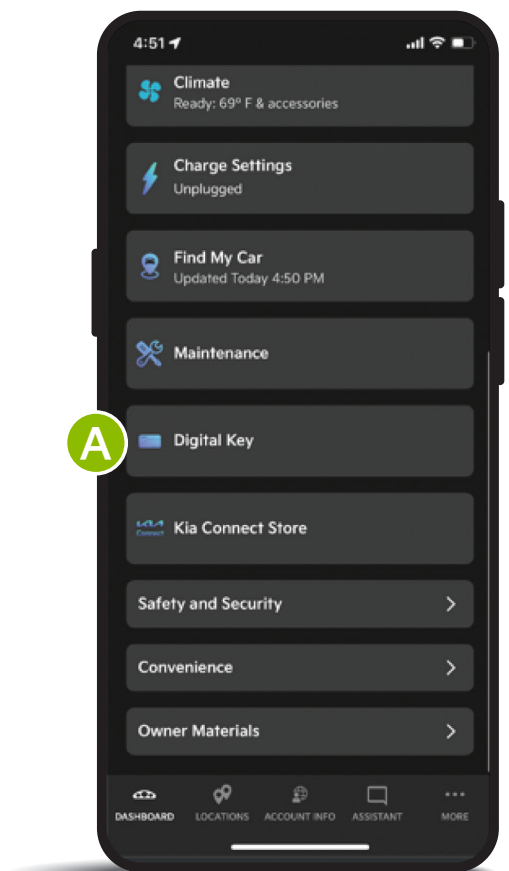

[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

 


Digital Key 2.0 Advanced*†4

[Continued from previous page](#)

Digital Key 2 Setup for Smart-phones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access App** and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

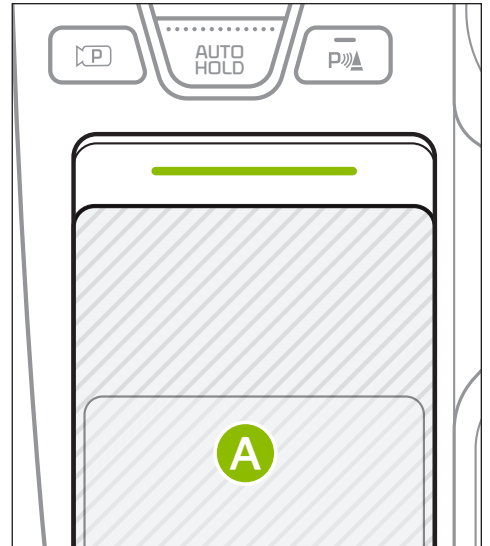

[Continued on next page](#)

QUICK TIP

- When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Digital Key 2.0 Advanced^{*†4}

[Continued from previous page](#)

Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Power button

Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

Revoking shared Digital Key access: You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Select the contact and click on **Revoke Access**.

To delete shared keys and the owner key: Go to the Vehicle Settings* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY, SMARTPHONE KEY. Select the Digital Key and press DELETE.

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

[Continued on next page](#)



Digital Key 2.0 Advanced*†4

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
 - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
 - iPhone XS® or later.
 - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
 - Apple Watch Series 5® or later
 - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
 - For **Samsung™ Phones**: Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
 - Galaxy S20™ or later
 - Galaxy Note20 5G™ or later
 - Galaxy Z Flip 5G™ or later
 - Galaxy Fold 2™ or later
 - For **Google™ Smartphones**: Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Smart Power Liftgate*†17

 
The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate. The Smart Power Liftgate will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

Opening/Closing from Inside the Vehicle:

Vehicle: Press and hold the Smart Power Liftgate Open/Close button* **A** to automatically open/close the Liftgate.

Opening/Closing from Outside the Vehicle:


To open the Smart Power Liftgate* automatically, press the Liftgate Release button **B** on the exterior of the Liftgate. Automatically close by pressing the Smart Power Liftgate Close button* **C** located inside the Liftgate lid.

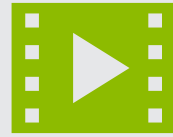

Smart Power Liftgate



 
Settings - Power Liftgate

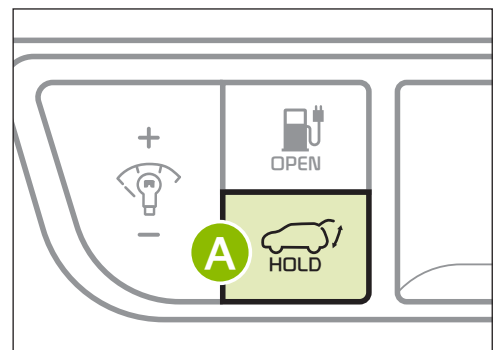

(Button on driver's panel to the left of steering wheel)

QUICK TIP

 - To cancel the Smart Power Liftgate while automatically opening or closing, press any button on the Smart Key fob.

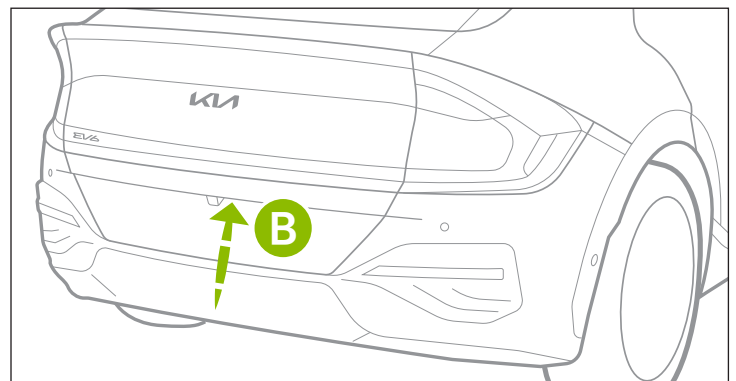

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Smart Power Liftgate^{*†17}

[Continued from previous page](#)

 Vehicle Settings: The Smart Power Liftgate is on by default. To adjust the settings for Opening Height and Opening Speed, press the **SETUP** key/button on the Infotainment System. Select the onscreen **VEHICLE** button to enter the Vehicle Settings. Go to DOOR, SMART LIFTGATE.

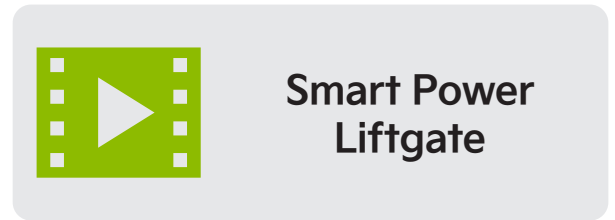

- **Opening Height:** Select POWER LIFTGATE HEIGHT and choose one of the options. Optional steps to manually program the Opening Height:
 - Open Liftgate and manually position the Liftgate to your preferred opening height
 - Depress and hold the close button on the Liftgate for 3 seconds or more
 - Once the system sounds the alert that the programming is complete, manually close the Liftgate
- **Opening Speed:** Select POWER LIFTGATE SPEED and choose FAST or NORMAL

Auto Open (Opening with no-touch activation):

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

[Continued on next page](#)

Refer to section 5 in the Owner's Manual for more information.



 
Smart Power Liftgate^{*†17}

[Continued from previous page](#)

Smart Key: To open the Smart Power Liftgate, press and hold the Smart Key Liftgate button **A** until the Liftgate begins opening. Press again and hold to close.

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the liftgate Release button
- The liftgate unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle
- The Smart Key Liftgate button **A** must be held to close the liftgate. Releasing these buttons mid operation will cause the liftgate to halt its motion and sound a warning chime. This is normal operation

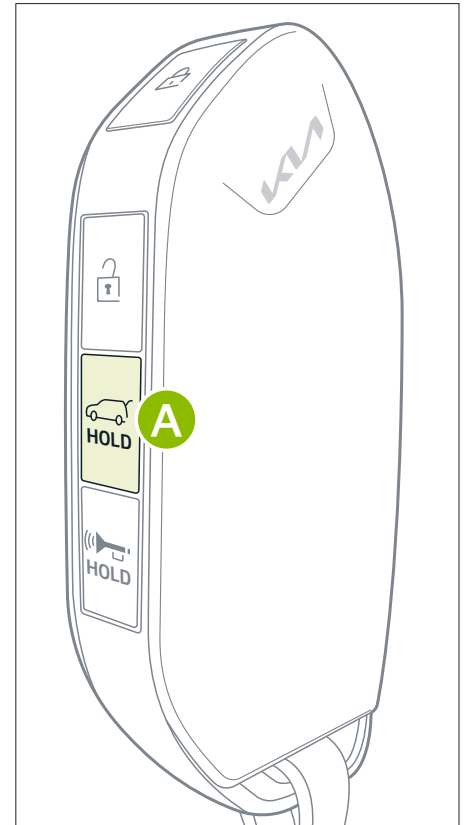

REMINDERS:


- Smart Power Liftgate may be damaged if attempting to open or close manually
- If going through a car wash, remind the attendant to keep the vehicle in Neutral and keep the engine running. Also, disable the Smart Power Liftgate lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the liftgate lid when operating the Smart Power Liftgate
- The default liftgate opening/closing speed is set to fast
- The liftgate opening/closing speed setting cannot be changed when the Power Liftgate function is turned off or if the liftgate is not completely closed

Images are for illustrative purposes only. Refer to section 5 in the Owner's Manual for more information.




Manual Liftgate* / Liftgate Release Button*†17

 The Liftgate Release button is located on the bottom exterior of the Liftgate lid. With doors unlocked, press the Liftgate Release button **A** and pull the Liftgate up by the handle to open. Press the Liftgate Auto Close button* **B** to close the Liftgate.

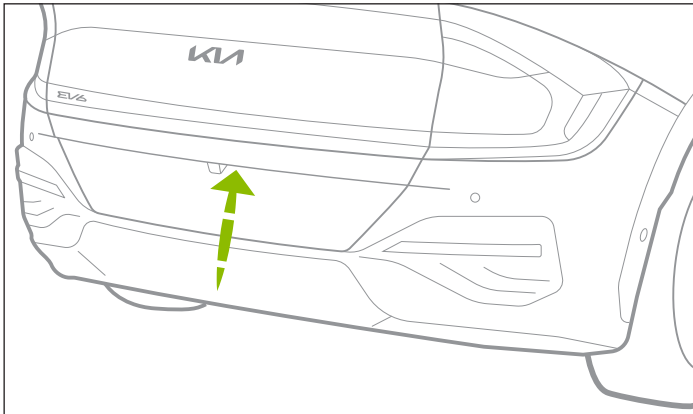

 (Exterior button located on underside of liftgate)

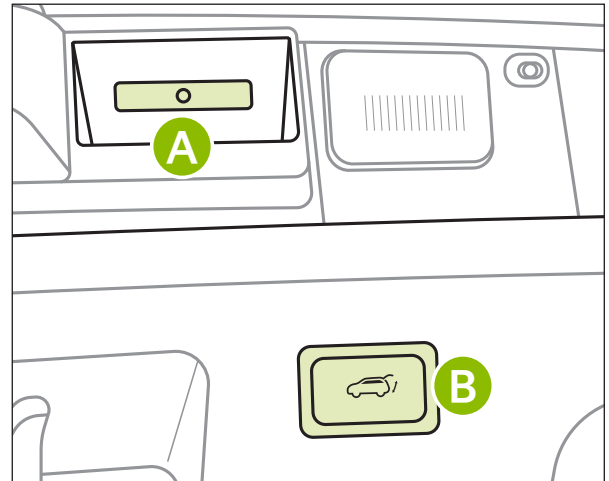

QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- **Manual liftgate***: The Liftgate unlocks automatically and then can be opened manually when the Smart Key* is within close proximity to the vehicle
- **Manual liftgate***: Pressing the Smart Key remote liftgate button only unlocks the liftgate. To open liftgate, also press the Liftgate Release button & pull the liftgate up by the handle to open

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



 
 
Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the POWER button is turned OFF.

Map Lamp/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps on/off. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/ Room Lamps on/off
- Press button **C** to turn the Map/Room Lamp on, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned off.

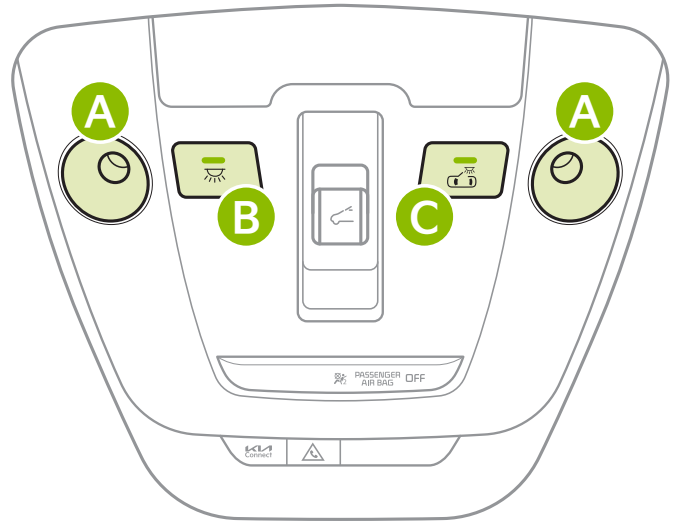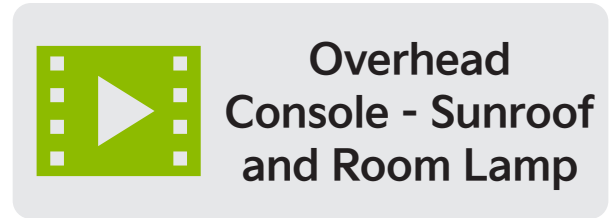

QUICK TIPS

- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause 12V battery discharge

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Sunroof Operation

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.

Slide the Sunshade and Sunroof:

- **Auto Open:** Slide the lever **A** backward to the farthest position and release
- **Auto Close** (Sunroof only): Slide the lever **A** forward to the farthest position and release

Slide the Sunroof (with Sunshade open):

 
- **Open:** Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature)
- **Close:** Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

Tilt the Sunroof:

- **Raise:** Push lever **A** upward
- **Lower:** Push lever **A** forward



Overhead Console - Sunroof and Room Lamp

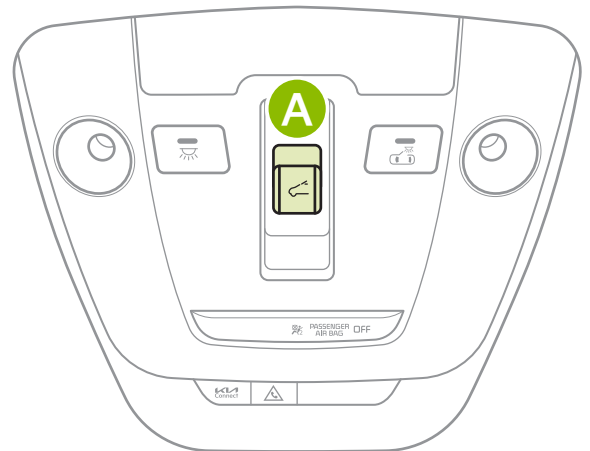

[Continued on next page](#)

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Sunroof Operation

[*Continued from previous page*](#)

QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction
- Adjusting the sunroof past the first stop position (normal), in the fully opened position, may cause wind buffeting noise

REMINDERS:

- Sunshade needs to remain open while Sunroof is open and vehicle is moving
- When closing, be mindful of any objects or persons

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle. Refer to section 4 in the Owner's Manual for more information.



 
Cargo Cover Storage*

To store the Cargo Cover*, close the Cargo Cover and remove it from the slots by pulling the Cargo Cover ends inward **A**. Remove the luggage box cover.

On the left side, remove the small storage cover **B** to expose the Cargo Cover storage slot. Insert the Cargo Cover on the right side first. Compress the left end of the Cargo Cover to slide it into the left slot. Replace the small storage cover and the luggage box cover.



Cargo Cover Storage

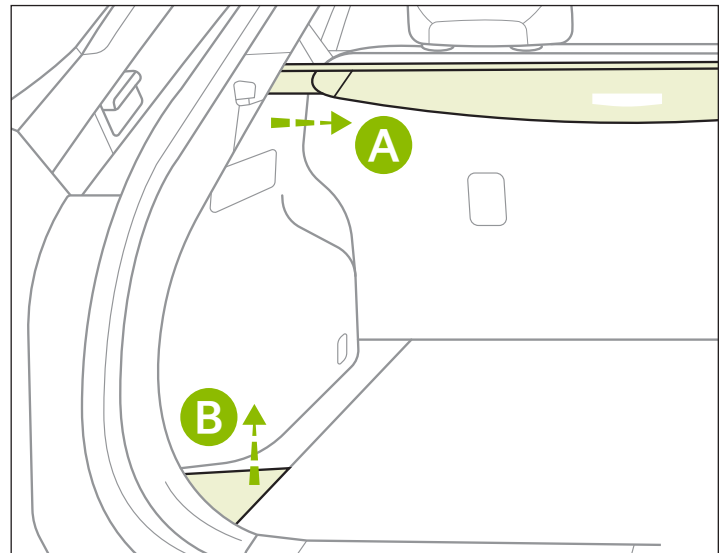

Images are for illustrative purposes only and may not reflect actual feature or operation.



Tire Mobility Kit

 
The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.



Tire Mobility Kit

- A** Sealant Bottle
- B** Compressor

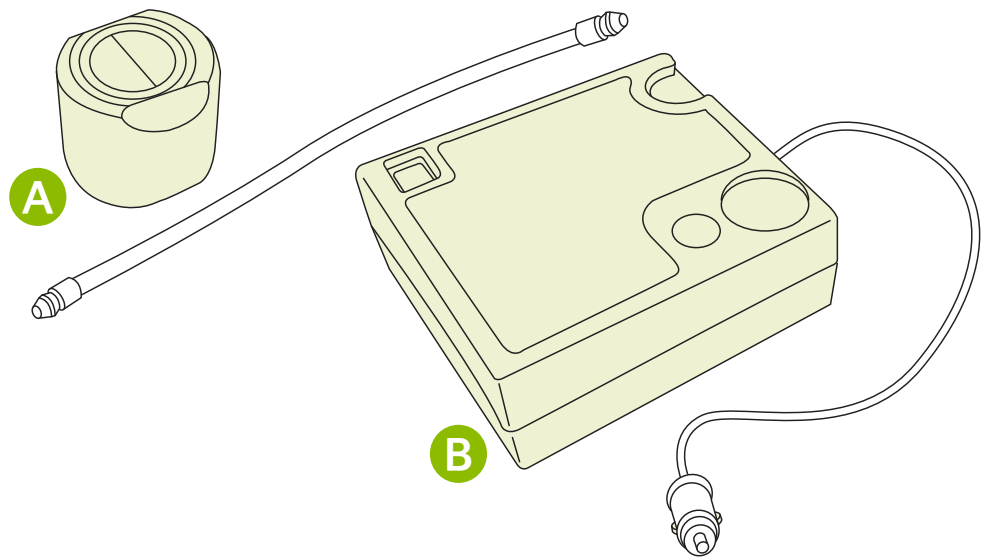

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair


REMINDERS:

- After tire is properly sealed, drive cautiously and never exceed 50 mph or 120 miles on a tire that has been properly sealed with the Tire Mobility Kit
- Accessory spare tire kit is available for purchase

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.



 
Child-Protector Rear Door Lock*

Locate these locks on the rear edge of the rear passenger doors. Move the Child-Protector Rear Door Lock, with the mechanical ignition key, to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.



Latch Anchors for the Child Restraint System

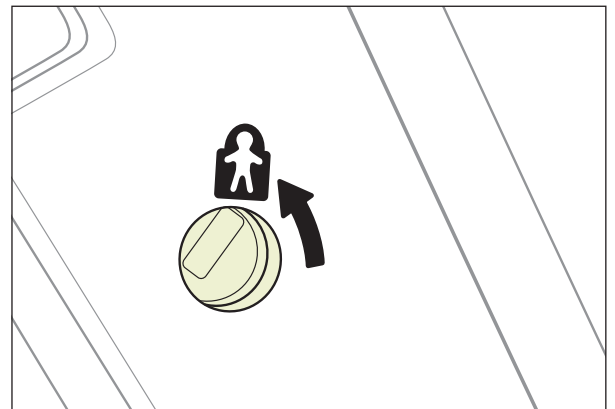

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 3 in the Owner's Manual for more information.



Occupant Detection System (ODS)^{†9} / Passenger Airbag Off Indicator^{†14}

ODS is designed to detect the presence and position of the front passenger and turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied & Infant or child restraint system (CRS) with a Child under 12 months old)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light **A** will illuminate.



(ODS Indicator located below overhead lamp)

REMINDERS:

- Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated off because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat, or move to another seat in the vehicle
- For more information on the Occupant Detection System/ Passenger Airbag Off Indicator, please refer to the Owner's Manual
- For maximum protection, always wear your seat belt

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 3 in the Owner's Manual for more information.



Seat Belts^{†14}

 
To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks.
2. Position the lap portion of the belt across your lap as low on the hips as possible **C**. Adjust the belt to a snug fit by pulling up on the shoulder portion **D**.


Seat belt retractor locks:

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a strong stop, sudden turn or certain collisions, seat belt retractors will automatically lock the belts to reduce the risk of injury.

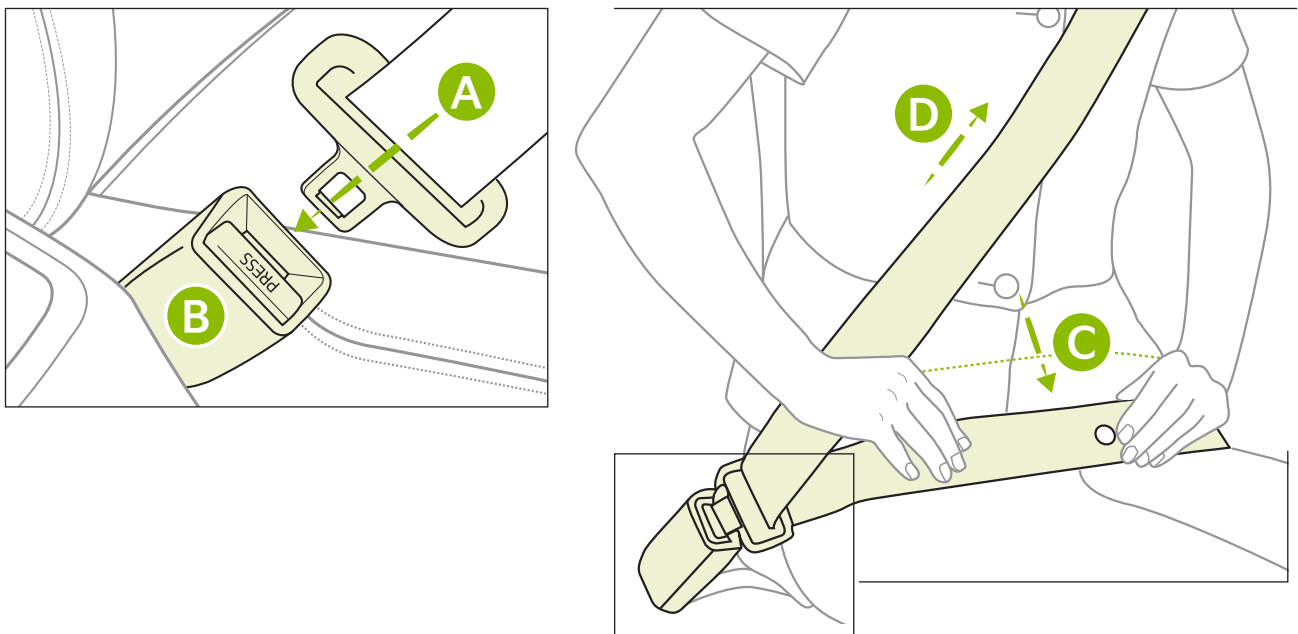

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 3 in the Owner's Manual for more information.

 EV6 NORMAL MAINTENANCE SCHEDULE	MAINTENANCE INTERVALS (UP TO 64,000 MILES)^A							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Check tire pressure and tread wear; Rotate tires	P	P	P	P	P	P	P	P
Climate control air filter	I	R	I	R	I	R	I	R
Brake fluid	I	I	I	I	I	R	I	I
12V Battery condition	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Reduction gear fluid ^C				I				I

P = Perform
R = Replace
I = Inspect^B

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule.

B. If necessary, adjust, correct, clean or replace

C. If the vehicle has been submerged in water or in a flooded area, the reduction gear fluids should be changed as a precaution.

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into your Kia Access App^{†2} or your account on <https://owners.Kia.com>



DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. Kia Connect:** Purchase/lease of certain 2026 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- 2. Kia Access app for smartphone and smartwatch** requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model.
- 3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
Android Auto: Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play store and an Android compatible smartphone running Android 5.0 Lollipop or higher. Data plan rates apply.
- 4. Driver Assist Features - Blind-Spot Collision-Avoidance Assist (BCA), Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Lane Keeping Assist (LKA), Blind-Spot View Monitor (BVM), Safe Exit Assist (SEA), Lane Following Assist (LFA), Forward Collision-Avoidance Assist (FCA), Forward Collision Warning (FCW), Intelligent Speed Limit Assist (ISLA), Highway Driving Assist (HDA), Leading Vehicle Departure Alert (LVDA), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Remote Smart Parking Assist (RSPA), Rear Occupant Alert (ROA) with Door Monitoring, Reverse Parking Collision-Avoidance Assist (PCA), Reverse/Forward Parking Distance Warning (PDW), Rear View Monitor (RVM), Augmented Reality Head-Up Display (HUD), 3D Surround View Monitor (SVM):** When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 5. Driver Attention Warning (DAW):** When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 6. Electronic Stability Control (ESC)/ Traction Control System (TCS)/ Hill-Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 7. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 8. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 9. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children of all ages should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
- 10. Power Button with Smart Key:** Always come to a complete stop before turning the power on or off. However, if you have an emergency while the vehicle is in motion and must turn the power off, you can turn the power off to the ACC position by pressing the Power button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the power by pressing the Power button with the shift lever in Neutral (N). With the power off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 11. Rear Occupant Alert with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
- 12. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. On certain audio systems, for access to Enhanced Roadside Assistance*, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 13. Seat Adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 14. Seat Belts / Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
- 15. Seat Warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 16. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2025 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 17. Smart Liftgate:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 18. Steering-Wheel-Mounted Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 19. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
- 20. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 21. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.