

Features & Functions Guide

Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**Getting Started
With Your
New Kia**

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com

©2025 Kia America, Inc. All rights reserved.

Consumer Affairs - Roadside Assistance^{†13}: 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

The video resources should not be accessed while you are operating your Kia vehicle.



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

www.youtube.com/KiaFeatureVideos

This document is interactive: from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (). For longer sections that cover more than one page, you can navigate between pages using the arrows ( ).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

The video resources should not be accessed while you are operating your Kia vehicle.

Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on page 5, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key with Remote Start	99
2	Fuel Filler Lid Release	105
3	Power Adjustable Driver's Seat*	93
4	Front Seat Headrest Adjustment	95
5	Seat Warmers* / Ventilated Seats*	91
6	Lifting Wipers (Wiper Service Mode)	60
7	Windshield Wipers & Washers	59
8	Smart Cruise Control (SCC)	31
9	Navigation-based Smart Cruise Control (NSCC)*	34
10	Highway Driving Assist (HDA) 2*	37
11	Rear Occupant Alert (ROA) with Door Monitoring	95
12	Smart Trunk with Auto Open	107
13	Normal Maintenance Schedule	113
14	Vehicle Settings - Infotainment System	18
15	Bluetooth® Wireless Technology	63
16	Kia Connect Activation	69
17	Kia Connect Assistance	70
18	Kia Connect with Navigation*	74
19	Android Auto™ / Apple CarPlay® Setup	67



**Getting Started
With Your
New Kia**



**How-To Resources
Videos & Online**



**Your New Kia
Important Care
Tips**



**Vehicle Cameras
Important Tips**



**Navigation System
Important Tips**



**Kia Connect
Infotainment
System**

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Table Of Contents

<u>WELCOME TO THE KIA FAMILY!</u>	<u>02</u>
<u>VIDEOS & NAVIGATION</u>	<u>03</u>
<u>GETTING STARTED</u>	<u>04</u>
INSTRUMENT CLUSTER	
<u>Instrument Cluster Overview</u>	<u>08</u>
<u>Indicators & Warning Lights</u>	<u>09</u>
<u>Tire Pressure Monitoring System (TPMS)</u>	<u>10</u>
<u>Instant Fuel Economy</u>	<u>12</u>
<u>Fuel Economy / Tips for Economical Driving</u>	<u>13</u>
<u>Drive Mode Integrated Control System*</u>	<u>14</u>
VEHICLE SETTINGS	
<u>Instrument Cluster LCD Modes</u>	<u>15</u>
<u>Trip Modes / Trip Computer</u>	<u>16</u>
<u>Service Interval Mode</u>	<u>17</u>
<u>Vehicle Settings - Infotainment System</u>	<u>18</u>
ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)	
<u>Forward Collision-Avoidance Assist 2 (FCA2)*</u>	<u>20</u>
<u>Lane Keeping Assist (LKA)</u>	<u>23</u>
<u>Blind-spot Collision-Avoidance Assist (BCA)*</u>	<u>25</u>
<u>Safe Exit Warning (SEW)*</u>	<u>28</u>
<u>Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)</u>	<u>29</u>
<u>Smart Cruise Control (SCC)</u>	<u>31</u>
<u>Navigation-based Smart Cruise Control (NSCC)*</u>	<u>34</u>
<u>Lane Following Assist (LFA)</u>	<u>35</u>
<u>Highway Driving Assist (HDA) 2*</u>	<u>37</u>
<u>Rear View Monitor (RVM)</u>	<u>39</u>
<u>Blind-spot View Monitor (BVM)*</u>	<u>41</u>
<u>Surround View Monitor (SVM)*</u>	<u>42</u>
<u>Rear Cross-traffic Collision Avoidance Assist (RCCA)*</u>	<u>44</u>
<u>Reverse Parking Collision-Avoidance Assist (PCA)*</u>	<u>46</u>
<u>Forward/Reverse/Side Parking Distance Warning (PDW)*</u>	<u>48</u>

[Continued on next page](#)

Table Of Contents

Continued from previous page

DRIVER'S PANEL

Instrument Cluster Illumination Control	50
Electronic Stability Control (ESC)	50
Hill-start Assist Control (HAC)	51
Engine Start/Stop Button	52
Power Windows, Window Lock & Central Door Lock	53
Automatic Door Lock/Unlock	53
Power Heated Outside Mirrors*	54
Reverse Parking Aid Function*	55

STEERING WHEEL CONTROLS

Headlights & High Beams	56
High Beam Assist (HBA)	57
Turn Signals & Fog Lights*	58
Windshield Wipers & Washers	59
Lifting Wipers (Wiper Service Mode)	60
Tilt/Telescoping Steering Wheel	61

INFOTAINMENT SYSTEM

Steering Wheel Audio Controls	62
Bluetooth® Wireless Technology	63
Android Auto™ / Apple CarPlay® Setup	67
Kia Connect Activation	69
Kia Connect Assistance	70
Kia Generative AI Voice Assistant*	71
Kia Access App Download	72
Kia Access App Features Guide	73
Kia Connect with Navigation*	74

CENTER PANEL

USB-C Charger Ports	77
Digital Clock (Infotainment System)	77
Multimedia USB-C Port & Power Outlets	78
Wireless Smartphone Charging System*	79

Continued on next page

Table Of Contents

Continued from previous page

CENTER PANEL CONTINUED

Automatic Climate Control*	81
Manual Climate Control*	84
Electronic Parking Brake (EPB)	86
Auto Hold	87
Heated Steering Wheel*	88
Automatic Gear Shift	89
Paddle Shifters*	90
Seat Warmers* / Ventilated Seats*	91

SEATING

Driver Position Memory System*	92
Power Adjustable Driver's Seat*	93
6-Way Manual Adjustable Driver's Seat*	94
Rear Occupant Alert (ROA) with Door Monitoring	95
Front Seat Headrest Adjustment	95

OTHER KEY FEATURES

Map/Room* Lamps	96
Panoramic Sunroof with Power Sunshade*	97
Smart Key with Remote Start	99
Digital Key 2*	101
Fuel Cap / Malfunction Indicator (Check Engine Light)	105
Fuel Filler Lid Release*	105
Trunk Release Lever	106
Smart Trunk with Auto Open*	107
Sun Visor	108
Hood Release Lever and Latch	109
Child Protector Rear Door Lock	110

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	111
Seat Belts	112

MAINTENANCE CHART	113
---	---------------------

LEGAL DISCLAIMERS	114
---	---------------------



INSTRUMENT CLUSTER


Instrument Cluster Overview

- A** Tachometer
- B** Speedometer
- C** Engine Temperature Gauge
- D** Indicators & Warning Lights
- E** Odometer
- F** Shift Indicator
- G** Fuel Gauge



Instrument Cluster
Overview
Video

 Arrow direction indicates the side of the vehicle the fuel door is located on

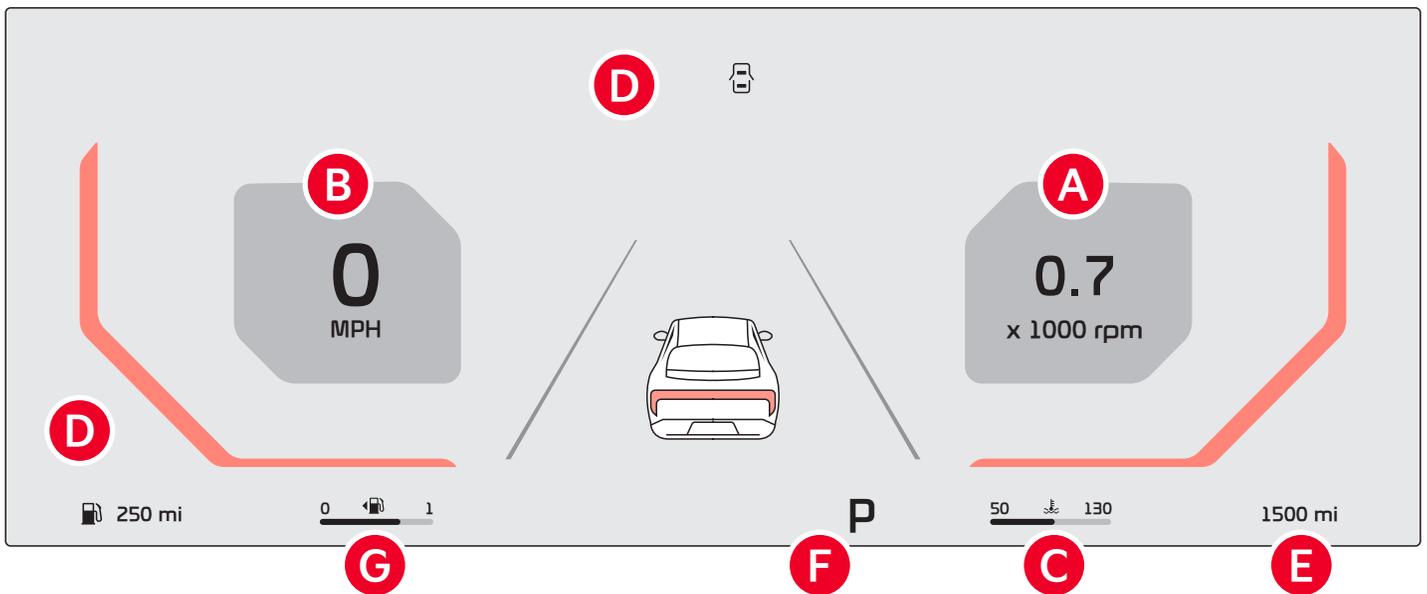

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.



INSTRUMENT CLUSTER

Indicators & Warning Lights



Immobilizer Indicator Light*



Forward Safety Warning Light*



SPORT Drive Mode Indicator Light*



Lane Safety Indicator*



High Beam Assist Indicator*



Low Fuel Level Warning Light



High Beam Indicator



Electronic Brake force Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)



Low Beam Indicator*



AUTO HOLD Indicator*



Light ON Indicator



Parking Brake & Brake Fluid Warning Light



Front Fog Light Indicator*



Engine Oil Pressure Warning Light



Master Warning Light*



Electronic Power Steering (EPS) Warning Light



Trunk Open Warning Light*



Charging System Warning Light



Intelligent Speed Limit Assist (ISLA) Indicator*



Airbag Warning Light



Parking Brake & Brake Fluid Warning Light



Seat Belt Warning Light



Inattentive Driver Warning Light*



Malfunction Indicator Lamp (MIL)



Highway Lane Change Assist Indicator*



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Lane Following Assist Indicator*



Anti-lock Braking System (ABS) Warning



Door Ajar Warning Light*



Electronic Stability Control (ESC) Indicator



Washer Fluid Warning Light*



Electronic Stability Control (ESC) OFF Indicator



Exhaust System (GPF) Warning Light*



Electronic Parking Brake (EPB) Warning Light*



Icy Road Warning Light*



LED Headlamp Warning Light*



Emergency Steering Warning Light*



Forward Attention Warning Light*

Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD. Refer to section 5 in the Owner's Manual for more information.



Tire Pressure Monitoring System (TPMS)^{†21}



The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.


The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS sensor or tire pressure drops due to the outside temperature becoming significantly lower.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate tire(s), using an accurate digital tire pressure gauge, to specifications to turn off the Low Tire Pressure Position Indicator ; see the front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.



Tire Pressure Monitoring System Video

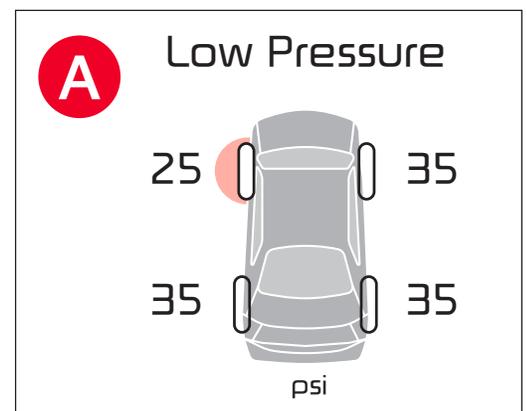

[Continued on next page](#)

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to Section 10 in the Owner's Manual for more information.



Tire Pressure Monitoring System (TPMS)^{†21}

[Continued from previous page](#)

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting stationary for at least 3 hours or driven less than 1 mile during that 3 hour period, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

REMINDERS:


- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) can interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

Always check the Owner’s Manual for complete operating information and safety warnings.



Instant Fuel Economy

Press the Mode button **A** to cycle to the Trip Computer mode , then toggle up or down with the OK button **B** to cycle to the Fuel Economy screen. The bar at the bottom of the screen displays the calculated Fuel Consumption during the past few seconds when the vehicle speed is more than approximately 6 mph.

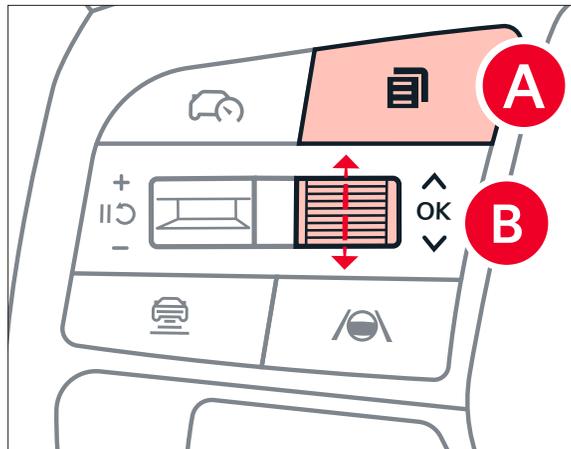

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

REMINDERS:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph after being refueled with more than 1.6 gallons, the average fuel economy will be cleared to zero (----)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.



Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:



Tips for Economical Driving Video

- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can click the link above to view a video or refer to section 8 in the Owner's Manual.



Drive Mode Integrated Control System*

The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** press the DRIVE MODE button **B**.




**Drive Mode
Integrated Control
System**

When SPORT drive mode is selected, the indicator will illuminate in the Instrument Cluster or the Infotainment System* screen. The system's default mode is NORMAL mode and when selected, the indicator will not be illuminated.



For illustrative purposes only. Actual vehicle operation or display may vary.

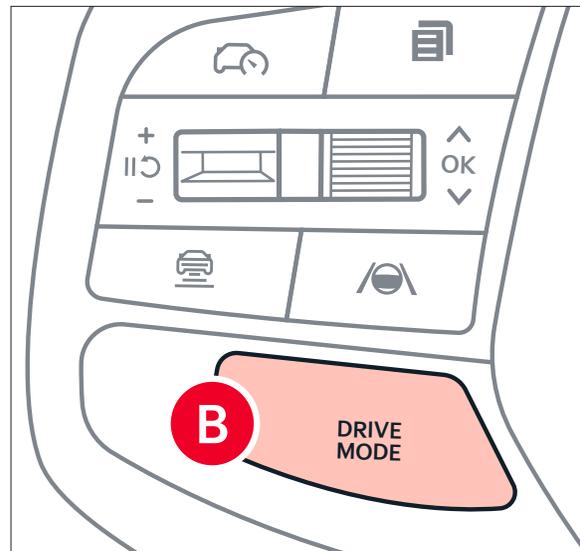

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

REMINDERS:

- When SPORT mode is selected, fuel economy may decrease
- The system defaults to NORMAL mode when the ignition is turned on
- Steering effort may be slightly increased in Sport mode
- When vehicle is shut down while in SPORT Mode, the system will default to NORMAL mode when the engine is turned off. SPORT mode would need to be selected again once the vehicle is restarted


Refer to section 8 in the Owner's Manual for more information.

For illustrative purposes only. Actual displays, buttons and/or features may vary.



Instrument Cluster LCD Modes

Press the Mode button **A** to cycle through different Instrument Cluster LCD Modes. Press the arrow button up/down **B** to cycle through the menus. Press OK **B** to enter.

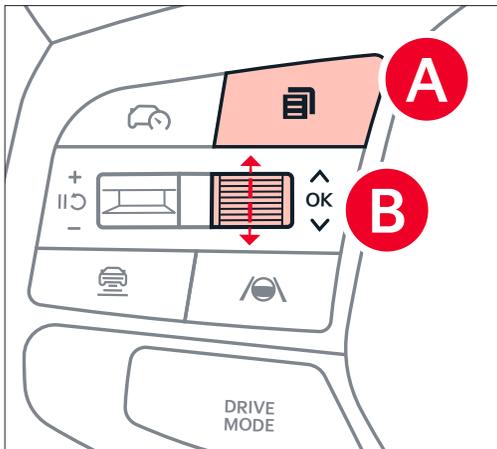

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)



Instrument Cluster Overview Video



Steering Wheel Controls Video

Utility Information: Display information related to tire pressure, current trip info, accumulated trip info and master warning mode.

Navigation View*: Display information related to the navigation system.

Driving Assist Mode: Displays information related to Driver Assistance Systems.

Service Interval: Displays information for service interval.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Images are for illustrative purposes only. Refer to section 5 in the Owner's Manual for more information.



Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the Engine Start/Stop button is in the ON position.




Steering Wheel Controls Video

To cycle through the Trip Modes, press the Mode button **A**.

To select and enter Trip Computer mode, press the OK button **B** up or down and then press the OK button **B** to enter.

To cycle through different screens (Fuel Economy, Trip Info, Accumulated Info, etc.) press the OK button **B** up and then press to enter.

When displaying the Tripmeter screens, press and hold the OK button **B** to reset the Tripmeter to zero.

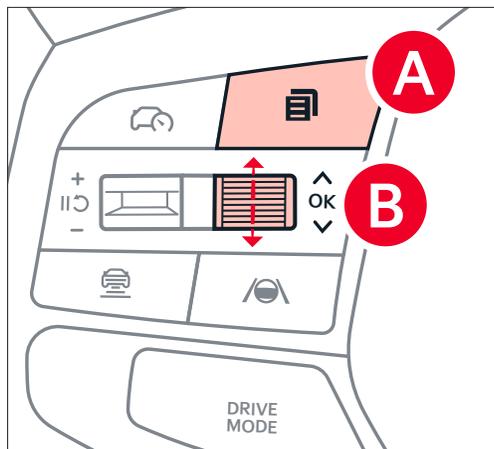

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.



Service Interval Mode




To enter Service Interval mode, press the Mode button **A**, scroll using the OK button **B** to Service Interval and press the OK button **B** to enter. The system will display the number of miles remaining until the next service is due, as well as type of service due.

When service is required, the following will be displayed: **Service Required**.


To reset the Service Interval mode system, press and hold the OK button **B** for more than 1 second.

To turn Service Interval OFF, go to User Settings again and turn off.

Service Interval Setting: To set the Service Interval, go to the Vehicle Settings on the Infotainment System. Press SETUP, VEHICLE, then SERVICE INTERVAL and enable ENABLE SERVICE INTERVAL.

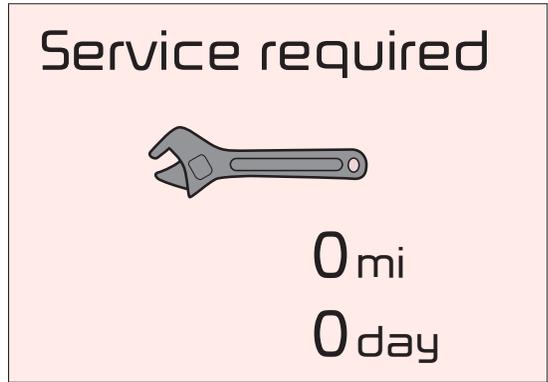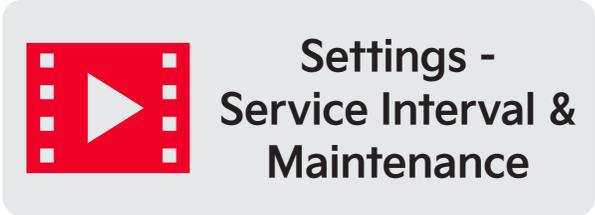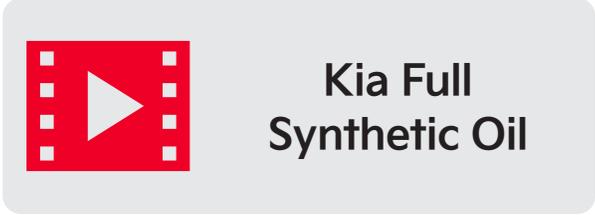

(Type B cluster)

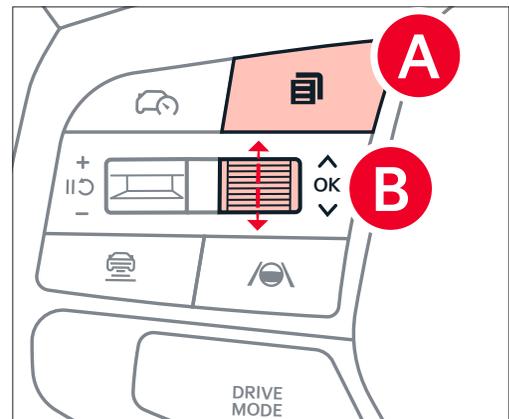

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the service interval reminder.

Images are for illustration purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.



Vehicle Settings - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the **SETUP** key on the Infotainment System. Then press VEHICLE, which will take you to **Vehicle Settings**. Use the touchscreen to navigate through the menus.



Vehicle Settings
Video

Driver Assistance: Driving Convenience, Driver Attention Warning, Driving Safety, Parking Safety, Speed Limit*

Drive Mode*: My Drive Mode, Drive Mode Change Alert

Climate: Recirculate Air*, Automatic Ventilation*, Defog/Defrost Options*, Climate Features*


Seat*: Link to Climate Settings, Seating Easy Access, Seat Position Change Alert

Lights: Ambient Light*, One Touch Turn Signal, Welcome Light*, Headlight Delay, High Beam Assist, Intelligent High Beams*, Interior Lights Always On

Door: Automatically Lock/Unlock, 2 Press Unlock, Smart Trunk, Open Windows Remotely*

Digital Keys*: Smartphone Key, NFC Card Key, Digital Key Information

Convenience: Rear Occupant Alert, Service Interval, Oil Change Reminder, Wireless Charging System for Mobile Phone Devices*, Mobile Phone Wireless Charging Indicator*

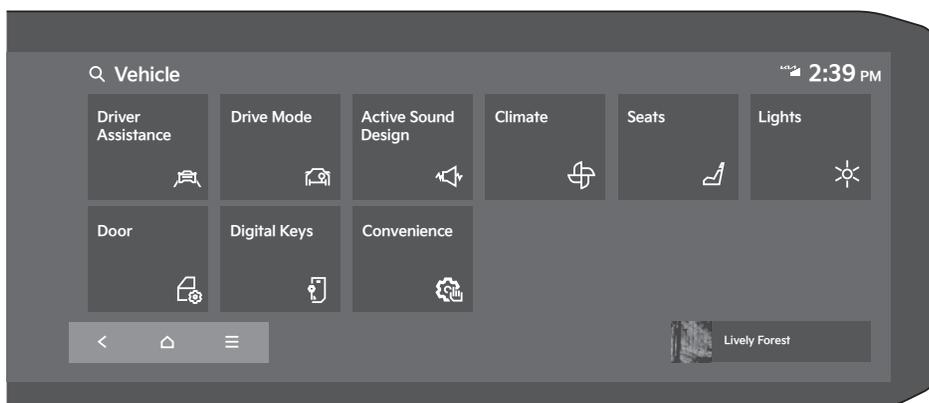

[Continued on next page](#)

Refer to the Car Infotainment System Quick Reference Guide for more information.



Vehicle Settings - Infotainment System

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected.

Refer to the Car Infotainment System Quick Reference Guide for more information.



Forward Collision-Avoidance Assist 2 (FCA2)*†4

Forward Collision-Avoidance Assist is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and, in certain scenarios, may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound.

FCA may also assist with braking the vehicle to potentially reduce the effects of a collision. When the system detects a potential collision it initially emits an audible warning and visual alert on the Instrument Cluster **B**. If FCA detects that the collision risk has increased, it may automatically apply the brakes.

Junction Turning function **C** may help avoid a collision if an oncoming vehicle is detected in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.

Junction Crossing function* **D** may help avoid a collision if oncoming vehicles are detected on the left or right side when crossing an intersection by applying emergency braking.





Direct Oncoming Response function may reduce the vehicle speed and temporarily apply braking when FCA detects a vehicle is approaching directly in front.



Forward Collision-Avoidance Assist - Advanced Features



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

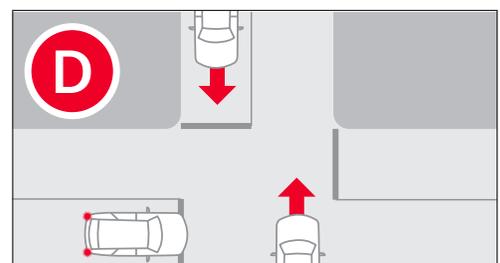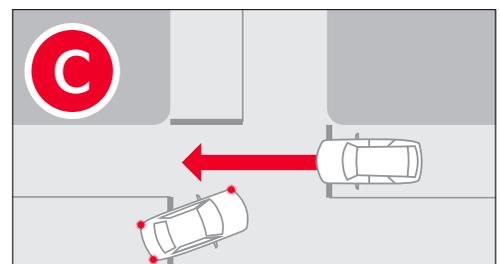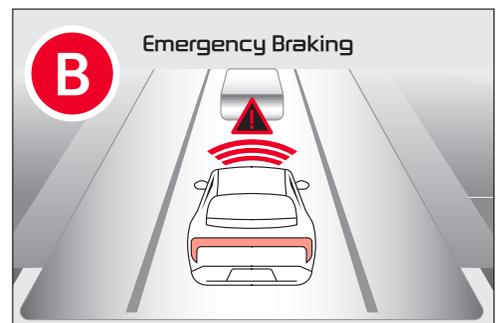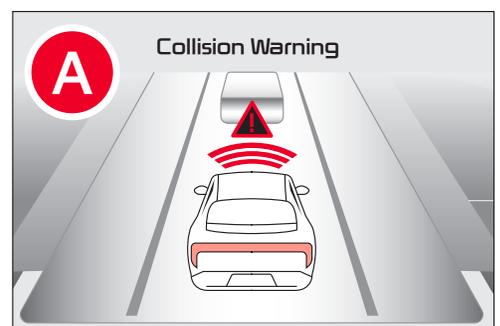

(Junction Crossing)

[Continued on next page](#)

Actual User Settings steps may vary by model. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 9 in the Owner's Manual for more information.



Forward Collision-Avoidance Assist 2 (FCA2)*†4

[Continued from previous page](#)

Lane-Change Oncoming function* **A**

may help avoid a possible collision if an oncoming vehicle is detected when changing lanes by assisting the driver's steering.

Lane-Change Side function* **B**

help avoid a possible collision if a vehicle is detected ahead in the next lane when changing lanes by assisting the driver's steering.

Evasive Steering Assist function* **C**

may help avoid a possible collision if a vehicle, pedestrian or cyclist is detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering. If FCA detects a risk of collision with a pedestrian or cyclist, it may warn the driver and potentially assist the driver's steering.





Forward Collision-Avoidance Assist - Advanced Features



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

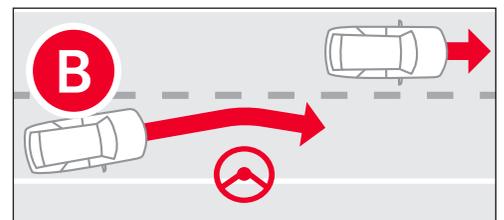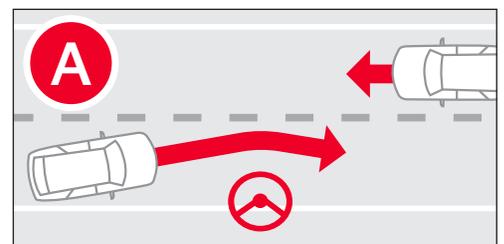

[Continued on next page](#)

When engaged, FCA is not a substitute for safe driving and may not detect all objects in front of the vehicle or alert the driver when the vehicle is approaching another vehicle. Always drive safely and use caution. Images are for illustrative purposes only.



Forward Collision-Avoidance Assist 2 (FCA2)^{*†4}

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- Once the risk factors are not detected, these functions will deactivate
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected


When engaged, FCA is not a substitute for safe driving and may not detect all objects in front of the vehicle or alert the driver when the vehicle is approaching another vehicle. Always drive safely and use caution. Images are for illustrative purposes only.



Lane Keeping Assist (LKA)^{†4}

Lane Keeping Assist is designed to detect lane markings and may warn the driver if it detects the vehicle leaving the lane without using the turn signal and in certain circumstances may assist with steering to prevent the vehicle departing from its travel lane. When turned on, the Instrument Cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when the LKA does not detect the lane markers. When LKA detects the lane markers and can assist steering, the Lane Safety icon will illuminate green.

If LKA detects that you are moving outside of your lane without using the turn signals, LKA is designed to provide steering inputs, to help prevent the vehicle from moving outside its lane. If the vehicle continues to move outside of the lane, LKA is designed to give a warning sound and, if activated, may assist in keeping the vehicle within the lane markers.

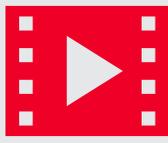


Lane Keeping Assist (LKA)




Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit





Driver Assistance - Warning Methods & Warning Volume

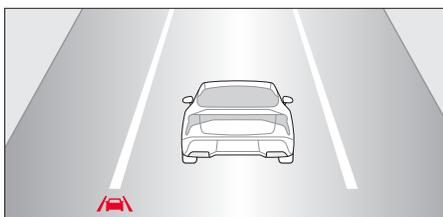

When LKA detects the lane markers, both lanes are displayed white

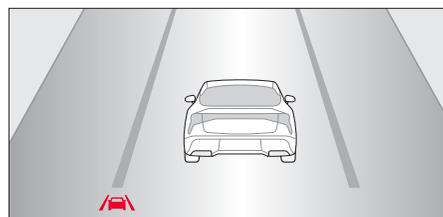

When LKA does not detect the lane markers, the lanes are displayed gray

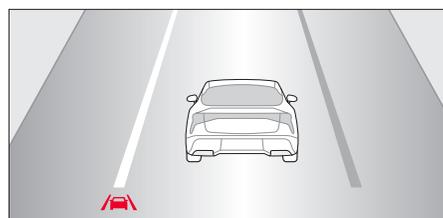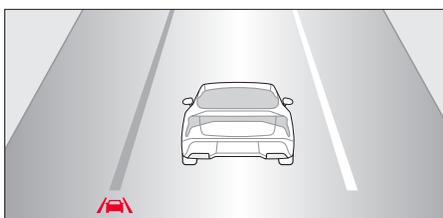

When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)

[Continued on next page](#)

Images are for illustrative purposes only. Refer to section 9 in the Owner's Manual for more information.



Lane Keeping Assist (LKA)^{*†4}

Continued from previous page

LKA Settings:

- Press and hold the Lane Driving Assist button **A** to turn LKA on or off, when it is first enabled in Vehicle Settings in the Infotainment System
- Only adjust Infotainment System settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY and then LANE SAFETY



(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 - 120mph
- LKA detects the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems
- LKA detects lanes most effectively on roads with clear lane markings and good visibility

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state
- To assist the vehicle in remaining within the lane markers, enable LFA ([page 33](#))
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution. Images are for illustrative purposes only.






Blind-spot Collision-Avoidance Assist (BCA)*†4

BCA is designed to detect approaching vehicles in the driver's blind spot areas and warn the driver of a possible collision with a warning light and a warning sound. If a collision risk is detected when exiting a parallel space, BCA may assist with braking to help avoid a collision. Initially, BCA provides a Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If there is a collision risk when exiting a parallel parking space, BCA may assist with braking the vehicle to help avoid a collision.

Vehicle detection: When another vehicle is detected within the Collision Warning warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and BCA will sound a warning.

Collision-Avoidance Assist*: When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it may help avoid a collision by applying the brake.

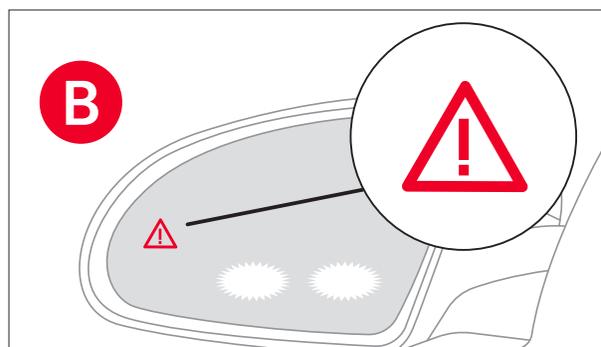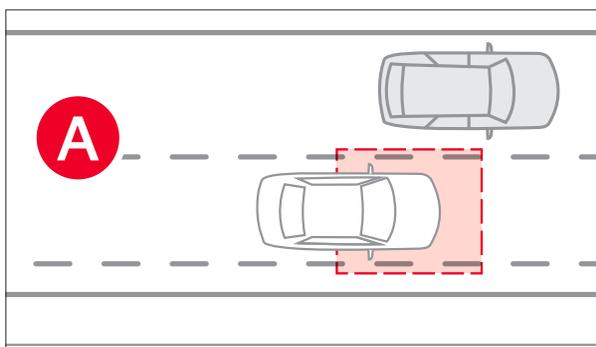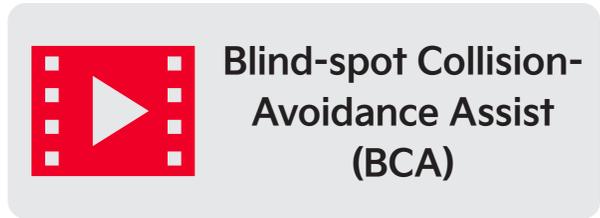

REMINDER: Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected.

[Continued on next page](#)

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Refer to section 9 in the Owner's Manual for more information. Images are for illustrative purposes only.

Blind-spot Collision-Avoidance Assist (BCA)*†4

[Continued from previous page](#)

BCA Settings:

- BCA can be turned on/off in Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button in the on position



Blind-spot Collision-Avoidance Assist (BCA)Video



Driver Assistance - Warning Methods & Warning Volume

- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY and then BLIND-SPOT SAFETY

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems
- BCA is on when vehicles are detected on the rear sides of the vehicle, and:
 - A Vehicle Detection Warning can be issued when the vehicle speed is above approximately 12 mph
 - A Collision Warning can be issued when the vehicle speed is above approximately 25 mph
 - A Collision-Avoidance Assist can be issued when the vehicle speed is below approximately 2 mph

[Continued on next page](#)



Blind-spot Collision-Avoidance Assist (BCA)^{*†4}

[Continued from previous page](#)

REMINDERS:

- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- If the turn signal is activated for a left turn at an intersection, BCA may issue a warning, regardless of whether the driver intends to complete the turn
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected



Safe Exit Warning (SEW)*†4

Safe Exit Warning may help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, after your vehicle has stopped.



Safe Exit Warning (SEW) Video




Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

SEW Settings:

- SEW can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button in the ON position
- **To access Vehicle Settings in the Infotainment System**, press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. In DRIVER ASSISTANCE, select DRIVING SAFETY, then Safe Exit

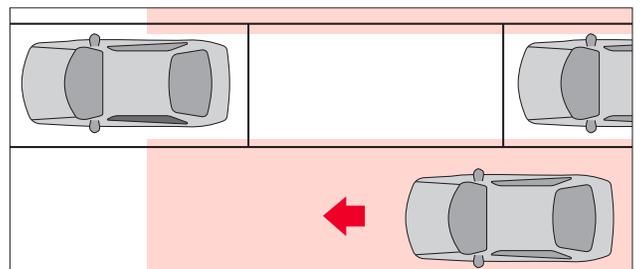

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected.

When engaged, SEW is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)^{†4,5}

Driver Attention Warning is designed to monitor the driver’s driving pattern. If DAW detects that the driver’s attention level becomes low, DAW is designed to display a message on the Instrument Cluster, “Consider taking a break,” **A** and a warning sound to recommend the driver take a break.





Driver Attention Warning (DAW)



Leading Vehicle Departure Alert (LVDA)

If the vehicle is stopped, and Leading Vehicle Departure Alert (LVDA) is enabled, when a detected vehicle in front starts to depart, LVDA is designed to inform the driver by sounding an alert and displaying a message **B** on the Instrument Cluster.

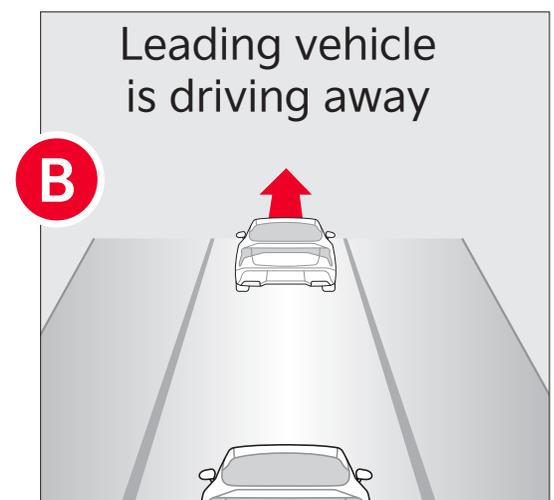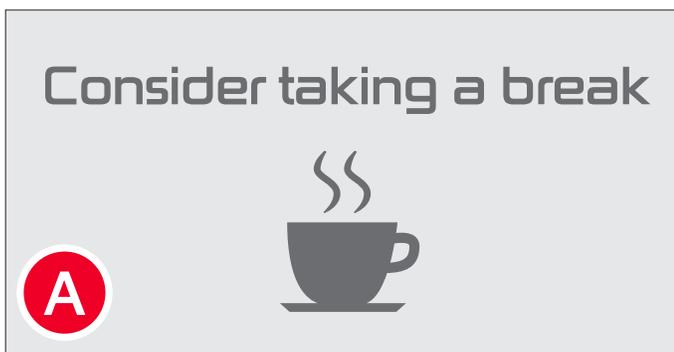

REMINDERS:

- When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

[Continued on next page](#)

When engaged, DAW and LVDA are not substitutes for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution. Refer to section 9 in the Owner’s Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)^{†4,5}

[Continued from previous page](#)

DAW/LVDA Settings:

- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position

- **To enable/disable LVDA in the Vehicle Settings in the Infotainment System -**

Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVER ATTENTION WARNING and select LEADING VEHICLE DEPARTURE ALERT



Driver Assistance -
Driver Attention
Warning & Leading
Vehicle Departure



Driver Assistance -
Warning Methods
& Warning Volume

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected.




Smart Cruise Control (SCC)^{†4}

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal.

With SCC on and activated, and the vehicle distance set, when SCC detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than three seconds, press the accelerator pedal or press the **+ || ↻ -** button on the Steering Wheel to start moving the vehicle.


Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

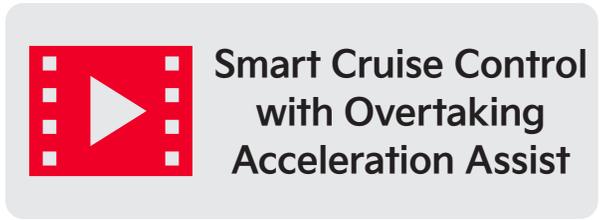

SCC Settings:

To adjust SCC settings: Press SETUP, VEHICLE, DRIVER ASSISTANCE, DRIVING CONVENIENCE, then SMART CRUISE CONTROL. Press BASED ON DRIVING STYLE. You can also set the amount of distance from the vehicle in front.

To turn SCC on: Press the Driving Assist button*  **A** on the Steering Wheel to activate and the speed will be set to the current vehicle speed. SCC may decrease the speed to maintain the distance with the vehicle in front. To adjust set speed, press the **+ || ↻ -** switch **B** up/down to increase/decrease the set speed.

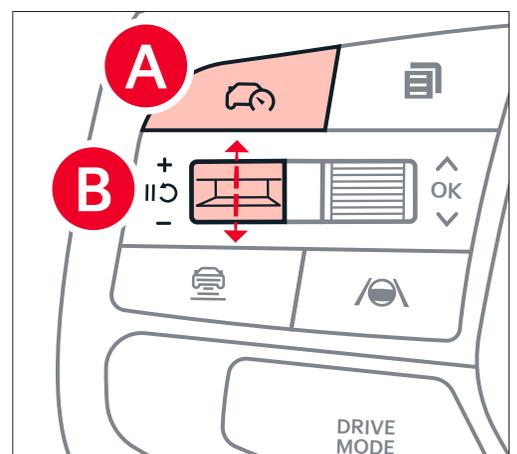

[Continued on next page](#)



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)


To set the vehicle distance: Press the Vehicle Distance button **A** on the steering wheel. The image on the LCD screen will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **B**.




Smart Cruise Control with Overtaking Acceleration Assist Video

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume **+||⏮-** button* **C**. The cruise indicator on the instrument cluster will change.

To turn SCC off: Press the Driving Assist  button **D**. The cruise indicator on the instrument cluster will turn OFF.

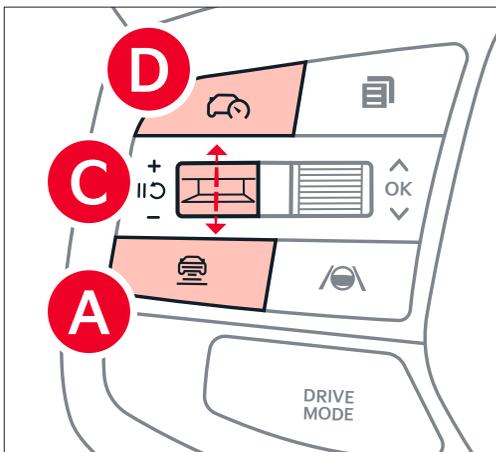

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

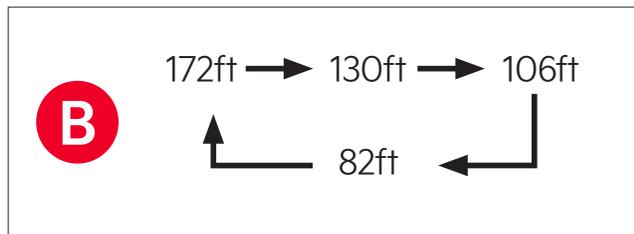

The distance settings are approximations when the vehicle is at 56 mph, and may vary depending on the vehicle speed at the time. See Owner's Manual for more information.

QUICK TIPS

- Pressing the brake pedal cancels the SCC operation
- For SCC to operate:
 - When no vehicle is in front, you must be traveling at a minimum speed of 5 mph
 - When following a vehicle, there is no minimum speed requirement
 - If your vehicle speed is between 0-20 mph when press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph

[Continued on next page](#)



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

REMINDERS:

- SCC will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine started
- When following a vehicle, SCC is designed to automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- It is the responsibility of the driver to always check the speed and distance to the vehicle ahead
- SCC may decelerate if it detects an intervening vehicle in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected.


When engaged, SCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Refer to section 9 in the Owner's Manual for more information.

Navigation-based Smart Cruise Control (NSCC)*†4,9

While Smart Cruise Control is operating, NSCC may automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system. When NSCC is on and operating, and the vehicle is driving on limited/controlled access highways, the NAV icon **A** will illuminate white on the Instrument Cluster LCD.

Highway Curve Zone Auto Slowdown is set, and NSCC is activated when SCC is turned on while driving on the highway. When NSCC detects a curve ahead, activates, and reduces the vehicle speed, the NAV icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

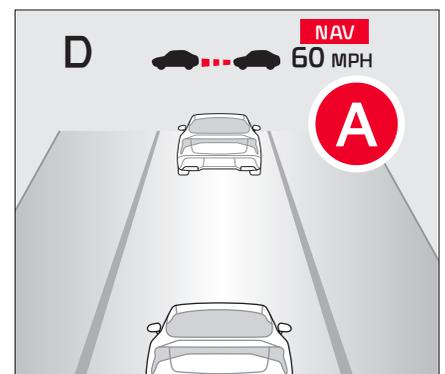

NSCC Settings:

- To access Vehicle Settings in the Infotainment System, press the SETUP key or the on screen SETUP button. Press VEHICLE to enter Vehicle Settings. In DRIVER ASSISTANCE, select DRIVING CONVENIENCE, then select AUTO HIGHWAY SPEED CHANGE

REMINDERS:

- NSCC requires an active navigation subscription
- NSCC is only available on certain controlled access roads and highways
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

When engaged, NSCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. Images are for illustrative purposes only.

Refer to section 9 in the Owner's Manual for more information.



Lane Following Assist (LFA)^{†4}

Lane Following Assist is designed to help the vehicle stay centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering, in certain scenarios. When turned on, the instrument cluster indicator will initially illuminate white  **B**. It will remain gray when the system does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon  will illuminate green **B**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. If hands on the Steering Wheel is not detected continually, LFA will be turned off with additional emergency warning. To turn LFA on or off, press the Lane Driving Assist button  **C** on the steering wheel.

LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 110 mph




Lane Following Assist (LFA) Video



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

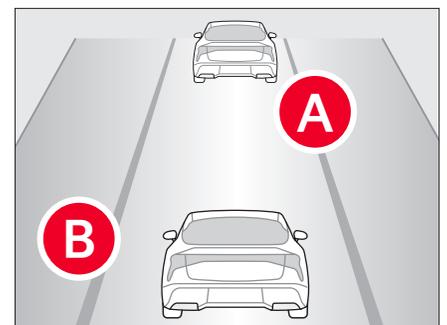

When engaged, LFA is a supplemental system. Do not solely rely on LFA and always pay attention to the road and its conditions. See section 9 in the Owner's Manual for more detailed information, limitations and conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.

Lane Following Assist (LFA)^{†4}

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- LFA is not a substitute for safe, proper driving. Always drive safely, use caution
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

When engaged, LFA is a supplemental system. Do not solely rely on LFA and always pay attention to the road and its conditions. See section 9 in the Owner's Manual for more detailed information, limitations and conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist (HDA) 2^{*†4}



Highway Driving Assist (HDA) 2 is designed to adjust the speed of the vehicle when driving on certain limited/controlled access highways/freeways.

Highway Lane Change Assist* may assist in changing lanes, if the driver has turned on the turn signal and if the system detects the lane change is possible.

When HDA is activated and the conditions are met, the Instrument Cluster indicator  will illuminate green. If the conditions are not met, HDA will be in standby mode and the indicator light  will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green .

When HDA is operating, your vehicle will stop if the vehicle ahead of you stops. Also, if the vehicle ahead of you starts moving within approximately 30 seconds after the stop, your vehicle will start to move as well.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands on the Steering Wheel is not detected, HDA will cancel.

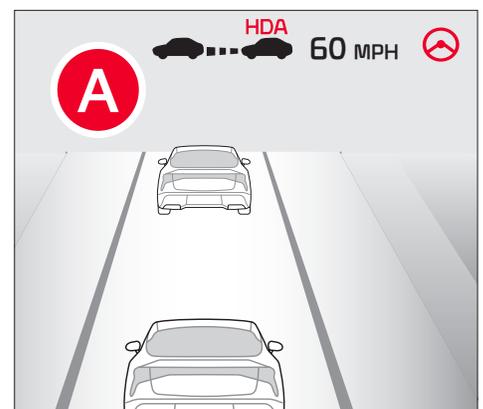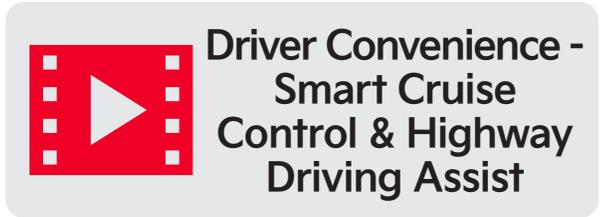

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected.

[Continued on next page](#)

Images are for illustrative purposes only.



Highway Driving Assist (HDA) 2*†4

[Continued from previous page](#)

HDA Settings:

- HDA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVING CONVENIENCE. Select HIGHWAY DRIVING ASSIST and AUTO HIGHWAY SPEED CHANGE to activate



Highway
Driving Assist
(HDA2)

HDA Operating Conditions:

- Entering the main road of highways while Lane Following assist and Smart Cruise Control are operating

REMINDERS:

- Current highway speeds and controlled or limited access roads information may vary. Future navigation updates may change this information. See owner's manual for more information
- When the ignition is cycled, HDA returns to its previous state, on or off
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 9 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear View Monitor (RVM)^{†4}

Rear View Monitor displays the area behind the vehicle to assist when parking or backing up. To turn RVM on/off, press the Parking/View button **A** on the center console or shift Gear Shift into Reverse.




Driver Assistance - Parking Safety




Driver Assistance - Warning Methods & Warning Volume

RVM Settings:

- To access Camera Settings: press the Settings icon **B** or the SETUP key/button on the Infotainment System. Select VEHICLE, DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS
- You can also press SETUP, VEHICLE, then DRIVER ASSISTANCE. Here, press the speaker icon and enable PARKING SAFETY PRIORITY to have the audio system volume lower while RVM is activated

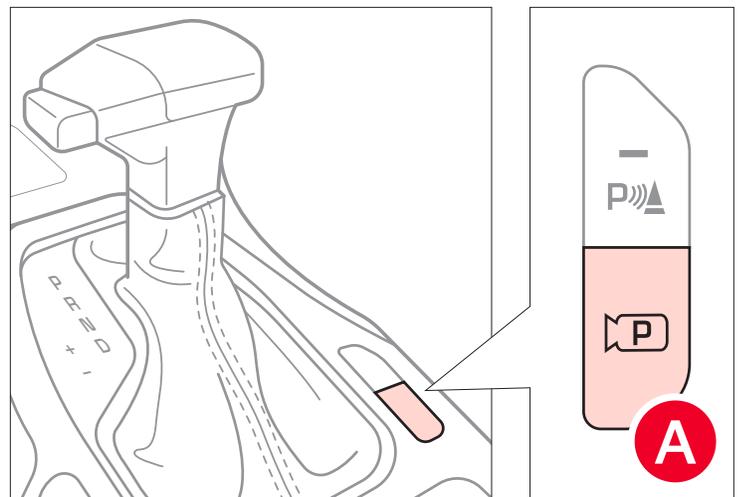

(Button located by gear shift)

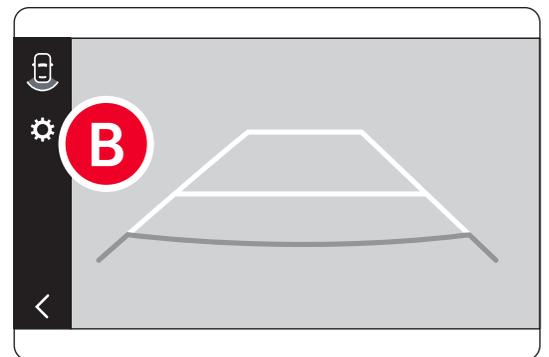

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. Refer to section 9 in the Owner's Manual for more information.



Rear View Monitor (RVM)^{†4}

[Continued from previous page](#)

The Rear View Monitor activates when the:

- POWER button is in the ON position
- Gear Shift is in the Reverse position
- Parking/View button is pressed while the gear shift is in the Park or Neutral position. In the Neutral position, vehicle speed must be lower than 6 mph (10 km/h) to operate RVM

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Instrument Cluster. All other features are disabled
- Rear View Monitor may not display every object behind the vehicle
- While in Camera Settings, REAR VIEW PARKING GUIDE LINES can also be deactivated
- The screen will return to its previous state after exceeding 6 mph
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens
- The horizontal lines of the Rear View Parking Guidance indicate distances of approximately 20, 40 and 91 inches from the vehicle
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Blind-spot View Monitor (BVM)*†4

Blind-spot View Monitor (BVM) displays the rear blind spot area of the vehicle in the cluster when the turn signal is turned on to help safely change lanes.

When operating the turn signal **A**, BVM displays video of the blind-spot view for the direction indicated **B**.

BVM will not operate when the Power button is OFF, a turn signal is de-activated or another warning screen comes up on the Instrument Cluster.





Blind-spot View Monitor (BVM) Video



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

BVM Settings:

- Enable BVM in the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button in the on position
- **To access Vehicle Settings in the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY and then enable BLIND-SPOT SAFTEY

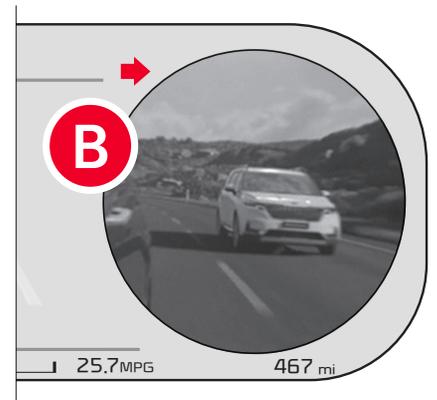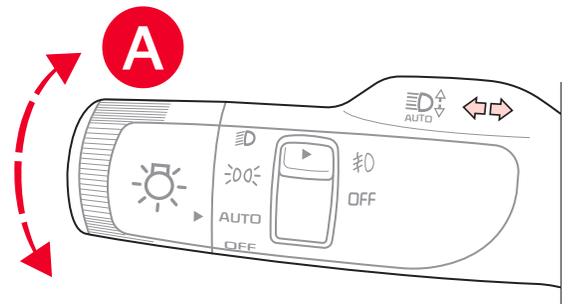

(Display showing left side of vehicle)

REMINDERS:

- BVM will operate when the Engine Start/Stop button is on and the turn signal is activated
- BVM will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected


See section 9 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Surround View Monitor (SVM)*†4

SVM is a parking support system that is designed to show the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the Infotainment System screen.

- Move the gearshift to **R** (Reverse) or press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the SVM screen
- **SVM Auto On***: With Driver Assistance → Parking Safety → Surround View Monitor Auto On selected from the Vehicle Settings menu, the front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in **D** (Drive).
- To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating, or pressing Setup, on the Infotainment System, select VEHICLE, DRIVER ASSISTANCE, PARKING SAFETY and CAMERA SETTINGS

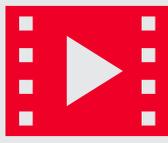


Surround View Monitor (SVM)




Driver Assistance - Parking Safety



Driver Assistance - Warning Methods & Warning Volume

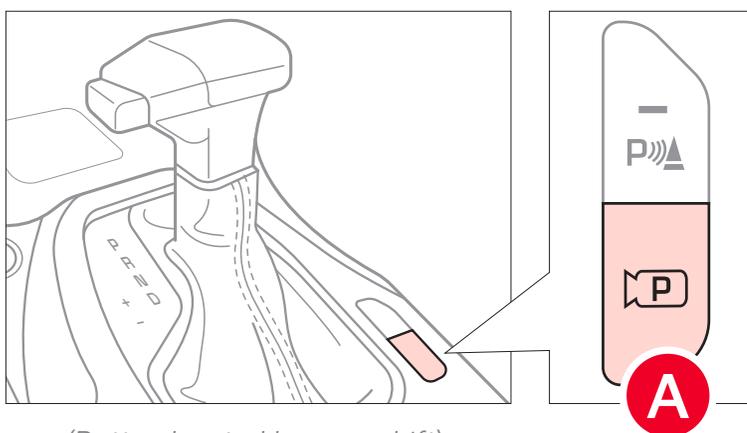

(Button located by gear shift)

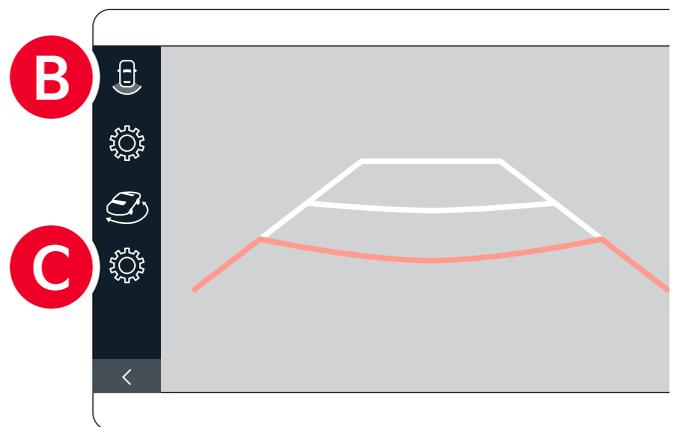

[Continued on next page](#)

When engaged, SVM is only a supplemental system. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear. See section 9 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Surround View Monitor (SVM)^{*†4}

[Continued from previous page](#)

QUICK TIPS

- The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.
- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems



Surround
View Monitor
(SVM)

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- When Parking Safety Priority setting is enabled in the Warning Methods, and when the SVM is active, the volume will be lowered on all audio modes
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected





Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the left and right side while your vehicle is reversing and warn the driver that a collision is imminent with a warning message and sound. RCCA may automatically apply the brakes to reduce your speed, potentially helping to avoid a collision.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirrors will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System. If RCCA detects that the collision risk has increased, Emergency Braking may activate to help prevent a collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

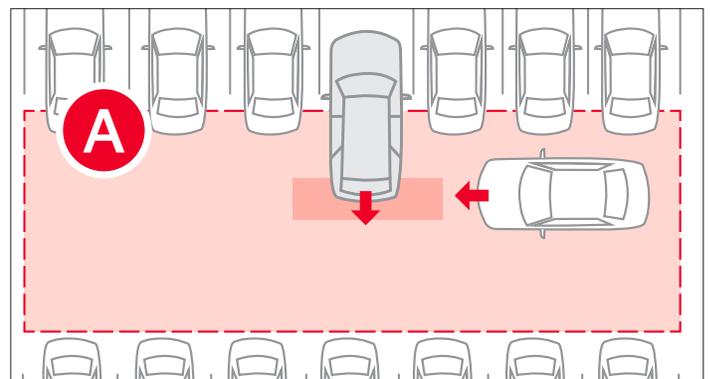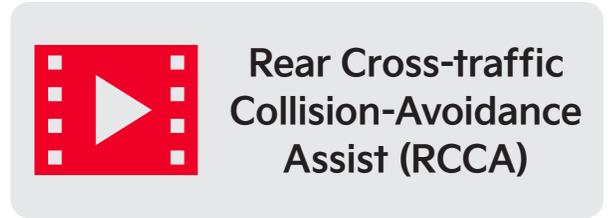

[Continued on next page](#)

When engaged, RCCA is a supplemental system and is not a substitute for safe driving. RCCA may not detect all objects behind vehicle. Always drive safely and use caution. Do not solely rely on this system and always pay attention to the road and its conditions. Refer to section 9 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

[Continued from previous page](#)

RCCA Settings:

- RCCA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select REAR CROSS-TRAFFIC SAFETY



Rear Cross-traffic Collision-Avoidance Assist (RCCA)



Driver Assistance - Warning Methods & Warning Volume

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, RCCA is designed to show a warning
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 9 in the Owner's Manual for more information.



Reverse Parking Collision-Avoidance

Assist (PCA)*†4

Reverse PCA is designed to detect certain objects/pedestrians behind the vehicle and issues an audible warning and applies emergency braking to help reduce the possibility of a collision when the vehicle is in reverse.

PCA Settings:

- PCA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and ENABLE REAR SAFETY



Reverse Parking Collision-Avoidance Assist (PCA) Video



Driver Assistance - Parking Safety



Driver Assistance - Warning Methods & Warning Volume

[Continued on next page](#)

Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 9 in the Owner's Manual for more information.

Reverse Parking Collision-Avoidance Assist (PCA)*†4

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- PCA is operational when REAR SAFETY is selected on the PARKING SAFETY menu in the Vehicle Settings
- PCA will only operate when:
 - The vehicle's speed is below 6 mph
 - The liftgate/trunk and doors are closed
 - The gear shift is in **R** (Reverse)
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 9 in the Owner's Manual for more information.



Forward/Reverse/Side Parking Distance Warning (PDW)*†4

While stopped or driving at low speed, Forward/Reverse/Side Parking Distance Warning uses ultrasonic sensors to detect and warn you if a person, animal, or object is within a certain distance.

Reverse PDW is on and active when the ignition is turned on and the gear shift is moved into (R) reverse. To turn on

Forward/Side* PDW, press the Parking Safety button **A**.

To activate PDW Auto On, press the SETUP key or the onscreen SETUP button.

Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select PARKING DISTANCE WARNING AUTO ON.




Forward/Reverse/Side Parking Distance Warning* (PDW)



Driver Assistance - Parking Safety



Driver Assistance - Warning Methods & Warning Volume

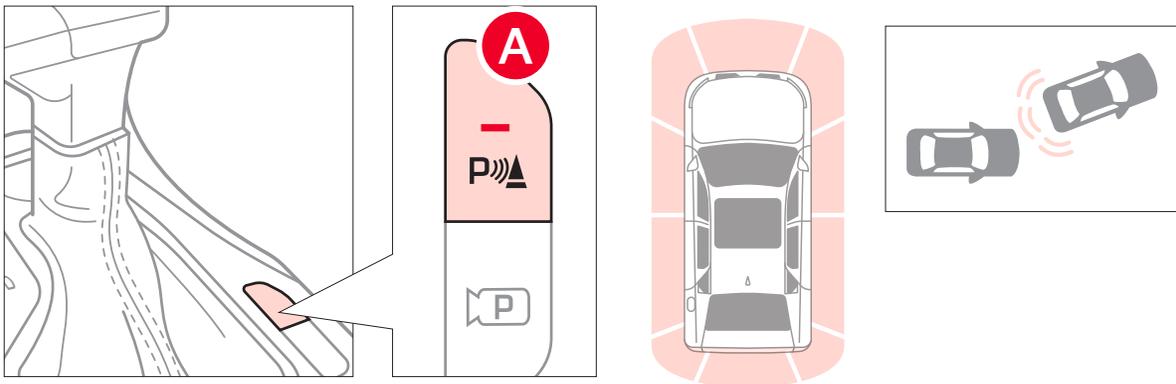

[Continued on next page](#)

When engaged, PDW is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object around the vehicle. Images shown are for illustration purposes only. Actual operation may vary. Refer to section 9 in the Owner's Manual for more information.

Forward/Reverse/Side Parking Distance Warning (PDW)*†4

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVING SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- When more than two objects are sensed at the same time, the closest one will be recognized first
- Some driver assistance systems use a Haptic Warning, which alerts the driver by gently pulsing the steering wheel when certain conditions are detected

When engaged, PDW is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object around the vehicle. Images shown are for illustration purposes only. Actual operation may vary. Refer to section 9 in the Owner's Manual for more information.




Instrument Cluster Illumination Control

Press left/right side of switch **A** to adjust the display brightness of the instrument panel illumination.

REMINDER: Instrument Cluster Control does not adjust brightness on the Infotainment System screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 5 in the Owner's Manual for more information.

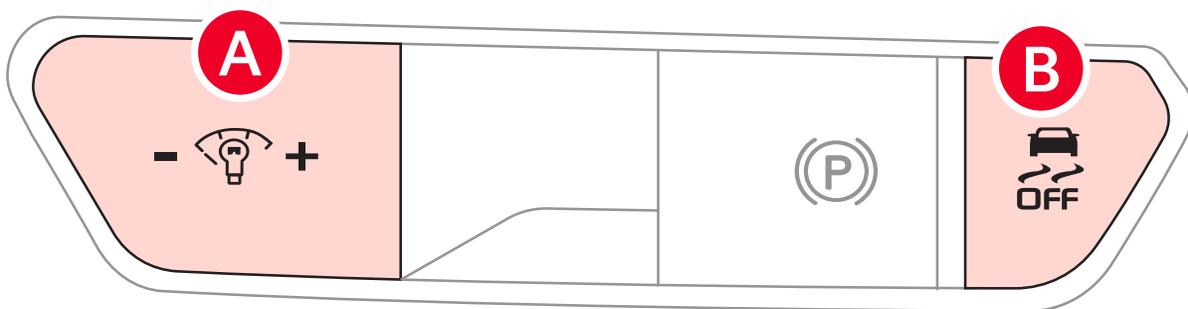

(Button panel located left of Steering Wheel)

Electronic Stability Control (ESC)^{†6}

ESC is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON for daily driving whenever possible.



Electronic Stability Control (ESC)

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever ESC is in operation

Refer to section 8 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.



Hill-start Assist Control (HAC)^{†6}

HAC is designed to help prevent the vehicle from rolling backward, for two seconds, when accelerating from a stop while on a steep incline.

HAC automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 8 in the Owner's Manual for more information.



Engine Start/Stop Button^{†7}

To start the engine:


- Press and hold the brake pedal
- Press the ENGINE START/STOP button, located in the center console or on the dashboard, while the gear shift is in P (Park) or N (Neutral)

To turn the engine **OFF**, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.



Start/Stop
Button Video

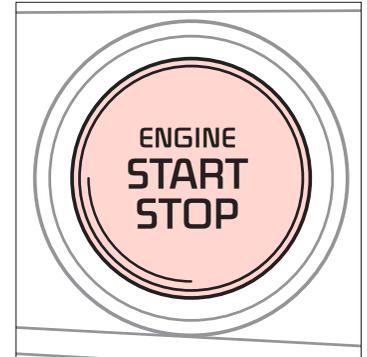

(Located left of Gear Shift)

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once

ON position

- When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice
- Keeping the vehicle in ACC or ON position without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 8 in the Owner's Manual for more information.



Power Windows, Window Lock & Central Door Lock

- A** Press to Unlock/Lock All Doors
- B** Pull/Press to operate Driver's and Passenger's Windows Auto-Up/Down*

QUICK TIP

Press button again to stop Auto-Up/Down function.


- C** Press to enable/disable Rear Passenger Windows

QUICK TIPS

- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- When **C** is pressed, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

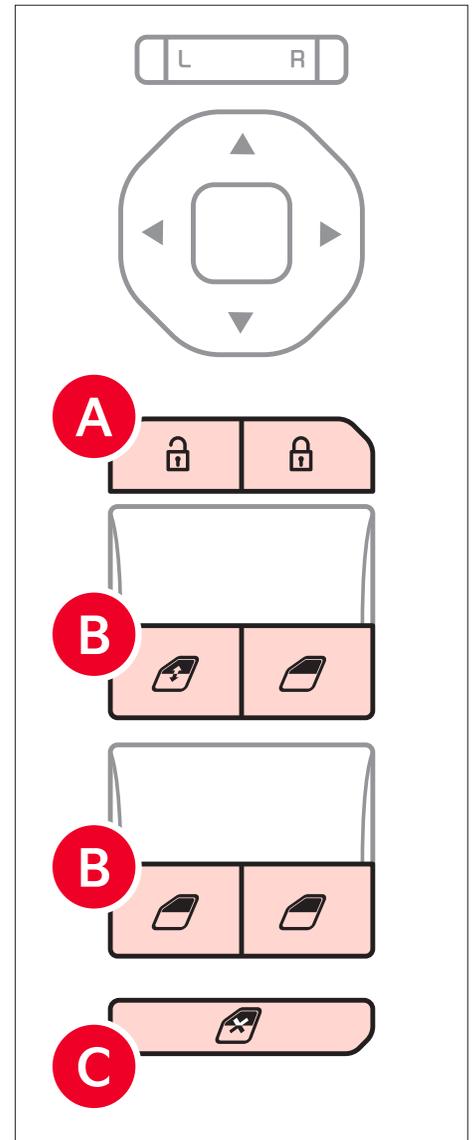

Button configuration may vary depending on vehicle model.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.





Power Heated Outside Mirrors*

Outside Rearview Mirror Adjustment:

- Press the toggle switch to the L (left side) or the R (right side) **A** to select which mirror to adjust
- Press the button arrows **B** (left/right/up/down) to adjust the mirror position
- To fold the outside mirrors, manually push them inward or pull them outward until they click into place, indicating they are securely positioned

Heated Outside Mirrors: By activating the Rear Defroster **C**, the outside mirror heaters will turn on and automatically defrost/de-ice the mirrors.

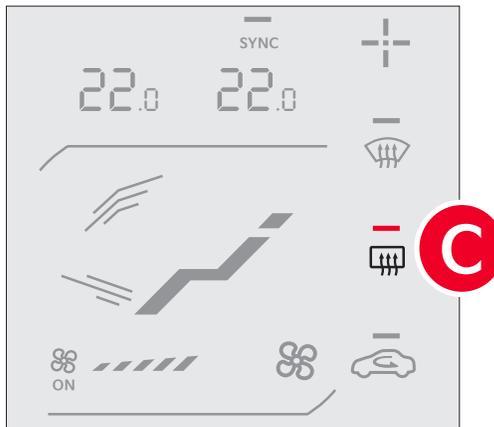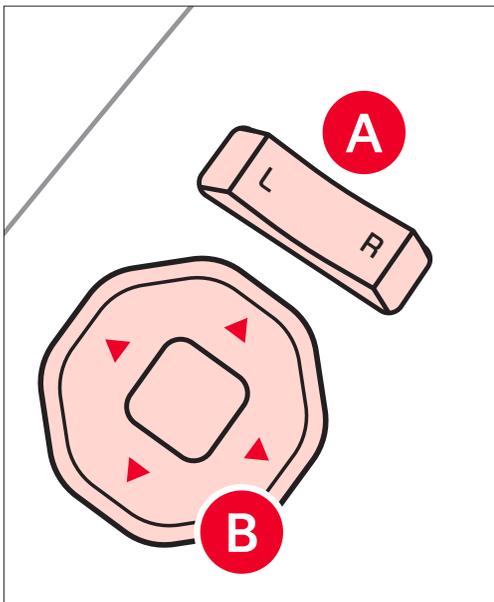

Button configuration may vary depending on vehicle model.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

For more information on all items on this page, refer to section 4 in the Owner's Manual.


Images are for illustrative purposes only. For more information on all items on this page, refer to section 4 in the Owner's Manual.



Reverse Parking Aid Function*

When enabled, moving the gear shift lever to the R (Reverse) position, the outside rearview mirrors will rotate downwards **A**.

To enable the Reverse Parking Aid Function, press the L or R on the outside rearview mirror switch **B**. When the switch is moved to the center, the function is turned off.

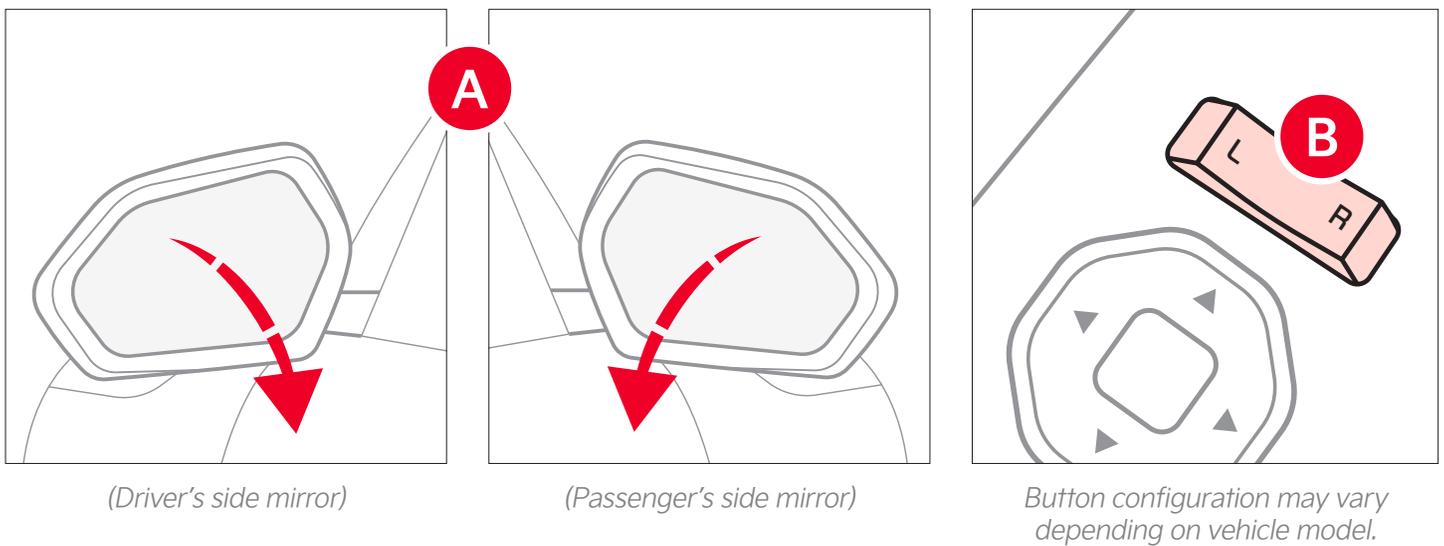

QUICK TIP

When either the L (Left) or R (Right) switch is selected, both outside rearview mirrors will move.

The outside rearview mirrors will automatically return to their original positions if any of the following occur:

- The ignition switch or Engine Start/Stop button is placed to either the OFF position or the ACC position
- The gear shift lever is moved to any position except **R** (Reverse)

Images are for illustrative purposes only. For more information on all items on this page, refer to section 4 in the Owner's Manual.



Headlights & High Beams


To operate:

- Rotate lever **A** to change the Headlight function
- Push the lever to turn High Beams ON **B**
- Pull the lever to flash Headlights / High Beams **B**

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

AUTO Light function - When the light switch is in the AUTO Light position, the taillights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

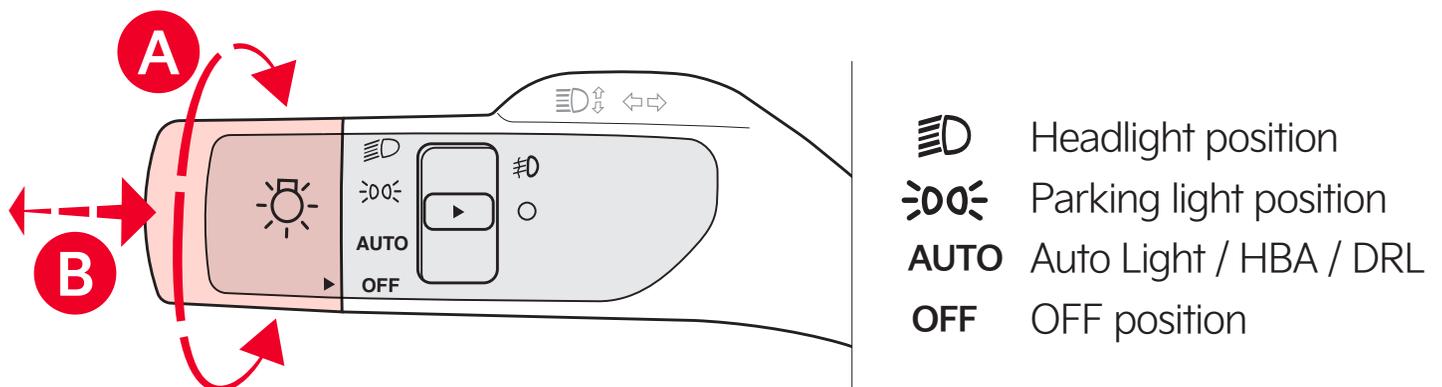

REMINDER: DRL only operates during the daytime.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 5 in the Owner's Manual for more information.




High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.



High Beam Assist (HBA) Video

To enable HBA, toggle the light switch to the AUTO **A** Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

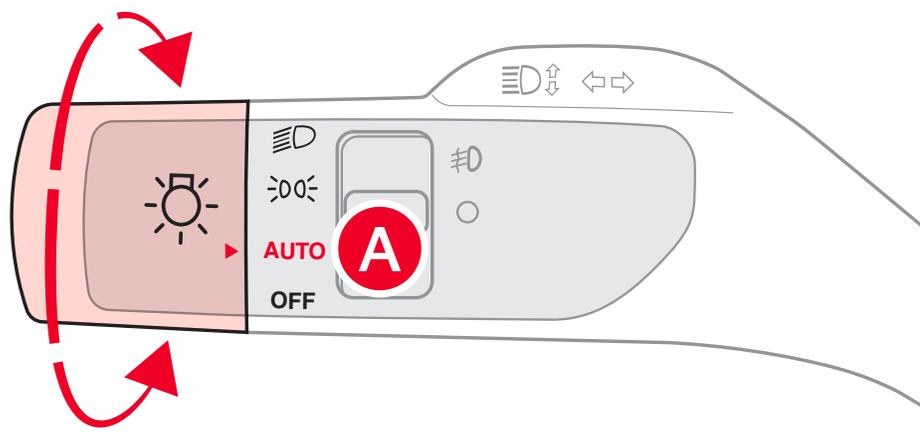

QUICK TIP

Always keep the front view camera clean to maintain optimal performance of High Beam Assist.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA may operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

Images are for illustrative purposes only. Refer to section 5 in the Owner's Manual for more information.



Turn Signals & Fog Lights*


To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal **A**
- Fog Lights - Rotate switch **B** up/down to turn Fog Lights ON/OFF

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing **C**. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7 flashes), on the Infotainment System, go to Vehicle Settings by pressing SETUP, VEHICLE, LIGHTS, and ONE TOUCH TURN SIGNAL.

REMINDER: Headlights must be ON for Fog Light operation.

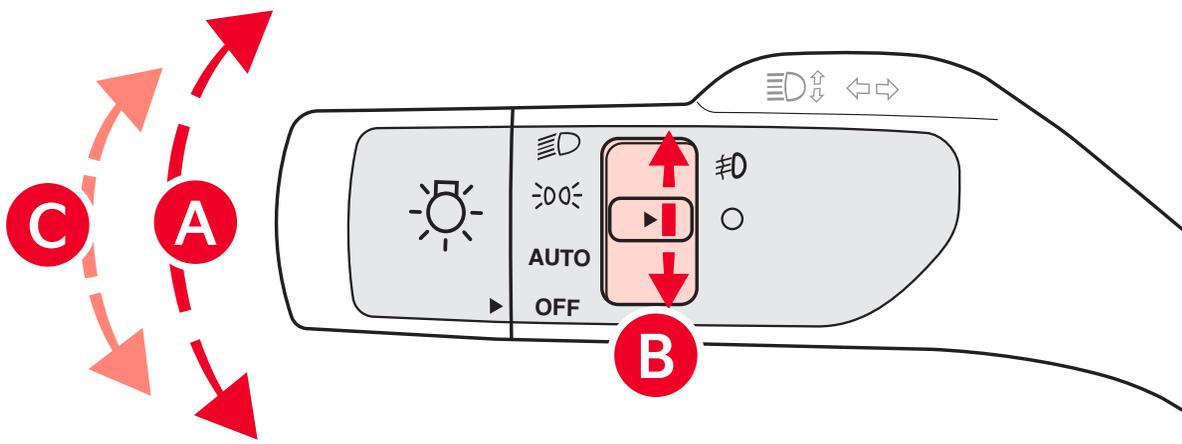

Refer to section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary



Windshield Wipers & Washers

To operate Windshield Wipers:


- Move lever Up/Down **A** to change wiper modes
- Press switch **B** Up/Down to adjust Intermittent Wipe Speed to Fast/Slow
- Pull lever to spray and wipe **C**



Wipers and Wiper Stalk Video

To operate Auto Rear Wiper (in Reverse):

- The rear Wiper activates automatically when the front wiper is ON and the gear shift is in reverse
- The switch is located at the end of the lever and offers 2 speeds: high or low **D**
- Push the lever forward to spray and wipe **C**
- To replace the wiper blade, see **Lifting Wipers (Wiper Service Mode)** for instructions ([next page](#))

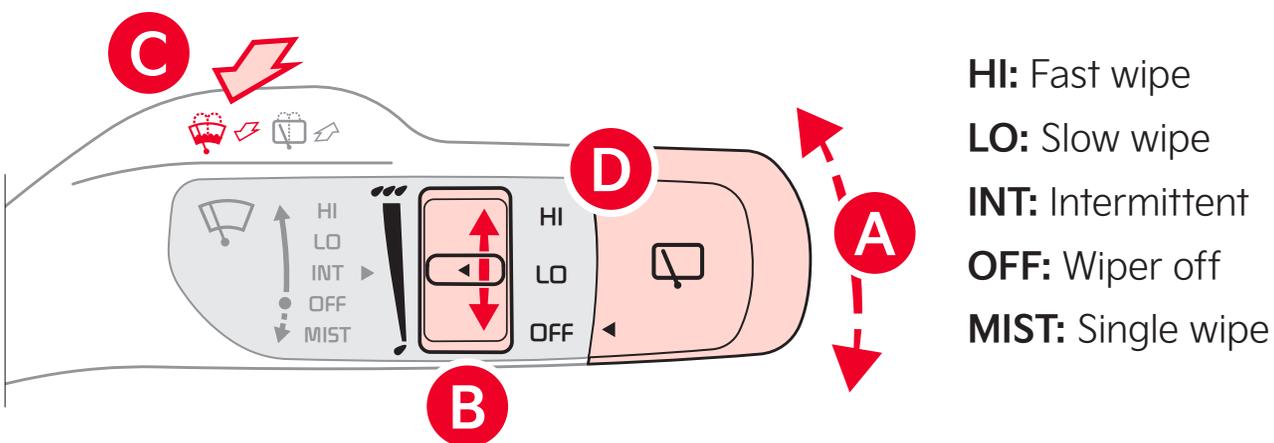

QUICK TIPS

- Pressing button **B** up increases Intermittent wipe frequency and wipe speed. Pressing the button down decreases the frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.

Refer to section 5 in the Owner's Manual for more information.



Lifting Wipers (Wiper Service Mode)




To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **A** to prevent damaging the hood.



Lifting Wipers / Wiper Service Mode Video

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch **B** to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

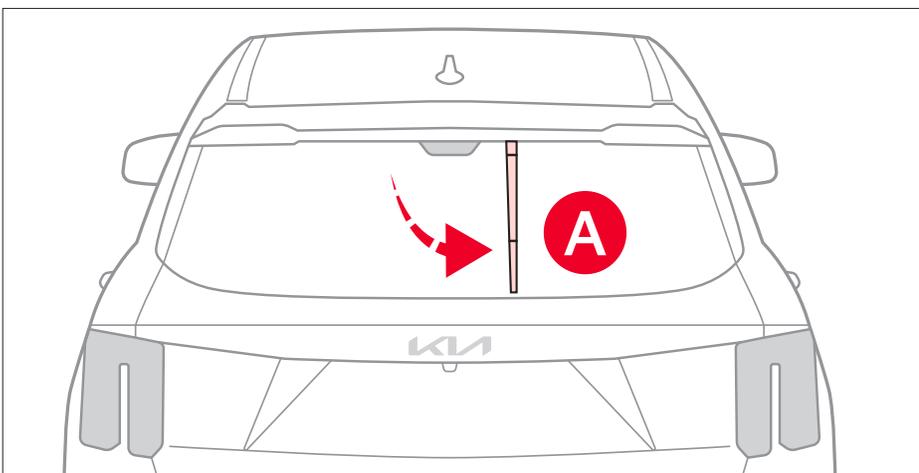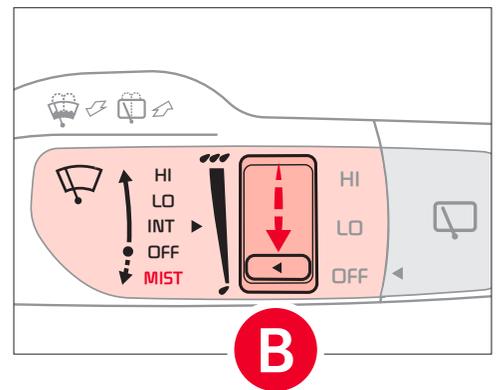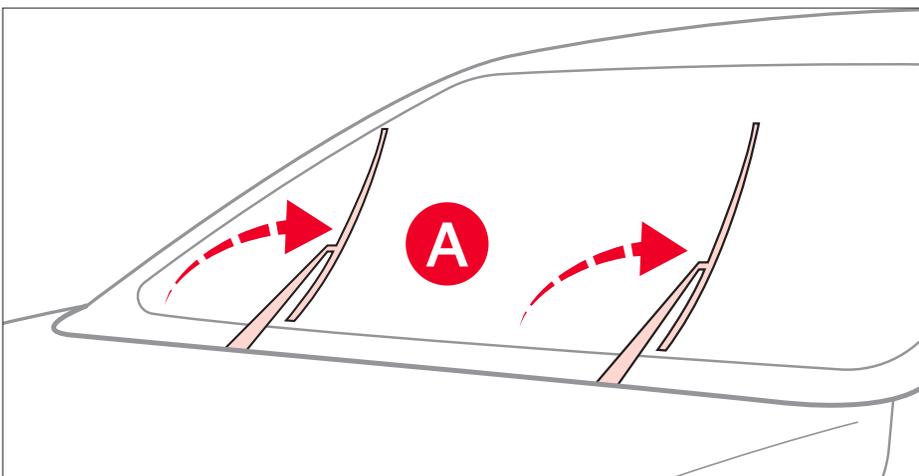

Images are for illustrative purposes only. Refer to section 11 in the Owner's Manual for more information.




Tilt/Telescoping Steering Wheel^{†20}

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust to the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.



Tilt/Telescoping/
Heated Steering
Wheel Video

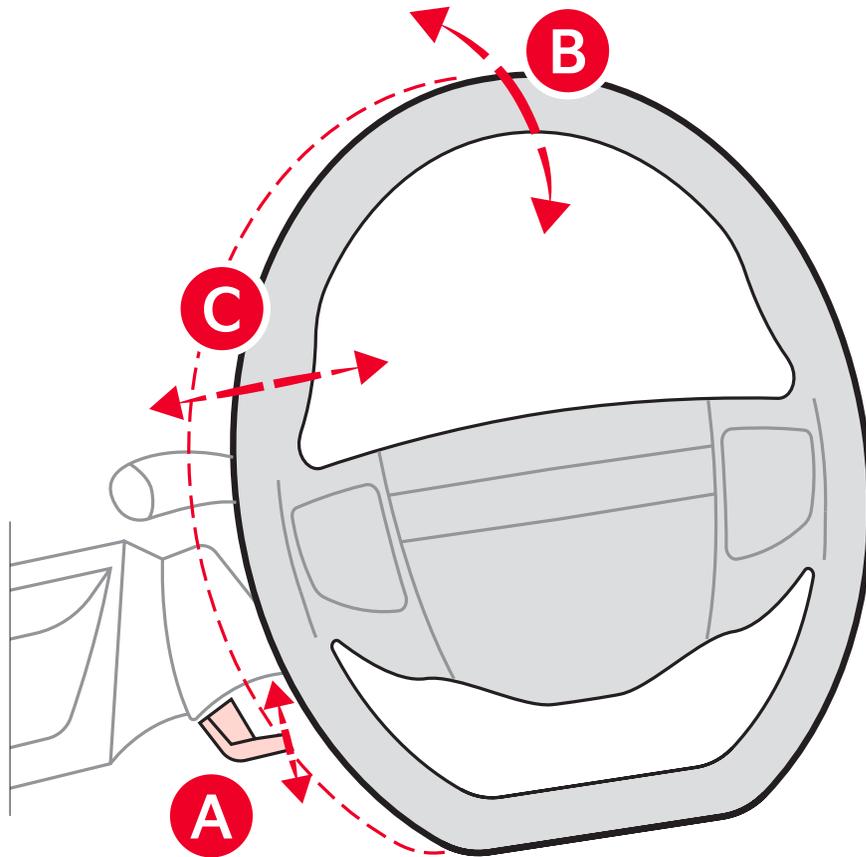

QUICK TIP

It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

For illustrative purposes only; your steering wheel may differ.

Refer to section 5 in the Owner's Manual for more information.



Steering Wheel Audio Controls^{†18}

A Infotainment System MODE button: Press to cycle through FM/AM/SiriusXM^{®*†18}/Media modes
Infotainment System ON: When off, press to turn the power on

B Seek/Preset button:
Press up to go to the previous song or station.
Press down to go to the next song or station.

FM/AM/SiriusXM[®] Modes: Press to advance through Preset Stations.
Press and hold to auto seek

Media Modes: Press to move track up/down. Press & hold to forward/rewind (except for *Bluetooth[®]* Audio)


C Volume button: Press up/down to raise/lower volume
Mute button: Press to mute all audio
(Media pauses in some Media modes when pressed)



Steering Wheel Controls



Custom Star Buttons & Radio Favorites

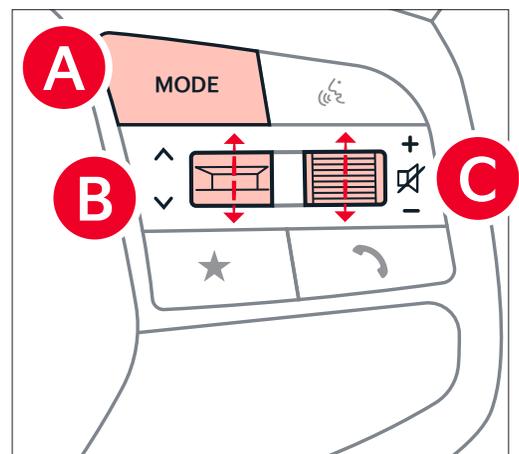

(Your vehicle's steering wheel buttons may differ from those in the illustrations.)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide, depending your audio system.



Bluetooth® Wireless Technology†3,18

A Voice Recognition button: press to start or end the voice recognition function of a connected smartphone via phone projection. (The button's operation may vary depending on smartphone specifications.)


Kia Connect^{†1} with Navigation system*

- When enrolled with a Kia Connect^{†1} subscription, press this button to activate the Kia Connect^{†1} Assist to use navigation guidance and search destinations

B Volume button: Press up/down to raise/lower the speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media

C Call / End Call button: Press to place/answer calls or to end a call, reject an incoming call or cancel a function. If no phone is paired, press the button to pair a phone

D Custom button ☆: Press and hold to program the Custom Button, then select an available feature you would like the Custom Button to open

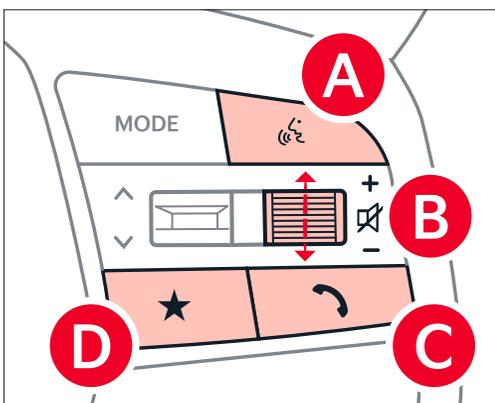

QUICK TIP

When using the voice command feature, wait for the system to BEEP before speaking the command.

[Continued on next page](#)

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.



Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle's Quick Start Guide.

QUICK TIPS


- During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth*® connection requests
- The first mobile device connected via Bluetooth or cable will remain as the priority device until a second mobile device is connected. If you turn the vehicle off and then back on, the last connected device will automatically take priority
- If no phone is paired, press the Call / End Call button **B** to pair a phone

How to Place a Call Using Steering Wheel Controls

When using the voice command feature, wait for the system to BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Call/End Call button **A**.
When not connected via *Bluetooth*®, displays the *Bluetooth*® Connection window
- Option 2: Press the Voice Recognition button **B**. Then say the command "Call {name}" or "Dial {number}"

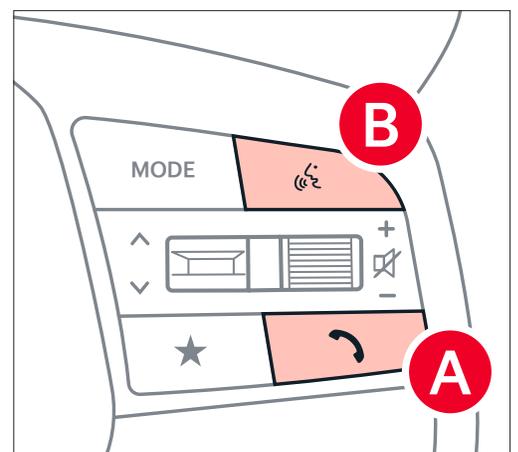

(Buttons located on Steering Wheel)

REMINDER: *Bluetooth*® Wireless Technology audio and calling functions are supported when connected to a *Bluetooth*® enabled device.

[Continued on next page](#)

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.



Bluetooth® Wireless Technology†3,18

[Continued from previous page](#)


Voice Recognition* and Phone

Contact Tips: The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)



Voice Recognition Tips

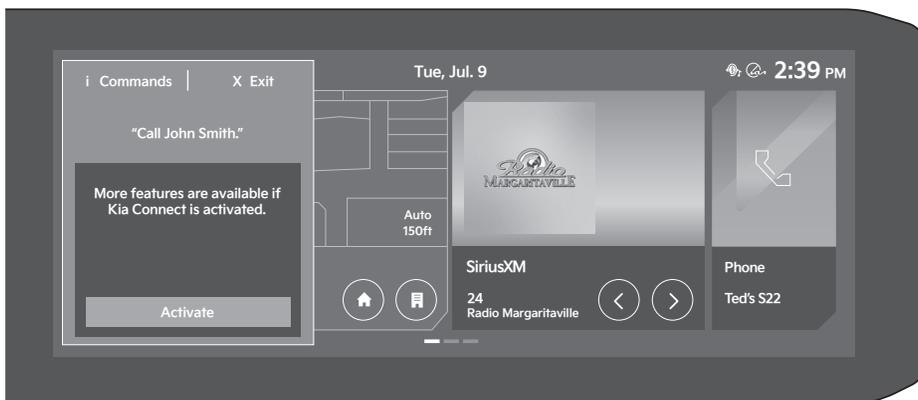

[Continued on next page](#)

Your vehicle’s steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User’s Manual or the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner’s Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner’s Manual.



Bluetooth® Wireless Technology†3,18

[Continued from previous page](#)

REMINDER: Bluetooth® Wireless

Technology audio and calling functions are supported when connected to a Bluetooth® enabled device.



**Voice Recognition
Tips**

QUICK TIPS

- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Bluetooth® Music Streaming - If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say "Commands" to get a list of available commands

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual.



Android Auto™†3 / Apple CarPlay®†3 Setup

Wireless Android Auto™:

1. To use Android Auto wirelessly, on the Infotainment System home screen, press SETUP, DEVICE CONNECTIONS, PHONE PROJECTION and ANDROID AUTO OPTIONS. Then select ENABLE ANDROID AUTO



Wireless
Android Auto

2. On the DEVICE CONNECTIONS screen, press ADD NEW. Make sure Wi-Fi and Bluetooth are enabled on your smartphone and follow the prompts on your phone
3. An Android Auto message will appear on the infotainment system screen when the phone is connected
4. Press YES to connect to Android Auto



Wireless
Apple CarPlay

Wireless Apple CarPlay®:

1. To use APPLE CARPLAY wirelessly, on the Infotainment System home screen, press SETUP and DEVICE CONNECTIONS. Then press ADD NEW
2. Turn on Wi-Fi and Bluetooth on your iPhone. Select the vehicle name from the list of Bluetooth devices. When you see the matching passkeys, click PAIR. You can allow contacts to download
3. On your iPhone select USE CARPLAY. On the Infotainment System screen, press YES to activate CarPlay

[Continued on next page](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Android Auto™ and Apple CarPlay® run on your smartphone cellular data service. Normal data rates will apply.



Android Auto™ †3 / Apple CarPlay® †3 Setup

[Continued from previous page](#)

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Android Auto™ and Apple CarPlay® run on your smartphone cellular data service. Normal data rates will apply.

Refer to the Car Infotainment System Quick Reference Guide for more information.



Kia Connect Activation^{†1}

Follow these steps to activate your Kia Connect system:

1. To enter the activation screen on the Infotainment System:
 - a. From the home screen, press the SETUP key
 - b. Press DATA/NETWORK
 - c. Press Under KIA CONNECT, press ACTIVATE SERVICES
 - d. Then press ACTIVATE
2. Read and agree to Terms of Service and Privacy Policy and press AGREE
3. Enter phone number or email address to receive a verification code, then press OK and SUBMIT
4. Click on the link and a page will open requesting you to create an account; Provide the information needed and select SAVE to create the account
5. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
6. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy



**Kia Connect
Activation**



**Kia Connect &
Kia Access app**

For further Kia Connect^{†1} operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.




Kia Connect Assistance^{†1}

Kia Connect^{†1}  **A** — Connect to the Kia Connect^{†1} Call Center

Roadside Assist  **B** — Press to connect to a roadside assistant where you can request vehicle towing services



Kia Connect Assistance

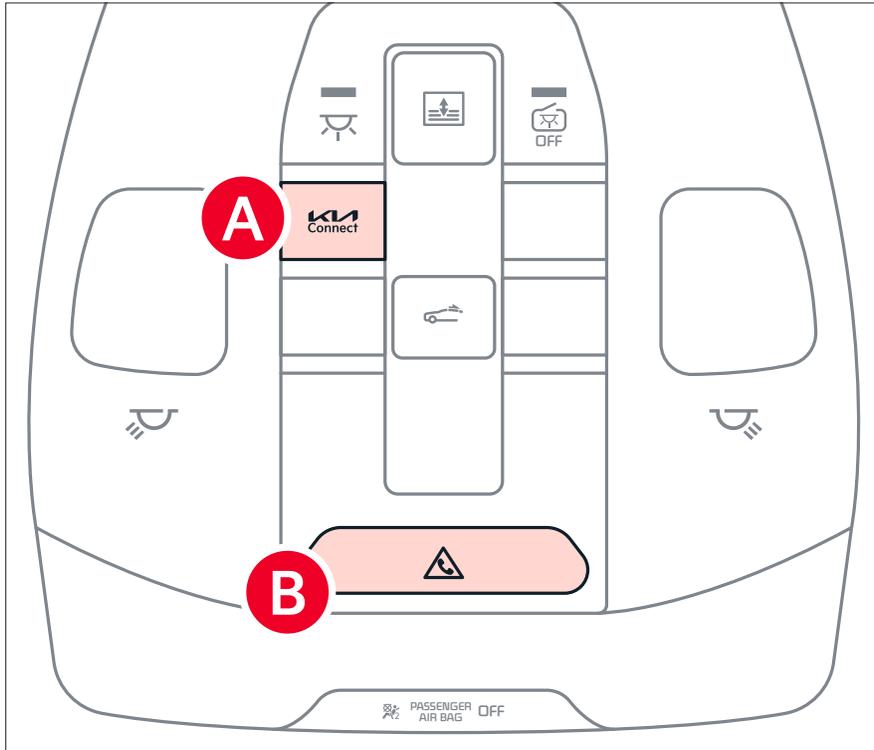

*(Buttons may be located on the overhead console area.
Your button layout/location may differ.)*

For more information, refer to the Car Infotainment System Quick Reference Guide.




Kia Generative AI Voice Assistant*

Kia Generative AI Assistant can be operated using voice recognition. Press the Voice Recognition button **A** or say “Hey, Kia.”




Generative AI Voice Assistant

For example, to adjust features such as the air conditioning, say, “Turn on the air conditioner.” You can also ask questions for general information, such as “Can you explain why the ocean is blue in a way that a 7-year old can understand?”

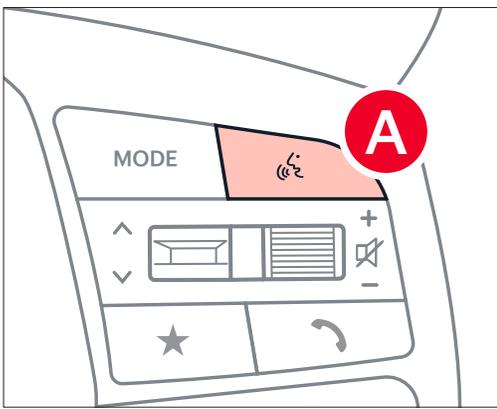

(Buttons located on Steering Wheel)

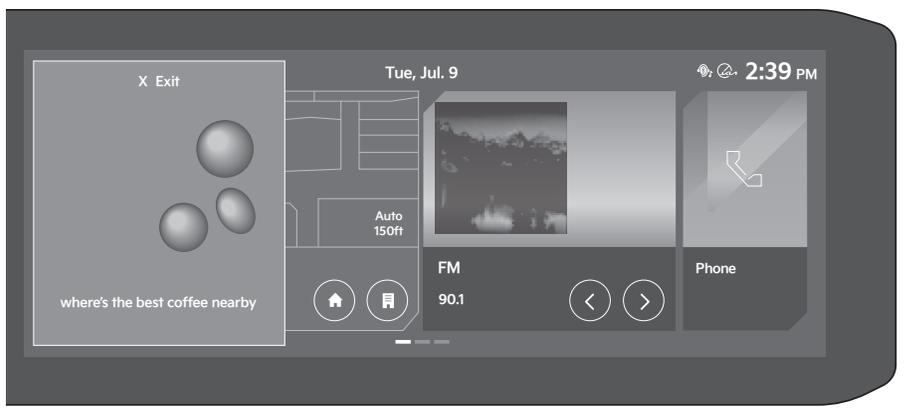

REMINDER: Kia Generative AI Voice Assistant may provide inaccurate answers. Please confirm important details separately.

Kia Connect subscription required. Use of the feature is subject to the Kia Connect Terms of Service and Privacy Policy. Kia does not make any warranties about the accuracy of the information provided. Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation.

Images are for illustrative purposes only. Refer to section 7 in the Owner’s Manual for more information.



Kia Access App^{†2} Download

Go to an app marketplace to download the new Kia Access App. Once downloaded, make sure you register your vehicle and create an account (refer to Kia Connect^{†1} Activation page). Get to know your new Kia and the available convenient features on the app.



Download the Kia Access App



Kia Access app Overview

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength to use Kia Connect^{†1}. If these conditions are not met, remote command may not execute or may take a long time. It will also effect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect^{†1} app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect^{†1} app, restart the vehicle





Kia Access App^{†2} Features Guide

The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Dealer Settings
- Manage Vehicles and Profiles



**Kia Access App
Features Guide**

Kia Access App Screen for illustrative purposes only. Actual App screen and functionality may vary.


For further Kia Connect^{†1} operations, refer to the Car Infotainment System Quick Reference Guide.

See Kia Connect^{†1} Terms of Service at owners.kia.com for more information.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.



Kia Connect Infotainment System - (Non-Navigation & Navigation⁺⁹)*

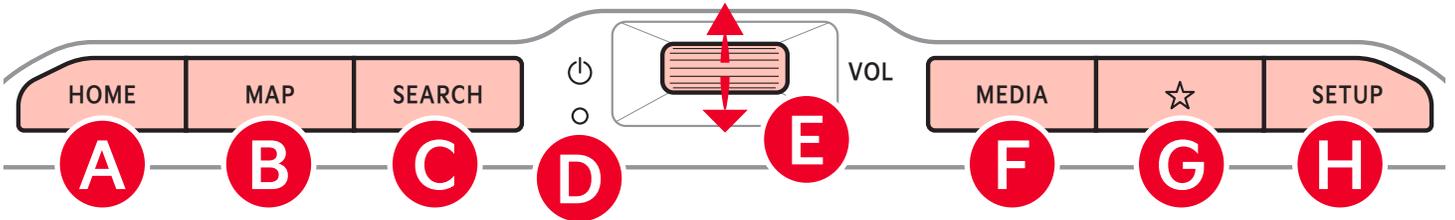

- A HOME button:** Press to go to the Infotainment System Home screen. Press and hold to turn the Quick Control function ON or OFF
- B MAP button** (Systems with navigation) - Pressing the Map button displays the Navigation* System map and your current location
MAP button (Systems without navigation) - When a phone is paired and connected via phone projection, press to display the phone's native map screen. When a phone is not connected, it will display the phone projection setting screen
- C SEARCH button:** Displays the Search screen
- D System Reset button:** Restarts the system
- E POWER button:** Press to turn the Media ON or OFF. Press and hold to turn OFF the screen and sound
VOLUME lever: Use the lever to adjust the volume
TUNE lever (if activated): While listening to the radio, adjust the frequency or change the station. While playing media, scan music or files. During scanning, select the current station, music or file
- F MEDIA button** (FM/AM, SiriusXM^{®+17}, USB, Bluetooth^{®+3} Audio): Press to play the connected media. Press and hold to display the Media source options
- G Custom button** ☆: Press to display the user-defined function. Press and hold to display the function settings screen
- H SETUP button:** Displays the Settings screen. Press and hold to display the version information screen



[Continued on next page](#)

Images are for illustrative purposes only.



Kia Connect Infotainment System - (Non-Navigation & Navigation⁺⁹)*

[Continued from previous page](#)

The **Warning Volume**  can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press the speaker icon.

Sound Settings: To adjust the sound settings from any audio mode, press the SETUP button on the Infotainment System, then select the onscreen SOUND button. Select the menu item to change settings, and use the onscreen buttons to adjust settings.

Radio Presets: To save a preset, press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

SiriusXM® Smart Favorites: In MEDIA, choose SiriusXM®, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key : To program the Custom Key, press and hold to select an available feature you would like the Custom Key to open.



[Continued on next page](#)



Kia Connect Infotainment System - (Non-Navigation & Navigation⁺⁹)*

[Continued from previous page](#)

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay[®] on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay[®] (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt Kia Connect⁺¹ Command Feedback by pressing the Voice Recognition button on the steering wheel

REMINDERS:

- To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.
- Prolonged use of the infotainment system in ACC mode may drain the vehicle's battery

For further Kia Connect with Navigation operations, refer to the Car Infotainment System Quick Reference Guide. Your vehicle's audio system may differ from that in the illustration.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.




USB-C Charger Ports

The USB-C Charger Ports are located on the Center Panel **A**.



USB-C Ports and Power Outlets

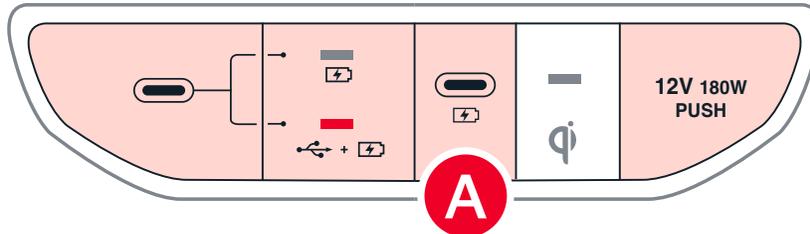

REMINDER: The USB-C Ports do not support data transfer when in charging only mode. Press button to switch to data transfer mode.

Digital Clock (Infotainment System)

Press the **SETUP** key, then select General. Press the onscreen Date & Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup. To access the manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect with Navigation*).

REMINDER: When needed, Daylight Savings must be enabled in the Clock Settings screen.

Refer to section 7 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.




Multimedia USB-C Port & Power Outlets

A Multimedia USB-C Port: Use the Multimedia USB-C Port to connect USB audio and smartphone devices



Multimedia USB-C Port, Power Outlets & USB Charger Port

B Power Outlet: Use the power outlets for devices designed to operate on a 12V (180W max) power outlet

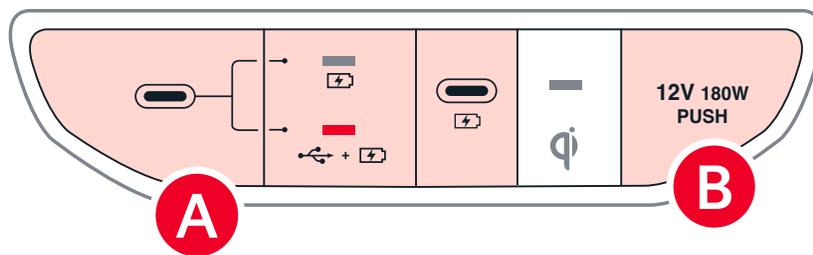

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

REMINDERS:

- Using the power outlet (accessory plug) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged periods of time with the Engine Start/Stop button in the IGN Position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB-C cables made by your device's manufacturer. Third-party USB-C cables may cause damage to your device
- The USB-C data port (Multimedia USB-C port) is located furthest away from the Power Outlet. The USB-C Charger ports do not support data transfer
- The Multimedia USB-C Port (when in media mode) in the center panel charges slower than the USB-C Charger Ports throughout the vehicle

Refer to section 7 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.




Wireless Smartphone Charging System*

Charge a compatible Qi™ Certified smartphone wirelessly by placing it on the charging pad/slot **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



Wireless Smartphone Charging

1. Enable Wireless Charging in Vehicle Settings in Infotainment System: Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select Convenience then Wireless Charging System for Mobile Devices
2. Place the compatible smartphone on the center of the charging pad
3. Indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

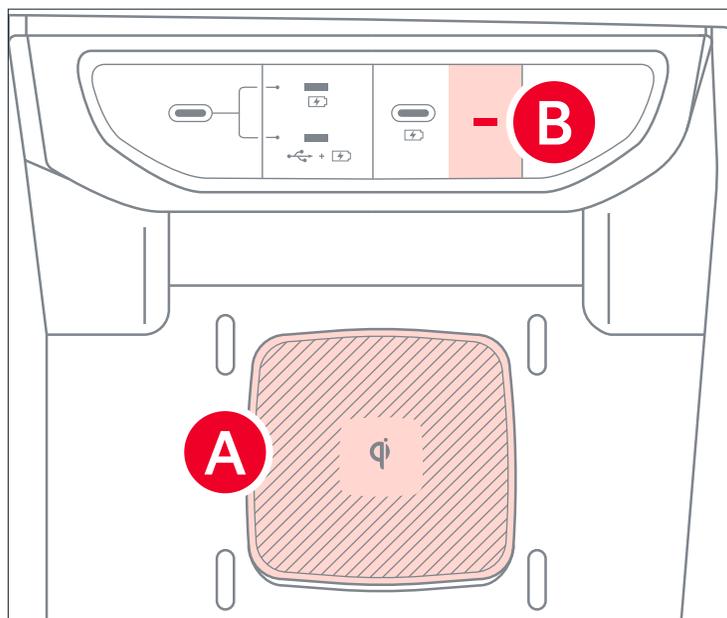

Requires Qi™-enabled device or Qi™-enabled case.

[*Continued on next page*](#)

Refer to section 7 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.





Wireless Smartphone Charging System*

[Continued from previous page](#)



Wireless
Smartphone
Charging

QUICK TIPS

- For the wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- Removing the phone case may improve charging efficiency and ensure a secure connection
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area


REMINDERS:

- The smartphone must be a compatible Qi™ certified phone with Qi™ function available. Some smartphone models are not Qi™ certified, which may affect the availability, speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad
- The charging indicator light will blink orange, for 10 seconds, if the system has malfunctioned

Refer to section 7 in the Owner's Manual for more information.



Automatic Climate Control*

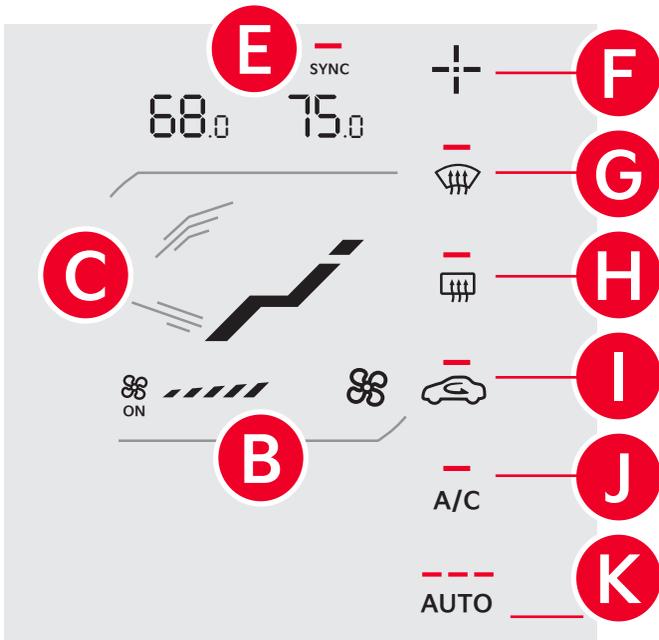

- A** Driver's temperature control
- B** Fan speed control (8 speed settings)
- C** Mode selection button
- D** Passenger's temperature control
- E** A/C Sync control
- F** Infotainment System screen on/off
- G** Front windshield defroster button
- H** Rear window defroster button
- I** Air intake control button
- J** A/C on/off button
- K** AUTO (automatic control) button

Air Flow Modes - To select Air Flow Modes, press the mode buttons **C** to choose the desired mode:



REMINDERS:

- A/C button indicator **J** will not illuminate if the desired adjusted temperature is greater than that of the ambient temperature.
- Recirculation modes **I**: vehicle will automatically switch to recirculation mode when Max A/C is turned on
- The maximum temperature shown, before HIGH is displayed, is 82°F
- The minimum temperature shown, before LOW is displayed, is 62°F

[Continued on next page](#)

Images are for illustrative purposes only. Refer to section 7 in the Owner's Manual for more information.

*IF EQUIPPED



Automatic Climate Control*

[Continued from previous page](#)



Climate Control Auto Function:

- Press A/C **A** to select Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected

- Press **B** to set desired fan speed
- Press **C** to set desired temperature

Defrost/Defog Outside and/or Inside Windshield:

- Set Front Fan Speed **B** to the highest position
- Set Temperature **C** to Hot
- Press the Front Defrost button  **D**

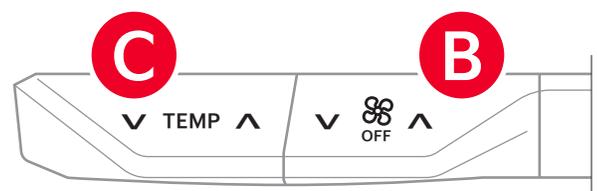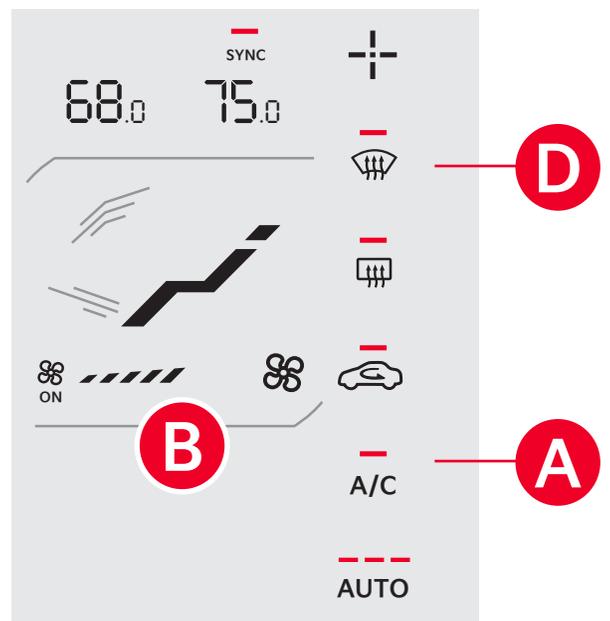

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 7 in the Owner's Manual for more information.

[Continued on next page](#)

*IF EQUIPPED



Automatic Climate Control*

[Continued from previous page](#)

Auto Defogging System (ADS): Auto Defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode in certain conditions.



Auto Defogging System

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging


REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through the vents if the Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility and/or cause smell/odor

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 7 in the Owner's Manual for more information.



Manual Climate Control*

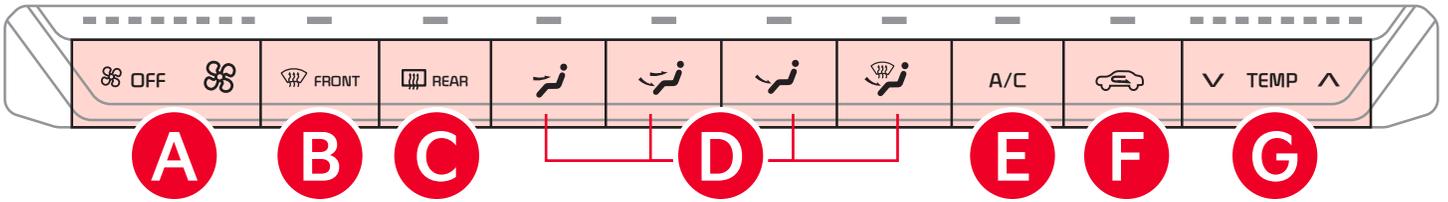

- A** Fan speed control (8 speed settings) / off button
- B** Front window defroster button
- C** Rear windshield defroster button
- D** Mode selection buttons
- E** A/C on/off button
- F** Air intake / recirculate air control button
- G** Temperature control button

Defrost Outside Windshield:

1. Set Fan Speed **A** to the highest position; set Temperature **G** to hot
2. Select Front Defrost position  **B**

Defog Inside Windshield:

1. Set Fan Speed **A** to the desired position; Set desired Temperature **G**
2. Select Front Defrost position  **B**

Air Flow Modes: To select Air Flow Modes, press the Mode buttons **D** for the desired mode:



Face Level



Bi-Level



Floor Level



Floor/Defrost Level

[Continued on next page](#)

Your Manual Climate Control system may differ from those in the illustrations. See section 7 in the Owner's Manual for more details.



Manual Climate Control*

[*Continued from previous page*](#)

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- Keep inside glass as clean as possible to reduce window fogging
- MAX A/C mode automatically engages Recirculated Air

REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- The maximum temperature shown, before HIGH is displayed, is 82°F
- The minimum temperature shown, before LOW is displayed, is 62°F



Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.



Electric Parking Brake (EPB) / Auto Hold


Applying the Parking Brake: Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light  is illuminated on the Instrument Cluster.

Releasing the Parking Brake: The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of **P** (Park) to **R** (Reverse) or shifted out of **N** (Neutral) to Reverse or **D** (Drive).

To release EPB manually, depress the brake pedal, then press the Auto Hold button **B**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

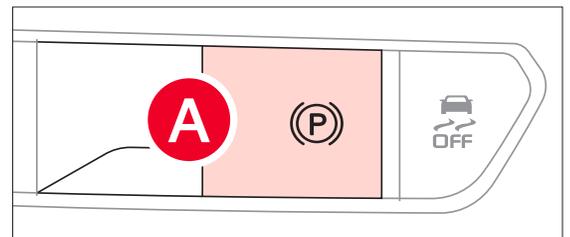

(Located on Driver's side panel)

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to page 8 for location of Instrument Cluster indicators. Refer to section 8 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.




Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the Auto Hold button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood, trunk must be closed, and the driver's seat belt must be fastened.



Electric Parking Brake (EPB) / Auto Hold

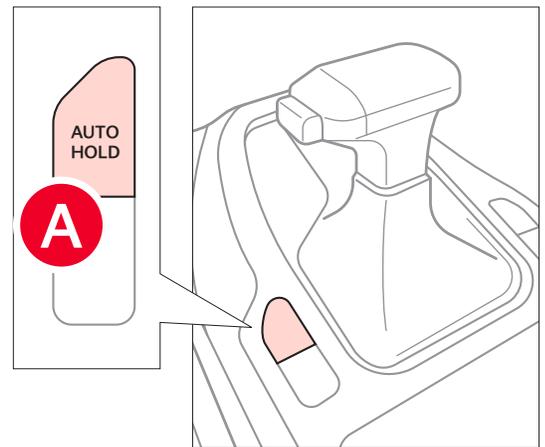

(Located by gear shift)

The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle in Park and at a standstill, when the Auto Hold button **A** is pressed on, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn Off when the Auto Hold button **A** is manually pressed Off or when the EPB is manually turned On.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes


Images are for illustrative purposes only. Refer to section 8 in the Owner's Manual for more information.



Heated Steering Wheel*

Press the Heated Steering Wheel button **A** to turn the steering wheel heater on/off while the Engine Start/Stop button is in the ON position. The indicator will light up according to the heater level. The steering wheel heater will switch to level 1 automatically after 30 minutes from the second level. When the heating is on level 1, it will remain on until the vehicle is turned off. To turn off the steering wheel heater, press and hold the Heated Steering Wheel button until the indicator light turns off.

REMINDERS: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

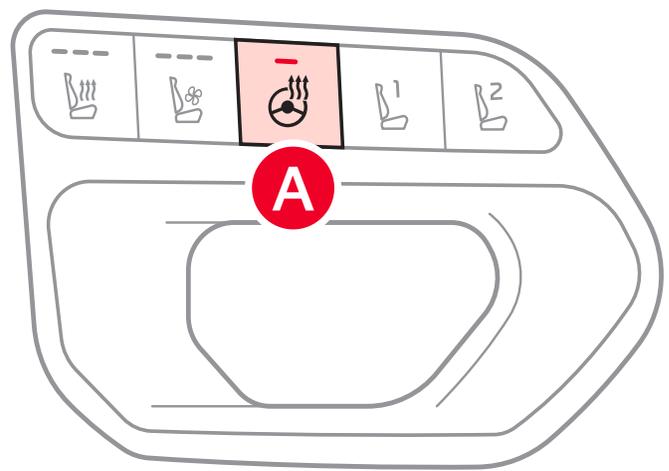

(Buttons shown located on Driver's door panel)

Images are for illustrative purposes only. Refer to section 5 in the Owner's Manual for more information.



Automatic Gear Shift^{†3} (Manual Mode)

P: Park

R: Reverse [+]: Manual Mode Upshift

N: Neutral [-]: Manual Mode Downshift


D: Drive

Manual Mode: To enter Manual mode, move shift lever from D to left gate **A**.

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.



**Automatic
Gear Shift**

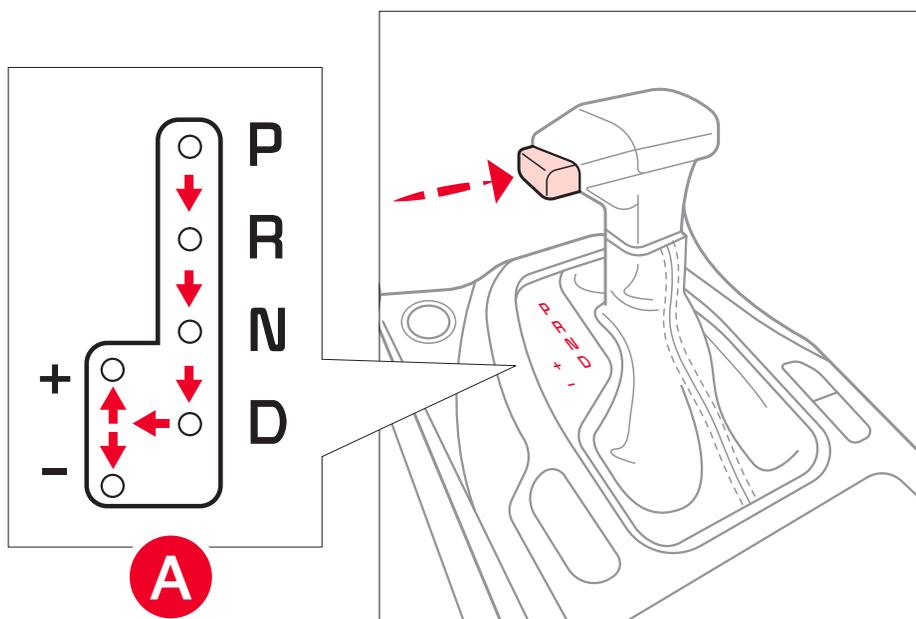

QUICK TIPS

- Press brake pedal and depress release lock button to move gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Images are for illustrative purposes only. Refer to section 8 in the Owner's Manual for more information.




Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).



**Automatic
Gear Shift**

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

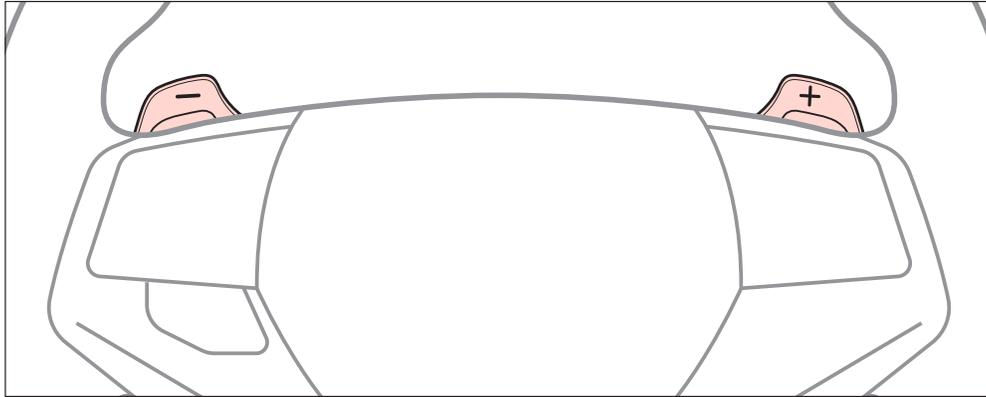

(Paddles on top rear sides of steering wheel)

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 8 in the Owner's Manual for more information.



Seat Warmers*†16 / Ventilated Seats*

A Seat Warmers:


- Press the button up once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

B Ventilated Seats:

- Press the button down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



Seat Warmers/
Ventilated Seats

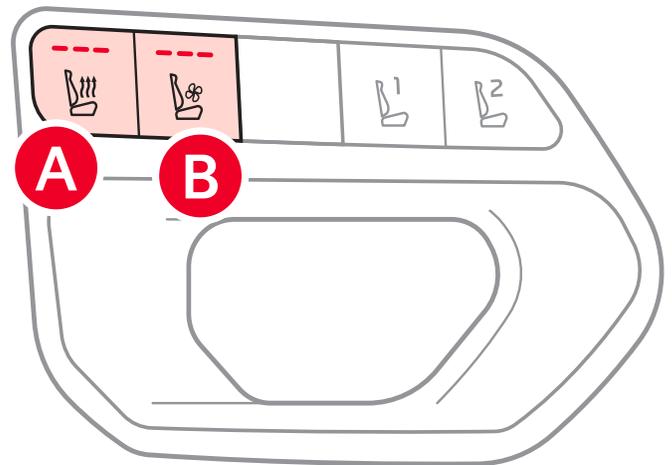

(Buttons shown located on Driver's door panel)

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 5 in the Owner's Manual for more information.




Driver Position Memory System*†14

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store a seating position into memory, first place the shifter into **P** (Park) while the ignition is ON. Then:

1. Adjust the driver's seat and outside mirrors
2. Press one of the memory buttons **A** within 5 seconds. The system will beep twice when memory has been stored
3. "Driver (1 or 2) settings saved" will appear on the Infotainment screen

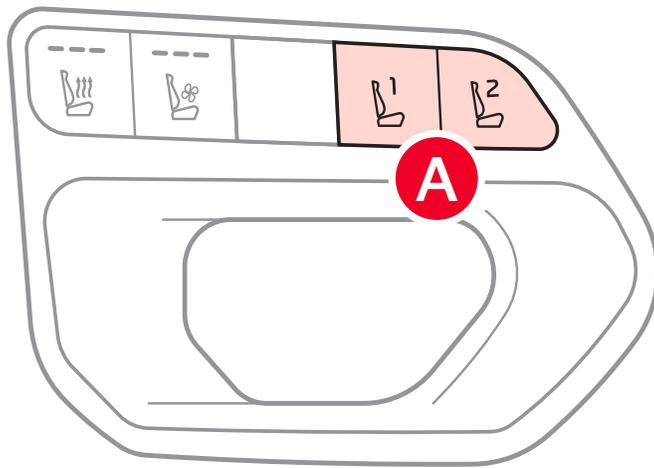

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Images for illustrative purposes only. Refer to section 5 in the Owner's Manual for more information.





Power Adjustable Driver's Seat*†14

Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar forward/backward.



Power Adjustable Driver's Seat with Memory Settings

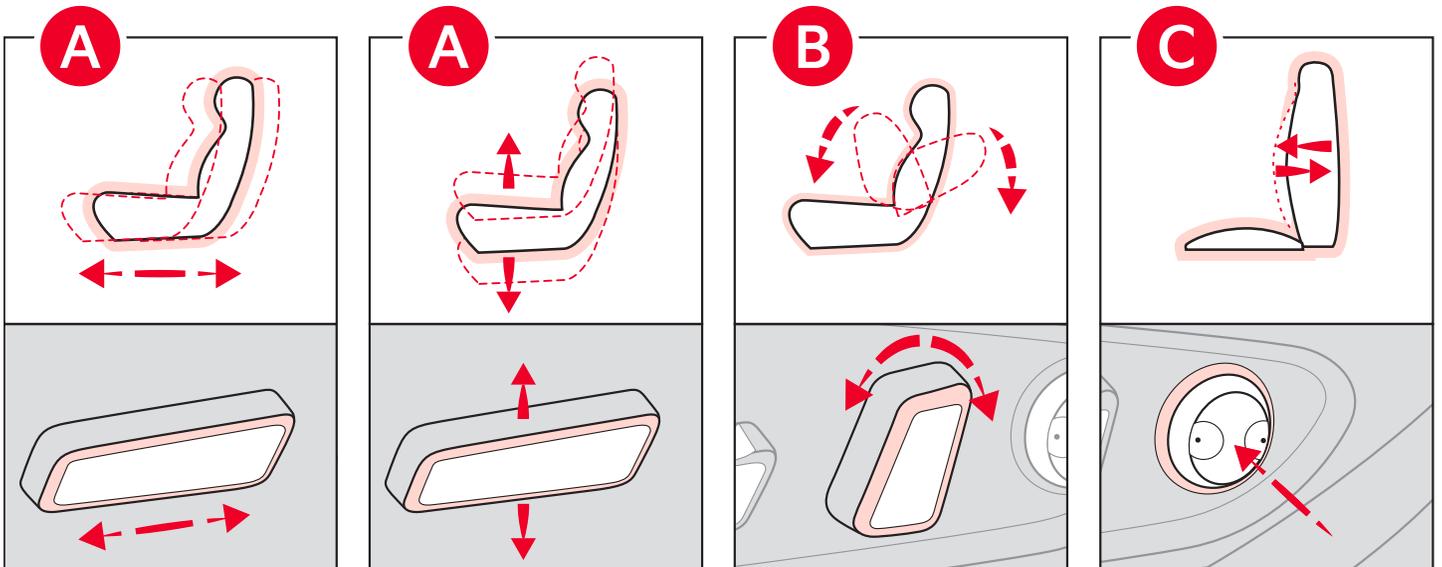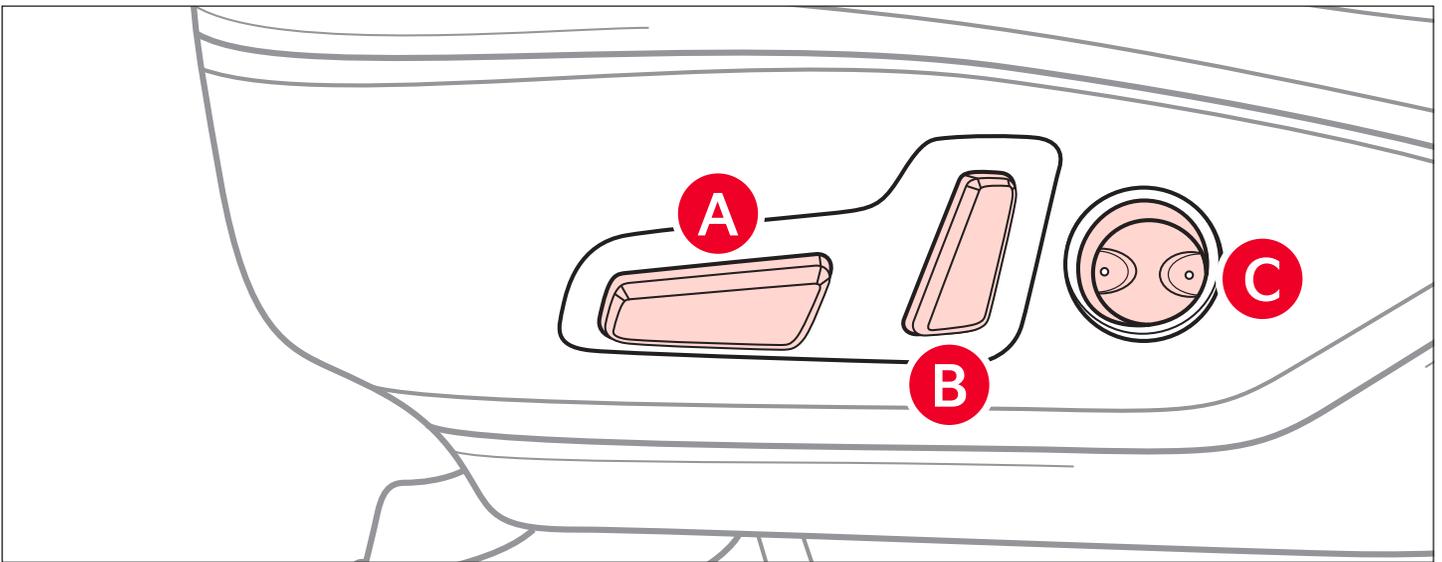

Seat

Seat Cushion

Seatback

Lumbar

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.



6-Way Manual Adjustable Driver's Seat*†14

Pull lever **A** to slide Seat forward/backward.


Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback recline.



Manual Adjustable Driver's Seat

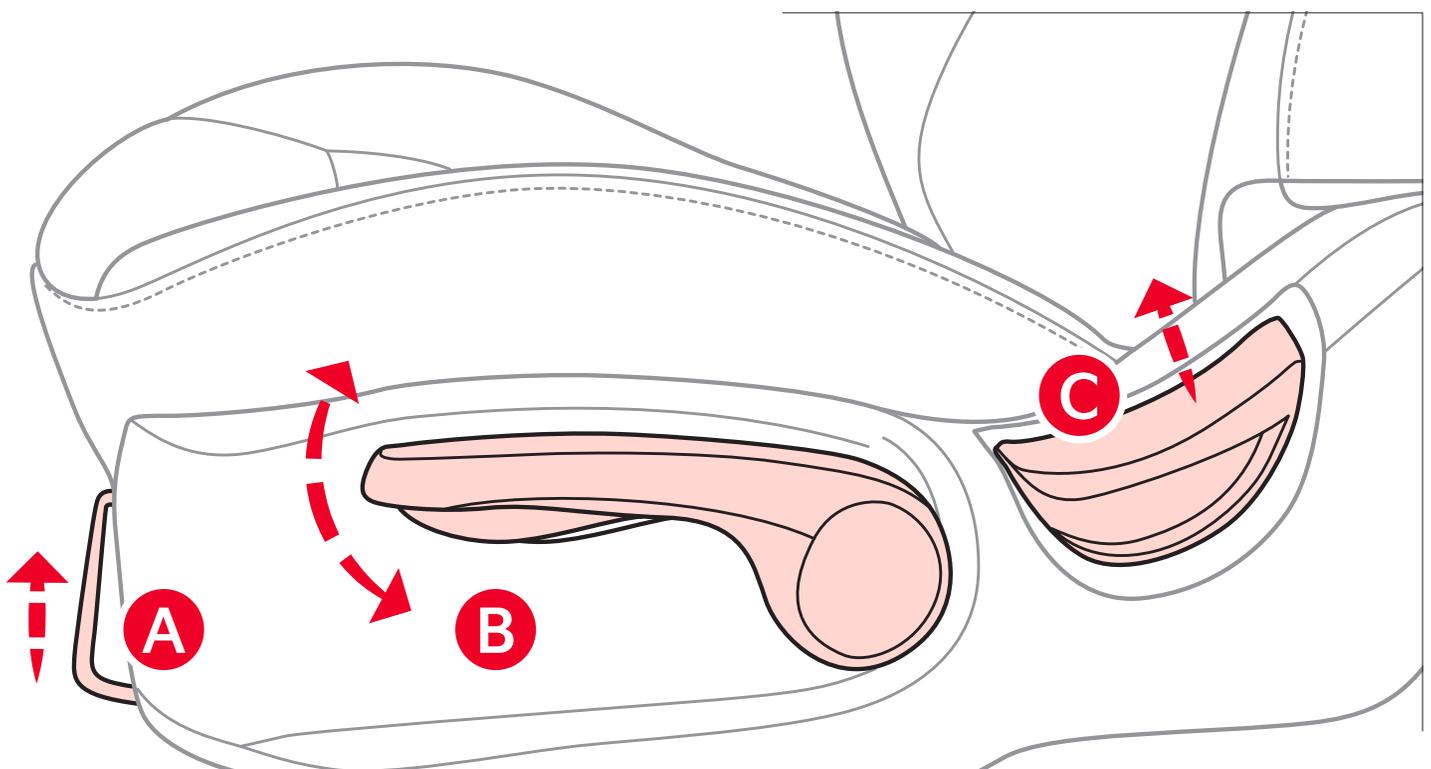

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.



Rear Occupant Alert (ROA) with Door Monitoring^{†11}

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. When the front door is opened, after the rear door has been opened and closed and the engine has been turned off, an alert may appear on the Instrument Cluster stating “Check rear seats” **A**, accompanied by a chime.

The factory default is set to ON. To turn the system ON or OFF, go to the Vehicle Settings on the Infotainment System, select Setup, Vehicle, Convenience, then enable Rear Occupant Alert.

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

ROA is not a substitute for one’s attention. Always check the vehicle’s interior before exiting. Refer to section 4 in the Owner’s Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.

Front Seat Headrest Adjustment^{†8}




To raise headrest: Pull headrest up to the desired position.

To lower headrest: Press lock **B**, then press the headrest down.

REMINDERS:

- Button may be hard to see if headrest is in its lowest position
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

Refer to section 6 in the Owner’s Manual for more information.

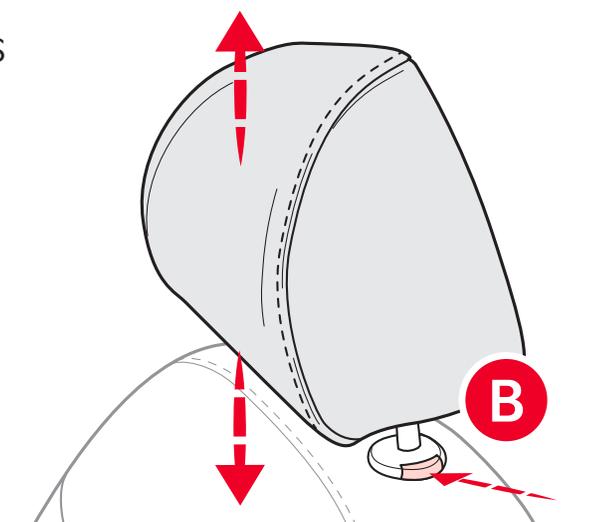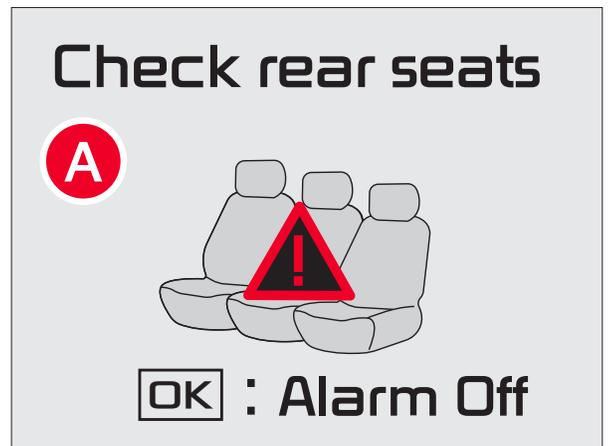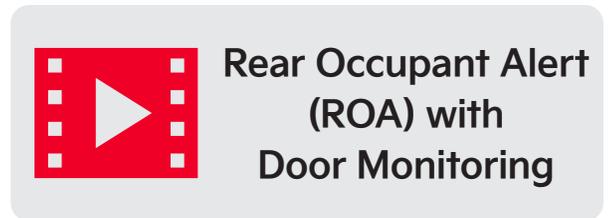



Map/Room Lamps*

Automatic turn off function*



The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button is OFF.



Overhead Console

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds
- Press button **D** to turn the Cabin Light ON/OFF

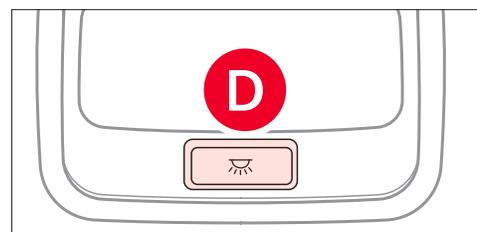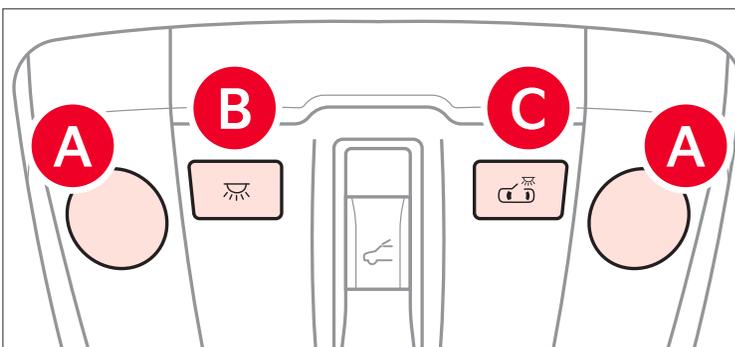

(Room Lamps may vary)

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

REMINDER: The DOOR mode and ROOM mode cannot be selected the same time.

Refer to section 7 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.



Panoramic Sunroof with Power Sunshade*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever. The ignition or Engine Start/Stop button needs to be in the ON position to operate the Sunroof.

To slide the Sunshade only (with Sunroof closed):

- Auto Open: Slide the lever **A** partially backward to the first detent position and release
- Auto Close: Slide the lever **A** partially forward to the first detent position and release

To slide the Sunshade and Sunroof:


- Auto Open: Slide the lever **A** backward to the farthest position and release
- Auto Close: Slide the lever **A** forward to the farthest position and release

Tilting the Sunroof glass open/close:

- Tilt Open: Push switch **A** upward and release (if the power sunshade is close, it will open first)
- Tilt Close: Push switch **A** forward to first detent position and release
- Auto Close Sunroof glass and Power sunshade: Push the switch **A** forward to the second detent position



Sunroof
Operation

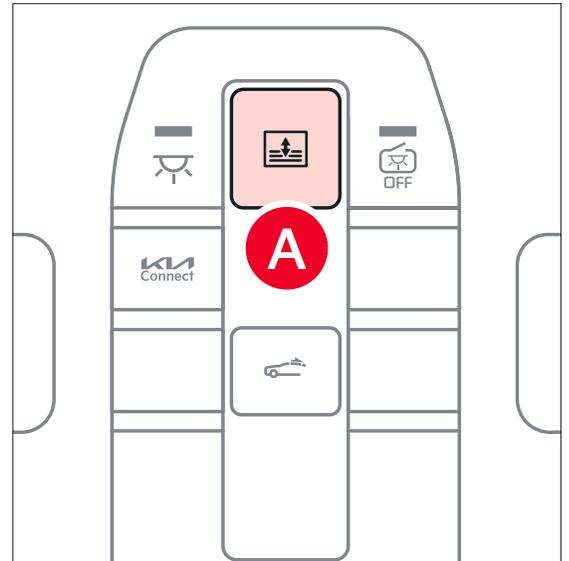

(Buttons located on overhead panel)

[Continued on next page](#)

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.



Panoramic Sunroof with Power Sunshade*

[Continued from previous page](#)

REMINDERS:

- Sunshade needs to remain OPEN while Sunroof is open
- When closing, be mindful of any objects or persons in close proximity
- Do not adjust the Sunroof or Sunshade while driving. This could result in loss of control of the vehicle



**Sunroof
Operation**

QUICK TIPS

- To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction
- While driving with the rear windows down or with the Sunroof in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately one inch
 - If the noise occurs with the Sunroof open, slightly reduce the size of the Sunroof opening


Refer to section 4 in the Owner's Manual for more information.



Smart Key with Remote Start^{†7}

- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** Press to unlock All Doors
- C** Press to unlock Trunk
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** **Mechanical Key:** Use to lock/unlock Driver's Door by turning once. Use to enable/disable Child Safety Locks, and to unlatch rear center seatbelt lower anchor

- F** **Remote Start:** First, lock the doors by pressing the door lock button **A** within 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **F** for more than two (2) seconds to start the vehicle. Press **F** again to turn off. If driver does not enter vehicle within ten (10) minutes of starting the vehicle, the engine will automatically turn off

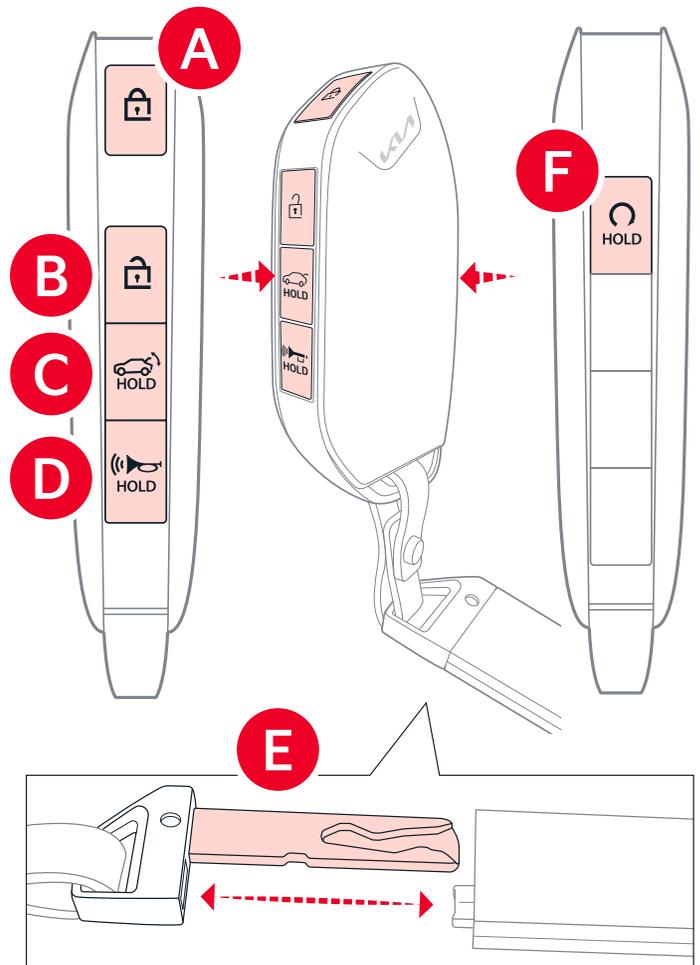

[Continued on next page](#)

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.





Smart Key with Remote Start^{†7}

[Continued from previous page](#)

Mechanical Key: Use to unlock/lock Driver's Door:

1. Pull out door handle
2. Press the lever located inside the bottom part of the cover with a key or flat-head screwdriver **A**
3. Pull off the cover while pressing the lever
4. Turn the key toward the rear of the vehicle to lock the door and toward the front of the vehicle to unlock the door **B**
5. Return keyhole cover to its original position

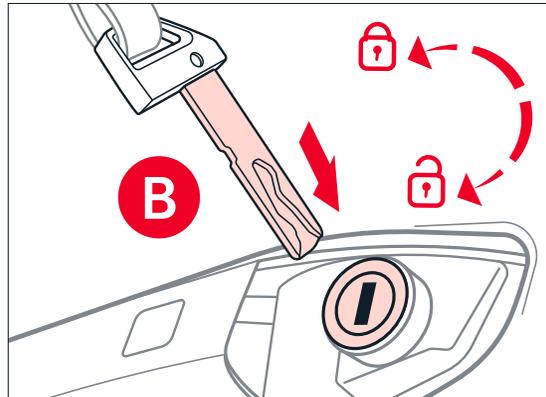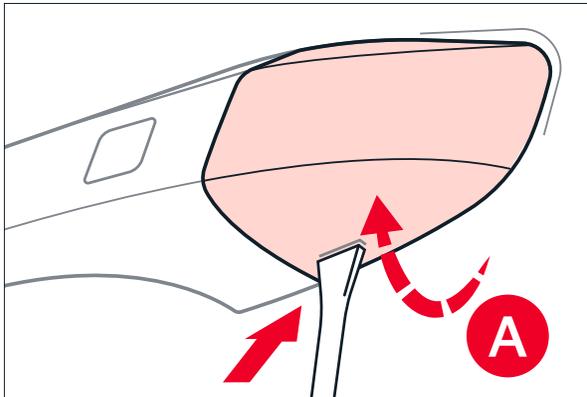

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine. If needed, contact your local Kia dealership for repair
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately
- If equipped, the 2-press unlock setting function is OFF by default. It can be enabled in the Vehicle Settings
- If the weather is extremely cold, the transmitter may not respond
- A maximum of 2 Smart Keys may be registered to the vehicle
- To add a new Digital Key, the current Digital Key must be removed. See Digital Key 2 for instructions on removing a digital key

REMINDER: When reinserting the mechanical key into the fob, ensure it is pushed all the way in until you hear a click.

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner's Manual for more information.




Digital Key 2^{*†3}

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.


Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
3. Open the Kia Access App and select DIGITAL KEY **A**
4. Press CREATE OWNER KEY
5. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
6. Press CONTINUE and the wallet app will pair and add your digital key

REMINDER: Actual steps may vary between devices.

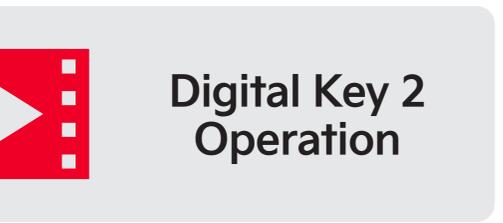

Digital Key 2 Operation

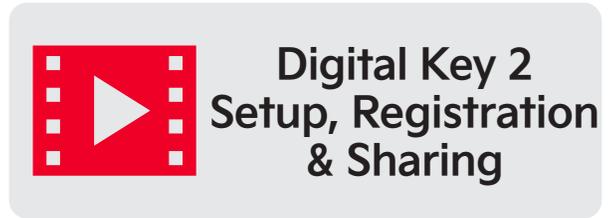

Digital Key 2 Setup, Registration & Sharing



[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.




Digital Key 2^{*†3}

[Continued from previous page](#)

Digital Key 2 Setup for Smart-phones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEYS
5. Under MY SMARTPHONE KEY, press SAVE (vehicle must be on with Smart Key in the vehicle)
6. Open the **Kia Access App** and select DIGITAL KEYS. Press CONTINUE
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

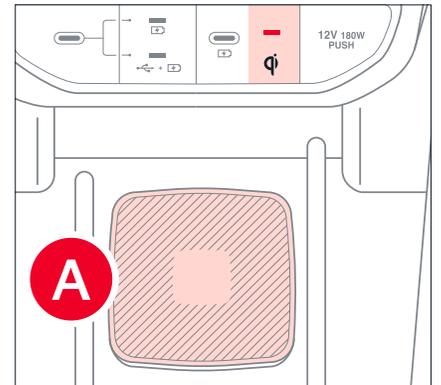

QUICK TIP

- When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

[Continued on next page](#)



Digital Key 2^{*†3}

[Continued from previous page](#)

Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

Revoking shared Digital Key access: You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings. Select the contact and click on REVOKE ACCESS.

To delete shared keys and the owner key: Go to the Vehicle Settings* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY, SHARE KEYS, and DELETE ALL.

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

[Continued on next page](#)



Digital Key 2^{*†3}

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
 - For **Apple iPhone**® (Ensure the device has the latest version of iOS®):
 - iPhone XS® or later.
 - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch**® (Ensure the device has the latest version of watchOS®):
 - Apple Watch Series 5® or later
 - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
 - For **Samsung™ Phones**: Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
 - Galaxy S20™ or later
 - Galaxy Note20 5G™ or later
 - Galaxy Z Flip 5G™ or later
 - Galaxy Fold 2™ or later
 - For **Google™ Smartphones**: Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMINDERS:


- Vehicle must be unlocked first before attempting to open fuel lid
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released



Kia Fuel Cap




Fuel Filler Lid Release

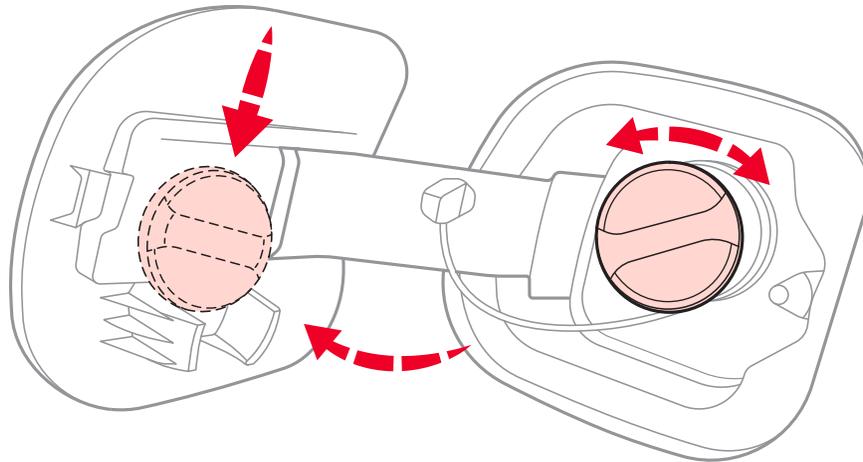

Fuel Filler Lid Release*

To open the Fuel Filler Lid, turn off the engine and ensure driver's door is unlocked. Pull the Fuel Filler Lid release **A** to open the Fuel Filler Lid.

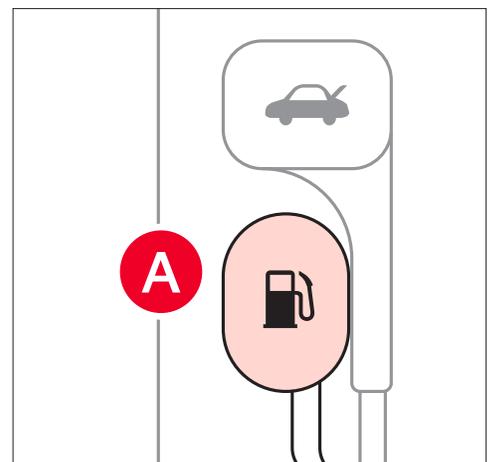


Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.




Trunk Release Lever

Pull the trunk release lever **A** to open the Trunk.

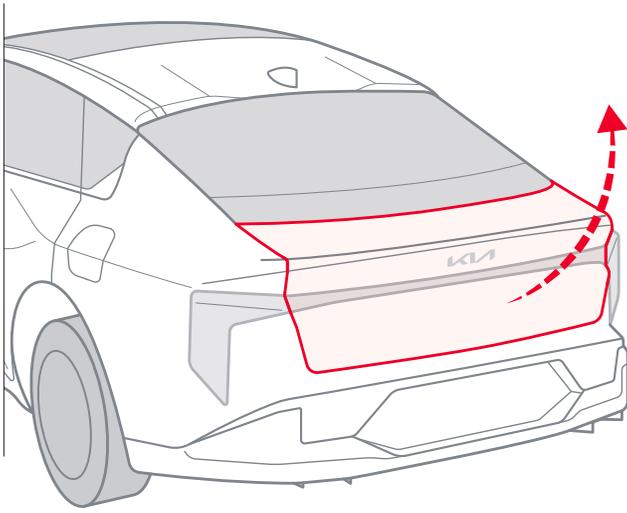

Liftgate Buttons and Operation

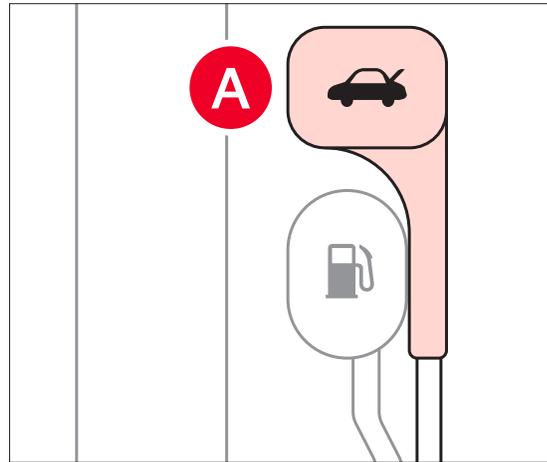

REMINDER: When closing, be mindful of any objects or persons in close proximity.

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.



Smart Trunk with Auto Open^{*†12}


When the Smart Key fob is with you and you are within close proximity of the back of the vehicle, the hazard warning lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Trunk is about to unlock.

Then the alert system will blink and chime two additional times before unlocking the Smart Trunk.

To enable the Smart Trunk, go to the Vehicle Settings in the Infotainment System. Press SETUP key/button, VEHICLE, DOOR, then enable SMART TRUNK.



Settings -
Power Liftgate

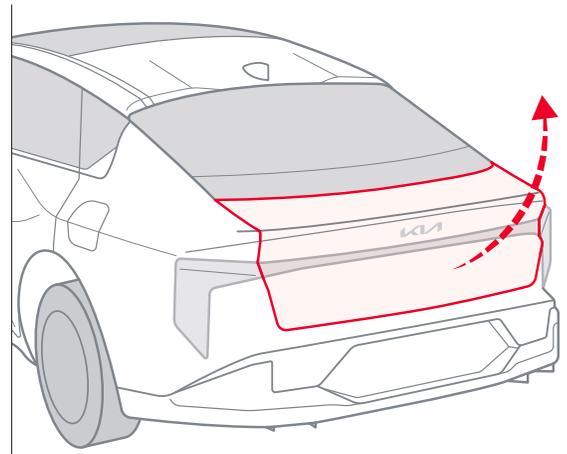

QUICK TIP

During the Smart Trunk alert, the Smart Power Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

REMINDERS:

- When closing, be mindful of any objects or persons in close proximity
- The Smart Key must be outside of the vehicle for the Smart Power Trunk to operate
- All doors are closed and locked after about 15 seconds
- The Smart Trunk feature will not operate when the doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles, a door is not locked or closed, or the Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Trunk function
- When the ignition is on, the Smart Trunk will only operate with the gear shift in the Park (P) position
- Ensure obstacles and people are out of the way of the Smart Trunk


For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.



Sun Visor^{†19}

Use the Sun Visor to shield direct light through the front or side windows. Slide* the Sun Visor out and adjust as needed.

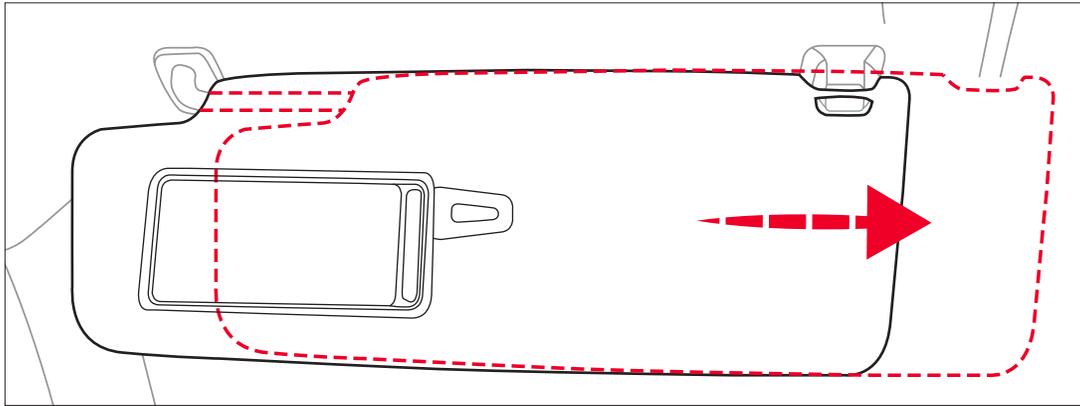

REMINDERS:

- The Sun Visor may impair visibility if not adjusted properly
- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows


Images are for illustrative purposes only. Refer to section 7 in the Owner's Manual for more information.




Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

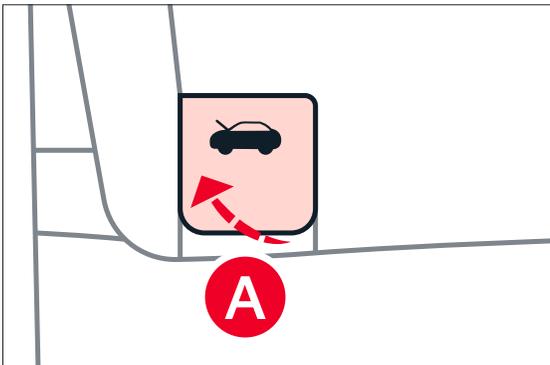

(Located on Driver left side panel)

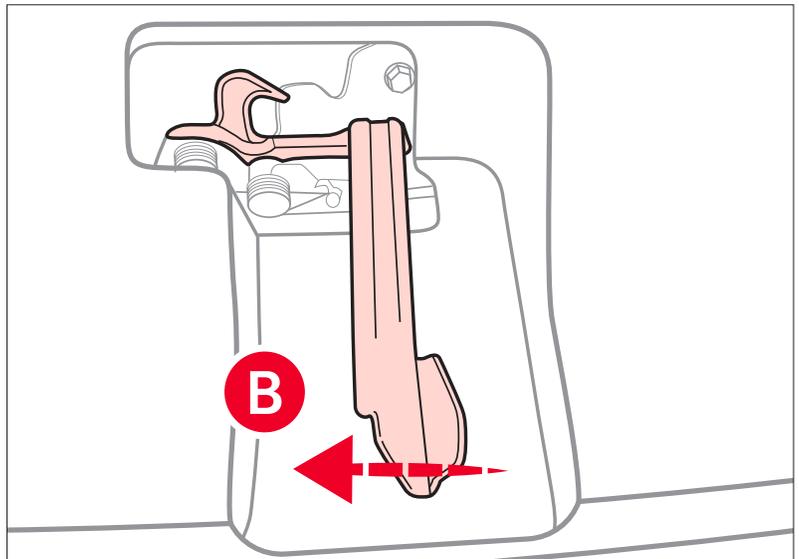

(Located inside of Hood's center)

Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Child-protector Rear Door Lock

The child safety lock is provided to help prevent children from accidentally opening the rear doors from inside the vehicle. To prevent children from opening the rear doors, when in the rear seats, the rear door safety locks should be in the LOCK position **A**. The child safety lock is located on the edge of each rear door. When the child safety lock is in the lock position **A**, the rear door will not open if the inner door handle is pulled.

To lock the child safety lock, insert a key (or screwdriver) into the hole **B** and turn it to the lock position. To unlock the child safety lock, using the same method, turn the key hole away from the LOCK position.

To open the rear door, with the child safety lock ON, pull the outside door handle.

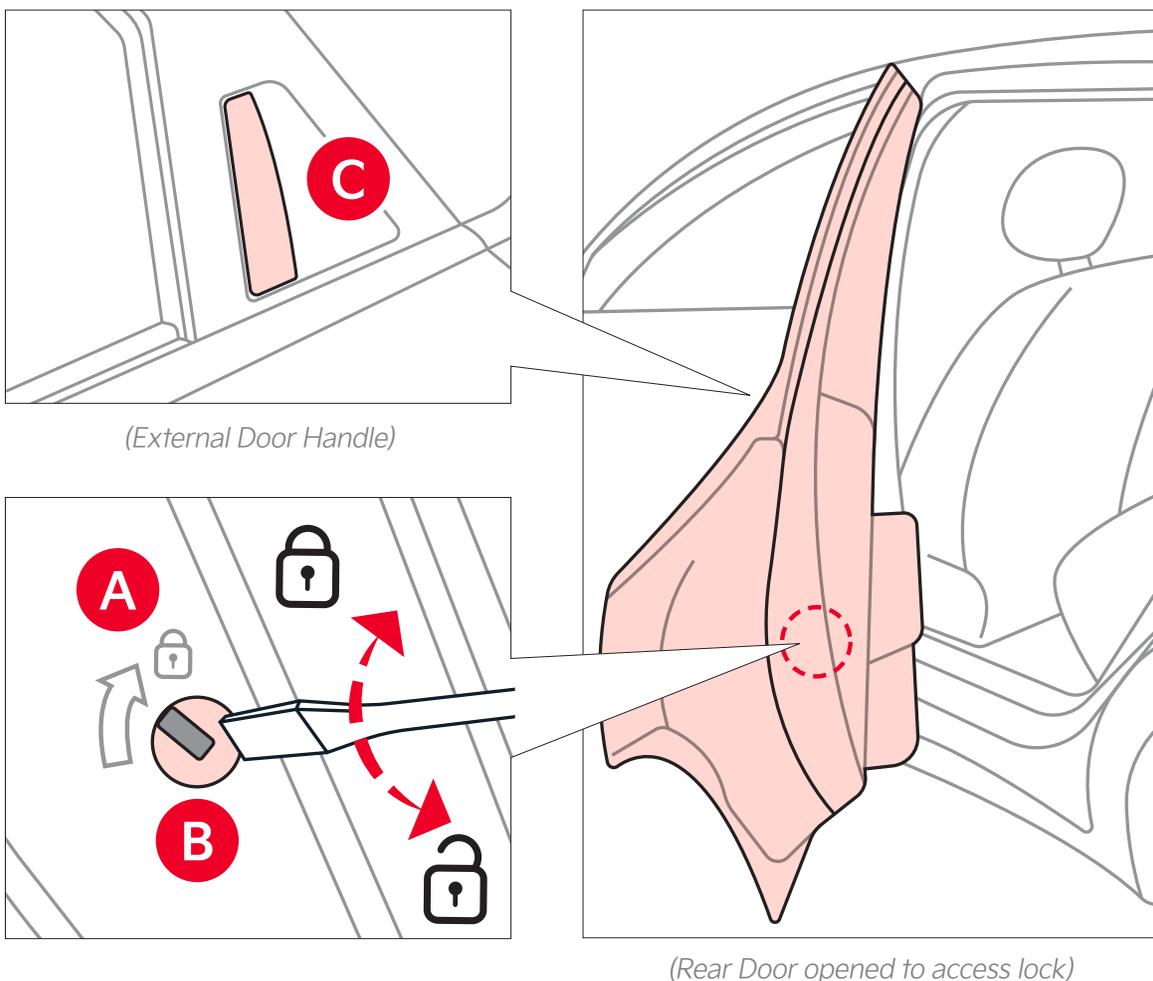

Images are for illustrative purposes only. Refer to section 4 in the Owner's Manual for more information.




Occupant Detection System (ODS)^{†10} / Passenger Airbag Off Indicator^{†15}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly. Depending on the situation and type of accident, the system may:

- Deploy the airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

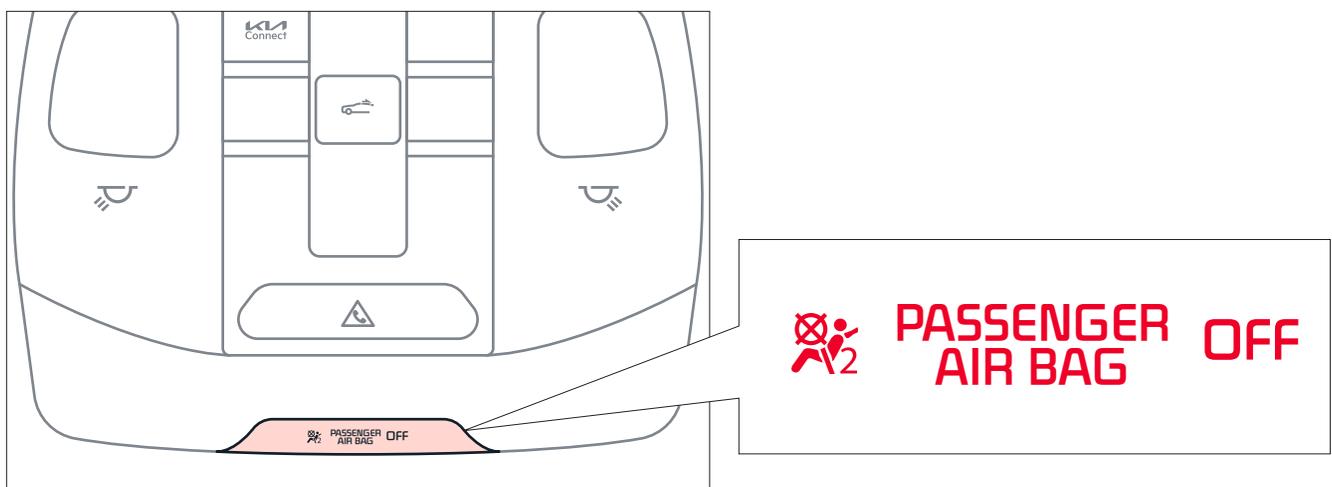

(Located on overhead panel)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 6 in the Owner's Manual for more information.



Seat Belts^{†15}

To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**



LATCH Anchors for the Child Restraint System Video

QUICK TIP



The seat belt warning chime operates for driver's seat only.

Seat Belt Retractor Locks^{†14}

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

REMINDER: For maximum protection, always wear your Seat Belt.

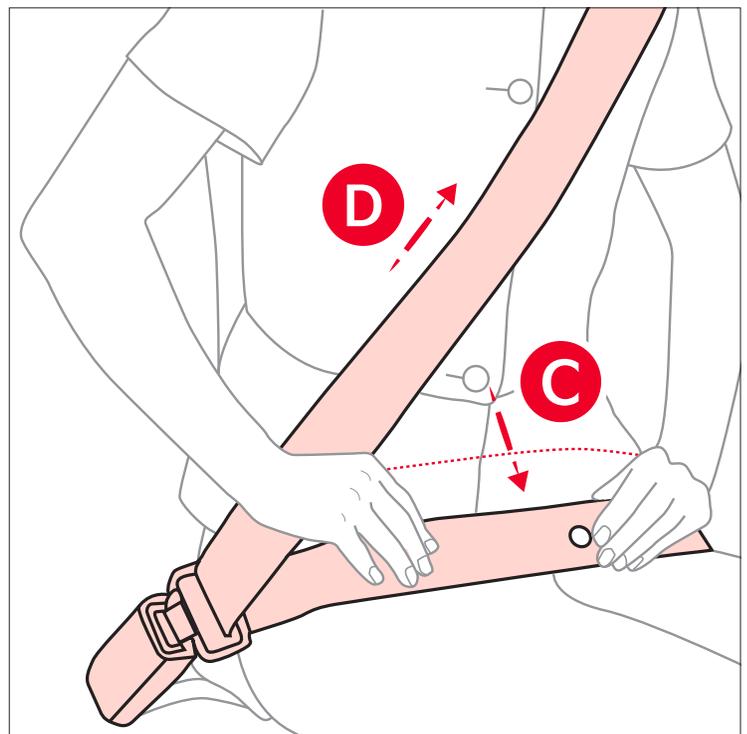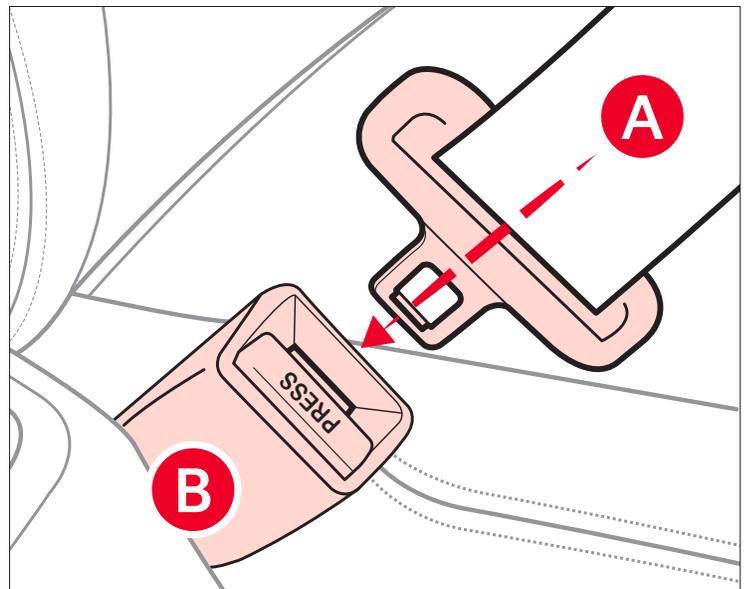

Images are for illustrative purposes only. Refer to section 6 in the Owner's Manual for more information.

 K4	MAINTENANCE INTERVALS (UP TO 80,000 MILES)							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Add fuel additive ^A	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter (Full synthetic oil) ^B	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Air cleaner filter (Engine)	I	I	R	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
12V battery condition	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/ refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose (Turbo)	I		I		I		I	
Driveshaft and boots		I		I		I		I
Fuel tank air filter/fuel tank and cap ^{+C}		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Drive belts ^D						I	I	I
Spark plugs (1.6T-GDi)						R		

P = Perform
R = Replace
I = Inspect



A. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

B. Check the engine oil level and leaks when stopping for fuel or before starting a long trip. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions

C. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

D. The drive belt should be replaced when cracks occur or tension is reduced excessively

Refer to section 11 in the Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect⁺¹ account by logging into your Kia Access⁺² app or your account on <https://owners.kia.com/>

See Kia Connect Activation for setup information on page [69](#).



DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- 2. Kia Access app for smartphone and smartwatch** requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model.
- 3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
- 4. Driver Assist Features - Highway Driving Assist (HDA) 2, Safe Exit Warning (SEW), Blind-spot Collision-Avoidance Assist (BCA), Rear Cross-traffic Collision-Avoidance Assist (RCCA), Forward Collision-Avoidance Assist 2 (FCA2), Lane Keeping Assist (LKA), Lane Following Assist (LFA), Surround View Monitor (SVM), Rear View Monitor (RVM), Blind-spot View Monitor (BVM), Forward/Reverse/Side Parking Distance Warning (PDW), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Leading Vehicle Departure Alert (LVDA), Reverse Parking Collision-Avoidance Assist (PCA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 6. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 7. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 9. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 11. Rear Occupant Alert with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
- 12. Smart Trunk with Auto Open:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- 13. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
- 14. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 15. Seat belts/Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
- 16. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 17. SiriusXM®:** SiriusXM® Satellite Radio, SiriusXM® Traffic and SiriusXM® Travel Link each require a subscription sold separately, or as a package, by SiriusXM® Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM® Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM®. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM® is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM® satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM® Internet Radio service is available throughout our satellite service area and in AK and HI. ©2025 SiriusXM® Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM® Radio Inc.
- 18. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 19. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
- 20. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 21. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

©2025 Kia America, Inc. All rights reserved.
Consumer - Roadside Assistance¹²:
1-800-333-4KIA (4542)