

EV3

Features & Functions Guide



Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



[Getting Started
With Your
New Kia](#)



[How-to Resources:
Videos & Online](#)

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com

Consumer Affairs - Roadside Assistance^{†12}: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | ^{*}IF EQUIPPED



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

www.youtube.com/KiaFeatureVideos

This document is interactive: from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

The video resources should not be accessed while you are operating your Kia vehicle.

Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next three pages, but first, be sure to review the following to better understand some of your Kia’s most used features:

1

[Smart Key with Remote Start / Remote Smart Parking Assist \(RSPA\)*](#)

129

2

[Front Seat Restraint Adjustment / Power Adjustable Driver’s Seat](#)

118

3

[Seat Warmers / Ventilated Seats* . .](#)

116

4

[Windshield/Rear Wipers & Washers](#)

89

5

[Smart Cruise Control \(SCC\) / Navigation-based SCC*.](#)

59

6

[Normal Maintenance Schedule . . .](#)

145

7

[Vehicle Settings - Infotainment System](#)

28

8

[Bluetooth® Wireless Technology. . .](#)

96

9

[Kia Connect Activation - Infotainment System](#)

100

10

[Kia Connect Assistance.](#)

101

11

[Kia Access App Download](#)

102

12

[Kia Access App Features Guide . .](#)

103

13

[Kia Connect Infotainment System with Navigation*.](#)

104

14

[Android Auto™ Setup](#)

92

15

[Apple CarPlay® Setup.](#)

94



[Getting Started With Your New Kia](#)



[Your New Kia Important Care Tips](#)



[Vehicle Cameras Important Tips](#)



[Navigation System Tips](#)



[Digital Features & Services](#)



[How-to Resources: Videos & Online](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

*IF EQUIPPED

Table Of Contents

<u>WELCOME TO THE KIA FAMILY!</u>	<u>02</u>
<u>VIDEOS & NAVIGATION</u>	<u>03</u>
<u>GETTING STARTED</u>	<u>04</u>
INSTRUMENT CLUSTER	
<u>Instrument Cluster Overview</u>	<u>08</u>
<u>Distance to Empty (DTE) / Range</u>	<u>09</u>
<u>Indicators & Warning Lights</u>	<u>11</u>
<u>Electric Vehicle (EV) Indicators</u>	<u>12</u>
<u>Energy Consumption</u>	<u>14</u>
<u>Charge Warning Messages on Instrument Cluster LCD</u>	<u>15</u>
<u>Tire Pressure Monitoring System (TPMS)</u>	<u>20</u>
<u>Drive Mode Integrated Control System</u>	<u>22</u>
<u>All Wheel Drive (AWD)</u>	<u>23</u>
<u>Instrument Cluster LCD Modes</u>	<u>24</u>
VEHICLE SETTINGS	
<u>Trip Modes / Utility Information View</u>	<u>25</u>
<u>Head-Up Display (HUD)* - 12" Display</u>	<u>26</u>
<u>Vehicle Settings - Infotainment System</u>	<u>28</u>
<u>EV Power Button</u>	<u>30</u>
ELECTRIC VEHICLE (EV) FEATURES	
<u>Charging Connector</u>	<u>32</u>
<u>Scheduled Charging</u>	<u>33</u>
<u>Charging Your EV</u>	<u>34</u>
<u>EV Charge Transfer / Vehicle to Load (V2L) / 115V Inverter</u>	<u>37</u>
<u>EV Mode - Infotainment System</u>	<u>39</u>
<u>Regenerative Braking</u>	<u>41</u>
ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)	
<u>Forward Collision-Avoidance Assist 2 (FCA2)*</u>	<u>44</u>
<u>Blind-spot Collision-Avoidance Assist (BCA)</u>	<u>48</u>
<u>Lane Keeping Assist (LKA)</u>	<u>50</u>
<u>Blind-spot View Monitor (BVM)*</u>	<u>53</u>
<u>Safe Exit Warning (SEW)</u>	<u>54</u>
<u>Driver Attention Warning (DAW)</u>	<u>55</u>
<u>Leading Vehicle Departure Alert (LVDA)</u>	<u>56</u>
<u>Lane Following Assist 2 (LFA2)</u>	<u>57</u>
<u>Smart Cruise Control (SCC)</u>	<u>59</u>
<u>Navigation-based Smart Cruise Control (NSCC)</u>	<u>63</u>
<u>Highway Driving Assist 2 (HDA2)*</u>	<u>64</u>
<u>Surround View Monitor (SVM)*</u>	<u>66</u>
<u>Remote Smart Parking Assist (RSPA)*</u>	<u>68</u>
<u>Rear View Monitor (RVM)</u>	<u>71</u>
<u>Rear Cross-traffic Collision-Avoidance Assist (RCCA)</u>	<u>73</u>
<u>Reverse Parking Collision-Avoidance Assist (PCA)*</u>	<u>75</u>
<u>Forward/Reverse/Side* Parking Distance Warning (PDW)</u>	<u>76</u>
<u>Intelligent Speed Limit Assist (ISLA)</u>	<u>77</u>

Continued on next page

Table Of Contents

Continued from previous page

DRIVER’S PANEL

Instrument Cluster Illumination Control	79
Electronic Stability Control (ESC)	79
Hill-start Assist Control (HAC)	80
Power Windows, Window Lock & Central Door Lock	81
Automatic Door Lock/Unlock	82
Power/Heated Outside Mirrors	82
Power Folding Outside Mirrors*	83

STEERING WHEEL CONTROLS

EV Gear Shift	84
Heated Steering Wheel*	85
Headlights & High Beams	86
High Beam Assist (HBA)	87
Turn Signals	88
Windshield/Rear Wipers & Washers	89
Lifting Wipers (Wiper Service Mode)	90
Manual Tilt/Telescoping Steering Wheel	91

INFOTAINMENT SYSTEM

Android Auto™ Setup	92
Apple CarPlay® Setup	94
Bluetooth® Wireless Technology	96
Steering Wheel Audio Controls	99
Kia Connect Activation - Infotainment System	100
Kia Connect Assistance*	101
Kia Access App Download	102
Kia Access App Features Guide	103
Kia Connect Infotainment System with Navigation*	104
Digital Clock - Infotainment System	106

CENTER PANEL

USB-C Ports & Power Outlets	107
Wireless Smartphone Charging System	108
Automatic Climate Control System	110
Electronic Parking Brake (EPB)	114
Auto Hold	115

SEATING

Seat Warmers / Ventilated Seats*	116
Infotainment System Seats Settings*	117
Driver Position Memory System*	117
Front Seat Headrest Adjustment*	118
Power Adjustable Driver’s Seat*	119
Relaxation Comfort Seats*	120
Folding Rear Seats	121
Rear Occupant Alert (ROA) with Door Monitoring	122

Continued on next page

*IF EQUIPPED

Table Of Contents

[Continued from previous page](#)

OTHER KEY FEATURES
[HomeLink® with Electrochromic Rearview Mirror*](#) [123](#)
[Front Trunk](#). [126](#)
[Sun Visor](#) [126](#)
[Exterior Flush Door Handle Operation](#) [127](#)
[Smart Key with Remote Start / Remote Smart Parking Assist \(RSPA\)*](#) [129](#)
[Digital Key 2](#) [131](#)
[Smart Power Liftgate*](#). [135](#)
[Map/Room Lamps](#) [138](#)
[Sunroof Operation*](#). [140](#)
[Tire Mobility Kit](#) [142](#)

SAFETY FEATURES
[Occupant Detection System \(ODS\) / Passenger Airbag Off Indicator](#). [143](#)
[Seat Belts](#). [144](#)

[NORMAL MAINTENANCE SCHEDULE](#) [145](#)

[LEGAL DISCLAIMERS](#) [146](#)

*IF EQUIPPED



INSTRUMENT CLUSTER

Instrument Cluster Overview

 
- A** POWER (PWR) Gauge - Energy consumption rate
- B** CHARGE (CHG) Gauge - Charge status of the regenerative brakes
- C** Battery State of Charge (SOC) Gauge
- D** Speedometer
- E** Distance to Empty / Range
- F** Gear indicator
- G** Odometer
- H** Regenerative braking level indicator
- I** Warning and indicator lights
- J** LCD Display



[Panoramic Display Overview](#)



[Instrument Cluster LCD](#)

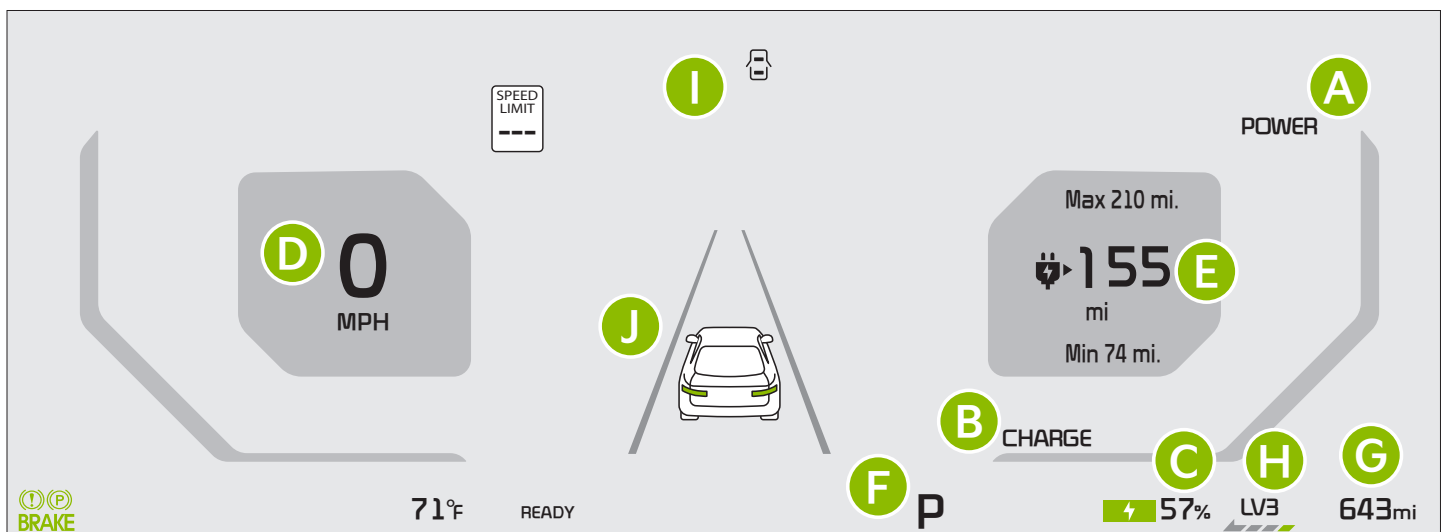


Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

Illustration(s) are for demonstration purposes only. Some indicators and warning lights may not appear in illustrations. On the vehicle, they may appear in the LCD.



Distance to Empty (DTE) / Range

 Distance to Empty (DTE) or Range **A** is the estimated distance an EV can be driven with the remaining electric energy until the battery reaches zero. Min **B** is the Distance to empty with high energy consumption. Max **C** is the Distance to empty with low energy consumption. DTE can vary depending on the selected drive mode, current driving conditions (outside temperature, rain, snow, wind, road surfaces), traffic, driving patterns, air conditioner, cargo weight, heater use, and other factors.

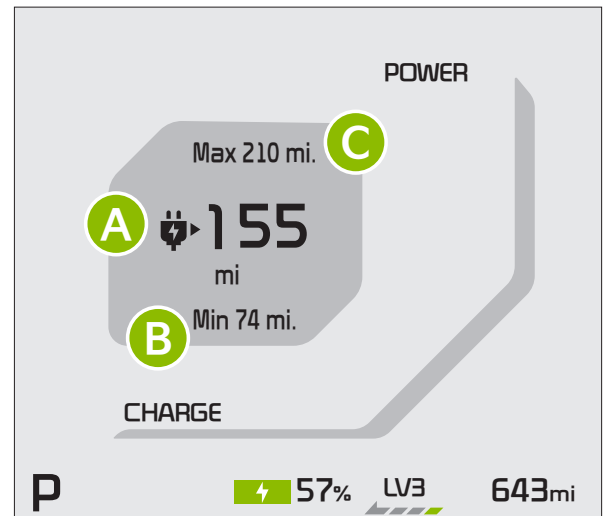

QUICK TIPS

- When decelerating or driving downhill, regenerative braking charges the high voltage battery which decreases energy loss and increases the Distance to Empty or Range
- When you set a destination via the on-board navigation system, DTE is calculated based on the route selected. By setting a final destination, DTE accuracy may improve. By knowing the final location, the vehicle can better predict the amount of battery energy it will need to reach that destination
- When operating the climate control, use the DRIVER ONLY function to conserve energy
- In cold weather, use scheduled heating to reduce the amount of energy consumption

REMINDERS:

- If DTE displays “Zero Miles,” you need to charge the vehicle immediately
- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style
- Operating the climate control system may reduce the Distance to Empty

 
[*Continued on next page*](#)

Illustration(s) are for demonstration purposes only.

Distance to Empty (DTE) / Range

[Continued from previous page](#)

- A Range Guide Display:** may help drivers achieve economic driving.
- B Distance to Empty (DTE):** uses the driving history and current battery charge status to analyze DTE
- C Energy Consumption Gauge:** when having reached an energy-saving level it will be visually indicated with a green or range bar:
 - Green:** driving with less energy than usual
 - Orange:** Driving with more energy than usual
- D** Distance to empty using high energy consumption
- E** Distance to empty using low energy consumption

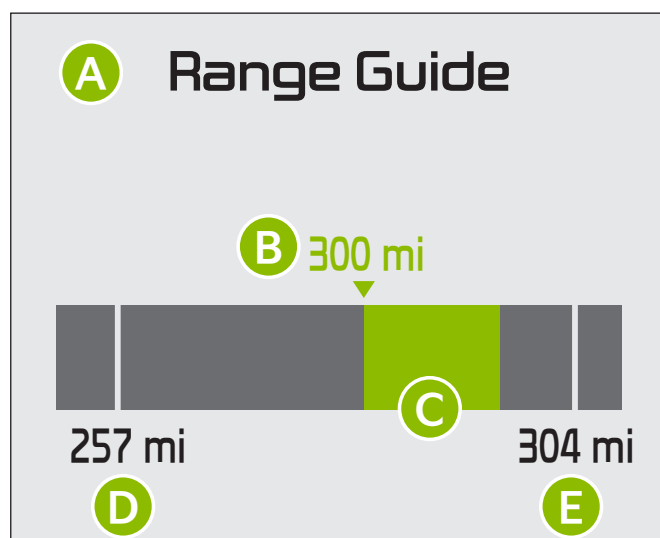

Illustration(s) are for demonstration purposes only.



Indicators & Warning Lights

	High Beam Indicator		Cruise Indicator*
	High Beam Assist Indicator		LED Headlamp Warning Light*
	Light ON Indicator		Electronic Parking Brake (EPB)
	Low Beam Indicator		Forward Safety Warning Light
	AUTO HOLD Indicator		Lane Safety Indicator*
	Master Warning Light		Highway Lane Change Assist Indicator*
	Electronic Brakeforce Distribution (EBD) System Warning Light		EV Service Warning Light
	(Two separate indicators on Instrument Cluster lit at same time)		READY Indicator
	Icy Road Warning Light*		EV Temperature Warning*
	Immobilizer Indicator*		Charging System Warning Light
	Seat Belt Warning Light		Regenerative Brake Warning Light
	Low Tire Pressure Warning Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator*		(Two separate indicators on Instrument Cluster lit at same time)
	Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator		Charging Cable Connection Indicator
	Electronic Stability Control (ESC) OFF Light		Power Down Indicator
	Parking Brake & Brake Fluid Warning Light		High Voltage Battery Low Level Warning Light
	Electronic Power Steering (EPS) Warning Light		12V Battery
	Airbag Warning Light		SNOW Mode Indicator
	All-Wheel Drive (AWD) Warning Light*		ECO Mode Indicator
	Anti-lock Braking System (ABS) Warning Light		SPORT Mode Indicator
			Turn Signal Indicator
			Lane Following Assist Indicator
			Emergency Steering Warning Light*

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD. For more information please refer to section 5 in the Owner's Manual.

*IF EQUIPPED



Electric Vehicle (EV) Indicators

A Battery State of Charge (SOC)

Gauge: The State of Charge gauge displays the high-voltage battery charge status



[EV Energy Consumption](#)

B Power / Charge Gauge: The Power/

Charge gauge provides information on the energy consumption rate of

the vehicle and the charge status of the regenerative brakes



[Tips for Economical Driving](#)

- **POWER** - Shows the energy consumption rate of the vehicle when driving uphill or accelerating. The more electric energy used, the higher the gauge level
- **CHARGE** - Shows the charging status of the battery when it is being charged by the regenerative brakes. The more electric energy charged, the lower the gauge level

C **Distance to Empty (DTE):** DTE is the estimated distance the vehicle can be driven with the remaining high-voltage battery level. The DTE will vary according to the selected drive mode and Climate Control settings



[Continued on next page](#)

Illustration(s) are for demonstration purposes only.

Electric Vehicle (EV) Indicators

[Continued from previous page](#)

READY

Ready Indicator - Illuminates when the vehicle is ready to drive.

When the ready indicator light is blinking, the vehicle has detected a possible malfunction. Have an authorized Kia dealer address the concern as soon as possible.



EV Service Indicator - Illuminates when there is a malfunction related to the electric vehicle control system. Have an authorized Kia dealer address the concern as soon as possible.



Power Down Indicator - Illuminates when the vehicle's speed and performance are limited for the safety of the electric vehicle.



Charging Indicator - Shows the charging status of the high-voltage battery. When charging, the green indicator turns on. The indicator turns off when not charging.



High Voltage Battery Low Level Warning Light - Illuminates when the high-voltage battery charge level is insufficient.



BRAKE

Regenerative Brake Warning Lights - Both lights illuminate when the regenerative brake system is not functioning correctly.

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only.

Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.



Energy Consumption

There are several factors that contribute to your electric vehicle's energy consumption, including maintenance of your vehicle, driving style, weather, durability of the battery and environmental conditions.



[EV Energy Consumption](#)

Below are tips to help reduce energy consumption:

- Use Scheduled Climate settings to preheat or precool the vehicle before driving
- When plugged in, keep your vehicle in good condition with regular maintenance
- Don't rest your foot (or ride) on the brake pedal
- Use the climate control system less often and use the Driver Only setting, when possible
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Ensure wheels are aligned correctly
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information, refer to section 9 of the Owner's Manual.



Charge Warning Messages on Instrument Cluster LCD

Low EV Battery



Low Battery Warning - When the high-voltage battery level drops to 20% or less, this warning message appears on the Instrument Cluster and the warning indicator light illuminates. Charge the high-voltage battery immediately.

Charge immediately.
Power limited



Charge immediately. Power limited - When the high-voltage battery level drops to 10% or less, this warning message appears on the Instrument Cluster, the warning indicator light illuminates and the power down warning light turns on simultaneously.

The vehicle's power will be reduced to minimize the energy consumption of the high-voltage battery. Charge the high-voltage battery immediately.

Power limited



Power limited - This warning message appears when the vehicle's power is limited for the following reasons:

1. When the high-voltage battery is below a certain level, or voltage is decreasing
2. When the temperature of the motor or high-voltage battery is too high or too low
3. When the hood is open

[*Continued on next page*](#)

These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.

Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Power limited
due to low EV battery
temperature.
Charge battery

Power limited due to low EV battery temperature. Charge battery - When the outside temperature is low and you turn the vehicle on or off, this warning message may appear on the Instrument Cluster. If the battery level is low and the vehicle is parked outside for a long time, vehicle power may be limited. Charging the battery before driving helps increase power.

Stop safely and
check power supply



Stop safely and check power supply - When there is a failure in the 12V power supply system, this warning message appears on the Instrument Cluster. Park the vehicle in a safe location and have it towed to the nearest Kia dealer for inspection.

Battery Overheated!
Stop safely



Battery Overheated! Stop Safely - When the battery temperature is too high, this warning message appears on the Instrument Cluster. Stop the vehicle and press the EV button to OFF to decrease battery temperature.

REMINDERS:

- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

[Continued on next page](#)

These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner’s Manual for more information.



Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Unplug vehicle to start



Unplug vehicle to start - This warning will appear when attempting to start the vehicle with the connector plugged into the charger. Remove the charging connector and then start the vehicle.

Check regenerative brakes



Check regenerative brakes - Displays when the regenerative brake system does not work properly. In this case, have your vehicle inspected by an authorized Kia dealer.

Charging door open



Charging door open - This warning appears when you drive the vehicle with the charging door open. Close the charging door and then start driving.

Check virtual engine sound system



Check virtual engine sound system - Displays when there is a problem with the Virtual Engine Sound System. Have your vehicle inspected by an authorized Kia dealer.

[Continued on next page](#)

Not all warnings and messages are displayed. These illustrations are for demonstration purposes only. Some messages may appear differently. See section 7 in the Owner's Manual for more information.



Charge Warning Messages on Instrument Cluster LCD

[Continued from previous page](#)

Check Active Air Flap system



Check Active Air Flap system -

Displays when:

1. The actuator flap or the actuator air flap controller has malfunctioned
2. The air flap does not open

When you fix the above conditions, the warning message disappears.

Refill coolant



Refill coolant - Displays when the coolant is low. Stop driving and check the coolant level as driving with low coolant for a long time can cause serious damage to the vehicle's electrical equipment.

Charging interrupted.
Please check the AC
charger.

Charging interrupted.
Please check the DC
charger.

Charging interrupted. Check the AC/DC

charger. - When there is a problem with the external AC or DC charger, when the AC charger stops charging or when the charging cable is damaged, this message will appear. Check whether there is a problem with the charger or cable. If no problem is found, see an authorized Kia dealer for further assistance.

[Continued on next page](#)

Not all warnings and messages are displayed. These illustrations are for demonstration purposes only. Some messages may appear differently. See section 7 in the Owner's Manual for more information.

Charge Warning Messages on Instrument Cluster LCD

[*Continued from previous page*](#)

Charging interrupted.
Please check the cable
connection.



Charging interrupted. Please check the cable connection. - When the charging connector is not correctly connected to the charging inlet or the charging connector lock release button is pressed, this message will appear. If this occurs, separate the charging connector and re-connect it. Check whether there is any problem (external damage, foreign substances, etc.) with the charging connector and charging inlet. If the problem continues, see an authorized Kia dealer for assistance.

REMINDERS:

- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Illustrations are for demonstration purposes only. Some messages may appear differently. See section 1 in the Owner's Manual for more information.



Tire Pressure Monitoring System (TPMS)^{†21}



The TPMS indicator  functions as both a Low Tire Pressure Light and TPMS Malfunction Indicator.

 


[Tire Pressure Monitoring](#)

The indicator will illuminate if it detects one or more tires is significantly under inflated.

The indicator may also illuminate in the following conditions:

- The vehicle has a spare tire installed without TPMS
- The tire pressure drops due to the outside temperature becoming significantly lower

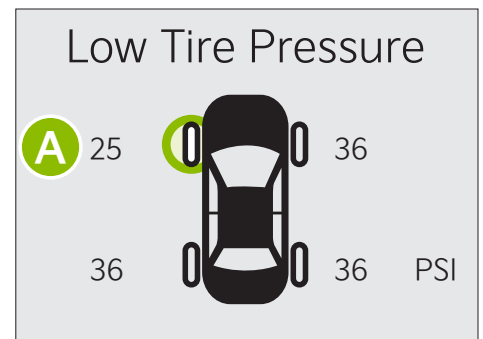

The LCD screen in the Instrument Cluster will display the Low Tire Pressure indicator  showing which tire is underinflated. Inflate the tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate — see dealer for service.

[Continued on next page](#)

These illustrations are for demonstration purposes only.

Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with TPMS system, which may cause the Malfunction Warning Indicator to illuminate.

For more information, refer to section 11 in the Owner's Manual.



Tire Pressure Monitoring System (TPMS)^{†21}

[*Continued from previous page*](#)

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once per month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal EV economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)

For more information, refer to section 11 in the Owner’s Manual.

 


Drive Mode Integrated Control System

There are four distinct driving modes, as well as MY DRIVE* mode. An indicator in the Instrument Cluster will illuminate to show which drive mode you have selected (no indicator will appear for the NORMAL mode). Press the DRIVE MODE button **A** to select the following modes:




[Drive Mode / Tow Mode](#)

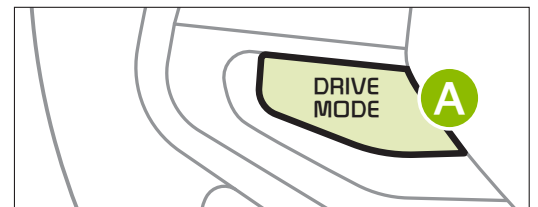

(Button located on left of steering wheel.
Button configuration may vary)

 - **ECO** - This mode can help enhance electric energy efficiency by managing battery usage. Acceleration response may be slightly reduced in this mode. ECO mode automatically changes the FWD/AWD driving mode depending on the road conditions
- **NORMAL** - Balances drivability and efficiency; automatically changes the FWD/AWD driving mode depending on the road conditions
- **SPORT** - This mode provides fast and dynamic driving with steering and motor control. The electric energy efficiency may decrease in this mode
- **MY DRIVE** - In MY DRIVE mode, the driver can select separate modes and combine them on the Infotainment System
- **GT*** - This mode delivers dynamic driving performance by adjusting control logic of driving systems such as steering, motor and suspension
- **SNOW** - Snow mode is used to distribute the vehicle's traction forces and can help prevent wheel slippage when driving on snowy or slippery roads

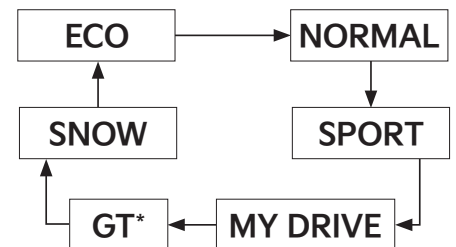

QUICK TIP

To help reduce energy consumption:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure and wheels aligned properly

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. For more information on driving modes, refer to section 9 in the Owner's Manual or contact your local dealership.



All Wheel Drive (AWD)*

The All Wheel Drive (AWD) system can help improve driving performance by enhancing the vehicle's driving force under severe conditions. AWD is designed



[All Wheel Drive
\(AWD\)*](#)

to activate automatically by distributing the vehicle's driving power to all four wheels when the system detects a need for extra traction. In addition, electronic AWD may help improve stability when driving straight and driving performance around curves.

Tips for operating AWD safely:

- When you are in AWD mode, you must drive more slowly, particularly when turning as there is increased risk of rollover
- Hold the steering wheel firmly, especially during off-road driving, and do not make quick steering wheel movements such as sharp lane changes or sudden turns
- Driving on snow, ice, sand or mud: Start off slowly by gently pressing on the accelerator. Use snow tires or tire chains for snow and ice. Maintain a safe distance from the vehicle ahead of you. Avoid speeding, rapid acceleration, sudden braking and sharp turns. The wheels may not operate when stuck in snow, sand or mud. This is to protect the transmission and is not a malfunction
- Driving on hills: When driving up or down a hill, drive as straight as possible and be extremely cautious of vehicle rollover caused by the grade, terrain, water or mud
- Driving through water: Avoid driving in standing water. If you must drive through water, stop your vehicle and then drive below 5 mph. Do not shift while driving in water

For more information on the All Wheel Drive (AWD) system, refer to section 9 in the Owner's Manual.



Instrument Cluster LCD Modes

Press Mode button  **A** to scroll through different Instrument Cluster LCD Modes.

Driving Assist Mode: Displays information for Driver Assistance Systems

Navigation Mode: Displays information related to the navigation system

Utility Information Mode: Displays information related to driving, warnings, etc.



[Instrument Cluster LCD](#)



[Steering Wheel Controls](#)



(Buttons located on left side of Steering Wheel.
Button configuration may vary)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. For more information, refer to section 5 in the Owner's Manual.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.



Trip Modes / Utility Information View

 
 
The Trip Modes or Utility Information Mode is a driver information system that displays information related to range, tire pressure, current trip information, average energy consumption after charging, accumulated trip info after since last reset and energy flow. It appears on the LCD display when the EV button is in the ON position and the Instrument Cluster is in the Utility Information Mode.

To cycle through the Instrument Cluster LCD modes **A**, press the Mode button **B** on the Left side of the Steering Wheel.

When in the Utility Information Mode , press the OK button **C** up/down to cycle through the screens. When displaying trip information screens, press and hold the OK button **C** to reset to zero.

REMINDERS:

- Appearance of Utility Information display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

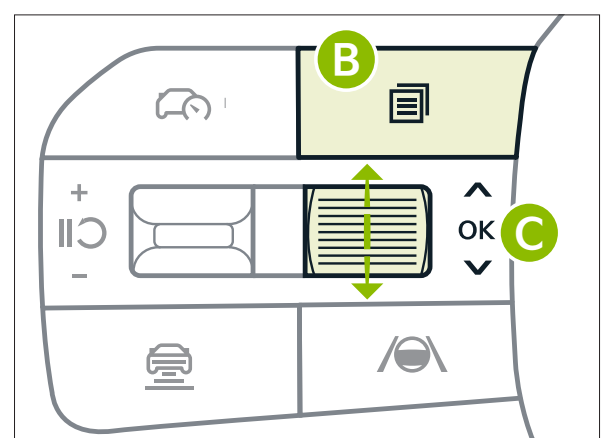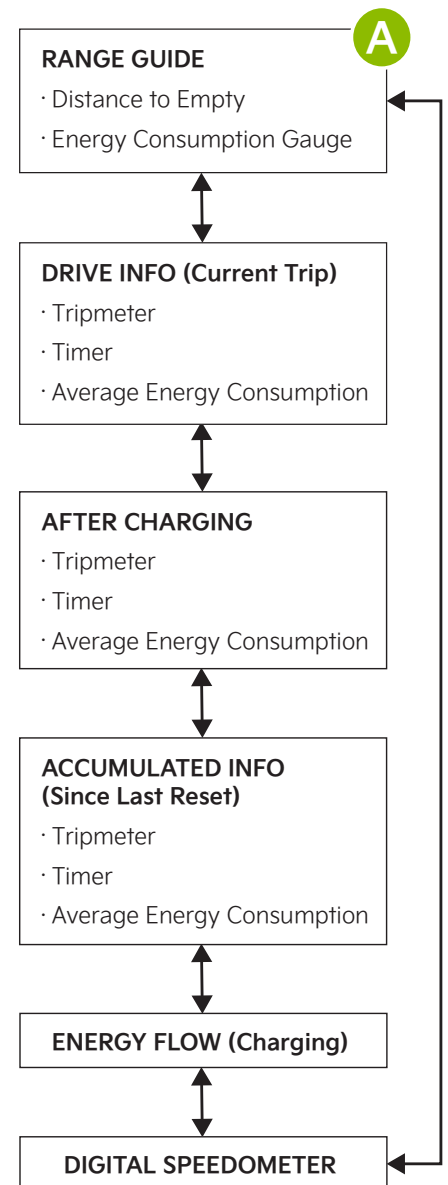

(Buttons located on left side of Steering Wheel.
Button configuration may vary)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. For more information, refer to section 5 in the Owner's Manual.



Head-Up Display (HUD) - 12" Display^{*†4,8}

Augmented Reality Head-Up Display (HUD) is a semi-transparent display that is designed to project certain information from the Instrument Cluster and Navigation System onto the windshield glass.

When in augmented reality mode, HUD shows:

- Turn By Turn (TBT) navigation information
- Traffic information
- Speedometer information
- Surrounding vehicle information*
- SCC set speed information
- SCC vehicle distance information
- Blind-spot Safety information
- Lane Safety information
- Highway Driving Assist information*
- Highway Auto Speed Change information*
- Lane Following Assist information*
- Augmented Reality Mode information for TBT, Lane Safety, Front Vehicle indicator*, Leading Vehicle Departure Alert, Highway Lane Change



[Head-Up Display \(HUD\) - Apple CarPlay / Android Auto](#)



[EV Features & Settings](#)

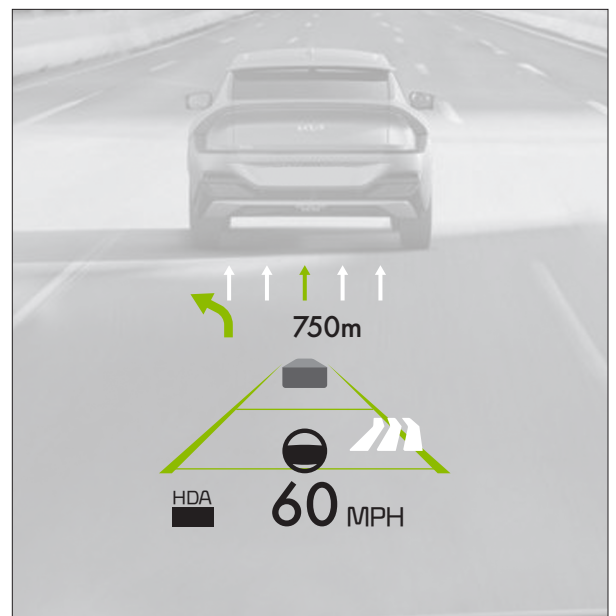 


Image is for illustrative purposes only and may not reflect actual features or operation.

[Continued on next page](#)

These illustrations are for demonstration purposes only. Some messages may appear differently. See your Owner's Manual for more information.

When engaged, HUD is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road. See section 5 in the Owner's Manual for more information about HUD and other relevant sections for additional vehicle features.



Head-Up Display (HUD) - 12" Display^{*†4,8}

[Continued from previous page](#)

Head-Up Display (HUD) Settings

Drivers can adjust the HUD settings from the Vehicle Settings. Press the **SETUP** button on the Infotainment System. Select **VEHICLE**, then HEAD-UP DISPLAY. HUD settings include:

- Display height
- Rotation
- Brightness
- Content selection

REMINDERS:

- The HUD image on the windshield glass may not be visible in these cases:
 - The driver seating position is outside the HUD viewing area
 - The driver is wearing polarized sunglasses
 - There is an object covering the HUD
 - The driver is driving on a wet road
 - There is excessive lighting inside or outside the vehicle
 - Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
 - If Turn By Turn navigation information is selected as HUD content, TBT information will not be displayed on the LCD



[Head-Up Display \(HUD\) - Apple CarPlay / Android Auto](#)



[EV Features & Settings](#)

These illustrations are for demonstration purposes only. Some messages may appear differently.

When engaged, HUD is a supplemental system. Do not solely rely on the system. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution. See section 5 in the Owner's Manual for more information.



Vehicle Settings - Infotainment System

 
To enter Vehicle Settings, press the **SETUP** key or the onscreen **SETUP** button, when the vehicle is at a standstill, Gear Shift in Park, and while the EV button is in the ON mode. Then select **VEHICLE** to enter the Vehicle Settings menu.



[EV Features & Settings](#)



[Vehicle Settings](#)

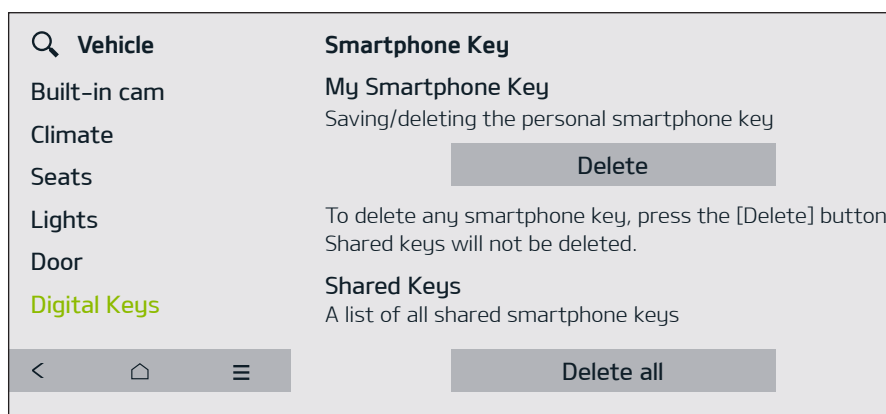

Driver Assistance*:

- Warning Method
- Driving Convenience
- Driving Safety
- Speed Limit
- Driver Attention Warning
- Parking Safety

Drive Mode:

- MY DRIVE MODE
- Brake Mode
- Driving Mode Change Alert
- Climate Control ECO Mode

Active Sound Design*:

- Largest, Moderate, Smallest, Change/Off

Climate*:

- Recirculate Air
- Automatic Ventilation
- Defog/Defrost Options
- Climate Features
- Link to Climate Settings for Auto-Adjustment

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. See your Owner's Manual for more information.



Vehicle Settings - Infotainment System

[*Continued from previous page*](#)

Seats:

- Link to Climate Settings for Auto-Adjustment*
- Warmer/Ventilation Features*
- Seating Easy Access
- Seat Position Change Alert

Lights:

- Ambient Lighting
- One-Touch Turn Signal
- Welcome Mirror/Light
- Headlight Delay
- High Beam Assist
- Interior Lights Always On

Door:

- Automatically Lock
- Automatically Unlock
- 2-Press Remote Unlock
- Unlock on Approach or Touch
- Power Liftgate
- Power Liftgate Opening Speed
- Power Liftgate Opening Height
- Smart Liftgate
- Open Windows Remotely

Digital Keys*:

- Smartphone Key
- NFC Card Key
- Digital Key Information

Convenience*:

- Rear Occupant Alert
- Service Interval
- Wireless Charging System for Mobile Devices
- Mobile Phone Wireless Charging Indicator
- Auto Rear Wiper (in R)

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving. Actual vehicle settings may vary by model. For more information, refer to the Car Infotainment System Quick Reference Guide.



EV Power Button^{†10}

To start the vehicle

(**DRIVE READY** mode):

1. Depress the brake pedal
2. Press the EV Power button **A**
while Gear Shift is in Park **B**



 
[EV Power & Gear Shift Button](#)

To turn the vehicle power OFF, press the **P** (Park) button, press on the brake pedal and press the EV Power button.

To use the EV Power button, you must have the Smart Key in the vehicle.

EV Power Button modes:

- **OFF** - The vehicle is off
- **ACCESSORY** - The vehicle is in accessory position. Limited functions are available (press once without pressing the brake pedal)
- **POWER ON** - Some vehicle functions are on. Warning lights can be checked (press a second time, without pressing the brake pedal)
- **DRIVE READY** - The READY indicator will illuminate and the vehicle is ready to drive

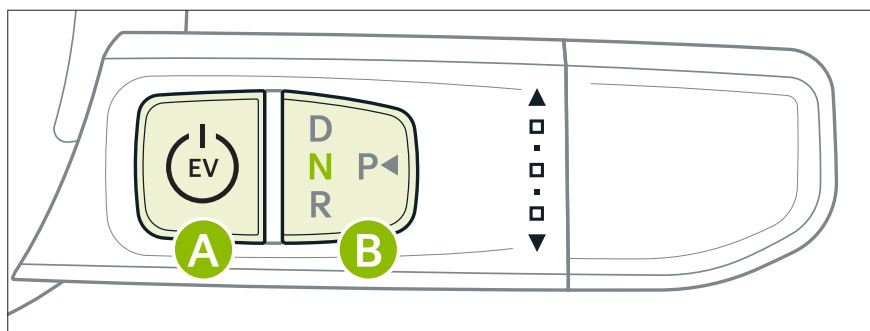

(Buttons located on left side of Steering Wheel.
Button configuration may vary)

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

For more information, refer to section 9 in the Owner's Manual.



EV Power Button^{†10}

[Continued from previous page](#)

QUICK TIPS

- To use electrical accessories:
 - **Accessory mode**
 - When in the OFF position and without depressing the brake pedal, press the EV Power button once
 - **POWER ON mode**
 - When already in the accessory mode and without depressing the brake pedal, press the EV Power button again
 - When in the OFF position (not illuminated) and without depressing the brake pedal, press the EV Power button twice

REMINDERS:

- **In an emergency situation while the vehicle is in motion, you are able to turn the vehicle off and to the ACC position by pressing the EV Power button for more than 2 seconds or 3 times consecutively within 3 seconds**
- If the battery is weak or the smart key is not working properly, check that the shift lever is in the **P** (Park) position. Place the Smart Key on the key recognition area located on the center console, and then press the EV Power button for about 10 seconds in the accessory state. With the vehicle in the off position, restart the vehicle
- Do not turn the vehicle off by pushing the EV Power button while the vehicle is in motion. If the vehicle has been turned off, the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

Refer to section 9 in the Owner's Manual for more information.



Charging Connector

The Charging Connector can be set to be locked or unlocked while in the charging inlet and charging. To select the locking mode, go to Vehicle Settings in the Infotainment System. Press the **SETUP** key on the Infotainment System or the **SETUP** button on the screen. Select **VEHICLE**, then ECO VEHICLE. Select CHARGING CONNECTOR LOCK.

 


[EV Charging,
Charger Door,
Lock Release,
Instant Charging](#)




[EV Charging
Settings](#)


Unlock charging connector in emergency - If the charging cable does not detach due to battery discharge and failure of the electric wires, open the hood **A** and slightly pull the emergency release hatch as shown below **B**. The charging connector will then unlock.

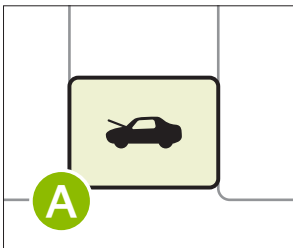

 (Hood lever located on lower panel to the left of the steering wheel.)

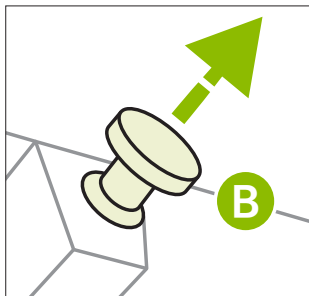

 (Button located on passenger side inside front trunk.)

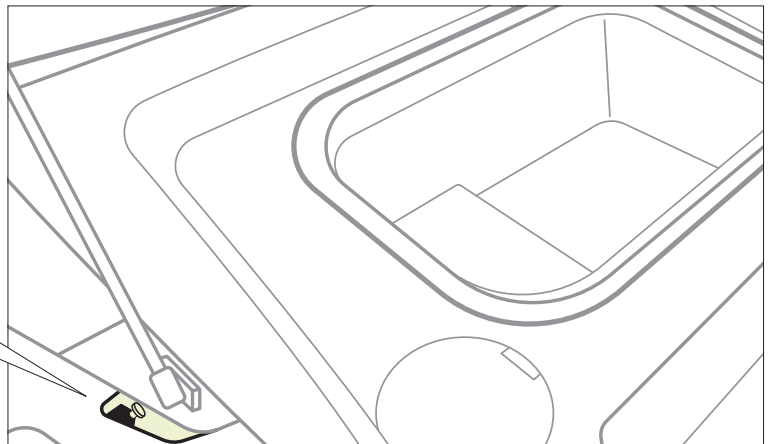

QUICK TIPS

- If in lock mode & the doors are unlocked, the charging connector unlocks. If the charging cable is not disconnected within 15 seconds, the connector will automatically lock again
- If the charging connector is unlocked but all the doors are locked, the connector will automatically lock
- If charging does not work, disconnect the connector and try charging again

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Scheduled Charging

Charging times can be set through the Infotainment System EV Settings. Select EV, AC CHARGER then SCHEDULED CHARGING. You can also use the Scheduled Charging* feature on the Kia Access^{†2} app.

The Kia Access^{†2} app can help you find the nearest charging station, and also displays charging status and Scheduled Charging information. On your smartphone, go to an app store or marketplace to download the Kia Connect app.

 
Deactivate Scheduled Charging - Press and hold the Immediate charge button **A** for 2 seconds to disable the scheduled charging feature when immediate charging is required. Scheduled charging can also be deactivated in the Vehicle Settings in the Infotainment System or Kia Access^{†2} app.



[EV Charging, Charger Door, Lock Release, Instant Charging](#)



[EV Charging Settings](#)

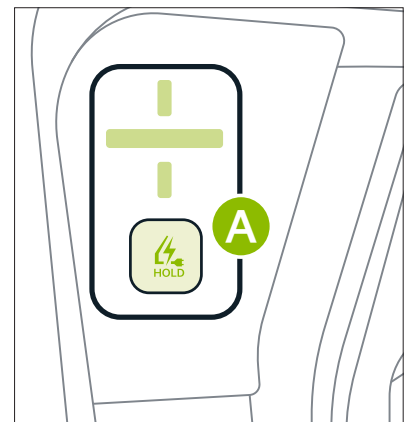

(Button located inside charge port panel. Button configuration may vary)

QUICK TIP

- When you press the Deactivate Scheduled Charging button the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting in the Infotainment System's Vehicle Settings or the Kia Connect smartphone app.

REMINDERS:

- When Scheduled Charging is set and the charger is plugged in, charging of the electric vehicle will not begin until the time and date set
- Scheduled charging may not be available at public chargers

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, see section 7 in the Owner's Manual.



Charging Your EV

AC Charging or “Normal” / Level 2 Charging

An AC Charger or Level 2 Charger is the recommended charging system for your EV. This type of charger uses 220-230 volts of electricity and takes approximately 3-8 hours for a full charge, depending on the battery type - standard or extended.

This charger may be able to be installed at your home by a qualified electrician or can be found at a public charging station.



[EV Charging Settings](#)



[EV Charging - Voice Notifications](#)

REMINDER:

- The shape of the charger and how to use the charger may be different for each manufacturer. Please see section 7 in the Owner’s Manual for more information.

DC Charging or “Fast” / “Ultrafast” / Level 3 Charging

A DC Charger or “Fast” / “Ultrafast” / Level 3 Charger is usually found at public charging stations. When the standard vehicle battery is at about 10% charge, the “Fast” DC Charger (50 kW) may charge the EV to about 80% in approximately 55 minutes. The “Ultrafast” DC Charger (350kW) may charge the EV to 80% in approximately 29-31 minutes.

REMINDER:

- Kia does not recommend primarily charging with a DC charger because it can reduce the lifespan of the battery.

QUICK TIP

An AC Charger or Level 2 Charger is recommended for regular charging of the vehicle.

[Continued on next page](#)

For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 7 in the Owner’s Manual.

 


Charging Your EV


[Continued from previous page](#)

To charge your EV:


- Press the “P” button **A** on the Gear Shift to place the transmission in Park. Engage the parking brake by pulling up the Electronic Parking Brake (EPB) button **B** and then power off the vehicle
- Ensure scheduled charging is not set on the Infotainment System or the Kia Access^{†2} App. You can also press the Immediate Charge button **C** near the charge port
- To open the charge port door, press the left edge of the charge port door **D**
- Hold the charging connector handle **E** and connect it to the vehicle’s charging inlet **F** by pushing the connector until you hear a clicking sound
- Charging begins automatically (ensure the charge indicator light  is illuminated red on your Instrument Cluster, indicating the vehicle is charging, and ensure scheduled charging is not set)

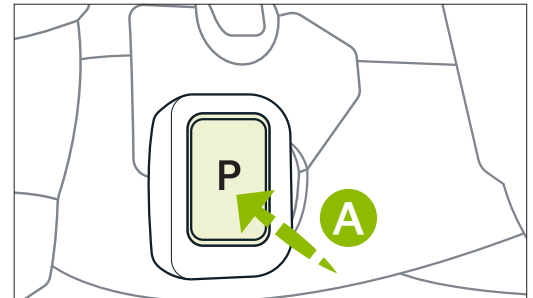


(Located on end of Gear Stalk)

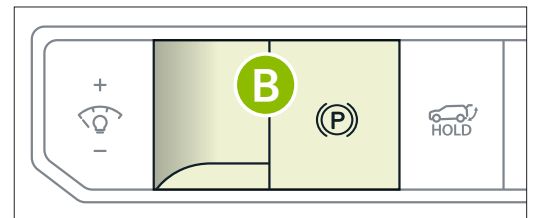 

 (Button on driver's panel to the left of steering wheel)

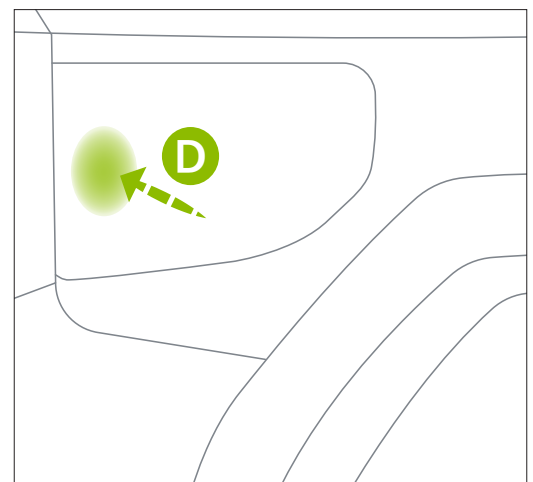

 (Charge door located at right rear of vehicle)

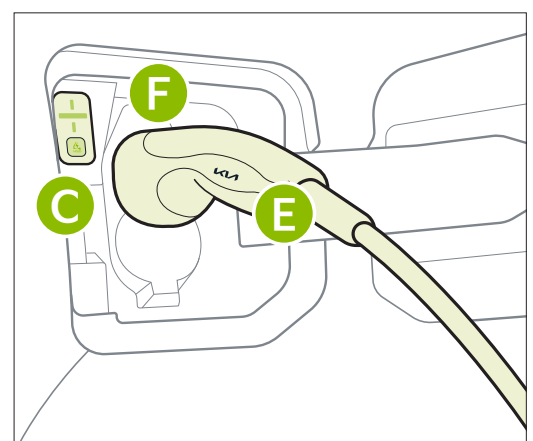

(Charge port located at right front of vehicle)

[Continued on next page](#)

 
Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Charging Your EV

[Continued from previous page](#)

Checking the Charging Status

The charging status can be checked by viewing the charging status indicator **A** next to the charging inlet or on the dash panel, in the Instrument Cluster, or by using the Kia Access⁺2 App. The lights will progressively become lit as the vehicle approaches a full charge.

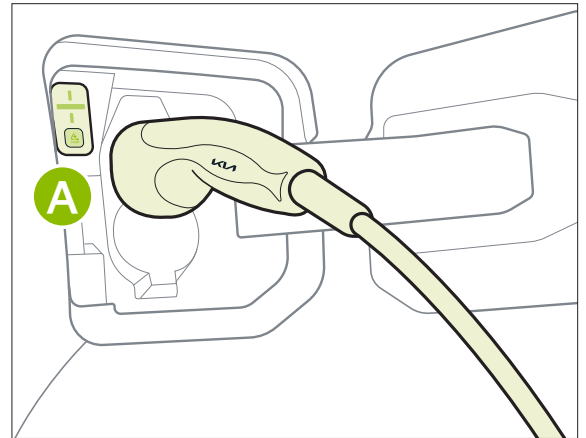

(Trickle / normal charge shown)

Images are for illustrative purposes only and may not reflect actual feature or operation.

For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see section 7 of the Owner's Manual.

 
 


EV Charge Transfer / Vehicle to Load (V2L) / 115V Inverter*


EV Charge Transfer / Vehicle to Load (V2L) allows you to use the vehicle's high voltage battery to power certain electrical devices like home appliances or other electronic devices. V2L can also be used to charge items like electric bikes or another electric vehicle.

If equipped, there are two ports in the interior and exterior. The interior port **A** is located at the bottom of the second row seat and the other is the charging port for your EV. If your EV's high-voltage battery discharges to the limit set, the system will automatically stop supply to the ports. Set your EV's battery discharge limit in the Infotainment System's Settings. Press the EV button onscreen. Select ELECTRICITY USAGE (V2L) SETTINGS **B**.

Interior Port - The EV button needs to be on to operate the port. Use the Smart Key fob mechanical key to unlock the power outlet cover. Check the indicators on the port to ensure power is on.

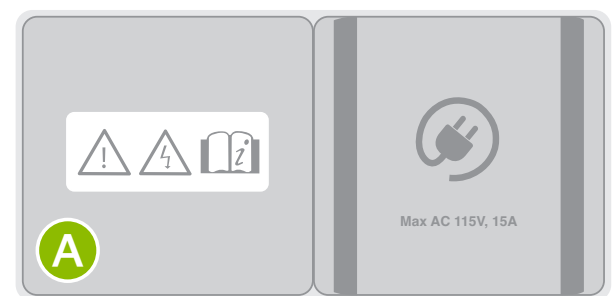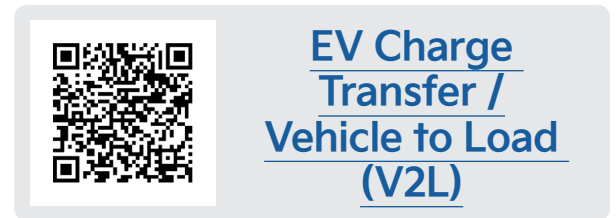


Closed

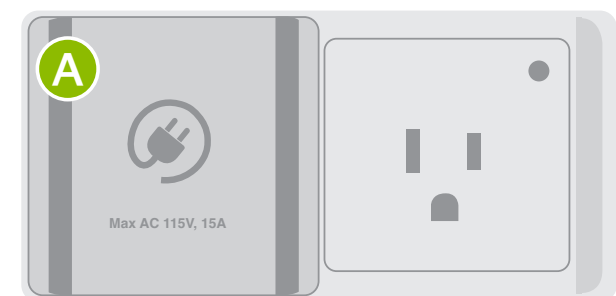 

Open

 [Continued on next page](#)

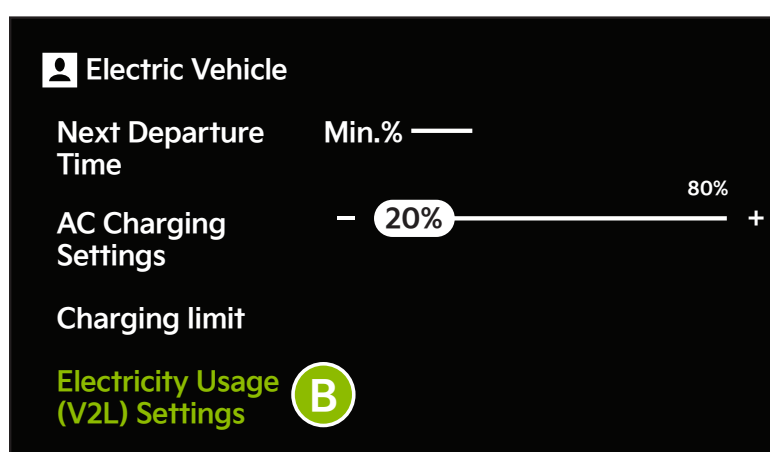

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



EV Charge Transfer / Vehicle to Load (V2L) / 115V Inverter*

[Continued from previous page](#)

Exterior Port - Open the cover of the V2L connector and connect your appliance or electronic device. Connect the V2L connector to the charging inlet on the EV, and press the button on the connector.

 
REMINDER: V2L connector is not included with the vehicle. See your nearest Kia dealer for more information.



[EV Charge Transfer / Vehicle to Load \(V2L\)](#)



[EV Utility Mode](#)

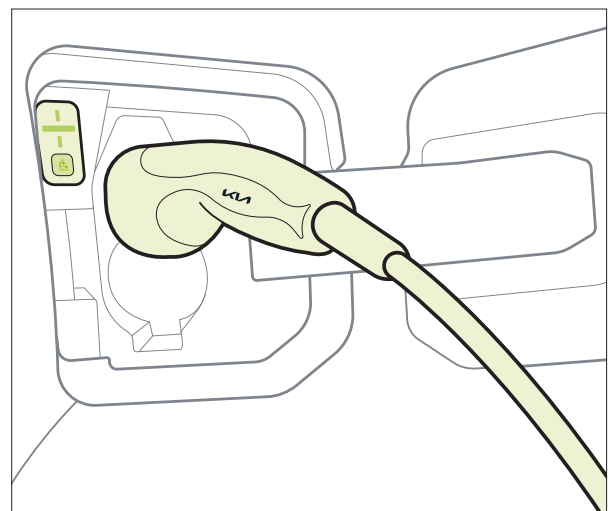

(Trickle / normal charge shown)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



EV Mode - Infotainment System

 
EV Mode on the Infotainment System screen allows you to navigate several menus that include information on available range, energy information, next departure setting, charging and climate info, vehicle-to-load (V2L) setting, nearby charging stations and EV settings. To go to EV Mode, swipe the Home screen to see the menu buttons. Press EV Menu to enter EV Mode.



[EV Features & Settings](#)



[EV Battery Conditioning Mode](#)

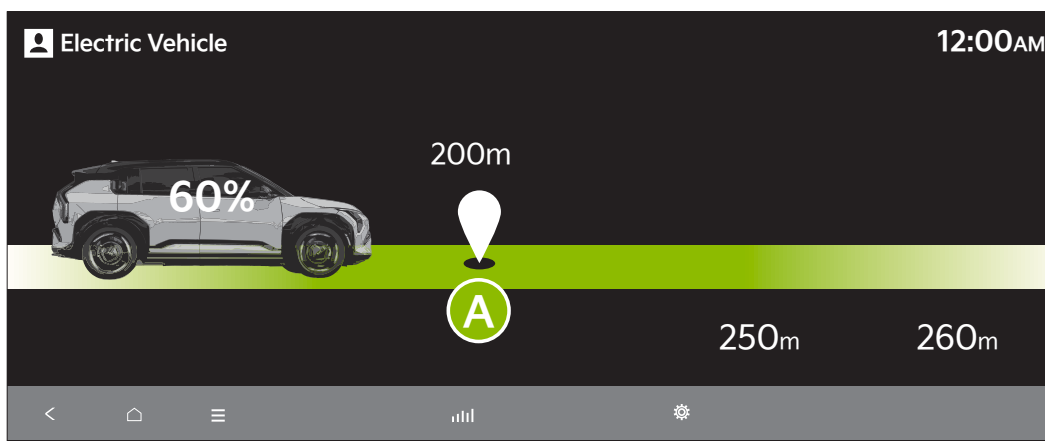

A Available Range - Displays the estimated available driving distance according to the vehicle's current location and charge amount. The first distance is with the Climate Control on. The second is with the Climate Control off.

The estimated range is based on a number of factors and assumes optimal driving conditions and efficient driving habits. Actual range will vary with options, driving conditions, driving habits, vehicle maintenance, charging practice, battery age, weather, temperature and your vehicle's condition. Battery capacity will decrease with time and use. For more information on range, please see www.fueleconomy.gov


[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



EV Mode - Infotainment System

 [Continued from previous page](#)

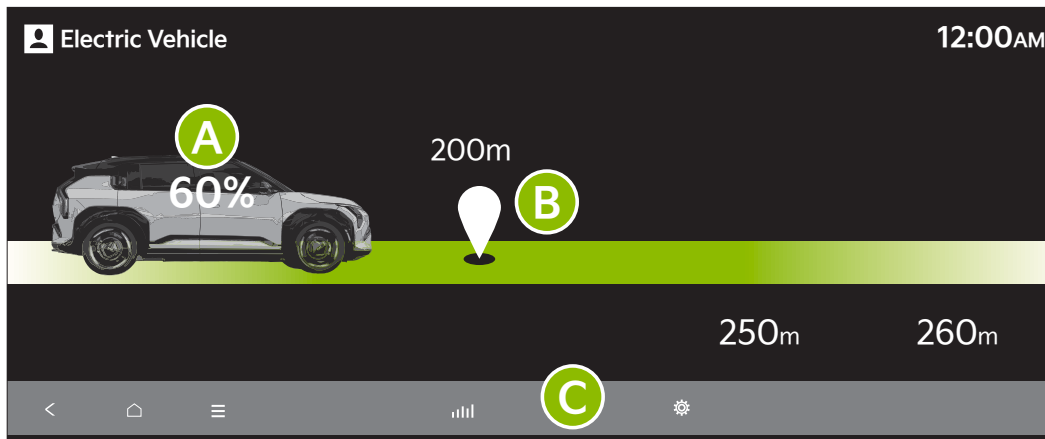

- A Energy information** - Displays battery charge information and energy consumption history
- B Nearby charging stations** - Tap the icon to search for nearby charging stations or stations along your route
- C Reserved charging** - Includes the following settings:
 - **Next departure:** Set the anticipated departure date and time for the next scheduled charge
 - **Scheduled charging and target temperature:** Set the date and time of your next battery charge and the target climate control temperature
 - **Vehicle to Load (V2L):** Enable the V2L system and adjust usage settings

See section 7 of the Owner's Manual or the Car Infotainment System's Quick Reference Guide for more detailed information on screens.

Illustration is for demonstration purposes only. Some items may appear different or vary in illustrations.



Regenerative Braking

The regenerative braking system helps charge the high-voltage battery while the vehicle is coasting or decelerating.

Use the paddle shifters to adjust the regenerative braking level from 0 to 3. The selected level is displayed on the Instrument Cluster **A**.

 
- Pull the left paddle shifter **B** to increase regenerative braking and deceleration
- Pull the right paddle shifter **C** to decrease regenerative braking and deceleration

The paddle shifters do not operate when:


- Both paddle shifters are pulled at the same time
- The brake pedal is depressed
- Cruise Control or Smart Cruise Control (SCC) is active



[Regenerative Braking](#)

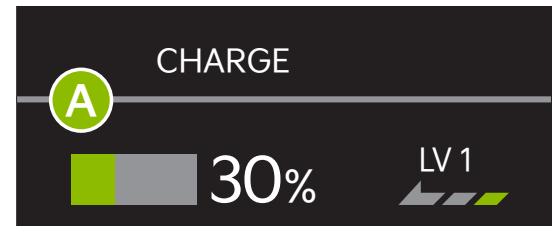

 (Indicator on lower left corner of Instrument display)

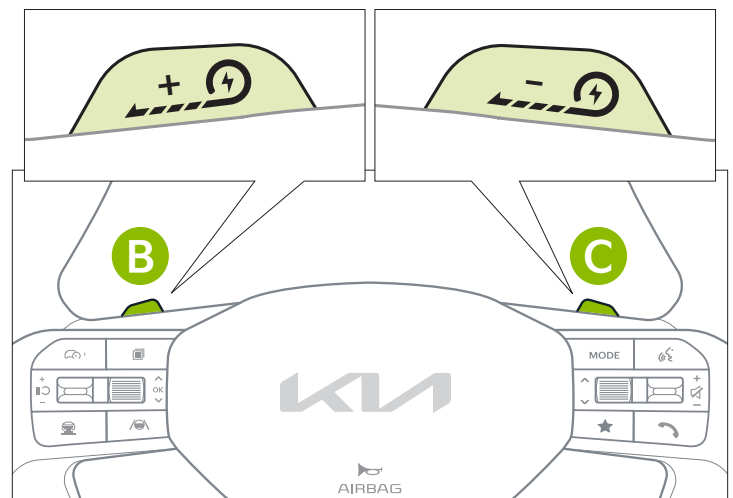

[Continued on next page](#)

For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 9 in the Owner's Manual.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Regenerative Braking

[Continued from previous page](#)

i-Pedal

i-Pedal allows the driver to control vehicle acceleration and deceleration using the accelerator pedal.

 
 
To activate i-pedal: Pull and hold the left paddle shifter **A** for more than approximately 1 second at any regenerative braking level.

To deactivate i-pedal: Pull and hold the left paddle shifter **A** again, for more than approximately 1 second at any regenerative braking level.

When active, the i-Pedal indicator **B** will be illuminated on the Instrument Cluster.



[Regenerative Braking](#)

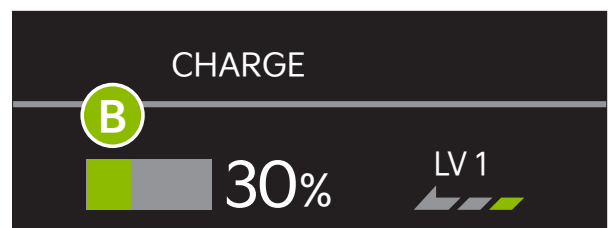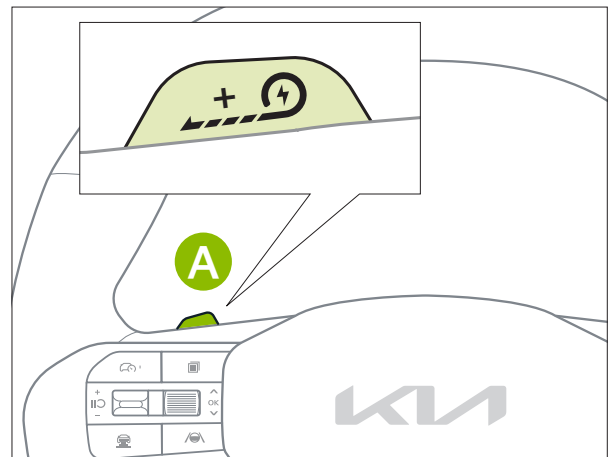

(Indicator on lower left corner of Instrument display)

QUICK TIP

Regenerative braking levels can be adjusted to suit your driving preference for each Drive Mode.

REMINDER: i-Pedal and Regenerative Braking settings can be adjusted by going to Electric Vehicle Settings in the Infotainment System.

[Continued on next page](#)

Do not solely rely on i-pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Always use pedal braking when necessary. Pay attention to the road condition ahead and apply the brake if necessary.

Images are for illustrative purposes only and may not reflect actual feature or operation. For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 9 in the Owner's Manual.



Regenerative Braking

 
[Continued from previous page](#)

Smart Regeneration System

When AUTO **A** is displayed, Smart Regeneration is designed to automatically adjust the regenerative braking level based on the road grade and the driving conditions of the vehicle ahead.




[Regenerative Braking](#)

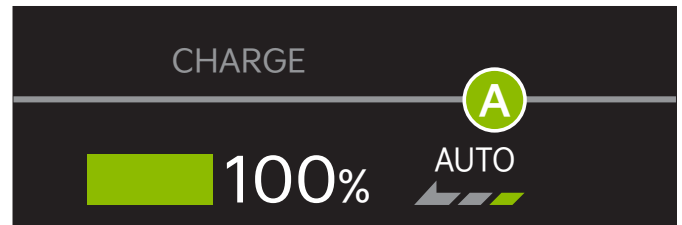

(Indicator on lower left corner of Instrument display)

To adjust Smart Regeneration settings:

 - Go to the Infotainment System and select Electric Vehicle, then Settings  and Smart Regeneration
- Toggle Link to Navigation Route to ON or OFF
- Adjust the Smart Regenerative Braking Distance to Level 1, Level 2, or Level 3

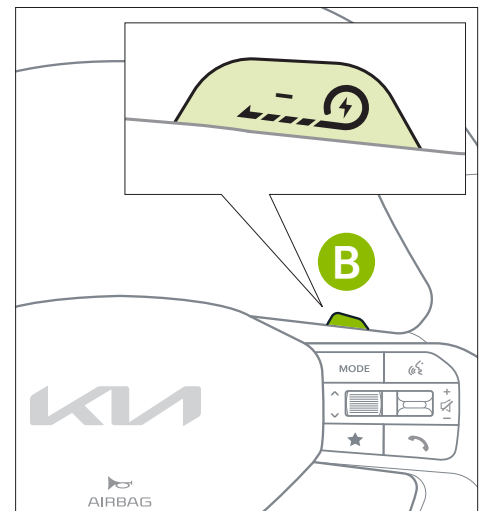

To turn Smart Regeneration ON or OFF:

- Pull and hold the right paddle shifter **B** for more than approximately 1 second

REMINDER: When Smart Regeneration is ON, the minimum regenerative braking level can be adjusted using the left and right paddle shifter.

For more information on regenerative braking, i-Pedal driving or the Smart Regeneration System, please refer to section 9 in the Owner's Manual.

Smart Regeneration is a supplemental system for the driver's convenience. Do not solely rely on this system to stop the vehicle or avoid collisions. Always cautiously look ahead to prevent unexpected or sudden situations.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Forward Collision-Avoidance Assist 2 (FCA2)*†4

Forward Collision-Avoidance Assist is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA detects an increased risk of collision, it may automatically apply the brakes to potentially reduce the effects of a possible collision **B**.

Junction Turning function **C** may help avoid a collision with an oncoming vehicle detected in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.

Junction Crossing* function **D** may help avoid a collision with oncoming vehicles detected on the left or right side when crossing an intersection by applying emergency braking.

 
 
 
 
Direct Oncoming function may reduce the vehicle speed and temporarily apply braking when FCA detects a collision risk with a vehicle approaching directly in front.



[Forward Collision-Avoidance Assist \(FCA\) - Advanced Features](#)



[Driver Safety - Blind-Spot Safety & Safe Exit](#)

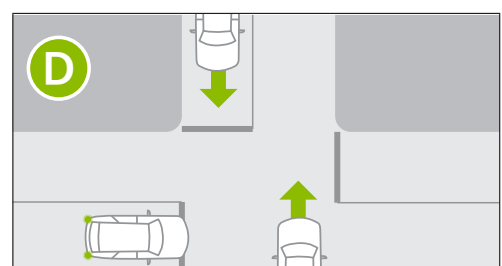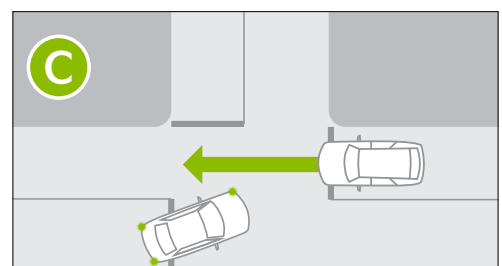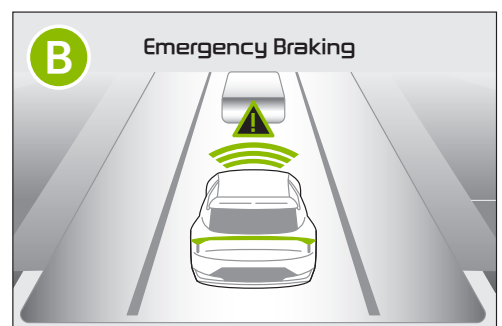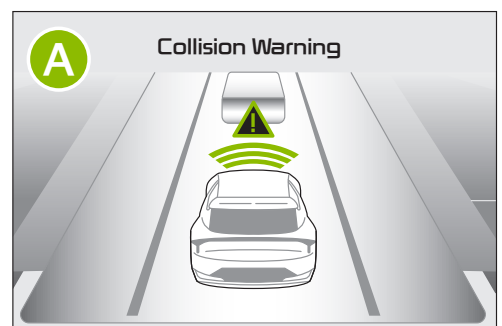

(Junction Crossing)

[Continued on next page](#)

Refer to section 10 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Forward Collision-Avoidance Assist 2 (FCA2)*†4

[Continued from previous page](#)



 
[Forward Collision-Avoidance Assist \(FCA\) - Advanced Features](#)

Lane-Change Oncoming* function **A**


may help avoid a possible collision with a detected oncoming vehicle when changing lanes by assisting the driver's steering.

Lane-Change Side* function **B** may help avoid a possible collision with the vehicle detected ahead in the next lane when changing lanes by assisting the driver's steering.


Evasive Steering Assist* function **C** may help avoid a possible collision with a vehicle, pedestrian or cyclist detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering.

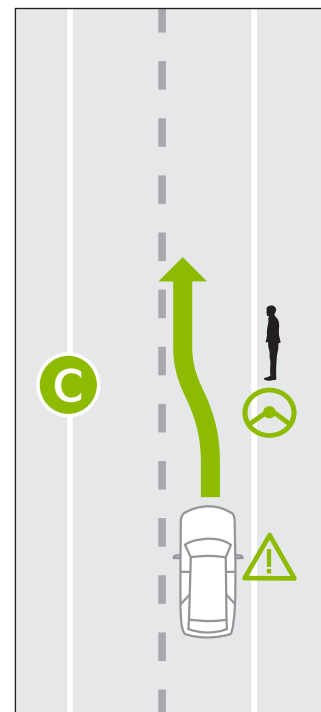

(Evasive Steering Assist)

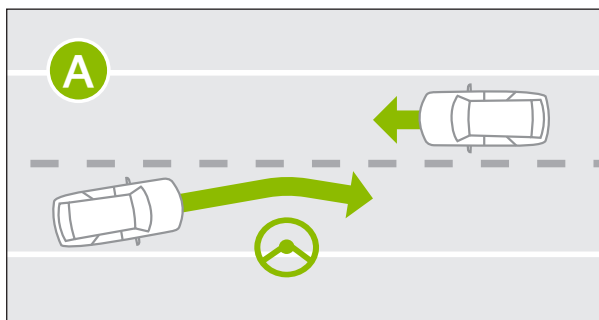 

(Lane Changing - Oncoming Traffic)

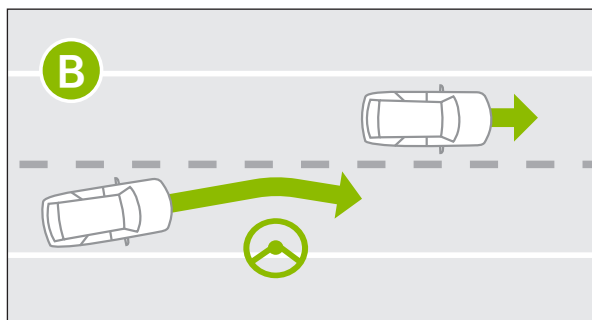 

(Lane Changing - Side)

REMINDER:

- Once the risk factors are not detected, these functions will deactivate, and the driver must steer the vehicle.

[Continued on next page](#)

Refer to section 10 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Forward Collision-Avoidance Assist 2 (FCA2)^{*†4}

[Continued from previous page](#)

FCA Settings:

- FCA features can be turned ON/OFF by going to the Vehicle Settings in the Infotainment System

- To access settings, press the **SETUP** button on the Infotainment System.

Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in DRIVING SAFETY, scroll through the selections and press the button to toggle the features on or off

- Forward Safety Warning Timing:** When in DRIVING SAFETY, select STANDARD or LATE. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'
- Warning Methods:** Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

FCA will become active when the:

- Ignition is on or the EV button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

[Continued on next page](#)



[Forward Collision-Avoidance Assist \(FCA\) - Advanced Features](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 10 in the Owner's Manual for more information.



Forward Collision-Avoidance Assist 2 (FCA2)^{*†4}

[Continued from previous page](#)

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- FCA may warn the driver if the vehicle ahead is decelerating to turn or to pass a speed bump
- When the FCA system is off, the yellow FCA warning indicator is on in the Instrument Cluster 
- Adjusting the Warning Methods will adjust settings for other driver assistance systems



[Forward Collision-Avoidance Assist \(FCA\) - Advanced Features](#)

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 10 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

BCA is designed to detect approaching vehicles in the driver's blind spot areas and warn the driver of a possible collision with a warning light and a warning sound. If a collision risk is detected when exiting a parallel space, BCA may assist with braking to help avoid a collision.

 


[Blind-spot Collision-Avoidance Assist \(BCA\)](#)




[Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)

Vehicle detection: **A** If another vehicle is detected within the BCA warning boundary **A**, an indicator may illuminate on the outside Rearview mirrors **B**, on the Instrument Cluster and the head-up display.*

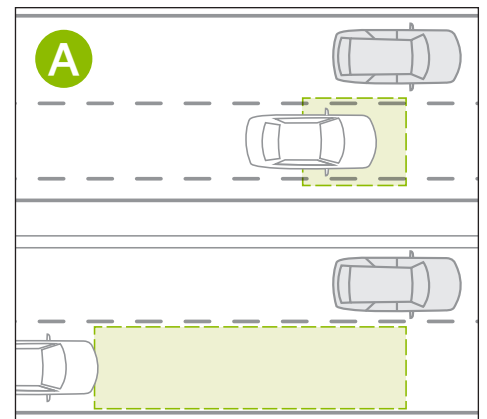

 Collision warning: When the vehicle detection warning is on and the driver activates a turn signal, an indicator may flash on the outside rearview mirrors and the system may sound a warning, and the steering wheel may vibrate.*

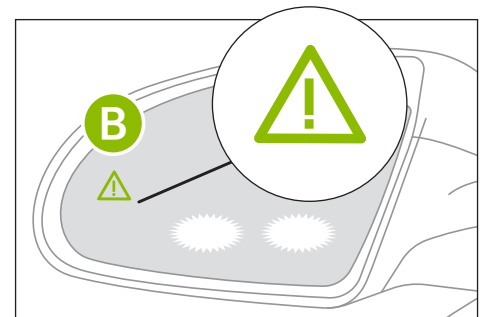

Collision-Avoidance Assist: When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it may help avoid collision by applying the brake.

[Continued on next page](#)

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 10 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

[Continued from previous page](#)

BCA Settings:

- To enable BCA, press SETTINGS on the Infotainment System. Select the **VEHICLE** button to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY, and then BLIND-SPOT SAFETY
- **Warning Methods:** Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



[Blind-spot Collision-Avoidance Assist \(BCA\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

QUICK TIPS

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- Collision warning of BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle at speeds above 6mph
 - Vehicle speed is above approximately 25 mph

REMINDERS:

- The BCA warning may sound when turning left into an intersection. Maintain a proper distance from oncoming vehicles
- BCA will not issue a warning if the approaching vehicle’s speed is calculated to be under 6 mph

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 10 in the Owner’s Manual for more information.



[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | ^{*}IF EQUIPPED



Lane Keeping Assist (LKA)^{†4}

Lane Keeping Assist is designed to detect the lane markers on the road, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator will initially illuminate gray. It will remain white when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.

If LKA detects that you are moving outside of your lane, LKA may give an auditory warning and display a Lane Departure Warning on the Instrument Cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

To turn LKA on or off, press and hold the Lane Safety button  .

 
[Continued on next page](#)



[Lane Keeping Assist \(LKA\)](#)



[Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)

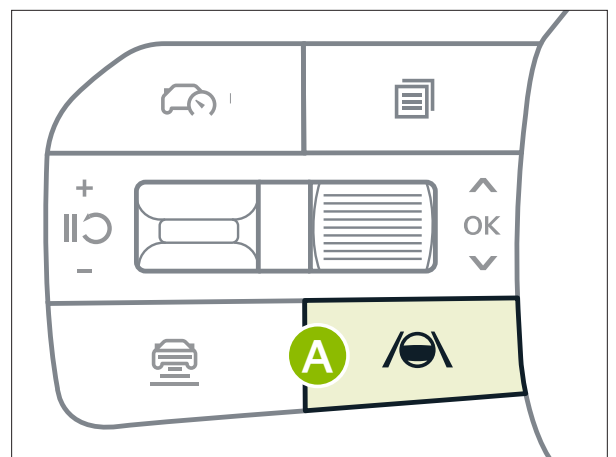

(Buttons located on left side of Steering Wheel)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.



Lane Keeping Assist (LKA)^{†4}

[Continued from previous page](#)

LKA Settings:

To enable LKA, press **SETUP** on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY and then LANE SAFETY.



 
[Lane Keeping Assist \(LKA\)](#)




[Driver Assistance - Warning Methods & Warning Volume](#)

Warning Methods: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



- The images and colors in the Instrument Cluster may differ depending on the cluster type or theme selected from the settings menu

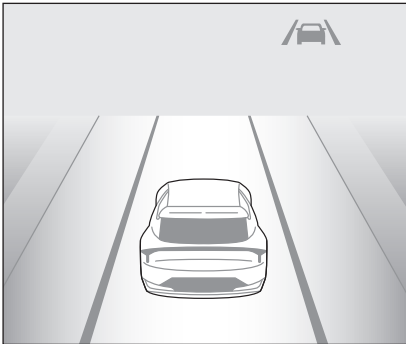

 When the front-view camera does not detect the lane markers, they are displayed gray

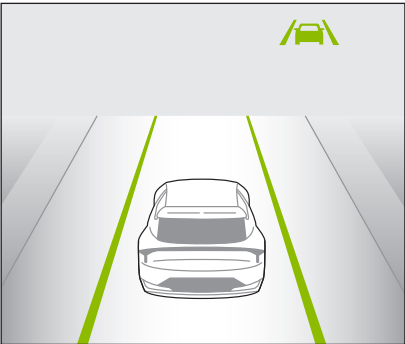

  When the front-view camera detects the lane markers, they are displayed white

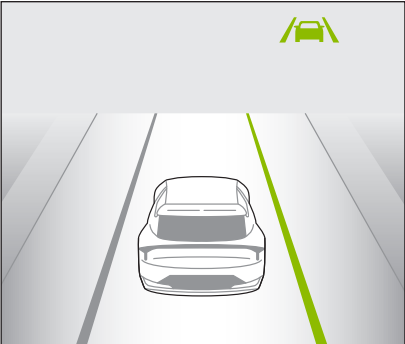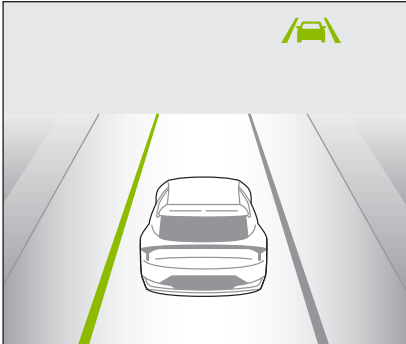

When the front-view camera detects the vehicle moving outside of the lane being traveled in, a yellow marker will illuminate either on the left or right lane (shown in both images above)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | ^{*}IF EQUIPPED



Lane Keeping Assist (LKA)^{†4}

[Continued from previous page](#)

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA detects the lane the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIPS

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- LKA detects lanes most effectively on roads with clear lane markings and good visibility

REMINDER: LKA will not issue a warning if the turn signals or hazard lights are activated.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Blind-spot View Monitor (BVM)*†4

Blind-Spot View Monitor uses the wide-side view cameras to display the rear blind spot areas of the vehicle on the Instrument Cluster **A**, when the turn signal is activated, to help with lane changes.

To turn BVM on press **SETUP** on the Infotainment System. Select **VEHICLE**, then DRIVER ASSISTANCE, and under DRIVING SAFETY, select BLIND-SPOT VIEW MONITOR.

When operating the turn signal **B**, BVM displays video of the blind-spot view for the direction indicated.

 
BVM will not operate when the EV button is OFF, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster.




[Blind-spot View Monitor \(BVM\)](#)



[Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)

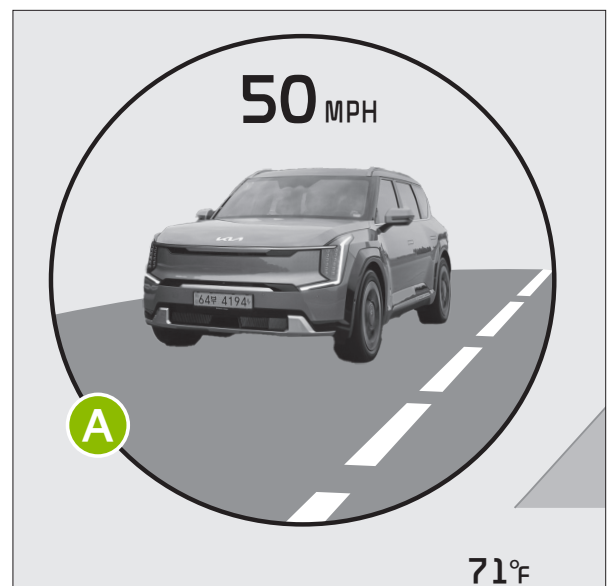

 (LCD display showing right/left side of vehicle)

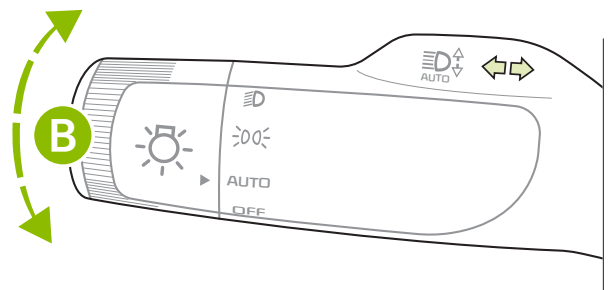

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 10 in the Owner's Manual for more information.



Safe Exit Warning (SEW)*†4

While the vehicle is stopped, and if Safe Exit Warning detects a vehicle approaching the rear corner of the vehicle and the driver or passenger opens a door, SEW may warn the driver with a message and sound a warning to help avoid a possible collision **A**.

In addition, when the Electronic Child Safety Lock button is ON **B** or in the LOCK position and the system detects a vehicle approaching the blind spot area, the Electronic Child Safety Lock button will not unlock the rear doors, even if the driver presses the button to open the doors.

To turn on SEW, press the **SETUP** button on the Infotainment System. Select **VEHICLE**, then select DRIVER ASSISTANCE, and under DRIVING SAFETY, select SAFE EXIT.

Warning Methods: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off.

 
 
REMINDER: Adjusting the Warning Methods will adjust settings for other driver assistance systems.



[Safe Exit Warning \(SEW\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

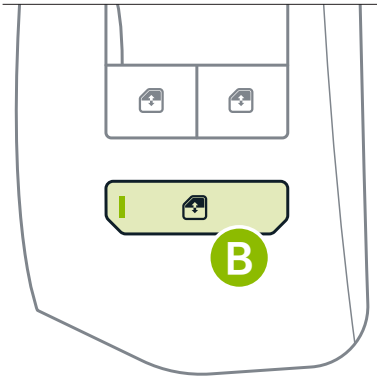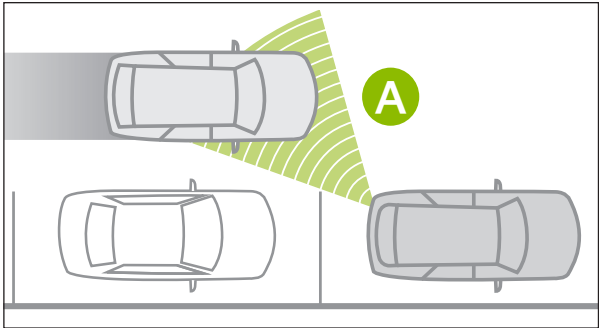

(Button on driver's door panel)

When engaged, these systems are not substitutes for safe practices and may not always warn occupants of unsafe conditions or approaching vehicles or objects. Always drive safely and use caution.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 10 in the Owner's Manual for more information.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Driver Attention Warning (DAW)^{†5}

Driver Attention Warning is designed to alert the driver if it detects inattentive driving patterns and, in certain situations, can give a warning signal to take a break. When the driver's attention level has become low, the message "Consider taking a break" appears on the LCD **A** and a warning sounds to suggest the driver take a break.

DAW Settings:

- To activate DAW, with the ignition on, press the **SETUP** button on the Infotainment System, **VEHICLE**, DRIVER ASSISTANCE, and DRIVER ATTENTION WARNING
- Press INATTENTIVE DRIVING WARNING to turn on

 
REMINDER: When activated, DAW does not display the "Consider taking a break" message when the total trip driving time is less than 4 minutes.



[Driver Attention Warning \(DAW\)](#)



[Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert](#)

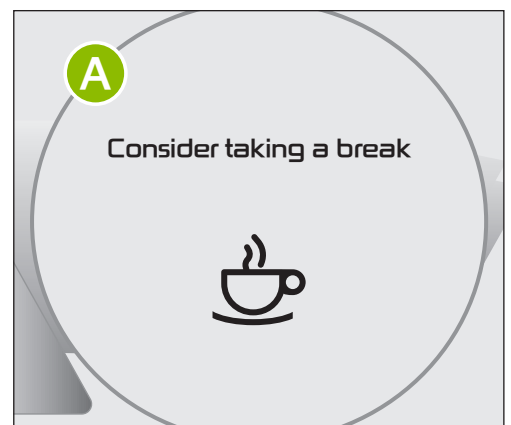

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 10 in the Owner's Manual for more information.



Leading Vehicle Departure Alert (LVDA)^{†4}

Leading Vehicle Departure Alert (LVDA) is designed to alert the driver if the LVDA system detects the vehicle directly in front start to move or depart from a stop. When LVDA is on, your vehicle is stopped and detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving.

If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster.

LVDA Settings:

- To enable LVDA, press the **SETUP** button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER ATTENTION WARNING and then LEADING VEHICLE DEPARTURE ALERT

 
REMINDER: Always check the front of the vehicle and road conditions before departure.



[Leading Vehicle Departure Alert \(LVDA\)](#)



[Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert](#)

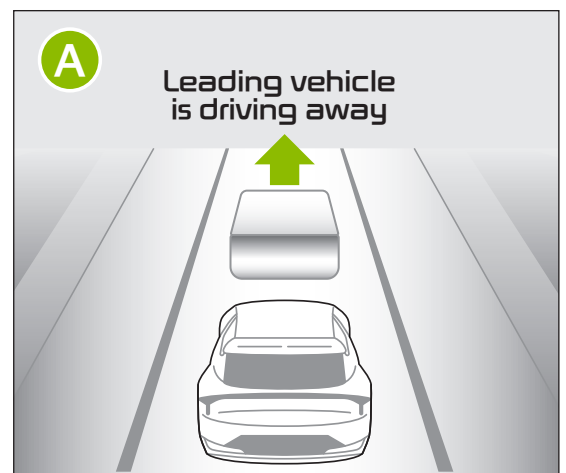

The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Lane Following Assist 2 (LFA2)^{†4}

Lane Following Assist 2 (LFA2) is designed to assist the driver in maintaining the vehicle in the center of the lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The Instrument Cluster indicator will initially illuminate gray  when turned ON. It will remain GRAY when LFA2 does not detect the lane markers. When LFA2 detects the lane markers and can assist the steering, the LFA2 icon will illuminate green **B**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If both hands are not detected on the Steering Wheel, LFA2 will cancel.

LFA2 will operate when these conditions are met:

 
- LFA2 detects the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph



[Lane Following Assist \(LFA\)](#)



[Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)

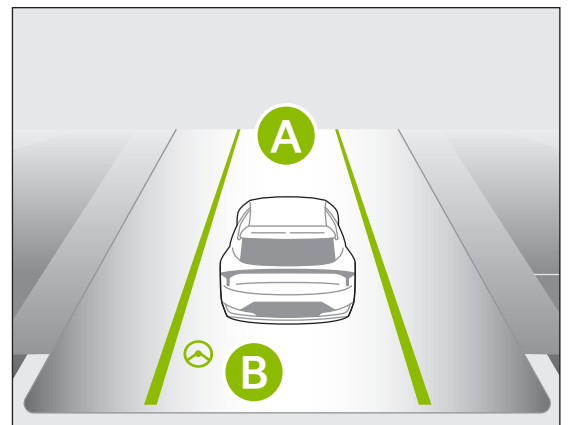

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual Vehicle Settings steps may vary by model. See section 10 in the Owner's Manual for more detailed information, limitations and conditions.

When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.



Lane Following Assist 2 (LFA2)^{†4}

[Continued from previous page](#)

LFA Settings:

- Press the Lane Safety button **A** to turn on Lane Following Assist
- **Warning Methods:** Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

 
REMINDER: Adjusting the Warning Methods will adjust settings for other driver assistance systems.



[Lane Following Assist \(LFA\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

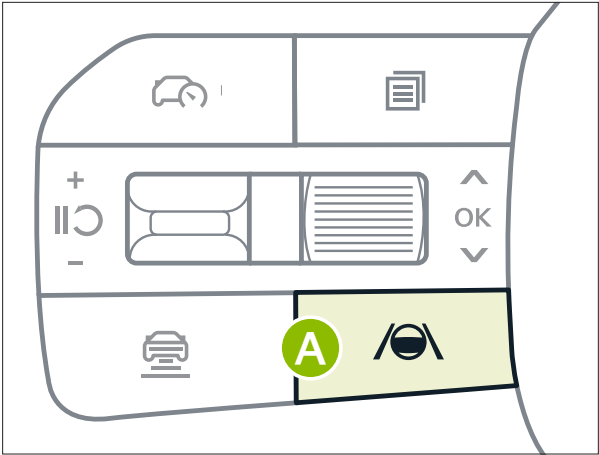

(Buttons located on left side of Steering Wheel)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual Vehicle Settings steps may vary by model. See section 10 in the Owner's Manual for more detailed information, limitations and conditions.

When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.

[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | ^{*}IF EQUIPPED



Smart Cruise Control (SCC)^{†4}

 
Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal. If SCC detects that the driver is attempting to overtake a vehicle in front, SCC may help by assisting acceleration.



[Smart Cruise Control \(SCC\) with Overtaking Acceleration Assist](#)



[Driver Convenience - Smart Cruise Control & Highway Driving Assist](#)

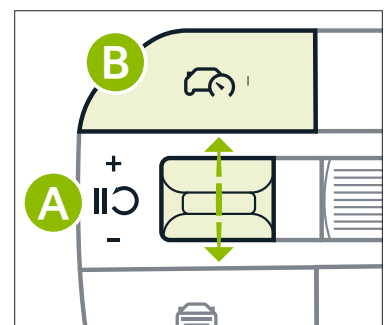

The **Based On Driving Style** function* allows SCC to operate based on how you drive, taking into account distance between vehicles, acceleration and reaction speed.

When SCC is on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, SCC may bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the  button **A** must be pressed to start moving the vehicle.

To turn on, set/adjust the SCC speed: Press the Driving Assist button **B** to turn the system ON & set to the current vehicle speed (One-Touch Set). The cruise indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front.

[Continued on next page](#)

When engaged, the Smart Cruise Control system is not a substitute for safe driving and cruise-control procedures. This is not an auto-pilot feature. Always drive safely and use caution. The Smart Cruise Control system may not detect every object in front of the vehicle.

See section 10 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

SCC Operation:

- **Increase speed:** Press the  switch **A** up to increase the set vehicle speed
- **Decrease speed:** Press the  switch **A** down to decrease the set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Panel screen **B**
- When SCC is canceled, the icon will illuminate gray **C**


To set the vehicle distance: Press the Vehicle Distance button **D** on the steering wheel. The image on the Instrument Cluster **B** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **E**.

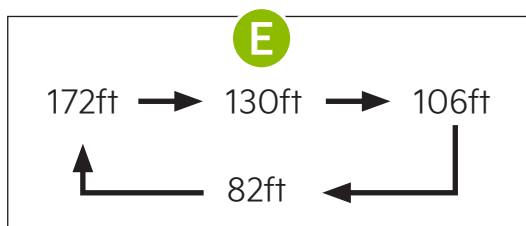



The distance settings are approximations and may vary depending on the vehicle speed at the time.



 Smart Cruise Control (SCC) with Overtaking Acceleration Assist

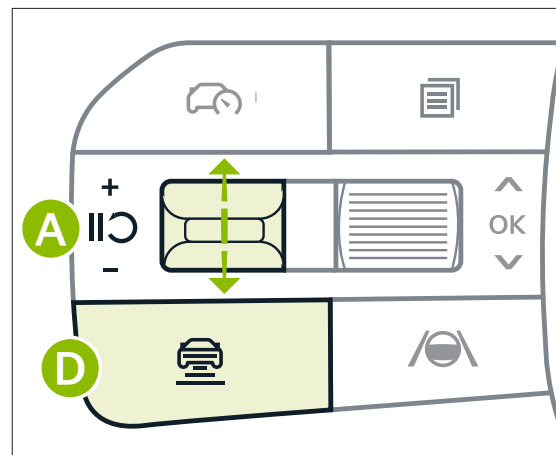

  (Buttons located on left side of Steering Wheel)

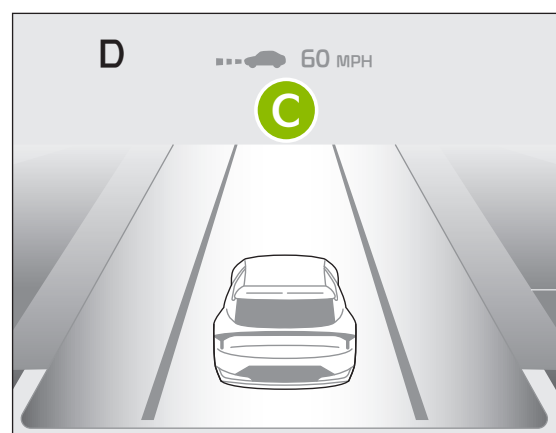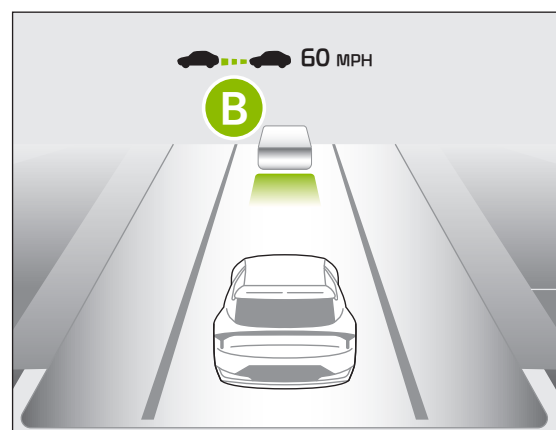

(Set speed and selected distance level are displayed on the LCD)

When engaged, the Smart Cruise Control system is not a substitute for safe driving and cruise-control procedures. This is not an auto-pilot feature. Always drive safely and use caution. The Smart Cruise Control system may not detect every object in front of the vehicle.

See section 10 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

[Continued on next page](#)



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

To pause or resume SCC operation:

Press the pause/resume  switch **A**.

 
The SCC indicator on the Instrument Panel will turn OFF.

To turn SCC OFF: Press the Driving Assist button **B**. The SCC indicator on the Instrument Panel will turn GRAY.

To adjust the sensitivity of the SCC system: Go to Vehicle Settings in the Infotainment System by pressing the **SETUP** button. Go to VEHICLE, then DRIVER ASSISTANCE, then DRIVING CONVENIENCE and SMART CRUISE CONTROL. Here, set the distance, acceleration and reaction speed or select BASED ON DRIVING STYLE*.



Smart Cruise Control (SCC) with Overtaking Acceleration Assist

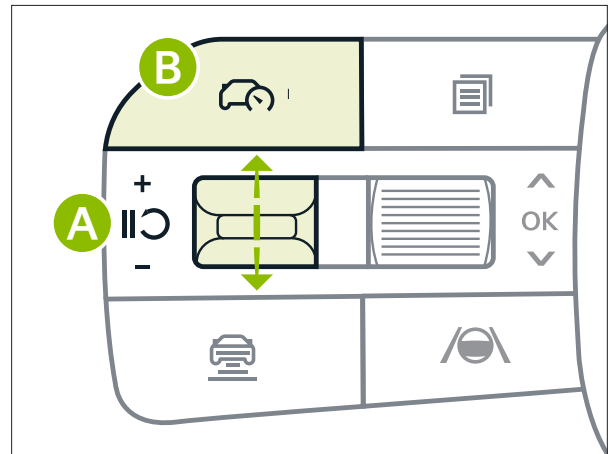

(Buttons located on left side of Steering Wheel)

QUICK TIPS

- The speed setting for SCC can be adjusted under the following conditions:
 - When following a vehicle, there is no minimum speed requirement
 - If your vehicle speed is less than 20 mph, when SCC is turned on and activated, the vehicle speed will be set to 20 mph
 - Always keep the front-view camera and front radar sensor areas clean and free from debris to maintain optimal performance

[Continued on next page](#)

When engaged, the Smart Cruise Control system is not a substitute for safe driving and cruise-control procedures. This is not an auto-pilot feature. Always drive safely and use caution. The Smart Cruise Control system may not detect every object in front of the vehicle.

See section 10 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

REMINDERS:

- The Smart Cruise Control system will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine starts
- SCC is canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- SCC may decelerate if it detects a surrounding vehicle moving into your lane
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed

When engaged, the Smart Cruise Control system is not a substitute for safe driving and cruise-control procedures. This is not an auto-pilot feature. Always drive safely and use caution. The Smart Cruise Control system may not detect every object in front of the vehicle.

See section 10 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation. Button configuration may vary.



Navigation-based Smart Cruise Control (NSCC)*†4,8

 
While Smart Cruise Control is operating, Navigation-based Smart Cruise Control may automatically adjust vehicle speed when driving on certain highways by using road information from the navigation system.

To turn on NSCC, go to the Vehicle Settings in the Infotainment System, select Driver Assistance, Driving Convenience, and Auto Highway Speed Change. When SCC is on and operating, the vehicle is driving on limited/controlled access highways and NSCC is turned on, then NSCC is enabled and the NAV icon **A** will illuminate green on the Instrument Cluster.


When NSCC detects a curve ahead **B**, and NSCC activates and reduces the vehicle speed, the NAV icon **A** will blink. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

If Smart Cruise Control is temporarily unavailable due to a pause or rerouting, a gray NAV indicator **A** will appear on the cluster. When the accelerator pedal is pressed, a white (NAV) indicator will blink on the cluster.

REMINDER: NSCC is only available on certain controlled access roads and highways.

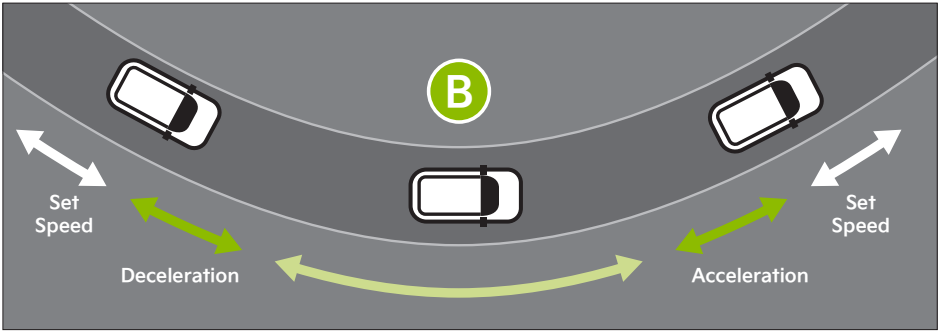

 Navigation-based Smart Cruise Control (NSCC)

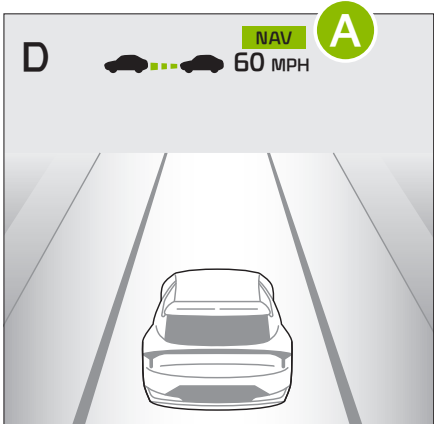

(Display on LCD screen)

See section 10 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide.

NSCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Highway Driving Assist 2 (HDA2)*†4

Highway Driving Assist 2 (HDA2) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.

Highway Lane Change Assist* may assist in changing lanes, if the driver has turned on the turn signal and if the system detects the lane change is possible.

 
 
When HDA2 is activated and the proper conditions are met, the Instrument Cluster indicator **A** will illuminate green. If proper conditions are not met, HDA2 will be in standby mode and the HDA2 indicator light **B** will illuminate gray. When in operation, and if both lanes are detected, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green **A**.



[Highway Driving Assist \(HDA\) - Lane Change Assist](#)



[Driver Convenience - Smart Cruise Control & Highway Driving Assist](#)

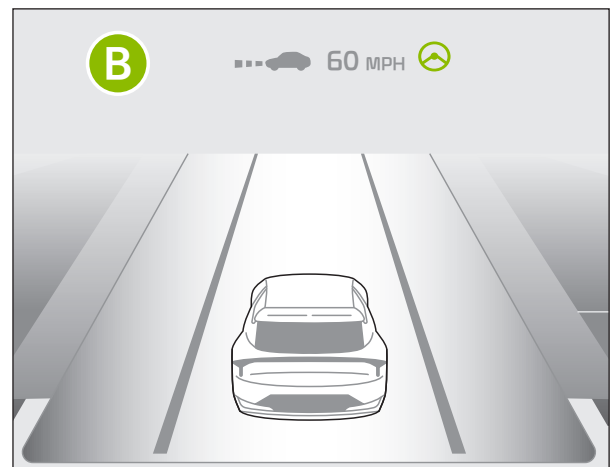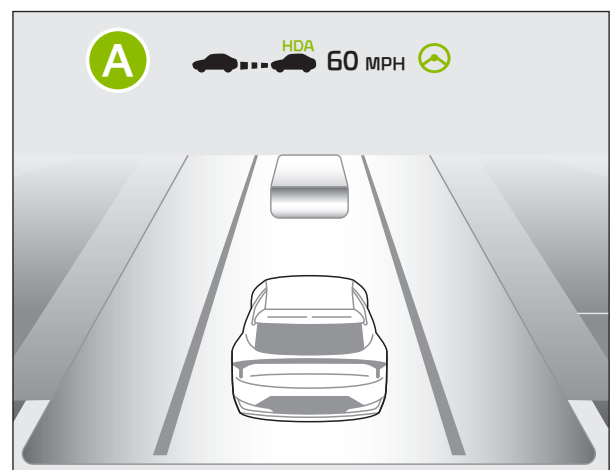

[Continued on next page](#)

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist 2 (HDA2)^{*†4}

[Continued from previous page](#)

HDA2 will operate when these conditions are met:

- Driving on the main road of certain highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of certain highways while Lane Following Assist and Smart Cruise Control are operating



[Highway Driving Assist \(HDA\) - Lane Change Assist](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

HDA2 Settings:

- **To enable HDA2:** press the **SETUP** button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER CONVENIENCE, and select HIGHWAY DRIVING ASSIST
- Select HIGHWAY LANE CHANGE ASSIST* to activate this feature
- **Warning Methods:** Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

REMINDER: Adjusting the Warning Methods will adjust settings for other driver assistance systems.

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 10 in the Owner's Manual for more detailed information, limitations and conditions.



Surround View Monitor (SVM)*†4

Surround View Monitor uses the wide view cameras and displays images around the vehicle through the Infotainment System screen to assist with parking.

- Press the Parking/View button **A** or shift into reverse to turn on Surround View Monitor

- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen

- **Surround View Monitor Auto On:**

To enable the front parking assist view screen when Parking Distance Warning is activated and the Gear Shift is in Drive, select Driver Assistance, Parking

Safety, Surround View Monitor Auto On from the Vehicle Settings menu

- **Warning Methods:** Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



 
[Surround View Monitor \(SVM\)](#)




[Driver Assistance - Warning Methods & Warning Volume](#)



[Driver Assistance - Parking Safety](#)

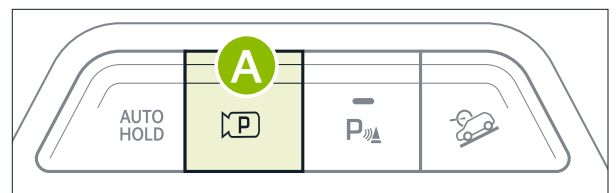

(Button located in center panel)

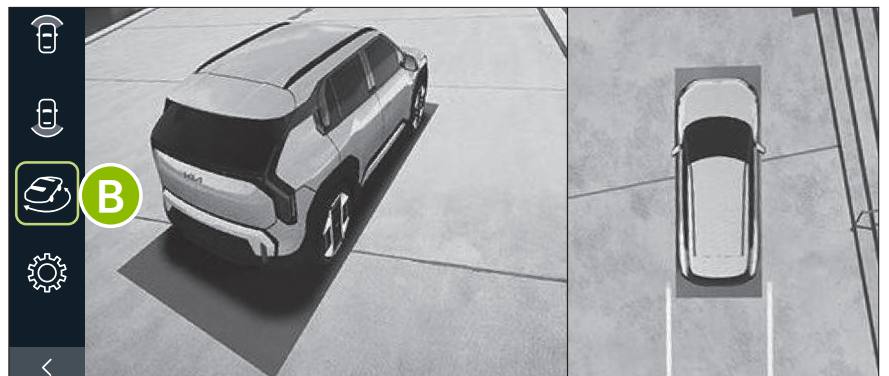 

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Button configuration may vary.

When engaged, Surround View Monitoring is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.



Surround View Monitor (SVM)^{*†4}

[Continued from previous page](#)

 
To change the SVM settings, press the onscreen Settings icon  **A** while SVM is operating or pressing Setup, on the Infotainment System, select Vehicle, Driver Assistance, Parking Safety and Camera Settings.



[Surround View Monitor \(SVM\)](#)



[Driver Assistance - Parking Safety](#)

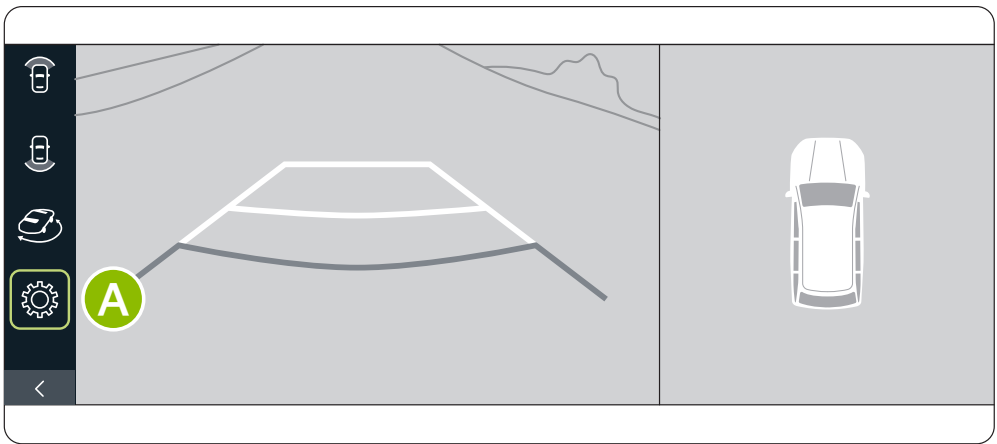

QUICK TIP

The Front View of SVM will turn off when the Gear Shift is moved into Park or Reverse or the Parking/View button is pressed.

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider angle of vision and may appear different from the actual distance
- You can also select PARKING SAFETY PRIORITY so the audio system volume will lower while SVM is activated
- Through normal use and after inclement weather or washing, the rear camera may become dirty or obstructed. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

Images are for illustrative purposes only and may not reflect actual feature or operation. Button configuration may vary. See section 10 in the Owner's Manual for more information.

When engaged, Surround View Monitoring is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Remote Smart Parking Assist (RSPA)*†4

 
Remote Smart Parking Assist is designed to use the vehicle sensors to help park and exit parking spaces remotely.




[Remote Smart Parking Assist \(RSPA\)](#)

To park with Remote Parking (from outside the vehicle), using the Smart Key:


1. While in the vehicle, with the vehicle stopped in front of the parking space, vehicle aligned, and the Gear Shift in Park, press and hold the Parking/View button **A**
2. Operating instructions will be displayed on the Infotainment System screen. When ready, exit the vehicle
3. Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how you want to park, and the vehicle will move in the direction of whichever button you press
4. Press and hold the Remote Start button **D** to turn off the vehicle

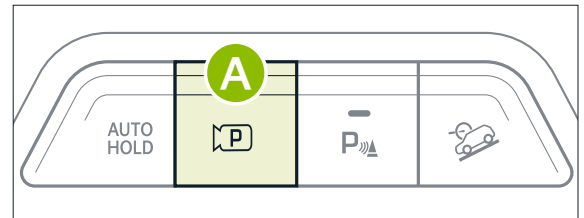

(Button located in center panel)

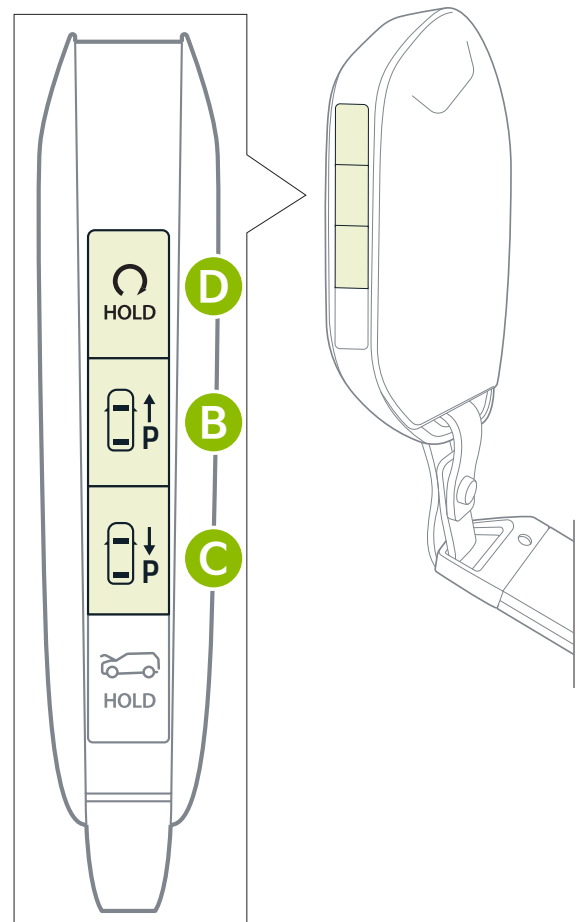 

[Continued on next page](#)

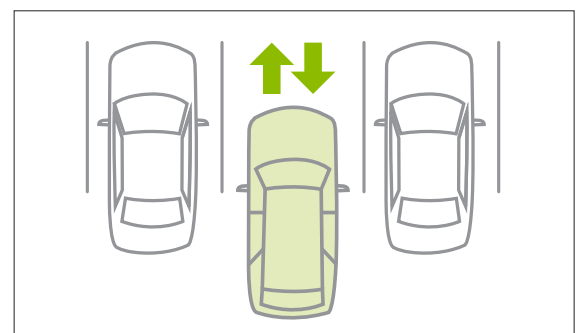 

Remotely moving forward or backward

For additional RSPA features, review the vehicle's Owner's Manual.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Remote Smart Parking Assist (RSPA)*†4

[Continued from previous page](#)

 
 
To exit a parking space remotely, when outside the vehicle and vehicle is off:

1. Press the lock button on the Smart Key
2. Press and hold the Remote Start button **A** within four seconds to start the vehicle
3. Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how your vehicle is parked. The vehicle will move in the direction of whichever button you press
4. Release the button to stop the vehicle

To turn off RSPA at any point while it's operating: press the Parking/View button **D** or Parking Safety button **E**, press the Park button on the Gear Shift or press the Remote Start button **A** on the Smart Key.



[Remote Smart Parking Assist \(RSPA\)](#)

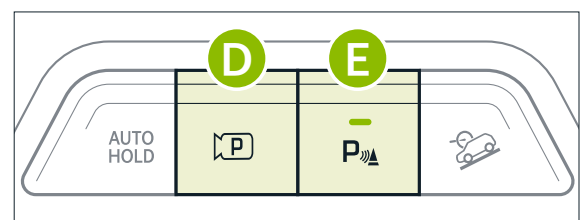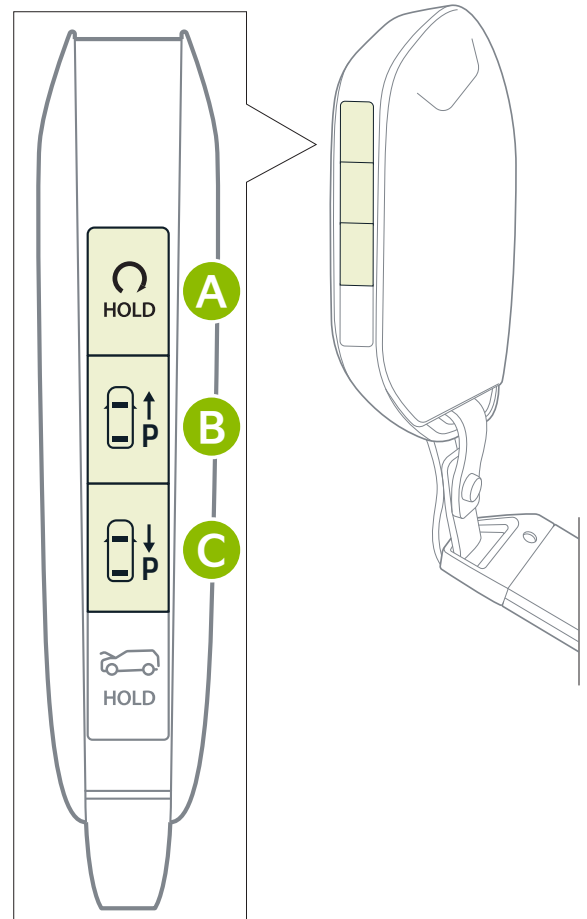

(Button located in center panel)

[Continued on next page](#)

For additional RSPA features, review the vehicle's Owner's Manual. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Remote Smart Parking Assist (RSPA)^{*†4}

[Continued from previous page](#)

Warning Methods: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

REMINDERS:

- Remote Smart Parking Assist will only operate if you are within 13 feet of the vehicle, with the Smart Key in your possession
- Remote Smart Parking Assist will not function when:
 - There is a parking space open, with a vehicle on one side only
 - When trying to park in a diagonal space
 - When the parking space is too narrow or near a wall
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 10 in the Owner's Manual for more information.

 


Rear View Monitor (RVM)^{†4}

Rear View Monitor displays the area behind the vehicle to assist when parking or backing up. To turn RVM on/off, press the Parking/View button **A** on the center console or shift Gear Shift into Reverse.



[Driver Assistance - Parking Safety](#)

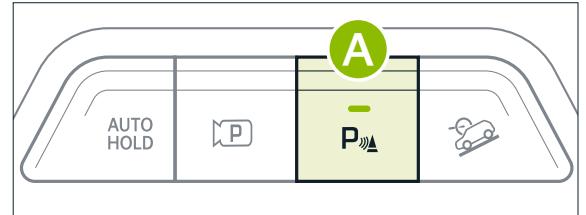

(Button located in center panel)

 
RVM Settings:

- **To access Camera Settings:** press the Settings icon  **B** or the SETUP button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS
- You can also select PARKING SAFETY PRIORITY so the audio system volume will lower while RVM is activated

The Rear View Monitor activates when the:

- EV button is in the ON position
- Gear Shift is in the Reverse position

Press the Parking/View button when Gear Shift is in the Neutral or Drive position.

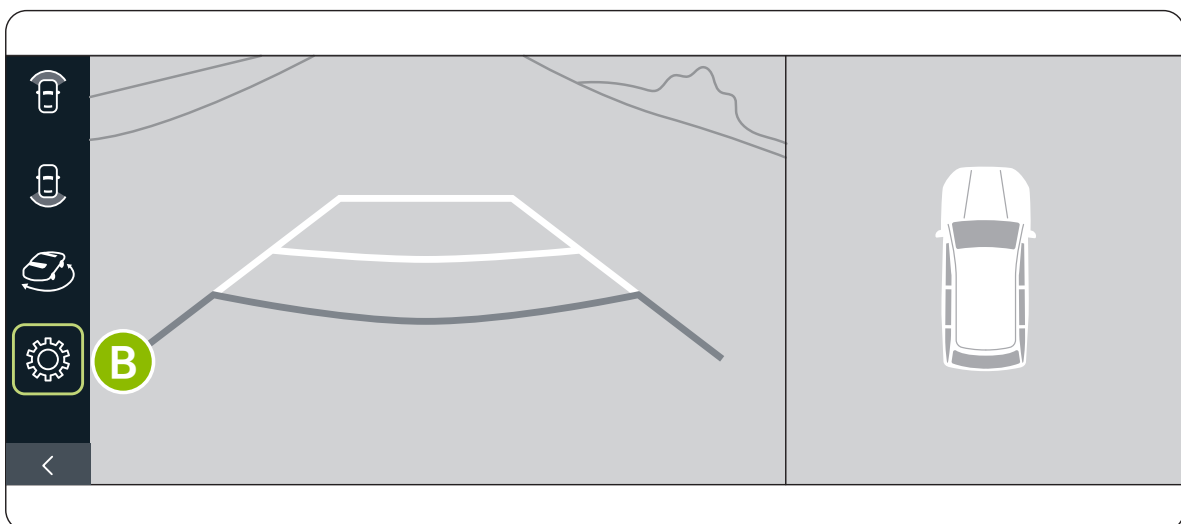

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

 


Rear View Monitor (RVM)^{†4}

[Continued from previous page](#)

REMINDERS:

- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Instrument Cluster. All other features are disabled
- Rear View Monitor may not display every object behind the vehicle
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that have accumulated on the lens

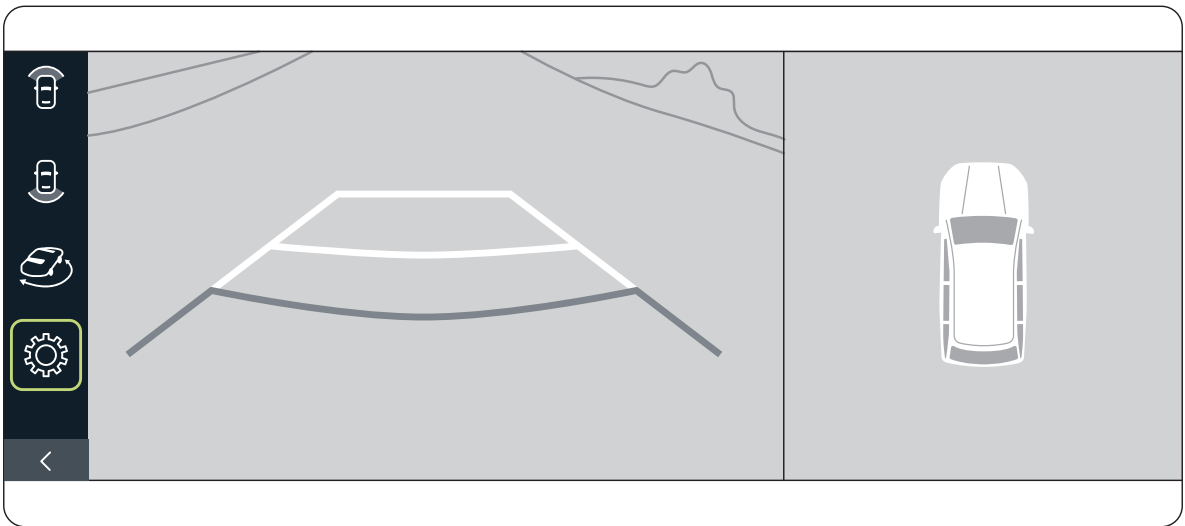

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | ^{*}IF EQUIPPED



Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†4}

Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the rear left or right while the vehicle is moving in reverse.

RCCA may warn the driver of a possible collision with a warning message and a warning sound. Also, in certain circumstances, RCCA may assist with braking to help avoid a collision.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rear-view mirror will illuminate and a message will appear on the Instrument Cluster **B** and the

 
 
Infotainment System. If RCCA detects that the collision risk has increased, RCCA may automatically apply the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph



[Rear Cross-traffic Collision-Avoidance Assist \(RCCA\)](#)

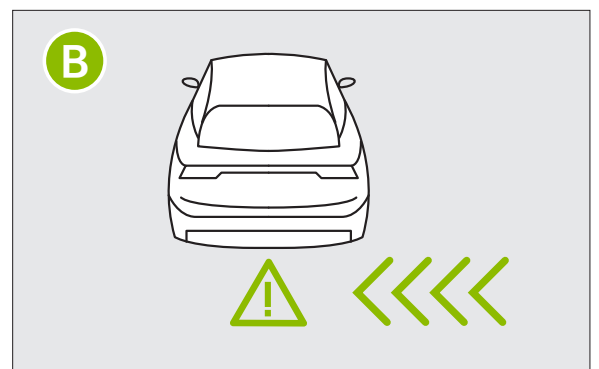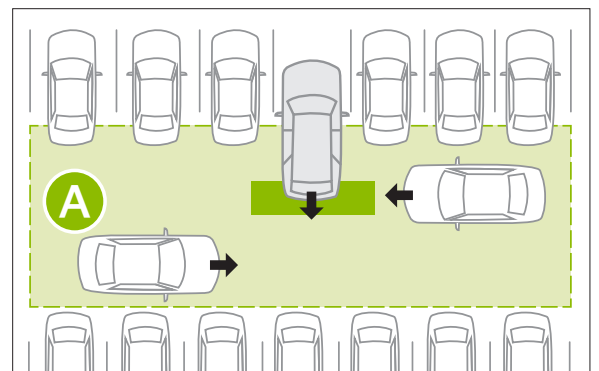

[Continued on next page](#)

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 10 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†4}

[Continued from previous page](#)



[Driver Assistance -
Warning Methods
& Warning Volume](#)

RCCA Settings:

- To enable RCCA: press the **SETUP** button on the Infotainment System.
Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in PARKING SAFETY, scroll through the selections and press REAR CROSS-TRAFFIC SAFETY to toggle the features on or off
- **Warning Methods:** Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

REMINDERS:

- When a vehicle is approaching within the sensing range and moving faster than 3 mph, the RCCA system will show a warning
- Adjusting the Warning Methods will adjust settings for other driver assistance systems

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 10 in the Owner's Manual for more information.



Reverse Parking Collision-Avoidance Assist (PCA)*†4

Reverse PCA is designed to detect pedestrians or objects behind the vehicle **A** and may warn the driver or assist with braking to help avoid a possible collision while the vehicle is moving in reverse.

PCA Settings:

To enable PCA: press the **SETUP** button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, and in PARKING SAFETY, scroll through the selections and press the button to toggle **Backward Safety** and/or **Forward/Side Safety** on or off

Warning Methods: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off

REMINDER: Adjusting the Warning Methods may adjust timing and volume levels for other driving assistance systems.



 
[Parking Collision-Avoidance Assist \(PCA\) - Forward/Side/Reverse](#)



[Driver Assistance - Warning Methods & Warning Volume](#)



[Driver Assistance - Parking Safety](#)

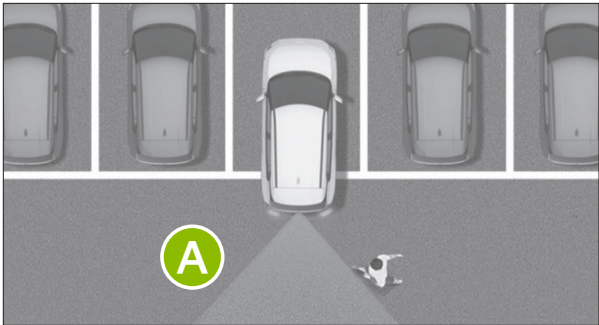

When engaged, PCA is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. PCA may not detect every object in front of or behind the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 10 in the Owner's Manual for more information.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Forward/Reverse/Side Parking Distance Warning (PDW)*†4

While driving at low speed, Forward/Reverse/Side Parking Distance Warning is designed to detect pedestrians or objects and may warn the driver to help avoid a possible collision.

PDW is activated when the EV button is on and the vehicle is in Reverse. To deactivate PDW, press the Parking Safety button **A** (LED illuminated), when vehicle is in Drive or Reverse. To activate, press button **A** again (LED not illuminated).

Warning Methods: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off



 
[Forward/Reverse/Side Parking Distance Warning \(PDW\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)



[Driver Assistance - Parking Safety](#)

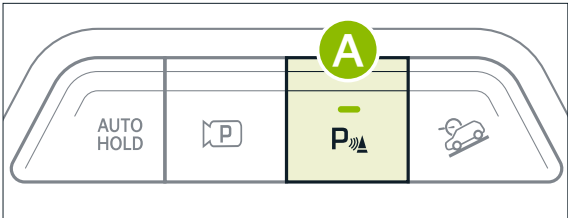

(Button located in center panel)

REMINDERS:

- Adjusting the Warning Methods may adjust timing and volume levels for other driving assistance systems
- If the vehicle is moving at speeds over 6 mph, Forward/Side Parking Distance Warning may not operate
- When more than two objects are sensed at the same time, the closest one will be recognized first

When engaged, PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object in front of or behind the vehicle.

Refer to section 10 in the Owner's Manual for more information.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Intelligent Speed Limit Assist (ISLA)*†4

Intelligent Speed Limit Assist uses information from the detected road signs and the navigation system data to inform the driver of the speed limit and to help the driver maintain the vehicle within the speed limit.

When ISLA is on and active, the speed limit information **A** will display an alert on the Instrument Cluster of the detected speed limit.

When driving at a speed higher than the displayed speed limit, the speed limit is displayed in red.

 
Intelligent Speed Limit Assist can assist the vehicle to adjust its speed according to the posted speed limit. When the cruising speed is set as the same as the speed limit, the vehicle is designed to adjust its speed if the posted speed limit changes.

ISLA Settings:

- To enable ISLA on, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, SPEED LIMIT, and then select one of the options:
 - **Speed Limit Offset:** The speed limit offset can be adjusted. The vehicle will provide a speed limit warning or adjust driving speed when the current speed exceeds the recognized speed limit plus the selected tolerance value
 - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message and may change the set speed to help the driver stay within the posted speed limit



[Intelligent Speed Limit Assist \(ISLA\)](#)

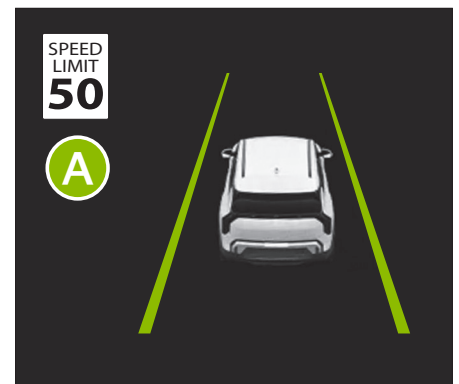

[Continued on next page](#)

ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation. See section 10 in the Owner's Manual for more detailed information, limitations and conditions.



Intelligent Speed Limit Assist (ISLA)^{*†4}

[Continued from previous page](#)

ISLA Settings:

- **Speed Limit Warning:** Informs the driver of the posted speed limit and warns the driver when the vehicle is traveling faster than the posted speed limit
- **Off:** ISLA is disabled



[Intelligent Speed
Limit Assist
\(ISLA\)](#)

QUICK TIP

- You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on.

REMINDERS:

- Vehicle must be parked to change the speed settings
- Additional information may be displayed if additional road sign information is detected
- A red speed limit indicator may display if the posted speed limit is exceeded

 
ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 10 in the Owner's Manual for more detailed information, limitations and conditions.



Instrument Cluster Illumination Control

Press switch **A** up or down to adjust display brightness of the Instrument Panel illumination.

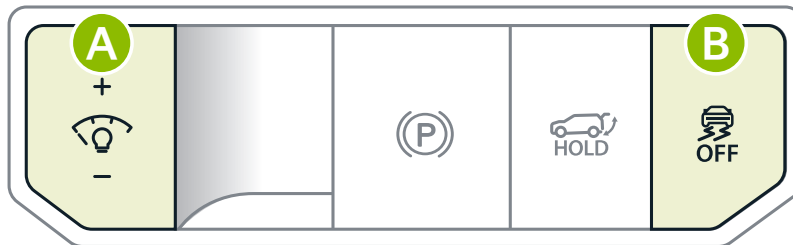

(Button on driver's panel to the left of steering wheel)

Electronic Stability Control (ESC)^{†6}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON whenever possible.



[Electronic Stability Control](#)

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** for more than 3 seconds (ESC OFF indicator will illuminate and an alert sounds).

REMINDERS:

- ESC is active by default at vehicle startup
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Hill-start Assist Control (HAC)^{†6}

The HAC system is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC system automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDERS:

- The HAC system does not operate when the Gear Shift is in the Park or Neutral position
- In the event of an HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 9 in the Owner's Manual for more information.



Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down

QUICK TIP

 
- Press the button again to stop Auto Up/Down function.

- B** Press to Unlock/Lock All Doors

- C** Press to lock rear passenger's windows

QUICK TIPS

- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

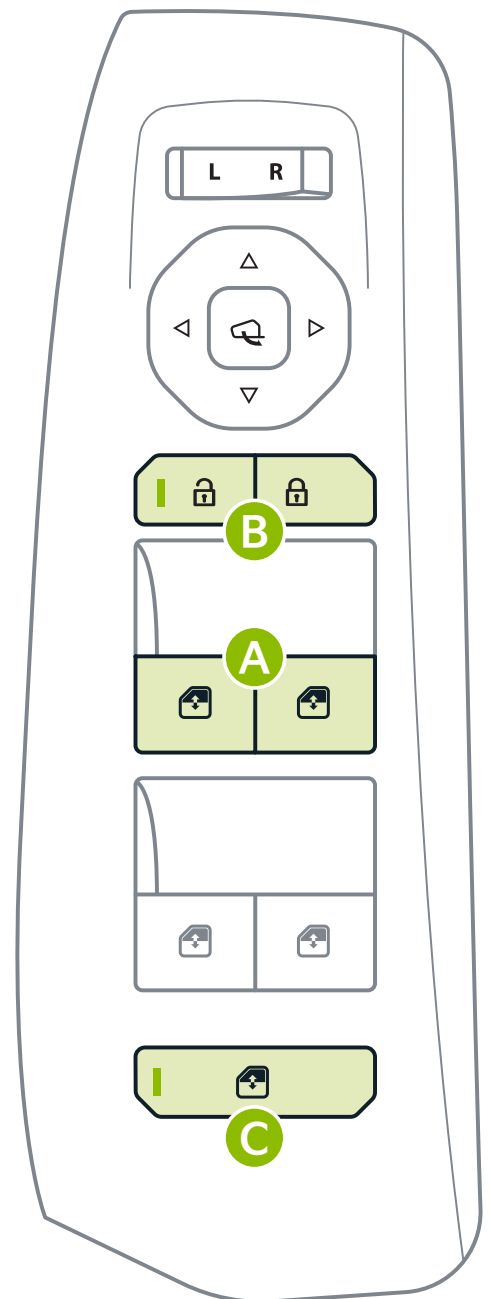

REMINDERS:

- When pressed **C**, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any nearby objects or persons

Refer to section 4 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Automatic Door Lock/Unlock

When enabled, the Automatic Door/Unlock feature may automatically lock all doors when the Gear Shift is moved out of the Park position. To automatically unlock all doors, select **Auto unlock on shift to P or Auto unlock vehicle off**.

Power/Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button* is located on climate control system panel.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Power Folding Outside Mirrors*

Press mirror switch to the left or right **A** to select mirrors. Then press arrows **B** to adjust mirror position.

To automatically fold and unfold both the outside rearview mirrors, press the folding mirror button **C**.

QUICK TIP

- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key.

REMINDER:

- To lock position of mirrors, toggle switch to the neutral (center) position.



Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



EV Gear Shift

To start the vehicle:

1. Depress the brake pedal
2. Press the EV button **A** while Gear Shift is in Park or Neutral **B**



[EV Button and Gear Shift](#)

To turn the vehicle power off, press the EV button. To use the EV button, you must have the Smart Key fob on your person.

EV Button modes:

- **OFF:** The vehicle is off
- **ACC (Accessory):** The vehicle is in accessory position. Limited functions are available
- **ON:** Some vehicle functions are on. Warning lights can be checked
- **START/RUN:** The READY indicator will illuminate and the vehicle is ready to drive

 
 
Gear Shift positions:

P: Park - Press to place in Park **B**. To move out of Park, rotate stalk **C** to D, N or R

D: Drive

N: Neutral

R: Reverse

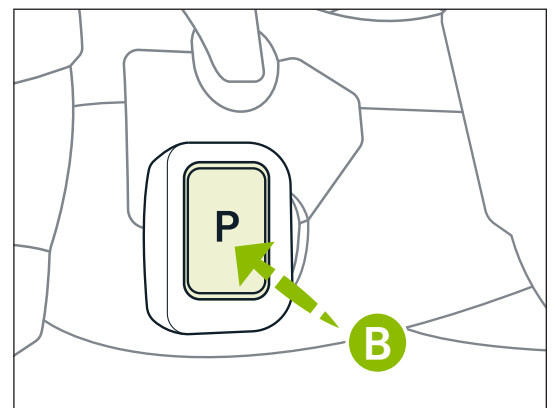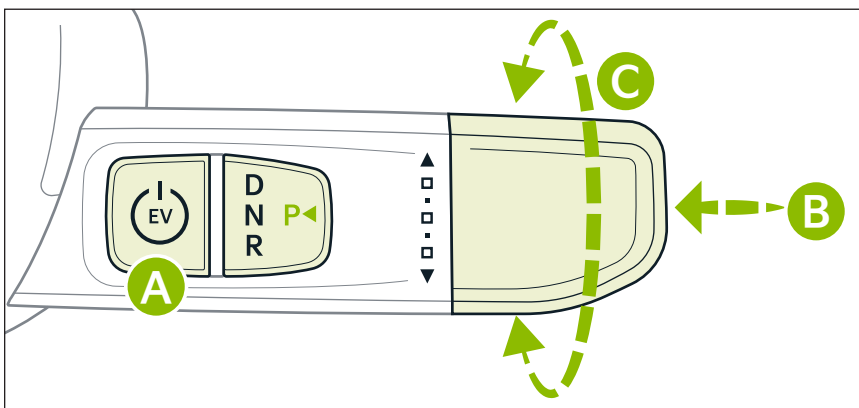

REMINDER:

- The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Heated Steering Wheel*

Press button **A** to turn ON/OFF the steering wheel heater while the EV button is in the ON or READY position.

The steering wheel heater will turn off automatically after 30 minutes, or when button is pressed again to deactivate.



[Tilt/Telescoping/
Heated Steering
Wheel](#)



(Located on Driver's Door Panel)

QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

REMINDER:

- If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

 
Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Headlights & High Beams

To operate:

- Rotate the lever to change the Headlight function
- Push the lever to turn High Beams ON
- Pull the lever to flash Headlights/High Beams

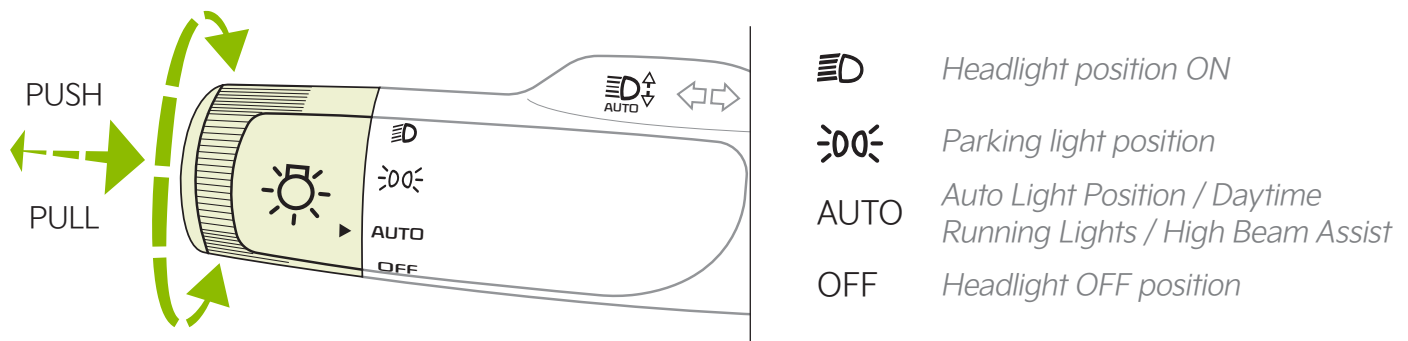

AUTO Light position - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or EV button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Parking brake is applied
- Engine is turned off

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.



[High Beam Assist \(HBA\)](#)

To enable HBA, press the SETUP button on the Infotainment system. Select VEHICLE, LIGHTS, and then HBA (HIGH BEAM ASSIST).

To use HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

HBA does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams.

REMINDERS:

- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- The DRL system turns off when parking brake is applied
- DRL only operates during the daytime

Refer to section 5 in the Owner's Manual for more information.



 
Turn Signals

To operate:

Turn Signals - Slightly move the lever up/down to activate One-Touch Lane Change Signal. Move the lever Up/Down for Right/Left Turn Signal

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly up or down for less than 1 second and then releasing. The lane change signal will blink 3-7 times.

To activate or deactivate the One Touch Turn Signal function or choose the number of blinks (3, 5, or 7) by selecting Vehicle, Lights, and One Touch Turn Signal.

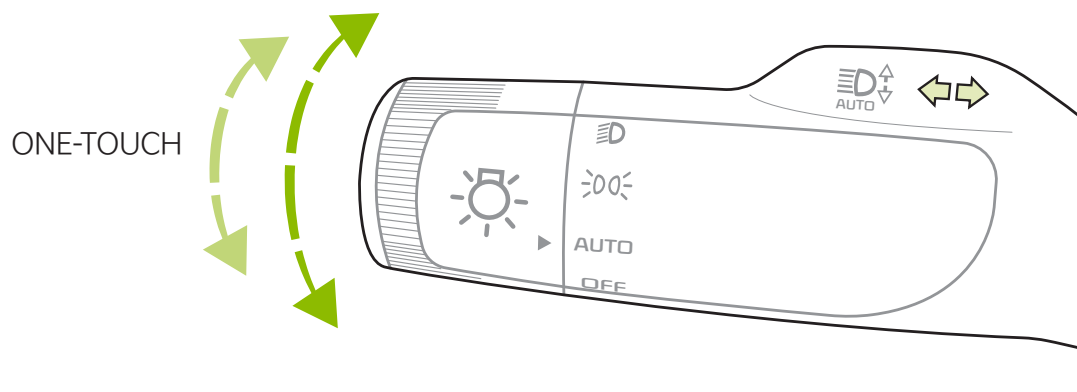

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



 
Windshield/Rear Wipers & Washers

To operate Windshield Wipers and Washers:

- Move the lever Up/Down to change front Wiper modes
- Press the switch **A** Up (fast) / Down (slow) to adjust Intermittent Wipe Speed
- Pull the lever to spray and wipe front windshield



[Wipers and Wiper Stalk](#)

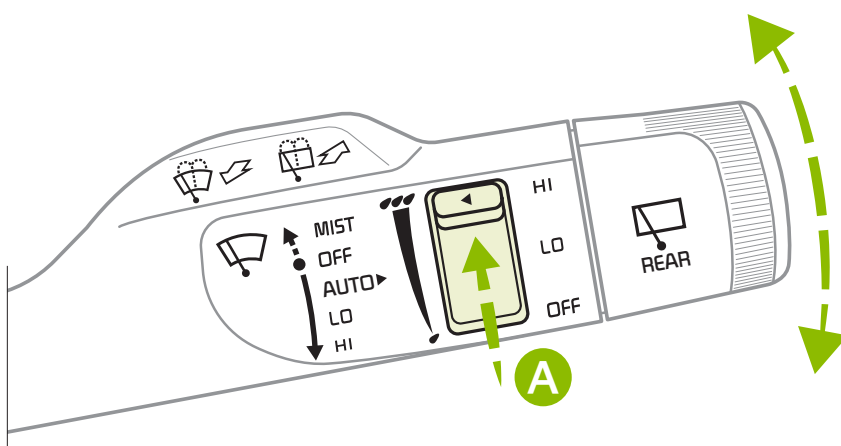

WINDSHIELD MIST: Single wipe

OFF: Wiper off

INT/AUTO: Auto control wipe (rain sensing)

LO: Slow wipe

HI: Fast wipe

Rain Sensing* (Auto Control Wipe):

- The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops
- To vary the speed setting, press the Wiper Switch **A** up/down
- If the wiper lever is set in AUTO mode when the EV button is ON, the wiper will operate once to perform a self-check of the system

QUICK TIPS

- Pressing switch **A** up increases intermittent wipe frequency and wipe speed. Pressing switch **A** down decreases frequency of wipes
- When the wiper is not in use or washing the vehicle, set the wiper switch in the OFF position to stop the auto wiper operation

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.

 


Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **A**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

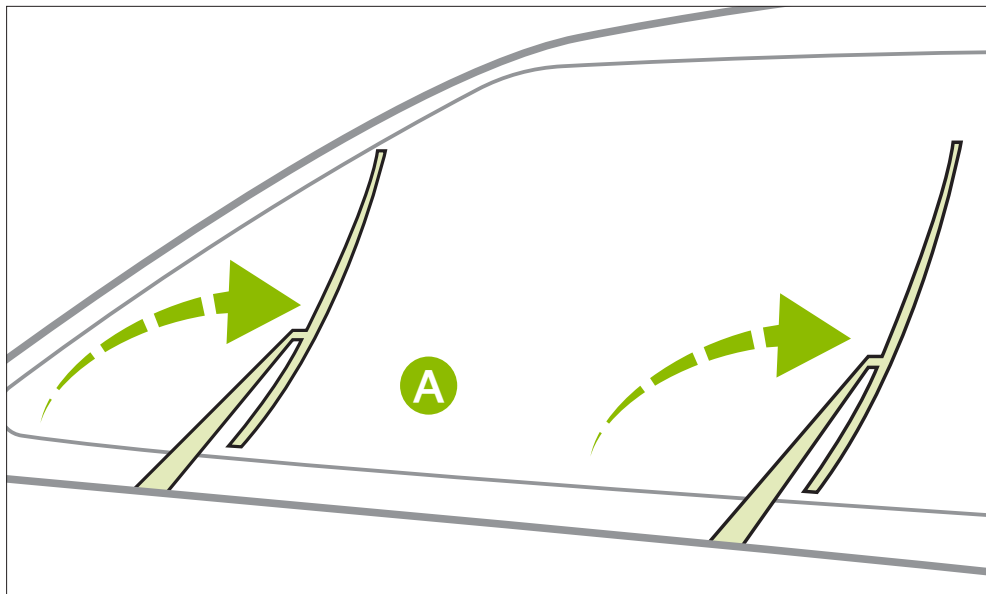


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Manual Tilt/Telescoping Steering Wheel^{†20}

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust **B** to the desired angle and **C** to the desired distance.

 When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.

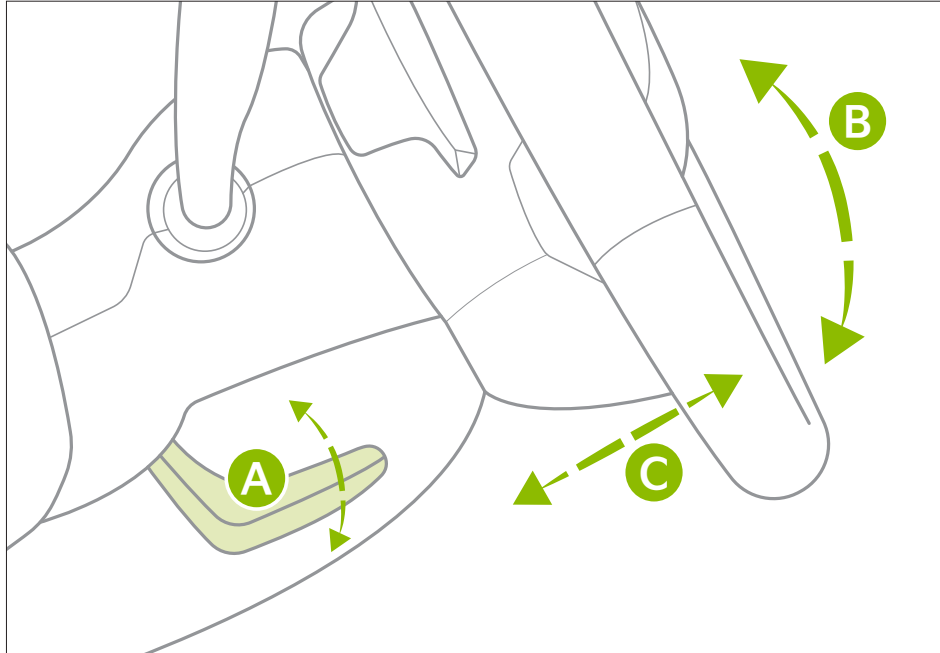

Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.

Refer to section 5 in the Owner's Manual for more information.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Android Auto™ †3 Setup

Compatible smartphone setup —

Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the device.



[Wireless
Android Auto](#)

Infotainment System wireless setup:

1. Press the **SETUP** key on the Infotainment System. Press DEVICE CONNECTIONS, select PHONE PROJECTION and then ANDROID AUTO OPTIONS. Toggle on ENABLE ANDROID AUTO
2. In DEVICE CONNECTIONS, press ADD NEW - ensure you're smartphone has Bluetooth and Wifi turned on - and select the Vehicle Name you see on the Infotainment System screen in the searched *Bluetooth®* devices on your phone
3. Confirm the verification code matches and approve
4. Follow the onscreen prompts on the infotainment system
5. Agree to enable Android Auto™ from your smartphone
6. Review all terms, conditions and requests on the head unit and phone. If you agree, accept them in order to use Android Auto™
7. On the Infotainment System home screens, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

[Continued on next page](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Android Auto™ †3 Setup

[Continued from previous page](#)

QUICK TIPS

- If Android Auto™ randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ app concerns

REMINDERS:

- Android Auto™ compatibility requires OS Android™ 5.0 or higher, the phone manufacturer's USB cable provided and data plan with applicable feature(s). Always update your phone to the latest operating system release
- Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Apple CarPlay^{®†3} Setup

Wireless setup:

1. Enable Apple CarPlay[®] on your compatible iPhone[®] under Settings, General and CarPlay
2. Press the SETUP key on the Infotainment System. Press DEVICE CONNECTIONS, DEVICE CONNECTIONS again and ADD NEW — ensure your smartphone has *Bluetooth*[®] and Wifi turned on — and select the Vehicle Name you see on the Infotainment System screen in the searched *Bluetooth*[®] devices on your phone
3. Confirm the verification code matches and approve
4. Follow the onscreen prompts on the infotainment system
5. Agree to enable or toggle on ENABLE APPLE CARPLAY
6. Review all terms, conditions and requests on the head unit and phone
7. On the Infotainment System home screens, select the Apple CarPlay button, where you'll see all the Apple CarPlay[®] supported apps



[Wireless
Apple CarPlay](#)

[Continued on next page](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Apple CarPlay^{®†3} Setup

[Continued from previous page](#)

QUICK TIPS

- If Apple CarPlay[®] randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Apple CarPlay[®] app concerns

REMINDERS:

- Apple CarPlay[®] compatibility requires iOS[®] software 8.0 or higher, the phone manufacturer's USB cable provided and data plan with applicable feature(s). Always update your phone to the latest operating system release
- Apple CarPlay[®] runs on your smartphone cellular data service. Normal data rates will apply

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Bluetooth® Wireless Technology^{†3,18}

 
- A Volume button:** Press up/down to raise/lower speaker volume
Mute button: Push to mute the microphone during a call
- B Voice Recognition button:** Press to activate voice recognition/bring up menus with voice command prompts from the system. Press and hold to start voice recognition of a connected smartphone via phone projection (button operation may vary depending on smartphone specifications). To exit Voice Recognition press any other button
- C Call / End Call button:** Press to receive/place/end calls. In vehicles with navigation, if no phone is paired, press button to pair a phone



[Steering Wheel Controls](#)



[Automatically Activated Bluetooth](#)

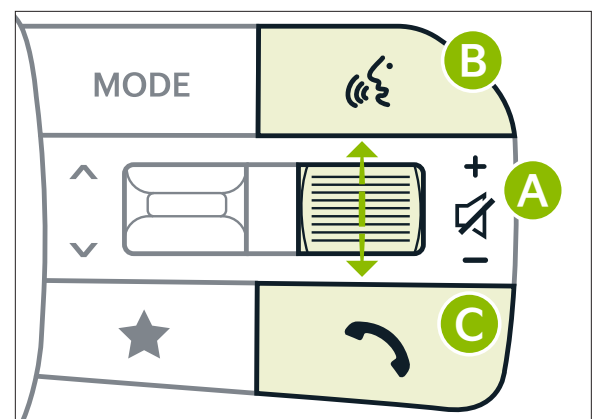

(Buttons located on left side of Steering Wheel)

QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple Bluetooth® devices

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

Pairing a Phone:

1. Press the SETUP key on the Infotainment System
2. Press DEVICE CONNECTIONS, DEVICE CONNECTIONS again and ADD NEW - ensure your smartphone has Bluetooth turned on
3. Select the Vehicle Name you see on the Infotainment System screen in the searched Bluetooth devices on your phone
4. Confirm the verification code matches and approve
5. Follow the onscreen prompts on the infotainment system



[Placing & Receiving a Call](#)



 
[Bluetooth® Pairing](#)

How to Place a Call:

- **Option 1:** Press the Call / End Call button **A** (displays the phone screen with call history)
- **Option 2:** Press the Voice Recognition button **B**. Then say the command “Call {name}” or “Dial {number}” followed by contact name or number

QUICK TIPS

- During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future Bluetooth® connection requests
- When using the voice command feature, wait for the system to BEEP before speaking the command

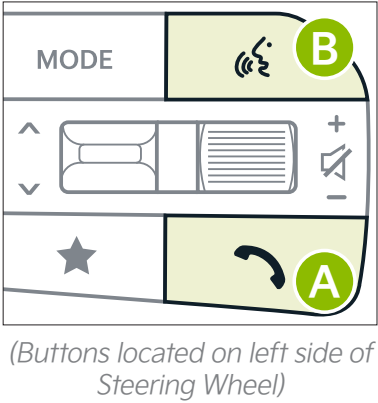

[Continued on next page](#)

Bluetooth® wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device (sold separately). Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. See your Owner's Manual for more details. For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive and always exercise caution when using the steering-wheel-mounted controls while driving.

[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED

Bluetooth® Wireless Technology† 2,17

[Continued from previous page](#)

Voice Recognition & Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the *Bluetooth® Wireless Technology* Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (e.g., “John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (e.g., @, &, #, /, -, *, +, etc.)
- Avoid using acronyms (e.g., “In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (e.g., “Doctor Smith” vs. “Dr. Smith”)



[Voice Recognition Tips](#)



[Voice Recognition - Wake Up Word](#)

QUICK TIPS

- *Bluetooth®* Music Streaming - If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Close windows and turn off A/C - Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition* button and say “Help” to get a list of available commands
- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Steering Wheel Audio Controls^{†18}

A Audio MODE button: Press to cycle through FM/AM/SiriusXM®/Media modes

Audio System ON/OFF: Press to turn power on; Press and hold to turn power off

B Seek/Preset button:
FM/AM/SiriusXM® Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek

Media Mode: Press up/down to move Track Up/Down. Press and hold up/down to fast forward/rewind (except for *Bluetooth®* Audio)

C Volume button: Press up/down to raise/lower volume

Mute button: Press to mute/unmute all audio (Media pauses in some Media modes when pressed)

D Custom button ★: Press and hold to program the Custom Button, then select an available feature you would like the Custom Button to open



 
[Steering Wheel Controls](#)



[Quick Control Menus, Haptic Buttons & New Features](#)



[Custom Star Button & Radio Favorites](#)

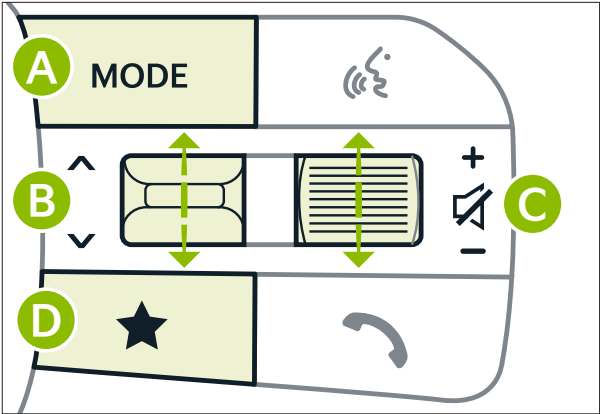

(Buttons located on left side of Steering Wheel)

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See the Owner's Manual or the Car Infotainment System Quick Reference Guide.

[†]LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Kia Connect Activation - Infotainment System^{*†1}

Follow these steps to activate your Kia Connect system:

1. Enter the settings screen on your Infotainment System:
 - a. Press the SETUP button
 - b. Press the DATE/NETWORK button
 - c. In Kia Connect, press ACTIVATE



[Kia Connect Activation](#)



[Kia Connect Infotainment System \(CCNC\)](#)

Follow the instructions on the screen to proceed with activation, or the steps below:

1. Read the Terms of Service and press AGREE
2. Enter number or email address to receive a verification code, then press OK and SUBMIT
3. Click on the link and a page will open requesting you to create an account; provide the information needed and select SAVE to create the account
4. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
5. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy

REMINDER: This vehicle is equipped with over-the-air system updates.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.



 
Kia Connect Assistance*†1

Kia Connect  **A** - Press to connect to a virtual assistant to hear information about the Kia Connect features.



[Kia Connect Assistance](#)

Roadside Assist  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services.

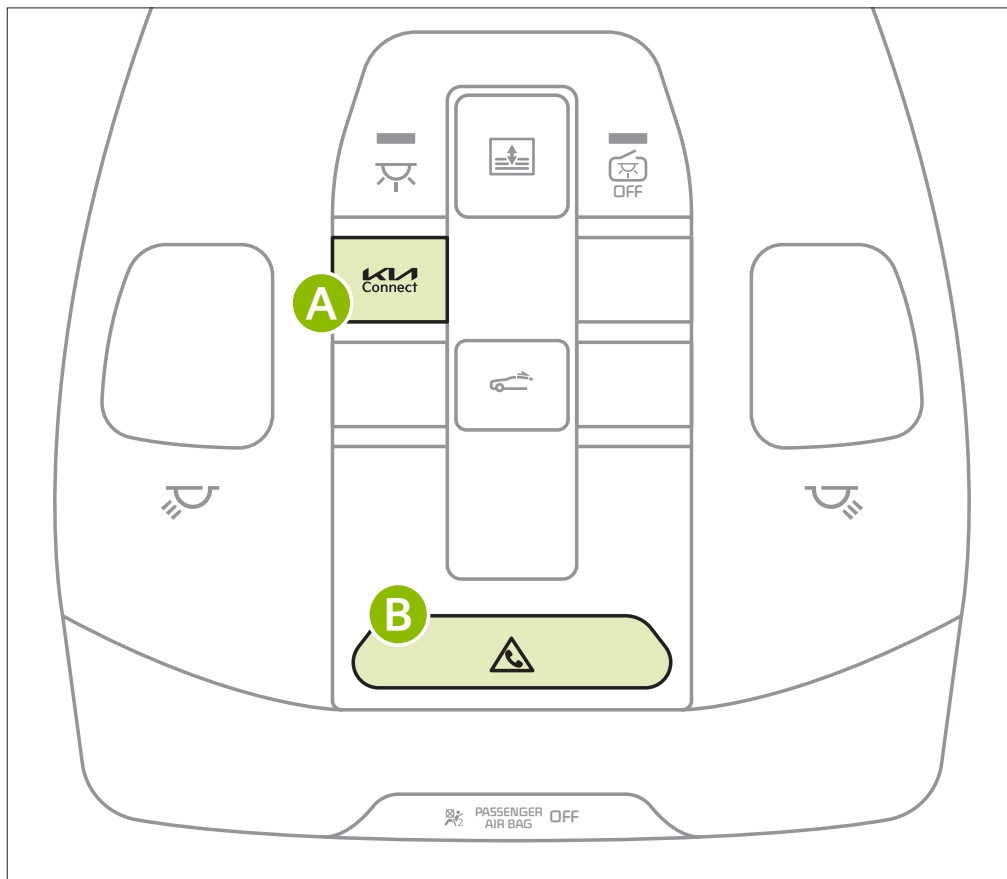

(Buttons located on overhead console*)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle. Images are for illustrative purposes only and may not reflect actual feature or operation.



Kia Access App^{†2} Download

Go to an app marketplace to download the Kia Access App. Once you download the app, make sure you register your vehicle and start an account (refer to Kia Connect^{†1} Activation page). Get to know your new Kia and the available convenient features on the app.



[Download the Kia Access App](#)



[Kia Connect App Overview](#)

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength to use Kia Connect^{†1}. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the vehicle
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Access^{†2} App will not turn the vehicle on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Access^{†2} App to turn on the vehicle

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.



Kia Access App^{†2} Feature Guide

The Kia Access App Features Guide is a guide to help you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles



[Kia Access App
Features Guide](#)



[Kia Connect App
Overview](#)

 
Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.



Kia Connect Infotainment System w/ Navigation^{†9*}

- FM/AM/SiriusXM^{®†16}/Media (USB, *Bluetooth*^{®†3} Audio, etc.)

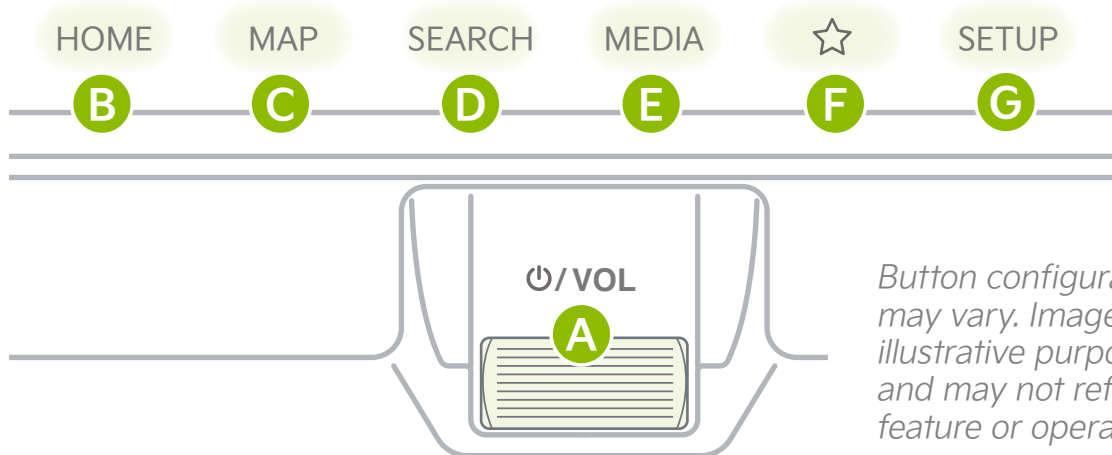

- A** Press to turn on/off the Media. Press and hold to turn off the screen and sound. Rotate to adjust the volume. If enabled, use to change radio stations, scan media, or zoom in and out on the Map screen
- B** Press to display the HOME screen. Press and hold to turn on/off the Quick Control function
- C** Press to display the current position on the map screen or repeat the voice guidance when active
- D** Press to display the SEARCH function
- E** Press to display the connected media, or press and hold to display the Media home screen
- F** Press to go to the preset feature, or press and hold to set the desired feature
- G** Press to display the Settings screen



[Quick Control Menus, Haptic Buttons & New Features](#)



[Navigation System Tips](#)



[EV Features & Settings](#)



[Sound Settings & Premium Sound](#)



[Kia Connect with Navigation](#)

[Continued on next page](#)



Kia Connect Infotainment System w/ Navigation^{†9*}

- FM/AM/SiriusXM^{®†16}/Media (USB, *Bluetooth*^{®†3} Audio, etc.)

[Continued from previous page](#)

To adjust the sound settings: Press the **SETUP** button on the Infotainment System. Select the onscreen SOUND button. Select the menu item to adjust settings.

Radio Presets/Favorites: To save a preset, when in Radio Mode, press the star button to add a preset/favorite.

SiriusXM^{®†16} Smart Favorites: In Radio mode, choose SiriusXM[®], then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program the Custom Button to one of the available features, press and hold the Custom Button ☆. Select one of the available features you would like the Custom Button to open.



[Navigation
System Tips](#)



[EV Features &
Settings](#)



[Custom Star
Button &
Radio Favorites](#)

[Continued on next page](#)

For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.



Kia Connect Infotainment System w/ Navigation^{†9*}

- FM/AM/SiriusXM^{®†16}/Media (USB, *Bluetooth*^{®†3} Audio, etc.)

[*Continued from previous page*](#)

QUICK TIPS

- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay® (USB-C connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the vehicle power is on to prevent battery discharge

REMINDER:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Digital Clock - Infotainment System

Press SETUP on the Infotainment System, select General, then select Date/Time from the menu to adjust.

QUICK TIPS

- The clock can be set to adjust automatically. To enable auto time setting, DAYLIGHT SAVINGS must be selected in the Settings Screen
- To manually set the time and date, the GPS time must be turned off in the Clock Settings

For further Kia Connect with Smart Navigation operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving.

 


USB-C Ports & Power Outlets*


The USB-C Charger Ports are located on the center panel and behind the Center Console **A**. Devices can be recharged using a USB-C cable. The EV Power button needs to be in the Accessory, Power On or Ready modes position to operate the USB Charger Ports.



[USB-C Ports and Power Outlets](#)

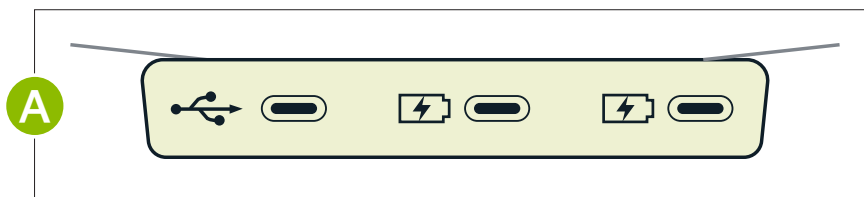

 Power Outlets **B:** Use the power outlet for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

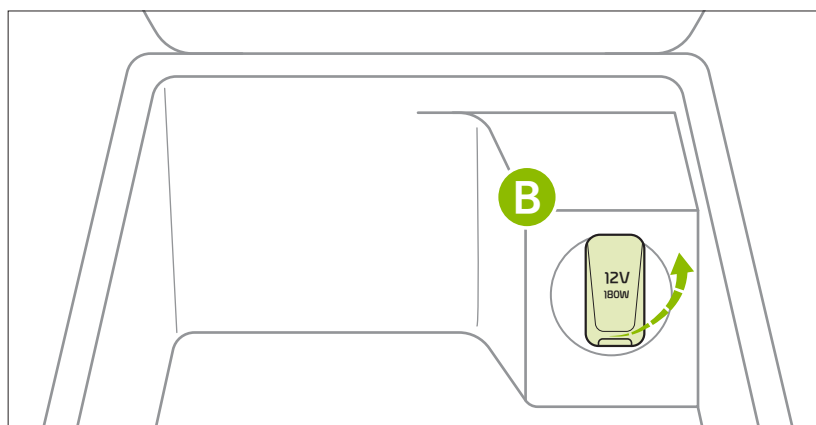

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

REMINDERS:

- Only use cables made by your device manufacturer. Third party cables may damage your device
- The Multimedia USB-C data port is located to the left of the Power Outlet. The USB Charger Port does not support data transfer

Refer to section 8 in the Owner's Manual for more information.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Wireless Smartphone Charging System

 
Charge a compatible Qi™ Certified smartphone wirelessly by placing it on the charging pad **A** in the front of the center console while the vehicle is on.



[Wireless Smartphone Charging](#)

1. Enable Wireless Charging in the Vehicle Settings on the Infotainment System. Press the SETUP button, VEHICLE to enter Vehicle Settings, CONVENIENCE then select WIRELESS CHARGING SYSTEM FOR MOBILE DEVICES
2. Place a compatible smartphone on the center of the charging pad **A**
3. Indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

Requires Qi™ enabled device or Qi™-enabled case

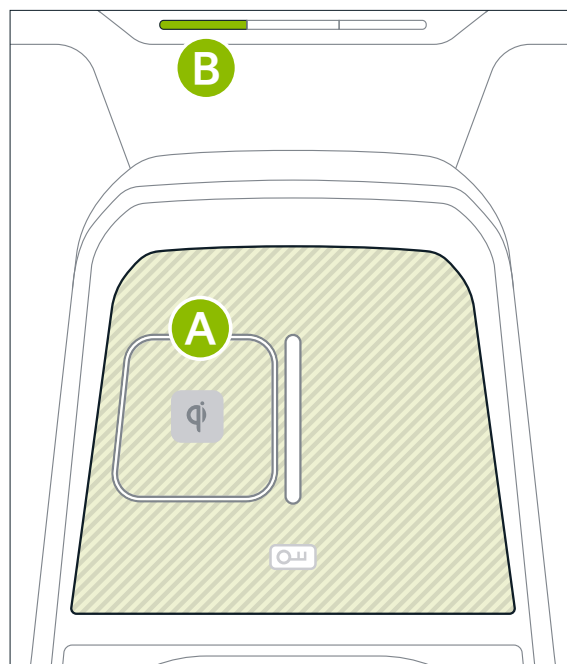

[Continued on next page](#)

Refer to the section 8 in the Owner's Manual for warnings and instructions.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Wireless Smartphone Charging System

[Continued from previous page](#)

QUICK TIPS

- The smartphone must be a compatible phone with Qi™ function available
- Wireless charging must be enabled in Vehicle Settings
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging so as to not to impede the charging area
- Removing the phone case may improve charging efficiency and help ensure a secure connection
- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle

REMINDERS:

- Some smartphone models are not Qi™ certified, which may effect the speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

Refer to the section 8 in the Owner's Manual for warnings and instructions.

 


Automatic Climate Control System

- A** Driver ONLY select button
- B** SYNC button* - Press to sync the driver and passenger temperature
- C** Infotainment System Screen on/off button
- D** Front-windshield defroster button
- E** Rear-window defroster button
- F** Air intake control button
- G** Air conditioning (A/C) on/off button
- H** AUTO (automatic control) button
- I** Fan speed control/OFF button
- J** Front/rear climate control switching button
- K** MODE selection button
- L** Driver's side temperature control lever
- M** Fan speed control/OFF lever*
- N** Mode selection lever*
- O** OFF/Passenger side temperature control lever*



[Climate Control System](#)

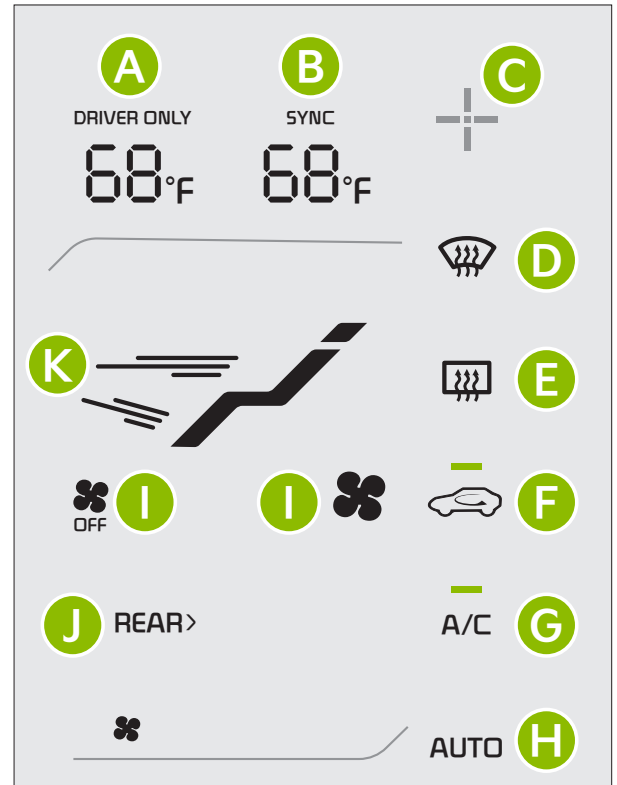

(Button panel located on dashboard above center console.)

Climate Control Auto Function

Press AUTO to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected. Press the temperature control button **A** to the desired temperature.

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.



Automatic Climate Control System

[Continued from previous page](#)

Auto Defogging System: Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press and hold the Front Defrost button  for three seconds when the vehicle power is on (the defrost button light will flash three times and the ADS OFF icon will illuminate). To turn Auto Defogging on again, press and hold the Front Defrost button  again for three seconds and the defrost button light will flash six times and ADS OFF icon will turn off.

Driver Only Ventilation: Driver Only Ventilation restricts air flow to the driver's side vents only. This can help to improve driving range by limiting the power drawn from the battery. Press DRIVER ONLY button  to enable air flow through the driver's side vents only.



[Climate Control System](#)



[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.

*IF EQUIPPED

Automatic Climate Control System

[Continued from previous page](#)

 
 
Defrost Outside and/or Inside Windshield:

1. Set Front Fan Speed **B** to the highest position
2. Set **Temperature C** to **Hot**
3. Press the **Front Defrost D** button 

Air Flow Modes: To select Air Flow Modes, press the Mode **E** selection button:



[Climate Control System](#)

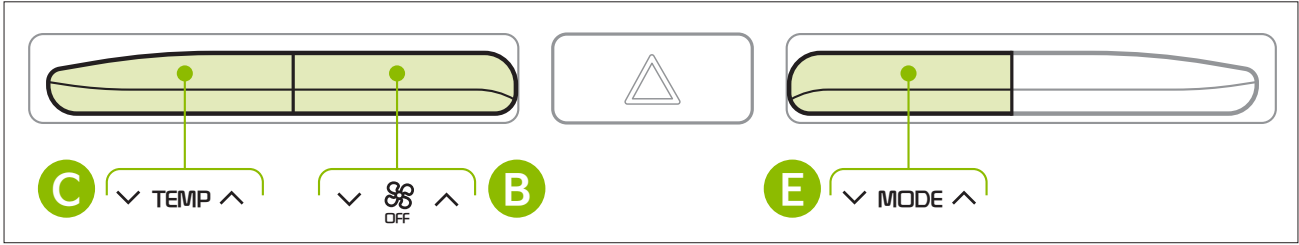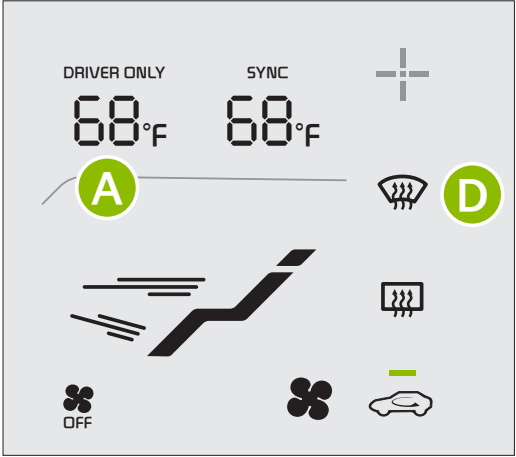

(Button panel located on dashboard above center console.)

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve defog performance
- During Auto Operation, the A/C indicator will not illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.

*IF EQUIPPED



Automatic Climate Control System

[*Continued from previous page*](#)

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the A/C and heater may allow the Energy Consumption to increase, especially excessive use of the heater

Refer to section 8 in the Owner's Manual for more information.



Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

 


[Electronic Parking Brake \(EPB\) / Auto Hold](#)

Applying the Parking Brake

Pull up the EPB switch **A**.

Ensure that the indicator light  is illuminated on the Instrument Cluster.

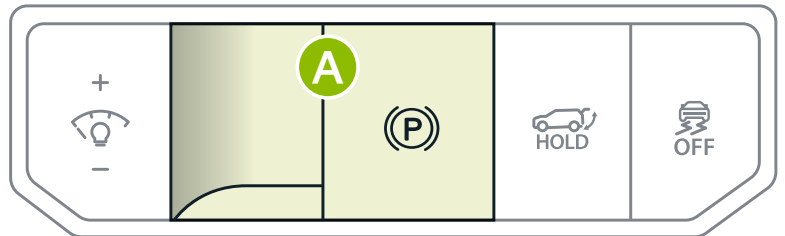

(Located on panel to the left of steering wheel)

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of Park to Drive, or to Reverse or shifted out of Neutral to Drive, or to Reverse.

Manually, depress the brake pedal, then press the EPB switch **A** down with the ignition switch in the ON position. Ensure that the indicator light  is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- With the EPB system activated, pull up and hold the EPB switch again to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned on
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned on/off using the AUTO HOLD switch **A**



[Electronic Parking Brake \(EPB\) / Auto Hold](#)

on the center panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator has four states:

Standby (white): With vehicle in Park, at a standstill, and AUTO HOLD switch **A** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.



(Located on center console)

Engaged (green): When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

OFF (not illuminated): The indicator will turn off when the AUTO HOLD switch **A** is turned off or when the EPB is manually turned on.

Malfunction (yellow): When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold maintains ON or OFF between ignition cycles
- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



 
Seat Warmers / Ventilated Seats^{*†15} (Driver & Front Passenger)

A Seat Warmers — Press the top of the button once for high setting (3 amber LEDs lit), again for middle setting (2 amber LEDs lit), again for low setting (1 amber LED lit). Press again to turn OFF.




[Seat Warmers /
Ventilated Seats](#)

B Ventilated Seats — Press the bottom of the button once for high setting (3 blue LEDs lit), again for middle setting (2 blue LEDs lit), again for low setting (1 blue LED lit). Press again to turn OFF.

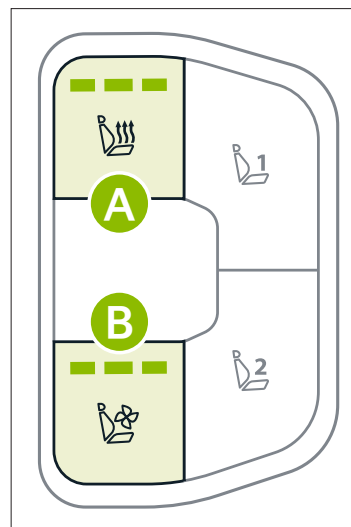

(Located on Driver's
Door Panel)

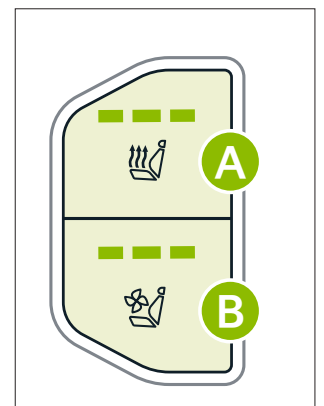 

(Located on Passenger's
Door Panel)

Rear Seat Warmers — To turn the rear seat warmers on, press the CLIMATE button on the Infotainment System screen. Then press REAR WARMER, and adjust as needed.

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default

REMINDER:

- Use extreme caution when using the seat warmers to avoid burns
- You can also press and hold buttons to turn off the seat warmer / ventilation

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.



 
Infotainment System Seats Settings*

To adjust the settings for Seating Easy Access, Seat Position change alert, Smart support, Ergo-motion seat, press SETTINGS on the Infotainment Screen.

Press the **VEHICLE** button, then SEATS to access the settings.



[2nd-Row Seats Settings](#)

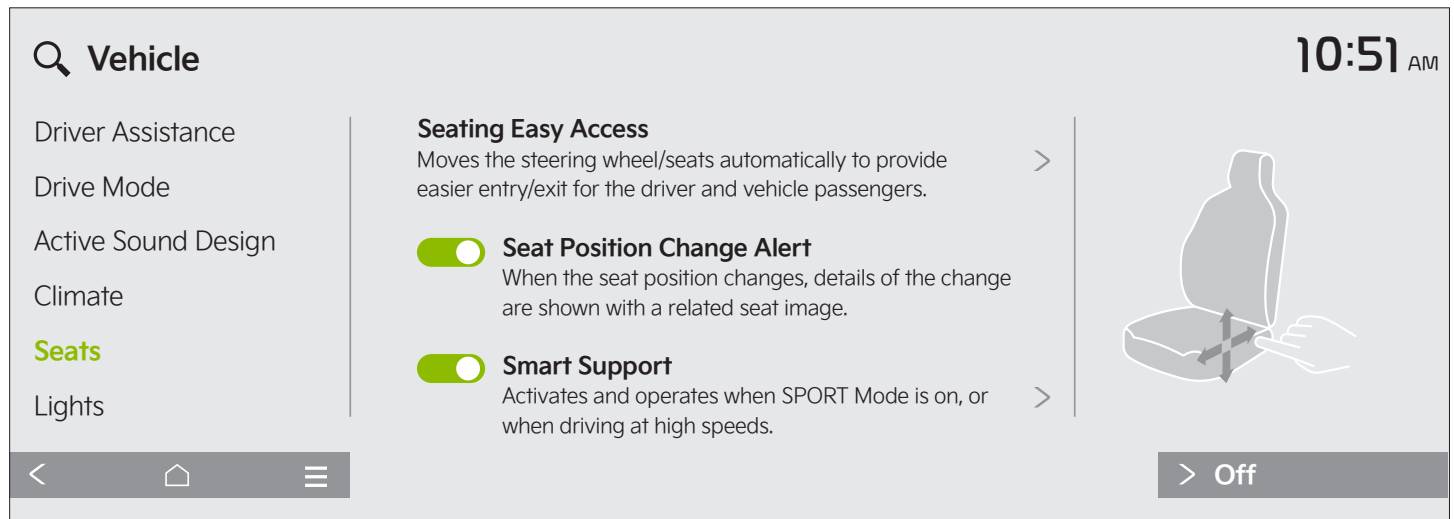

Refer to section 6 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat, the Outside Rearview Mirrors, Instrument Panel Illumination brightness and Head-Up Display settings.

To store settings into memory:

1. Press Park on the Gear Shift with the vehicle power on.
2. Adjust the Driver's Seat, Outside Mirrors and other settings.
3. Press and hold one of the memory buttons 1 or 2 **A**.

The system will beep once when memory has been stored.



(Located on Driver's Door Panel)

Refer to section 5 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Front Seat Headrest Adjustment^{*†7}

To raise headrest: Pull headrest up.

 
To lower headrest: Press lock **A**, then press the headrest down.

The headrest can be adjusted forward and backward by pressing button **A** and pulling it forward or backward as desired.

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull/push the headrest.

REMINDER: Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

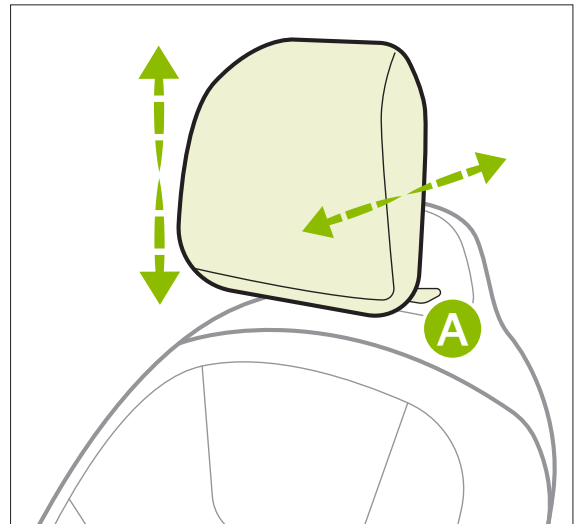

Refer to section 6 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Power Adjustable Driver's Seat*† 13

 
Move/Press controls **A** - **D** to adjust the Seat forward/backward, the Seat Cushion tilt up/down, the Seatback forward/backward, Lumbar forward/backward.




[2nd-Row Seats: Power Switches, Walk-In Buttons](#)



[Power Adjustable Driver's Seat - Memory Settings](#)

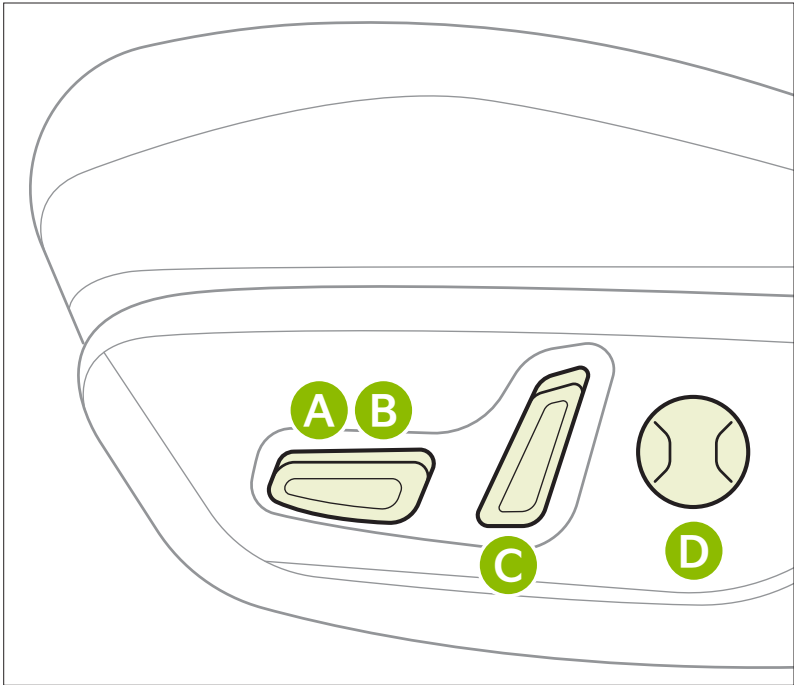

 REMINDER: Do not attempt to adjust the Seat while the vehicle is moving. This could result in loss of control of the vehicle.

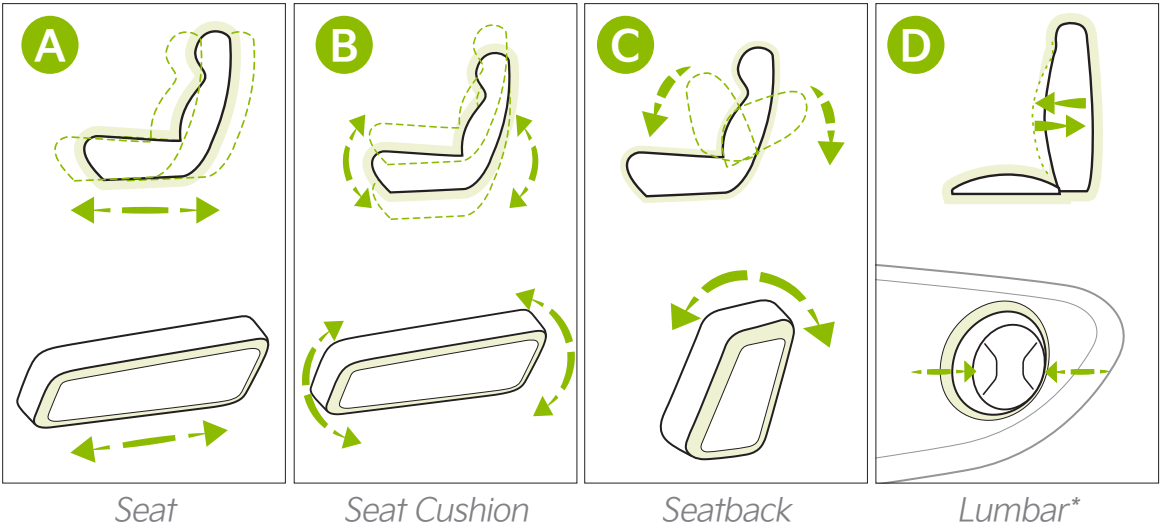

Always keep the seatback in an upright position whenever the vehicle is in motion. If a seat is reclined during an accident, the restraint system's ability to restrain the passenger will be greatly reduced.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED

 
 


Relaxation Comfort Seats^{*† 13}

Relaxation Mode - Press the rear part of the button **A** to activate Relaxation Mode. Press the front part of the button **B** to return seat to its original position.



[Relaxation Mode](#)

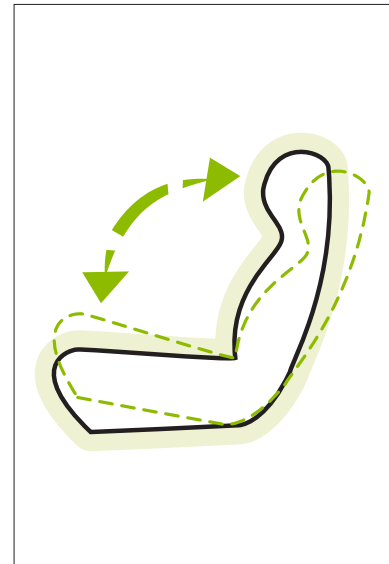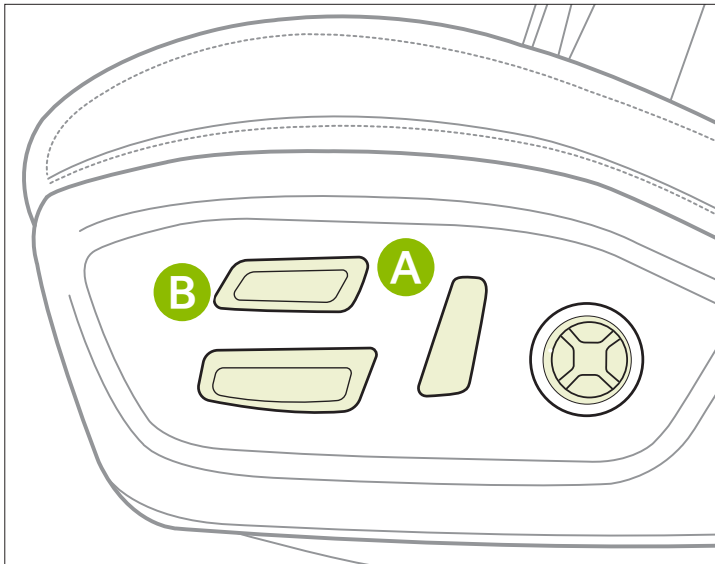

Do not use Relaxation Mode while the vehicle is moving. Using Relaxation Mode could distract the driver and increase the risk of injuries in the event of a collision or sudden stop.

If you operate Relaxation Mode, the seat belt may not adhere to your chest firmly, so use this Mode only when parked/stopped or while resting.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Folding Rear Seats^{†13}

To fold the Rear Seatback:

1. Set the front seatback in the most upright position and if needed, slide the seat forward.
2. Lower the headrest to the lowest position
3. Insert the rear seat belt buckle **A** into the pocket between the rear seatback and cushion. Insert the seatbelt webbing in the guide which prevents the seat belt from being damaged in the latch when seatbacks are placed back to the upright position
4. Pull the seatback folding lever **B**
5. Fold seatback toward the front of the vehicle

REMINDERS:

- When you return the seatback to its upright position, always be sure it has locked into position by pushing on the top of the seatback
- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle

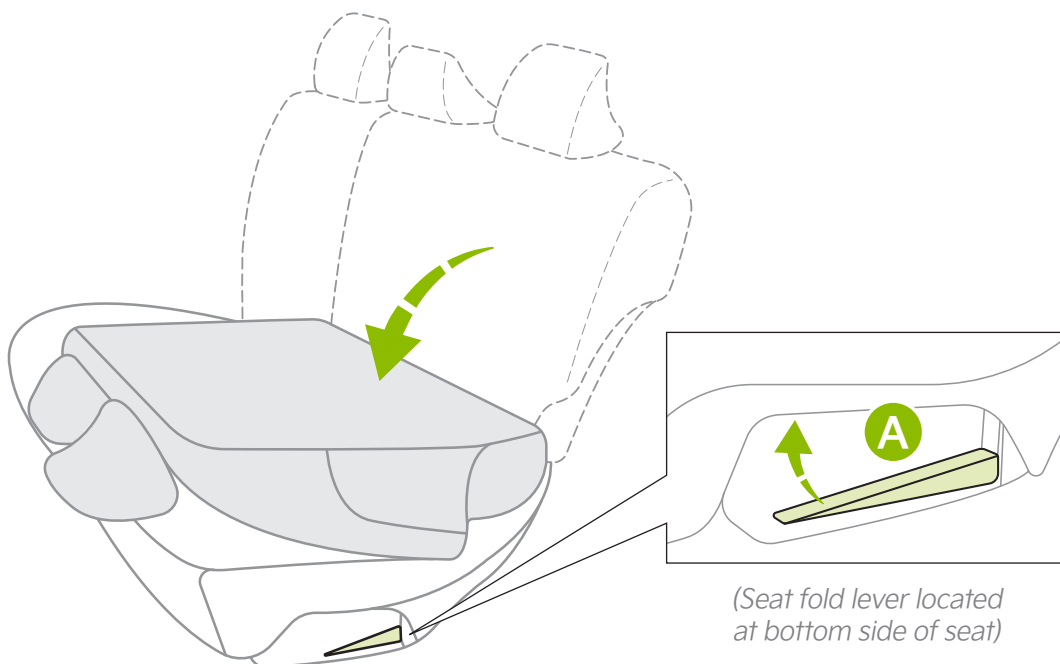

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 6 in the Owner's Manual for more information.



Rear Occupant Alert (ROA) with Door Monitoring^{†11}

Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster: “Do Not leave Children or pets alone” .

The factory default is set to ON. To turn the system on or off, go to Vehicle Settings on the Infotainment System by selecting SETUP, VEHICLE, CONVENIENCE, then REAR OCCUPANT ALERT and check/uncheck the box.



[Rear Occupant Alert \(ROA\) with Door Monitoring](#)



Do Not leave Children
or pets alone.

(Message on Cluster Display)

REMINDERS:

- Always be sure to check the passenger areas before leaving the vehicle
- ROA uses a rear door opened/closed history, which is reset after the driver turns the vehicle off, exits the vehicle and locks the door remotely. So even if a rear door does not reopen, Rear Occupant Alert (ROA) alert can occur
- ROA notifications also require a Kia Connect^{†1} subscription, a compatible smartphone, and a wireless signal with good coverage to function. Normal cellular service rates may apply

When engaged, Rear Occupant Alert is not a substitute for one's attention within the vehicle. Always check the vehicle interior when exiting the vehicle.

See section 4 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



 
HomeLink[®]†3 with Electrochromic Rearview Mirror*

The HomeLink[®] / Electrochromic Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.



[HomeLink[®]
Support Link](#)

- A** HomeLink[®] Channel 1
- B** HomeLink[®] Channel 2
- C** HomeLink[®] Channel 3
- D** Garage Door Opener Status Indicator: Closing or Closed
- E** HomeLink[®] Operation Indicator
- F** Garage Door Opener Status Indicator: Opening or Open
- G** HomeLink[®] User Interface Indicator

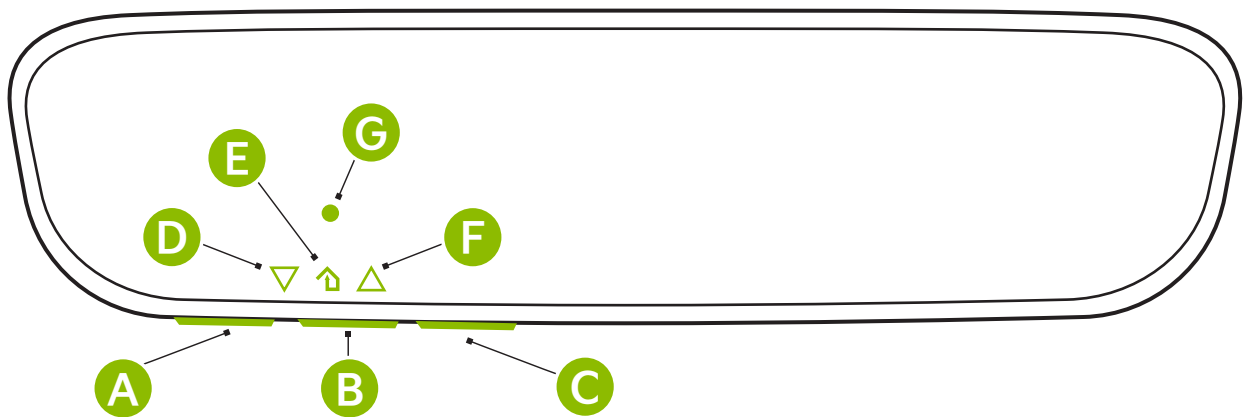

[Continued on next page](#)

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink[®] system, you may need to purchase a HomeLink Repeater Kit.

For more information, go to www.HomeLink.com or call (800) 355-3515.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

HomeLink^{®†3} with Electrochromic Rearview Mirror*

[Continued from previous page](#)

How to Sync Transmitter with HomeLink^{®*}

 


[HomeLink[®] Support Link](#)

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and **B** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **D** or **B** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink[®] Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

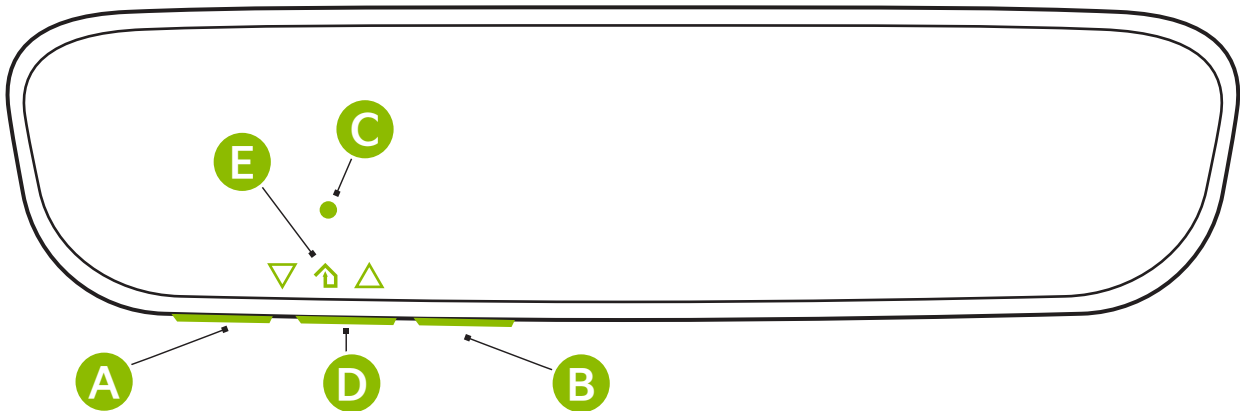

QUICK TIPS

- You can reprogram a single HomeLink[®] button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

[Continued on next page](#)

For more information, go to www.HomeLink.com or call (800) 355-3515.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED

HomeLink^{®†3} with Electrochromic Rearview Mirror*

[Continued from previous page](#)

To finish programming rolling code garage door openers, complete these steps:

 
- 3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
- 4. Firmly press and release the programmed HomeLink[®] button up to three times

Operating HomeLink[®]:

Press one of the programmed HomeLink[®] buttons.

Erasing programmed buttons:

Press and hold the **A** and **B** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

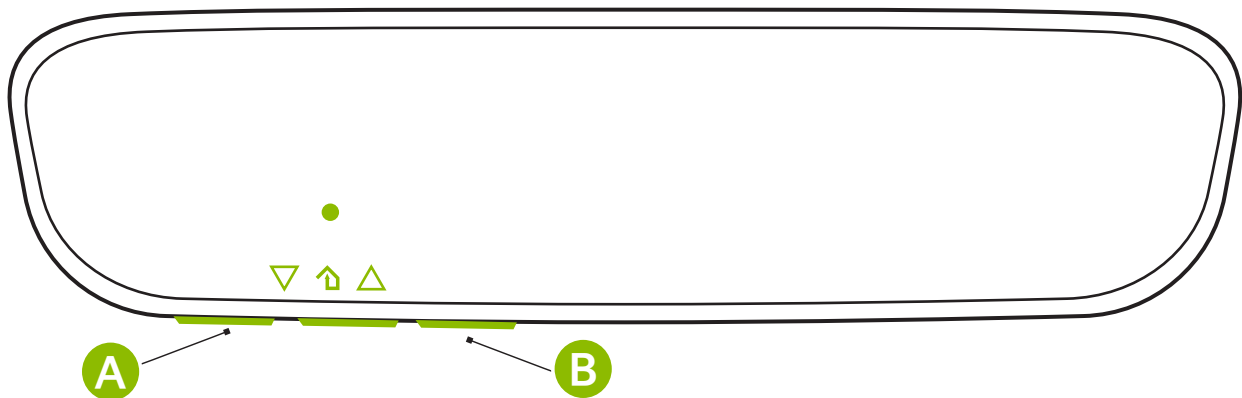

If your garage door opener was manufactured in 2011 or later, and you’re unable to program your vehicle’s HomeLink[®] system, you may need to purchase a HomeLink Repeater Kit.

For more information, go to www.HomeLink.com or call (800) 355-3515.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



 
Front Trunk

The front trunk **A**, located under the hood, provides extra cargo space. Open the hood to access the front trunk.

Opening the Hood:


1. Pull the hood release lever **B** to unlatch the hood
2. In the front of the vehicle, lift the hood slightly, push the secondary latch **C** to the left inside of the hood's center and lift the hood

Closing the Hood: Lower the hood about halfway and then release hood to drop into place and securely latch.

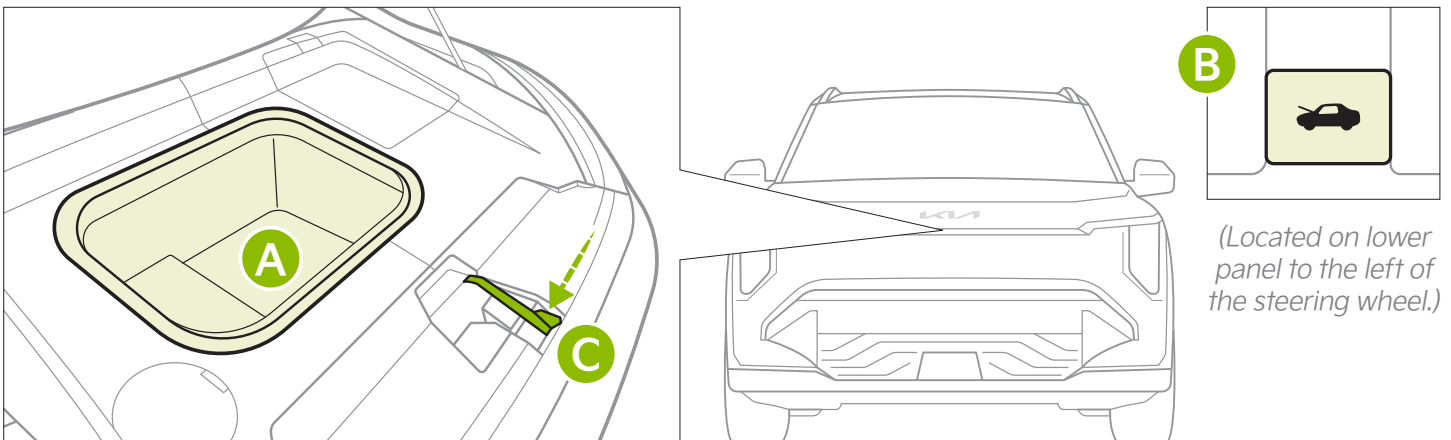

Sun Visor^{†19}

 Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

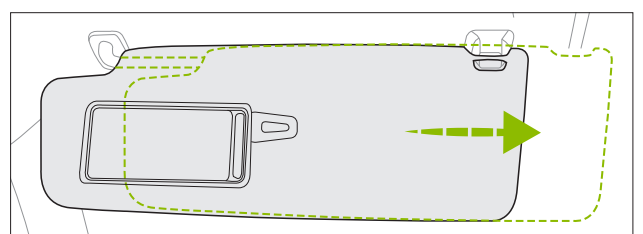

REMINDERS:

- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows

Refer to section 4 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Exterior Flush Door Handle Operation

Manual Type - To unlock the driver's door, with the Smart Key in your possession:

- Push the engraved button **A** on the door handle - the hazard lights will blink twice, a chime will sound twice, and the door unlocks
- Press on the front of the door handle. Then the rear handle will pop out
- Pull on the door handle to open the door

To lock the doors using the Smart Key, press the lock button **B**.

Electric type - When the "Approach Unlock" feature is activated in Vehicle Settings, the door handles will pop out when you approach the vehicle with the Smart Key in your possession.

To activate the "Approach Unlock" feature:

press SETTINGS on the Infotainment System.

 
 
 
Select VEHICLE, then DOOR and select APPROACH UNLOCK.

When you're within one foot of the vehicle with the Smart Key in your possession, the outside door handles will slide out, the doors will unlock, the Hazard Warning Flashers will blink twice, and a chime will sound twice. Then pull the door handle to open the door.

To lock the electric door handles, press the sensor/engraved button **A** on the door handle or use the lock button on the Smart Key.



[Exterior Flush Door Handles](#)

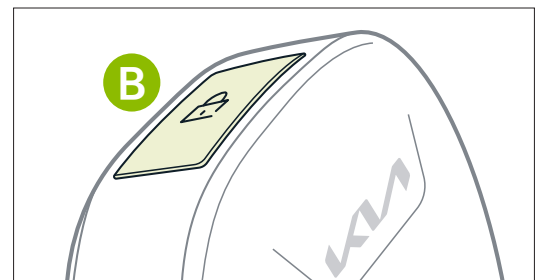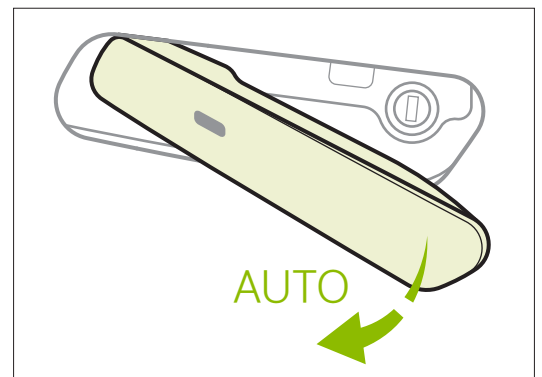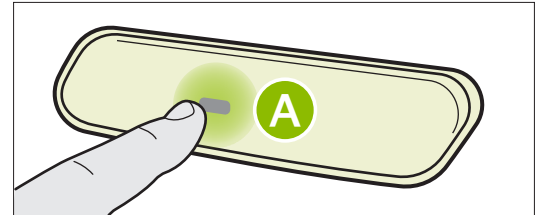

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Exterior Flush Door Handle Operation

[*Continued from previous page*](#)

QUICK TIP

- To remove ice from door handles, tap around the door handle perimeter using your hand until the door handle pops out. Press in and pull out a few times to remove any ice residue

REMINDER:

- After unlocking the doors, if one of the doors has not been opened, the doors will re-lock automatically after 30 seconds.



Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)*†10

 
 
- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** With 2-Press Unlock enabled, to unlock Driver's Door only, press once. Press twice in 4 seconds to unlock All Doors (To change the setting of the 2-Press Unlock feature, go to Vehicle Settings, Door, then 2-Press Unlock)
- C** Press and hold for more than 1 second to unlock Liftgate. **Manual liftgate:** Lift the Liftgate handle to manually open Liftgate

REMINDER: The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle Liftgate.

- D** Press and hold more than 0.5 seconds (half a second) for Panic Alarm. To turn off Alarm, press any button

E Manual Key:

- Use to lock/unlock Driver's Door **F** by turning once or all doors by turning twice
- Use to enable/disable Child Safety Locks
- Use to unlatch rear center seatbelt lower anchor

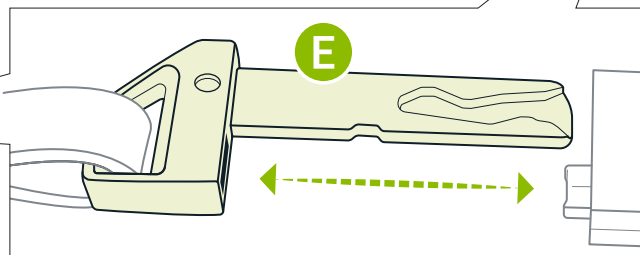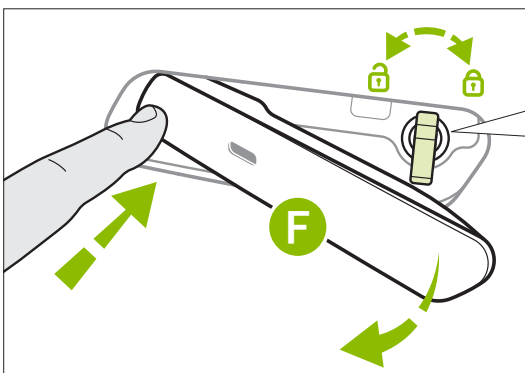

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for detailed information on how to use Emergency Key.

 


Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)*†10


[Continued from previous page](#)

A Remote Start*: Lock the doors by pressing the door lock button **B** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **B**, press and hold the Remote Start button **A** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If the driver does not enter vehicle within ten (10) minutes of starting the vehicle, the vehicle will automatically turn off.

Remote Smart Parking Assist (RSPA)* - To park or exit a parking space remotely press **C** and **D** as needed, see instructions on [page 68](#).

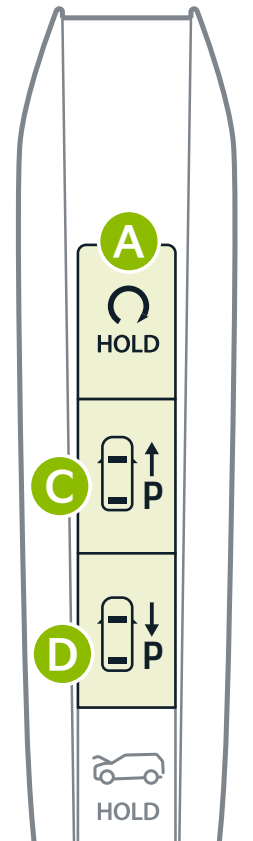

(Back edge of key fob)

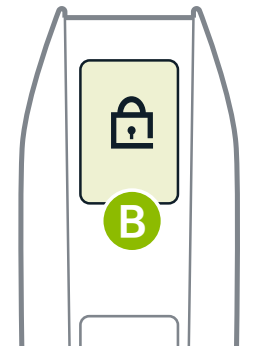 

(Front edge of key fob)

QUICK TIPS

- If the battery is weak or the smart key is not working properly, check that the shift lever is in the **P** (Park) position. Place the Smart Key on the key recognition area located on the center console, and then press the EV button for about 10 seconds in the ACC state. With the vehicle in the off position, restart the vehicle
- The Smart Key’s signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDERS:

- Remote button configuration may vary depending on vehicle options
- One/two button press or manual key turn logic can be changed in Vehicle Settings
- When reinserting the manual key in its holder, make sure it is pushed all the way in until there is a click sound

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner’s Manual for more information.



†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Digital Key 2^{*†3}

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
3. Open the Kia Access App and select DIGITAL KEYS **A**
4. Press CREATE OWNER KEY
5. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
6. Press CONTINUE and the wallet app will pair and add your digital key

 
REMINDER: Actual steps may vary between devices.



[Digital Key 2 Operation](#)



[Digital Key 2 Setup, Registration & Sharing](#)

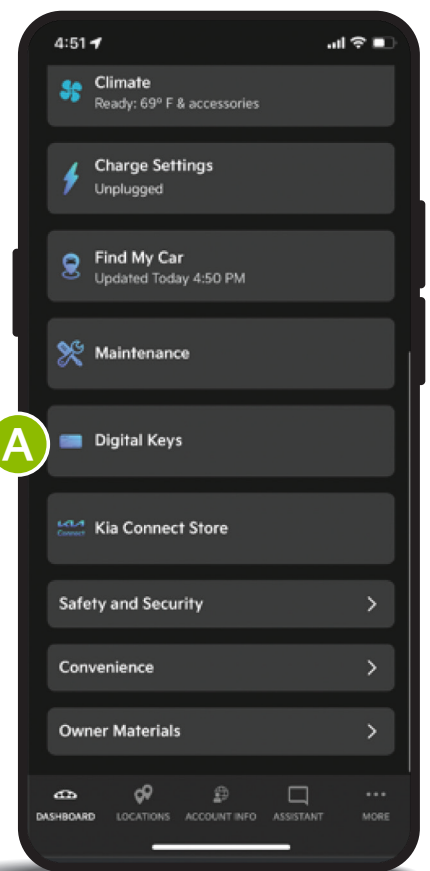

[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

 
Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Digital Key 2^{*†3}

[Continued from previous page](#)

Digital Key 2 Setup for Smart-phones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access^{†2} App, start an account, and activate Kia Connect^{†1} in your vehicle’s Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle’s **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access^{†2} App** and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle’s infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone’s wallet app

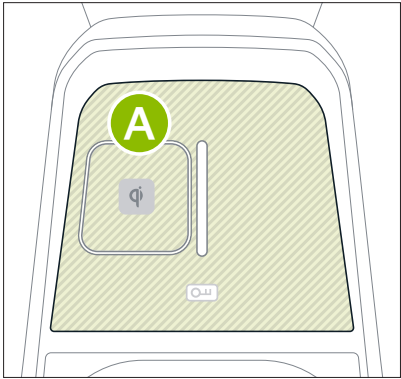

(Charging pad located in center console)

[Continued on next page](#)

QUICK TIP

- When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Digital Key 2^{*†3}

[Continued from previous page](#)

Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

Revoking shared Digital Key access: You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Select the contact and click on **Revoke Access**.

To delete shared keys and the owner key: Go to the Vehicle Settings on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY. Select the Digital Key and press DELETE.

REMINDER: Actual steps may vary between devices.

[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Digital Key 2^{*†3}

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
 - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
 - iPhone XS® or later.
 - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
 - Apple Watch Series 5® or later
 - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
 - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
 - Galaxy S20™ or later
 - Galaxy Note20 5G™ or later
 - Galaxy Z Flip 5G™ or later
 - Galaxy Fold 2™ or later
 - For **Google™ Smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Smart Power Liftgate^{*†17}

The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate. The Smart Power Liftgate will close the



 
[Smart Liftgate Operation, Opening Height/Speed Adjustment](#)

Liftgate, lock all doors and Liftgate and then activate the security system.

Approach Unlock (Opening with no-touch activation):

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

Opening/Closing from Inside the Vehicle: Press and hold the Smart Power Liftgate Open/Close button* **A** to automatically open/close the Liftgate.

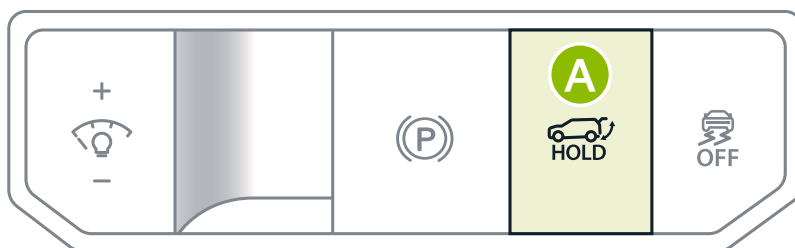

(Button on driver's panel to the left of steering wheel)

QUICK TIP

- To cancel the Smart Power Liftgate while automatically opening or closing, press any button on the Smart Key fob.

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Smart Power Liftgate^{*†17}

[Continued from previous page](#)

Opening/Closing from Outside

the Vehicle: To open the Smart Power Liftgate automatically, press the Liftgate Release button **A** on the exterior of the Liftgate. Automatically close by pressing the Smart Power Liftgate Close button* **B** located inside the Liftgate lid.

 
Liftgate Settings: The Smart Power Liftgate is OFF by default. To adjust the settings for Opening Height and Opening

Speed, press the **SETUP** button on the Infotainment System. Select the onscreen **VEHICLE** button to enter the Vehicle Settings. Go to DOOR, SMART LIFTGATE.

- **Opening Height:** Select POWER LIFTGATE OPENING HEIGHT and choose one of the options. Optional steps to *manually* program the Opening Height:
 - Open Liftgate and manually position the Liftgate to your preferred opening height
 - Depress and hold the close button on the Liftgate for 3 seconds or more
 - Once the system sounds the alert that the programming is complete, manually close the Liftgate
- **Opening Speed:** Select POWER LIFTGATE SPEED and choose FAST or NORMAL



[Smart Liftgate Operation, Opening Height/Speed Adjustment](#)

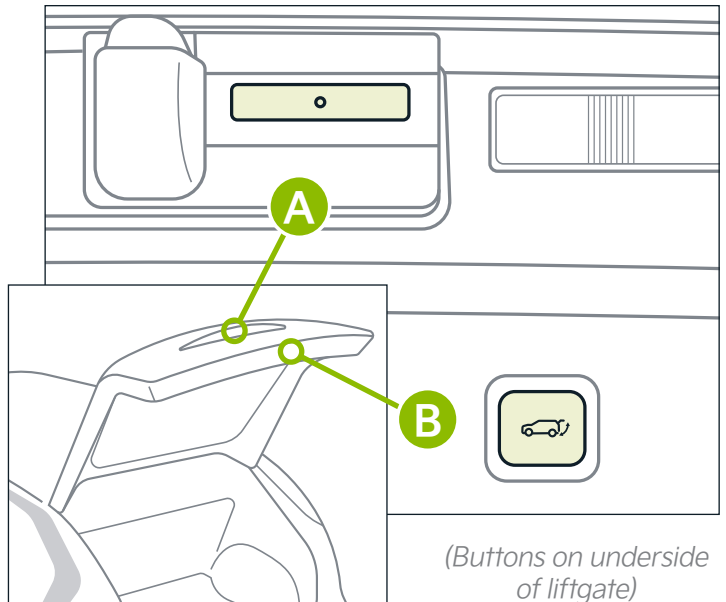

(Buttons on underside of liftgate)

[Continued on next page](#)

Refer to section 4 in the Owner's Manual for more information. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Power Liftgate^{*†17}

[Continued from previous page](#)

Smart Key:

 
To open the Smart Power Liftgate, press and hold the Smart Key Liftgate button on the key fob **A** until the Liftgate begins opening. Press again and hold to close.



[Smart Key & Manual Key](#)

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the liftgate Release button
- The liftgate unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle
- The Smart Key Liftgate button **A** must be held to close the liftgate. Releasing these buttons mid operation will cause the liftgate to halt its motion and sound a warning chime. This is normal operation

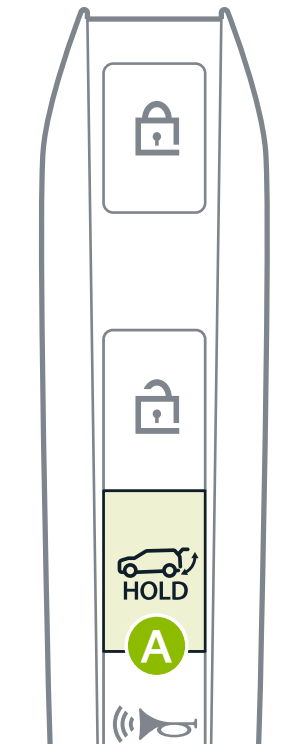

REMINDERS:

- Smart Power Liftgate may be damaged if attempting to open or close manually
- If going through a car wash, remind the attendant to keep the vehicle in Neutral and keep the vehicle on. Also, disable the Smart Power Liftgate lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the liftgate lid when operating the Smart Power Liftgate
- The default liftgate opening/closing speed is set to fast
- The liftgate opening/closing speed setting cannot be changed when the Power Liftgate function is turned off or if the liftgate is not completely closed

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner’s Manual for more information.

†LEGAL DISCLAIMERS ON [PAGE 146](#) | *IF EQUIPPED



Map/Room Lamps

Automatic on/off function* **A**:

The Interior Lights turn on when the door is opened and automatically turns off in approximately 30 seconds.

 


[Overhead Console - Sunroof and Room Lamp](#)

When using the Smart Key to unlock the doors the lamp turns on for about 30 seconds and then turns off.

When the interior lights are on, they will turn off immediately when the vehicle is started or all doors are locked.

When the door is opened in the “OFF” or “POWER ON” position, the interior light turns on for a maximum of about 10 minutes and then turns off. If the vehicle is in ON position, it will stay on continuously.

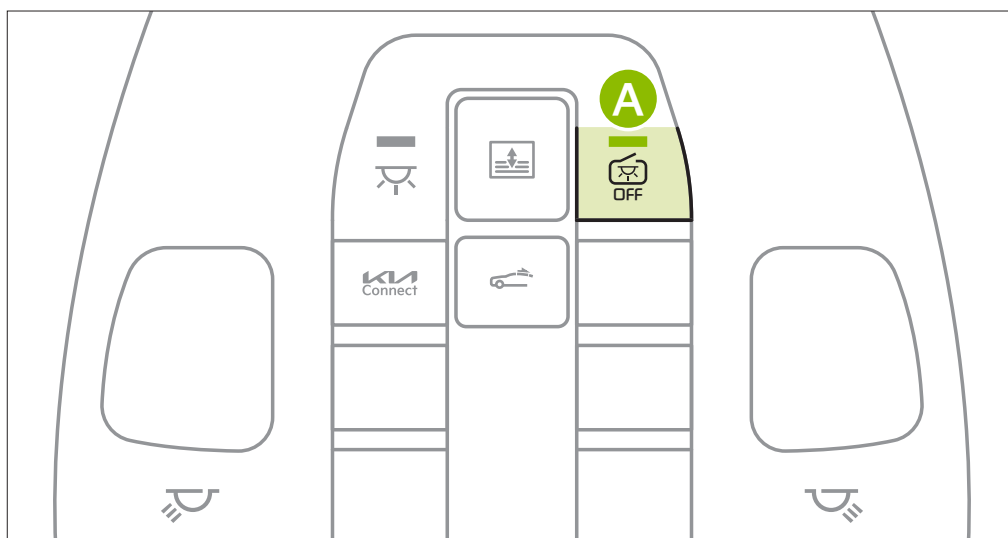

(Buttons located on overhead console*)

QUICK TIPS

- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause 12V battery discharge

[Continued on next page](#)

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.

Map/Room Lamps

 
[Continued from previous page](#)



[Overhead Console -
Sunroof and
Room Lamp](#)

Map Lamp/Room Lamp Operation

- Press the button **A** to turn on the Driver's/Passenger's Map Lamp on/off
- The brightness of the map lamps can be changed by pressing and holding either buttons **A** for about 3 seconds or more while the lamp is on. Release the button at the desired brightness to save the setting
- Press button **B** to turn all the Map/Room Lamps on/off

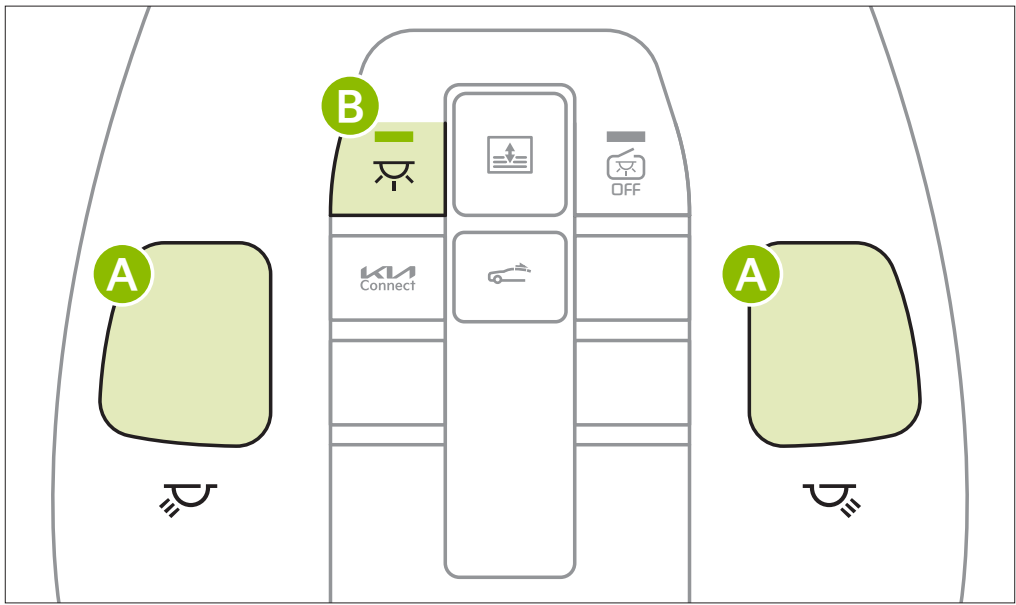

(Buttons located on overhead console*)

QUICK TIPS

- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause 12V battery discharge

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.

*IF EQUIPPED



Sunroof Operation*

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.



[Overhead Console -
Sunroof and
Room Lamp](#)

Slide the Sunshade and Sunroof:

 
- **Auto Open:** Slide the lever **A** backward to the farthest position and release
- **Auto Close** (Sunroof only): Slide the lever **A** forward to the farthest position and release

Slide the Sunroof (with Sunshade open):

- **Open:** Press the Sunroof lever **A** backward and press again forward/backward until you reach the desired detent position (manual slide feature)
- **Close:** Press the Sunroof lever **A** forward and press again forward/backward until you reach the desired detent position (manual slide feature)

Tilt the Sunroof:

- **Raise:** Push lever **A** upward
- **Lower:** Push lever **A** forward

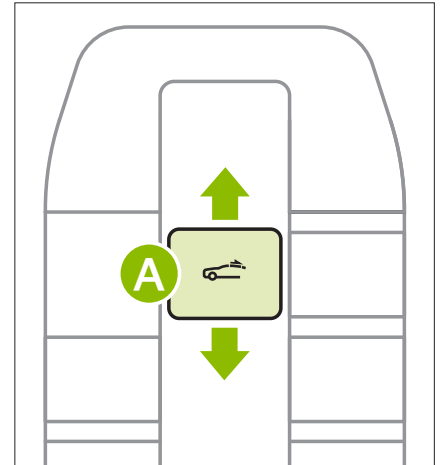

(Sunroof switch located in overhead console)

[Continued on next page](#)

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.



Sunroof Operation*

[*Continued from previous page*](#)

QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction
- Adjusting the sunroof past the first stop position (normal), in the fully opened position, may cause wind buffeting noise

REMINDERS:

- Sunshade needs to remain open while Sunroof is open and vehicle is moving
- When closing, be mindful of any nearby objects or persons

Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle. Refer to section 4 in the Owner's Manual for more information.



OTHER KEY FEATURES

Tire Mobility Kit

 
The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.



[Tire Mobility Kit](#)

- A** Sealant Bottle
- B** Compressor

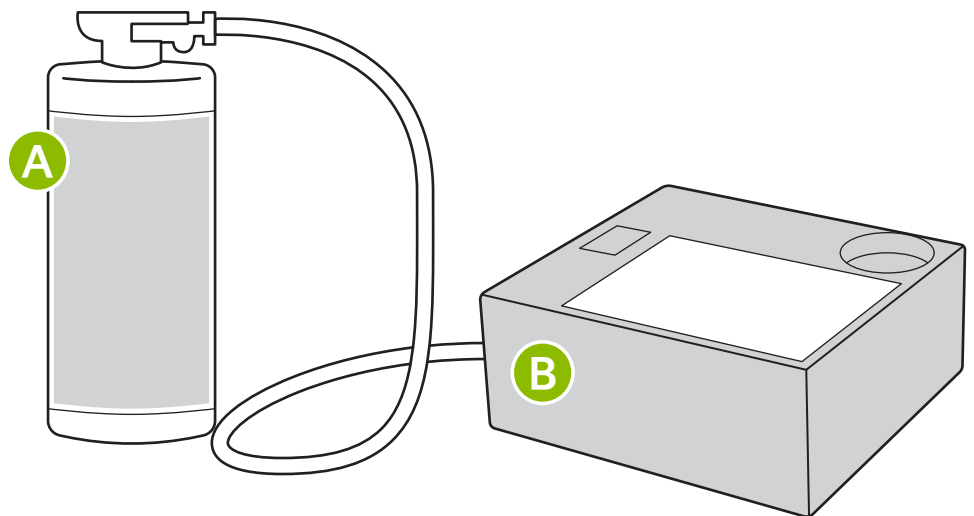

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

REMINDERS:

- After tire is properly sealed, drive cautiously and never exceed 50 mph or 120 miles on a tire that has been properly sealed with the Tire Mobility Kit
- Accessory spare tire kit is available for purchase

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.



Occupant Detection System (ODS)^{†9} / Passenger Airbag Off Indicator^{†14}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

 
Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light **A** will illuminate.

REMINDERS:

- Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated off because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat, or move to another seat in the vehicle
- For more information on the Occupant Detection System/ Passenger Airbag Off Indicator, please refer to the Owner’s Manual
- For maximum protection, always wear your seat belt

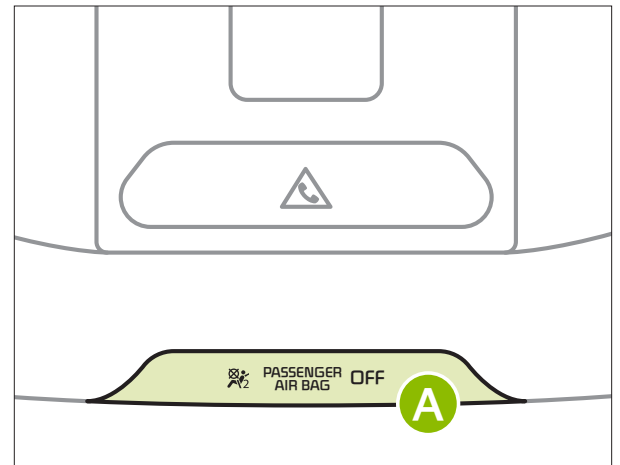

(ODS Indicator located below overhead lamp)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner’s Manual for more information.



Seat Belts^{†14}

 
 
To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks.
2. Position the lap portion of the belt across your lap as low on the hips as possible **C**. Adjust the belt to a snug fit by pulling up on the shoulder portion **D**.

Seat belt retractor locks:

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a strong stop, sudden turn or certain collisions, seat belt retractors are designed to automatically lock the belts to reduce the risk of injury.

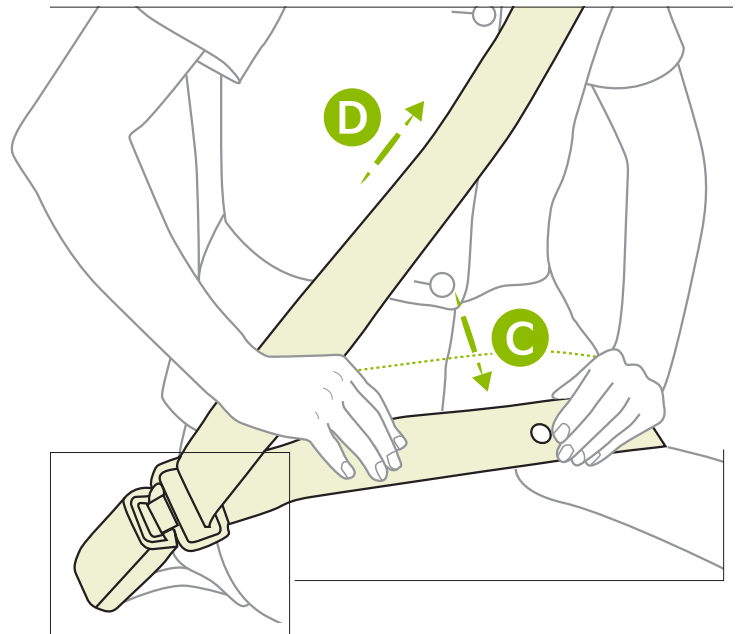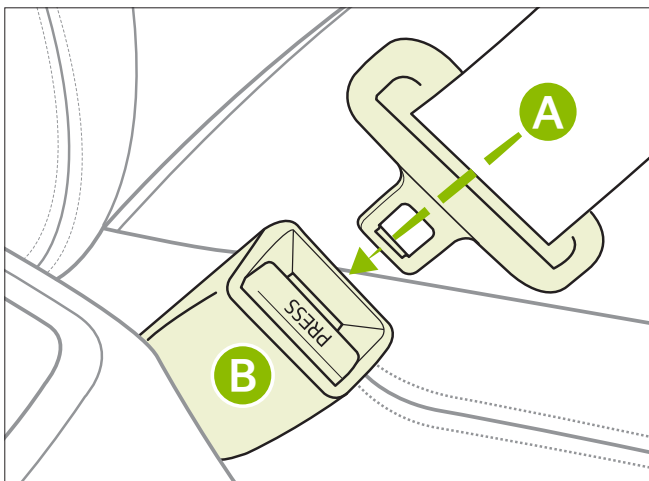

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.

 EV3 NORMAL MAINTENANCE SCHEDULE	MAINTENANCE INTERVALS (UP TO 64,000 MILES) ^A							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Check tire pressure and tread wear; Rotate tires	P	P	P	P	P	P	P	P
Climate control air filter	I	R	I	R	I	R	I	R
Brake fluid	I	I	I	I	I	R	I	I
12V Battery condition	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Reduction gear fluid				I				I

P = Perform

R = Replace

I = Inspect^B

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule.

B. If necessary, adjust, correct, clean or replace

C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on a regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions.

E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

F. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water.

G. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

H. The drive belt should be replaced when cracks occur or tension is reduced excessively.

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into your Kia Access^{†2} App or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect^{†1} only)

†LEGAL DISCLAIMERS ON [PAGE 146](#)

|

*IF EQUIPPED



DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2027 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
2. **Kia Access app** for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model, model year and trim.
3. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®, SiriusXM®, Sportmatic®, Digital Key 2, Homelink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

Android Auto: Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play store and an Android compatible smartphone running Android 5.0 Lollipop or higher. Data plan rates apply.
4. **Driver Assist Features - Blind-Spot Collision-Avoidance Assist (BCA), Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Lane Keeping Assist (LKA), Blind-Spot View Monitor (BVM), Safe Exit Assist (SEA), Lane Following Assist 2 (LFA2), Forward Collision-Avoidance Assist 2 (FCA2), Forward Collision Warning (FCW), Intelligent Speed Limit Assist (ISLA), Highway Driving Assist 3 (HDA3), Leading Vehicle Departure Alert (LVDA), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Remote Smart Parking Assist 2 (RSPA2), Rear Occupant Alert (ROA) with Door Monitoring, Reverse Parking Collision-Avoidance Assist (PCA), Reverse/Forward Parking Distance Warning (PDW), Rear View Monitor (RVM), Augmented Reality Head-Up Display (HUD), 3D Surround View Monitor (SVM):** When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
5. **Driver Attention Warning (DAW):** When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
6. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/ Hill-Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
8. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
9. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
10. **EV Button with Smart Key:** Always come to a complete stop before turning the power on or off. However, if you have an emergency while the vehicle is in motion and must turn the power off, you can turn the power off to the ACC position by pressing the EV button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the power by pressing the EV button with the shift lever in Neutral (N). With the power off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
11. **Rear Occupant Alert with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
12. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. On certain audio systems, for access to Enhanced Roadside Assistance*, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
13. **Seat Adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
14. **Seat Belts/Airbags:** For maximum protection, always wear your seatbelt.
15. **Seat Warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
16. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2027 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
17. **Smart Liftgate with Auto Open:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle.
18. **Steering-Wheel-Mounted Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
19. **Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
20. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion..
21. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



*IF EQUIPPED