

K5

Features & Functions Guide



Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



[Getting Started
With Your
New Kia](#)

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com

©2027 Kia America, Inc. All rights reserved.

Consumer Affairs - Roadside Assistance^{†13}: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

†LEGAL DISCLAIMERS ON [PAGE 111](#) | *IF EQUIPPED



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

www.youtube.com/KiaFeatureVideos

This document is interactive: from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

The video resources should not be accessed while you are operating your Kia vehicle.

Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on page 5, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key with Remote Start	96
2	Fuel Filler Door Release	102
3	Power Adjustable Front Seats*	90
4	Front Seat Headrest Adjustment	92
5	Seat Warmers* / Ventilated Seats*	88
6	Lifting Wipers (Wiper Service Mode)	57
7	Windshield Wipers & Washers	56
8	Smart Cruise Control (SCC)	30
9	Navigation-based Smart Cruise Control (NSCC)*	33
10	Highway Driving Assist (HDA)*	36
11	Rear Occupant Alert (ROA) with Door Monitoring	92
12	Smart Trunk with Auto Open	104
13	Normal Maintenance Schedule	110
14	Vehicle Settings - Infotainment System	20
15	Bluetooth® Wireless Technology	61
16	Kia Connect* Activation	70
17	Kia Connect* Assistance	71
18	Kia Connect* Infotainment System - (Non-Navigation & Navigation)*	74
19	Android Auto™ Setup	65
20	Apple CarPlay® Setup	68



[Getting Started With Your New Kia](#)



[Your New Kia Important Care Tips](#)



[Vehicle Cameras Important Tips](#)



[Navigation System Important Tips](#)



[Benefits of Over The Air \(OTA\) Updates](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Table Of Contents

<u>WELCOME TO THE KIA FAMILY!</u>	<u>02</u>
<u>VIDEOS & NAVIGATION</u>	<u>03</u>
<u>GETTING STARTED</u>	<u>04</u>
INSTRUMENT CLUSTER	
<u>Instrument Cluster Overview</u>	<u>08</u>
<u>Indicators & Warning Lights</u>	<u>09</u>
<u>Tire Pressure Monitoring System (TPMS)</u>	<u>10</u>
<u>Instant Fuel Economy</u>	<u>12</u>
<u>Fuel Economy / Tips for Economical Driving</u>	<u>13</u>
<u>Drive Mode Integrated Control System</u>	<u>14</u>
VEHICLE SETTINGS	
<u>Instrument Cluster LCD Modes</u>	<u>16</u>
<u>Trip Modes / Trip Computer</u>	<u>17</u>
<u>Service Interval Mode</u>	<u>19</u>
<u>Vehicle Settings - Infotainment System</u>	<u>20</u>
ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)	
<u>Forward Collision-Avoidance Assist (FCA)</u>	<u>21</u>
<u>Lane Keeping Assist (LKA)</u>	<u>23</u>
<u>Blind-spot Collision-Avoidance Assist (BCA)</u>	<u>25</u>
<u>Safe Exit Assist (SEA)</u>	<u>27</u>
<u>Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)</u>	<u>28</u>
<u>Smart Cruise Control (SCC)</u>	<u>30</u>
<u>Navigation-based Smart Cruise Control (NSCC)*</u>	<u>33</u>
<u>Lane Following Assist (LFA)</u>	<u>34</u>
<u>Highway Driving Assist (HDA)*</u>	<u>36</u>
<u>Rear View Monitor (RVM)</u>	<u>38</u>
<u>Blind-spot View Monitor (BVM)*</u>	<u>39</u>
<u>Surround View Monitor (SVM)*</u>	<u>40</u>
<u>Rear Cross-traffic Collision Avoidance Assist (RCCA)</u>	<u>42</u>
<u>Reverse Parking Collision-Avoidance Assist (PCA)*</u>	<u>44</u>
<u>Forward/Reverse/Side* Parking Distance Warning (PDW)</u>	<u>45</u>

Continued on next page

Table Of Contents

Continued from previous page

DRIVER’S PANEL

Instrument Cluster Illumination Control	46
Electronic Stability Control (ESC)	46
Hill-start Assist Control (HAC)	47
Engine Start/Stop Button	48
Electronic Child Safety Lock System	49
Manual Folding Mirrors*	49
Power Windows, Window Lock & Central Door Lock	50
Automatic Door Lock/Unlock	51
Power Folding Outside Mirrors*	51
Power/Heated Outside Mirrors*	52

STEERING WHEEL CONTROLS

Headlights & High Beams	53
High Beam Assist (HBA)	54
Turn Signals & Fog Lights*	55
Windshield Wipers & Washers	56
Lifting Wipers (Wiper Service Mode)	57
Heated Steering Wheel*	58
Tilt/Telescoping Steering Wheel	59

INFOTAINMENT SYSTEM

Steering Wheel Audio Controls	60
Bluetooth® Wireless Technology	61
Android Auto™	65
Apple CarPlay® Setup	68
Kia Connect* Activation	70
Kia Connect* Assistance	71
Kia Access App Download	72
Kia Access App Features Guide	73
Kia Connect* Infotainment System - (Non-Navigation & Navigation)*	74

Continued on next page

*IF EQUIPPED

Table Of Contents

Continued from previous page

CENTER PANEL

Multimedia USB Port & Power Outlets	77
Digital Clock (Infotainment System)	77
Wireless Smartphone Charging System*	78
Automatic Climate Control	80
Electronic Parking Brake (EPB)	83
Auto Hold	84
Automatic Gear Shift with Sportmatic® Shifting	85
Paddle Shifters*	86
Dual Clutch Transmission (DCT)*	87
Seat Warmers* / Ventilated Seats*	88

SEATING

Driver Position Memory System*	89
Power Adjustable Front Seats*	90
6-Way Manual Adjustable Driver’s Seat*	91
Rear Occupant Alert (ROA) with Door Monitoring	92
Front Seat Headrest Adjustment	92

OTHER KEY FEATURES

Map/Room Lamps	93
Panoramic Sunroof with Power Sunshade*	94
Smart Key with Remote Start*	96
Digital Key 2*	98
Fuel Cap / Malfunction Indicator (Check Engine Light)	102
Fuel Filler Door Release	102
Trunk Release Button	103
Smart Trunk with Auto Open	104
Sun Visor	105
Hood Release Lever and Latch	106

SAFETY FEATURES

Occupant Detection System (ODS) /Passenger Airbag Off Indicator	107
Electronic Child Safety Lock System	108
Seat Belts	109

MAINTENANCE CHART	110
-----------------------------------	---------------------

LEGAL DISCLAIMERS	111
-----------------------------------	---------------------

*IF EQUIPPED



INSTRUMENT CLUSTER

Instrument Cluster Overview

- A** Tachometer
- B** Speedometer
- C** Engine Temperature Gauge
- D** Indicators & Warning Lights
- E** LCD - Gear Shift Position, Odometer, Trip Modes / Trip Computer, Driving Assist
- F** Fuel Gauge



[Instrument Cluster LCD](#)

◀  Arrow direction indicates the side of the vehicle the fuel door is located on

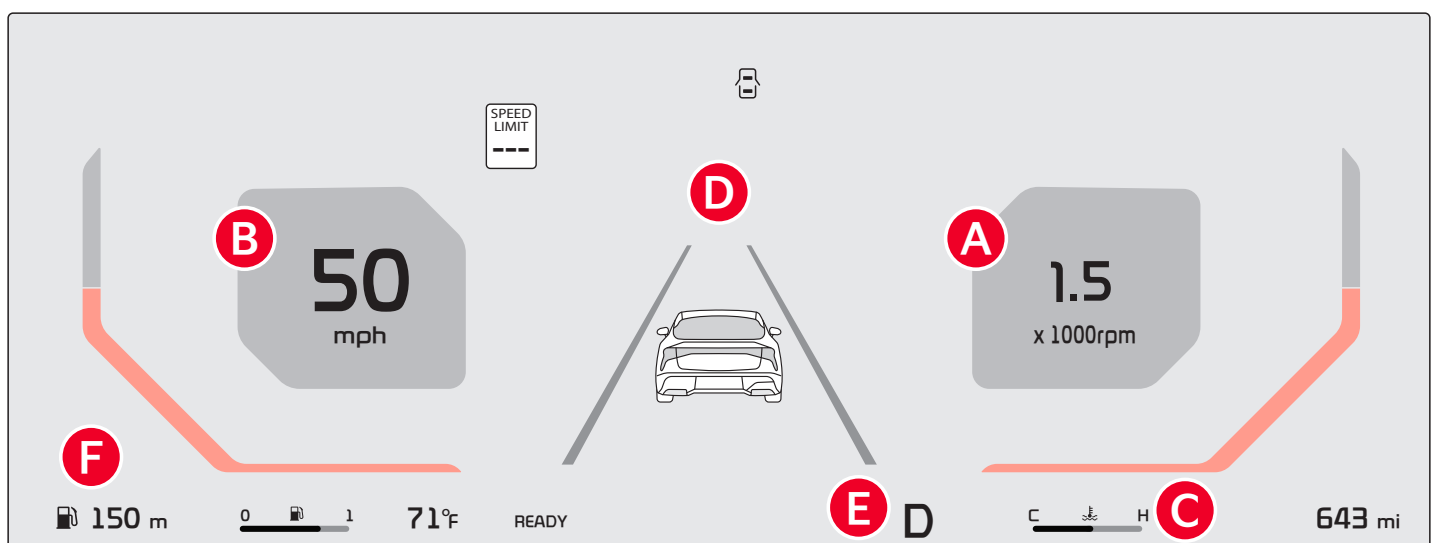 


Image is for illustrative purposes only and may not reflect actual feature or operation. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Refer to section 5 in the Owner's Manual for more information.



Indicators & Warning Lights

	Immobilizer Indicator Light*		Lane Safety Indicator*
	SPORT Drive Mode Indicator Light*		Low Fuel Level Warning Light
	SNOW Drive Mode Indicator Light*		Electronic Brake force Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)
	High Beam Assist Indicator*		AUTO HOLD Indicator*
	High Beam Indicator		Front Fog Light Indicator
	Low Beam Indicator*		Master Warning Light*
	Light ON Indicator		All-Wheel Drive (AWD) Warning Light*
	Parking Brake & Brake Fluid Warning Light		All-Wheel Drive (AWD) Lock Indicator Light*
	Engine Oil Pressure Warning Light		Trunk Open Warning Light*
	Electronic Power Steering (EPS) Warning Light		Intelligent Speed Limit Assist Indicator*
	Charging System Warning Light		Parking Brake & Brake Fluid Warning Light
	Airbag Warning Light		Emergency Steering Warning Light*
	Seat Belt Warning Light		Driver Attention Warning Light*
	Malfunction Indicator Lamp (MIL)		Highway Lane Change Assist Indicator*
	Low Tire Pressure Indicator / TPMS Malfunction Indicator		Lane Following Assist Indicator*
	Anti-lock Braking System (ABS) Warning		Door Ajar Warning Light*
	Electronic Stability Control (ESC) Indicator		Washer Fluid Warning Light*
	Electronic Stability Control (ESC) OFF Indicator		
	Electronic Parking Brake (EPB) Warning Light*		
	LED Headlamp Warning Light*		
	Forward Safety Warning Light*		

Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD. Refer to section 5 in the Owner’s Manual for more information.

*IF EQUIPPED



Tire Pressure Monitoring System (TPMS)^{†21}



The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

 


[Tire Pressure Monitoring System](#)

The indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS sensor or tire pressure drops due to the outside temperature becoming significantly lower.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate tire(s), using an accurate digital tire pressure gauge, to specifications to turn off the Low Tire Pressure Position Indicator ; see the front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

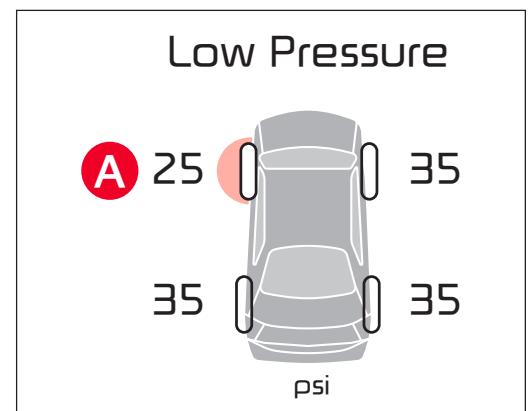

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 10 in the Owner's Manual for more information.



Tire Pressure Monitoring System (TPMS)^{†21}

[Continued from previous page](#)

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting stationary for at least 3 hours or driven less than 1 mile during that 3 hour period, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

REMINDERS:

 
- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) can interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

Always check the Owner’s Manual for complete operating information and safety warnings.



Instant Fuel Economy

Press the Mode button **A** to cycle to the Trip Computer mode , then toggle up or down with the OK button **B** to cycle to the Fuel Economy screen. The bar at the bottom of the screen displays the calculated Fuel Consumption during the past few seconds when the vehicle speed is more than approximately 6 mph.

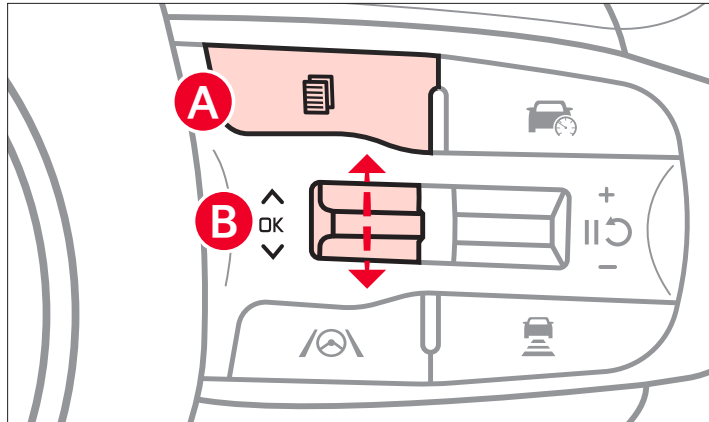

(Type A - Buttons located on Steering Wheel)

REMINDERS:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph after being refueled with more than 1.6 gallons, the average fuel economy will be cleared to zero (----)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.



Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:



[Tips for Economical Driving](#)

- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

For more information on Fuel Economy, you can click the link above to view a video or refer to section 8 in the Owner's Manual.



 
Drive Mode Integrated Control System

The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the DRIVE MODE knob **B**.




[Drive Mode Integrated Control System](#)

When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster or the Infotainment System* screen (except for NORMAL). The system's default mode is NORMAL mode and when selected, the indicator will not be illuminated.

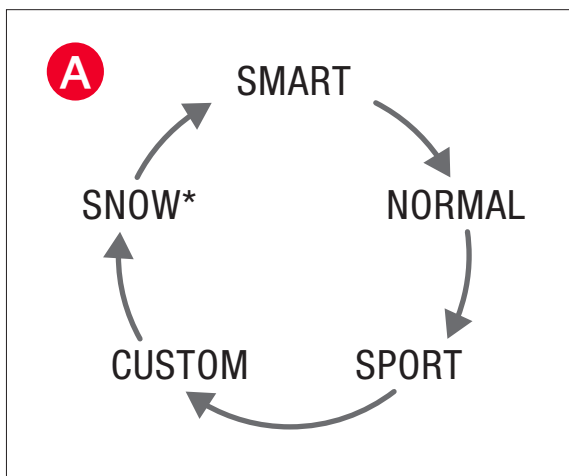

 For illustrative purposes only. Actual vehicle operation or display may vary.

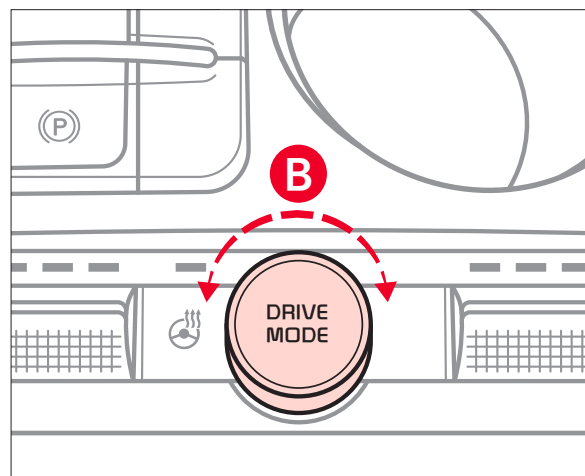

(Dial located on center console below gear shift)

[Continued on next page](#)

Refer to section 8 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Drive Mode Integrated Control System

[*Continued from previous page*](#)

- **NORMAL** Mode
- **SPORT** Mode
- **SNOW** Mode* (All Wheel Drive)
- **SMART** Mode - When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style
- **CUSTOM** Mode - When CUSTOM mode is selected, on the Infotainment System the driver can select separate modes with different combinations of drive modes



[Drive Mode
Integrated
Control System](#)

REMINDERS:

- When SPORT mode is selected, fuel economy may decrease
- The system defaults to NORMAL mode when the ignition is turned on
- Steering effort may be slightly increased in Sport mode
- When vehicle is shut down while in SPORT Mode, the system will default to NORMAL mode when the engine is turned off. SPORT mode would need to be selected again once the vehicle is restarted

Refer to section 8 in the Owner's Manual for more information.

 


Instrument Cluster LCD Modes

Press the Mode button **A** to cycle through different Instrument Cluster LCD Modes. Type B Cluster:



[Instrument Cluster's LCD](#)

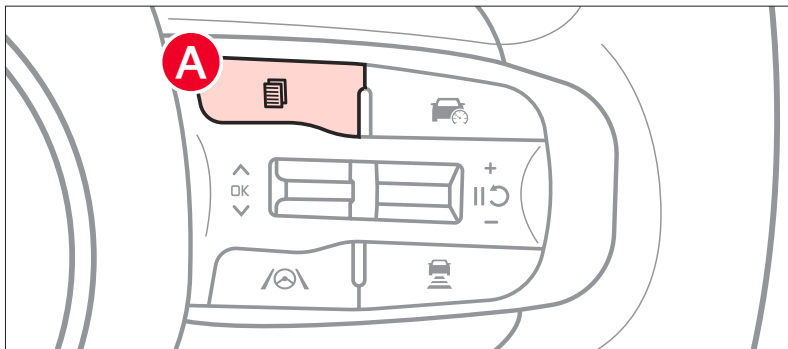

(Buttons located on Steering Wheel)



Trip Computer Mode: Driving information for Fuel Economy, Accumulated Info, Drive Info, Transmission Temperature



Turn-by-Turn Mode*: Displays information on Route Guidance, Destination Info



Driving Assist Mode: Displays information for Lane Keeping Assist, Smart Cruise Control, Navigation-based Smart Cruise Control, Lane Following Assist, Highway Driving Assist, Driver Attention Warning



Information/Master Warning Mode: Displays information for Speedometer, Tire Pressure, Drive Force Distribution and warning messages related to the vehicle

Images are for illustrative purposes only and may not reflect actual feature or operation.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Refer to section 5 in the Owner's Manual for more information.



Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the Engine Start/Stop button is in the ON position.



 
[Steering Wheel Controls](#)

To cycle through the Trip Modes, press the Mode button **A**.

To select and enter Trip Computer mode , press the OK button **B** up or down and then press the OK button **B** to enter.

To cycle through different screens (Fuel Economy, Drive Info, Digital Speedometer, etc.) press the OK button **B** up and then press to enter.

When displaying the Tripmeter screens, press and hold the OK button **B** to reset the Tripmeter to zero.

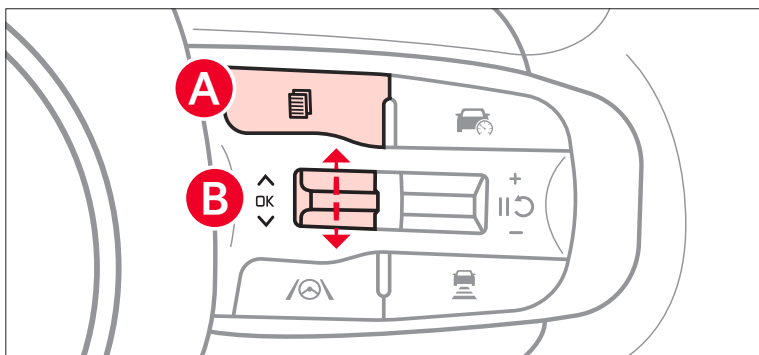

(Buttons located on Steering Wheel)

[Continued on next page](#)

 
Your vehicle's steering wheel buttons may differ from those in the illustrations. Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



Trip Modes / Trip Computer

Continued from previous page

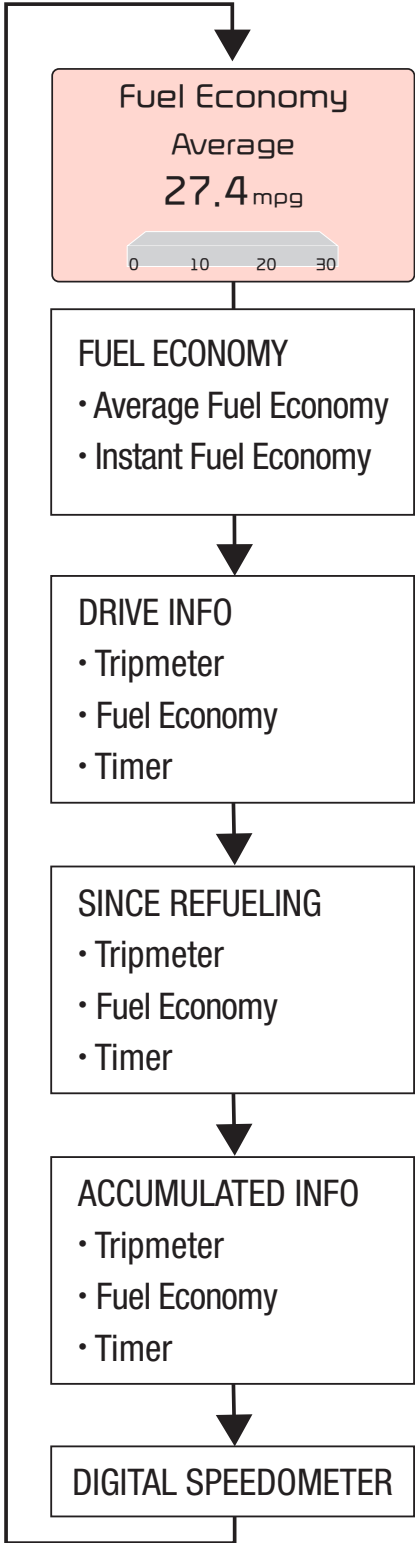

[Steering Wheel Controls](#)

REMINDERS:

- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Your vehicle's steering wheel buttons may differ from those in the illustrations. Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.

*IF EQUIPPED



Service Interval Mode

To enter Service Interval mode, press the Mode button **A**, scroll using the OK button **B** to User Settings  and press the OK button **B** to enter. Then scroll to Service Interval and press the OK button **B** again. The system will display the number of miles remaining until the next service is due, as well as type of service due.

When service is required, the following will be displayed: **Service Required**.

To reset the Service Interval mode system, press and hold the OK button **B** for more than 1 second.

To turn Service Interval OFF, go to User Settings again and turn off.

Service Interval Setting

To set the Service Interval when in User Settings mode:

- Press the OK button **B** up/down and scroll to Service Interval.
Press the OK button **B** again to enter
- Press the OK button **B** and toggle to ON, then press the OK button **B** again to set. Then press the OK button **B** up/down to scroll and select the desired miles or months for your next service
- Press the OK button **B** again to enter

 


[Kia Full Synthetic Oil](#)



[Settings - Service Interval & Maintenance](#)


Service required



0 mi

0 day

 (Type B cluster)

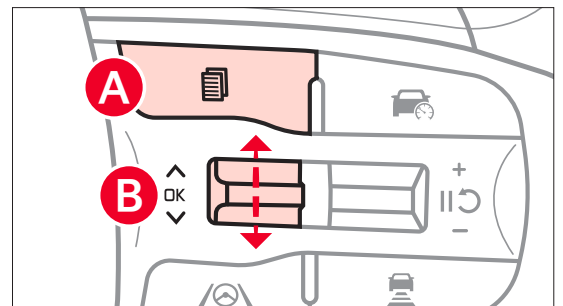

(Buttons located on Steering Wheel)

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder. Go to Vehicle Settings in the Infotainment System, Cluster, then Oil Change Reminder.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Vehicle Settings - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the **SETUP** key on the Infotainment System. Then press the Vehicle icon , which will take you to **Vehicle Settings**. Use the touchscreen to navigate through the menus.



[Vehicle Settings](#)

Driver Assistance: Driving Convenience, Driver Attention Warning, Driving Safety, Parking Safety

Drive Mode: My Drive Mode, Drive Mode Change Alert

Active Sound Design*: Off, Smallest/Moderate/Largest Change

Climate: Recirculate Air*, Automatic Ventilation*, Climate Features*

Seat*: Link to Climate Settings, Seating Easy Access, Seat Position Change Alert

Lights: Ambient Light, One Touch Turn Signal, Welcome Mirror Light, Headlight Delay, Lighting Pattern*, Travel Mode*, High Beam Assist, Intelligent High Beams*, Interior Lights Always On

Door: Automatically Lock/Unlock, 2 Press Unlock, Smart Trunk

Digital Keys*: Smartphone Key, NFC Card Key, Digital Key Information

Convenience: Rear Occupant Alert, Service Interval, Oil Change Reminder, Wireless Charging System, Mobile Phone Wireless Charging Indicator

Refer to the Car Infotainment System Quick Reference Guide for more information.



Forward Collision-Avoidance Assist (FCA)^{†4}

FCA is designed to detect and monitor a vehicle, pedestrian or cyclist ahead in the roadway, in certain circumstances, through front view camera recognition to warn the driver that a collision is imminent. FCA may temporarily apply emergency braking:

- If FCA detects a potential collision, a warning will sound with a visual alert on the Instrument Cluster
- If FCA detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision

Junction Turning - With the left turn signal on, if it detects a potential collision, Junction Turning **A** may help to avoid the collision with an oncoming vehicle in an adjacent lane by applying emergency braking.

Direct Oncoming Vehicle function* - The Direct Oncoming Vehicle **B** function may reduce the vehicle speed to help prevent a collision when a vehicle or powered two-wheeler is detected and approaching from the opposite direction.

QUICK TIPS

 
 
 
 
- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems



[Forward Collision-Avoidance Assist \(FCA\)](#)



[Driving Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)

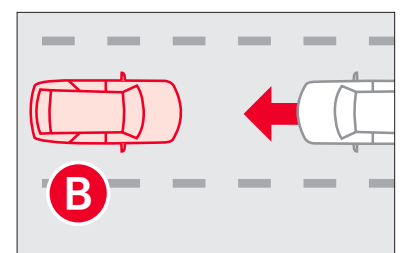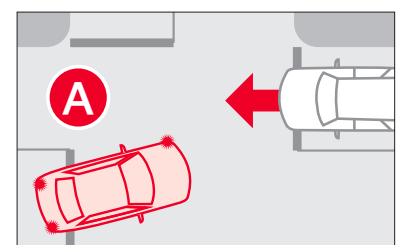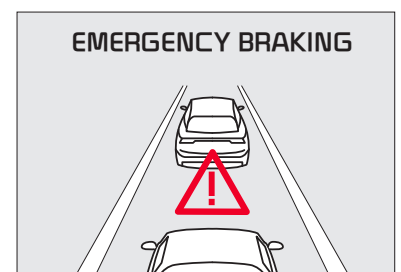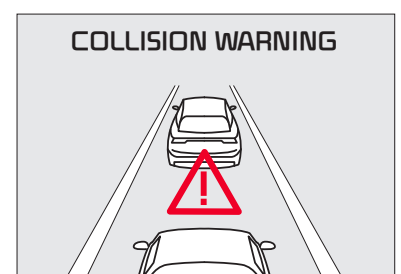

[Continued on next page](#)

When engaged, Forward Collision-Avoidance Assist is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.



Forward Collision-Avoidance Assist (FCA)^{†4}

[Continued from previous page](#)



[Driver Assistance -
Warning Methods &
Warning Volume](#)

FCA Settings:

- FCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance and select Forward Safety
- **Forward Safety Warning Timing** - When in the Driver Assistance / Driving Safety menu, select Forward Safety Warning Timing and one of the following:
 - **Standard:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

FCA will become active when the:

- Ignition is on or the Engine Start/Stop button is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

REMINDERS:

- FCA may warn the driver if the vehicle ahead is decelerating to turn or to pass a speed bump
- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster 

Actual Vehicle Settings steps may vary by model. Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, FCA is not a substitute for safe driving and may not detect all objects in front of the vehicle or alert the driver when the vehicle is approaching another vehicle. Always drive safely and use caution. Refer to section 9 in the Owner's Manual for more information.



Lane Keeping Assist (LKA)^{†4}

 
Lane Keeping Assist is designed to detect lane markings and may warn the driver if it detects the vehicle leaving the lane without using the turn signal. In certain circumstances, it may assist with steering to prevent the vehicle departing from its travel lane. When turned on, the Instrument Cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when the LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green. If LKA detects that you are moving outside of your lane, LKA may provide steering inputs, to try to prevent the vehicle from moving outside its lane. If the vehicle continues to move outside of the lane, LKA is designed to give a warning sound and display Lane Departure Warning on the instrument cluster.




[Lane Keeping Assist \(LKA\)](#)





[Driving Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)

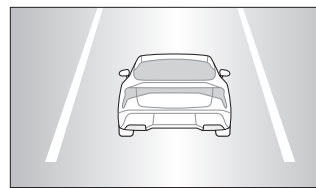

 When LKA detects the lane markers, both lanes are displayed white

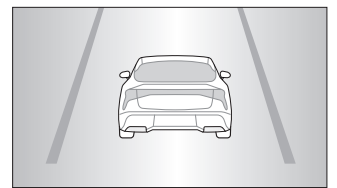

  When LKA does not detect the lane markers, the lanes are displayed gray

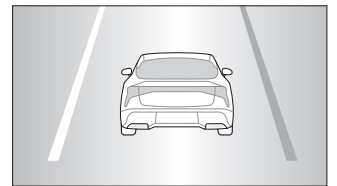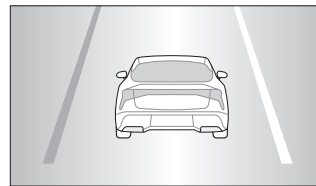

When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Lane Keeping Assist (LKA)^{†4}

 
[Continued from previous page](#)

LKA Settings:

- Press and hold the Lane Safety button **A** to turn LKA on or off
- To access Vehicle Settings in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance and then Lane Safety



[Driver Assistance -
Warning Methods &
Warning Volume](#)

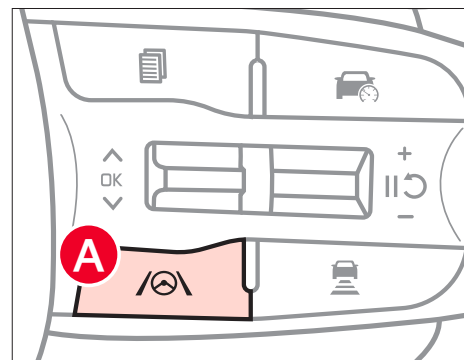

(Steering Wheel button on right side)

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING, LANE SAFETY AUDIBLE WARNING OFF and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems
- LKA detects lanes most effectively on roads with clear lane markings and good visibility

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

Refer to section 9 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

BCA uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes.

 
 
Initially, BCA provides a Collision Warning when it detects a potential collision with a vehicle, emitting a warning sound and visual alert on the outside rearview

mirrors. If there is a collision risk when exiting a parallel parking space, BCA may assist with braking the vehicle to help avoid a collision.

Vehicle detection: When another vehicle is detected within the Collision Warning warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and BCA will sound a warning.

Collision-Avoidance Assist: When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it can help avoid collision by applying the brake.

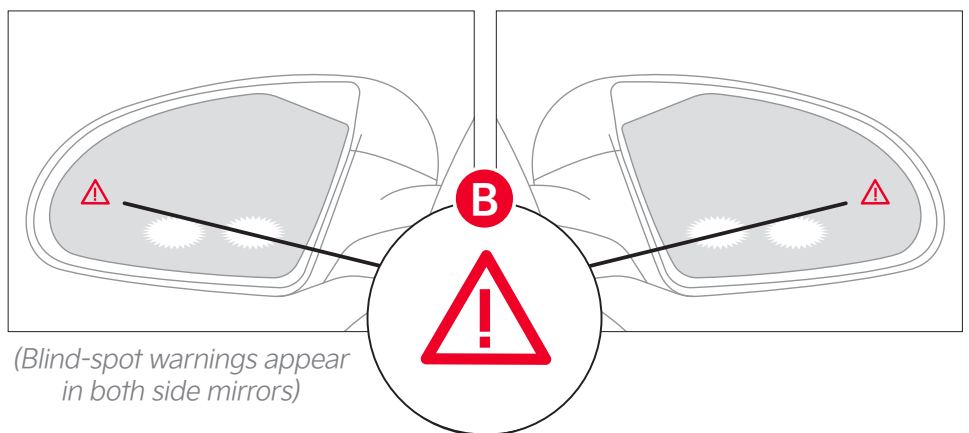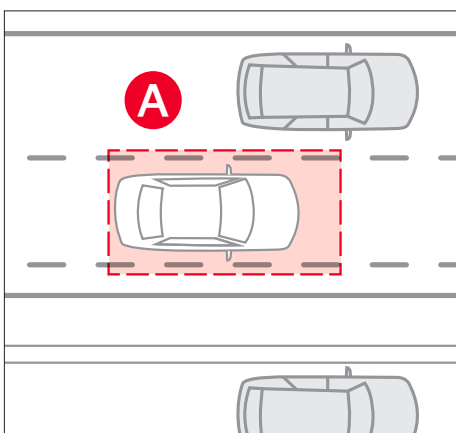

[Continued on next page](#)

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Refer to section 9 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

[Continued from previous page](#)

BCA Settings:

- BCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Blind-spot Safety



[Blind-spot Collision-Avoidance Assist \(BCA\)](#)



[Driving Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems
- BCA is turned on under these conditions:
 - Other vehicles are detected on the rear sides of the vehicle
 - A Vehicle Detection Warning can be issued when the vehicle speed is above approximately 12 mph
 - A Collision Warning can be issued when the vehicle speed is above approximately 25 mph
 - A Collision-Avoidance Assist can be issued when the vehicle speed is below approximately 2 mph

REMINDERS:

- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- If the turn signal is activated for a left turn at an intersection, the Blind-spot Collision-Avoidance Assist (BCA) system may issue a warning, regardless of whether the driver intends to complete the turn

[†]LEGAL DISCLAIMERS ON [PAGE 111](#) | ^{*}IF EQUIPPED



Safe Exit Assist (SEA)^{†4}

Safe Exit Assist can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and a warning will sound when a vehicle is detected, approaching from behind, after your vehicle has stopped. When the Electronic Child Safety Lock is activated and Safe Exit Assist (SEA) detects an approaching vehicle from the rear, the door lock release button will remain disabled, even if pressed by the driver.



[Safe Exit Assist \(SEA\)](#)



 
[Driving Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

SEA Settings:

- SEA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button in the ON position
- **To access Vehicle Settings in the Infotainment System**, press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. In Driver Assistance, select Driving Safety, then Safe Exit

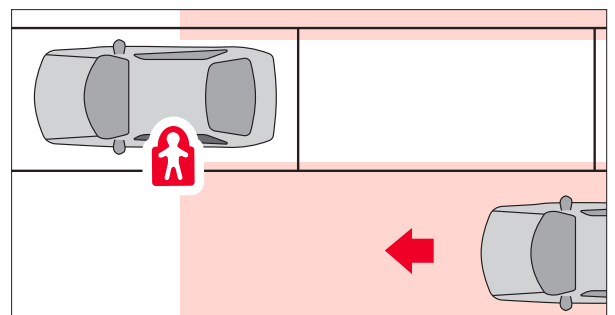

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

When engaged, SEA is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)^{†4}

Driver Attention Warning is designed to monitor the driver's driving pattern. If DAW detects that the driver's attention level becomes low, DAW is designed to display a message on the Instrument Cluster, "Consider taking a break," **A** and a warning sounds to recommend the driver take a break.



[Driver Attention Warning \(DAW\)](#)



[Leading Vehicle Departure Alert \(LVDA\)](#)

If the vehicle is stopped and Leading Vehicle Departure Alert (LVDA) is enabled, when a detected vehicle in front starts to depart, LVDA is designed to inform the driver by sounding an alert and displaying a message **B** on the Instrument Cluster.

Consider taking a break



 
A

REMINDERS:

- When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 10 minutes
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

B

Leading vehicle is driving away

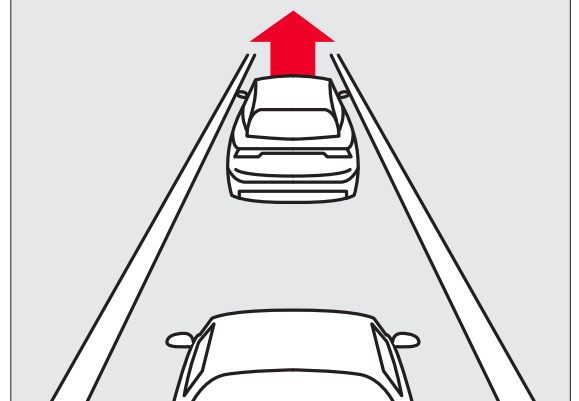

[Continued on next page](#)

When engaged, DAW and LVDA are not substitutes for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution. Refer to section 9 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)^{†4}

[Continued from previous page](#)

DAW/LVDA Settings:

- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position

- **To enable/disable LVDA in the Vehicle Settings in the Infotainment System -**

Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Leading Vehicle Departure Alert



[Driver Assistance -
Driver Attention
Warning & Leading
Vehicle Departure Alert](#)



[Driver Assistance -
Warning Methods &
Warning Volume](#)



Smart Cruise Control (SCC)^{†4}

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal.



[Smart Cruise Control
with Overtaking
Acceleration Assist](#)

With SCC on and activated and the vehicle distance set, when SCC detects a vehicle slowing or stopping, it may bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, the SCC system re-engages. If the vehicle ahead stops for more than three seconds, press the accelerator pedal or press the **+||↻-** button on the Steering Wheel to start moving the vehicle.

Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

REMINDERS:

- SCC will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine started
- When following a vehicle, SCC will automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- It is the responsibility of the driver to always check the speed and distance to the vehicle ahead
- SCC may decelerate if surrounding vehicle intervenes in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

[Continued on next page](#)



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

To turn SCC on: Press the Driving Assist button*  **A** on the Steering Wheel to activate and the speed will be set to the current vehicle speed. SCC may decrease the speed to maintain the distance with the vehicle in front.




[Driver Convenience - Smart Cruise Control & Highway Driving Assist](#)

To adjust set speed, press the **+||↻-** switch **B** up/down to increase/decrease the set speed.


To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. The image on the LCD screen will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **D**.

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume **+||↻-** button **B**. The cruise indicator on the Instrument Cluster will change.

 To turn SCC off: Press the Driving Assist  button **A**. The cruise indicator on the instrument cluster will turn OFF.

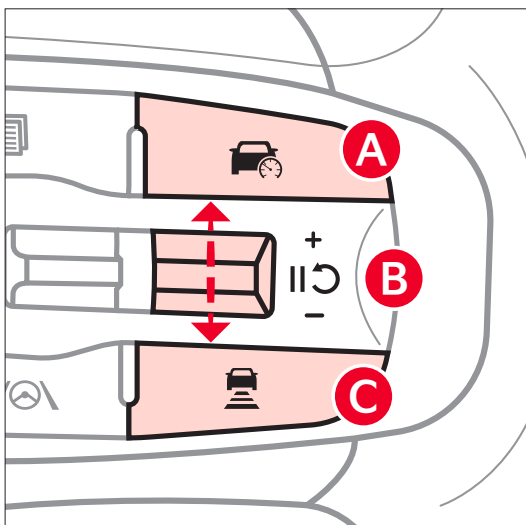

 (Type B Steering Wheel shown; buttons located on right side of Steering Wheel)

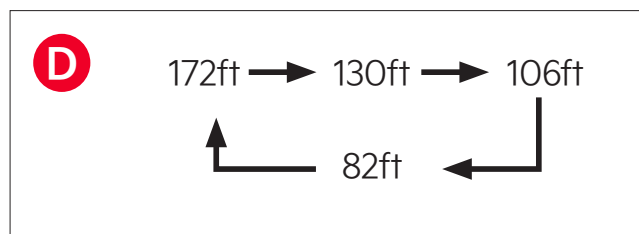

The distance settings are approximations when the vehicle is at 56 mph, and may vary depending on the vehicle speed at the time. See Owner's Manual for more information.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

QUICK TIPS

- Pressing the brake pedal cancels the SCC operation
- For SCC to operate:
 - When no vehicle is in front, you must be traveling at a minimum speed of 5 mph
 - When following a vehicle, there is no minimum speed requirement
 - If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

When engaged, SCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

Refer to section 9 in the Owner's Manual for more information.



Navigation-based Smart Cruise Control (NSCC)*†4,9

NSCC may automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

When NSCC is on and operating and the vehicle is driving on limited/controlled access highways, the NAV icon **A** will illuminate white on the Instrument Cluster LCD.



 
[Navigation-based Smart Cruise Control \(NSCC\)](#)



[Driver Convenience - Smart Cruise Control & Highway Driving Assist](#)

NSCC Settings:

- NSCC can be turned on/off by going to Vehicle Settings in the Infotainment System
- To access Vehicle Settings in the Infotainment System, press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. In Driver Assistance, select Driving Convenience, then Highway Auto Speed Change

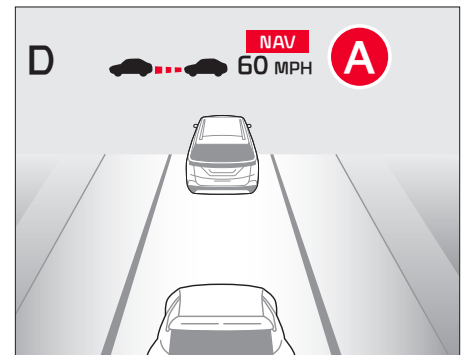

Highway Auto Speed Change is set, and NSCC is activated when SCC is turned on while driving on the highway. When NSCC detects a curve ahead, activates, and reduces the vehicle speed, the NAV icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

REMINDERS:

- NSCC requires an active navigation subscription
- NSCC is only available on certain controlled access roads and highways
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

When engaged, Navigation-based Smart Cruise Control (NSCC) is not a substitute for safe driving and cruise-control procedures. This is not an auto-pilot feature. It may not detect every object around the vehicle. Always drive safely and use caution.

Refer to section 9 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide. Images are for illustrative purposes only and may not reflect actual feature or operation.



Lane Following Assist (LFA)^{†4}

Lane Following Assist is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. When turned on, the instrument cluster indicator will initially illuminate white  **B**. It will remain white when the system does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon  will illuminate green **B**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. If hands on the Steering Wheel are not detected continually, LFA will be turned off with additional emergency warning.

To turn LFA on or off, press the Lane Driving Assist button **C** on the steering wheel.

LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph



 
 
[Lane Following Assist \(LFA\)](#)



[Driving Safety - Forward/Lane/Blind-Spot Safety & Safe Exit](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

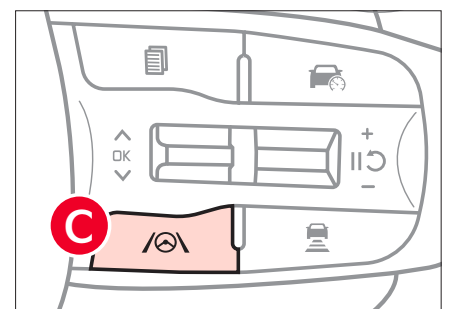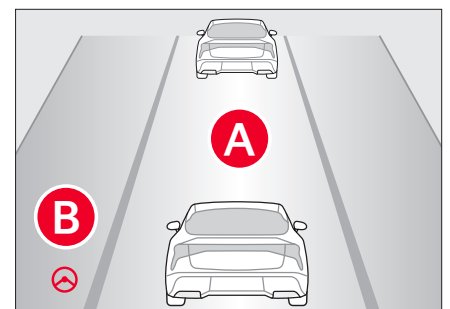

(Buttons located on steering wheel)

[Continued on next page](#)

When engaged, LFA is a supplemental system. Do not solely rely on LFA and always pay attention to the road and its conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 9 in the Owner's Manual for more detailed information, limitations and conditions.



Lane Following Assist (LFA)^{†4}

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: LFA is not a substitute for safe and proper driving. Always drive safely and use caution.



Highway Driving Assist (HDA)*†4

HDA is designed to help detect vehicles and lanes ahead, help maintain distance from the vehicle ahead, maintain the set speed, and keep the vehicle between the lanes while driving on certain highways.

 


[Highway Driving Assist \(HDA\)](#)

When HDA is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA will be in standby mode and the indicator light **A** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **A**.

When HDA is operating, the system will stop your vehicle when it detects that the vehicle ahead has stopped. If the vehicle ahead begins moving within approximately 30 seconds, your vehicle will also begin moving.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster and a warning will sound. If hands on the Steering Wheel are not detected, HDA will cancel.

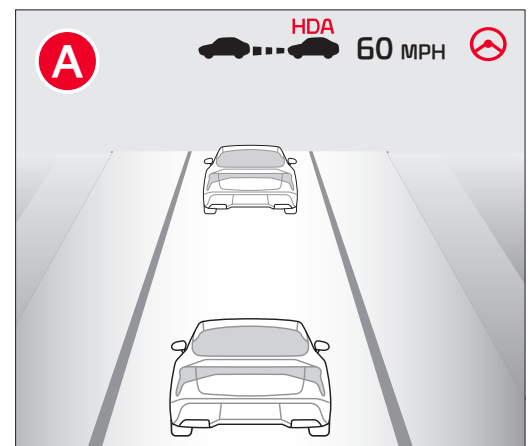

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist (HDA)^{*†4}

[Continued from previous page](#)

HDA Settings:

- HDA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Convenience. Select Highway Driving Assist to activate



[Driver Convenience -
Smart Cruise Control
& Highway Driving
Assist](#)



[Driver Assistance -
Warning Methods &
Warning Volume](#)

HDA Operating Conditions:

- Driving on the main road of highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of highways while Lane Following Assist and Smart Cruise Control are operating

REMINDERS:

- Current highway speeds and controlled or limited access road information may vary. Future navigation updates may change this information. See owner's manual for more information
- When the ignition is cycled, HDA returns to its previous state, on or off
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 9 in the Owner's Manual for more detailed information, limitations and conditions.



Rear View Monitor (RVM)^{†4}

RVM is a supplemental system that displays the view behind the vehicle through the Infotainment System screen while the vehicle is in Reverse.



 
 
[Driver Assistance - Warning Methods & Warning Volume](#)

While gear shift is in **P** (Park) or **N** (Neutral), to turn RVM on, press the Parking/View button **A**.

Camera Settings: To adjust, press the gear icon  or press **SETUP**, VEHICLE, DRIVER ASSISTANCE, PARKING SAFETY and CAMERA SETTINGS.

RVM activates when the:

- Ignition is on or the Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the **R** (Reverse) position

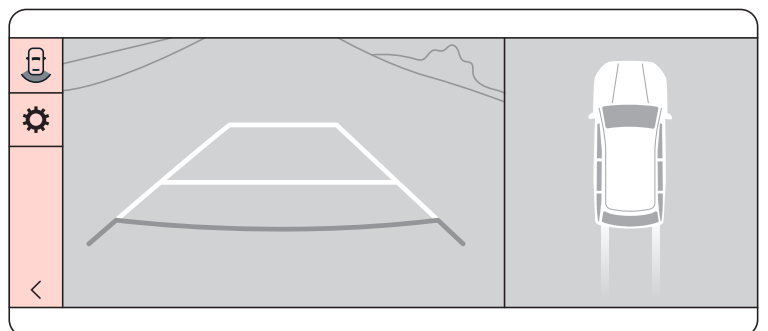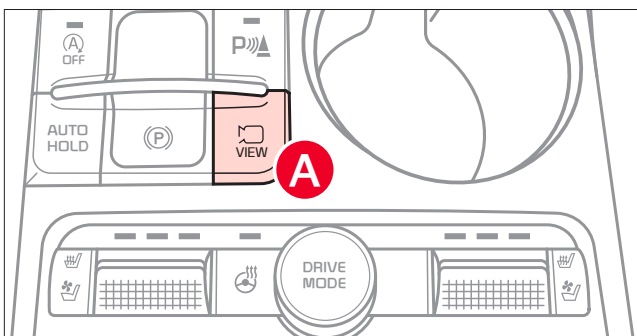

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can turn PARKING SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- Rear View Monitor is enabled by default when the ignition is cycled
- Through normal use and after inclement weather or washing, the rear camera may become dirty or obstructed. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- When Parking Safety Priority setting is enabled in the Warning Methods, and when the Rear View Monitor is active, the volume will be lowered on all audio modes

Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.



Blind-spot View Monitor (BVM)*†4

Blind-spot View Monitor (BVM) displays the rear blind spot area of the vehicle in the cluster when the turn signal is turned on to help safely change lanes.



 
[Blind-spot View Monitor \(BVM\)](#)

BVM Settings:

- Enable BVM in the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button in the on position
- **To access Vehicle Settings in the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY and then BLIND-SPOT VIEW

BVM will operate when the Engine Start/Stop button is on and the turn signal is activated.

BVM will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

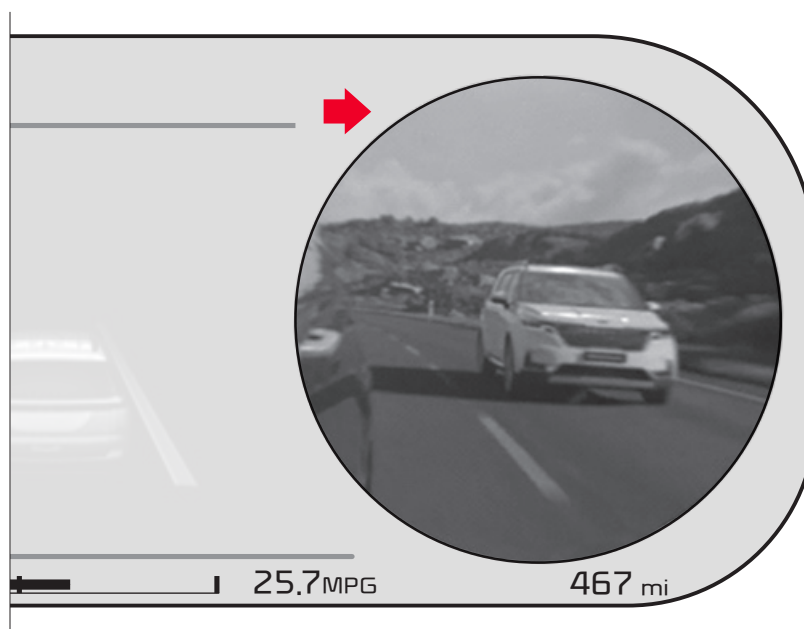

(Display showing left side of vehicle)

See section 9 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Surround View Monitor (SVM)*†4

SVM is a parking support system that is designed to show the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the Infotainment System screen.

- Move the gearshift to (R) reverse or press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function



[Surround View Monitor \(SVM\)](#)



 
[Driver Assistance - Warning Methods & Warning Volume](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can turn PARKING SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- When Parking Safety Priority setting is enabled in the Warning Methods, and when the SVM is active, the volume will be lowered on all audio modes

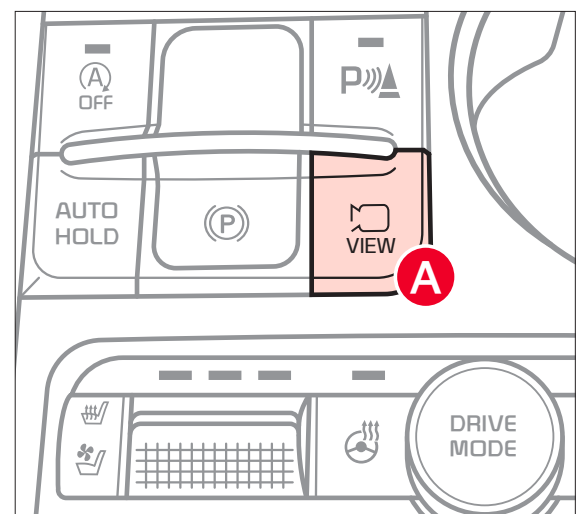

(Button located below gear shift)

[Continued on next page](#)

When engaged, SVM is only a supplemental system. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear. See section 9 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Surround View Monitor (SVM)^{*†4}

[Continued from previous page](#)

- Other view modes can be selected by touching the view icons **A** on the SVM screen
- SVM Auto On:** Go to Vehicle Settings in the Infotainment System by pressing **SETUP, VEHICLE**, then Driver Assistance. Under Parking Safety, select Surround View Monitor Auto On. The front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in **D** (Drive).
- To change other SVM settings, press the onscreen settings icon  **B** while SVM is operating.



[Surround View Monitor \(SVM\)](#)

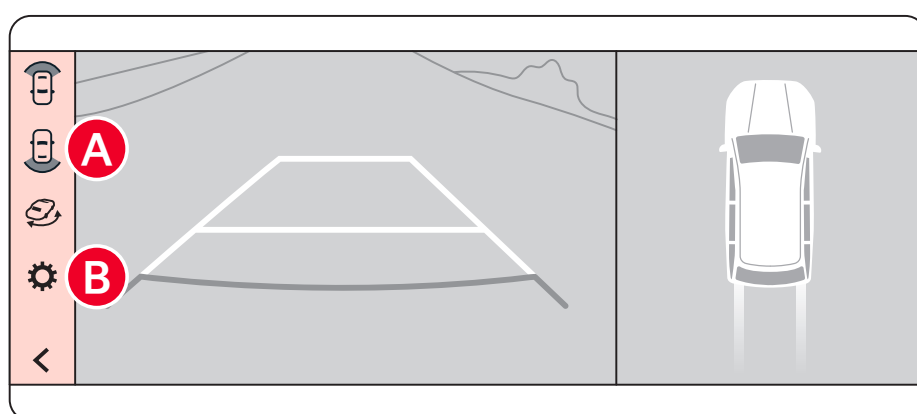

QUICK TIP

The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
 
Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†4}

Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the left and right side while your vehicle is reversing and may warn the driver that a collision is imminent with a warning message and a warning will sound. RCCA may automatically apply the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA is designed to automatically apply the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.



[Rear Cross-traffic Collision-Avoidance Assist \(RCCA\)](#)

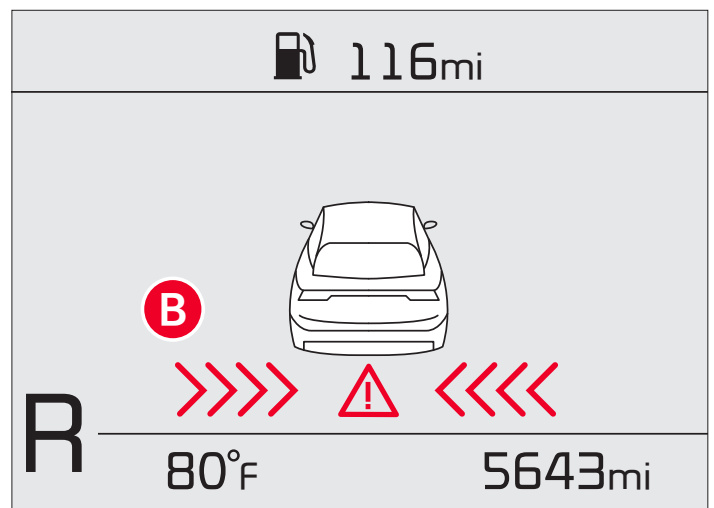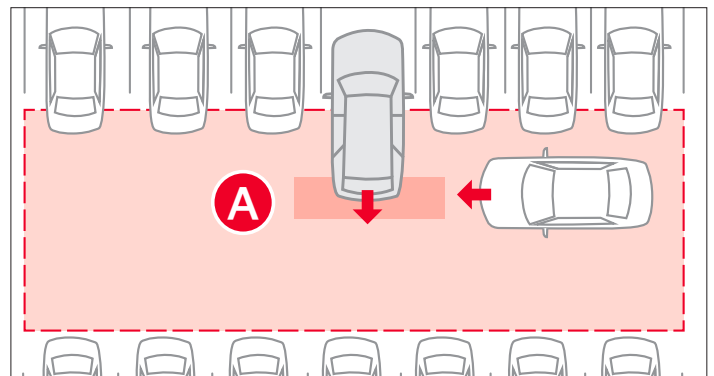

[Continued on next page](#)

When engaged, RCCA is a supplemental system and is not a substitute for safe driving. RCCA may not detect all objects behind vehicle. Always drive safely and use caution. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 9 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†4}

[Continued from previous page](#)

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph



[Rear Cross-traffic Collision-Avoidance Assist \(RCCA\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

RCCA Settings:

- RCCA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill and the ignition is on or the Engine Start/Stop button is in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross Traffic Safety

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, RCCA is designed to show a warning

Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 9 in the Owner's Manual for more information.



Reverse Parking Collision-Avoidance Assist (PCA)*†4

Reverse PCA is designed to detect certain objects/pedestrians behind the vehicle and emitting a warning sound and applies emergency braking to help reduce the possibility of a collision when the vehicle is in reverse.



[Reverse Parking Collision-Avoidance Assist \(PCA\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)



[Driver Assistance - Parking Safety](#)

PCA Settings:

- PCA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, the ignition is on or the Engine Start/Stop button is in the on position
- To access Vehicle Settings in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Parking Safety, and Backward Safety

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- PCA is operational when Rear Active Assist is selected in the Vehicle Settings
- PCA will only operate when:
 - The vehicle's speed is below 6 mph
 - The trunk is closed
 - The gear shift is in **R** (Reverse)

Reverse PCA is not a substitute for proper and safe backing-up procedures. Reverse PCA may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 9 in the Owner's Manual for more information.



Forward/Reverse/Side* Parking Distance Warning (PDW)^{†4}

Forward/Reverse/Side* PDW is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the front, rear and sides of the vehicle when the vehicle is moving forward or reversing at low speeds.

Reverse PDW is on and active when the ignition is turned on and the gear shift is moved into **R** (Reverse). To turn on **Front/Side*** PDW, press the Parking Safety button **A**.

To activate or deactivate Parking Distance Warning Auto On, press the **SETUP** key on the Infotainment System → Vehicle (onscreen) → Driver Assistance → Parking Safety → Parking Distance Warning Auto On.



 
 
 
[Forward/Side/Reverse Parking Distance Warning \(PDW\)](#)



[Driver Assistance - Warning Methods & Warning Volume](#)



[Driver Assistance - Parking Safety](#)

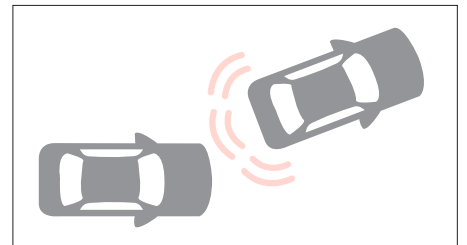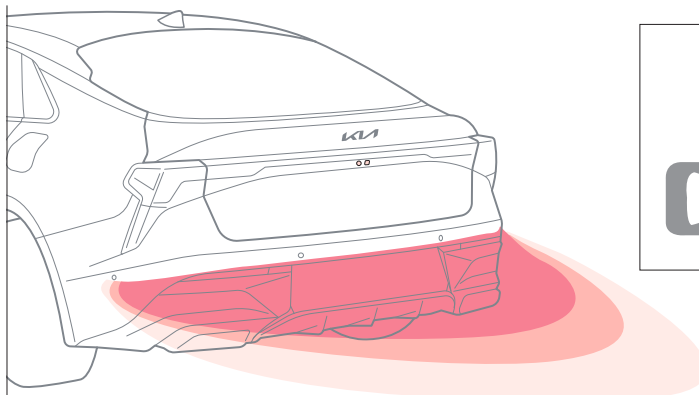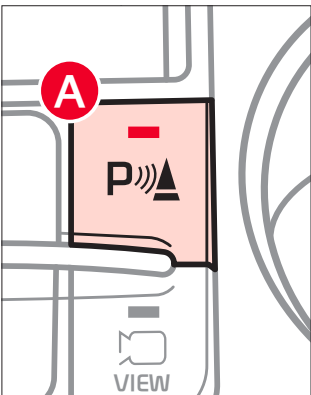

QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: When more than two objects are sensed at the same time, the closest one will be recognized first.

When engaged, PDW is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object behind the vehicle. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 9 in the Owner's Manual for more information.

 


Instrument Cluster Illumination Control

Press top/bottom of switch **A** to adjust the display brightness of the instrument panel illumination.

REMINDER: Instrument Cluster Control does not adjust brightness on the Infotainment System screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 5 in the Owner's Manual for more information.

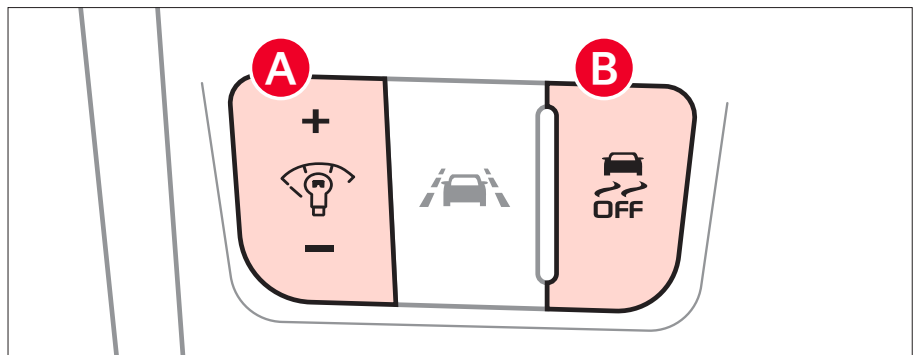

(Button panel located left of Steering Wheel)

Electronic Stability Control (ESC)^{†6}

ESC is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON for daily driving whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever ESC is in operation

Refer to section 8 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Hill-start Assist Control (HAC)^{†6}

HAC is designed to help prevent the vehicle from rolling backward, for two seconds, when accelerating from a stop while on a steep incline.

HAC automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see an authorized Kia dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 8 in the Owner's Manual for more information.



Engine Start/Stop Button^{†7}

To start the engine:

 
- Press the brake pedal
- Press the ENGINE START/STOP button while the gear shift is in P (Park) or N (Neutral)

To turn the engine OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.



[Start/Stop Button](#)

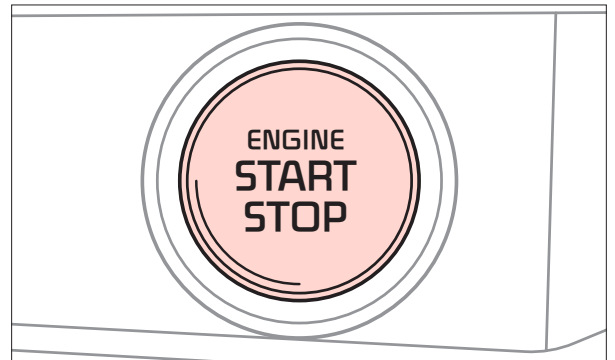

(Located right of Steering Wheel)

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once

ON position

- When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice
- Keeping the vehicle in ACC or ON position without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 8 in the Owner's Manual for more information.



 
Electronic Child Safety Lock System

Press button **A** to lock the rear passenger doors. An indicator will illuminate showing the system is active. This system is enabled by default, and then activated once the button **A** is pressed. To deactivate, press the button again.

Button located on door panel. Button configuration may vary depending on vehicle model.



[Electronic Child Safety Lock System](#)

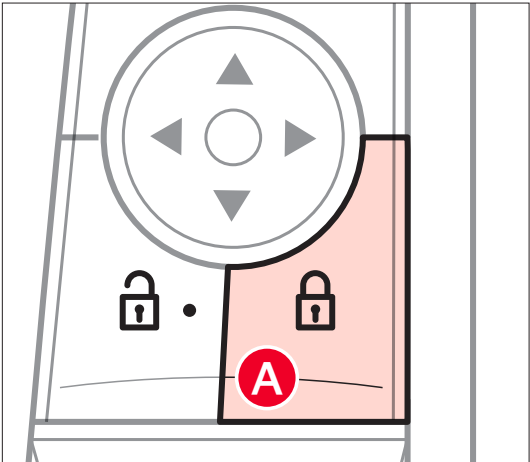


Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

 Refer to section 5 in the Owner's Manual for more information.

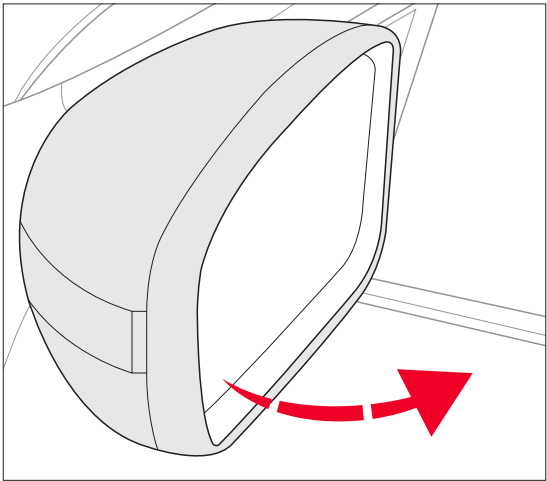

Images are for illustrative purposes only and may not reflect actual feature or operation.

*IF EQUIPPED



Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Passenger's Windows Auto-Up/Down*
- B** Press to Unlock/Lock All Doors

QUICK TIP

Press button again to stop Auto-Up/Down function.

 
- C** Press to disable Rear Passenger Windows / activate Electronic Child Safety Lock System

QUICK TIPS

- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- When **C** is pressed, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

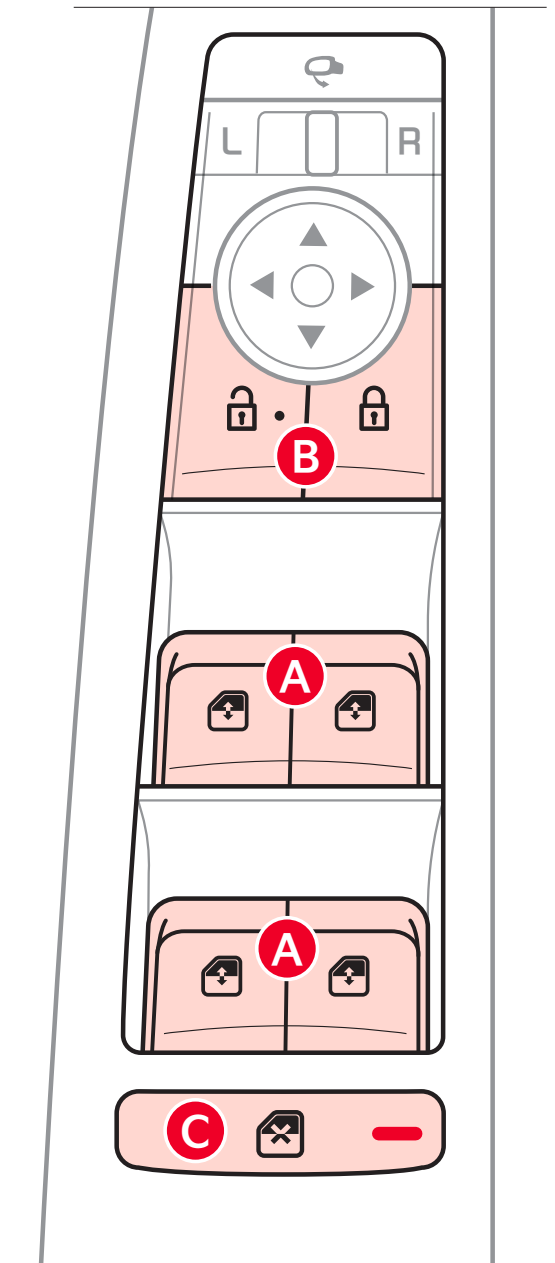

Button configuration may vary depending on vehicle model.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Power Folding Outside Mirrors*

 
Press the L or R buttons **A** to select the mirror to adjust.

Press button arrows **B** left/right or up/down to adjust mirror position.

Toggle button **C** left/right to unfold/fold the outside rearview mirrors.

Toggle button **A** to center to automatically fold/unfold mirrors when:

- The Smart Key Lock/Unlock buttons are pressed
- The door outside handle button is pressed

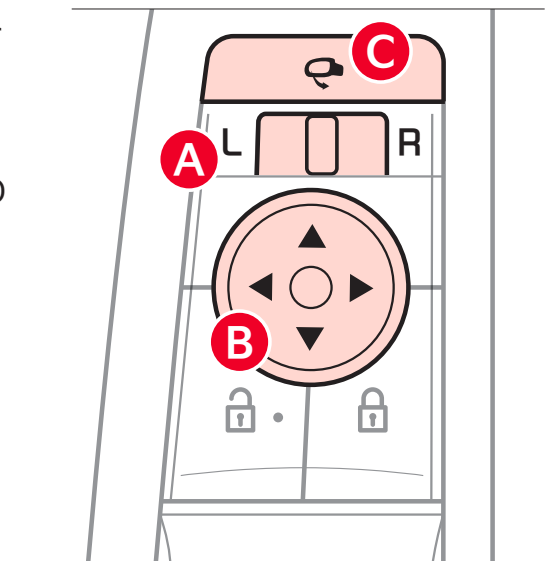

Button configuration may vary depending on vehicle model.

QUICK TIPS

- The mirrors will automatically unfold when the Smart Key is within close proximity to the vehicle
- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

Images are for illustrative purposes only and may not reflect actual feature or operation.

For more information on all items on this page, refer to section 4 in the Owner's Manual.



 
 
Power/Heated Outside Mirrors*

Heated Outside Mirrors: By activating the Rear Defroster **A**, the outside mirror heaters will turn on and automatically defrost/de-ice the mirrors.

To operate Power Outside Mirrors: Move toggle switch **B** left or right to select mirror. Then press arrows **C** left/right or up/down to adjust mirror position.

Mirror heaters controlled with Rear Defroster. Use mirror to defog/deice side mirrors.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

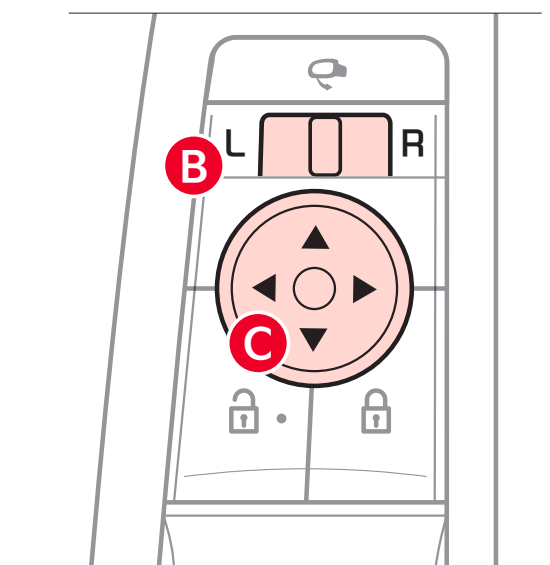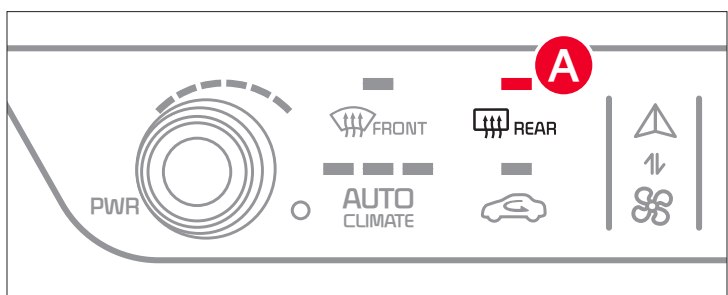

Button configuration may vary depending on vehicle model.

Images are for illustrative purposes only and may not reflect actual feature or operation.

For more information on all items on this page, refer to section 4 in the Owner's Manual.



Headlights & High Beams

 
To operate:

- Rotate lever **A** to change the Headlight function
- Push the lever to turn High Beams ON **B**
- Pull the lever to flash Headlights / High Beams **B**

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

AUTO Light function - When the light switch is in the AUTO Light position, the taillights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

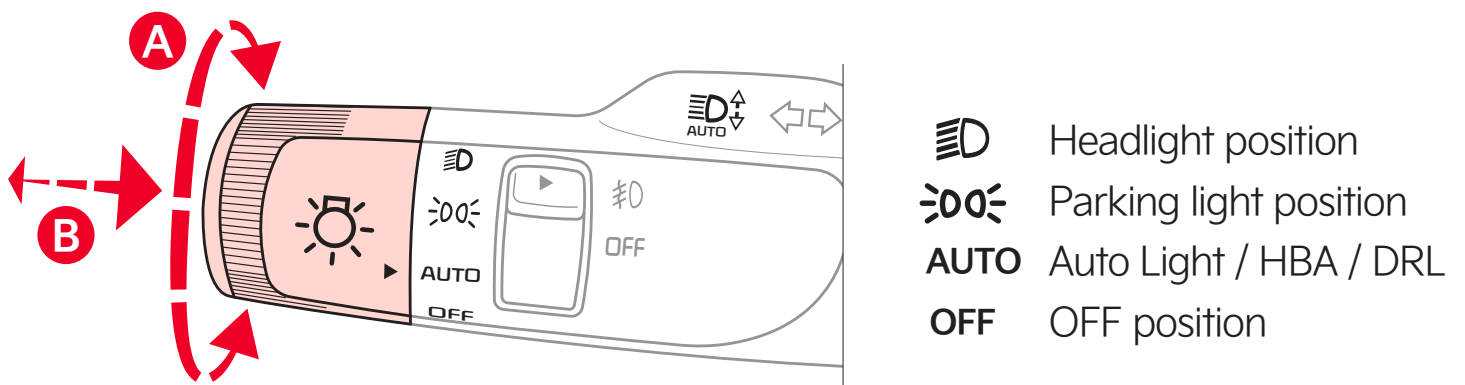

REMINDER: DRL only operates during the daytime.

Images are for illustrative purposes only and may not reflect actual feature or operation.



High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.



[High Beam Assist \(HBA\)](#)

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

Refer to section 5 in the Owner's Manual for more information.



Turn Signals & Fog Lights*

 
To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal **A**
- Fog Lights - Rotate switch **B** up/down to turn Fog Lights ON/OFF

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing **C**. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), on the Infotainment System, go to Vehicle Settings by pressing SETUP, VEHICLE, LIGHTS, and ONE TOUCH TURN SIGNAL.

REMINDER: Headlights must be ON for Fog Light operation.

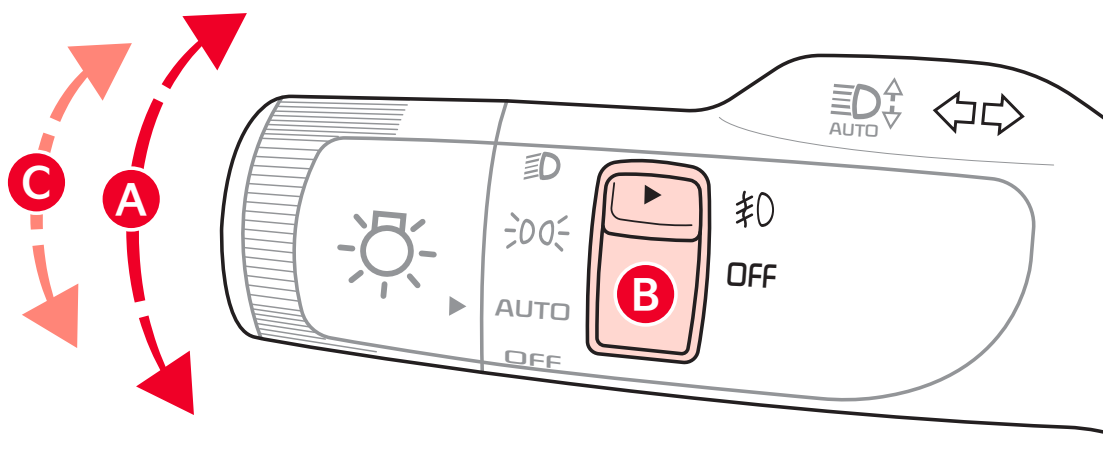

Refer to section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Windshield Wipers & Washers

To operate:

- Move lever Up/Down **A** to change wiper modes
- Press switch **B** Up/Down to adjust Intermittent Wipe Speed to Fast/Slow
- Pull lever to spray and wipe



[Wipers and Wiper Stalk](#)

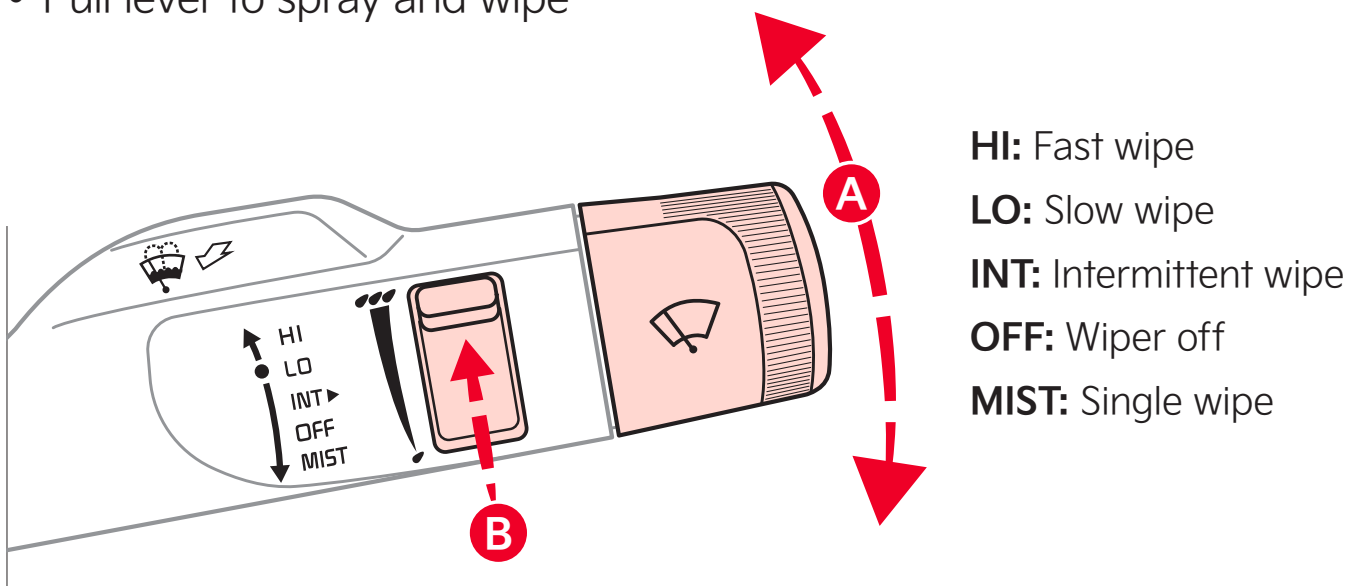

QUICK TIPS

- Pressing button **B** up increases Intermittent wipe frequency and wipe speed. Pressing the button down decreases the frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



Lifting Wipers (Wiper Service Mode)

 
 
To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **A** to prevent damaging the hood.



[Lifting Wipers /
Wiper Service
Mode](#)

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch **B** to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

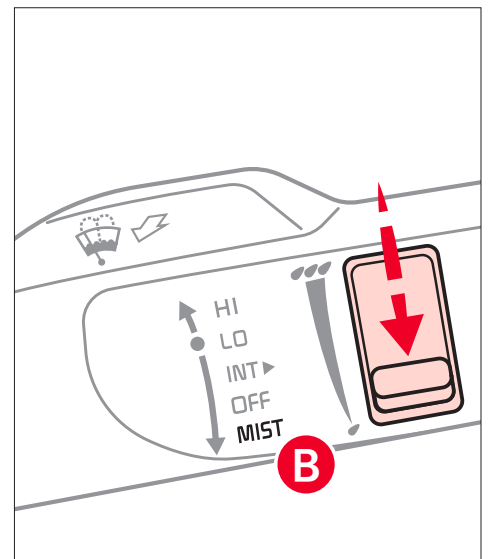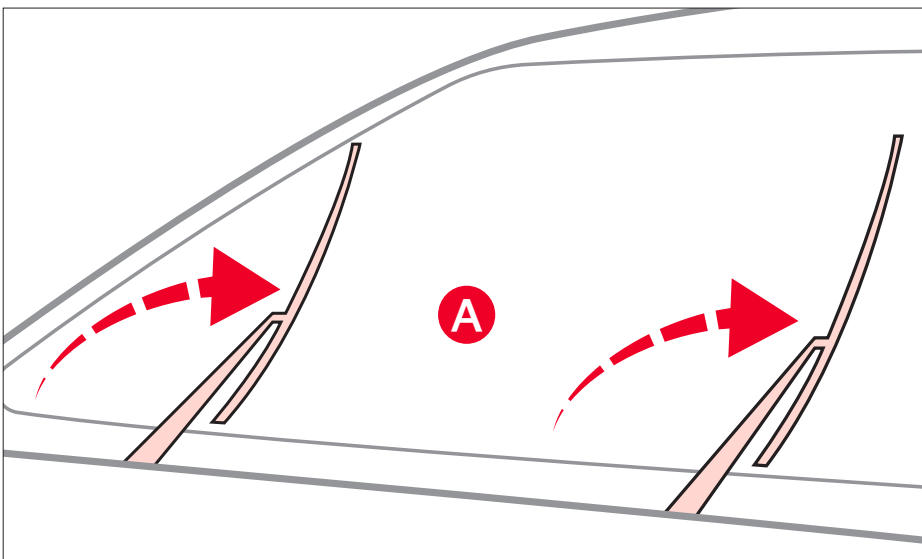

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 11 in the Owner's Manual for more information.



Heated Steering Wheel*

 
Press button **A** to turn ON the steering wheel heater while the ignition or Engine Start/Stop button is in the ON position.

After 30 minutes, the heater will automatically lower to the first level (weak). It will stay at that level until the vehicle is turned off. To manually turn off the heater, press and hold button **A** until the indicator light turns off.

QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

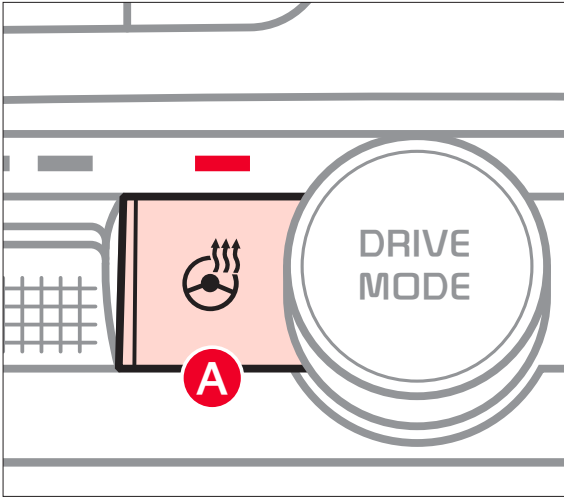

*Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 5 in the Owner's Manual for more information.*

*IF EQUIPPED



 
Tilt/Telescoping Steering Wheel†20

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust to the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.



[Tilt/Telescoping/
Heated Steering
Wheel](#)

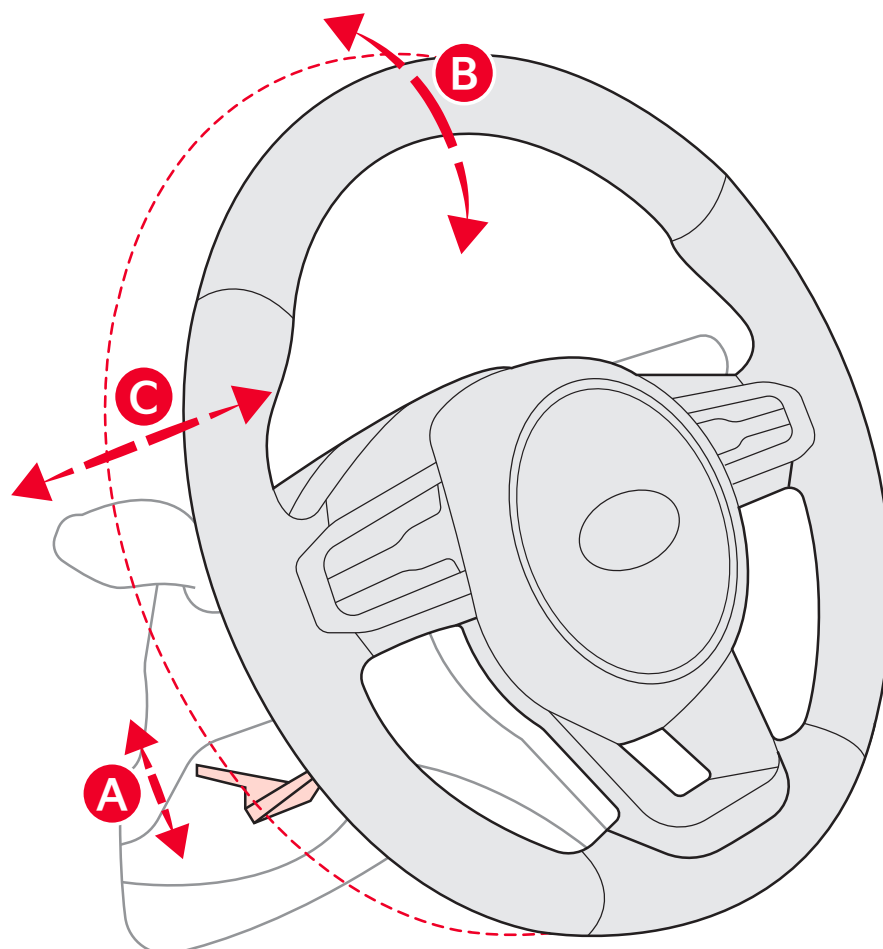

QUICK TIP

It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



Steering Wheel Audio Controls^{†18}

- A Infotainment System MODE button:** Press to cycle through FM/AM/SiriusXM^{®*}†17/Media modes
- Infotainment System ON:** When off, press to turn the power on

 


[Steering Wheel Controls](#)



[Custom Star Buttons & Radio Favorites](#)

- B Seek/Preset button:**
- FM/AM/SiriusXM^{®*}†17 Modes: Press to advance through Preset Stations. Press and hold to auto seek
- Media Modes: Press to move track up/down. Press & hold to forward/rewind (except for *Bluetooth*[®] Audio)
- C Volume button:** Press up/down to raise/lower volume
- Mute button:** Press to mute all audio (Media pauses in some Media modes when pressed)

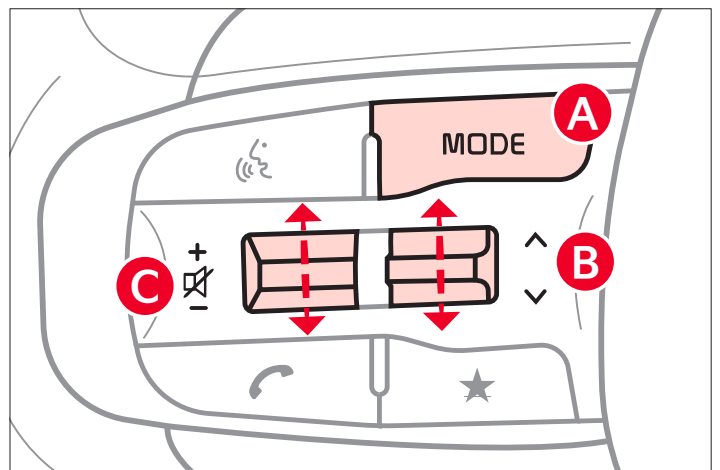

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide, depending your audio system.



Bluetooth® Wireless Technology^{†3,18}

- A Voice Recognition* button:** When a phone is paired, press briefly to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system



[Automatically
Activated
Bluetooth®](#)

Kia Connect^{†1} with Navigation* -

When enrolled with a Kia Connect^{†1} subscription, press this button to activate the Kia Connect^{†1} Assist to use navigation guidance and search destinations



 
[Steering Wheel
Controls](#)

- B Volume button:** Press up/down to raise/lower the speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- C Call button:** Press to place/answer calls or to end a call, reject an incoming call or cancel a function. If no phone is paired, press the button to pair a phone
- D Custom button:** Press to program the Custom Button, then select an available feature you would like the Custom Button to open

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

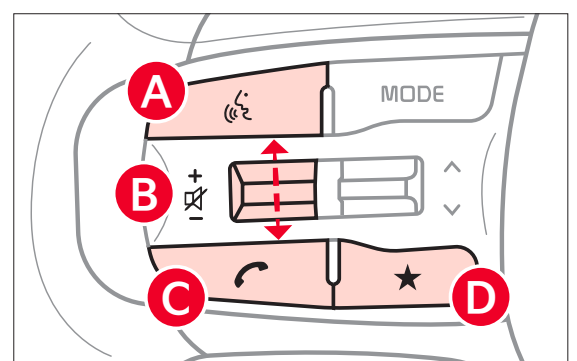

QUICK TIP

When using the voice command feature, wait for the system to BEEP before speaking the command.

[Continued on next page](#)

Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

Pairing a Phone

1. Press the SETUP key on the Infotainment System
2. Press DEVICE CONNECTIONS, DEVICE CONNECTIONS again and ADD NEW — ensure your smartphone has *Bluetooth®* turned on
3. Select the Vehicle Name you see on the Infotainment System screen in the searched *Bluetooth®* devices on your phone
4. Confirm the verification code matches and approve
5. Follow the onscreen prompts on the infotainment system



[Bluetooth®
Pairing](#)



 
[Placing &
Receiving Calls](#)

How to Place a Call Using Steering Wheel Controls

When using the voice command feature, wait for the system to BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Call button **A**. When not connected via *Bluetooth®*, displays the *Bluetooth®* Connection window
- Option 2: Press the Voice Recognition* button **B**. Then say the command “Call {name}” or “Dial {number}” followed by contact name or number

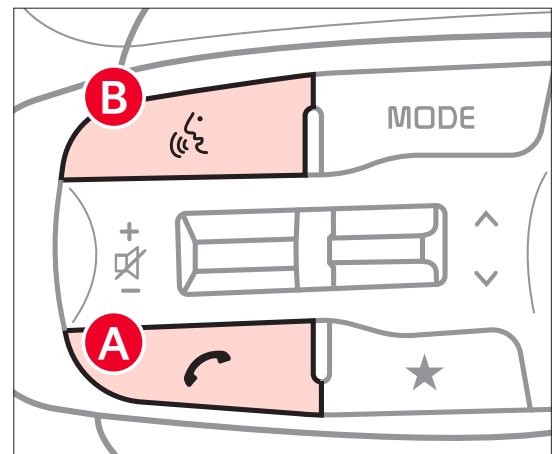

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth®* connection requests.

REMINDER: *Bluetooth®* Wireless Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device.

[Continued on next page](#)

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

Voice Recognition* and Phone

Contact Tips: The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.



- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)

[Continued on next page](#)

Your vehicle’s steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User’s Manual or the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner’s Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

REMINDER: *Bluetooth®* Wireless

Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device.



[Voice
Recognition Tips](#)

QUICK TIPS

- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth®* Music Streaming - If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition* button and say "Commands" to get a list of available commands

Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information on the audio system, if equipped, refer to the Car Multimedia System User's Manual or the Car Infotainment System Quick Reference Guide. For *Bluetooth®* Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for *Bluetooth®* Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific *Bluetooth®* Wireless Technology phone pairing and operation instructions.



Android Auto™†3 Setup

Android Auto™ compatible

smartphone setup - Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.



[Wireless
Android™ Auto](#)

Wireless Connection setup for Android Auto™:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION, select ANDROID AUTO OPTIONS and then ENABLE ANDROID AUTO
3. Press PHONE PROJECTION, then ADD NEW
4. Press SETUP, select DEVICE CONNECTIONS, select DEVICE CONNECTIONS and select ADD NEW
5. Make sure Wi-Fi and *Bluetooth®* are activated on the smartphone and select the vehicle system from the list of searched *Bluetooth®* devices
6. Confirm that the verification codes on the smartphone and the infotainment screen match, and approve the connection from the smartphone
7. When connecting to Android Auto™ for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Android Auto from the smartphone
8. Press Android Auto™ from the home screen to see the available apps

[Continued on next page](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.



Android Auto™†3 Setup

[Continued from previous page](#)

Cable Connection setup for Android Auto™:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION, select ANDROID AUTO OPTIONS and then select ENABLE ANDROID AUTO
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps
5. Press the **SETUP** key on the Infotainment System
6. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
7. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
8. When connecting to Android Auto™ for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Android Auto™ from the smartphone
9. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

[Continued on next page](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Android Auto™ and Apple CarPlay® run on your smartphone cellular data service. Normal data rates will apply. Refer to the Car Infotainment System Quick Reference Guide for more information.



Android Auto™ †3 Setup

[Continued from previous page](#)

QUICK TIPS

- If Android Auto™ randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the Android Auto™ website for Android Auto™ app concerns

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply. Refer to the Car Infotainment System Quick Reference Guide for more information.



Apple CarPlay^{®†3} Setup

Wireless Connection setup for Apple CarPlay[®]:



1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select DEVICE CONNECTIONS and select ADD NEW
3. Make sure Wi-Fi and *Bluetooth*[®] are activated on the smartphone and select the vehicle system from the list of searched *Bluetooth*[®] devices
4. Confirm that the verification codes on the iPhone[®] and the infotainment screen match, and approve the connection from the smartphone
5. When connecting to Apple CarPlay[®] for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Apple CarPlay[®] from the iPhone[®]
6. Press Apple CarPlay[®] from the home screen to see the available apps

Cable Connection setup for Apple CarPlay[®]:

1. Connect the Apple CarPlay[®] compatible iPhone[®] with the vehicle's USB port using the manufacturer's cable provided with your iPhone[®]
2. Press the **SETUP** button on the Infotainment System
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay[®]
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay[®]
5. From the Infotainment System home screen, select the Apple CarPlay[®] button, where you'll see all the Apple CarPlay[®] supported apps

[Continued on next page](#)

Android Auto[™] runs on your smartphone cellular data service. Normal data rates will apply.

Apple CarPlay^{®†3} Setup

[Continued from previous page](#)

QUICK TIPS

- If Apple CarPlay[®] randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the Apple CarPlay[®] website for Apple CarPlay[®] app concerns

REMINDERS:

- Apple CarPlay[®] compatibility requirements for connection:
 - iOS[®] software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Always update your phone to the latest operating system release

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle. Apple CarPlay[®] runs on your smartphone cellular data service. Normal data rates will apply. Refer to the Car Infotainment System Quick Reference Guide for more information.



Kia Connect* Activation^{†1}

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your Infotainment System:
 - a. Press the **SETUP** key
 - b. Press DATA/NETWORK
 - c. Press ACTIVATE
 - d. Press under KIA CONNECT, press ACTIVATE SERVICES
 - e. Then press ACTIVATE
2. Read and agree to Terms of Service and Privacy Policy and press AGREE
3. Enter phone number or email address to receive a verification code, then press OK and SUBMIT
4. Click on the link and a page will open requesting you to create an account; provide the information needed and select SAVE to create the account
5. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
6. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy



[Kia Connect
Activation](#)



[Kia Connect
App Overview](#)

REMINDER: This vehicle is equipped with over-the-air system updates.

For further Kia Connect^{†1} operations, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



 
Kia Connect* Assistance^{†1}

Kia Connect^{†1}  **A** — Connect to the Kia Connect^{†1} Call Center

Roadside Assist  **B** — Press to connect to a roadside assistant where you can request vehicle towing services



[Kia Connect Assistance](#)

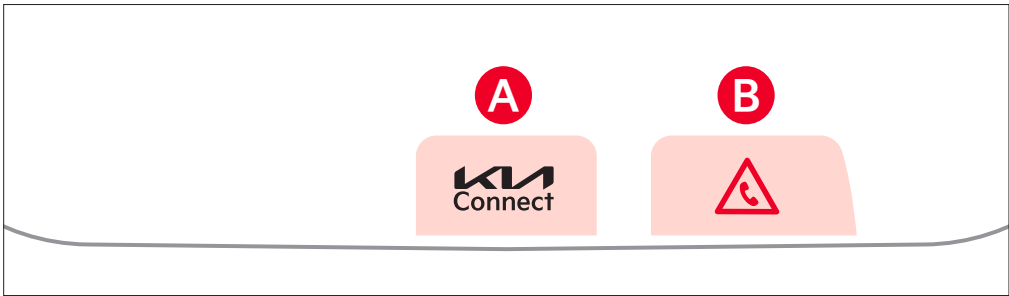

(Buttons on rearview mirror*. Kia Connect^{†1} button may be located on the overhead console area. Your button layout/location may differ.)

Images are for illustrative purposes only and may not reflect actual feature or operation.
For more information, refer to the Car Infotainment System Quick Reference Guide.

[†]LEGAL DISCLAIMERS ON [PAGE 111](#) | *IF EQUIPPED



Kia Access App^{†2} Download

Go to an app marketplace to download the new Kia Access App. Once downloaded, make sure you register your vehicle and create an account (refer to Kia Connect^{†1} Activation page). Get to know your new Kia and the available convenient features on the app.



[Download the Kia Access App](#)

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength to use Kia Connect^{†1}. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain current vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect^{†1} app is designed to stay connected to the vehicle as long as the vehicle has been started within seven days. To reconnect the Kia Connect^{†1} app, restart the vehicle



Kia Access App Features Guide

The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Dealer Settings
- Manage Vehicles and Profiles



[Kia Access App
Features Guide](#)

 
For further Kia Connect^{†1} operations, refer to the Car Infotainment System Quick Reference Guide.

See Kia Connect^{†1} Terms of Service at owners.kia.com for more information.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.



Kia Connect* Infotainment System - (Non-Navigation & Navigation^{†9})* - FM/AM/ SiriusXM^{®†17}/Media (USB, *Bluetooth*^{®†3} Audio)

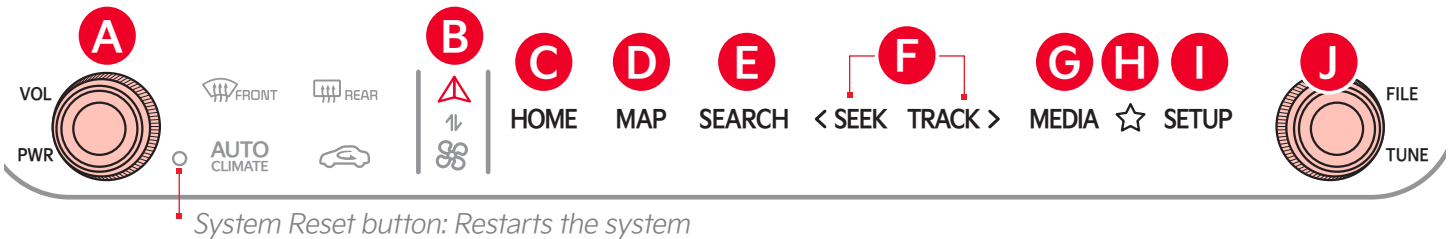

A POWER button/VOLUME knob:

Press to turn the Media ON/OFF.
Press and hold to turn off the screen and sound. Rotate to adjust the system volume (except for navigation sound)



[Kia Connect
with Navigation](#)

B Infotainment/Climate switch button: Switch between control panel functions. Press/hold to access the control panel default settings screen

C HOME button: Press to go to the Home screen. Press and hold to turn the Quick Control function ON/OFF

D MAP button: Press to view the current location on the map. When receiving guidance on the Map screen, press to repeat voice guidance

E SEARCH button: Displays the Search screen

F SEEK/TRACK buttons: While listening to the radio, press to change the station. While playing media, press to change the track/file

G MEDIA button: Press to play the connected media. Press and hold to display the Media Home screen

H Custom button: Press to play the user-defined function. Press and hold to display the function settings screen

I SETUP button: Displays the Settings screen. Press and hold to display the version information screen

J TUNE knob: While listening to the radio, press to adjust the frequency or change the station. While playing media, press to scan music or files. During scanning, press to select the current channel, music or file. While on the map screen, zoom in or out on the map (except for navigation sound)

Images are for illustrative purposes only and may not reflect actual feature or operation.

[Continued on next page](#)



Kia Connect* Infotainment System - (Non-Navigation & Navigation^{†9})* - FM/AM/ SiriusXM^{®†17}/Media (USB, *Bluetooth*^{®†3} Audio)

[Continued from previous page](#)

The **Warning Volume**  can be adjusted in the Vehicle Settings by pressing **SETUP**, VEHICLE, DRIVER ASSISTANCE, WARNING METHOD, WARNING VOLUME.

Sound Settings: To adjust the sound settings from any audio mode, press the **SETUP** button on the infotainment system, then select the onscreen SOUND button. Select the menu item to change settings, and use the onscreen buttons to adjust settings.

Radio Presets: To save a preset, press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

SiriusXM^{®†17} Smart Favorites: In Radio mode, choose SiriusXM^{®†17}, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key : To program the Custom Key, press and hold to select an available feature you would like the Custom Key to open.

Map/software updates: To keep your map and software up to date, Kia provides over-the-air updates. You can also visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. **Note:** Visiting a dealer for software update may include an additional charge.

[Continued on next page](#)



[Navigation
System
Important Tips](#)



[Infotainment
System Driver
Profiles](#)



[Benefits of Over
The Air \(OTA\)
Updates](#)



[Kia Connect
with Navigation](#)

Kia Connect* Infotainment System - (Non-Navigation & Navigation^{†9})* - FM/AM/ SiriusXM^{®†17}/Media (USB, *Bluetooth*^{®†3} Audio)

[Continued from previous page](#)

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay® (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt Kia Connect^{†1} Command Feedback by pressing the VOICE RECOGNITION* button on the steering wheel

REMINDERS:

- To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park
- Prolonged use of the infotainment system in ACC mode may drain the vehicle's battery

For further Kia Connect with Navigation operations, refer to the Car Infotainment System Quick Reference Guide. Your vehicle's audio system may differ from that in the illustration.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



 
Multimedia USB Port & Power Outlets

A Multimedia USB Port: Use the Multimedia USB Port to connect USB audio and smartphone devices



[Multimedia USB Port, Power Outlets & USB Charger Port](#)

B Power Outlet: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

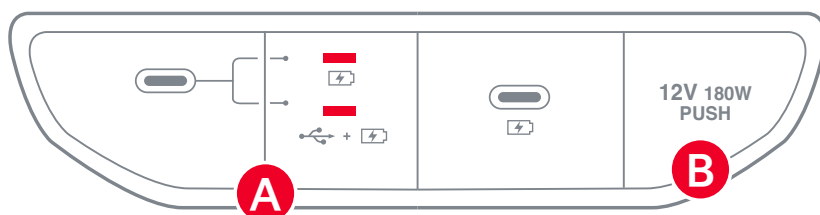


QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

REMINDERS:

 - Using the power outlet (accessory plug) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged periods of time with the Engine Start/Stop button in the IGN Position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB-C cables made by your device's manufacturer. Third-party USB-C cables may cause damage to your device
- The USB data port (Multimedia USB-C port) is located near the Power Outlets. The USB Charger ports do not support data transfer
- The Multimedia USB-C Port in the center panel charges slower than the USB-C Charger Ports throughout the vehicle

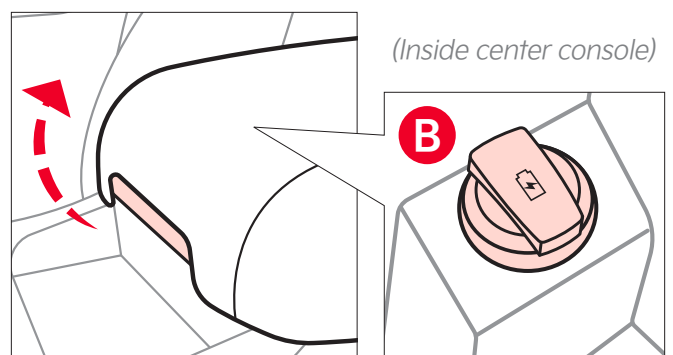

Digital Clock (Infotainment System)

Press the **SETUP** key, then select General. Press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup. To access the manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect with Navigation*).

REMINDER: When needed, Daylight Savings must be enabled in the Clock Settings screen.

Refer to section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Wireless Smartphone Charging System

Charge a compatible Qi™ certified smartphone wirelessly by placing it on the charging pad/slot **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



[Wireless Smartphone Charging](#)

1. Enable Wireless Charging in Vehicle Settings in the infotainment system, select CONVENIENCE, then WIRELESS CHARGING SYSTEM FOR MOBILE DEVICES
2. Place the compatible smartphone on the center of the charging pad
3. Indicator light **B** may change to amber once the wireless charging begins
4. Once charging is complete, the amber light may change to green

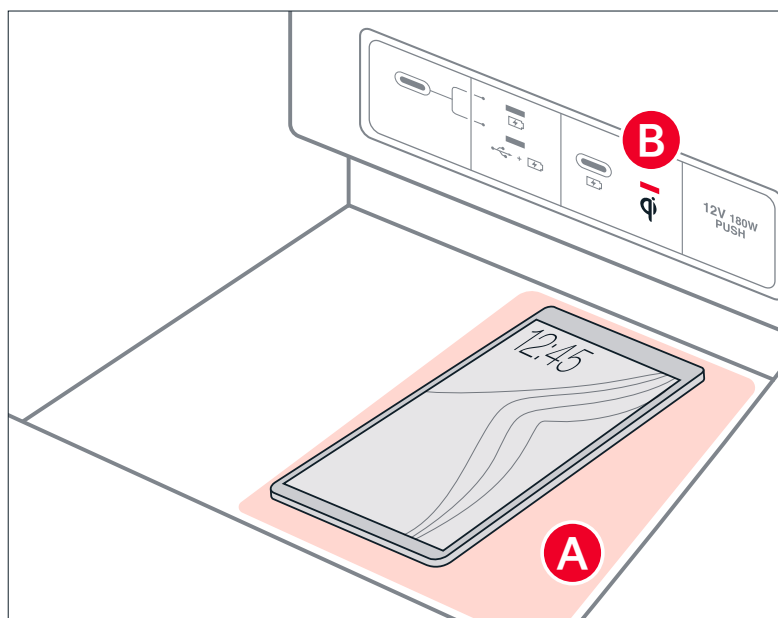

Requires Qi™-enabled device or Qi™-enabled case.

[Continued on next page](#)

Refer to section 7 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Wireless Smartphone Charging System

[Continued from previous page](#)



[Wireless
Smartphone
Charging](#)

QUICK TIPS

- For the wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- Removing the phone case may improve charging efficiency and ensure a secure connection

 
REMINDERS:

- The smartphone must be a compatible Qi™ certified phone with Qi™ function available. Some smartphone models are not Qi™ certified, which may affect the availability, speed or performance of wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging; however, device compatibility varies
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

Refer to section 7 in the Owner's Manual for more information.



Automatic Climate Control

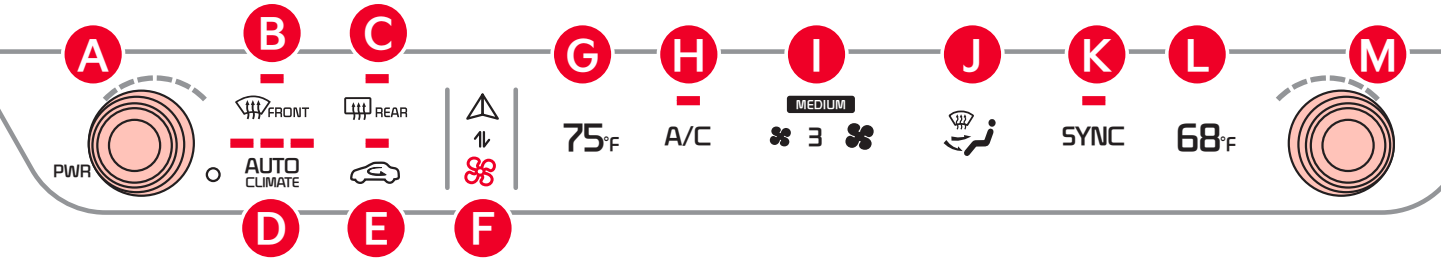

- A** Driver's temperature control knob

B Front windshield defroster button

C Rear window defroster button

D Auto Climate indicator

E Circulation control button

F Infotainment/Climate Control

G Driver's temperature setting

H A/C on/off button

I Fan speed control buttons
- 

[Climate Control - Switchable Controller](#)
- J** Mode selection button

K A/C Sync button

L Passenger temperature setting

M Passenger temperature control knob

Air Flow Modes - To select Air Flow Modes, press the mode buttons **J** to choose the desired mode:

-  Face-Level
-  Floor-Level
-  Bi-Level
-  Floor/Defrost-Level

REMINDERS:

- A/C button indicator **H** will not illuminate if the desired adjusted temperature is greater than that of the ambient temperature.
- Recirculation modes **E**: Vehicle will automatically switch to recirculation mode when Max A/C is turned on

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 7 in the Owner's Manual for more information.

*IF EQUIPPED



Automatic Climate Control

[Continued from previous page](#)

Climate Control Auto Function:

 
- Press AUTO CLIMATE **A** to select Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
- Press **B** to set desired fan speed
- Rotate the knob **C** to set desired temperature



[Climate Control - Switchable Controller](#)

Defrost/Defog Outside and/or Inside Windshield:

- Set Front Fan Speed **B** to the highest position
- Set Temperature **C** to Hot
- Press the Front Defrost button  **D**

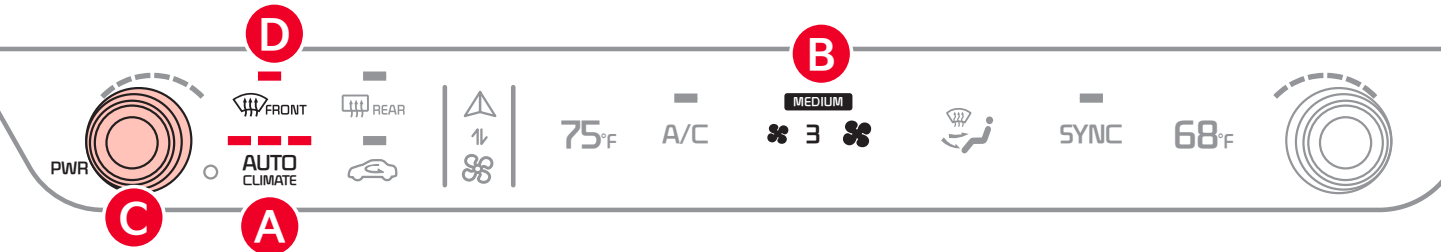

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

[Continued on next page](#)

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 7 in the Owner's Manual for more information.

*IF EQUIPPED

Automatic Climate Control

[*Continued from previous page*](#)

Auto Defogging System (ADS): Auto Defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode in certain conditions.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  for three seconds when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through the vents if the Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle, which may fog the glass and obscure visibility and/or cause smell/odor

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 7 in the Owner's Manual for more information.



Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.



 
[Electric Parking Brake \(EPB\) / Auto Hold](#)

Applying the Parking Brake:

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **ⓘP BRAKE** is illuminated on the instrument cluster.

Releasing the Parking Brake: The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of **P** (Park) to **R** (Reverse) or shifted out of **N** (Neutral) to **R** (Reverse) or **D** (Drive).

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

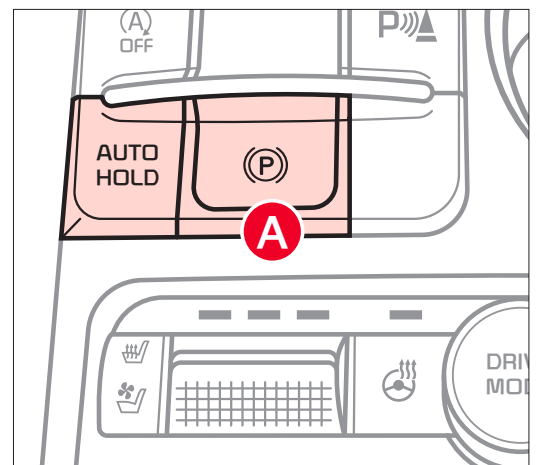

(Located below gear shift)

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- Pull up and hold the EPB switch for 3 seconds to increase brake pressure if parked on a decline or incline
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to section 8 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal.

Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle in Park and at a standstill, when the AUTO HOLD button **A** is pressed on, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn Off when the AUTO HOLD button **A** is manually pressed Off or when the EPB is manually turned On.

 
Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes



[Electric Parking Brake \(EPB\) / Auto Hold](#)

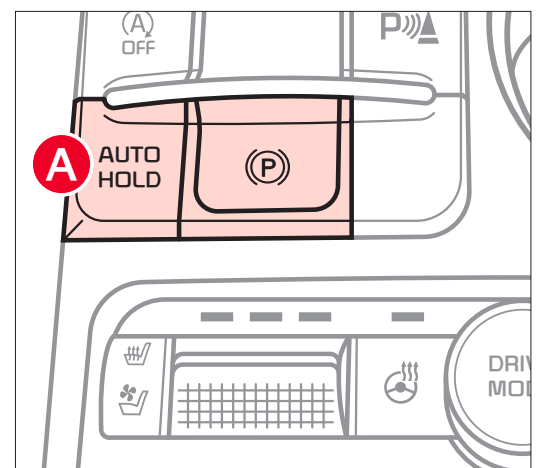

(Located below gear shift)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 8 in the Owner's Manual for more information.



Automatic Gear Shift with Sportmatic®†3

Shifting (Manual Mode)

 
- P:** Park
- R:** Reverse **[+]:** Manual Mode Upshift
- N:** Neutral **[-]:** Manual Mode Downshift
- D:** Drive



[Automatic Transmission Sportmatic Shifting with Paddle Shifters](#)

Manual Mode: To enter Manual mode, move shift lever from **D** (Drive) to the left gate **A**.

To shift while in Manual mode, move the shift lever up **[+]** to upshift or down **[-]** to downshift.

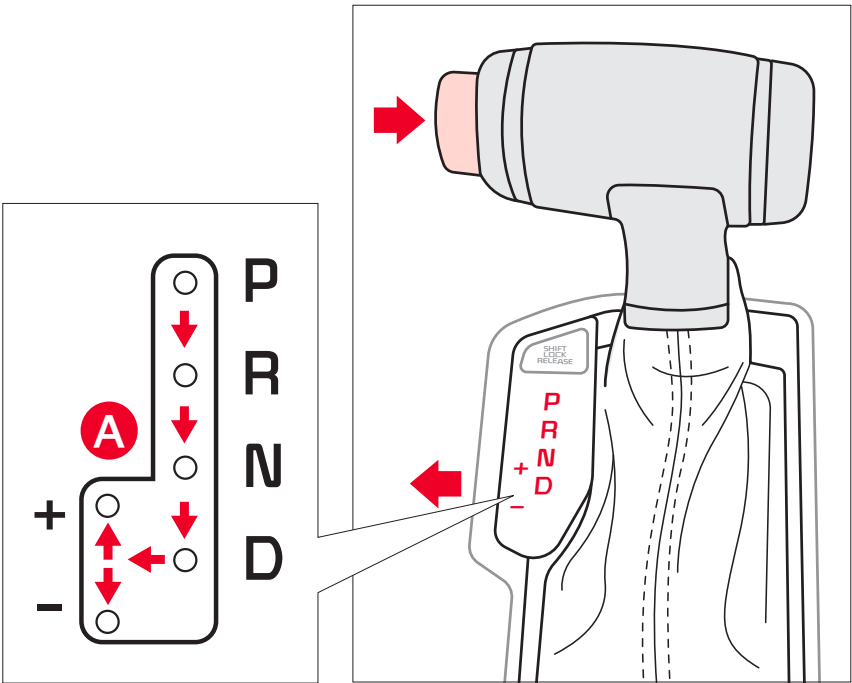

QUICK TIPS

- Press brake pedal and depress release lock button to move gearshift from **N** to **P**, **N** to **R** or from **P** to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 8 in the Owner's Manual for more information.

†LEGAL DISCLAIMERS ON [PAGE 111](#) | *IF EQUIPPED



 
Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the left gate of the D position (Manual mode).



[Automatic Transmission Sportmatic Shifting with Paddle Shifters](#)

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

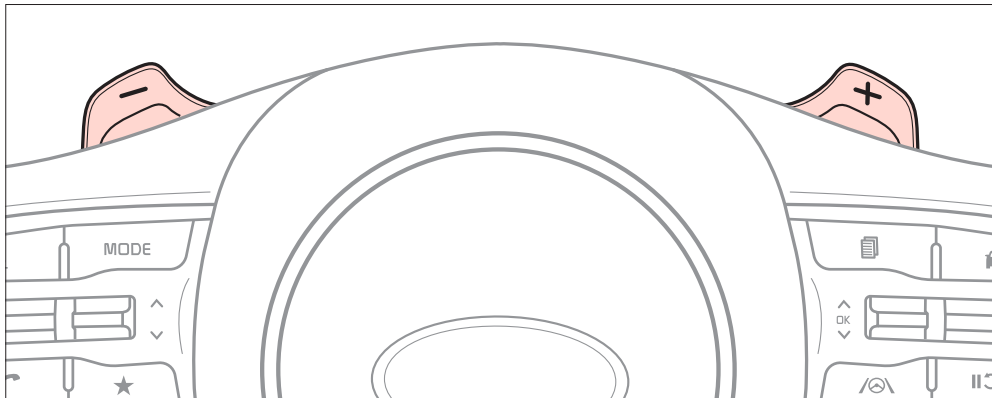

(Paddles on top rear sides of steering wheel)

REMINDER: When in Manual mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 8 in the Owner's Manual for more information.



Dual Clutch Transmission (DCT)*

Some Kia vehicles are equipped with Dual Clutch Transmission (DCT) for automatic transmissions. The following are unique driving tips for the Dual Clutch Transmission:



[Dual Clutch Transmission \(DCT\)](#)

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

If the clutch is overheating, an amber warning light*  will be displayed in the instrument cluster. **Should this condition occur, pull over and place the vehicle in Park and idle the engine.**

Refer to section 8 in the Owner's Manual for additional information on DCT operation or call Kia Consumer Affairs for additional information.

 


Seat Warmers^{*†16}

Toggle button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.




[Seat Warmers/
Ventilated Seats](#)

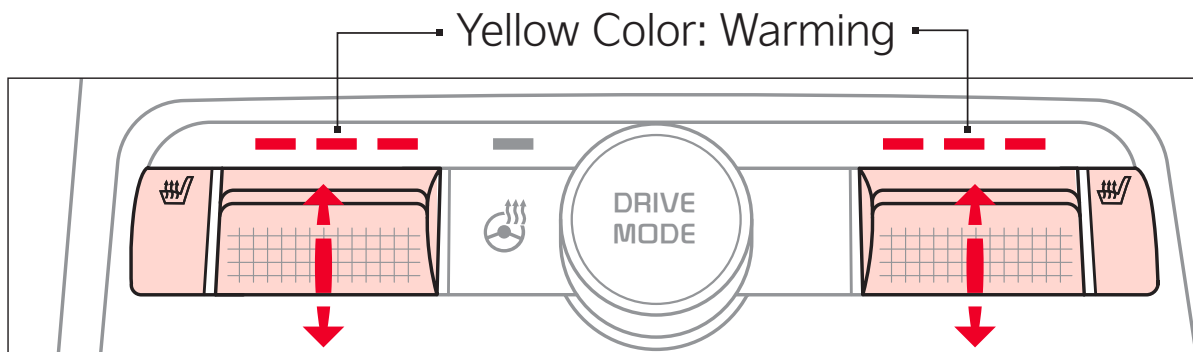

Ventilated Seats^{*}

 Ventilated Seats - Press bottom of button once for high setting (3 LEDs lit), again for medium setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

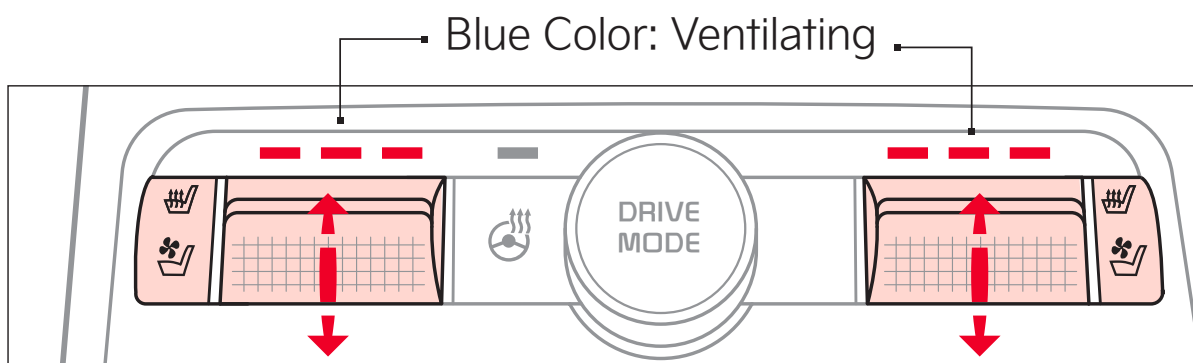

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default. To turn system ON again, press the Heated Steering Wheel button
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

REMINDER: Use extreme caution when using the seat warmers to avoid burns.

*Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 7 in the Owner's Manual for more information.*

 


Driver Position Memory System^{*†14}

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store a seating position into memory, first place the shifter into **P** (Park) while the ignition is ON. Then:

1. Adjust the driver's seat and outside mirrors
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 4 seconds. The system will beep twice when memory has been stored
4. "Setting (1 or 2) saved" will appear on the Instrument Cluster LCD screen

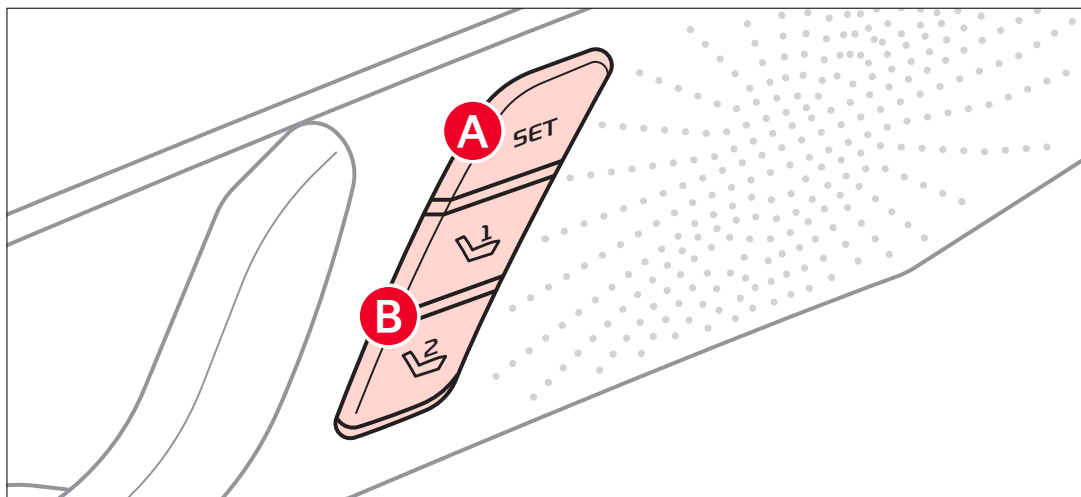

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.

 
 


Power Adjustable Front Seats^{*†14}

Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar forward/backward.



[Power Adjustable Driver's Seat with Memory Settings](#)

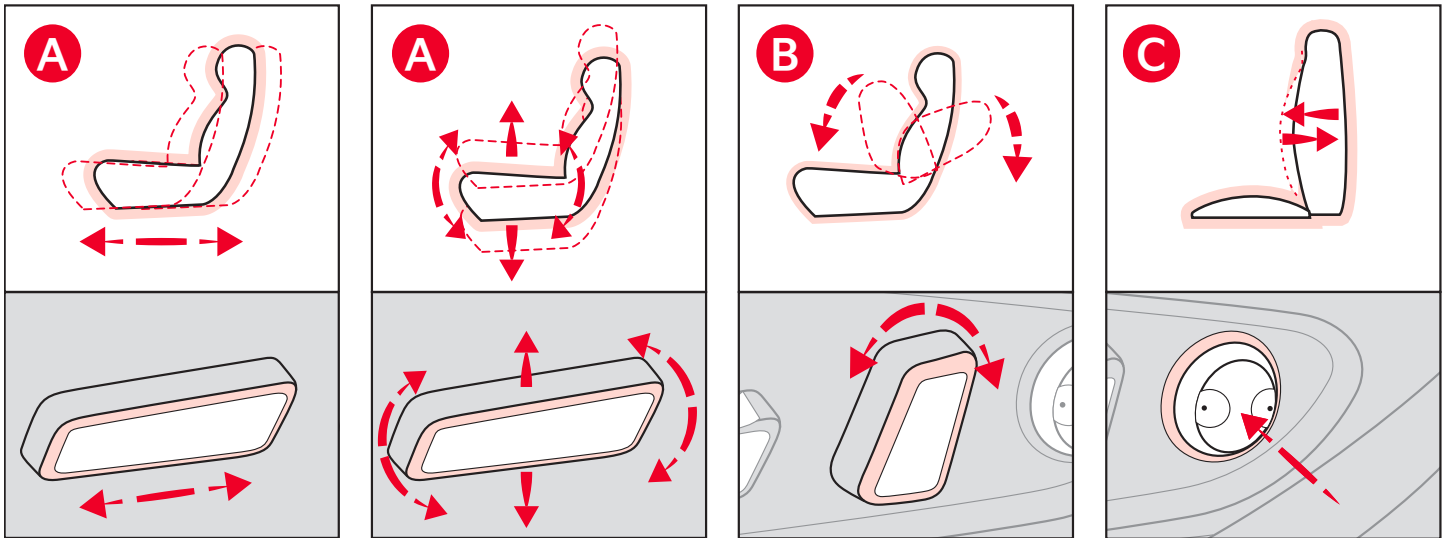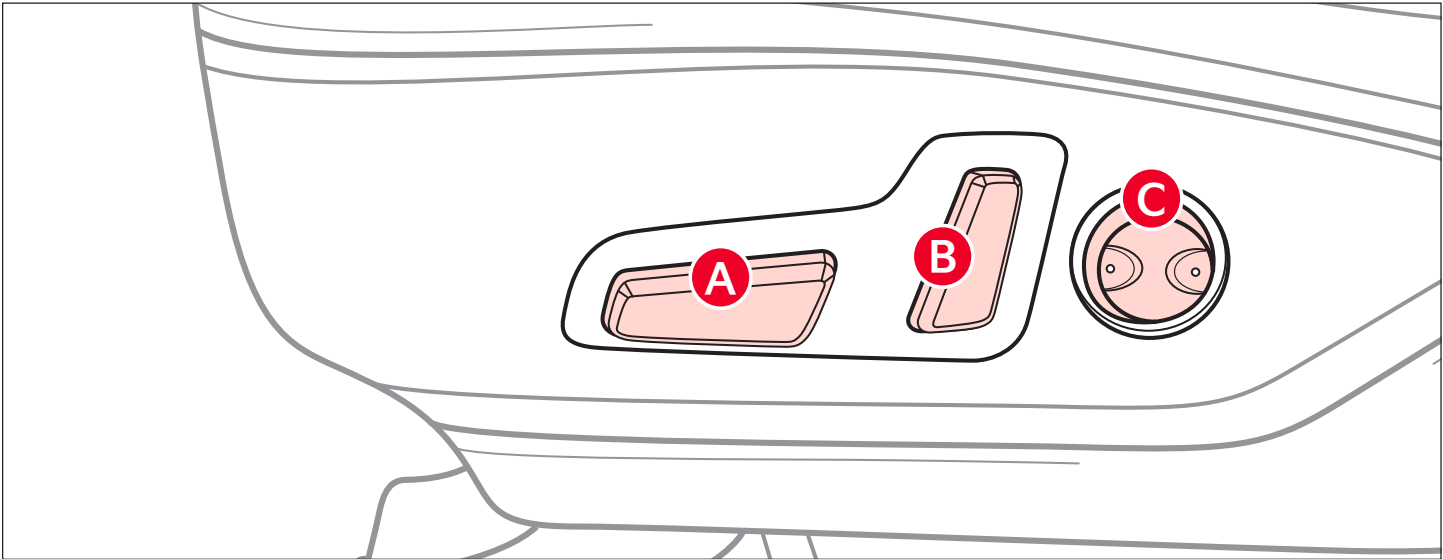

Seat

Seat Cushion

Seatback

Lumbar

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 6 in the Owner's Manual for more information.

[†]LEGAL DISCLAIMERS ON [PAGE 111](#) | ^{*}IF EQUIPPED



6-Way Manual Adjustable Driver's Seat^{*†14}

Pull lever **A** to slide Seat forward/backward.

 
Pull lever **B** up several times to raise Seat Height.

Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust Seatback recline.



[Manual Adjustable Driver's Seat](#)

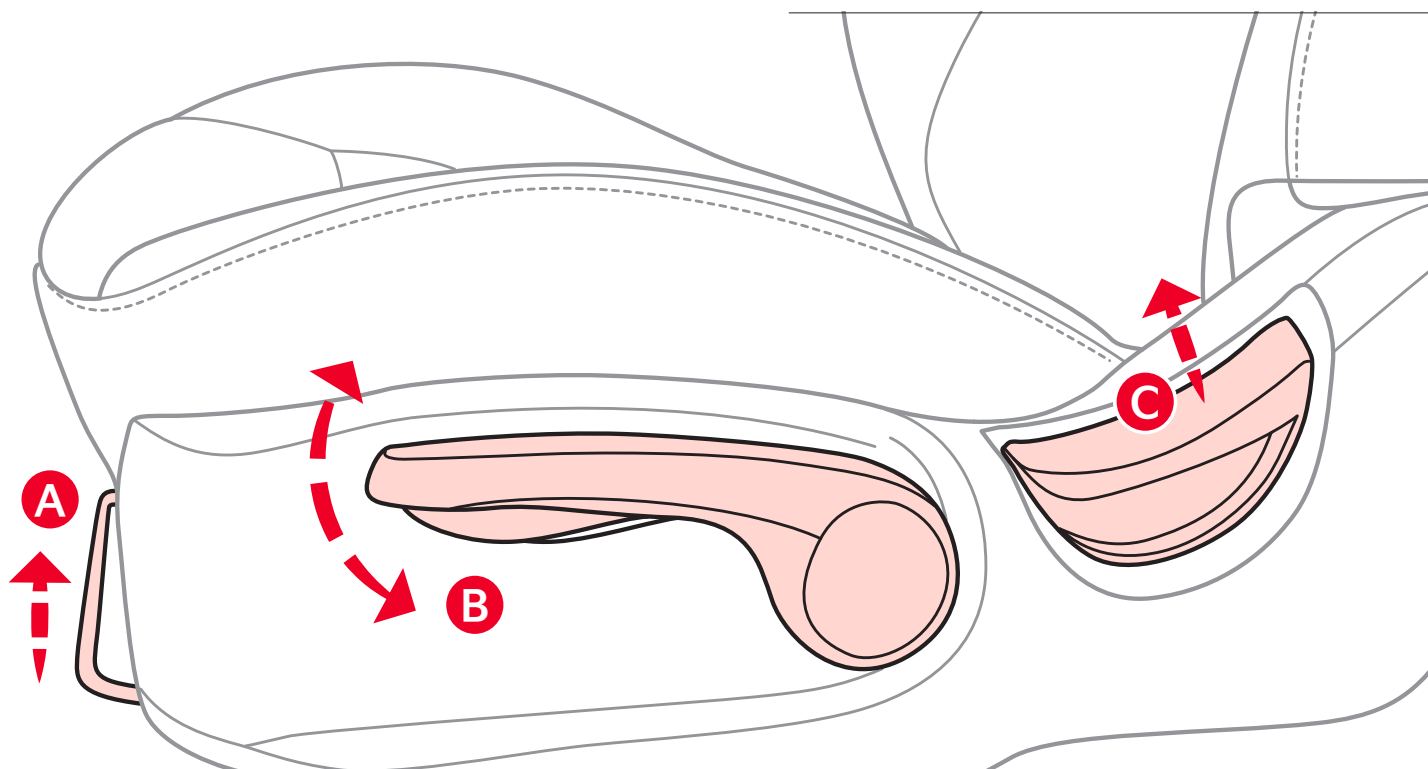

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 6 in the Owner's Manual for more information.



Rear Occupant Alert (ROA) with Door Monitoring^{†11}

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when ROA detects that a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats” **A** and a chime will sound.



[Rear Occupant Alert \(ROA\) with Door Monitoring](#)

The factory default is set to ON. To turn the system ON or OFF, go to the Vehicle Settings on the Infotainment System, select Convenience, then Rear Occupant Alert and adjust the slider.

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

Check rear seats



OK : Alarm Off

ROA is not a substitute for one's attention. Always check the vehicle's interior before exiting. Refer to section 4 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.

 
Front Seat Headrest Adjustment^{†8}

To raise headrest: Pull headrest up to the desired position.

To lower headrest: Press lock **B**, then press the headrest down.

REMINDERS:

- Button may be hard to see if headrest is in its lowest position
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

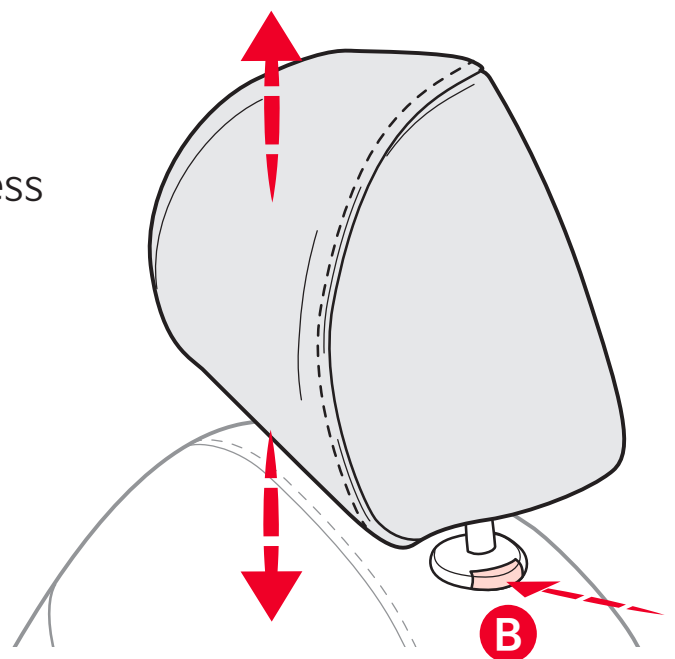

Refer to section 6 in the Owner's Manual for more information.



 
Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button is OFF.

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds
- Press button **D** to turn the Room Lamp ON/OFF

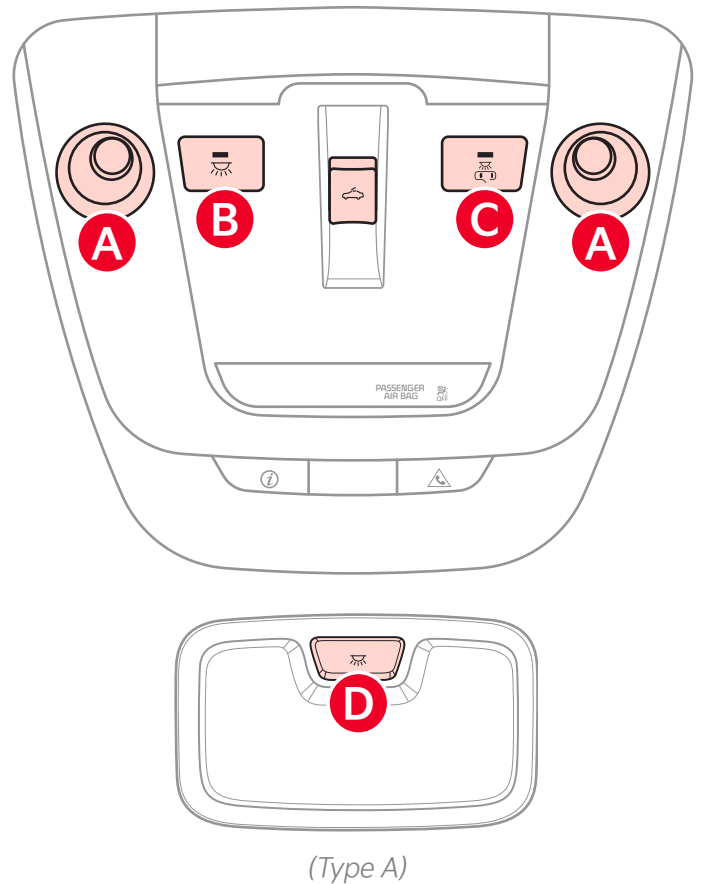

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Refer to section 7 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Panoramic Sunroof with Power Sunshade*

The Sunroof and Sunshade operation is controlled through a multi-directional switch/lever. The ignition or Engine Start/Stop button needs to be in the ON position to operate the Sunroof.



[Sunroof Operation](#)

To slide the Sunshade and Sunroof:

- Auto Open: Slide the lever **A** backward to the farthest position and release
- Auto Close: Slide the lever **A** forward to the farthest position and release

To slide the Sunshade only (with Sunroof closed):

 
- Open: Slide the lever **A** partially backward to the first detent position and release
- Auto Close: Slide the lever **A** partially forward to the first detent position and release

To slide the Sunroof (with Sunshade open):

- Open: Slide the lever **A** backward to the second detent position and release
- Close: Slide the lever **A** forward to the second detent position and release

To tilt the Sunroof:

- Tilt open: Push lever **A** upward. When the Sunshade is closed, it will slide to half open position
- Close: Push lever **A** upward again or slide the lever forward to the first detent position and release

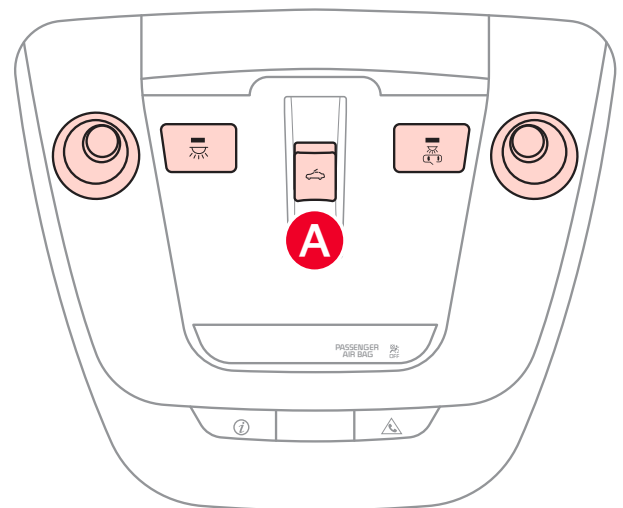

(Type A)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.



Panoramic Sunroof with Power Sunshade*

[Continued from previous page](#)

REMINDERS:

- Sunshade needs to remain OPEN while Sunroof is open
- When closing, be mindful of any objects or persons in close proximity
- Do not adjust the Sunroof or Sunshade while driving. This could result in loss of control of the vehicle



[Sunroof
Operation](#)

QUICK TIPS

- To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction
- While driving with the rear windows down or with the Sunroof in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately one inch
 - If the noise occurs with the Sunroof open, slightly reduce the size of the Sunroof opening

Refer to section 4 in the Owner's Manual for more information.



 
Smart Key with Remote Start^{†7}

- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold to open Trunk automatically
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** **Manual Key:** Use to lock/unlock Driver's Door by turning once or all doors by turning twice. Use to enable/disable Child Safety Locks and to unlatch rear center seatbelt lower anchor



[Smart Key & Manual Key](#)

- F** **Remote Start:** First, lock the doors by pressing the door lock button **A** within 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **F** for more than two (2) seconds to start the vehicle. Press **F** again to turn off. If driver does not enter vehicle within three minutes of starting the vehicle, the engine will automatically turn off

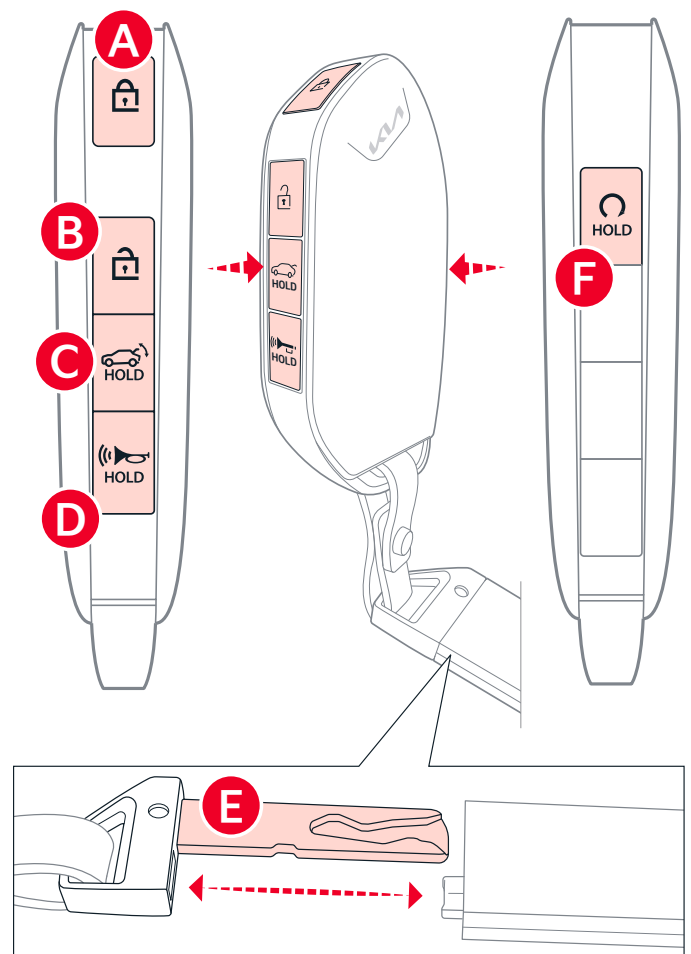

[Continued on next page](#)

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.

 
 


Smart Key with Remote Start^{†7}

[Continued from previous page](#)

Manual Key: Use to unlock/lock Driver's Door:

1. Pull out door handle
2. Press the lever located inside the bottom part of the cover with a key or flat-head screwdriver **A**
3. Pull off the cover while pressing the lever
4. Turn the key toward the rear of the vehicle to unlock the door and toward the front of the vehicle to lock the door **B**
5. Return keyhole cover to its original position

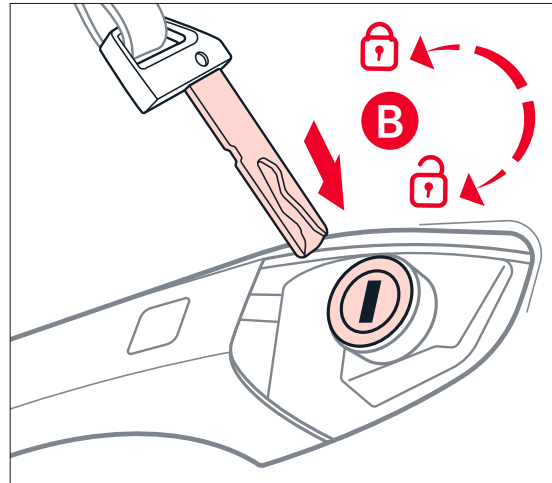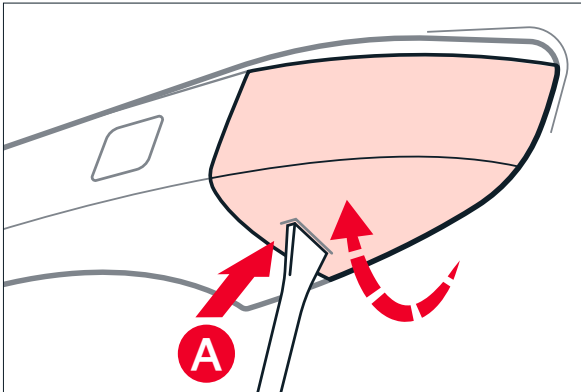

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine. If needed, contact your local Kia dealership for repair
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDER: When reinserting the manual key, ensure it is pushed all the way in until you hear a click.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.



Digital Key 2^{*†3}

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
3. Open the Kia Access App and select **DIGITAL KEYS** **A**
4. Press **CREATE OWNER KEY**
5. When your vehicle's infotainment system detects your device, the **CONTINUE TO WALLET APP** button will illuminate. Select it to open the wallet app
6. Press **CONTINUE** and the wallet app will pair and add your digital key

REMINDER: Actual steps may vary between devices.

 
[*Continued on next page*](#)



[Digital Key 2 Operation](#)



[Digital Key 2 Setup, Registration & Sharing](#)

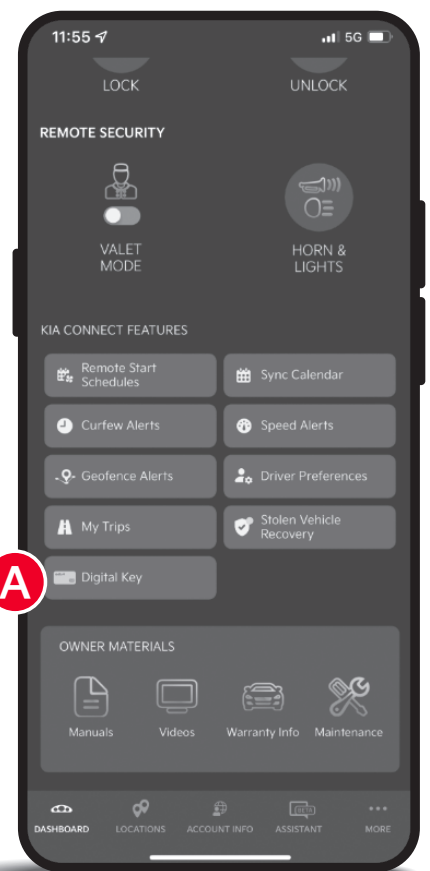

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

 


Digital Key 2^{*†3}

[Continued from previous page](#)

Digital Key 2 Setup for smartphones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access App** and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone on the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's Infotainment System detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

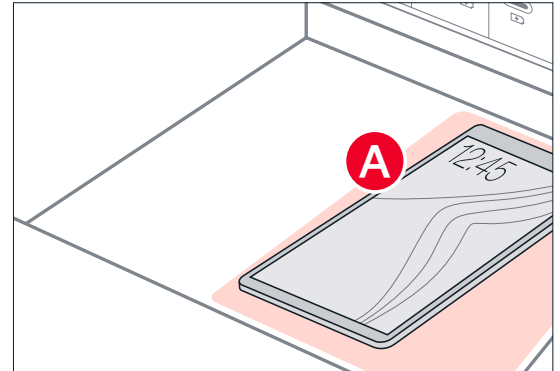

QUICK TIP

When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features.

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

[Continued on next page](#)



Digital Key 2^{*†3}

[Continued from previous page](#)

Using your Digital Key 2 (smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

Revoking shared Digital Key access: You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings. Select the contact and click on REVOKE ACCESS.

To delete shared keys and the owner key: Go to the Vehicle Settings on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY, SMARTPHONE KEY.

REMINDER: Actual steps may vary between devices.

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

[Continued on next page](#)



Digital Key 2^{*†3}

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smartphone digital key does not operate, move the smartphone around the door handle slowly until it vibrates

REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & Apple Watch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smartphone is removed from the in-vehicle authentication pad
 - Changing the Infotainment System screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung™ smartphones
- Currently compatible devices:
 - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
 - iPhone XS® or later
 - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
 - Apple Watch Series 5® or later
 - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
 - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
 - Galaxy S20™ or later
 - Galaxy Note20 5G™ or later
 - Galaxy Z Flip 5G™ or later
 - Galaxy Fold 2™ or later
 - For **Google™ smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMINDERS:

 
- Vehicle must be unlocked first before attempting to open fuel lid
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released



[Kia Fuel Cap Video](#)




[Fuel Filler Lid Release](#)

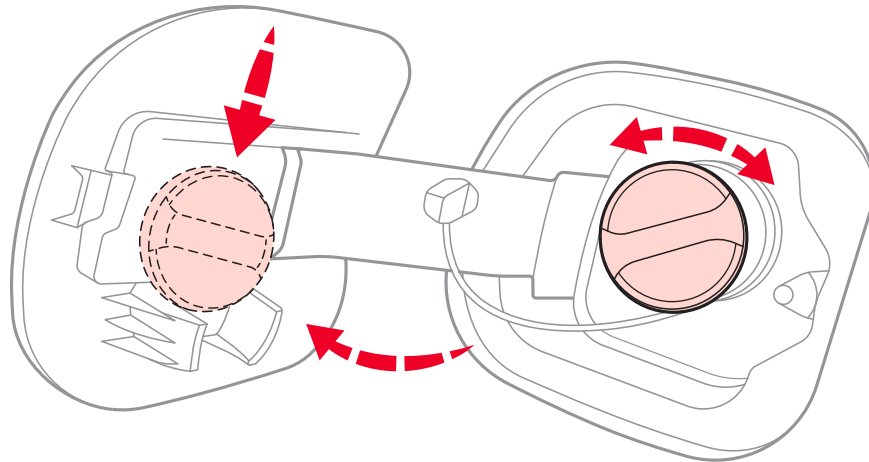

Fuel Filler Door Release

 To open the Fuel Filler Door, turn off the engine and ensure driver's door is unlocked. Press on the right center edge **A** of the Fuel Filler Door.

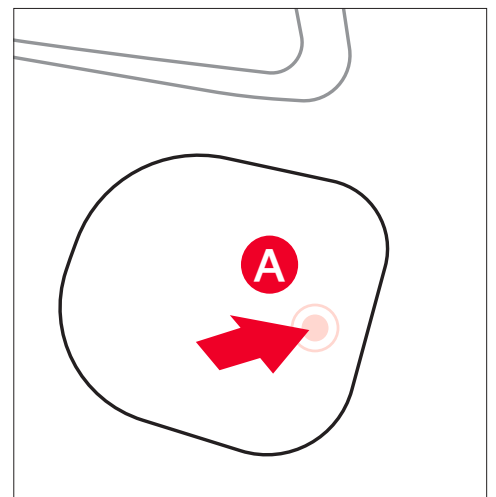

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.

 
 


Trunk Release Button

Press the button **A** to unlock the Trunk (located to the left of the steering wheel).



[Settings - Power Liftgate](#)

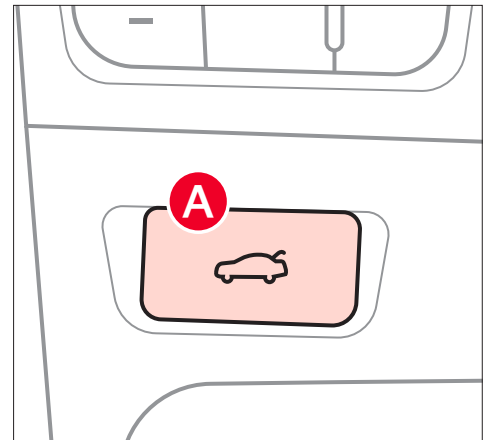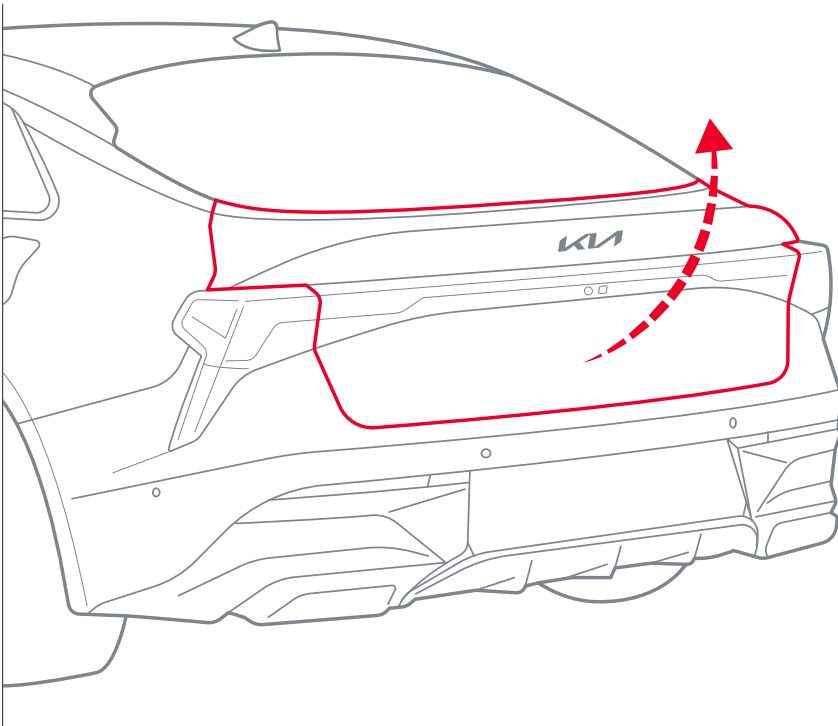

REMINDER: When closing, be mindful of any objects or persons in close proximity.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.



Smart Trunk with Auto Open^{†12}

 
When the Smart Key fob is detected in close proximity to the rear of the vehicle, the system initiates a pre-opening alert for the Smart Trunk. During this alert, the hazard warning lights will flash and a chime will sound three times over approximately 3 seconds to indicate that the Smart Trunk is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Trunk.

To enable the Smart Trunk, go to the Vehicle Settings in the Infotainment System. Press SETUP key/button, VEHICLE, DOOR, then SMART LIFTGATE.



[Settings - Power Liftgate](#)

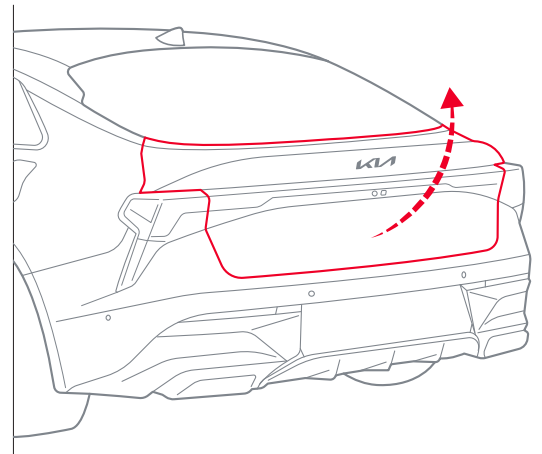

QUICK TIP

During the Smart Trunk alert, the Smart Power Trunk can be deactivated with the Smart Key by pressing any button on the key fob.

REMINDERS:

- When closing, be mindful of any objects or persons in close proximity
- The Smart Key must be outside of the vehicle for the Smart Power Trunk to operate
- All doors are closed and locked after about 15 seconds
- The Smart Trunk feature will not operate when the doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles, a door is not locked or closed, or the Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Trunk function
- When the ignition is on, the Smart Trunk will only operate with the gear shift in the **P** (Park) position
- Ensure obstacles and people are out of the way of the Smart Trunk


Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.



Sun Visor^{†19}

 Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

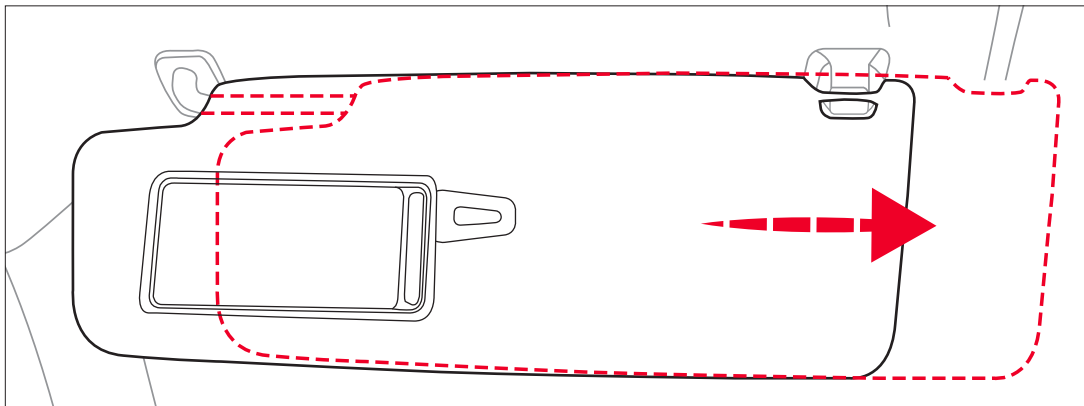

REMINDERS:

- The Sun Visor may impair visibility if not adjusted properly
- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
Refer to section 7 in the Owner's Manual for more information.




Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

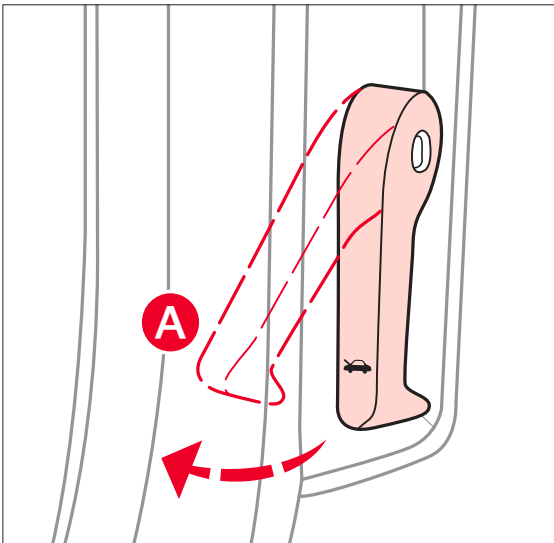

(Located on Driver side kick panel)

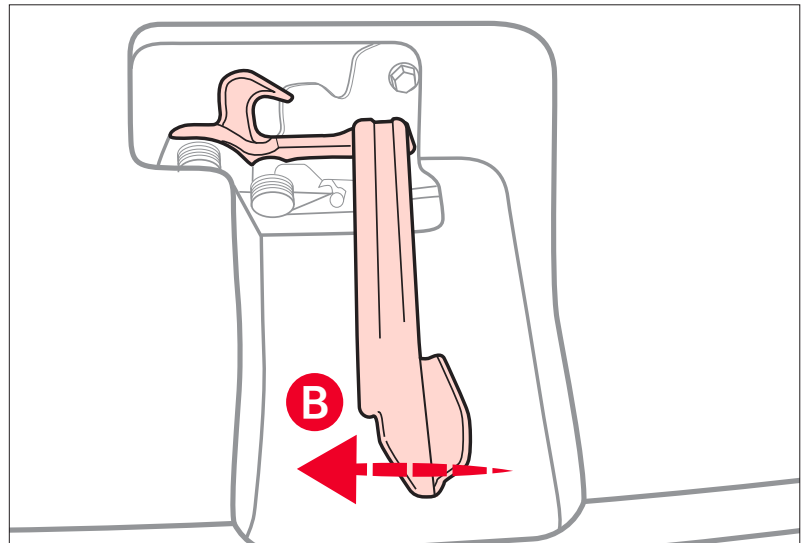 

(Located inside of Hood's center)

Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 


Occupant Detection System (ODS)^{†10} / Passenger Airbag Off Indicator^{†15}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly. Depending on the situation and type of accident, the system may:

- Deploy the airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

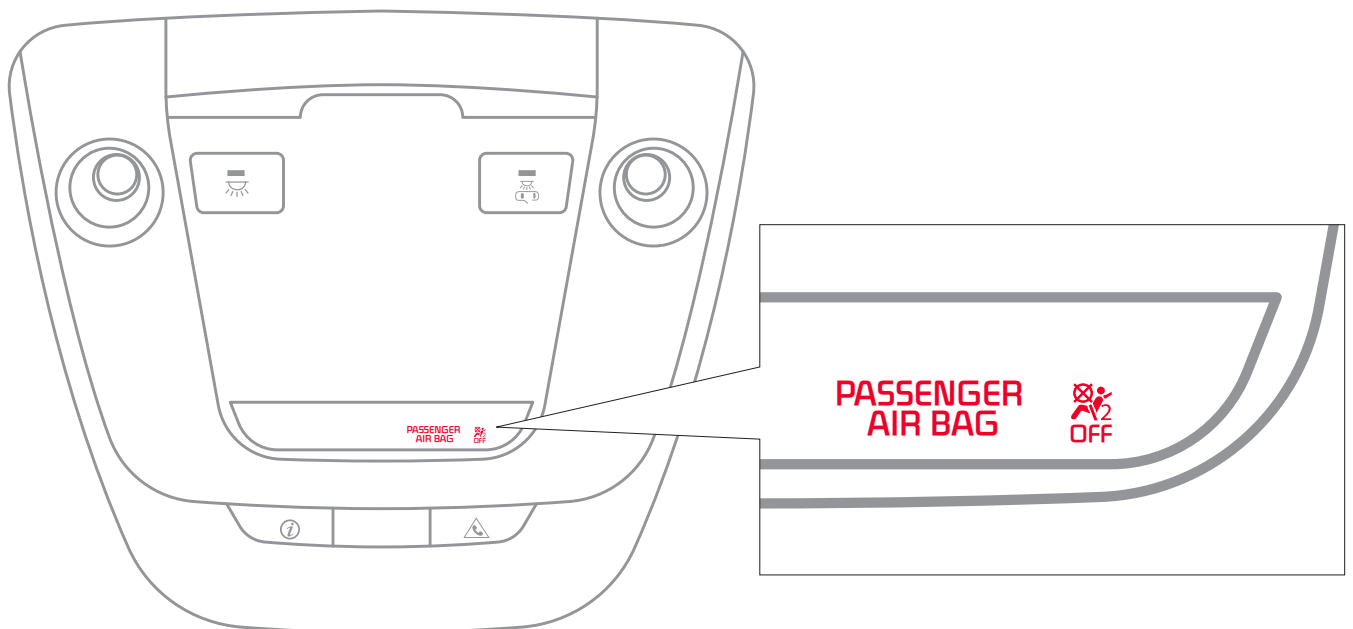

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
Refer to section 6 in the Owner's Manual for more information.



Electronic Child Safety Lock System

Push the electronic child safety lock switch **A** to disable rear passenger doors. The indicator will illuminate. Press again to turn the feature off.

REMINDER: Safe Exit Assist (SEA) operates when the electronic child safety lock system is activated and SEA is selected in the instrument cluster. But SEA does not automatically turn on the electronic child safety lock system.

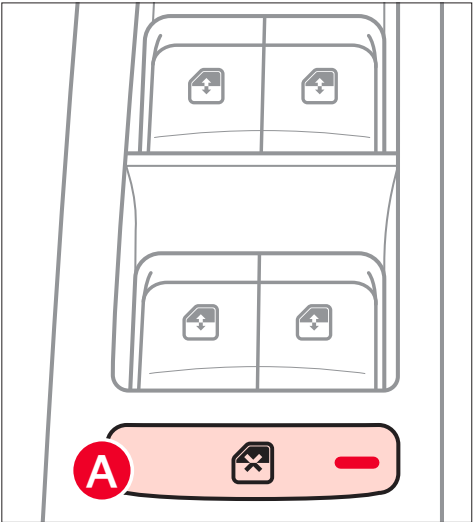

*Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 4 in the Owner’s Manual for more information.*

*IF EQUIPPED



Seat Belts^{†15}

To properly fasten your safety belts:

- 1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
- 2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**



[LATCH Anchors for the Child Restraint System](#)

QUICK TIP

 
 
The seat belt warning chime operates for driver’s seat only.

Seat Belt Retractor Locks^{†15}

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

REMINDER: For maximum protection, always wear your Seat Belt.

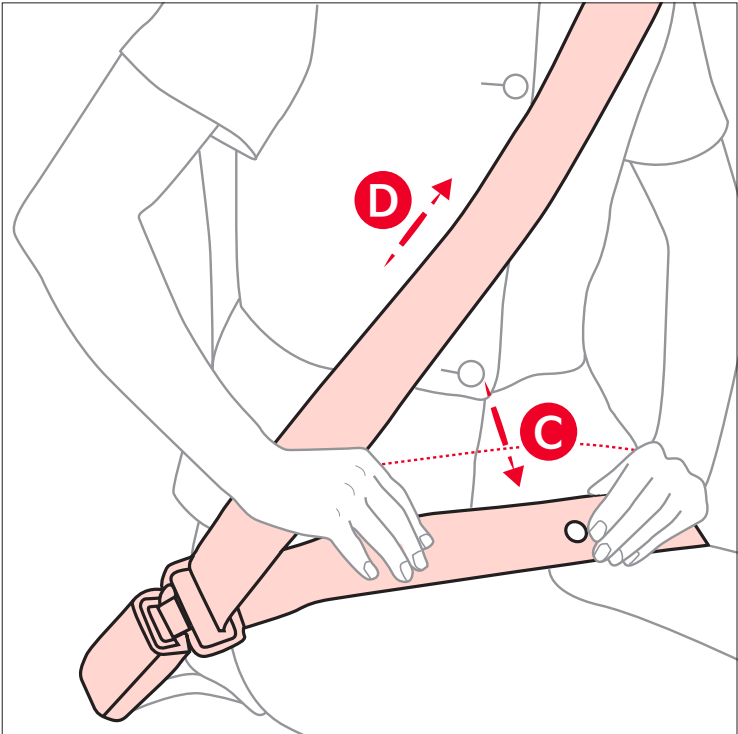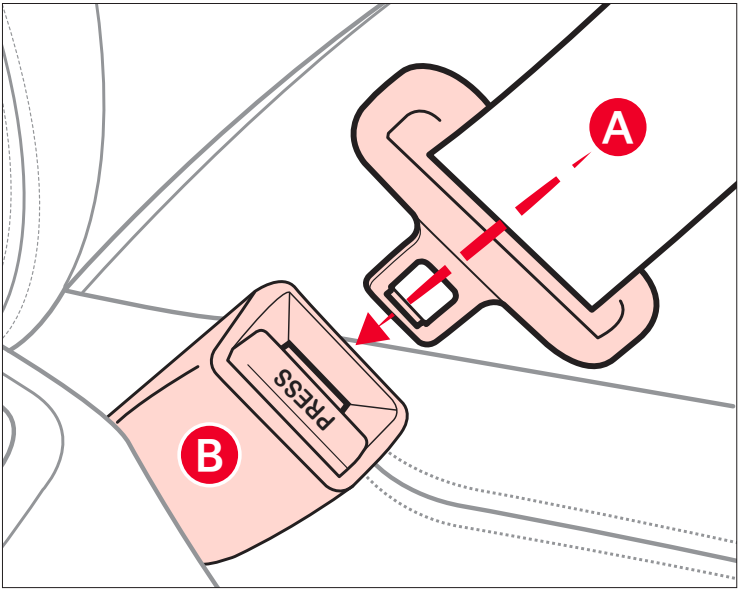

Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 6 in the Owner’s Manual for more information.

[†]LEGAL DISCLAIMERS ON [PAGE 111](#) | *IF EQUIPPED

 K5 MAINTENANCE SCHEDULE	MAINTENANCE INTERVALS (UP TO 80,000 MILES) ^A							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter (Full synthetic oil) ^D	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Air cleaner filter (Engine)	I	I	R	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
12V battery condition	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Intercooler, in/out hose (turbo) / Air intake hose	I		I		I		I	
Driveshaft and boots		I		I		I		I
Propeller shaft AWD		I		I		I		I
Fuel tank air filter/fuel tank and cap ^E		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Drive belts ^F						I	I	I
Dual clutch transmission fluid (turbo)				I				I
Differential oil (Rear) (AWD) ^G					I			
Transfer case oil (AWD) ^G					I			
Spark plugs (Turbo: Every 48,000 miles)						R		

P = Perform
R = Replace
I = Inspect^B



Kia Full

Synthetic

Oil

‡ If equipped

- A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule
- B. And, if necessary, adjust, correct, clean or replace
- C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives
- D. Check the engine oil level and leaks when stopping for fuel or before starting a long trip. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions

- E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- F. The drive belt should be replaced when cracks occur or tension is reduced excessively
- G. Transfer case oil and rear differential oil should be changed anytime they have been submerged in water
- See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.*

©2025 Kia America, Inc. All rights reserved.
 Consumer - Roadside Assistance^{†13}:
 1-800-333-4KIA (4542)

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into your Kia Access^{†2} or your account on <https://owners.kia.com/>

See Kia Connect Activation page for setup information.

†LEGAL DISCLAIMERS ON [PAGE 111](#) | *IF EQUIPPED



DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

- Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 1. Kia Connect:** Purchase/lease of certain 2027 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
 - 2. Kia Access app for smartphone and smartwatch** requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model.
 - 3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
 - 4. Driver Assist Features - Highway Driving Assist (HDA), Safe Exit Assist (SEA), Blind-spot Collision-Avoidance Assist (BCA), Rear Cross-traffic Collision-Avoidance Assist (RCCA), Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Lane Following Assist (LFA), Surround View Monitor (SVM), Blind-spot View Monitor (BVM), Rear View Monitor (RVM), Forward/Reverse Parking Distance Warning (PDW), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Leading Vehicle Departure Alert (LVDA), Parking Collision-Avoidance Assist-Rear (PCA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
 - 5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
 - 6. Electronic Stability Control (ESC)/ Traction Control System (TCS)/ Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
 - 7. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
 - 8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
 - 9. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
 - 10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
 - 11. Rear Occupant Alert with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
 - 12. Smart Trunk with Auto Open:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
 - 13. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
 - 14. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
 - 15. Seat belts/Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
 - 16. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
 - 17. SiriusXM®:** SiriusXM® Satellite Radio, SiriusXM® Traffic and SiriusXM® Travel Link each require a subscription sold separately, or as a package, by SiriusXM® Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM® Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM®. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM® is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM® satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM® Internet Radio service is available throughout our satellite service area and in AK and HI. ©2026 SiriusXM® Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM® Radio Inc.
 - 18. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
 - 19. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
 - 20. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
 - 21. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

*IF EQUIPPED