

# Niro Hybrid

## Features & Functions Guide



# Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



[Getting Started  
With Your  
New Kia](#)

## Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)  
Consumer Affairs - Roadside Assistance†11: 1-800-333-4KIA (800-333-4542)

*Always check the Owner’s Manual for complete operating information and safety warnings.*

†LEGAL DISCLAIMERS ON [PAGE 115](#) | \*IF EQUIPPED



## Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**This document is interactive:** from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

# Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia’s most used features.

[Getting Started  
With Your  
New Kia](#)

[Kia Features  
& Functions  
Online Guide](#)

[Your New Kia  
Important Care  
Tips](#)

[Vehicle  
Cameras  
Important Tips](#)

[Navigation  
System  
Important Tips](#)

[How-To  
Resources:  
Videos &  
Online](#)

|    |                                                                |     |
|----|----------------------------------------------------------------|-----|
| 1  | <a href="#">Smart Key with Remote Start</a>                    | 102 |
| 2  | <a href="#">Front Seat Headrest Adjustment</a>                 | 93  |
| 3  | <a href="#">Power Adjustable Driver’s Seat*</a>                | 95  |
| 4  | <a href="#">Seat Warmers*</a>                                  | 92  |
| 5  | <a href="#">Folding Rear Seats</a>                             | 97  |
| 6  | <a href="#">Windshield Wipers &amp; Washers</a>                | 64  |
| 7  | <a href="#">Navigation-based Smart Cruise Control (NSCC)*</a>  | 40  |
| 8  | <a href="#">Normal Maintenance Schedule</a>                    | 114 |
| 9  | <a href="#">Vehicle Settings - Infotainment System</a>         | 20  |
| 10 | <a href="#">Bluetooth® Wireless Technology</a>                 | 66  |
| 11 | <a href="#">Kia Connect Activation</a>                         | 74  |
| 12 | <a href="#">Kia Connect Assistance*</a>                        | 75  |
| 13 | <a href="#">Kia Connect Infotainment System w/ Navigation*</a> | 78  |
| 14 | <a href="#">Android Auto™ Setup</a>                            | 71  |
| 15 | <a href="#">Apple CarPlay® Setup</a>                           | 73  |

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

\*IF EQUIPPED

# Table Of Contents

|                                                                                |                  |
|--------------------------------------------------------------------------------|------------------|
| <b><u>WELCOME TO THE KIA FAMILY!</u></b>                                       | <b><u>02</u></b> |
| <b><u>VIDEOS &amp; NAVIGATION</u></b>                                          | <b><u>03</u></b> |
| <b><u>GETTING STARTED</u></b>                                                  | <b><u>04</u></b> |
| <b>INSTRUMENT CLUSTER</b>                                                      |                  |
| <u>Instrument Cluster Overview</u>                                             | <u>08</u>        |
| <u>Indicators &amp; Warning Lights</u>                                         | <u>09</u>        |
| <u>Tire Pressure Monitoring System (TPMS)</u>                                  | <u>11</u>        |
| <u>Hybrid Indicators at Startup</u>                                            | <u>13</u>        |
| <u>Drive Mode Integrated Control System*</u>                                   | <u>14</u>        |
| <u>Green Zone Drive Mode*</u>                                                  | <u>15</u>        |
| <u>Fuel Economy / Tips for Economical Driving</u>                              | <u>16</u>        |
| <b>VEHICLE SETTINGS</b>                                                        |                  |
| <u>Trip Modes / Trip Computer</u>                                              | <u>18</u>        |
| <u>Instrument Cluster LCD Modes</u>                                            | <u>19</u>        |
| <u>Vehicle Settings - Infotainment System</u>                                  | <u>20</u>        |
| <u>Service Interval Mode</u>                                                   | <u>21</u>        |
| <b>HYBRID SYSTEM</b>                                                           |                  |
| <u>Emergency Starting*</u>                                                     | <u>23</u>        |
| <u>Regenerative Braking with Paddle Switches*</u>                              | <u>25</u>        |
| <b>ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)</b>                               |                  |
| <u>Forward Collision-Avoidance Assist 2 (FCA2)*</u>                            | <u>27</u>        |
| <u>Lane Keeping Assist (LKA)</u>                                               | <u>31</u>        |
| <u>Blind-spot Collision-Avoidance Assist (BCA)*</u>                            | <u>33</u>        |
| <u>Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)</u> | <u>35</u>        |
| <u>Smart Cruise Control (SCC)*</u>                                             | <u>37</u>        |
| <u>Navigation-based Smart Cruise Control (NSCC)*</u>                           | <u>40</u>        |
| <u>Lane Following Assist 2 (LFA2)</u>                                          | <u>41</u>        |
| <u>Intelligent Speed Limit Assist (ISLA)</u>                                   | <u>43</u>        |
| <u>Highway Driving Assist 2 (HDA2)*</u>                                        | <u>45</u>        |
| <u>Rear View Monitor (RVM)</u>                                                 | <u>47</u>        |
| <u>Safe Exit Assist (SEA)</u>                                                  | <u>48</u>        |
| <u>Forward/Reverse/Side* Parking Distance Warning (PDW)</u>                    | <u>50</u>        |
| <u>Rear Cross-Traffic Collision-Avoidance Assist (RCCA)</u>                    | <u>52</u>        |

*Continued on next page*

# Table Of Contents

*[Continued from previous page](#)*

**DRIVER’S PANEL**

|                                                                    |                    |
|--------------------------------------------------------------------|--------------------|
| <a href="#">Instrument Cluster Control</a>                         | <a href="#">54</a> |
| <a href="#">Electronic Stability Control (ESC)</a>                 | <a href="#">54</a> |
| <a href="#">Hill-start Assist Control (HAC)</a>                    | <a href="#">55</a> |
| <a href="#">Reverse Parking Aid Function*</a>                      | <a href="#">56</a> |
| <a href="#">Start/Stop Button</a>                                  | <a href="#">57</a> |
| <a href="#">Power Windows, Window Lock &amp; Central Door Lock</a> | <a href="#">58</a> |
| <a href="#">Manual Folding Mirrors*</a>                            | <a href="#">58</a> |
| <a href="#">Automatic Door Lock/Unlock</a>                         | <a href="#">59</a> |
| <a href="#">Power/Heated Outside Mirrors</a>                       | <a href="#">59</a> |
| <a href="#">Power Folding Outside Mirrors*</a>                     | <a href="#">59</a> |

**STEERING WHEEL CONTROLS**

|                                                      |                    |
|------------------------------------------------------|--------------------|
| <a href="#">Headlights &amp; High Beams</a>          | <a href="#">60</a> |
| <a href="#">High Beam Assist (HBA)</a>               | <a href="#">61</a> |
| <a href="#">Turn Signals &amp; Fog Lights*</a>       | <a href="#">62</a> |
| <a href="#">Heated Steering Wheel Button*</a>        | <a href="#">63</a> |
| <a href="#">Windshield/Rear Wipers &amp; Washers</a> | <a href="#">64</a> |
| <a href="#">Tilt/Telescoping Steering Wheel</a>      | <a href="#">65</a> |

**INFOTAINMENT SYSTEM**

|                                                                |                    |
|----------------------------------------------------------------|--------------------|
| <a href="#">Bluetooth® Wireless Technology</a>                 | <a href="#">66</a> |
| <a href="#">Steering Wheel Audio Controls</a>                  | <a href="#">69</a> |
| <a href="#">Android Auto™ Setup</a>                            | <a href="#">71</a> |
| <a href="#">Apple CarPlay® Setup</a>                           | <a href="#">73</a> |
| <a href="#">Kia Connect Activation</a>                         | <a href="#">74</a> |
| <a href="#">Kia Connect Assistance*</a>                        | <a href="#">75</a> |
| <a href="#">Kia Access App Download</a>                        | <a href="#">76</a> |
| <a href="#">Kia Access App Features Guide</a>                  | <a href="#">77</a> |
| <a href="#">Kia Connect Infotainment System w/ Navigation*</a> | <a href="#">78</a> |

**CENTER PANEL**

|                                                      |                    |
|------------------------------------------------------|--------------------|
| <a href="#">USB-C Ports &amp; Power Outlets*</a>     | <a href="#">81</a> |
| <a href="#">AC Inverter*</a>                         | <a href="#">82</a> |
| <a href="#">Wireless Smartphone Charging System*</a> | <a href="#">83</a> |
| <a href="#">Automatic Climate Control</a>            | <a href="#">85</a> |
| <a href="#">Rotary Dial Shifter</a>                  | <a href="#">88</a> |
| <a href="#">Paddle Shifters*</a>                     | <a href="#">89</a> |
| <a href="#">Auto Hold</a>                            | <a href="#">90</a> |
| <a href="#">Electronic Parking Brake (EPB)</a>       | <a href="#">91</a> |
| <a href="#">Seat Warmers* / Ventilated Seats*</a>    | <a href="#">92</a> |

*[Continued on next page](#)*

\*IF EQUIPPED

# Table Of Contents

[Continued from previous page](#)

**SEATING**

[Driver Position Memory System\\*](#) . . . . . 93

[Front Seat Headrest Adjustment](#) . . . . . 93

[Rear Occupant Alert \(ROA\) with Door Monitoring](#) . . . . . 94

[Power Adjustable Driver’s Seat\\*](#) . . . . . 95

[6-Way Manual Adjustable Driver’s Seat\\*](#) . . . . . 96

[Folding Rear Seats](#) . . . . . 97

**OTHER KEY FEATURES**

[Digital Key 2\\*](#) . . . . . 98

[Smart Key with Remote Start\\*](#) . . . . . 102

[Map/Room Lamps](#) . . . . . 104

[Sunroof Operation\\*](#) . . . . . 105

[Hood Release Lever and Latch](#) . . . . . 106

[Sun Visor](#) . . . . . 106

[Fuel Cap / Malfunction Indicator \(Check Engine Light\)](#) . . . . . 107

[Fuel Filler Door](#) . . . . . 107

[Power Liftgate\\*](#) . . . . . 108

[Manual Liftgate\\* / Liftgate Release Button\\*](#) . . . . . 110

[Child-Protector Rear Door Locks \(Manual\)](#) . . . . . 111

[Tire Mobility Kit](#) . . . . . 111

**SAFETY FEATURES**

[Occupant Detection System \(ODS\) / Passenger Airbag Off Indicator](#) . . . . . 112

[Seat Belts](#) . . . . . 113

[MAINTENANCE Chart](#) . . . . . 114

[LEGAL DISCLAIMERS](#) . . . . . 115

\*IF EQUIPPED



Instrument Cluster Overview

 
- A Tachometer/Power gauge
- B Speedometer
- C Hybrid battery SOC gauge
- D Odometer
- E Distance to empty
- F Transmission shift indicator
- G Outside temperature gauge

- H Warning and indicator lights
- I Hybrid mode indicator
- J Fuel gauge




[Hybrid Instrument Cluster Overview](#)

⬅️⬆️⬅️ *Arrow direction indicates the side of the vehicle the fuel door is located*

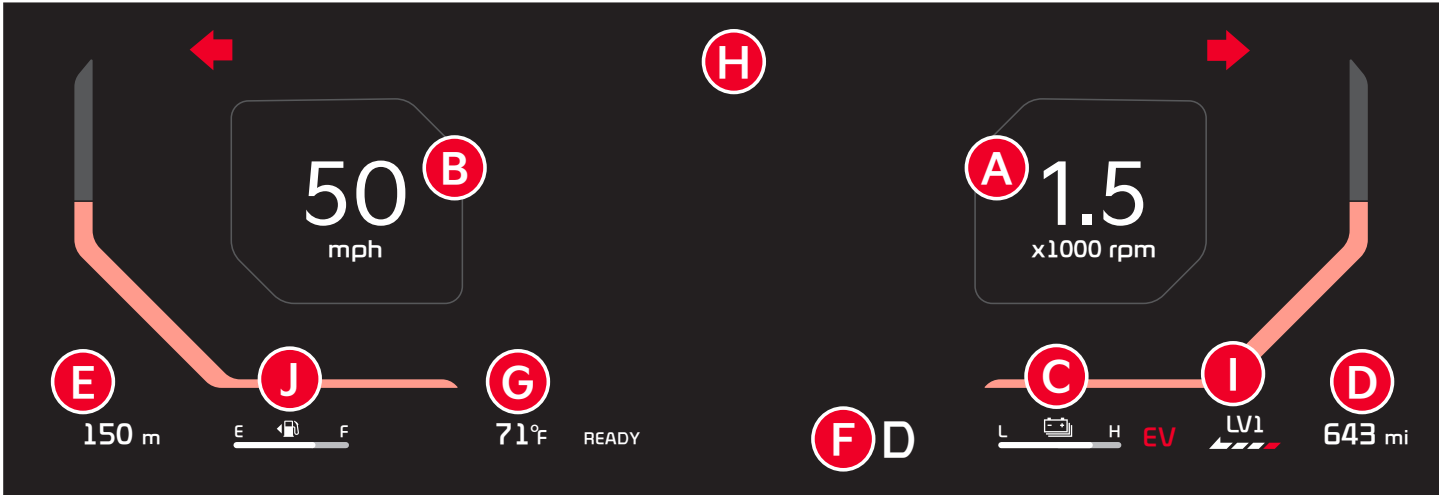

(Type A)

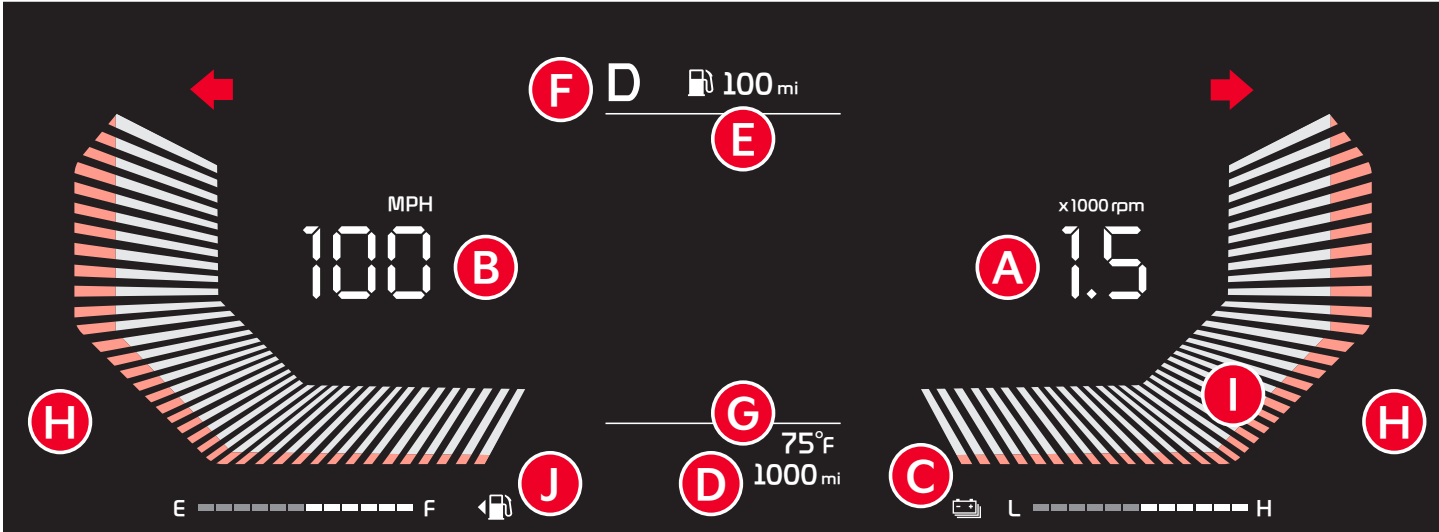 

(Type B)

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

\*IF EQUIPPED



## Indicators & Warning Lights

|  |                                                                                                                       |  |                                                                                        |
|--|-----------------------------------------------------------------------------------------------------------------------|--|----------------------------------------------------------------------------------------|
|  | High Beam Indicator                                                                                                   |  | Engine Coolant Temperature Warning Light                                               |
|  | Light ON Indicator                                                                                                    |  | Engine Oil Pressure Warning Light                                                      |
|  | Front Fog Light*                                                                                                      |  | Charging System Warning Light                                                          |
|  | Master Warning Light                                                                                                  |  | Seat Belt Warning Light                                                                |
|  | Forward Safety Warning Light Indicator*                                                                               |  | Malfunction Indicator                                                                  |
|  | Lane Safety Indicator                                                                                                 |  | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |
|  | Electronic Brake Force (EBD) System Warning Light<br>(Two separate indicators on Instrument Cluster lit at same time) |  | Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator               |
|  | Immobilizer Indicator*                                                                                                |  | Electronic Stability Control (ESC) OFF Indicator                                       |
|  | READY Indicator                                                                                                       |  | Parking Brake & Brake Fluid Warning Light                                              |
|  | EV Mode Indicator                                                                                                     |  | Motor Driven Power Steering (MDPS) Warning Light                                       |
|  | ECO Indicator                                                                                                         |  |                                                                                        |
|  | SPORT Mode Indicator                                                                                                  |  |                                                                                        |
|  | Hybrid System Warning Light                                                                                           |  |                                                                                        |
|  | High Beam Assist Indicator Light                                                                                      |  |                                                                                        |
|  | Low Beam Indicator Light                                                                                              |  |                                                                                        |
|  | Lane Following Assist Indicator Light                                                                                 |  |                                                                                        |

[Continued on next page](#)

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.



# Indicators & Warning Lights

*[Continued from previous page](#)*

|                                                                                     |                                               |                                                                                     |                                                          |
|-------------------------------------------------------------------------------------|-----------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------|
|    | Airbag Warning Light                          |    | Icy Road Warning Light                                   |
|    | Parking Brake Indicator                       |    | LED Headlamp Warning Light                               |
|    | Anti-lock Braking System (ABS) Warning Light  |    | Exhaust System (GPF) Warning Indicator (Gasoline Engine) |
|    | Low Fuel Level Warning Light                  |    | Green Zone Drive Mode Indicator                          |
|     | Cruise Indicator*                             |    | Highway Lane Change Assist Indicator                     |
|    | Liftgate Open Warning Light                   |   | Service Warning Light                                    |
|   | Door Ajar Warning Light                       |  | Washer Fluid Warning Light                               |
|  | Regenerative Brake Warning Light              |  | Turn Signal Warning Light                                |
|  |                                               |  | Forward Attention Warning Light*                         |
|  | Intelligent Speed Limit Assist Indicator      |  | Emergency Steering Warning Light*                        |
|  | Electronic Parking Brake (EPB) Warning Light* |                                                                                     |                                                          |

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

\*IF EQUIPPED



## Tire Pressure Monitoring System (TPMS)<sup>†19</sup>

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

 


[Tire Pressure Monitoring System](#)

The TPMS indicator illuminates if it detects one or more tires are significantly underinflated, the vehicle has a tire installed without TPMS or the outside temperature becomes significantly lower.

- The LCD screen will display the Low Tire Pressure indicator  showing which tire(s) is underinflated.
- Inflate tire(s) to PSI specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute then illuminate. See dealer for service

### Low Tire Pressure

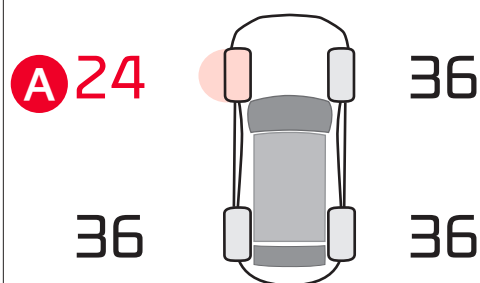

[Continued on next page](#)

For more information, refer to section 11 of the Owner's Manual.



# Tire Pressure Monitoring System (TPMS)<sup>†19</sup>

[\*Continued from previous page\*](#)

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is open
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

*Always check the Owner’s Manual for complete operating information and safety warnings.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Hybrid Indicators at Startup

**A Hybrid System Gauge:** Indicates how economically the vehicle is being driven

- **CHARGE (Blue zone):**  
High-efficiency range
- **ECO (Green zone):** Normal-efficiency range
- **POWER (Grey zone):** Low-efficiency range

 


[Hybrid Modes -  
Automatic,  
EV and HEV](#)

**B EV Mode** - Displays the EV mode

**C Ready** - Illuminates when the hybrid system is operational. Even if the vehicle is off, the vehicle can be driven

**D State of Charge (SOC)** - Displays the hybrid battery charge status

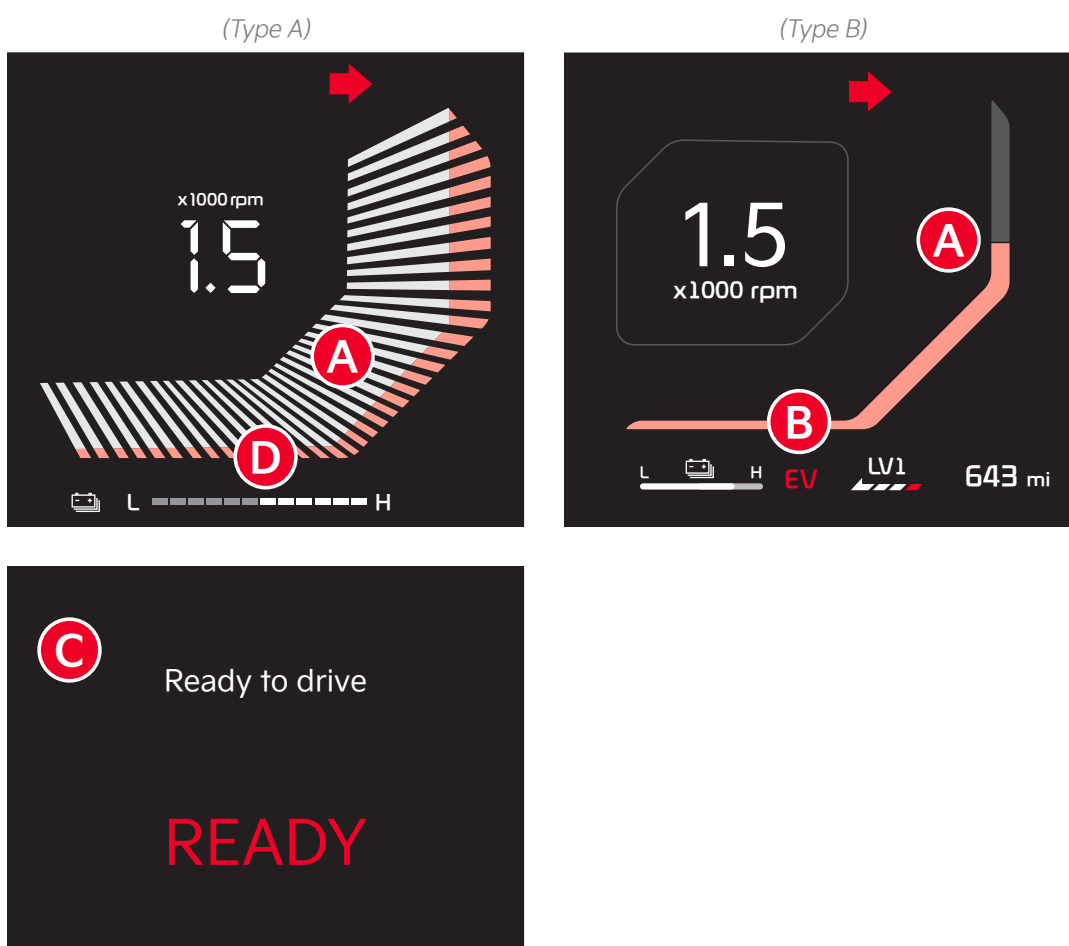

**REMINDER:** Avoid starting or driving the vehicle when the fuel tank is empty. As the engine will be incapable of charging the high-voltage hybrid battery, the battery will lose its charge and may be damaged.

*For more information on Hybrid modes, please refer to section 7 of the Owner's Manual.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*




## Drive Mode Integrated Control System\*

 The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes, press the Drive Mode button **A**. When a drive mode is selected (ECO or SPORT), the drive mode indicator will illuminate in the Instrument Cluster.



[Tips for Economical Driving](#)

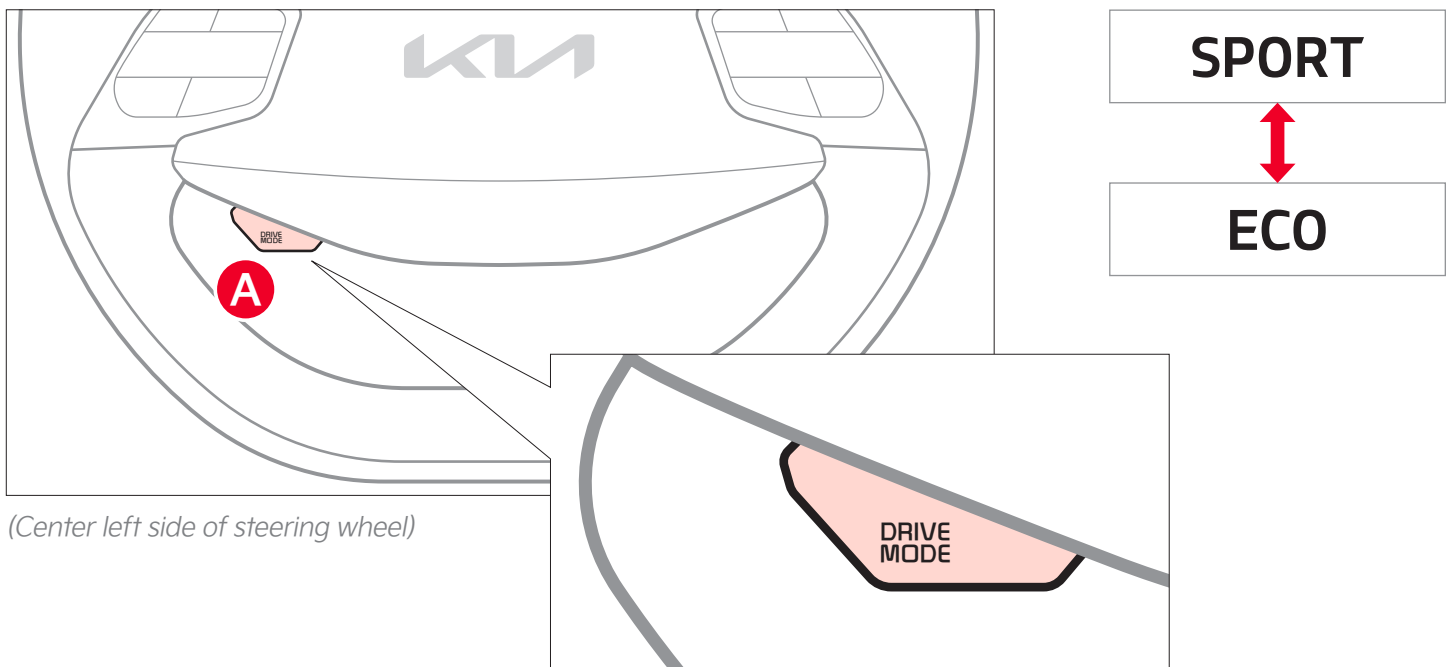

### REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
  - Acceleration may be slightly reduced when the accelerator is fully depressed
  - Air conditioner performance may be limited
  - Shift pattern of the automatic transmission may change
  - Engine noise may decrease
  - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- The system defaults to ECO mode when ignition is in the ON position
- Steering effort may be slightly increased in SPORT mode

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 9 in the Owner's Manual for more information.*

 


### Green Zone Drive Mode\*

When Green Zone Drive Mode is enabled, the vehicle switches to EV mode when entering “green zone” registration points, like schools, hospitals, parks, etc, based on navigation information provided and driving history.

Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position.

- **To access Vehicle settings on the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select ECO Vehicle and then Green Zone EV Drive

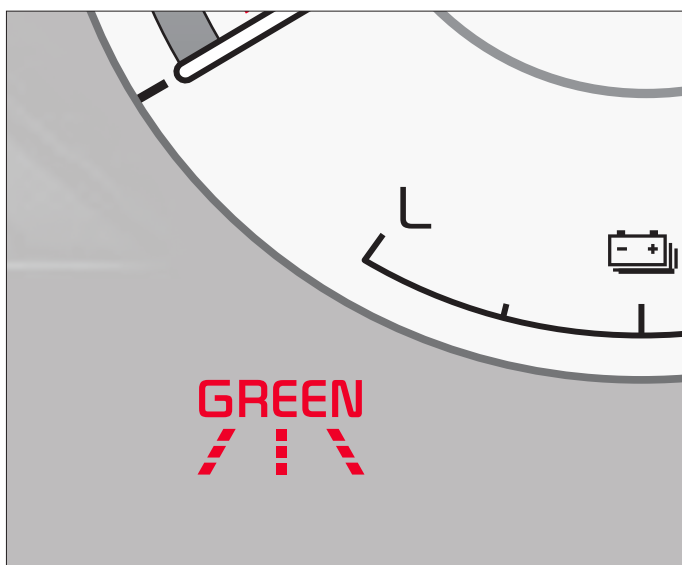

**REMINDER:** The engine may start in certain situations.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 9 in the Owner's Manual for more information.*



## Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only\* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

When the Instrument Cluster screen is in the Trip Computer mode, the screen displays fuel economy information related to the driving range and average fuel economy.

To change LCD display modes, press the mode button **A** on the steering wheel.

**Average Fuel Consumption** - Calculates average fuel consumption from the distance driven and amount of fuel injected into the engine / total fuel used.

 
 
[Continued on next page](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*



[Tips for Economical Driving](#)

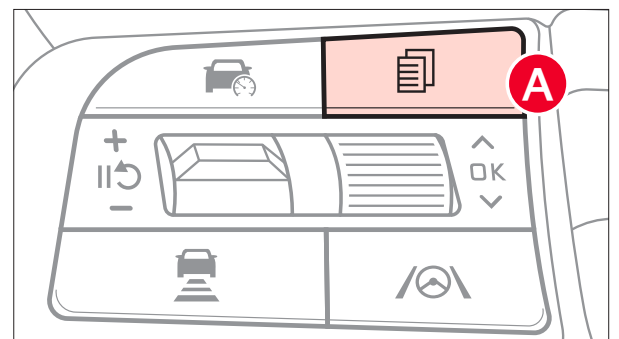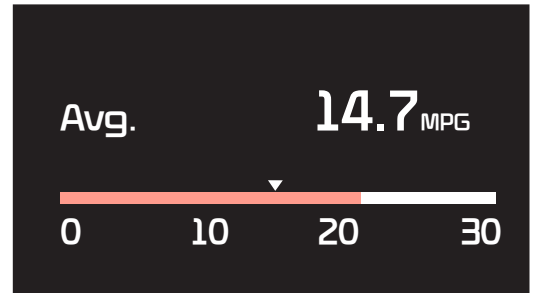



# Fuel Economy / Tips for Economical Driving

[\*Continued from previous page\*](#)

### QUICK TIPS

- Distance to Empty displayed on the Instrument Cluster after a recharge may vary depending on previous driving patterns, high voltage battery charge amount, weather, temperature, durability of the battery and geographical features
- Energy consumption is increased in cold or hot weather. When using the heater, more energy will be consumed, which reduces the Distance to Empty

 


## Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the Engine Start/Stop button is in the ON position.

To cycle through the Trip modes **A**, press the Mode button **B**.

When in the Trip Computer mode , press the OK button **C** to cycle through the screens. When displaying ACCUMULATED INFO, DRIVE INFO, DRIVING STYLE or FUEL ECONOMY screens, press and hold the OK button **C** to reset to zero.

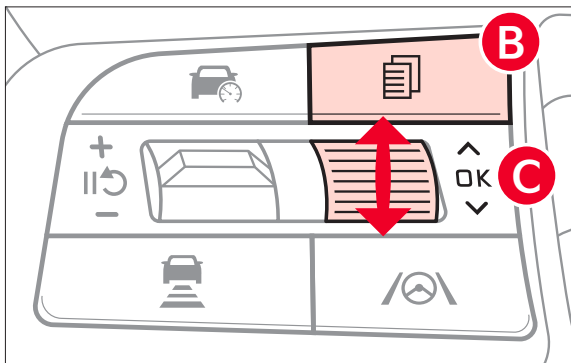


### REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected



 [Steering Wheel Controls Video](#)

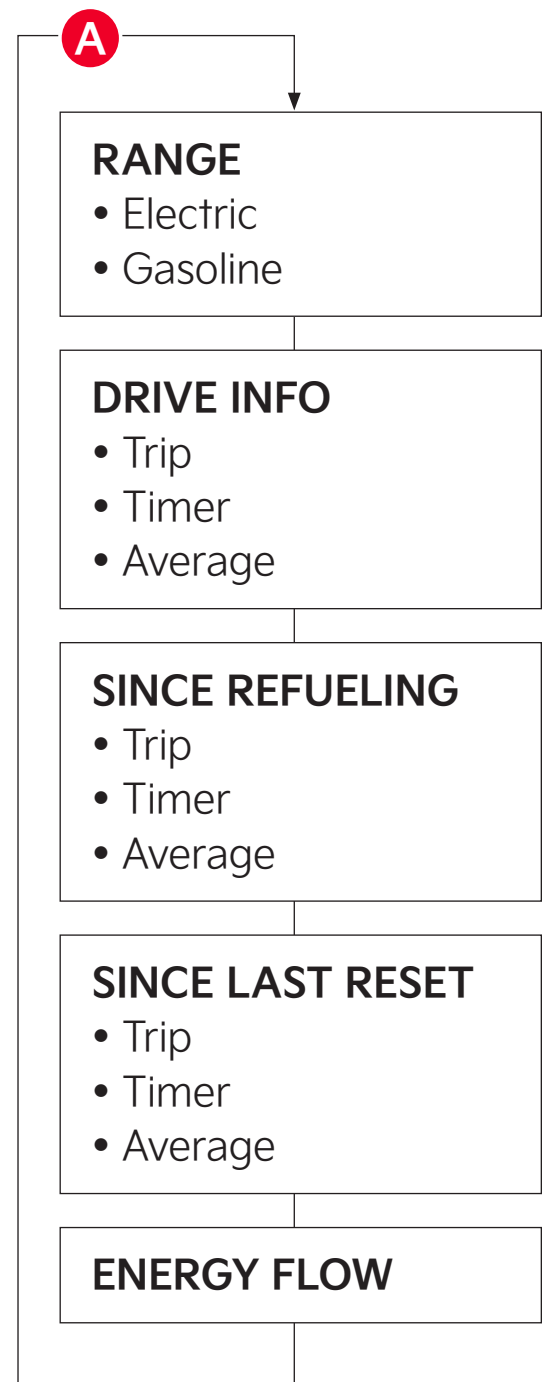

(Type A)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*



## Instrument Cluster LCD Modes

Press Mode button  **A** to scroll through different Instrument Cluster LCD Modes.



[Instrument Cluster's LCD Display](#)



**Driving Assist:** Displays information on the Advanced Driving Assist System (ADAS)



 
**Navigation Mode\*:** Displays driving information for range, drive info, energy flow, etc.



**Information Mode\*:** Displays information on driving force distribution (AWD), Tire Pressure



**Master Warning\*:** Displays warning messages related to the vehicle when one or more systems is not operating normally

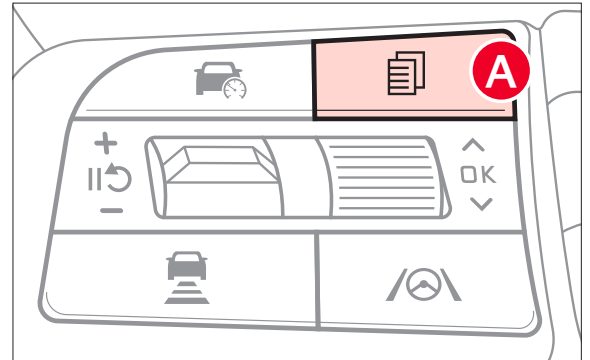

(Buttons located on Steering Wheel - Type B)

*Your vehicle's steering wheel buttons may differ from those in the illustrations.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.*

*For more information, refer to section 5 of the Owner's Manual.*




## Vehicle Settings - Infotainment System

 To enter the Vehicle Settings on the Infotainment System **A**, press the **SETUP** key or the **SETUP** button on the screen. Then press **VEHICLE** , which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.



[Vehicle Settings](#)

- Driver Assistance
- Climate
- Lights
- Door
- Cluster\*
- Convenience
- Seats
- Reset

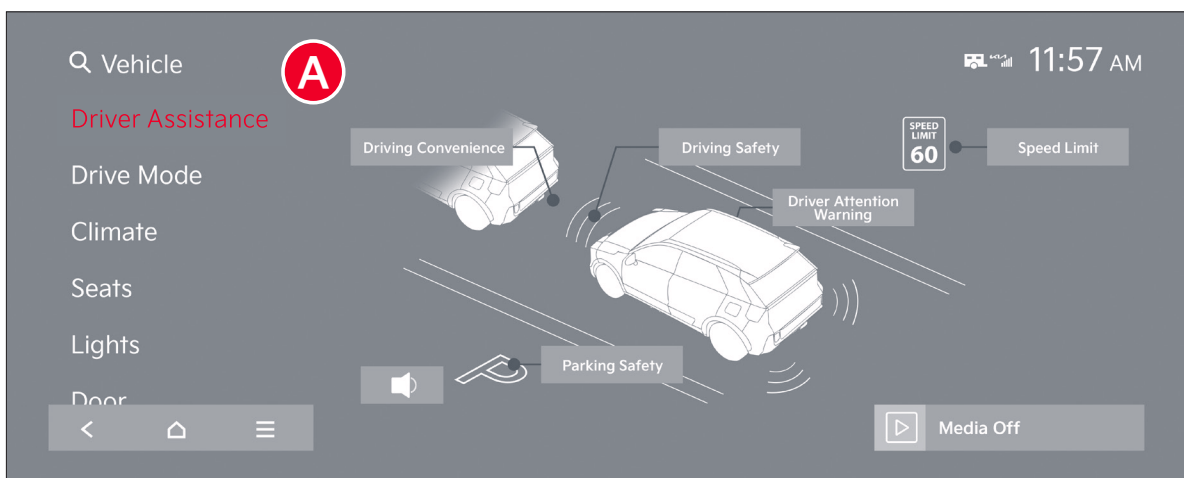

Refer to the Car Infotainment System Quick Start Guide for more information.



## Service Interval Mode

- Press the Mode button **A** to cycle to User Settings
- Scroll down to Service Interval mode and select
- If Service Interval is not checked, press the OK button **B** to turn ON
- Press the OK button **B** up/down to select/change the interval setting
- Press the OK button **B** to select the interval

When service is required, the following will be displayed: **Service Required.**

When in User Settings, to reset the Service Interval Mode system, press and hold the OK button **B** for more than 1 second.

**Service Interval Setting** - When in the User Settings, in the **Service Interval** screen, set the service interval:

- Press the Mode button **A** to cycle to User Settings
- Scroll down to Service Interval mode and select
- If Service Interval is not checked, press the OK button **B** to turn ON
- Press the OK button **B** up/down to select/change the interval setting
- Press the OK button **B** to select the interval



 
[Vehicle Settings](#)



[Kia Full Synthetic Oil](#)



[Settings - Service Interval & Maintenance](#)

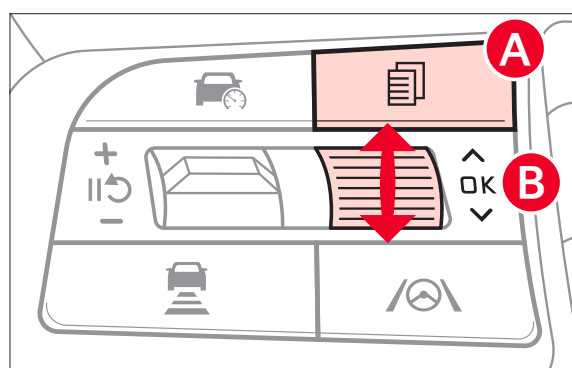

(Buttons located on Steering Wheel - Type B)



(Message on Cluster Display)

[Continued on next page](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*



# Service Interval Mode

[\*Continued from previous page\*](#)

### QUICK TIPS

- When engine oil life reaches 5% or below, an “Engine Oil Change Due Soon” message will appear on the Instrument Cluster. After completing the oil change, be sure to reset the reminder in the Vehicle Settings. Go to Convenience, select Oil Change Reminder then press and hold the OK button for more than one second
- Resetting the reminder ensures that your next oil change interval is tracked accurately
- Engine oil life is estimated based on driving conditions and time, and may not directly indicate the actual condition of the oil

 
*Refer to section 5 in the Owner’s Manual for more information.*



## Emergency Starting\*

### Before Jump-Starting:

1. If the vehicle appears to have a dead battery, first press the 12V Battery Reset button **A**. Then start the vehicle within 15 seconds, by pressing the brake and turning the ignition on or pressing the Engine Start/Stop button
2. If the vehicle does not start after completing the above steps, then jump-start the vehicle (as described below)

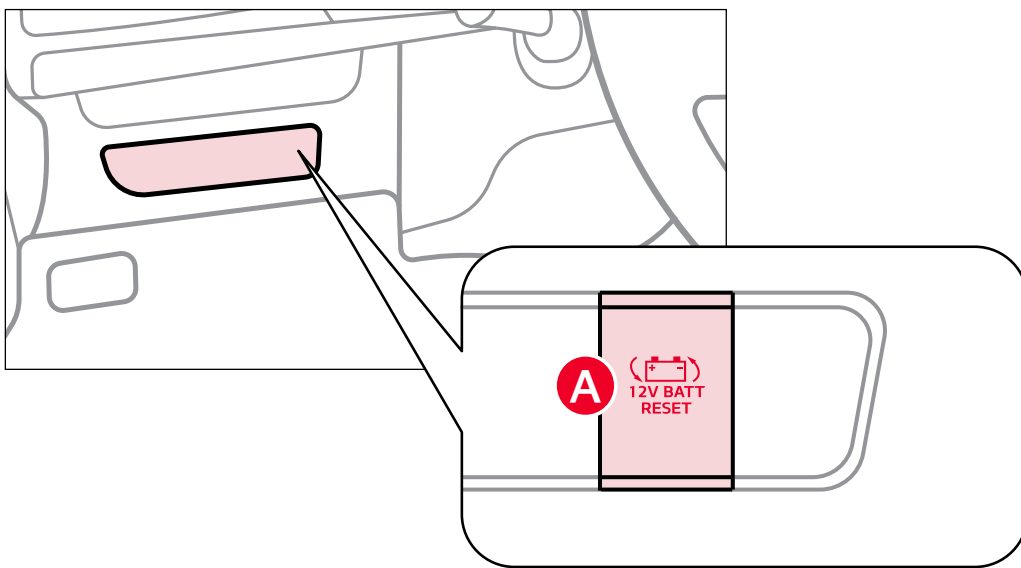

(Located in Driver's Panel to the left of Steering Wheel)

### REMINDERS:

- After starting, idle or drive the vehicle for more than 30 minutes to help charge the 12V battery
- If the vehicle does not start immediately after pressing the 12V Battery Reset button **A**, then the power of the 12V battery is automatically disconnected to save any additional discharge
- Repeated use of the 12V Battery Reset button may cause over discharge which will prevent the vehicle from starting

[Continued on next page](#)

 
 
*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

## Emergency Starting\*

[\*Continued from previous page\*](#)

### Jump-Starting:

1. Remove the fusebox cover **A** under the front hood
2. The {+} jump start terminal **B** is located in the fuse box; the suitable ground point **C** is located in the engine compartment (See Owner's Manual for detailed description)
3. Connect cables coming from the battery booster source in the following order and disconnect in reverse order:
  - Connect the {+} clamp of your jumper cable to the {+} jump start terminal B
  - Connect the {-} clamp of your jumper cable to the suitable ground point **C**
4. Press the 12V Battery Reset button **D** then immediately start the vehicle by pressing the brake and turning the ignition on or pressing the Engine Start/Stop button

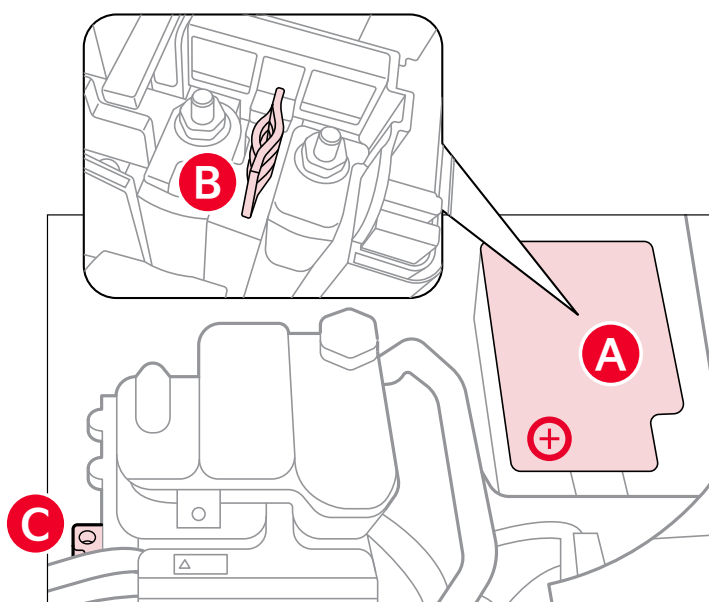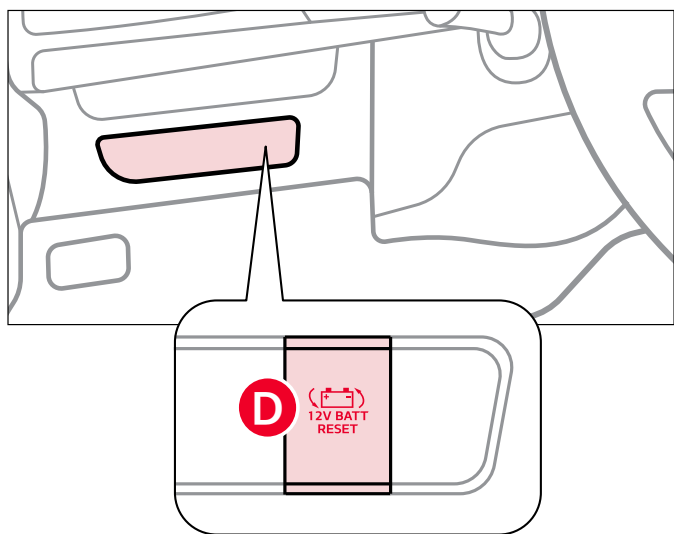

**REMINDER:** Jump-starting your vehicle can be dangerous if done incorrectly. Follow the above jump-starting procedures to avoid harm to yourself or damage to your vehicle and any of its components. You should also consult your Owner's Manual for further detailed instructions for jump-starting your vehicle. If in doubt, we strongly recommend that you have a competent technician or towing service jump-start your vehicle.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*




## Regenerative Braking with Paddle Switches\*

 The regenerative braking system charges the battery when coasting or when you use the brakes to stop the vehicle. When the Drive Mode is in ECO mode, use the paddle switches to adjust the regenerative braking level from 1 to 3, MAX and AUTO. The level will be displayed on the Instrument Cluster **A**.



[Hybrid Paddle Switches / Paddle Shifters](#)

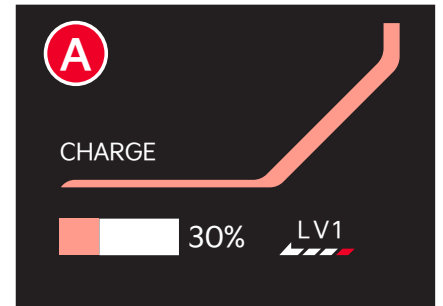

- Pull the left paddle switch **B** to increase regenerative braking and deceleration. Pull and hold to reach the MAX level
- Pull the right paddle switch **C** to decrease regenerative braking and deceleration. Pull and hold to reach Smart Regeneration System (AUTO)

The paddle shifters do not operate when:

- Both paddle switches are pulled at the same time
- The vehicle is decelerating by depressing the brake pedal
- Smart Cruise Control (SCC) is active
- When the SOC gauge shows a high level
- If there is a restriction by the vehicle system
- When the drive mode is switched from SPORT to ECO

[Continued on next page](#)

# Regenerative Braking with Paddle Switches\*

 
[Continued from previous page](#)

## Smart Regeneration System\*

Smart Regeneration is designed to automatically adjust the regenerative braking level based on a vehicle being detected in front, and road conditions.

To activate Smart Regeneration, pull and hold the right paddle switch or go to Vehicle Settings on the Infotainment System. Press the **SETUP** button or **SETUP** on the screen, **VEHICLE** and ECO VEHICLE. Then SMART RECUPERATION.

The AUTO **A** indicator light will illuminate on the Instrument Cluster to indicate the Regenerative Braking is on.

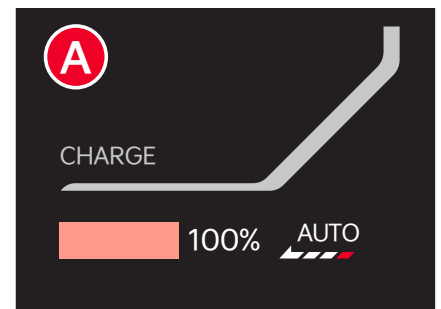

### QUICK TIP

Each of the different Drive Modes allows the regenerative braking level to be set at the driver's preference.

*Smart Regeneration is a supplemental system for the driver's convenience. Do not solely rely on this system to stop the vehicle or avoid collisions. Always cautiously look ahead to prevent unexpected or sudden situations.*

*Steering wheel illustration is for illustrative purposes only. Your actual steering wheel/buttons and/or features may differ.*

*Always use pedal braking when necessary. Pay attention to the road condition ahead and apply the brake if necessary.*

*For more information on regenerative braking or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.*



## Forward Collision-Avoidance Assist 2 (FCA2)\*†4

FCA is designed to detect a vehicle ahead or detect a pedestrian/cyclist in the roadway through front view camera recognition and front radar signals. FCA warns the driver that a collision is imminent, and if necessary, temporarily applies emergency braking. If FCA detects a potential collision, FCA emits an audible warning, steering wheel haptic warning, and visual alert on the Instrument Cluster **A**.

If FCA detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed **B**, potentially helping to reduce the effects of a possible collision.

**Junction Turning** - With the left turn signal on, if it detects a potential collision, Junction Turning **C** may help to avoid the collision with an oncoming vehicle in an adjacent lane by applying emergency braking.

 
 
 
**Junction Crossing\*** - When approaching an intersection the Junction Crossing function **D** may help mitigate or avoid a collision with oncoming vehicles on the left or right side when crossing an intersection by applying emergency braking.

*FCA is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.*


*Refer to section 10 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.*



[Forward Collision-Avoidance Assist \(FCA\)](#)

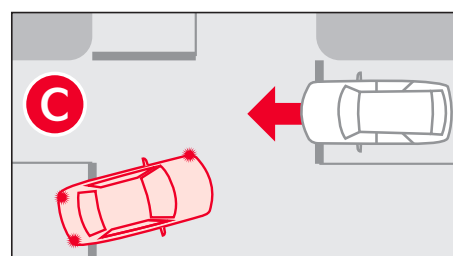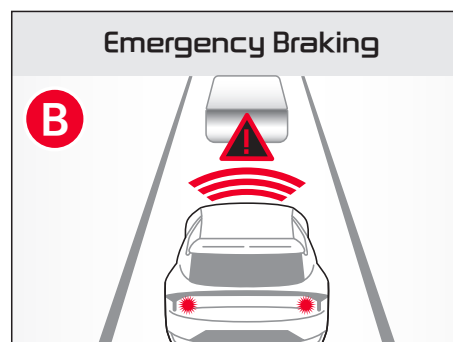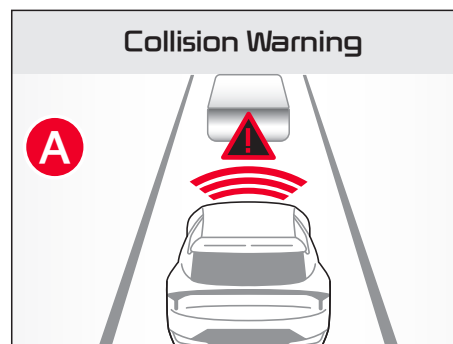

(Junction Turning)

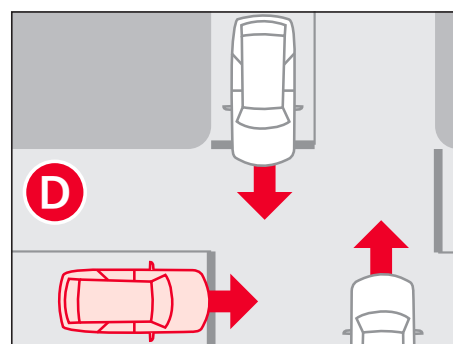 


(Junction Crossing)

[Continued on next page](#)

# Forward Collision-Avoidance Assist 2 (FCA2)\*†4

 
[Continued from previous page](#)

**Direct Oncoming Vehicle function\*** - The Direct Oncoming function **A** may help reduce the vehicle speed to help prevent a collision when a vehicle or powered two-wheeler is detected and approaching from the opposite direction.

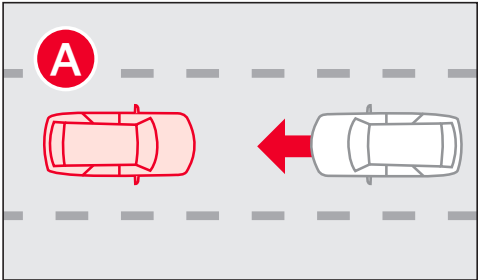


(Direct Oncoming Vehicle function)

 **Lane-Change Oncoming vehicle function\*** - Lane-Change Oncoming function **B** may mitigate or avoid a collision with oncoming vehicles or powered two-wheelers when changing lanes by assisting the driver's steering.

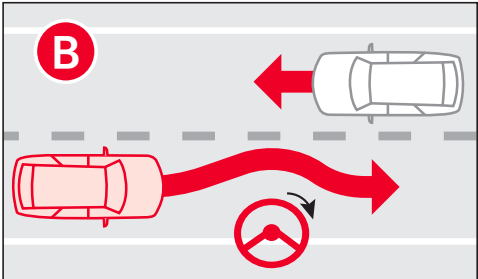

(Lane-Change Oncoming Vehicle function)

 **Lane-Change Side function\*** - Lane-Change Side function **C** may help mitigate or avoid a collision with vehicles or powered two-wheelers in the next lane when changing.

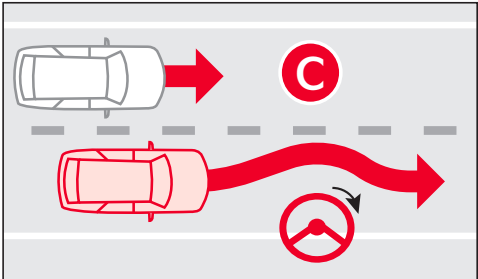

(Lane-Change Side function)

[Continued on next page](#)

Refer to section 10 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

†LEGAL DISCLAIMERS ON [PAGE 115](#) | \*IF EQUIPPED



# Forward Collision-Avoidance Assist 2 (FCA2)\*†4

 
[Continued from previous page](#)




[Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit](#)

## Evasive Steering Assist function\*

- **Driver Steering Assist A** - If a possible collision with a vehicle ahead, pedestrian, cyclist, or powered two-wheeler is detected and you steer to avoid the collision, Evasive Steering Assist may assist the driver in steering
- **Evasive Steering Assist B** - The Evasive Steering Assist function may help mitigate or avoid a collision with a vehicle, pedestrian cyclist, etc. in the same lane in front of you. When a risk of collision is detected, Evasive Steering Assist may warn you and assist your steering if you move the steering wheel

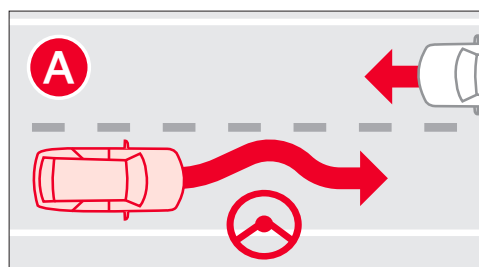

(Driver Steering Assist)

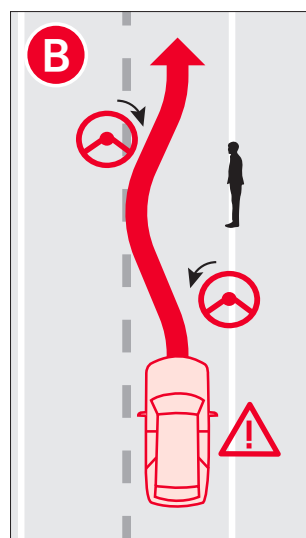 

(Evasive Steering Assist)

## FCA Settings:

FCA is ON by default. FCA can be enabled or disabled in the Vehicle Settings on the Infotainment System. Make sure the vehicle is at a standstill, gear shift in Park and the Engine Start/Stop button is in the ON position.

**Infotainment System Vehicle Settings** - Press the **SETUP** key or the onscreen SETUP button on the Infotainment System. Press the VEHICLE button to enter Vehicle Settings. In Driver Assistance, select Driving Safety, and then you may select Forward Safety, Forward Cross-traffic Safety, and Forward/Side Safety.

[Continued on next page](#)

*When engaged, Forward Collision-Avoidance Assist 2 is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.*

*Actual Vehicle and User Settings steps may vary by model. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 10 in the Owner's Manual for more information.*



# Forward Collision-Avoidance Assist 2 (FCA2)\*†4

[Continued from previous page](#)

### Forward Safety Warning Timing -

To set the Warning Timing, in Driver Assistance, select Driving Safety, then in Forward Safety Warning Timing, select Standard or Late.

FCA will become active when the:

- Ignition is on or the Engine Start/Stop button is in the ON position
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- FCA2 will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA2 is operating and the ESC (Electronic Stability Control) is turned off, FCA2 is automatically turned off
- When FCA2 is off, the Forward Safety warning light is on in the Instrument Cluster 
- Once the risk factors are not detected, these functions will deactivate, then the driver must steer the vehicle

*When engaged, Forward Collision-Avoidance Assist 2 is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.*

*Actual Vehicle and User Settings steps may vary by model. Refer to section 10 in the Owner's Manual for more information.*



## Lane Keeping Assist (LKA)<sup>†4</sup>

Lane Keeping Assist is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially

 
help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator will initially illuminate gray . It will remain gray when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green .

If the LKA detects that you are moving outside of your lane without using the turn signal, LKA may give an auditory warning and display Lane Departure Warning on the Instrument Cluster or LKA may provide steering inputs to help prevent the vehicle from moving outside its lane. If LKA detects that the vehicle continues moving outside of the lane, LKA may give an auditory warning and display a Lane Departure Warning on the Instrument Cluster.


When enabled press and hold the Lane Safety button  to turn it on or off.




[Lane Keeping Assist \(LKA\)](#)

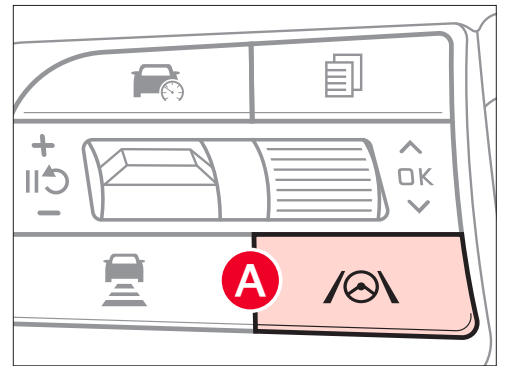

 
(Buttons located on left side of Steering Wheel. Button configuration may vary.)

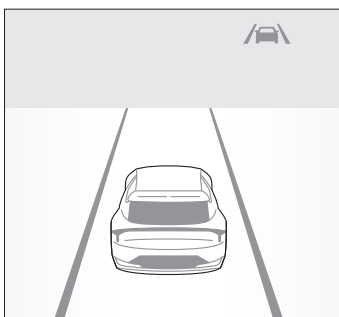

 
When the front-view camera does not detect the lane traveled in the lanes are not illuminated

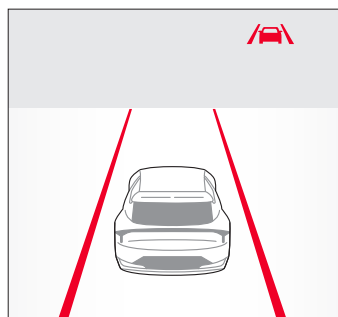

 When the front-view camera detects the lane traveled in, both lanes are illuminated

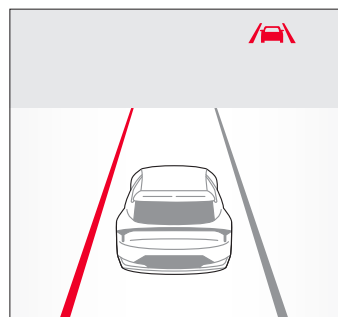

 When the front-view camera detects the vehicle moving outside of the lane being traveled in, a red indicator will illuminate either on the left or right lane (shown in both images above)

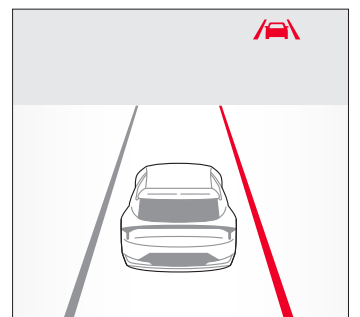

[Continued on next page](#)



## Lane Keeping Assist (LKA)<sup>†4</sup>

[Continued from previous page](#)

### LKA Settings:

- **To enable LKA:** Press the **SETUP** key on the Infotainment System. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE then LANE SAFETY
- **Warning Methods:** To adjust the Warning Methods settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust the Warning Volume, Haptic Warning, Lane Safety Warning Sound and Driving Safety Priority



[Driver Safety -  
Forward/Lane/  
Blind-spot Safety  
& Safe Exit](#)



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

### QUICK TIPS

- All systems will operate under the following conditions:
  - The vehicle speed exceeds approximately 40 mph
  - LKA recognizes the lane the vehicle is traveling in
  - The vehicle is between the lane markers

### REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state oncoming vehicles

*When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Your actual display, buttons and/ or features may vary.*

*Actual Vehicle Settings steps may vary by model. Refer to section 10 in the Owner's Manual for more information.*



## Blind-spot Collision-Avoidance Assist (BCA)<sup>\*†4</sup>

Blind-spot Collision-Avoidance Assist is designed to help detect approaching vehicles in the driver's blind spot areas and may warn the driver of a possible collision with a visual alert on the outside rearview mirrors and a warning sound. If there is a collision risk when exiting a parallel space, BCA may assist with braking to help avoid a collision. Initially, BCA provides Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, BCA may help avoid a collision by applying the brakes.

 
 
**Vehicle detection:** When another vehicle is detected within the collision warning boundary **A**, an indicator may illuminate on the outside rearview mirrors **B**. This feature activates when the vehicle speed is above 12 mph, and the speed of the approaching vehicle is above 7 mph.

**Collision warning:** When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and BCA will sound a warning. This feature activates when your vehicle speed is above 25 mph and the approaching vehicle is above 7 mph.

**Collision Avoidance Assist:** If BCA determines that there is a collision risk with an approaching vehicle in the blind spot, BCA may help avoid a collision by applying the brakes when driving forward out of a parking space.



[Blind-spot Collision-Avoidance Assist \(BCA\)](#)

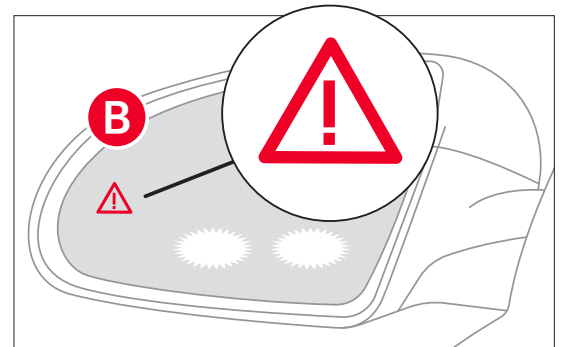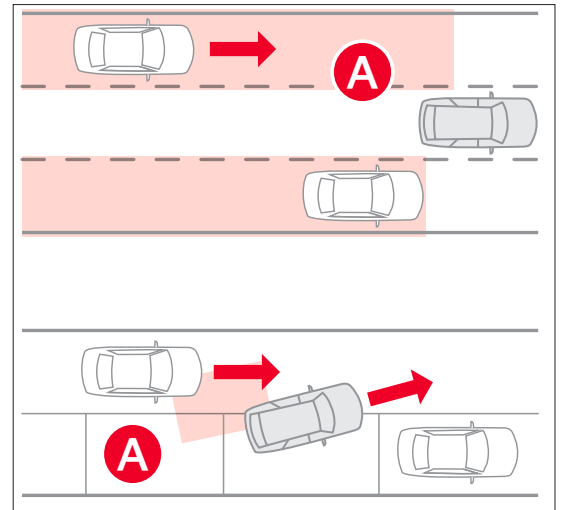

[Continued on next page](#)



## Blind-spot Collision-Avoidance Assist (BCA)<sup>\*†4</sup>

[Continued from previous page](#)

### BCA Settings:

To enable BCA, press the **SETUP** button on the Infotainment System. Select the VEHICLE button to enter Vehicle Settings. Select DRIVER ASSISTANCE and then BLIND-SPOT SAFETY



[Driver Safety -  
Forward/Lane/  
Blind-spot Safety  
& Safe Exit](#)



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

**Warning Methods:** To adjust the Warning Methods settings, go to Vehicle Settings, DRIVING SAFETY, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning, Blind-spot Safety Warning Sound and Driving Safety Priority

### QUICK TIPS

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- Collision warning of BCA will activate when:
  - The system is turned on
  - Other vehicles are detected on the rear sides of the vehicle at speeds above 6 mph
  - Vehicle speed is above approximately 25 mph

### REMINDERS:

- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- If the turn signal is activated for a left turn at an intersection, BCA may issue a warning regardless of whether the driver intends to complete the turn. Maintain a proper distance from oncoming vehicles

*When engaged, BCA is a supplemental function. Do not solely rely on this function and always pay attention to the road and its conditions. Refer to section 7 in the Owner's Manual for more information. The images on this page are for illustrative purposes only and may not reflect actual feature or operation.*



## Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>

Driver Attention Warning is designed to monitor the driver's driving pattern. If DAW detects that the driver's attention level becomes low, DAW may display a message on the Instrument Cluster, "Consider taking a break," **A** and a warning sound to recommend the driver take a break.

 
 


[Driver Attention Warning \(DAW\)](#)



[Leading Vehicle Departure Alert \(LVDA\)](#)

If the vehicle is stopped and Leading Vehicle Departure Alert (LVDA) is enabled, when a detected vehicle in front starts to depart, LVDA can inform the driver by sounding an alert and displaying a message **B** on the Instrument Cluster.

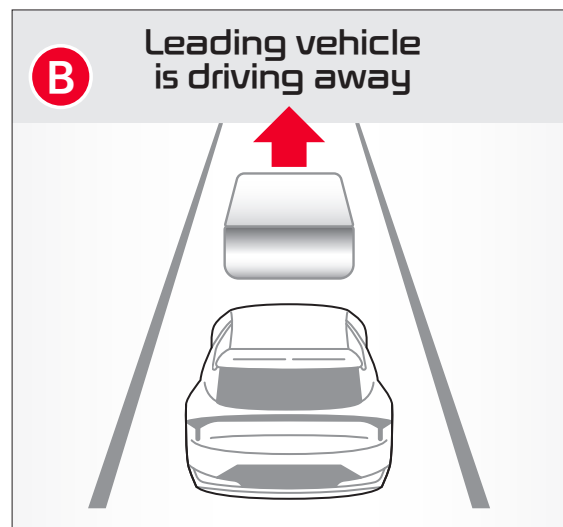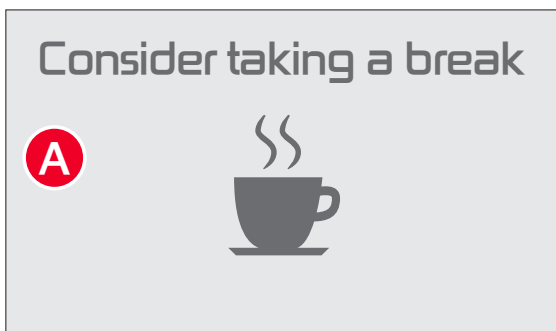

[Continued on next page](#)

Refer to section 10 in the Owner's Manual for more information.

When engaged, DAW and LVDA are not substitutes for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.



# Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>

[Continued from previous page](#)

### DAW Settings:

Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position.

#### To enable/disable LVDA in Vehicle settings on the Infotainment System

- Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning. Select Leading Vehicle Departure Alert to enable it.



[Driver Assistance:  
Driver Attention  
Warning & Leading  
Vehicle Departure Alert](#)



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

### QUICK TIP

**To adjust the Warning Volume:** Go to Vehicle Settings on the Infotainment System by pressing the SETUP button. Select Vehicle, Driver Assistance, Warning Methods, then Warning Volume. You can also select Driving Safety Priority to temporarily decrease the audio volume when the Driving Safety system sounds a warning.

**REMINDER:** When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 4 minutes.

*Refer to section 10 in the Owner’s Manual for more information.*

*When engaged, DAW and LVDA are not substitutes for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Smart Cruise Control (SCC)\*†4

Smart Cruise Control (SCC) is designed to detect a vehicle ahead and help maintain the set speed and the distance from the vehicle ahead.

With SCC on and activated and the vehicle distance set, when SCC detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop.

When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than three seconds, press the accelerator pedal or press the **+/-** or buttons on the Steering Wheel to start moving the vehicle.

Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.



[Smart Cruise Control  
with Overtaking  
Acceleration Assist](#)



[Driver Convenience -  
Smart Cruise Control  
with Overtaking  
Acceleration Assist](#)

### QUICK TIP

If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph.

[Continued on next page](#)

*When engaged, SCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See section 10 in the Owner's Manual for more information.*

 
# Smart Cruise Control (SCC)\*†4

*Continued from previous page*

## To set/adjust the set speed:

Press the Driving Assist button **A** to turn SCC on and set the current speed (One-Touch Set). The SCC indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front. Then press the +/- switch **B** up/down to increase/decrease the set speed

**To set the vehicle distance:** Press the Vehicle Distance button **C** on the steering wheel. The image on the LCD screen **D** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **E**.

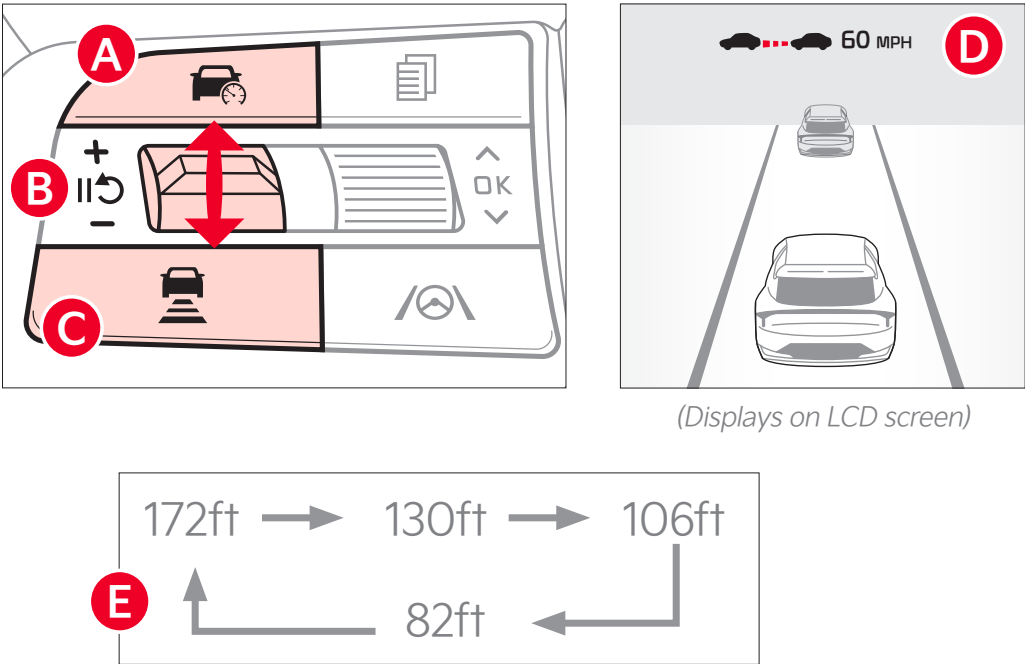

*Continued on next page*

*The distance settings are approximations and may vary depending on the vehicle speed at the time. See section 10 in the Owner’s Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




# Smart Cruise Control (SCC)\*†4

 [Continued from previous page](#)

**To pause/resume SCC operation:** Depress the Pause/Resume button **A**. The SCC indicator on the Instrument Cluster will change.

**To turn SCC off:** Press the Driving Assist button **B**. The SCC indicator on the Instrument Cluster will turn OFF.

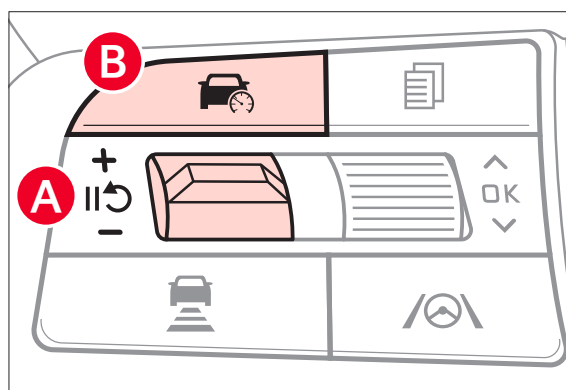

### REMINDERS:

- When stopped behind another vehicle, the driver may depress the brake pedal to turn on SCC
- When following a vehicle, SCC may automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of **D** (Drive), EPB is activated and various other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- It is the responsibility of the driver to always check the speed and distance to the vehicle ahead
- SCC may decelerate if surrounding vehicle intervenes in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

*When engaged, SCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See section 10 in the Owner's Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Navigation-based Smart Cruise Control (NSCC)<sup>\*†4,9</sup>

Navigation-based Smart Cruise Control uses information from the navigation system to automatically adjust the vehicle's speed based on posted speed limits and highway conditions, when driving on highways while Smart Cruise Control is active.

When NSCC is on and operating, and the vehicle is driving on limited/controlled access highways, the **NAV** icon  will illuminate gray on the Instrument Cluster.

### Highway Curve Zone Auto Slowdown:

When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, and the **NAV**  blinks green the Instrument Cluster. When the vehicle passes the curved road, the vehicle may return to its previously set speed.

### NSCC Settings:

- **To access Vehicle settings on the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Convenience, Auto Highway Speed Change

**REMINDER:** NSCC is only available on certain controlled access roads and highways.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*NSCC system is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

 
*See section 10 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide.*



[Navigation-based Smart Cruise Control \(NSCC\)](#)



[Driver Convenience - Smart Cruise Control with Overtaking Acceleration Assist](#)

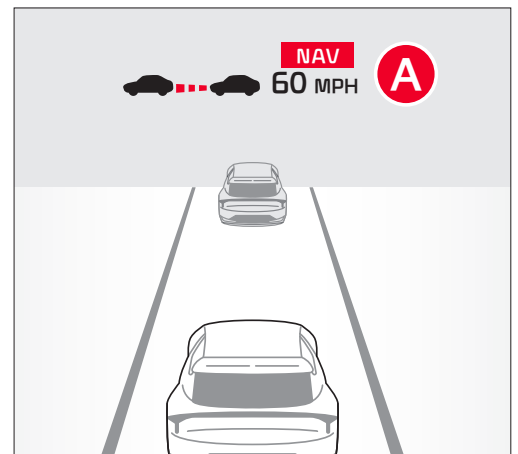

(Displays on LCD screen)



## Lane Following Assist 2 (LFA2)<sup>†4</sup>

Lane Following Assist is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead. The Instrument Cluster indicator will initially illuminate white  when turned ON. It will remain white when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the Lane Following Assist icon will illuminate green **B**.



 
 
[Lane Following Assist \(LFA\)](#)



[Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit](#)

**Hands-off Warning** - If the driver removes their hands from the steering wheel for several seconds, visual and audible warnings will be provided. If the driver does not respond, Lane Following Assist (LFA) will automatically turn off and additional warnings will be displayed. If Smart Cruise Control is active, the Emergency Stop function may be activated.

- Press the Lane Driving Assist button **C** to turn LFA on or off
- LFA will operate only when these conditions are met:
  - LFA detects both sides of the lane markers the vehicle is traveling in
  - The vehicle is traveling slower than 100 mph

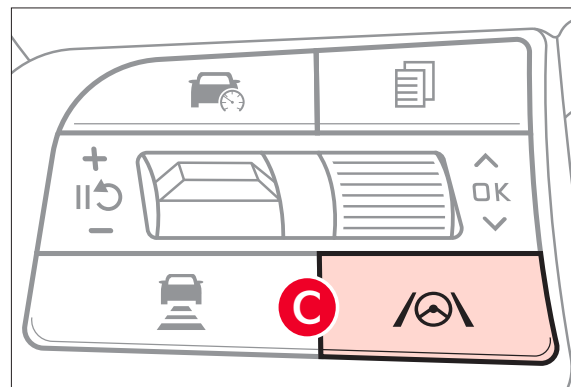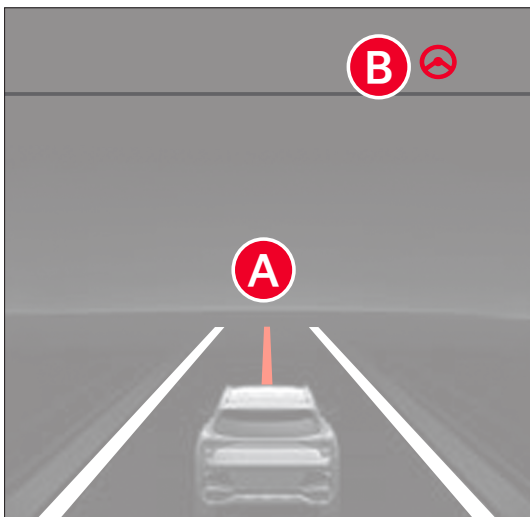

(Button located on steering wheel)

[Continued on next page](#)

*LFA is supplemental. Do not solely rely on LFA and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Actual User Settings steps may vary by model. See section 10 in the Owner's Manual for more detailed information, limitations and conditions.*

## Lane Following Assist 2 (LFA2)<sup>†4</sup>

[Continued from previous page](#)

### QUICK TIPS

- To adjust the WARNING VOLUME: Go to Vehicle Settings on the Infotainment System by pressing the **SETUP** button. Select Vehicle, Driver Assistance, Warning Methods, then Warning Volume. You can also select Driving Safety Priority to temporarily decrease the audio volume while LFA is operating
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

**REMINDER:** LFA is not a substitute for safe and proper driving. Always drive safely and use caution.

*LFA is supplemental. Do not solely rely on LFA and always pay attention to the road and its conditions.*

*Actual User Settings steps may vary by model. See section 10 in the Owner's Manual for more detailed information, limitations and conditions.*



## Intelligent Speed Limit Assist (ISLA)<sup>†4</sup>

Intelligent Speed Limit Assist is designed to use speed limit information from the navigation system to inform the driver of the detected speed limit.

 


[Intelligent  
Speed Limit Assist  
\(ISLA\)](#)

When ISLA is on and active, ISLA will display an alert on the Instrument Cluster of the detected speed limit **A**. If the vehicle's current speed exceeds the detected speed limit, the vehicle's current speed will blink red on the LCD.

### ISLA Settings:

- To enable ISLA, press the **SETUP** key/button on the Infotainment System. Select the VEHICLE, DRIVER ASSISTANCE, then SPEED LIMIT
- **Select Country:** If the vehicle is not equipped with navigation system, a settings menu will be provided to select the country manually
- **Speed Limit Offset:** The offset for Speed limit can be adjusted. The vehicle will warn the speed limit or adjust the driving speed when the current driving speed is higher than the recognized speed limit added with set tolerance value

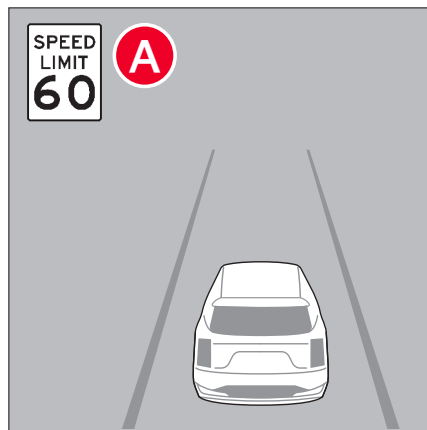

[Continued on next page](#)

*ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Speed Limit Assist operates when the posted speed limit is 20 mph or higher. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.*

## Intelligent Speed Limit Assist (ISLA)<sup>†4</sup>

[Continued from previous page](#)

- Select one of the three modes:
  - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message to change the speed to help the driver stay within the posted speed limit, and informs the driver to change set speed of Manual Speed Limit Assist or Smart Cruise Control to help the driver stay within the speed limit
  - **Speed Limit Warning:** Informs the driver of the posted speed limit and warns the driver when the vehicle is traveling faster than the posted speed limit
  - **Off:** ISLA is disabled



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

### QUICK TIPS

- Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on
- To adjust the WARNING VOLUME: Go to Vehicle Settings on the Infotainment System by pressing the **SETUP** button. Select Vehicle, Driver Assistance, Warning Methods, then Warning Volume. You can also select Driving Safety Priority to temporarily decrease the audio volume while the driver assistance system is operating
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

**REMINDER:** Vehicle must be parked and in a safe location to change the speed settings.

*ISLA is a supplemental function. Do not solely rely on this system and always pay attention to the road and its conditions. Speed Limit Assist operates when the posted speed limit is 20 mph or higher.*

*See section 10 in the Owner's Manual for more detailed information, limitations and conditions.*



## Highway Driving Assist 2 (HDA2)<sup>\*†4</sup>

 
HDA2 Assist is designed to detect lanes and vehicles ahead, help maintain the distance from the vehicle ahead and the set speed, and center the vehicle within detected lane markers while driving on certain highways/freeways.

When HDA2 is activated and conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA2 will be in standby mode and the indicator light **A** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green **A**.

**Hands-off Warning** - If the driver takes their hands off the steering wheel for several seconds, a warning message will appear on the Instrument Cluster and an audible warning will sound. If hands on the steering wheel are not detected, HDA2 will cancel.

**Highway Lane Change Assist **B****: This feature can assist with lane changes in the direction of the turn signal in certain circumstances. A green arrow appears when the function begins operating and remains displayed until the lane change is complete.



**REMINDER:** When the ignition is cycled, the system returns to its previous state, on or off.

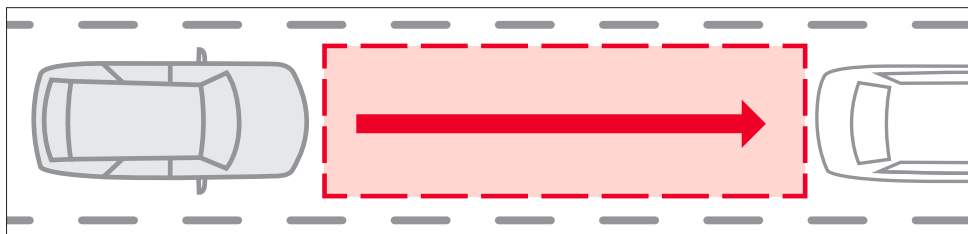

[Highway Driving Assist \(HDA\)](#)



  [Driver Convenience - Smart Cruise Control & Highway Driving Assist](#)

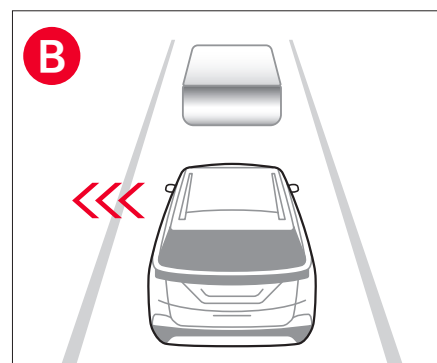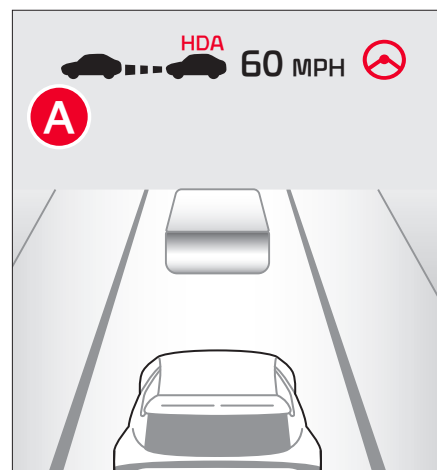

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

## Highway Driving Assist 2 (HDA2)<sup>\*†4</sup>

 
[Continued from previous page](#)

### HDA2 Settings:

- To enable HDA, access settings through the Vehicle Settings on the Infotainment System **A**. Press the **SETUP** key, then press Vehicle to enter Vehicle Settings. Select Driver Assistance, Driving Convenience and then Highway Driving Assist
- HDA will operate when these conditions are met:
  - Driving on the main road of highways, and turning on Highway Driving Assist by pressing the Driving Assist button
  - Entering the main road of highways while Lane Following Assist and Smart Cruise Control are operating



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

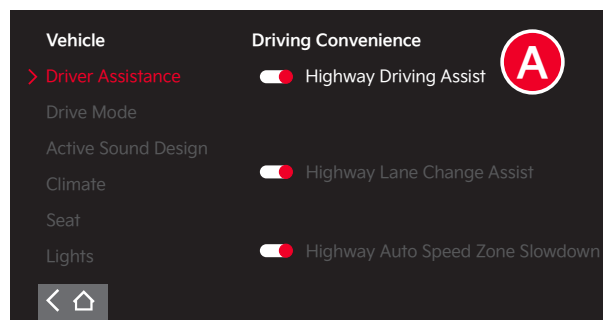

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- Limited access road information may vary
- When the ignition is cycled, the system returns to its previous state, on or off
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode

Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

See section 10 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.



## Rear View Monitor (RVM)<sup>†4</sup>

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the Infotainment System while the vehicle is in Reverse.

### To operate Rear View Monitor:

 
 
- Press the Parking/View button **A**.
- To turn Rear View Monitor OFF, press the Parking/View button **A** again.
- To access camera settings, press the gear icon **B** on the Infotainment System.



[Driver Assistance - Parking Safety](#)



[Driver Assistance - Warning Methods & Warning Volume](#)

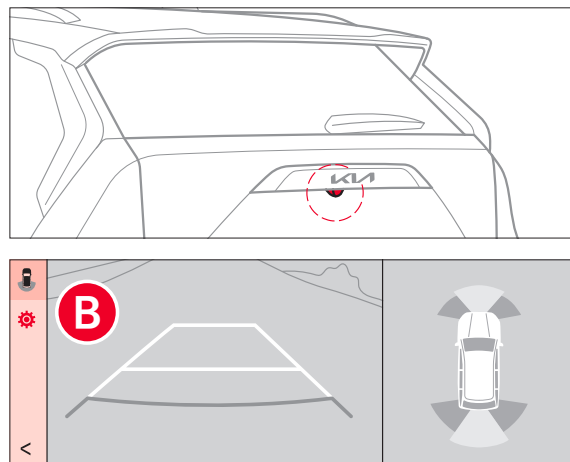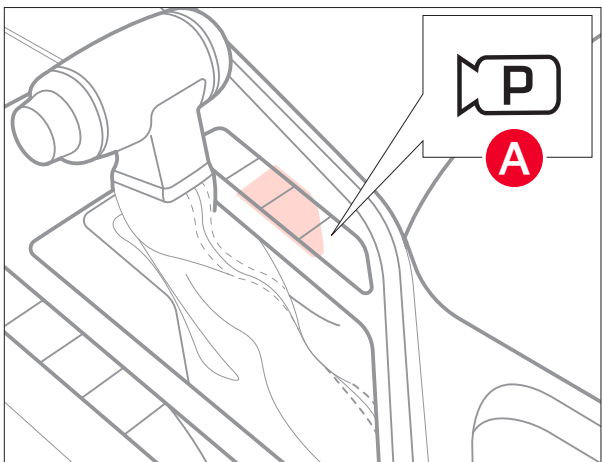

### QUICK TIP

To adjust Warning Volume: Go to Vehicle Settings on the Infotainment System by pressing the **SETUP** button. Select Vehicle, Driver Assistance, Warning Methods, then Warning Volume. You can also select Driving Safety Priority to temporarily decrease the audio volume while the driver assistance system is operating.

**REMINDER:** RVM may not display every object behind the vehicle.

*Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.*

*Refer to section 10 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Safe Exit Assist (SEA)<sup>†4</sup>

 
 
 
SEA may warn passengers from opening their door by sounding an audible warning, a warning light in the sideview mirror

**A** and a warning on the Instrument Cluster **B** when a vehicle is detected, approaching from behind, after your vehicle has stopped. SEA is designed to keep the doors closed if the system detects a vehicle approaching the blind spot area.

When the electronic child safety lock is ON **C** and Safe Exit Assist detects an approaching vehicle from the rear, the rear doors may remain locked even if the electronic child safety lock button is pressed.



[Driver Assistance -  
Parking Safety](#)

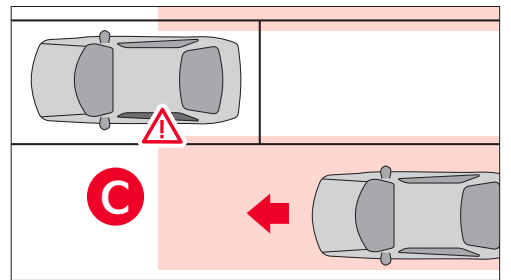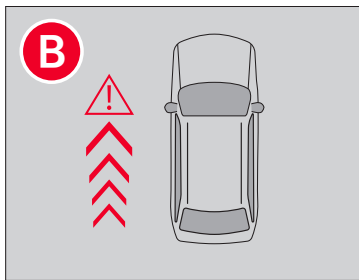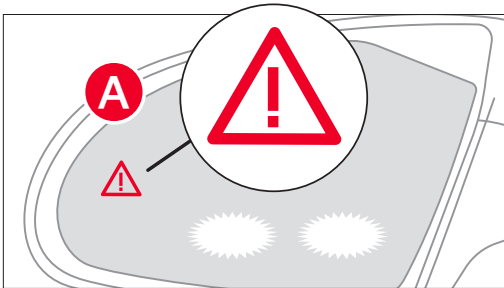

**REMINDER:** The setup of SEA will be maintained, as selected, when the ignition is cycled.

[Continued on next page](#)

*When engaged, SEW is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.*

# Safe Exit Assist (SEA)<sup>†4</sup>

*[Continued from previous page](#)*

 
## SEA Settings:

- SEA can be turned on/off by going to the Vehicle Settings on the Infotainment System 
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position

- **To access Vehicle Settings on the Infotainment System ** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. In Driving Safety, select SAFE EXIT



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

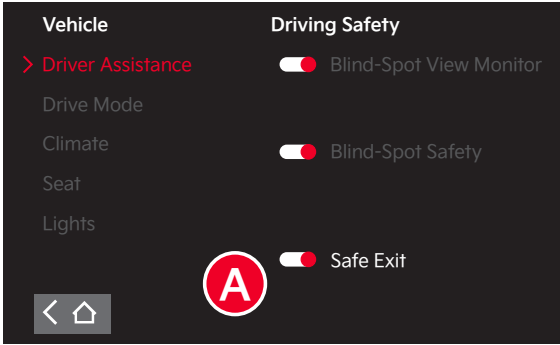

## QUICK TIPS

- To adjust the WARNING VOLUME: Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 115](#) | <sup>\*</sup>IF EQUIPPED



## Forward/Reverse/Side\* Parking Distance Warning (PDW)<sup>†4</sup>

 
 
While driving at low speed, Forward/Reverse/Side\* Parking Distance Warning is designed to detect pedestrians or objects and may warn the driver or assist with braking to help avoid a collision.

To turn PDW on, press the Parking Safety button **A** (LED illuminated). To turn PDW off, press the button **A** again (LED not illuminated).

PDW will activate when the ignition is on/ready and the vehicle is in Drive or Reverse.

**Parking Distance Warning Auto On** - To set the Parking Distance Warning Auto On, at low speeds, enable it in Vehicle Settings on the Infotainment System.

**To enable in Vehicle Settings on the Infotainment System** - Press the SETUP key or the onscreen **SETUP** button. Press VEHICLE to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Parking Distance Warning Auto On.

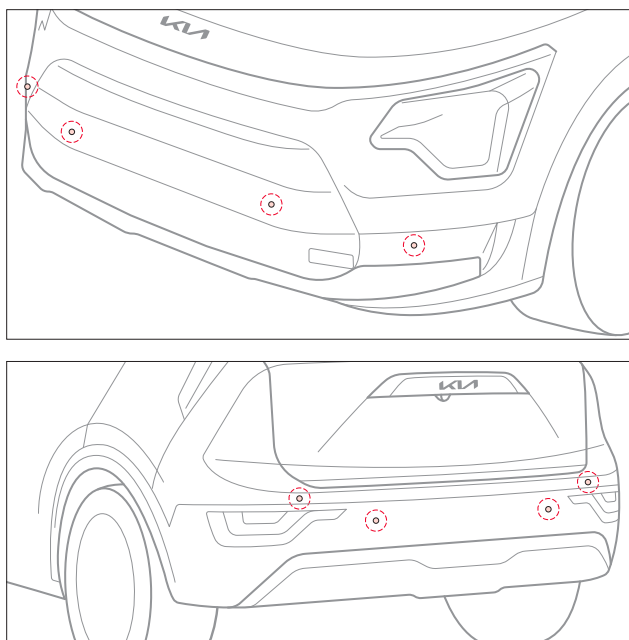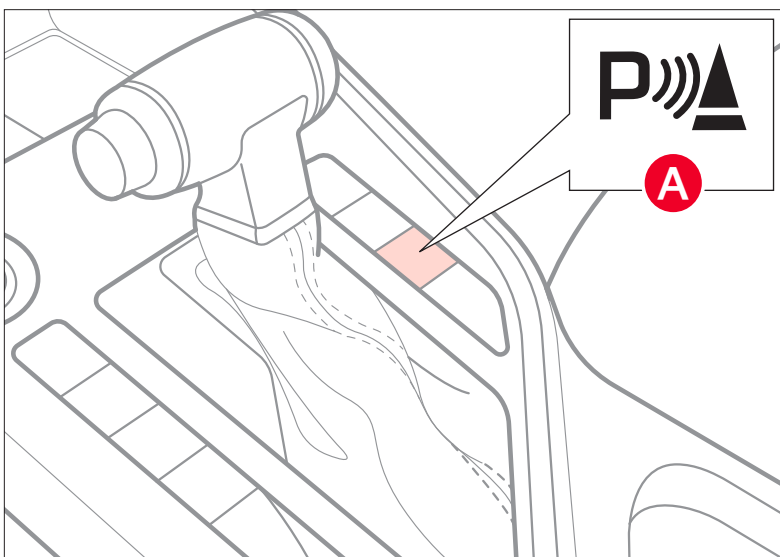

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Forward/Reverse/Side\* Parking Distance Warning (PDW)<sup>\*†4</sup>

[Continued from previous page](#)



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- If the vehicle is moving at speeds over 6 mph, PDW does not operate
- When more than two objects are sensed at the same time, the closest one will be recognized first

*PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.*

*Refer to section 10 in the Owner's Manual for more information.*



# Rear Cross-Traffic Collision-Avoidance Assist (RCCA)<sup>†4</sup>

Rear Cross-Traffic Collision-Avoidance

Assist (RCCA) is designed to help detect vehicles approaching from the left or right side of the vehicle while reversing **A**. If a potential collision is detected, RCCA may

 
 
 
provide visual and audible warnings. Warning indicators may illuminate

in the outside rearview mirrors **B**, and warning messages may appear in the Instrument Cluster **C** and Infotainment System **D**.


If RCCA detects an increased risk of collision, it may automatically apply the brakes to help reduce vehicle speed and potentially lessen the impact of a collision.

RCCA is designed to operate when:

- The vehicle is in **R** (Reverse)
- Vehicle speed is below approximately **5 mph (8 km/h)**

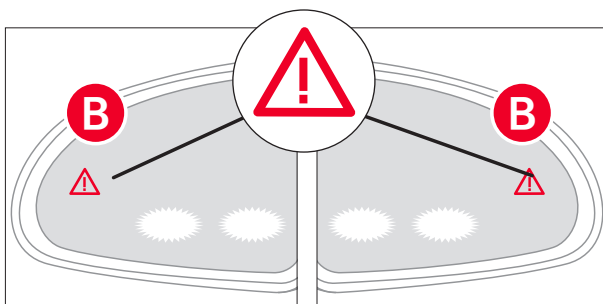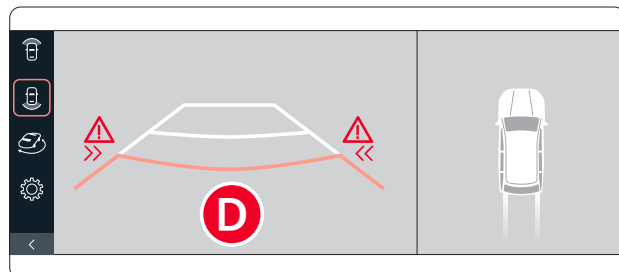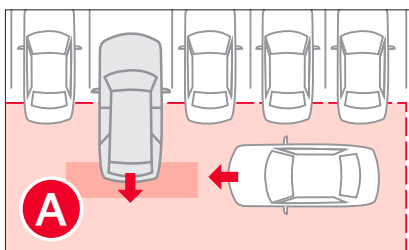

 (Warnings displayed on either mirror as detected)

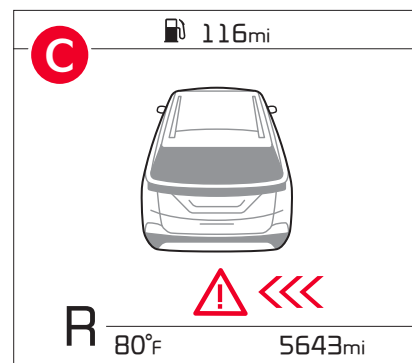

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

# Rear Cross-Traffic Collision-Avoidance Assist (RCCA)<sup>†4</sup>

[Continued from previous page](#)

## RCCA Settings:

- RCCA can be turned on/off by going to the Vehicle Settings on the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position
- To access Vehicle Settings on the Infotainment System - Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross Traffic Safety



[Driver Assistance -  
Warning Methods  
& Warning Volume](#)

## QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

## REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range and traveling faster than 3 mph, the RCCA system will show a warning

*When engaged, RCCA is a supplemental function. Do not solely rely on this system and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 10 in the Owner's Manual for more information.*

 


# Instrument Cluster Control

Press switch **A** up or down to adjust display brightness of the Instrument Panel illumination.

### REMINDERS:

- The dimmer does not change brightness when lights are turned off
- The dimmer does not adjust brightness on the audio system screens; use the system's setup menu to adjust brightness on the screens

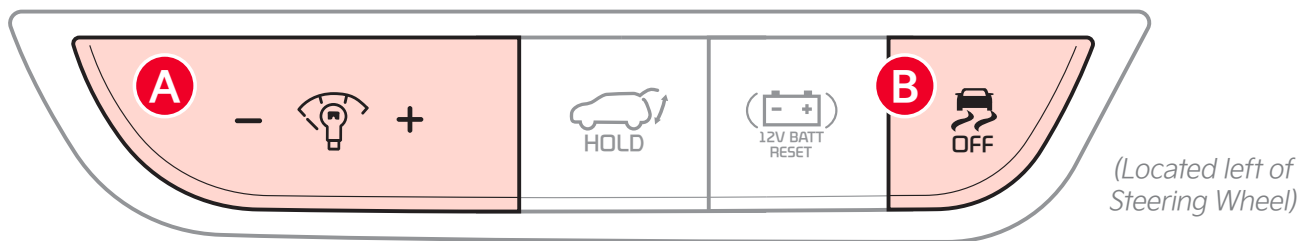

Refer to section 5 in the Owner's Manual for more information.

# Electronic Stability Control (ESC)<sup>†6</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON whenever possible.



[Electronic Stability Control \(ESC\)](#)

Press ESC OFF button **B** to disable Traction Control (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** for 2-3 seconds (ESC OFF indicator will illuminate, and an alert sounds).

### REMINDERS:

- ESC is active by default at vehicle startup
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

Refer to section 9 in the Owner's Manual for more information.



# Hill-start Assist Control (HAC)<sup>†6</sup>

HAC is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backward

### REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see Authorized Kia Dealer for service

*HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.*

*Refer to section 9 in the Owner's Manual for more information.*



### Reverse Parking Aid Function\*

When the gear shift lever is moved into **R** (Reverse), the selected outside rearview mirror **A** will rotate downward to aid in reverse parking.

To turn ON the Reverse Parking Aid Function, move the outside rearview mirror switch to either the **L** (Left) or **R** (Right) mirror position **B**. The selected mirror will move downward when the vehicle is in Reverse.

To turn OFF the Reverse Parking Aid Function, move the switch **B** to the center position.

The outside rearview mirror(s) will automatically return to their original position when:

- The Engine Start/Stop button is in the OFF or ACC position
- The gear shift lever is moved to any position except **R** (Reverse)
- The outside rearview mirror switch is moved to the center position

 
 
### Adjusting the Reverse Parking Aid Angle

The downward angle of each outside rearview mirror can be adjusted by:

1. Shifting the vehicle into **P** (Park) and select the mirror to adjust using the L or R switch **B**
2. Press the brake pedal and shift into **R** (Reverse).
3. After the mirror moves downward, use the mirror adjustment switch **C** to set the desired angle.
4. Shift out of **R** (Reverse) and return the mirror switch **B** to the center position to save the new setting.

Repeat the procedure for the opposite mirror.

**REMINDER:** When the outside rearview mirror buttons are not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

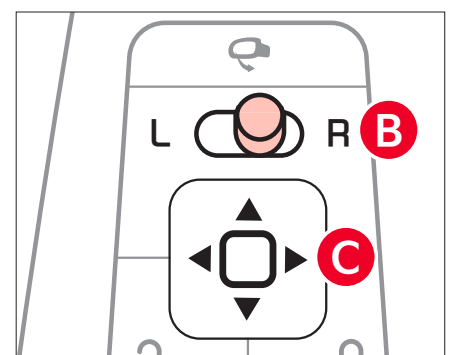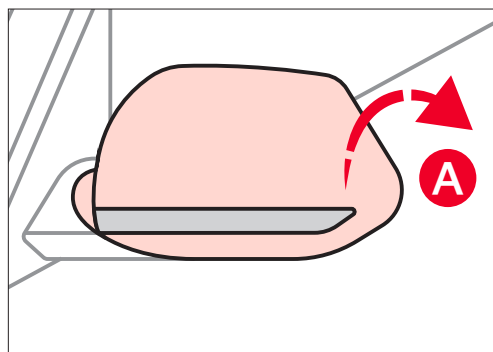

(Buttons panel located on Driver's Door )

Refer to section 5 in the Owner's Manual for more information.



# Start/Stop Button<sup>†7</sup>

### To start the vehicle:

- Depress the brake pedal
- Press the Start/Stop button while gear shift is in **P** (Park)
- To turn the vehicle OFF, press the Start/Stop button.



 
[Start/Stop Button](#)

To use the Start/Stop button, you must have the Smart Key fob on your person.

### QUICK TIPS

#### To use electrical accessories:

- ACC position
  - When in the OFF position and without depressing the brake pedal, press the Start/Stop button once
- ON position
  - When already in the ACC position and without depressing the brake pedal, press the Start/Stop button again
  - When in the OFF position and without depressing the brake pedal, press the Start/Stop button twice
  - Keeping the vehicle in ACC or ON position without turning the vehicle on may discharge the vehicle's battery

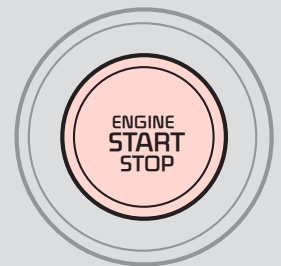

### REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the vehicle off and to the ACC position by pressing the Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Start/Stop button (Lock button side closest) and press the button to start the vehicle
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

Refer to section 9 in the Owner's Manual for more information.



# Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down\*

### QUICK TIP

 
Press the button again to stop Auto Up/Down function.

- B** Press to Unlock/Lock All Doors
- C** Press to disable Rear Passenger Windows

### REMINDERS:

- When pressed **C**, controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

*Refer to section 4 in the Owner's Manual for more information.*

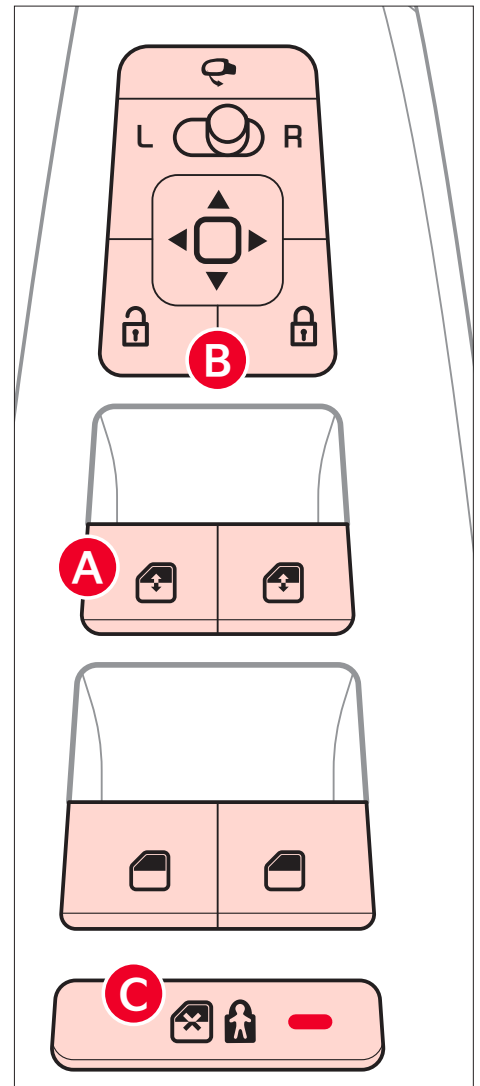


(Driver's Door Controls)

## Manual Folding Mirrors\*

 To fold the mirrors in manually, pull the mirror towards the window.

### QUICK TIP

If needed, pull the mirror firmly until it folds.

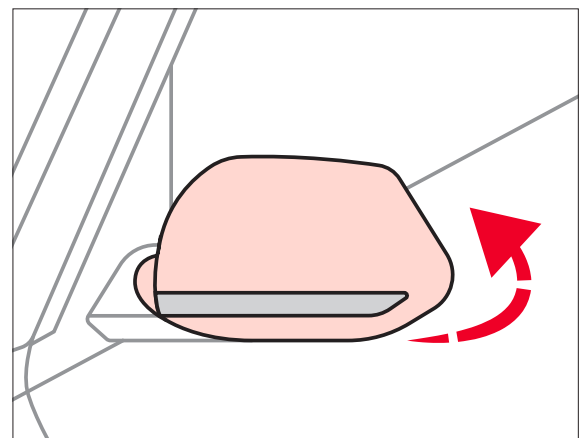

*Refer to section 5 in the Owner's Manual for more information.*



# Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to Vehicle Settings on the Infotainment System on how to turn Auto Door Lock/Unlock ON/OFF.

*Refer to section 4 in the Owner's Manual for more information.*

# Power/Heated Outside Mirrors

 
Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster\* button is located on the climate control system panel.

*Refer to section 8 in the Owner's Manual for more information.*

# Power Folding Outside Mirrors\*

Move the switch **A** to the left or right to select mirrors. Then press arrows **B** to adjust mirror position.

To both fold and unfold the outside rearview mirrors, press the folding mirror button **C** as pictured.

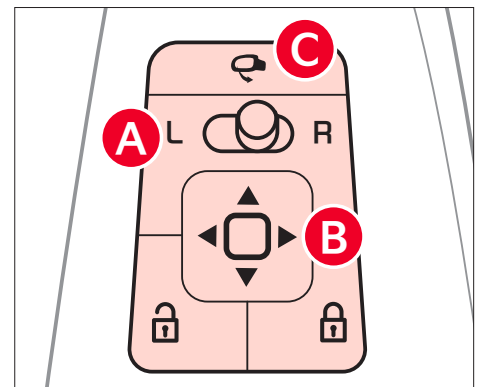

*(Driver's Door Controls)*

### QUICK TIP

To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key.

**REMINDER:** To lock position of mirrors, toggle switch to the neutral (center) position.

*Refer to section 4 in the Owner's Manual for more information.*



 
## Headlights & High Beams

### To operate:

- Rotate lever to change the Headlight function
- Push lever away from you to turn High Beams ON
- Pull lever toward you to flash Headlights/High Beams



[High Beam Assist \(HBA\)](#)

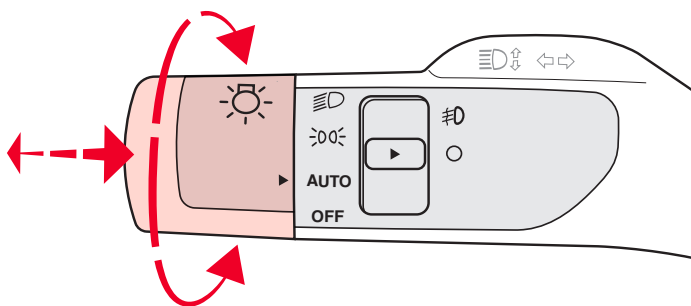

|       |                                                                 |
|-------|-----------------------------------------------------------------|
|       | Headlight position ON                                           |
|       | Parking light position                                          |
| AUTO* | Auto Light Position / Daytime Running Lights / High Beam Assist |
| OFF   | Headlight OFF position                                          |

**AUTO Light position** - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**Daytime Running Lights (DRL)** - DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- The vehicle is turned off

### REMINDERS:

- DRL only operates during the daytime
- The DRL system turns off when the headlights are ON, parking brake is applied or the front fog lights are turned on

Refer to section 5 in the Owner's Manual for more information.



### High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.

When switch is in the AUTO position and the vehicle's ignition or the Start/Stop button is on, the HBA will operate. To turn HBA off, change the switch setting.

#### REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle while using the high beams
- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

*Refer to section 5 in the Owner's Manual for more information.*

 


### Turn Signals & Fog Lights\*

#### To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate switch to turn Fog Lights ON/OFF

**REMINDER:** Headlights must be ON for Fog Light operation.

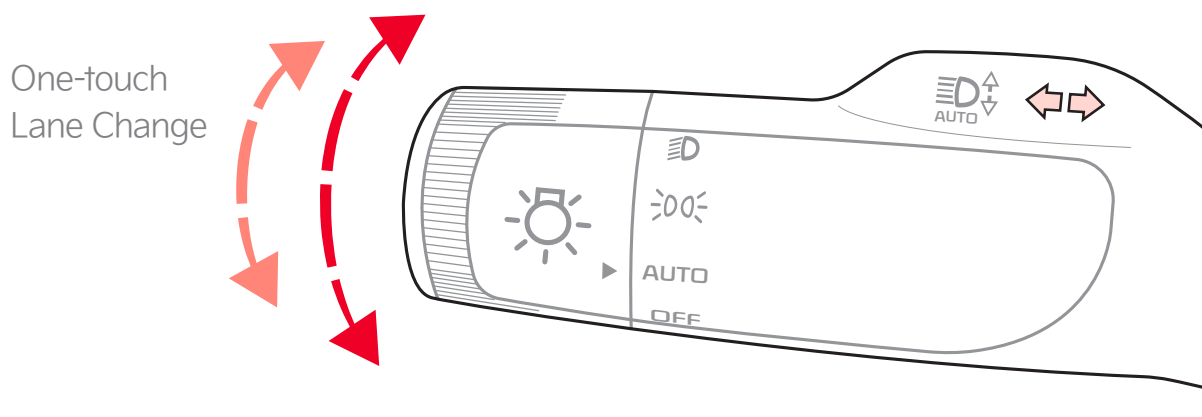

**One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to Vehicle Settings on the Infotainment System.

*Refer to section 5 in the Owner's Manual for more information.*




### Heated Steering Wheel\*

 Press the Heated Steering Wheel button **A** to turn the feature ON. The indicator light will illuminate and the steering wheel will begin to warm.

- **Level 2 (High):** Automatically switches to Level 1 after approximately 30 minutes.
- **Level 1 (Low):** Remains active until the vehicle is turned off.

To turn the feature OFF, press and hold the Heated Steering Wheel button until the indicator light turns off.

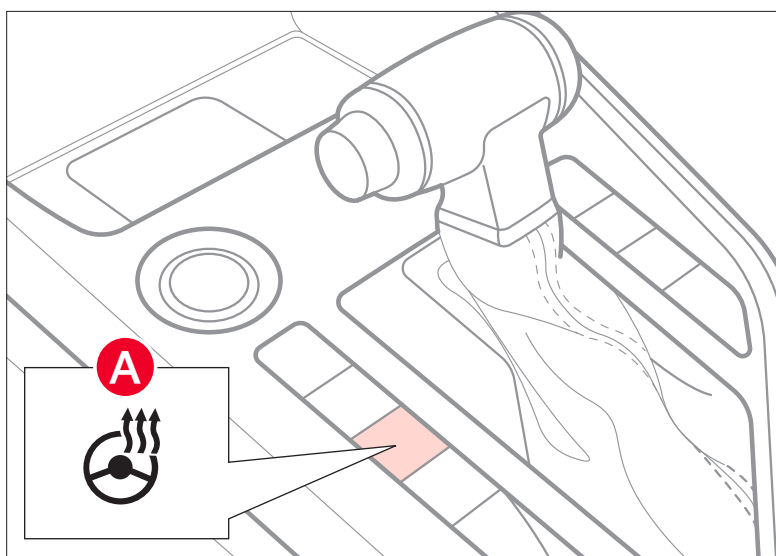

(Located on center console)

#### QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

**REMINDER:** If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 5 in the Owner's Manual for more information.



## Windshield/Rear Wipers & Washers

### To operate Windshield Wipers and Washers:

- Move lever Up/Down to change Wiper modes **A**
- Press switch **B** Up/Down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe **C**

 


[Wipers and Wiper Stalk](#)

**Rain Sensing (Auto Control Wipe):** The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To vary the speed setting, press the Wiper Switch **B** up/down.

If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system.

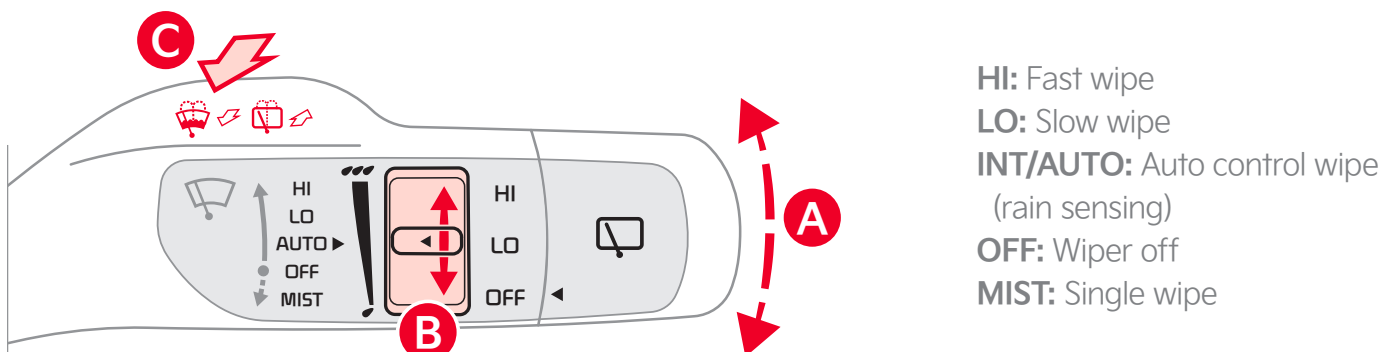

### QUICK TIPS

- Pressing lever up increases Intermittent wipe frequency and wipe speed. Pressing lever down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use
- LO and HI sets wiper speed. No intermittent wipe function on Rear Wipers

### To operate Rear Wiper & Washer:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

**REMINDER:** Set the Wiper to OFF to deactivate Rain Sensing, when going through the Car Wash to prevent wipers from turning on.

*Refer to section 5 in the Owner's Manual for more information.*



 
### Tilt/Telescoping Steering Wheel<sup>†18</sup>

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.



[Tilt/Telescoping/  
Heated Steering  
Wheel](#)

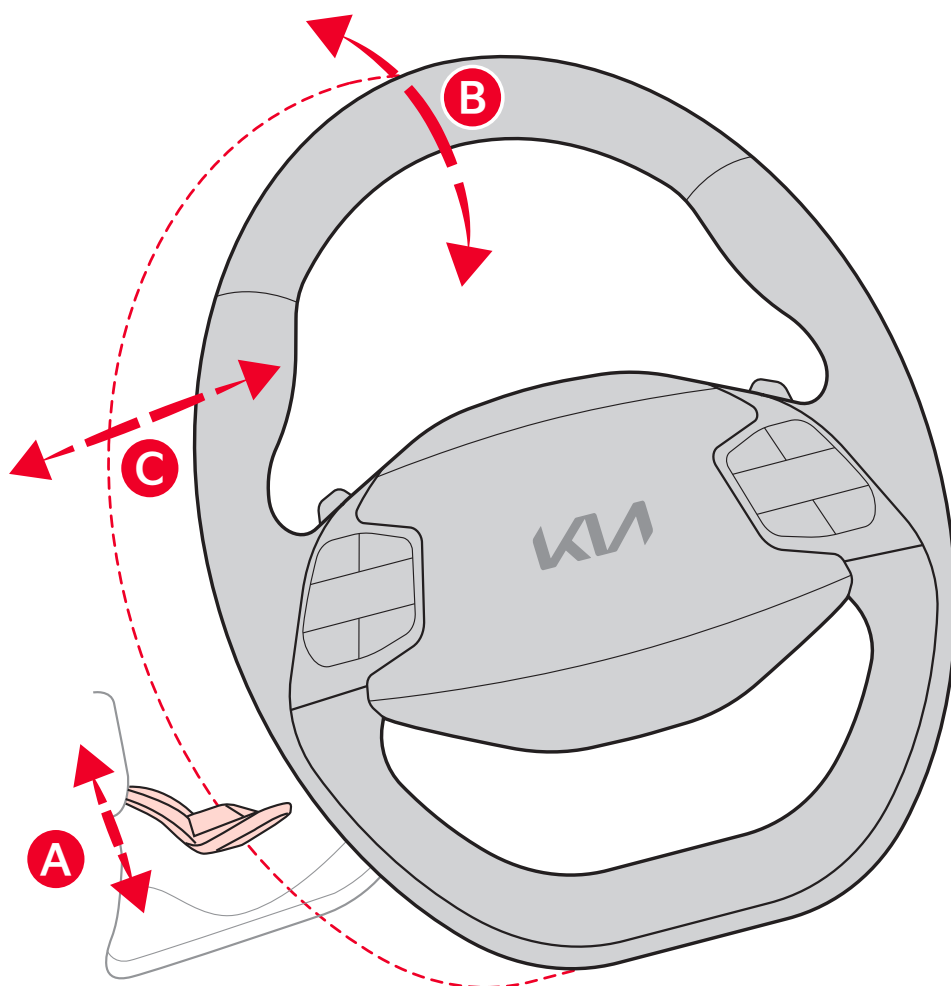

#### QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

*Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.*

 
*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*For more information, refer to section 5 of the Owner's Manual.*



## Bluetooth® Wireless Technology†3,16


- A Volume button:** Press up/down to raise/lower speaker volume  
**Mute button:** Press to mute the microphone during a call
- B Voice Recognition Button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press any other button to exit voice recognition; press and hold to start voice recognition of a connected smartphone via phone projection (button operation may vary depending on smartphone specifications)

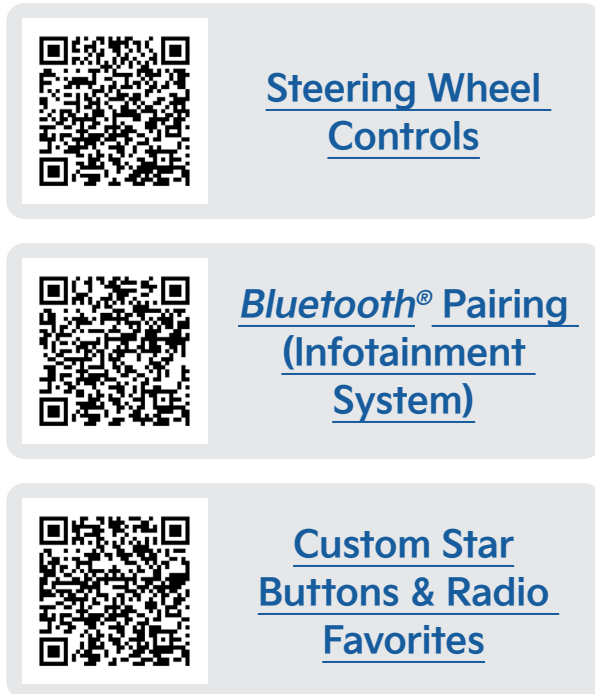

### Kia Connect†1 with Navigation\*:

When enrolled with a Kia Connect†1 subscription, press this button to activate the Kia Connect†1 Voice Assist to use navigation guidance and search destinations

 - C Call/End Call button:** Press to receive/place/end calls. In vehicles with navigation, if no phone is paired, press the call button to pair a phone
- D Custom button ★:** Press to go to the pre-selected menu/feature. Press and hold to program the Custom Button, then select an available feature you would like the Custom Button to open

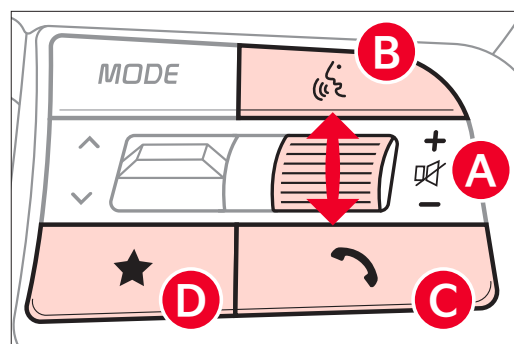

[Continued on next page](#)



## Bluetooth® Wireless Technology<sup>†3,16</sup>

[Continued from previous page](#)

**Pairing a Phone:** First, press the **SETUP** key on the Infotainment System. Then:

- Press DEVICE CONNECTIONS, then DEVICE CONNECTIONS again, and press ADD NEW (ensure your smartphone has *Bluetooth®* turned on)
- Select the Vehicle Name you see on the Infotainment System screen in the searched *Bluetooth®* devices on your phone
- Confirm the verification code matches and approve
- Follow the onscreen prompts on the Infotainment System or number



[Automatically  
Activated  
Bluetooth®](#)



[Phone - Placing &  
Receiving Calls](#)

### QUICK TIPS

- Phone book transfer upload time varies by phone model and with the number of phone book entries
- When using the voice command feature, wait for the system BEEP before speaking the command
- Because of differences in phone quality, service providers and *Bluetooth®* Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple *Bluetooth®* devices. See the Car Multimedia System User's Manual for more information on setup and limitations
- During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future *Bluetooth®* connection requests

[Continued on next page](#)

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations. For more information, refer to the Car Infotainment System Quick Reference Guide. For *Bluetooth®* Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners section, or call Consumer Information for *Bluetooth®* Technology at (800) 333-4KIA.*

# Bluetooth® Wireless Technology†3,16

[Continued from previous page](#)

## How to Place a Call

 
- **Option 1:** Press the Call/End Call button **A** (displays the phone screen with call history)
- **Option 2:** Press the Voice Recognition button **B**. Then say the command “Call {name}” or “Dial {number}” followed by contact name or number



[Voice Recognition Tips](#)



[Voice Recognition - Wake Up Word](#)

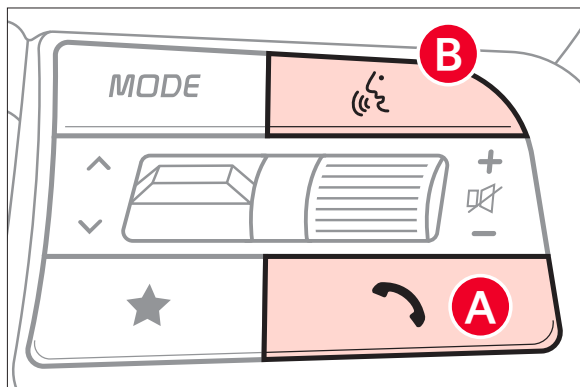

### QUICK TIP

When using the voice command feature, wait for the system to BEEP before speaking the command.

## Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts. To help optimize the *Bluetooth®* Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names (e.g., “John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (e.g., @, &, #, /, -, \*, +, etc.)
- Avoid using acronyms (e.g., “In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (e.g., “Doctor Smith” vs. “Dr. Smith”)

[Continued on next page](#)



# Bluetooth® Wireless Technology<sup>†3,16</sup>

[Continued from previous page](#)

### QUICK TIPS

- **Bluetooth® Music Streaming:** If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and turn off A/C - Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say "Help" to get a list of available commands



## Steering Wheel Audio Controls<sup>†16</sup>

- A Audio MODE button:** Press to cycle through FM/AM/SiriusXM<sup>®†15</sup>/Media modes



[Steering Wheel Controls](#)

**Audio System ON/OFF:** Press to turn power on. Press and hold to turn power off

 
- B Seek/Preset button:** FM/AM/SiriusXM<sup>®†15</sup> Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek

**Media Mode:** Press up/down to move Track Up/Down. Press & hold up/down to fast forward/rewind (except for *Bluetooth*<sup>®</sup> Audio)

- C Volume button:** Press up/down to raise/lower volume

**Mute button:** Press to mute all audio

- D Custom button ★** - Press to access user-selected features. Press and hold the button to select one of the features available

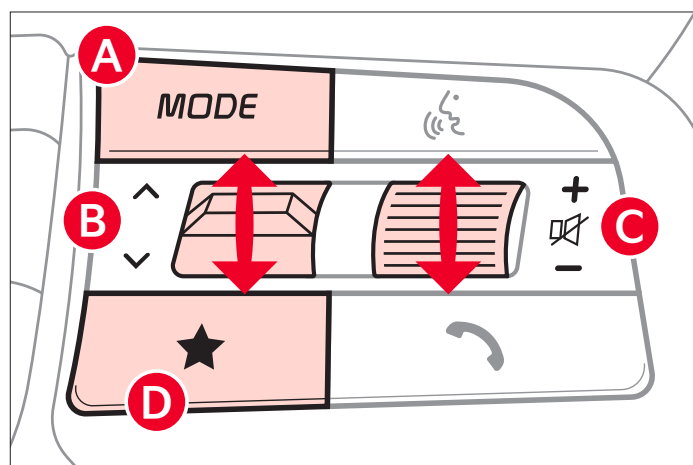

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.*

*Your vehicle's steering wheel buttons may differ from those in the illustration.*



## Android Auto™ Setup<sup>† 3,17</sup>

**Android Auto™ compatible smart-phone setup:** Download the Android Auto™ app from the Google Play™ Store<sup>†3</sup>. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.



[Wireless  
Android™ Auto  
Video](#)

### Cable Connection setup for Android Auto™:

1. Press the **SETUP** key on the Infotainment System
2. Press Device Connection, select Phone Projection Settings, Android Auto, then select Enable Android Auto. Review all terms, conditions and requests on the Infotainment System and phone. If you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the Infotainment System home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

### QUICK TIPS

- If Android Auto™ randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the phone manufacturer's website for Android Auto™ app concerns

[Continued on next page](#)

Android Auto and Apple CarPlay run on your smartphone cellular data service. Normal data rates will apply.



# Android Auto™ Setup<sup>† 3,17</sup>

[Continued from previous page](#)

### REMINDERS:

- Android Auto™ compatibility requirements for connection:
  - **Kia Connect<sup>†1</sup> with Navigation\* (USB cable & wireless connection):**  
OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
  - **USB cable connection** - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
  - **Wireless connection** - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to the Car Infotainment System Quick Reference Guide for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.*



## Apple CarPlay® Setup<sup>†3,17</sup>

### Apple CarPlay® Setup with a cable

**connection:** Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable.



[Wireless  
Apple CarPlay®  
Video](#)

1. Press the **SETUP** key on the Infotainment System
2. Press Device Connection on the screen, select Phone Projection Settings, then select Apple CarPlay®
3. Select Enable Apple Carplay. Review all terms, conditions and requests on the Infotainment System and phone. If you agree, accept them in order to use Apple CarPlay®
4. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

### QUICK TIPS

- If Apple CarPlay® randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data (preferably use the cable provided with your iPhone)
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the phone manufacturer's website for Apple CarPlay® app concerns

### REMINDERS:

- **Apple CarPlay® compatibility requirements for connection** (Kia Connect<sup>†1</sup> with Navigation\* [USB cable & wireless connection]): iOS® software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Refer to the Car Infotainment System Quick Reference Guide for more information. iPhone is a registered trademark of Apple Inc.*



## Kia Connect Activation<sup>†1</sup>

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your Infotainment System:
  - a. Press the **SETUP** button
  - b. Press the DATA/NETWORK button
  - c. In Kia Connect, press ACTIVATE



[Kia Access App Overview](#)



[Kia Connect Activation](#)

Follow the instructions on the screen to proceed with activation, or the steps below:

1. Read the Terms of Service and press AGREE
2. Enter number or email address to receive a verification code, then press OK and SUBMIT
3. Click on the link and a page will open requesting you to create an account or log in to your account; provide the information needed and select SAVE to create the account
4. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
5. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App<sup>†2</sup>. After installing the app, log in and enjoy

### QUICK TIP

If you already have a Kia Owners Portal account, you can use the same phone number or email that's registered to that account. You will just need to enter the password prior to receiving the verification code.

**REMINDER:** This vehicle is equipped with over-the-air system updates.

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*For more information, refer to the Car Infotainment System Quick Reference Guide.*



# Kia Connect Assistance<sup>\*†1</sup>

 
**Kia Connect<sup>†1</sup>** **A** (non-navigation systems): Press to activate phone projection with Android Auto™ or Apple CarPlay® (smartphone must be connected via wireless or USB cable)



[Kia Connect Assistance](#)

**Kia Connect<sup>†1</sup>** **A** Voice Local Search (systems with navigation): Press to connect to the search function to find points of interest or other locations, like “cafe”

**Roadside Assist**  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services

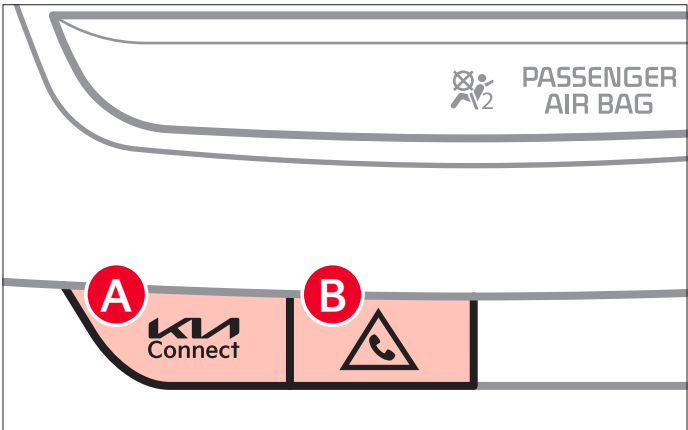

(Buttons on overhead console\*)

For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

†LEGAL DISCLAIMERS ON [PAGE 115](#) | \*IF EQUIPPED



## Kia Access App<sup>†2</sup> Download

Go to an app marketplace to download the Kia Access App. Once you download the app, make sure you register your vehicle and start an account (refer to Kia Connect<sup>†1</sup> Activation page). Get to know your new Kia and the available convenient features on the app.



[Download the Kia Access App](#)



### QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect<sup>†1</sup>. If these conditions are not met, remote command may not execute or may take a long time. It will also affect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the vehicle
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect<sup>†1</sup> app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect<sup>†1</sup> app, restart the vehicle

*further Kia Connect link operations, refer to the Car Infotainment System Quick Reference Guide.*



## Kia Access App<sup>†2</sup> Features Guide

The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles



[Kia Access App  
Features Guide  
Link](#)

*Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.*



# Kia Connect Infotainment System w/ Navigation<sup>+9\*</sup>



[Kia Connect  
Infotainment  
System](#)



[Infotainment  
System Driver  
Profiles](#)



[Navigation System  
Tips](#)



[Benefits of  
Over The Air  
\(OTA\) Updates](#)

**To adjust the sound settings from any audio mode:** Press the SETUP button on the Infotainment System, then the onscreen SOUND button. Select the menu item to change settings, then use the onscreen buttons to adjust settings.

**Radio Presets:** To save a preset, press the star icon next to the station.

**SiriusXM<sup>®†15</sup> Smart Favorites:** In MEDIA mode, choose SiriusXM<sup>®†15</sup>, then select any of the first six favorites. During song or program play, tap the skip backward icon to start from the beginning of the song or program. Tap the play live icon to return to the live broadcast.

**Custom Key ★:** To program a custom key, press and hold the Custom Key, then select one of the available features you would like the Custom Key to open.

**Software updates:** To keep your software up to date, Kia provides over-the-air updates. You can also click the link above, snap the QR code to watch the video, or visit the official Kia update webpage at <https://update.kia.com>. Note, visiting a dealer for software update may include an additional charge.

 
[\*Continued on next page\*](#)

*For further operational information, refer to the Car Infotainment System Quick Reference Guide.*



## Kia Connect Infotainment System w/ Navigation<sup>+9\*</sup>

[Continued from previous page](#)

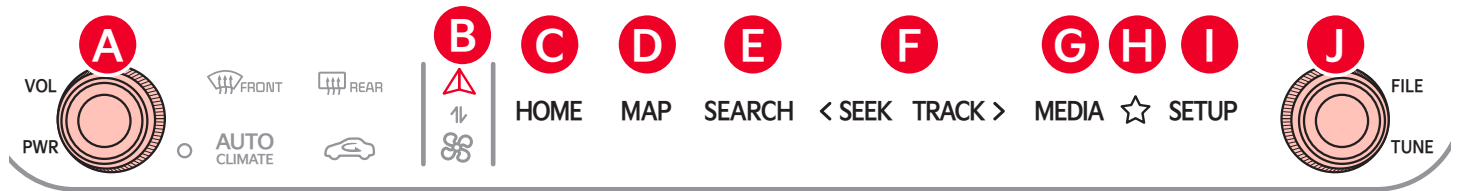

- A POWER button/VOLUME knob:** Press to turn the Media ON/OFF. Press and hold to turn off the screen and sound. Rotate to adjust the system volume (except for navigation sound)
- B Infotainment/Climate switch button:** Switch between control panel functions. Press/hold to access the control panel default settings screen
- C HOME button:** Press to go to the Home screen. Press and hold to turn the Quick Control function ON/OFF
- D MAP button (Systems with navigation):** Pressing the Map button displays the Navigation\* System map and your current location  
**MAP button (Systems without navigation):** When a phone is paired and connected via phone projection, press to display the phone's native map screen. When a phone is not connected, it will display the phone projection setting screen
- E SEARCH button:** Displays the Search screen
- F SEEK/TRACK buttons:** While listening to the radio, press to change the station. While playing media, press to change the track/file
- G MEDIA button** (FM/AM, SiriusXM<sup>®†15</sup>, USB, Bluetooth<sup>®†3</sup> Audio): Press to play the connected media. Press and hold to display the Media source options
- H Custom button:** Press to play the user-defined function. Press and hold to display the function settings screen
- I SETUP button:** Displays the Settings screen. Press and hold to display the version information screen
- J TUNE knob:** While listening to the radio, press to adjust the frequency or change the station. While playing media, press to scan music or files. During scanning, press to select the current channel, music or file. While on the map screen, zoom in or out on the map (except for navigation sound)

Image is for illustrative purposes only and may not reflect actual feature or operation.

[Continued on next page](#)



# Kia Connect Infotainment System w/ Navigation<sup>+9\*</sup>

[\*Continued from previous page\*](#)

### QUICK TIPS

- Volume level between different audio modes:
  - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay® (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the vehicle is running to prevent battery discharge
- At any time, you can interrupt Kia Connect<sup>†1</sup> Command Feedback by pressing any button on the steering wheel

### REMINDERS:

- To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

For further Kia Connect<sup>†1</sup> with Navigation operations, refer to the Car Infotainment System Quick Reference Guide.



# USB-C Ports & Power Outlets\*

**Multimedia USB-C Port **A**:** Use the Multimedia USB-C port to connect audio devices and smartphones.

 


[USB-C Ports and Power Outlets](#)

**The USB-C port **A**** can also be used to stream data. Press the button **B** to cycle between charging and streaming data. When the top LED is illuminated, the port is charging only.

When the bottom LED is illuminated, the port is streaming and charging.

**Power Outlets **C**:** Use the power outlet for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

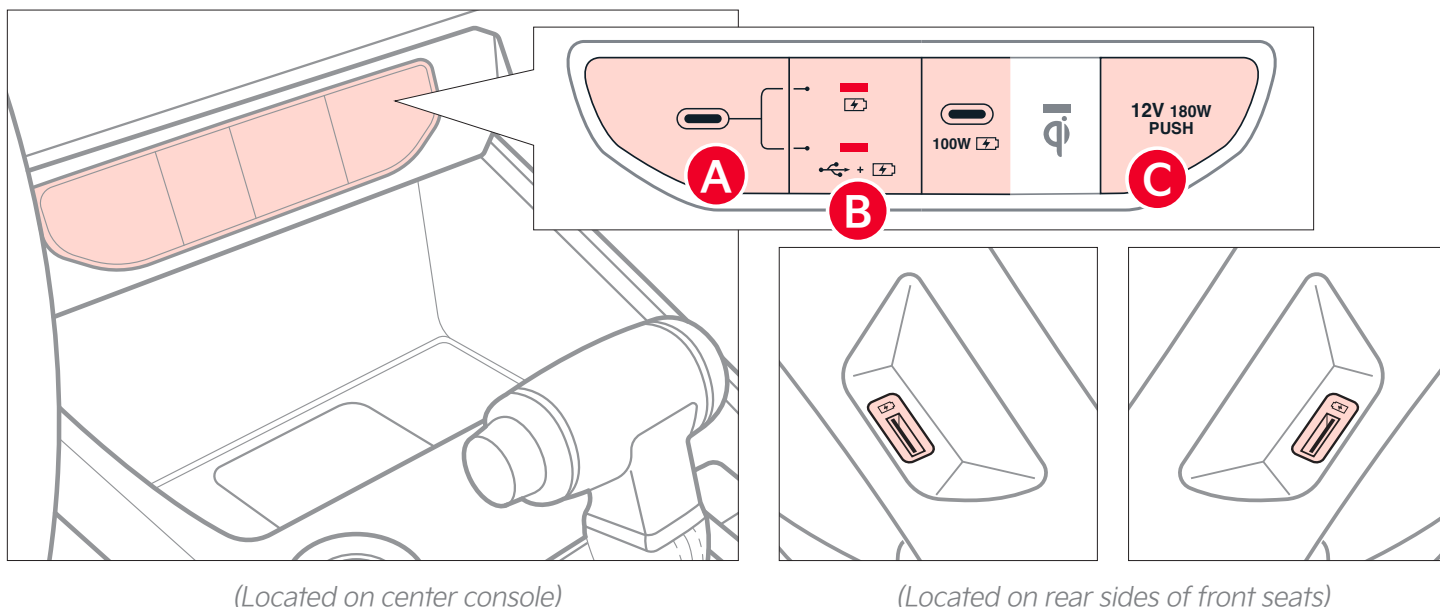

(Located on center console)

(Located on rear sides of front seats)

### QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

### REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time with the Start/Stop button in the ACC position (Vehicle OFF) may cause the battery to discharge
- The Multimedia USB-C data port is located to the left of the Power Outlet. The USB Charger Port does not support data transfer

 
*Refer to section 8 in the Owner's Manual for more information. Button configuration may vary. Images are for illustration purposes only and may not reflect actual feature or operation.*



### AC Inverter\*

The AC inverter supplies 115V/150W electric power to operate accessories or devices.

To use the AC inverter, open the AC inverter cover and connect a plug to it.  
The AC inverter is ON when the vehicle is on.

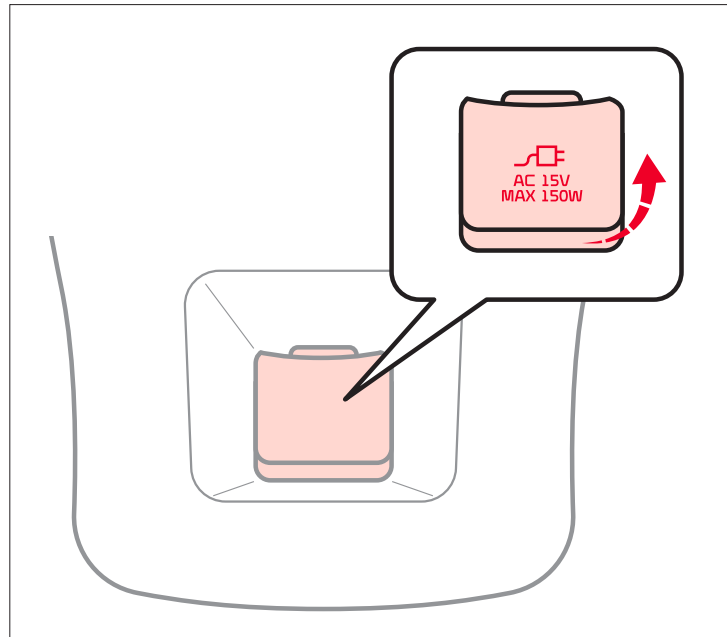

*Refer to section 8 in the Owner's Manual for more information.*




## Wireless Smartphone Charging System\*

 Charge a compatible Qi™ Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



[Wireless Smartphone Charging](#)

- Enable Wireless Charging in the User Settings on the Infotainment System, select Convenience, then Wireless Charging System for Mobile Devices\*
- Place a compatible smartphone on the center of the charging pad
- Indicator light **B** may change to amber once the wireless charging begins
- Once charging is complete, the orange light may change to green

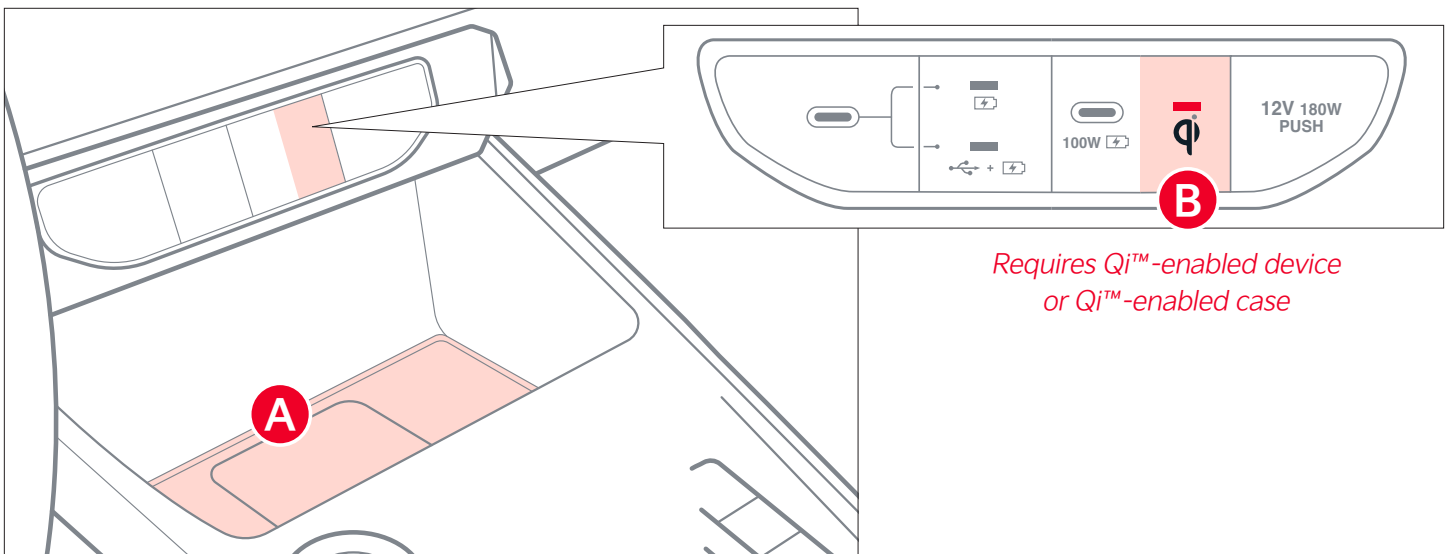

(Located on center console)

Requires Qi™-enabled device  
or Qi™-enabled case

[Continued on next page](#)

Refer to section 8 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/ or features may vary.

# Wireless Smartphone Charging System\*

[\*Continued from previous page\*](#)

## QUICK TIPS

- The smartphone must be a compatible phone with Qi™ function available
- Wireless charging must be enabled in user settings
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area
- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle

## REMINDERS:

- The smartphone must be a compatible Qi™ certified phone with Qi™ function available. Some smartphone models are not Qi™ certified, which may affect the availability, speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable. As a result, higher device operating temperatures may be experienced during use
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

 


# Automatic Climate Control

- A** Driver Temperature Control knob / OFF button
- B** Front Windshield Defroster
- C** Rear Windshield Defroster
- D** AUTO Climate
- E** Recirculated Air button
- F** Toggle between Climate and Infotainment Controls; press and hold to set the default mode displayed
- G** Driver Only Climate display
- H** Fan Speed Control knob
- I** Mode Selection 
- J** A/C On-Off
- K** SYNC (Dual Zone)
- L** Passenger Climate display
- M** Passenger Climate Control knob



[Climate Control - Switchable Controller](#)

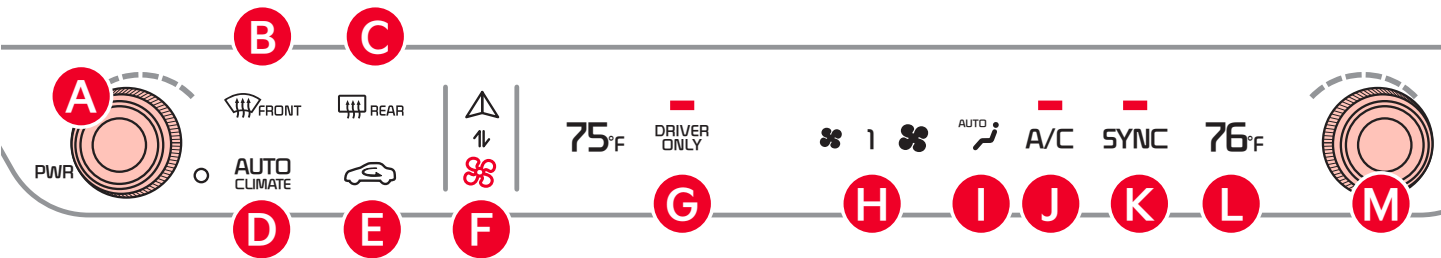

**Air Flow Modes **I**** : To select Air Flow Modes, press the Mode selection button

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

[Continued on next page](#)

Refer to section 8 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.

\*IF EQUIPPED



# Automatic Climate Control

[Continued from previous page](#)

## Climate Control Auto Function

Press AUTO to select Full Auto Operation. The AUTO setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected. Turn temperature control knob **A** to the desired temperature.

**Auto Defogging System:** Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press and hold the Front Defrost button  for three seconds when the vehicle power is on (the defrost button light will flash three times and the ADS OFF icon will illuminate). To turn Auto Defogging on again, press and hold the Front Defrost button  again for three seconds and the defrost button light will flash six times and ADS OFF icon will turn off.

**Driver Only Ventilation:** Driver Only Ventilation restricts air flow to the driver's side vents only. This can help to improve driving range by limiting the power drawn from the battery. Press DRIVER ONLY button **B** to enable air flow through the driver's side vents only.

## Defrost Outside and/or Inside Windshield:

1. Set Front Fan Speed **C** to the highest position
2. Set **Temperature** to **Hot** **A**
3. Press the **Front Defrost** button  **D**



[Continued on next page](#)

*Image is for illustrative purposes only and may not reflect actual feature or operation.*

\*IF EQUIPPED



# Automatic Climate Control

[\*Continued from previous page\*](#)

### QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve defog performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

### REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the A/C and heater may allow the Energy Consumption to increase, especially excessive use of the heater



# Rotary Dial Shifter\*

Rotate dial for the following:

**P:** Park - Press to place in Park.

To release the Parking Brake, rotate dial to R, D or N

 
**R:** Reverse

**N:** Neutral

**D:** Drive



[Rotary Dial Shifter](#)

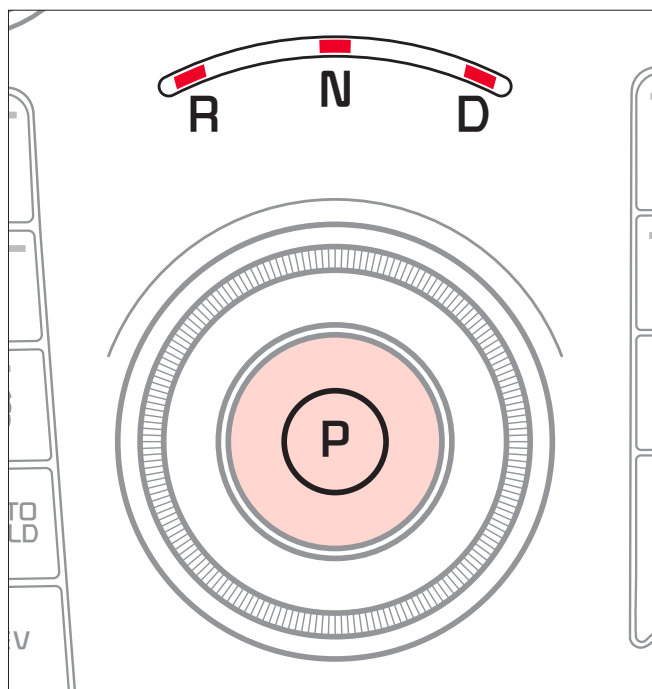

*(Located on center console below Power button)*

**REMINDER:** The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.

*Refer to section 9 in the Owner's Manual for more information.*



# Paddle Shifters\*

**Hybrids (Shift Lever)** - Move the shift lever to (D) Drive position, and then to the left gate (+/-) (Manual Mode / Sportmatic Shifting).

 


[Hybrid Paddle Switches / Paddle Shifters](#)

- Pull the left paddle shifter (-) to shift down one gear
- Pull the right paddle shifter (+) to shift up one gear

The paddle shifters do not operate when:

- Both paddle shifters are pulled at the same time
- The vehicle speed is below 2 mph
- The accelerator pedal is slowly pressed for more than 6 seconds
- The drive mode is switched from Sport to ECO

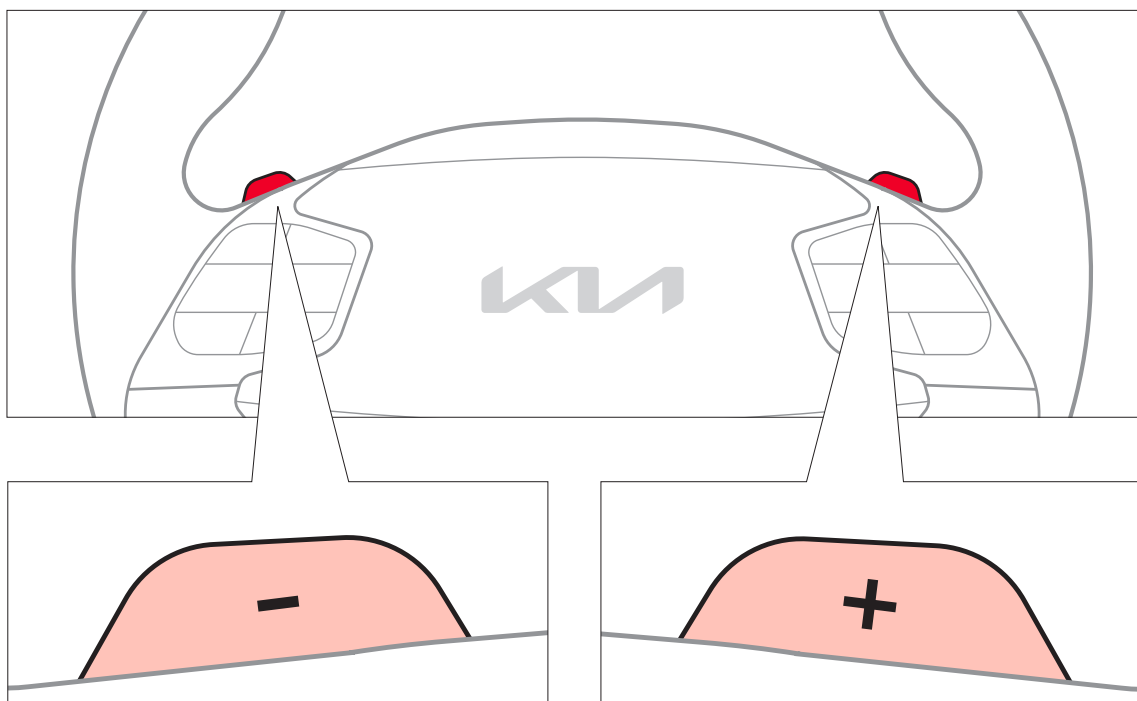

*Refer to section 9 in the Owner's Manual for more information.*



# Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, vehicle hood and liftgate must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator on the Instrument Cluster has four states:

**White: Standby** - When vehicle is in Park and at a standstill, and AUTO HOLD button **A** is pressed On, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

**Green: Engaged** - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

**Off (not illuminated)** - The indicator will turn Off when the AUTO HOLD button **A** is manually pressed Off or when the EPB is manually turned On.

**Yellow: Malfunction** - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

 
## REMINDERS:

- Auto Hold only operates when vehicle is in Drive, Reverse or Neutral
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

*Refer to section 6 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.*



[Electronic Parking Brake \(EPB\) / Auto Hold](#)

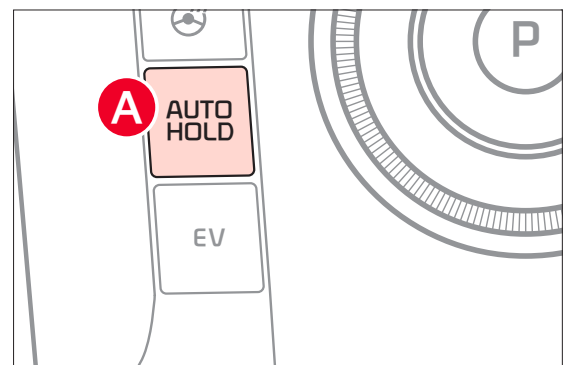

(Located on Center Panel)



# Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

## Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light **(P) BRAKE** is illuminated on the Instrument Cluster.

 
## Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

To release EPB manually, depress the brake pedal, then press the EPB switch **A** down, with the ignition switch in the ON position. Ensure that the indicator light **(P) BRAKE** is OFF.



[Electronic Parking Brake \(EPB\) / Auto Hold](#)

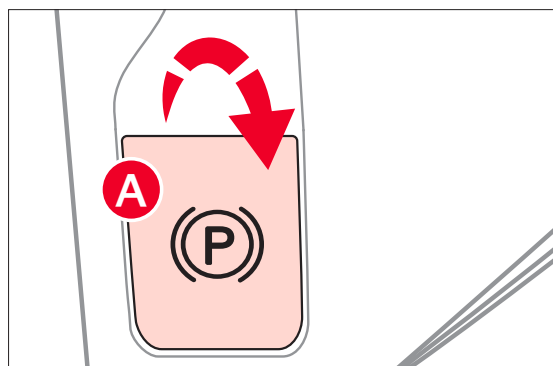

(Located on Center Panel)

## QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

## REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to section 6 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.



## Seat Warmers<sup>\*†14</sup> / Ventilated Seats<sup>\*</sup>

### A Seat Warmers

 
- Press the button once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



[Seat Warmers/  
Ventilated Seats](#)

### B Ventilated Seats

- Press the button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

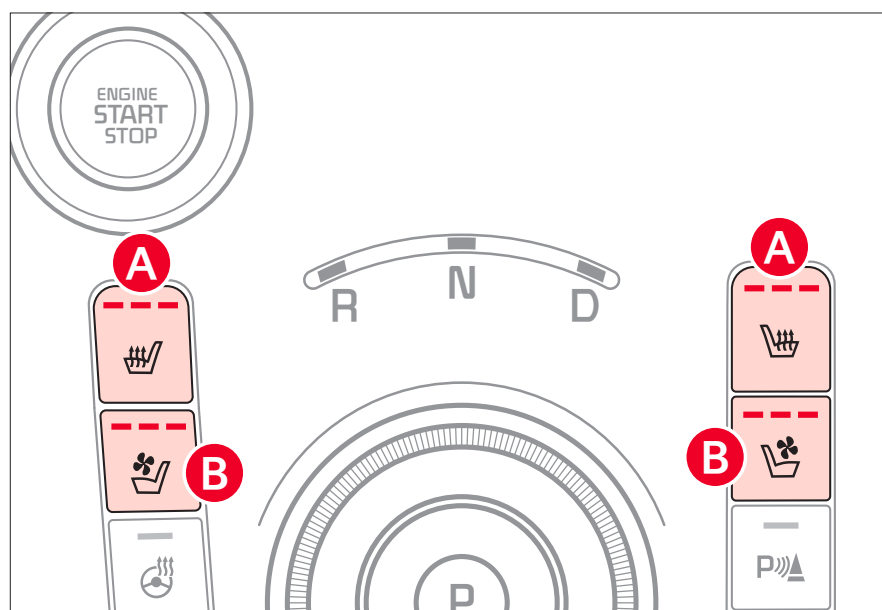

(Center Console)



(Rear controls located on passenger door)

### QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default
- Rear seat warmers **C** only have two settings: high and low

**REMINDER:** Use extreme caution when using the seat warmers to avoid burns.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 8 in the Owner's Manual for more information.*



# Driver Position Memory System<sup>\*†12</sup>

 
To store a seating position into memory, first place the shifter into P (Park) while the ignition switch is ON. Then:



[Power Adjustable Driver's Seat with Memory Settings](#)

1. Adjust the driver's seat
2. Press one of the memory buttons **A** within 5 seconds.  
The system will beep twice when memory has been stored
3. "Driver (1 or 2) set is memorized" will appear on the Instrument Cluster

*Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in a loss of control of the vehicle.*

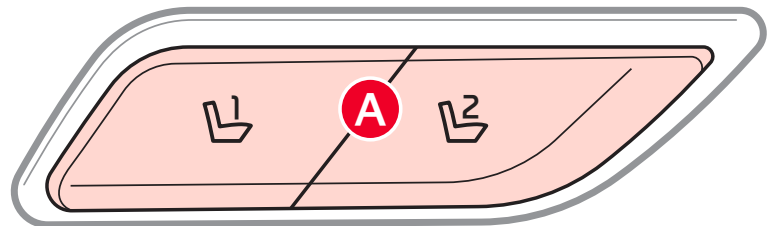


# Front Seat Headrest Adjustment<sup>†12</sup>

- To raise headrest: Pull headrest up.
- To lower headrest: Press the headrest down.

## QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

 *Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.*

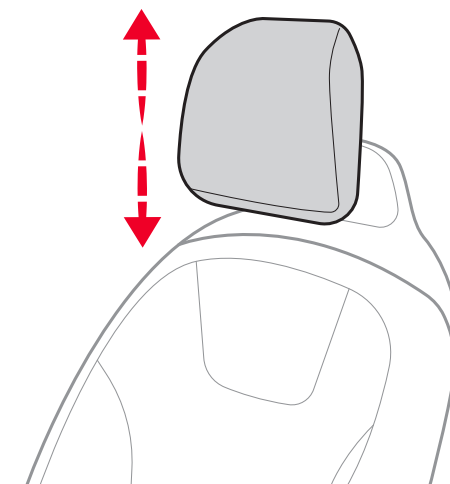



## Rear Occupant Alert (ROA) with Door Monitoring

The Rear Occupant Alert (ROA) can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats”  and a chime will sound.



[Rear Occupant Alert \(ROA\) with Door Monitoring](#)

The ROA feature is ON by default. To turn the system ON or OFF, go to Vehicle Settings on the Infotainment System, select Convenience, then Rear Occupant Alert and check/uncheck the box.

**REMINDER:** Always be sure to check the passenger areas before leaving the vehicle.



*(Message on Cluster Display)*

*Rear Occupant Alert is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle. See section 4 in the Owner's Manual for more information.*

*Image is for illustrative purposes only and may not reflect actual feature or operation.*

 
 


## Power Adjustable Driver's Seat<sup>\*†12</sup>


Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar forward/backward.




[Power Adjustable Driver's Seat with Memory Settings](#)

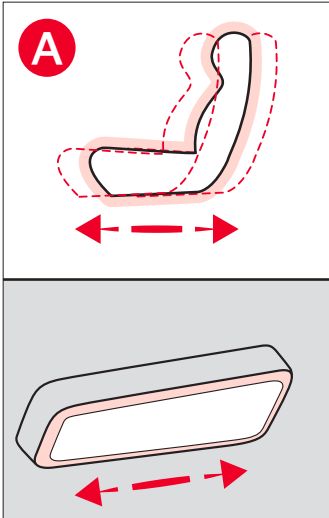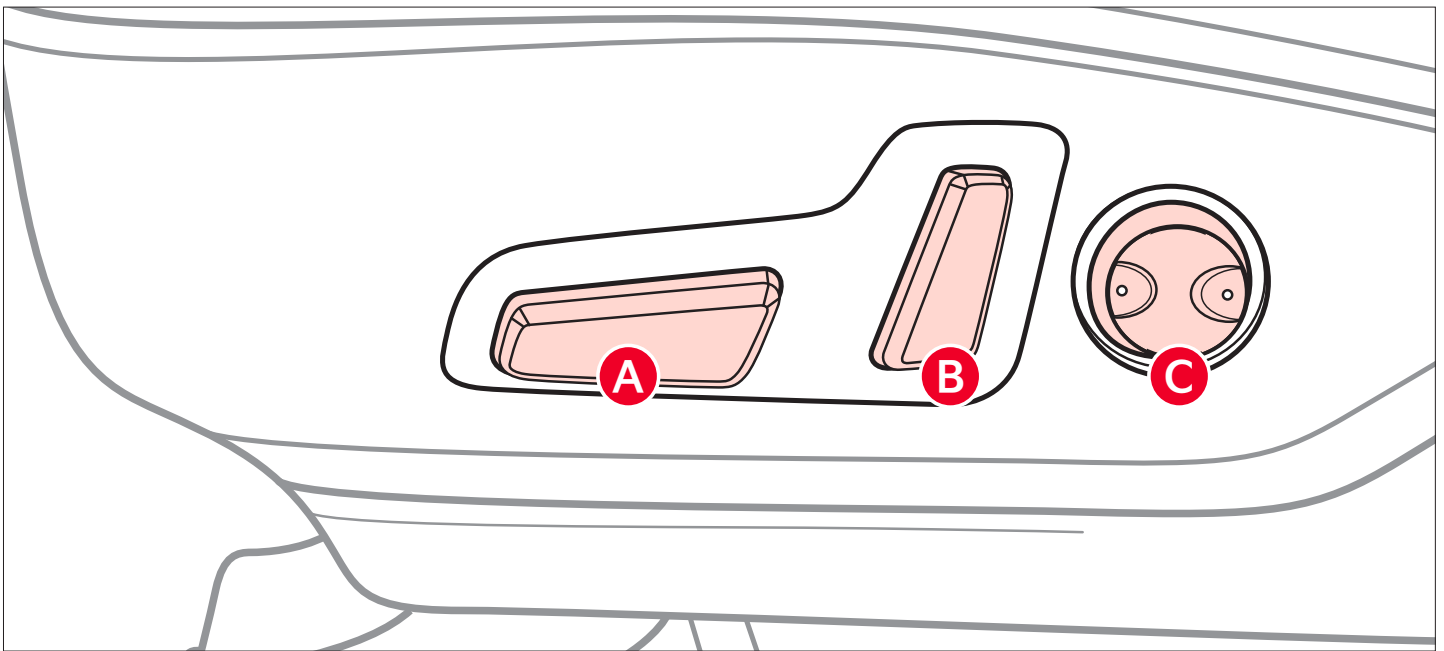


Seat

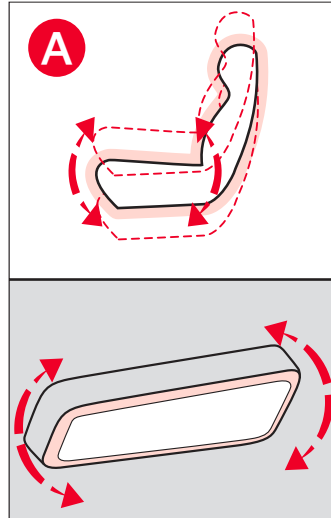 

Seat Cushion

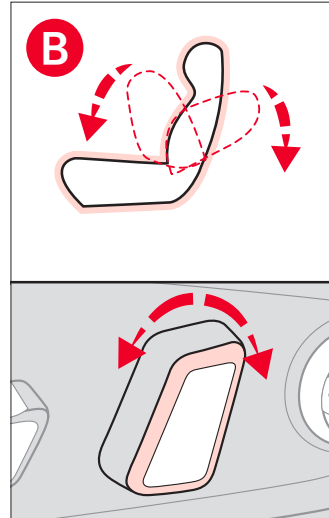 

Seatback

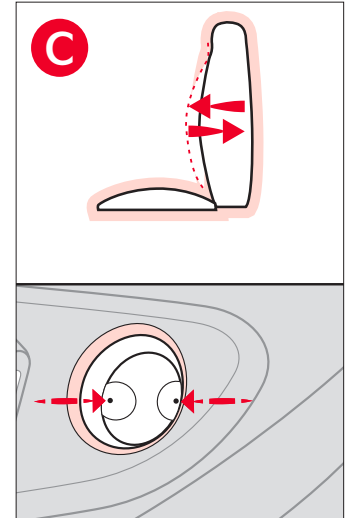 

Lumbar

**REMINDER:** Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

See section 6 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.



# 6-Way Manual Adjustable Driver's Seat<sup>\*†12</sup>

Pull lever **A** to slide Seat forward/backward.

Pull/press lever **B** up/down one or more times to adjust Seat height\*.

 
Pull lever **C** to adjust Seatback recline.



[Manual Seat Adjustment](#)

### QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

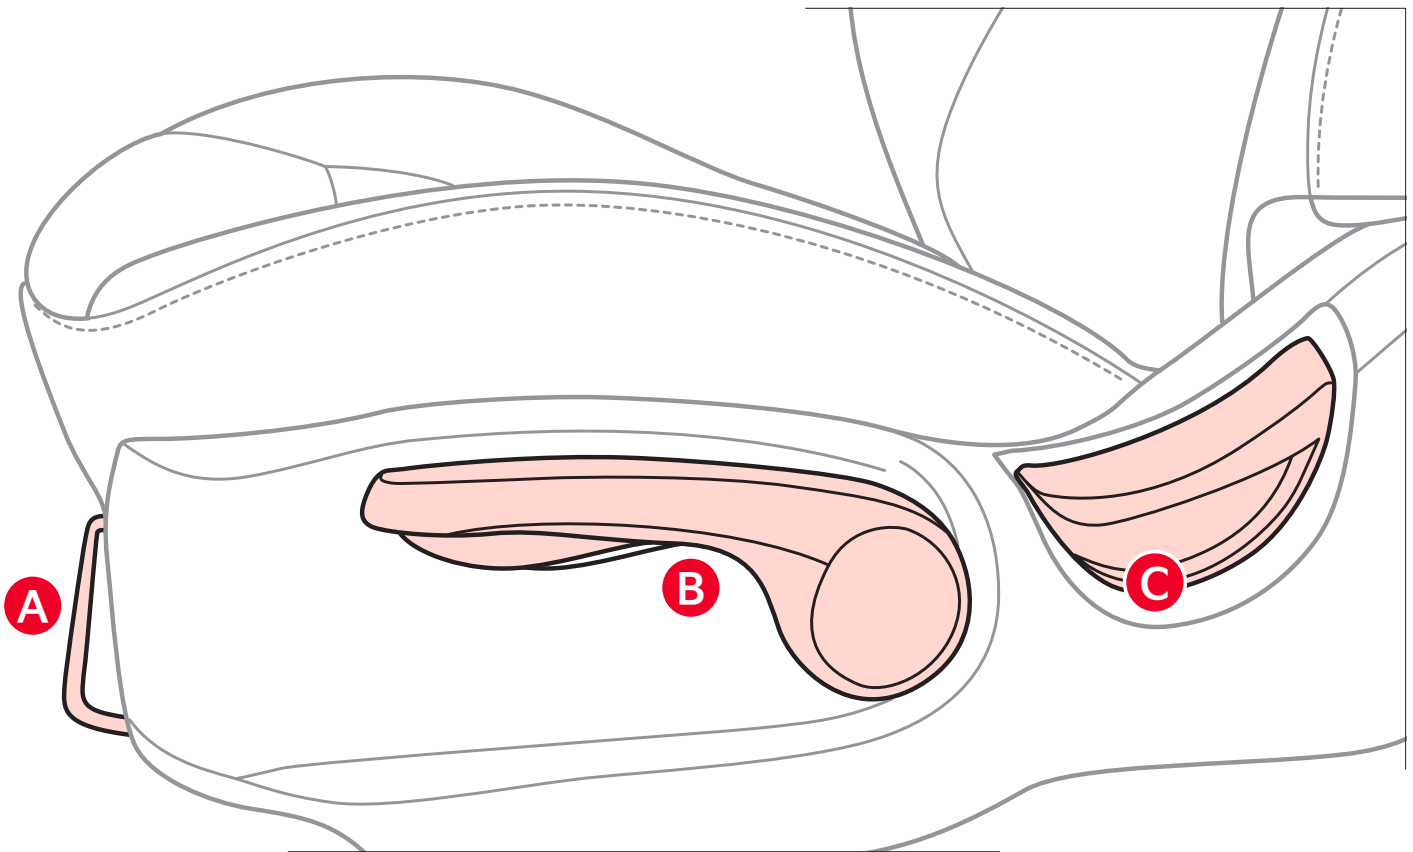

*Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.*

*Refer to section 6 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.*




# Folding Rear Seats<sup>†12</sup>
 
### To Fold:


1. Ensure the belt strap is out of way of the Seatback folding **A**.  
Insert the metal seat belt tab into the holder **B**
2. Adjust the Front Seatback to the upright position and lower the rear headrest to the lowest position
3. Pull on the Rear Seatback lock release lever **C**, then fold the seat toward the front

### To Unfold:

1. Pull the lock release lever **C** and pull and lift the Seatback backward until it clicks firmly in place
2. Return the rear seat belt to the proper position

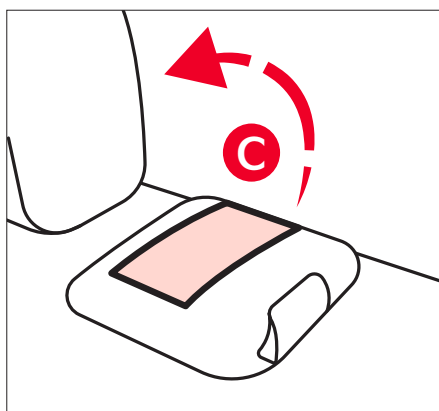

 *For illustration purposes only. Actual vehicle might be slightly different.*

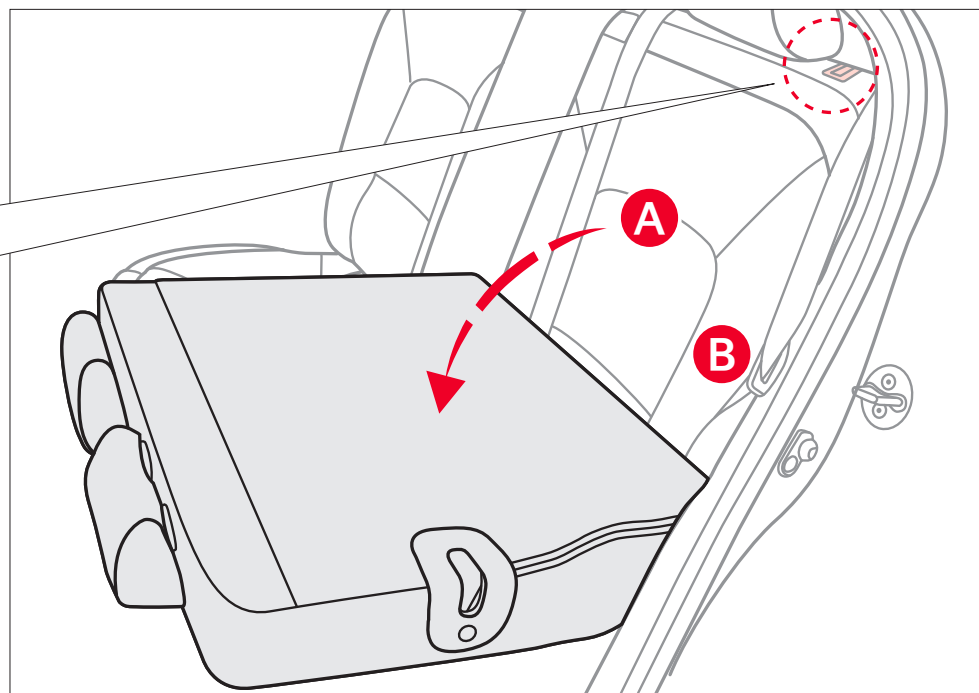

### QUICK TIPS

- It may be necessary to adjust the front seatbacks to fully lower rear seats
- Ensure the seat is locked by pressing down on Seatback and ensuring red line is NOT visible on bottom of Folder Lever

### REMINDERS:

- Before unfolding Seatback, ensure the metal seat belt tab is placed into the holder
- Always make sure the seatback is locked in place when unfolded

*Refer to section 6 in the Owner's Manual for more information. Image is for illustrative purposes only and may not reflect actual feature or operation.*

 
 


## Digital Key 2<sup>\*†3</sup>

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

### Digital Key 2 Setup:

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App<sup>†2</sup> and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System
3. Register your smartphone by going to the Vehicle Settings on the Infotainment System:
  - Press the SETUP key on the Infotainment System, then Vehicle, Digital Key **A**, Smartphone Key, then My Smartphone Key
4. On your smartphone, press Digital Key **B**, Continue To Wallet App, then Continue again, which will open the Wallet app. Follow the prompts to complete the registration/pairing of your smartphone (actual steps may vary between apps/smartphones)

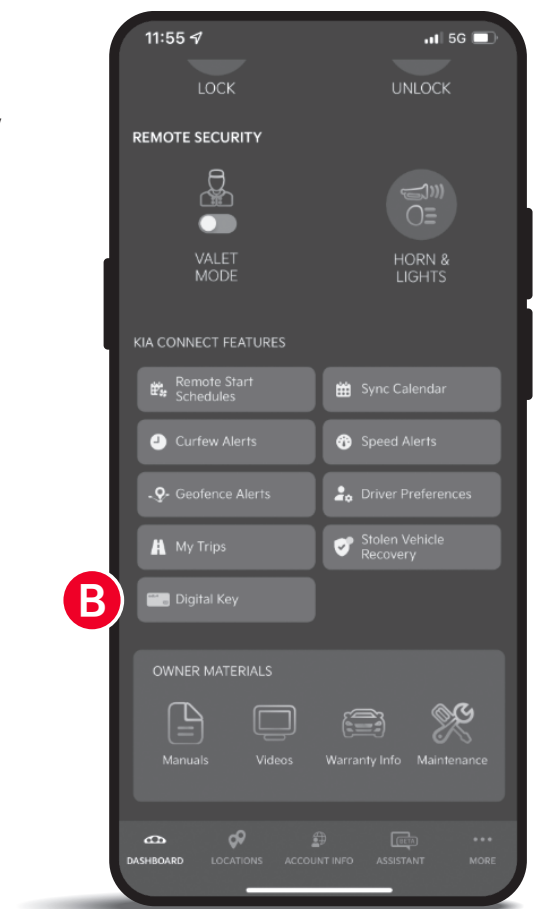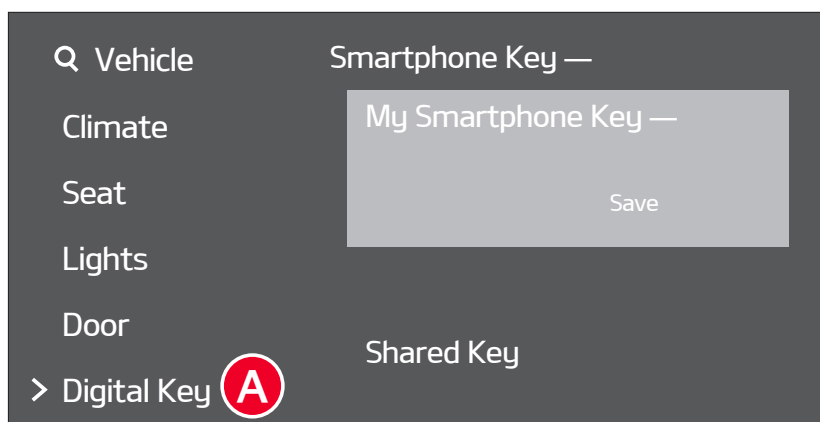

[Continued on next page](#)

Images are for illustrative purposes only.




## Digital Key 2<sup>\*†3</sup>

 [Continued from previous page](#)

5. Place your smartphone in the authentication pad (wireless charging pad) to complete registration. Click Save on the Infotainment System screen and a message will appear showing the process is in place
6. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your iPhone® Wallet or Samsung™ Wallet
7. When in the Wallet app, click on the **Digital Key** and select the menu icon to adjust other settings or use other features

### Using your Digital Key 2:

1. To lock or unlock your vehicle with Digital Key, position registered smartphone to the door handle until smartphone vibrates
2. To start your vehicle with Digital Key 2, place registered smartphone on the authentication pad **A**, press the brake pedal and the Start/Stop button

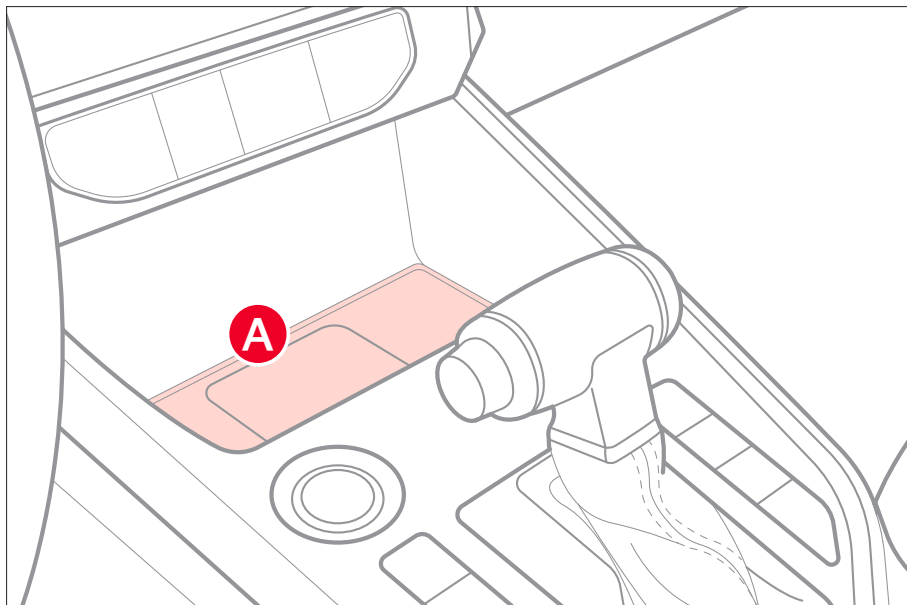

[Continued on next page](#)

*Images are for illustrative purposes only.*

# Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

## Sharing your Digital Key 2:

1. Open the Wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Under People, click on **Invite** and follow the prompts to share your Digital Key with one of your contacts Apple iPhone®/iWatch® or Samsung™ phone (actual steps may vary between apps/smartphones)



When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

## Revoking shared Digital Key access:

You can also delete a key using the Wallet app on your smartphone. Open the Wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Under People, click on the contact you desire to revoke. Then click on **Revoke Access** (actual steps may vary between apps/smartphones).

**To delete shared keys and the owner key:** Go to the Vehicle Settings on the Infotainment System. Press Setup, Vehicle, Digital Key and Smartphone Key. Then press Delete.

### QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smartphone digital key does not operate, move the smartphone around the door handle slowly until it vibrates

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

## Digital Key 2<sup>\*†3</sup>

[\*Continued from previous page\*](#)

### REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch® and Samsung™ smartphones
- Your iPhone® Wallet or Samsung™ Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
  - The smartphone is removed from the in-vehicle authentication pad
  - Changing the Infotainment System screen
  - The vehicle is powered off or the gear is shifted
  - There is no smart key in the vehicle or on your person (saving process will not begin)
  - You may need to set up the language for Samsung™ smartphones
- Currently compatible devices:
  - For Apple iPhone® (Ensure the device has the latest version of iOS®):
    - iPhone XS® or later.
    - iPhone 11® Pro or later (for passive entry or remote features on compatible cars)
  - For Apple Watch® (Ensure the device has the latest version of watchOS®):
    - Apple Watch® Series 5 or later
    - Apple Watch® Series 6 or later (for passive entry or remote features on compatible cars)
  - For Samsung Phones: Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
    - Galaxy S20™ or later
    - Galaxy Note20™ 5G or later
    - Galaxy Z Flip™ 5G or later
    - Galaxy Fold 2™ or later

*Refer to section 4 in the Owner's Manual for more information.*

 
 


## Smart Key with Remote Start<sup>†7</sup>

- A** Press to lock all doors
- B** Press to unlock driver's door.  
When activated press twice within 4 seconds to unlock all doors
- C Liftgate Button:** Press and hold for more than one second to unlock the liftgate and open manually  
**Auto Open/Close\*:** Press and hold to unlock and open automatically. Press and hold the button again to close the liftgate. Releasing the button during closing will stop operation and sound a warning chime for 5 seconds
- D** Press and hold more than one second for panic alarm. To turn off the alarm, press any button
- E Remote Start\*:** To start the vehicle, press and hold the button for more than two seconds, within four seconds of locking the doors. Press once to turn the vehicle off
- F** Manual Key (with cover)



[Smart Key & Manual Key](#)

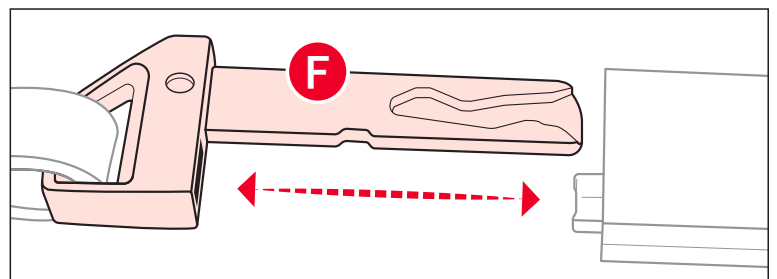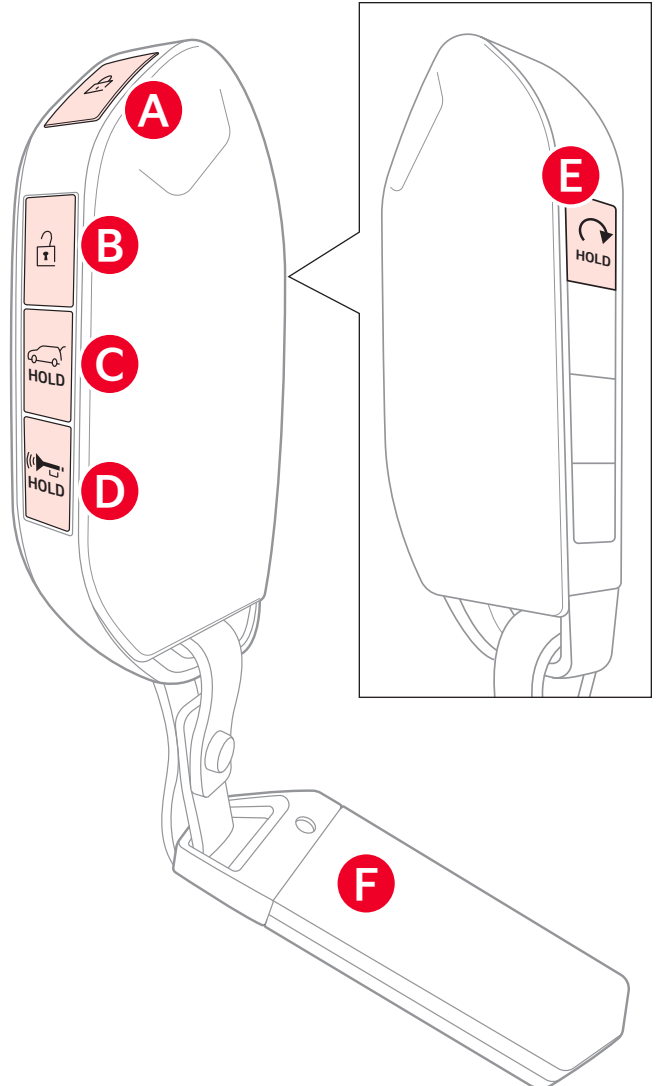

[Continued on next page](#)

See section 4 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

## Smart Key with Remote Start<sup>†7</sup>

 
[Continued from previous page](#)

**Manual Key :** Use to unlock/lock Driver's Door:

- Pull out door handle
- Remove door handle keyhole cover with Manual Key by pressing up into slot as shown **A**
- Insert Manual Key **B** and turn right to Unlock Driver's Door
- Turn twice within 4 seconds to Unlock All Doors
- Insert Manual Key and turn left to Lock All Doors
- Return keyhole cover to its original position

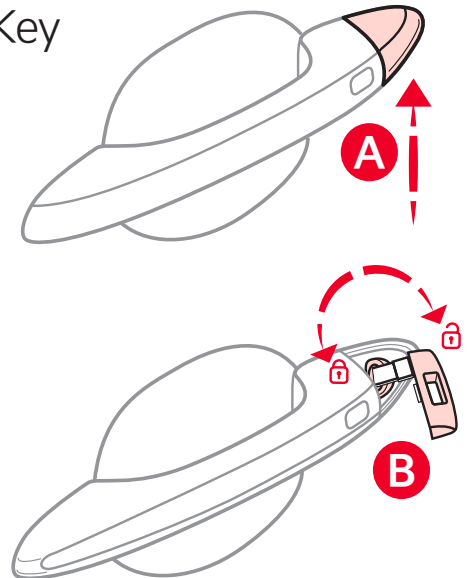

**Remote Start\*:** Lock the doors by pressing the door lock button within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button, press and hold the Remote Start button **C** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver does not enter vehicle within ten minutes of starting it, the vehicle will automatically turn off.

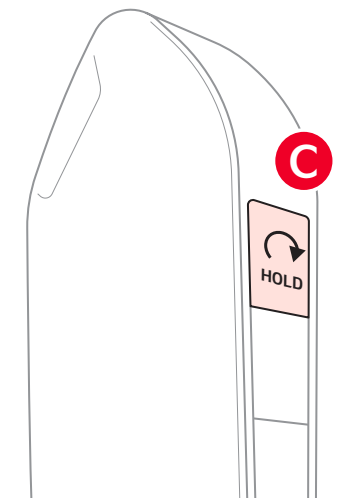 

### QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Start/Stop button (Lock button side closest) and press to start the vehicle
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

### REMINDERS:

- Remote button configuration may vary depending on vehicle options
- When reinserting the Manual Key, make sure it is pushed all the way in until there is a click sound

*Refer to section 5 in the Owner's Manual for more information.*



 
# Map/Room Lamps

### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the Start/Stop button is OFF.

### Map Lamp/Room Lamp Operation

- Press buttons **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

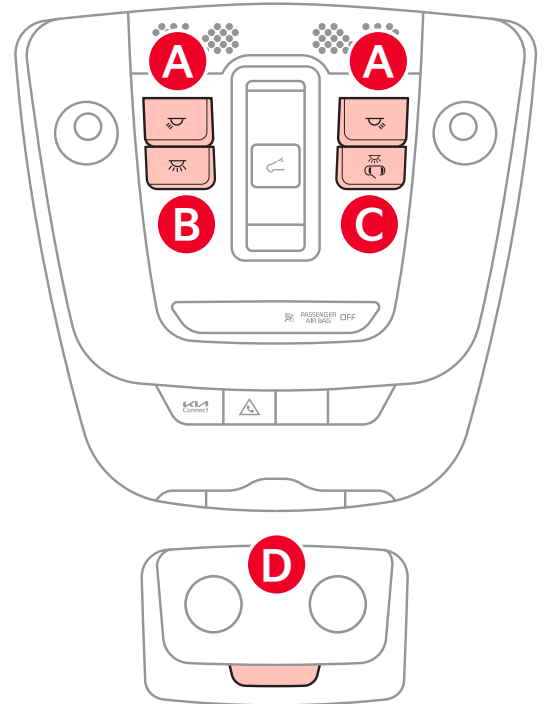

### QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Refer to section 8 in the Owner's Manual for more information.



### Sunroof Operation\*

The sunroof glass and sunshade operation is controlled by a multi-directional switch **A**, and the ignition needs to be in the ON position to operate the sunroof glass and sunshade.

 


#### To slide the sunroof glass and sunshade:

- **Auto Open:** Slide switch **A** backward to the farthest position and release
- **Auto Close** (Sunroof only): Slide the switch **A** forward to the farthest position and release

#### Tilt the Sunroof:

- **Tilt open:** Press switch **A** upward
- **Tilt close:** Press switch **A** forward

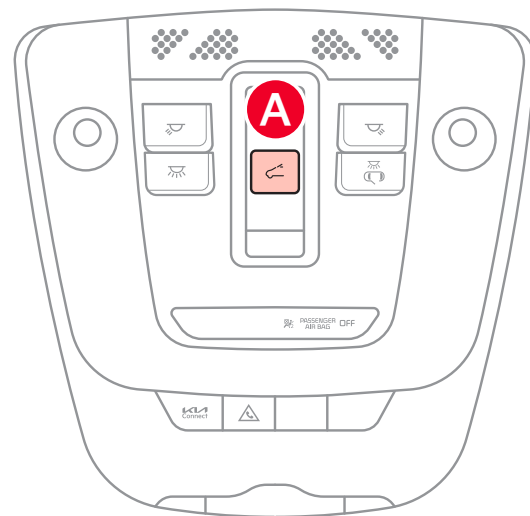

#### QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control switch in any direction
- While driving with the rear windows down or with the sunroof in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
  - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
  - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

#### REMINDERS:

- Sunshade needs to remain OPEN while Sunroof is open
- When closing, be mindful of any objects or persons
- If the sunroof is not fully closed, a warning will sound and display on the Instrument Cluster when the following occur:
  - The vehicle is powered off
  - The Smart Key is removed from the vehicle
  - The driver's door is opened

 
Refer to section 8 in the Owner's Manual for more information.



# Hood Release Lever and Latch

### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** inside of the Hood's center and lift the Hood

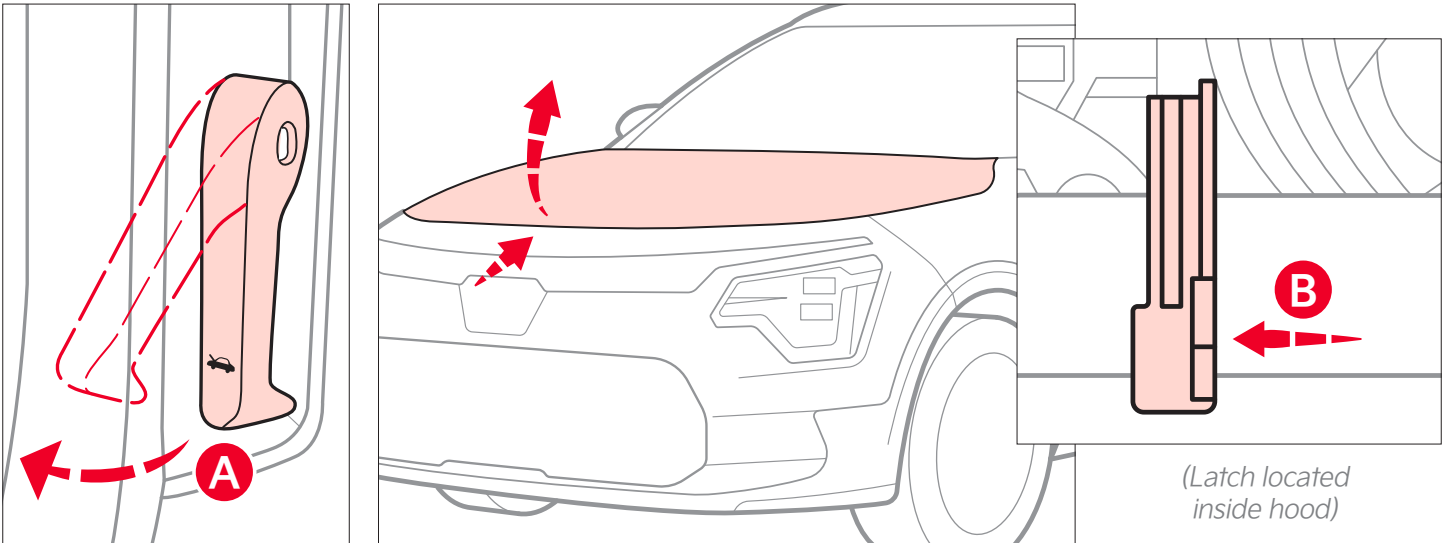

(Located on Driver side kick panel)


**Closing the Hood:** Lower the Hood about halfway and then press down to securely lock in place.

## Sun Visor<sup>†17</sup>

 Use the Sun Visor to shield direct light through the front or side windows. Move the Sun Visor out and adjust as needed.

### REMINDERS:

- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows

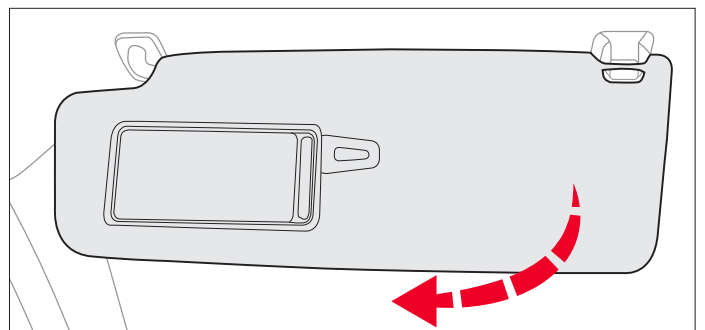


Refer to section 8 in the Owner's Manual for more information.



# Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

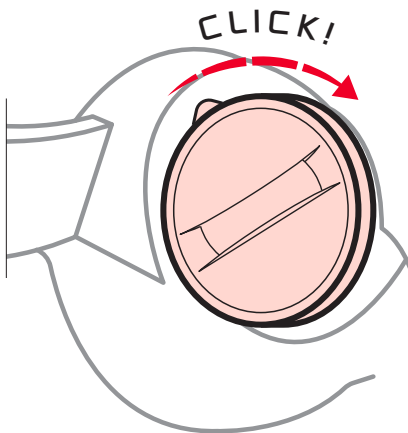

Refer to section 4 in the Owner's Manual for more information.



[Kia Fuel Cap](#)





[Fuel Filler Lid](#)

### REMINDERS:

  - The Fuel Filler Door Release button is located on the left side of the Steering Wheel on the lower driver's panel
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

## Fuel Filler Door

1. Turn the vehicle off
2. Pull the Fuel Filler Door Release Lever **A** located on lower left side in front of the door
3. Open the fuel filler door **B**
4. Turn the fuel filler cap counterclockwise to remove it **C**

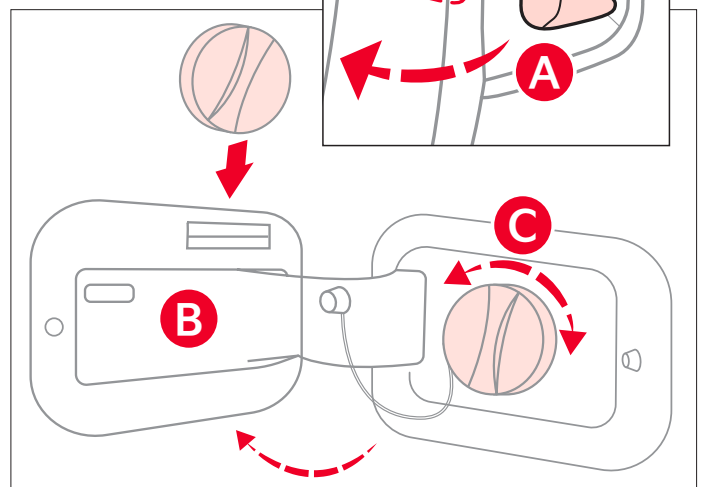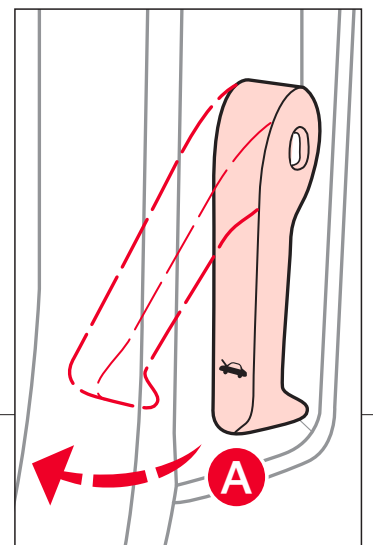

### QUICK TIP

There may be a delay in Fuel Filler Lid opening for about 20 seconds due to depressurization.

Refer to section 4 in the Owner's Manual for more information.



## Power Liftgate\*†20

### Opening from Inside the Vehicle:

 
Press and hold the Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.



[Power Liftgate, Key Fob & Opening Height/Speed Adjustment](#)



[Smart Key & Manual Key](#)


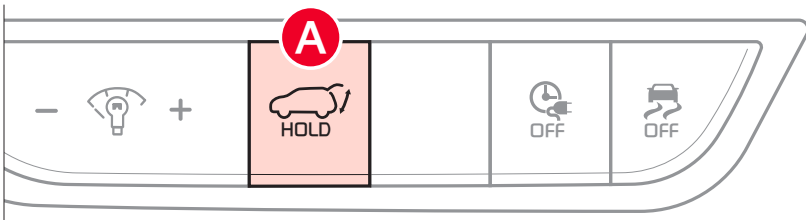


(Button located on Driver's Panel)

**Smart Key:** To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

**Opening from Outside the Vehicle:** To open the Power Liftgate automatically, press the Rear Hatch Release button **C** on the exterior of the Liftgate.

  Automatically close by pressing the Power Liftgate Close button **D**.

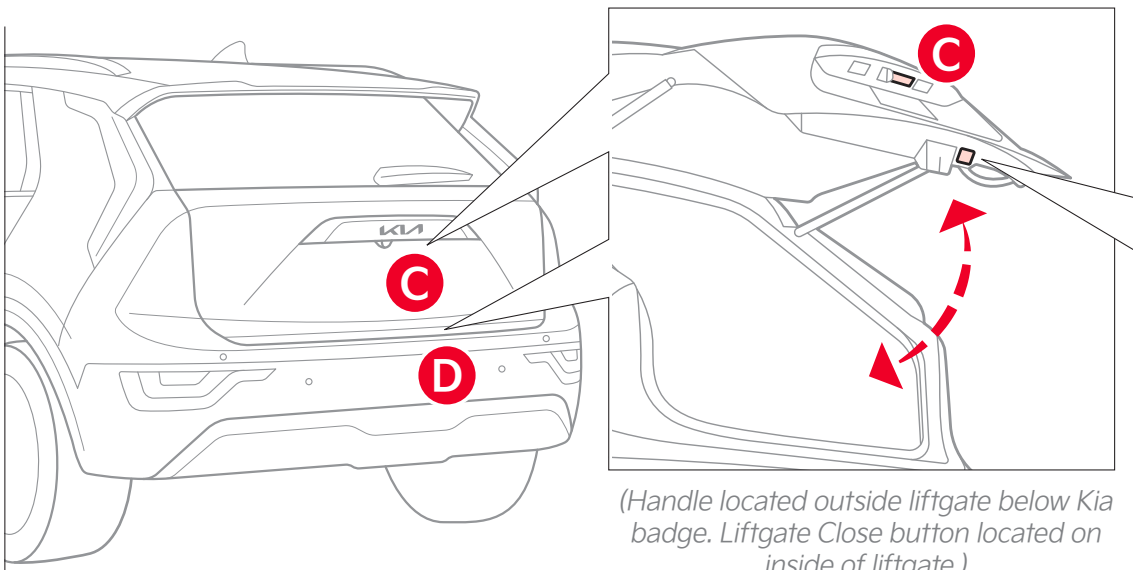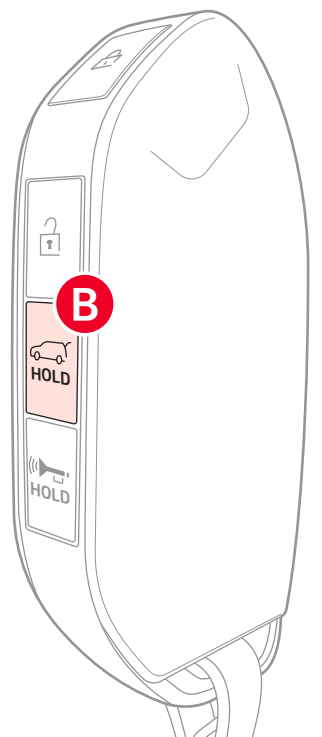

(Handle located outside liftgate below Kia badge. Liftgate Close button located on inside of liftgate.)

**REMINDER:** Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

[Continued on next page](#)

See section 4 in the Owner's Manual for more information. Remote button configuration may vary depending on vehicle options.



# Power Liftgate<sup>\*†20</sup>

[Continued from previous page](#)

To adjust the liftgate opening speed and height, go to Vehicle Settings on the Infotainment System.



[Settings -  
Power Liftgate](#)

### Opening Speed:

1. Tap Setup, Vehicle, Door
2. Select Power Liftgate Opening Speed by choosing Normal or Fast

### Opening Height:

1. Tap Setup, Vehicle, Door
2. Select Power Liftgate Opening Height
3. Select Full Open / Level 3 / Level 2 / Level 1 / User Height Setting

When selecting User Height Setting, the liftgate will automatically open to the saved height. To adjust settings:

1. Select User Height Setting
2. Manually position the liftgate to the desired height
3. Press and hold the Power Liftgate Open/Close button inside the liftgate for more than 3 seconds

**REMINDER:** When closing, be mindful of any objects or persons.

See section 4 in the Owner's Manual for more information.



# Manual Liftgate\* / Liftgate Release Button\*†20

 
 
Button is located on the bottom of the Liftgate lid. With doors unlocked, press the Liftgate Release button **A** and pull the Liftgate up by the handle to open.



[Liftgate Button and Operation](#)

### QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- Manual liftgate\*: Pressing the Smart Key remote liftgate button only unlocks the liftgate. To open liftgate, also press the Liftgate Release button & pull the liftgate up by the handle to open

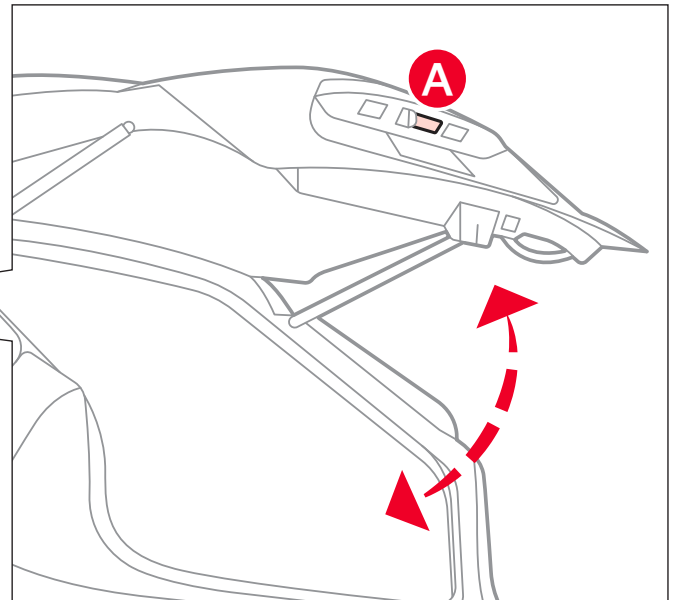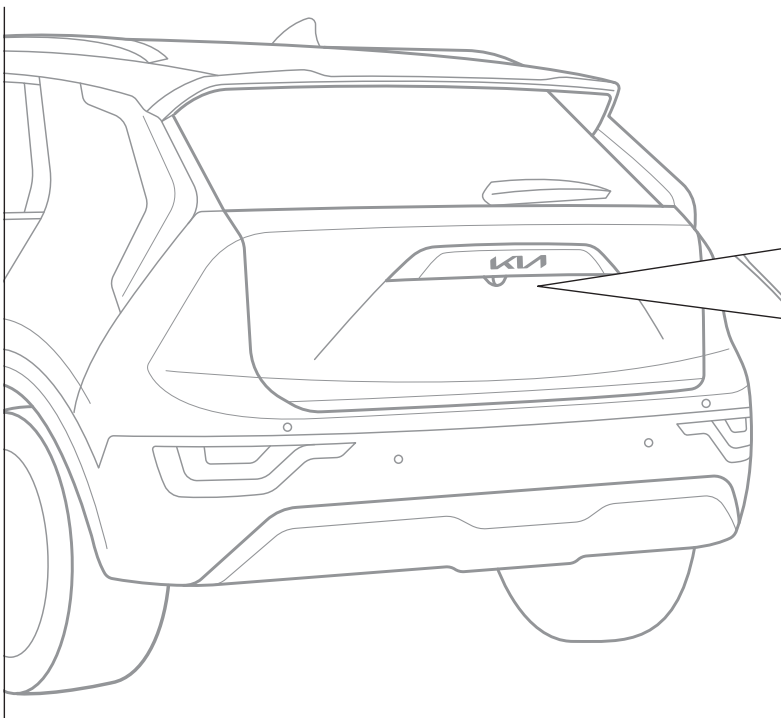

(Handle located outside liftgate below Kia badge)

Refer to section 4 in the Owner's Manual for more information.



## Child-Protector Rear Door Locks (Manual)

Locate these locks on the rear edge of the rear passenger doors. Move the Child-Protector Rear Door Lock, with the mechanical ignition key, to the lock position  to disable the inner door handles from opening the rear doors.

**REMINDER:** Child-Protector Rear Door Lock is located on rear passenger's door jamb.

 
*Refer to section 4 in the Owner's Manual for more information.*



[Latch Anchors for the Child Restraint System](#)



[Tire Mobility Kit](#)

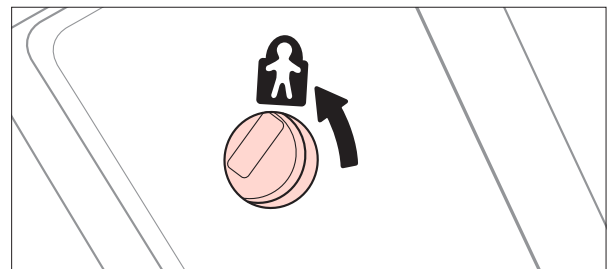


## Tire Mobility Kit

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage. For operational information, please refer to the Owner's Manual.

**A** Sealant Bottle

 **B** Compressor

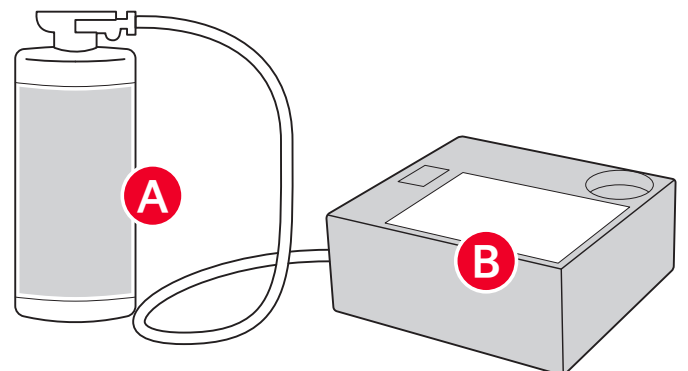

### QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

**REMINDER:** After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for a maximum distance of up to 120 miles.

*The above images are for illustration purposes only and may not reflect actual operation.*

*Refer to section 11 in the Owner's Manual for more information.*



 
# Occupant Detection System (ODS) / Passenger Airbag Off Indicator<sup>†10,13</sup>

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off passenger airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

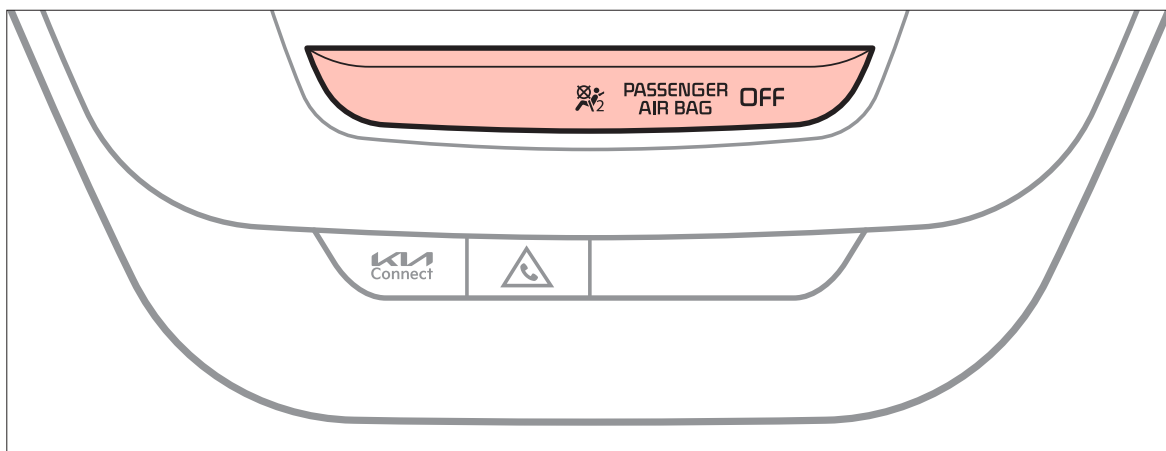

**REMINDER:** Do not allow passengers to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat or move to another seat in the vehicle.


*Refer to section 6 in the Owner's Manual for more information.*



### Seat Belts<sup>†13</sup>
 
#### To properly fasten your safety belts:


- Insert the belt tongue plate **A** into the buckle **B** until it clicks
- Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

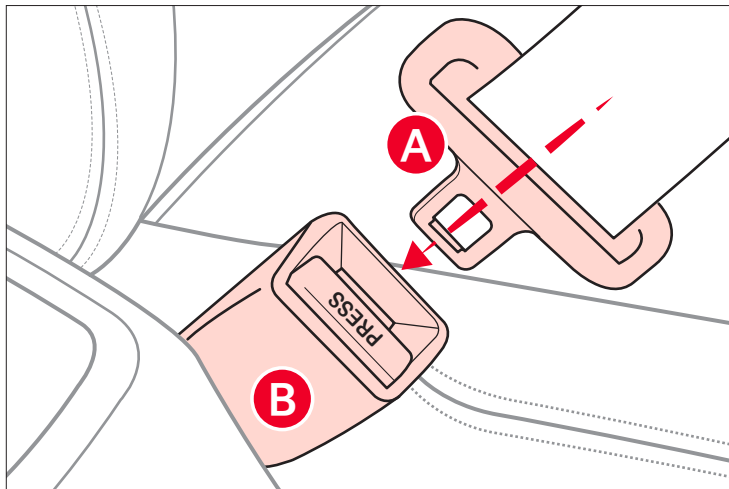

#### Seat belt retractor locks:

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

 During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

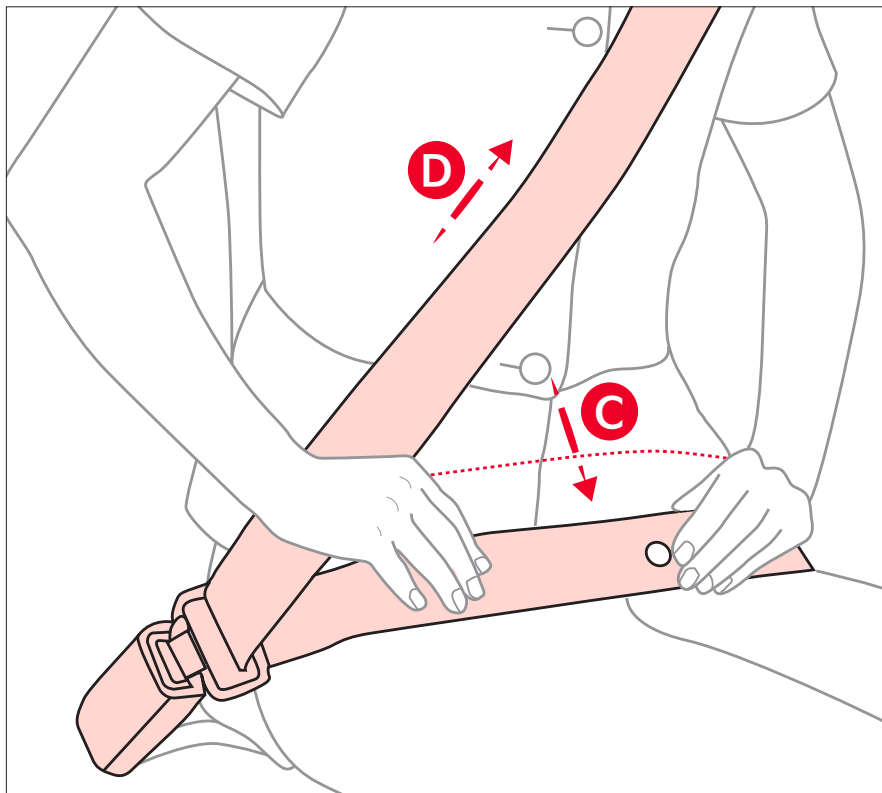

#### QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

**REMINDER:** For maximum protection, always wear your Seat Belt.

Refer to section 6 in the Owner's Manual for more information.

| <div>  <div> NIRO HYBRID NORMAL<br/>MAINTENANCE<br/>SCHEDULE </div> </div> | MAINTENANCE INTERVALS (UP TO 64,000 MILES) <sup>A</sup> |        |        |        |        |        |        |        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------|--------|--------|--------|--------|--------|--------|--------|
|                                                                                                                                                             | 8,000                                                   | 16,000 | 24,000 | 32,000 | 40,000 | 48,000 | 56,000 | 64,000 |
| Add fuel additive <sup>C</sup>                                                                                                                              | P                                                       | P      | P      | P      | P      | P      | P      | P      |
| Rotate tires                                                                                                                                                | P                                                       | P      | P      | P      | P      | P      | P      | P      |
| Engine oil and filter (full synthetic oil)                                                                                                                  | R                                                       | R      | R      | R      | R      | R      | R      | R      |
| Climate control air filter                                                                                                                                  | I                                                       | R      | I      | R      | I      | R      | I      | R      |
| Air cleaner filter (engine)                                                                                                                                 | I                                                       | I      | R      | I      | I      | R      | I      | I      |
| Steering gear rack, linkage & boots                                                                                                                         | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Suspension ball joints                                                                                                                                      | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Air conditioner refrigerant / compressor                                                                                                                    | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| 12V Battery condition                                                                                                                                       | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Exhaust system                                                                                                                                              | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Hybrid Starter & Generator (HSG) belt <sup>D</sup>                                                                                                          | I                                                       | I      | I      | I      | I      | I      | I      | R      |
| Brake fluid                                                                                                                                                 | I                                                       | I      | I      | I      | I      | R      | I      | I      |
| Brake lines, hoses and connections                                                                                                                          | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Brake discs and pads                                                                                                                                        | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Engine clutch actuator hose and line                                                                                                                        | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Cooling system                                                                                                                                              | I                                                       | I      | I      | I      | I      | I      | I      | I      |
| Drive shafts and boots                                                                                                                                      |                                                         | I      |        | I      |        | I      |        | I      |
| Fuel tank air filter <sup>E</sup>                                                                                                                           |                                                         | I      |        | I      |        | I      |        | I      |
| Fuel tank and fuel cap                                                                                                                                      |                                                         | I      |        | I      |        | I      |        | I      |
| Fuel lines, hoses and connections                                                                                                                           |                                                         | I      |        | I      |        | I      |        | I      |
| Engine clutch actuator fluid                                                                                                                                |                                                         |        | R      |        |        | R      |        |        |
| Coolant (inverter)                                                                                                                                          |                                                         |        | R      |        |        | R      |        |        |

**P** = Perform  
**R** = Replace  
**I** = Inspect<sup>B</sup>

- A. See the Owner's Manual for complete maintenance schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary.

E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.



Full  
Synthetic  
Oil

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

### QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect<sup>†1</sup> account by logging into Kia Connect App<sup>†2</sup> or your account on <https://owners.Kia.com> (See the [Kia Activation](#) page for setup information).

†LEGAL DISCLAIMERS ON [PAGE 115](#) | \*IF EQUIPPED



# DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

**Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.**

- 1. Kia Connect:** Kia Connect: Purchase/lease of certain 2027 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at [owners.kia.com/us/en/privacy-policy.html](https://owners.kia.com/us/en/privacy-policy.html)) and Terms of Service (available at [owners.kia.com/us/en/terms-of-service.html](https://owners.kia.com/us/en/terms-of-service.html)). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit [www.kia.com](https://www.kia.com) or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.

**2. Kia Access App** for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model.

**3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

**4. Driver Assistance Features - Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Blind-Spot Collision-Avoidance Assist (BCA), Intelligent Speed Limit Assist (ISLA), Safe Exit Warning (SEW), Rear Cross-traffic Collision-Avoidance Assist (RCCA), Leading Vehicle Departure Alert (LVDA), Cruise Control (CC), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Lane Following Assist (LFA), Highway Driving Assist (HDA), Rear View Monitor (RVM), Rear Occupant Alert (ROA) with Ultrasonic and Forward/Reverse Parking Distance Warning (PDW):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

**5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

**6. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

**7. Start/Stop Button with Smart Key:** Always come to a complete stop before turning the vehicle on or off. However, if you have an emergency while the vehicle is in motion and must turn the vehicle off, you can turn the vehicle off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the vehicle by pressing the Start/Stop button with the shift lever in Neutral (N). With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

**8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

**9. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
- 11. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.

**12. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

**13. Seat belts / Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.

**14. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

**15. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](https://www.siriusxm.com). Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2027 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

**16. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

**17. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.

**18. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

**19. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

**20. Power Liftgate / Smart Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for improved ventilation.

\*IF EQUIPPED