


Features & Functions Guide




Sorento

Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**Getting Started
With Your
New Kia**



**How-to Resources:
Videos & Online**

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com
Consumer Affairs - Roadside Assistance^{†13}: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

www.youtube.com/KiaFeatureVideos

This document is interactive: from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

The video resources should not be accessed while you are operating your Kia vehicle.

Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems.

You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia’s most used features:

1

[Smart Key with Remote Start](#)

116

2

[Power Adjustable Driver’s Seat* . . .](#)

102

3

[Front Seat Headrest Adjustment . . .](#)

100

4

[Seat Warmers* / Ventilated Seats* . .](#)

99

5

[Folding Rear Seats](#)

104

6

[Windshield Wipers & Washers.](#)

65

7

[Lifting Wipers \(Wiper Service Mode\) .](#)

67

8

[Navigation-based Smart
Cruise Control \(NSCC\)*](#)

37

9

[Power Liftgate with Auto Open/Close](#)

118

10

[Maintenance Schedule](#)

133

11

[Vehicle Settings -
Infotainment System](#)

17

12

[Bluetooth® Wireless Technology . . .](#)

70

13

[Kia Connect Activation /
Kia Connect Assistance](#)

75

14

[Kia Connect with Navigation](#)

79

15


[Android Auto™ Setup](#)

73


16

[Apple CarPlay® Setup](#)


73




Getting Started
With Your New
Kia




Your New Kia
Important Care
Tips



Vehicle Cameras
Important Tips



Navigation
System Important
Tips



How-to
Resources:
Videos & Online

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

*IF EQUIPPED

Table Of Contents

| | |
|--|--------------------|
| WELCOME TO THE KIA FAMILY! | 02 |
| VIDEOS & NAVIGATION | 03 |
| GETTING STARTED. | 04 |
| INSTRUMENT CLUSTER | |
| Instrument Cluster Overview | 08 |
| Indicators & Warning Lights | 09 |
| Fuel Economy / Tips for Economical Driving | 10 |
| Tire Pressure Monitoring System (TPMS) | 11 |
| Drive Mode Integrated Control System | 13 |
| VEHICLE SETTINGS | |
| Instrument Cluster LCD Modes | 15 |
| Trip Modes / Trip Information | 16 |
| Vehicle Settings* - Infotainment System | 17 |
| Vehicle Auto-Shut Off* | 18 |
| Service Interval Mode | 19 |
| ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS) | |
| Forward Collision-Avoidance Assist (FCA) | 20 |
| Blind-spot Collision-Avoidance Assist (BCA)* | 23 |
| Lane Keeping Assist (LKA) | 26 |
| Blind-spot View Monitor (BVM)* | 28 |
| Driver Attention Warning (DAW) | 29 |
| Leading Vehicle Departure Alert (LVDA) | 30 |
| Safe Exit Assist (SEA) | 31 |
| Lane Following Assist (LFA) | 32 |
| Smart Cruise Control (SCC) | 34 |
| Navigation-based Smart Cruise Control (NSCC)* | 37 |
| Highway Driving Assist 2 (HDA2)* | 41 |
| Rear View Monitor (RVM) | 44 |
| Surround View Monitor (SVM)* | 46 |
| Rear Cross-traffic Collision-Avoidance Assist (RCCA) | 48 |
| Reverse Parking Collision-Avoidance Assist (PCA)* | 50 |
| Forward/Reverse/Side Parking Distance Warning (PDW)* | 51 |
| Intelligent Speed Limit Assist (ISLA) | 53 |
| DRIVER'S PANEL | |
| Instrument Cluster Illumination Control | 54 |
| Electronic Stability Control (ESC) | 55 |
| Hill-start Assist Control (HAC) | 56 |
| Reverse Parking Aid Function* | 57 |
| Engine Start/Stop Button. | 58 |
| Power Windows, Window Lock & Central Door Lock. | 59 |
| Automatic Door Lock/Unlock | 59 |

Continued on next page

Table Of Contents

[Continued from previous page](#)

DRIVER’S PANEL (CONTINUED)

| | |
|--|----|
| Electronic Child Safety Lock System | 60 |
| Rear Door Locks - Double Pull to Open | 60 |
| Power Folding Outside Mirrors* / Power/Heated Outside Mirrors* / Manual Folding Mirrors* | 61 |

STEERING WHEEL CONTROLS

| | |
|--|----|
| Turn Signals & Fog Lights* | 62 |
| Headlights & High Beams / Daytime Running Lights (DRL) | 63 |
| High Beam Assist (HBA) | 64 |
| Windshield Wipers & Washers | 65 |
| Rear Wiper & Washer* | 66 |
| Lifting Wipers (Wiper Service Mode) | 67 |
| Tilt/Telescoping Steering Wheel | 68 |

INFOTAINMENT SYSTEM

| | |
|--|----|
| Steering Wheel Audio Controls | 69 |
| Bluetooth® Wireless Technology | 70 |
| Android Auto™ / Apple CarPlay® Setup | 73 |
| Kia Connect Activation | 75 |
| Kia Connect Assistance* | 76 |
| Kia Access App Download | 77 |
| Kia Access App Features Guide | 78 |
| Kia Connect with Navigation* | 79 |

CENTER PANEL

| | |
|--|----|
| USB-C Charger Ports | 80 |
| AC Inverter* | 83 |
| Digital Clock - Infotainment System | 83 |
| Wireless Smartphone Charging System* | 84 |
| Automatic Climate Control* | 86 |
| Manual Climate Control* | 89 |
| Automatic Gear Shift with Sportmatic® Shifting (Manual Mode) | 91 |
| Dual Clutch Transmission (DCT)* | 92 |
| Paddle Shifters* | 93 |
| All Wheel Drive (AWD/TERRAIN Mode)* | 94 |
| Idle, Stop & Go (ISG) System | 95 |
| Electronic Parking Brake (EPB) | 96 |
| Auto Hold | 97 |
| Heated Steering Wheel* | 98 |
| Seat Warmers / Ventilated Seats* | 99 |

[Continued on next page](#)

*IF EQUIPPED

Table Of Contents

[*Continued from previous page*](#)

SEATING

| | |
|---|---------------------|
| Front Seat Headrest Adjustment* | 100 |
| Driver Position Memory System* | 101 |
| Power Adjustable Driver’s Seat* / Power Lumbar* | 102 |
| 6-Way Manual Adjustable Driver’s Seat* | 103 |
| 2nd-Row Folding Seat | 104 |
| 2nd-Row Auto-Folding Seat | 105 |
| Unfastening Center Seatbelt. | 106 |
| 3rd-Row Folding Seat. | 107 |
| One-Touch Slide & Fold 2nd Row Seats | 108 |
| Rear Occupant Alert (ROA) with Ultrasonic Sensors | 109 |

OTHER KEY FEATURES

| | |
|---|---------------------|
| Sun Visor | 111 |
| Double-Turn Lock/Unlock All | 111 |
| Digital Key 2 Touch* | 112 |
| Smart Key with Remote Start | 116 |
| Power Liftgate with Auto Open/Close* | 118 |
| Manual Liftgate* / Liftgate Release Button* | 121 |
| Map/Room Lamps | 122 |
| Panoramic Sunroof with Power Sunshade* | 123 |
| HomeLink® with Auto-Dimming Rearview Mirror* | 125 |
| Hood Release Lever and Latch | 127 |
| Fuel Filler Lid Release. | 128 |
| Fuel Cap / Malfunction Indicator (Check Engine Light) | 129 |

SAFETY FEATURES

| | |
|--|---------------------|
| Occupant Detection System (ODS) / Passenger Airbag Off Indicator | 130 |
| Child-Protector Rear Door Locks* | 131 |
| Seat Belts. | 132 |

| | |
|--|---------------------|
| MAINTENANCE SCHEDULE | 133 |
|--|---------------------|

| | |
|--|---------------------|
| LEGAL DISCLAIMERS. | 134 |
|--|---------------------|



 
INSTRUMENT CLUSTER

Instrument Cluster Overview

- A** Speedometer
- B** Gear Position
- C** Distance to Empty
- D** LCD Display (including Trip Computer)
- E** Tachometer
- F** Fuel Gauge
 - ◀ Arrow direction indicates the side of the vehicle the fuel door is located
- G** Odometer
- H** Outside Temperature
- I** Engine Coolant Temperature Gauge
- J** Indicators & Warning Lights



Instrument
Cluster Overview

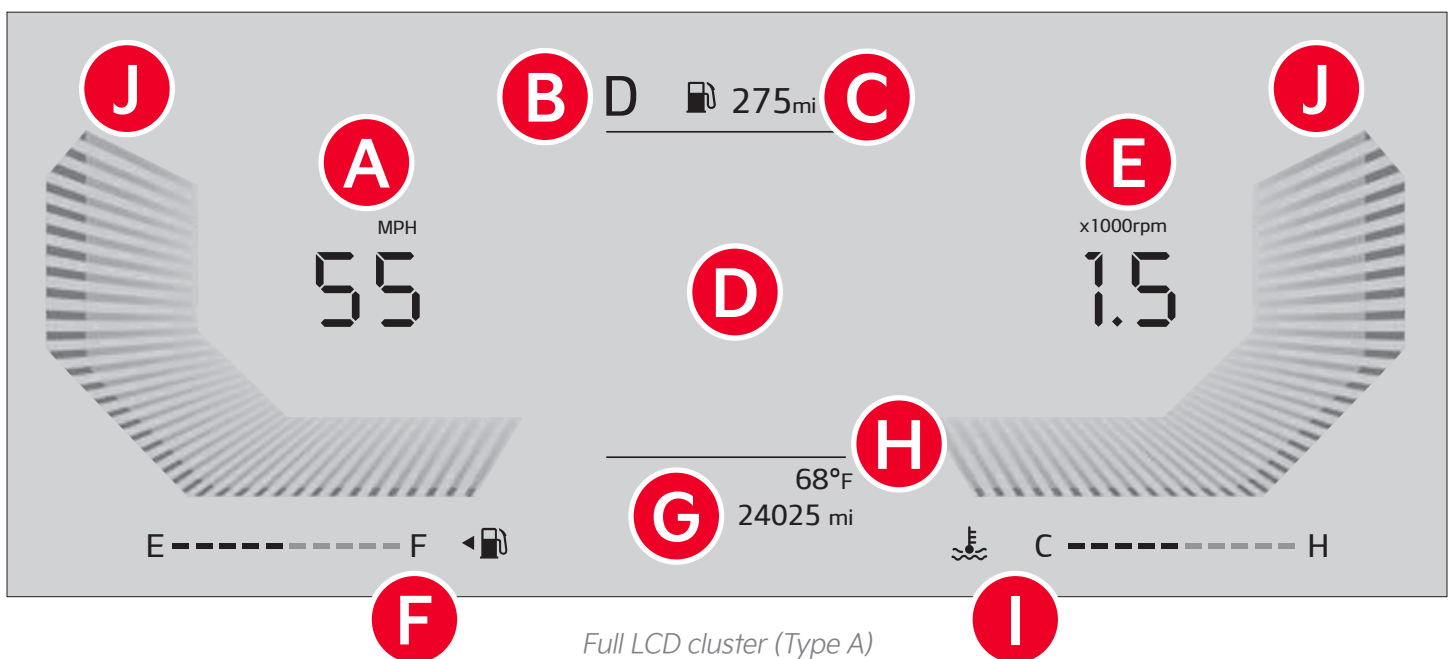


This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. Refer to Section 5 in the Owner's Manual for more information.



 Indicators & Warning Lights

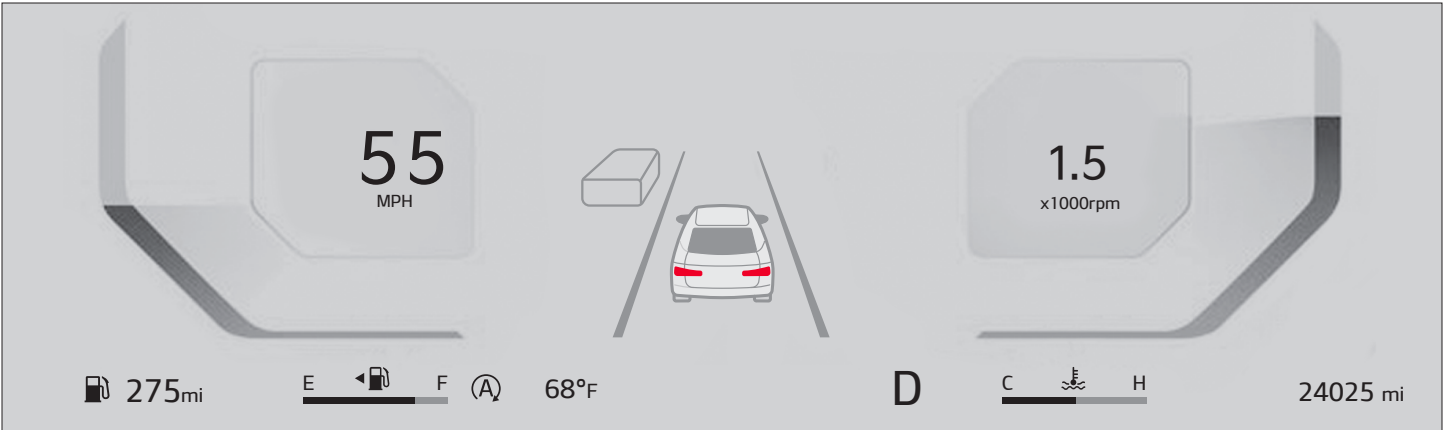

- Engine Oil Pressure Warning Light
- Malfunction Indicator
- Electric Parking Brake (EPB) Warning Light*
- Seat Belt Warning Light
- Light ON Indicator
- High Beam Indicator
- Low Beam Indicator*
- Front Fog Light Indicator
- High Beam Assist Indicator*
- Parking Brake & Brake Fluid Warning Light
- Forward Safety Warning Light*
- All-Wheel Drive (AWD) Warning Light*
- All-Wheel Drive (AWD) Lock Indicator*
- Electronic Power Steering (EPS) Warning Light
- Charging System Warning Light*
- Airbag Warning Light
- Low Fuel Level Warning Light
- Immobilizer Indicator*
- Engine Coolant Temperature Warning Light*
- Icy Road Warning Indicator Light*
- Anti-Lock Braking System (ABS) Warning Light
- Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator
- Electronic Stability Control (ESC) OFF Indicator
- Electronic Stability Control (ESC) Indicator
- AUTO HOLD Indicator*
- Cruise Control Indicator*
- Cruise Control ON/SET Indicator*
- Washer Fluid Warning Light*
- Master Warning Light
- Electronic Brake Force Distribution (EBD) System Warning Light (two separate indicators on Instrument Cluster lit at same time)
- Lane Safety Assist Indicator
- LED Headlamp Warning Indicator*
- Downhill Brake Assist (DBC) Indicator*
- Auto Stop Indicator Light*
- SPORT Mode Indicator
- ECO Mode Indicator
- Emergency Steering Warning Light*
- Exhaust System (GPF) Warning Light*
- Inattentive Driving Indicator* / Intelligent Speed Limit Assist Indicator*
- Highway Lane Change Assist Indicator*

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. Refer to Section 5 in the Owner's Manual for more information.

*IF EQUIPPED



Fuel Economy / Tips for Economical Driving

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle




**Tips for
Economical
Driving**


aerodynamics. Below are some tips on how to help improve fuel economy:


- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads





Tire Pressure Monitoring System (TPMS)^{†21}

The TPMS indicator  functions as both the Low Tire Pressure Light and the TPMS Malfunction Indicator.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the tire pressure drops due to the outside temperature becoming significantly lower.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

- Inflate the tire(s) to specifications using an accurate tire pressure gauge to turn off the Low Tire Pressure Indicator . See the front driver's door jamb for PSI specifications.
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See the dealer for service.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain the recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

For illustrative purposes only. Your actual display, buttons and/or features may vary. For more information refer to section 8 in the Owner's Manual.

 
[*Continued on next page*](#)



Tire Pressure Monitoring System



Low Tire Pressure

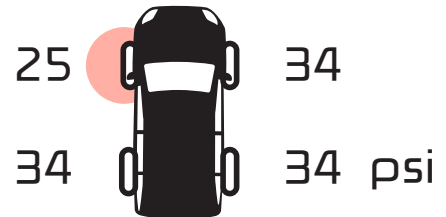



Tire Pressure Monitoring System (TPMS)^{†21}

[*Continued from previous page*](#)

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

Refer to section 8 in the Owner's Manual for more information.



Drive Mode Integrated Control System*

 
The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the Drive Mode knob **B**.

When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster and illuminate next to the Drive Mode knob. The system's default mode is NORMAL mode and when selected, the indicator will not be illuminated. If ECO or SMART mode is selected, the vehicle will remain in that mode when the engine is restarted.


- **ECO** Mode
- **NORMAL** Mode
- **SPORT** Mode
- **SMART** Mode* - When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style
- **SNOW** Mode*
- **TERRAIN** Mode* - Press the DRIVE/TERRAIN Mode to switch from DRIVE MODE to TERRAIN MODE



Drive Mode Integrated Control System

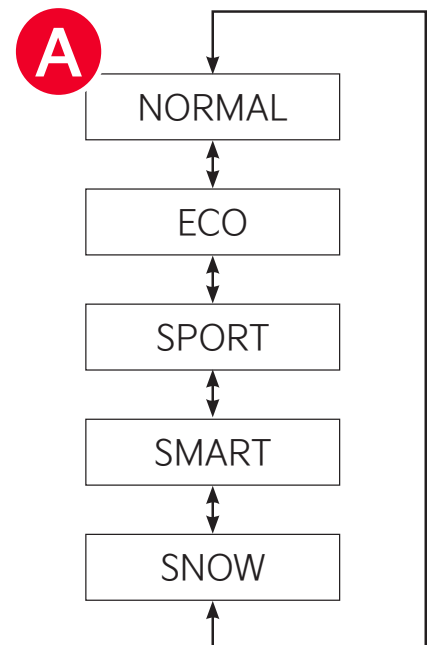

(Appears on LCD in Instrument Cluster)

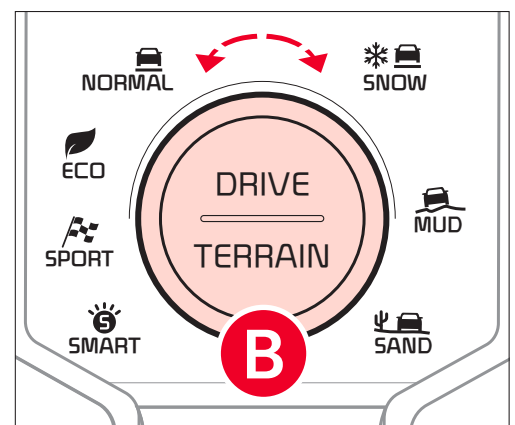 

(Located on Center Panel next to Gear Shift)*

[Continued on next page](#)

For illustrative purposes only. Actual displays, buttons and/or features may vary.

Refer to section 6 in the Owner's Manual for more information.



Drive Mode Integrated Control System*

[*Continued from previous page*](#)

QUICK TIP

- When vehicle is turned off while in SPORT Mode, the system will default to ECO mode. SPORT mode would need to be selected again once the vehicle is restarted.

REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- The system may default to NORMAL mode when the ignition is turned on
- Steering effort may be slightly increased in SPORT mode



Instrument Cluster LCD Modes

Press the Mode button **A** to scroll through the different LCD Cluster modes:



Driving Assist Mode*: Displays the state if Lane Keeping Assist*, Smart Cruise Control*, Lane Following Assist*, Tire Pressure



Navigation View*: Displays the route guidance and destination information

Utility Information View: Low Pressure Warning Display, Fuel Economy, Drive Info Display, Information Since Refueling, Accumulated Driving Information Mode



Master Warning Mode: Displays information on Intelligent Speed Limit Assist*, TPMS, drive force distribution*, and warning messages related to the vehicle when one or more systems is not operating normally

 
Service Mode: Displays Scheduled Maintenance Information and may notify when service is required



Instrument Cluster Overview



Steering Wheel Controls

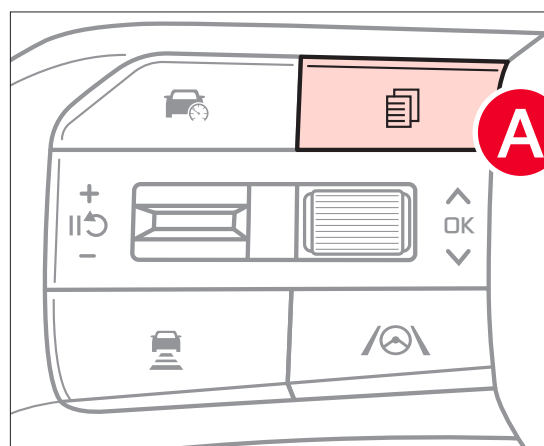

(Type A; Controls located on Steering Wheel)


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Your vehicle's LCD modes may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.



Trip Modes / Trip Computer

Trip modes and trip information displays driving-related information **A** on the Instrument Cluster when the Engine Start/Stop button is in the ON position.

To cycle through the trip modes, press the Mode button **B**. To select and enter the trip information mode , press the OK button **C** to enter. To cycle through and select the different screens (Fuel Economy, Accumulated Info, Drive Info), press the OK button **C** up/down again and then press the OK button **C**. When displaying the tripmeter screens, press and hold the OK button **C** to reset the tripmeter to zero.

 
 
Press the OK button **C** to go back to the previous mode/item.



Instrument Cluster Overview



Steering Wheel Controls

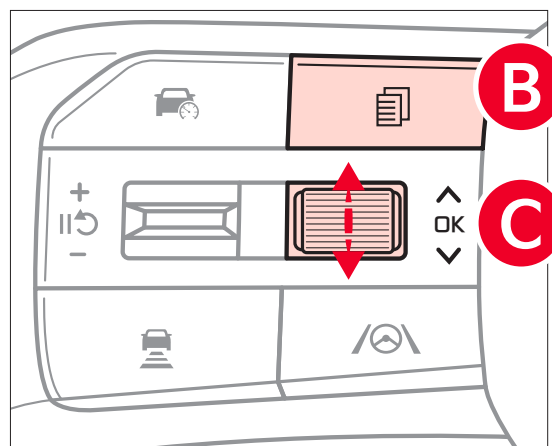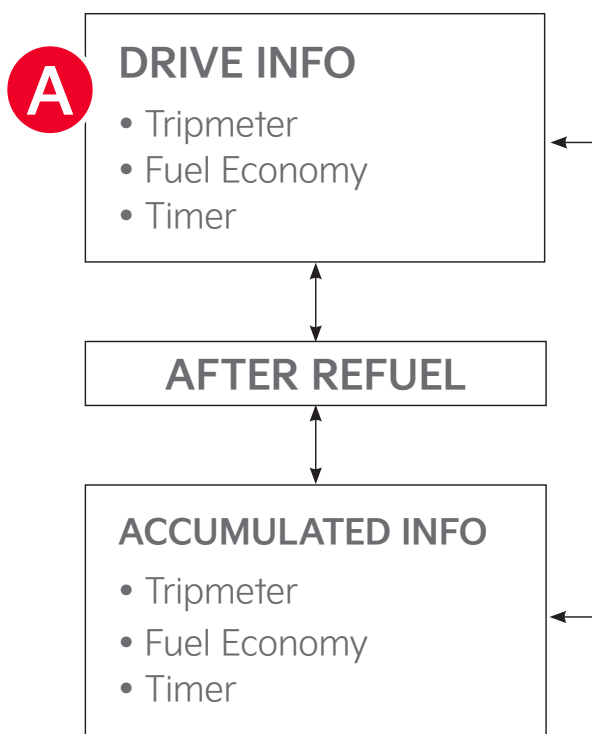

(Type A; Controls located on Steering Wheel)

REMINDERS:

- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.



Vehicle Settings - Infotainment System

To enter the Vehicle Settings in the Infotainment System, press the SETUP key on the Infotainment System or the onscreen SETUP icon. Then press Vehicle,

which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.



Vehicle Settings

Driver Assistance: Smart Cruise Control, Driving Convenience, Speed Limit, Warning Method, Driver Attention Warning, Driving Safety, Parking Safety*

Drive Mode: My Drive Mode, Brake Mode, Drive Mode Change Alert, Trailer Mode, Climate Control ECO Mode

Active Sound Design*: (Modifies the perceived engine and road sound) Futuristic*, S-Engine*

Climate*: Recirculate Air, Automatic Ventilation, Defog/Defrost Options, Climate Features*, Link to Climate Settings for Auto-Adjustment

Lights*: Ambient Lighting, One Touch Turn Signal, Welcome Mirror/Light, Headlight Delay, Lighting Pattern, Travel Mode, High Beam Assist, Intelligent High Beams, Interior Lights Always On

Door*: Auto Lock, Auto Unlock, Two-Press Unlock, Smart Liftgate, Power Liftgate, Power Liftgate Opening Speed/Height, Remote Window Control

Digital Keys*: Smartphone Key, NFC Card Key, Digital Key Information

Convenience*: Rear Occupant Alert, Service Interval, Oil Change Reminder, Wireless Charging System, Auto Rear Wiper (in R), Smart Glass Tint, Trailer Mode/Checklist

Seat*: Link to Climate Settings, Seating Easy Access, Seat Position Change Alert, Smart Posture Care, Smart Support, Ergo Motion Seat

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide.



Vehicle Auto-Shut Off*

The Vehicle Auto-Shut Off, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes).



Vehicle
Auto-Shut Off
Video

QUICK TIP

- The timer that appears on the Instrument Cluster's LCD can be reset using the OK button on the right side of the Steering Wheel.

 
 
 
A warning on the Instrument Cluster LCD will appear stating the "Vehicle will be turned off automatically in..." and a chime will sound when the timer starts **A**. When the timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

Auto-Shut Off Settings - The system is on by default and timer is pre-set to 30 minutes. To change the pre-set time settings, go to Vehicle Settings in the Instrument Cluster LCD by pressing the Mode button **B** on right side of the Steering Wheel. Select Convenience, then Vehicle Auto-Shut Off. Move through the selections by pressing the OK button **C** up/down on the Steering Wheel. Select 30 minutes, 60 minutes or Disable for off **D**.

REMINDERS:

- When the vehicle is turned off then on again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
 - The vehicle is in (P) Park
 - The driver's seat belt is unfastened
 - The driver's door is opened
 - The passenger seat is not occupied

Refer to section 5 in the Owner's Manual for more information.
Driving while distracted is dangerous and should be avoided.
Do not attempt to change vehicle system settings while driving. Images are for illustrative purposes only.

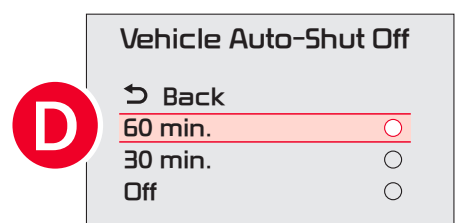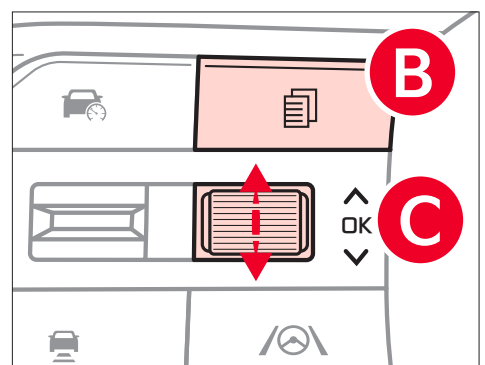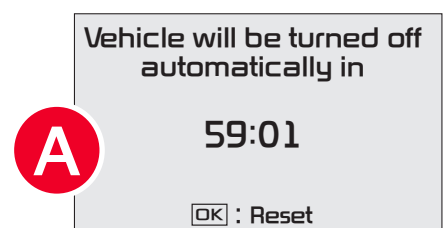



VEHICLE SETTINGS

Service Interval Mode

 
To view the Service Interval Information in the Instrument Cluster LCD, press the Mode button **A**. System will display the number of miles remaining until the next service is due, as well as the type of service due.




**Kia Full
Synthetic Oil**

When service is required, the following will be displayed: Service Required **B**.

To set or reset the Service Interval, go to Vehicle Settings in the Infotainment System by pressing the SETUP button. Then press VEHICLE, CLUSTER and then SERVICE INTERVAL.

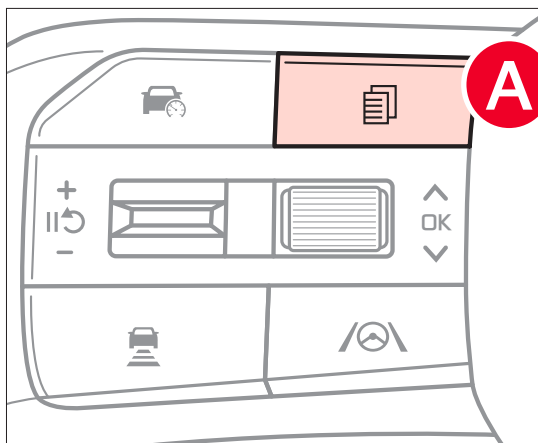

 (Type A; Controls located on Steering Wheel)

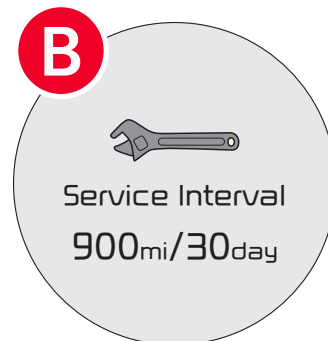

QUICK TIP

An “Engine Oil Change Due Soon” message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder. Go to Vehicle Settings*, Convenience, then Oil Change, or go to Vehicle Settings in the Infotainment System, Cluster, then Oil Change Reminder.

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner’s Manual for more information.



Forward Collision-Avoidance Assist (FCA)^{†4}

Forward Collision-Avoidance Assist is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA detects an increased risk of collision, it may automatically apply the brakes **B** to potentially reduce the effects of a possible collision.

- **Junction Turning** function **C** may help avoid a collision with an oncoming vehicle detected in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking
- **Junction Crossing** function **D** may help avoid a collision with oncoming vehicles detected on the left or right side when crossing an intersection by applying emergency braking
- **Direct Oncoming Response** function **E** may reduce the vehicle speed and temporarily apply braking when FCA detects a vehicle is approaching directly in front

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
 
 
 
 
Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



Forward Collision-Avoidance Assist - Advanced Features



Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit

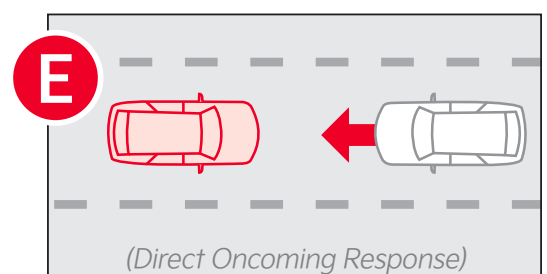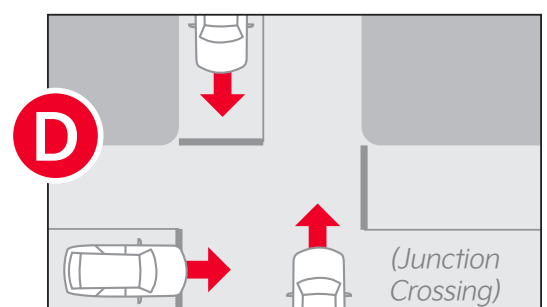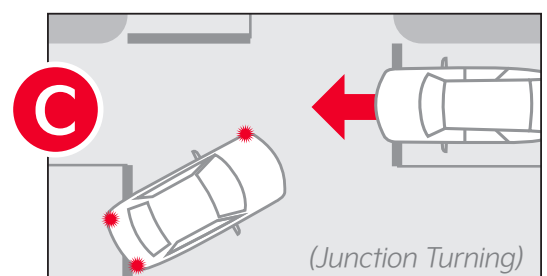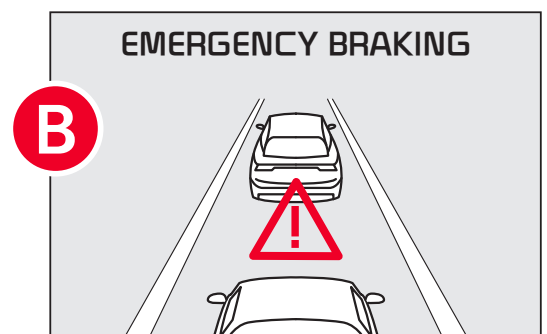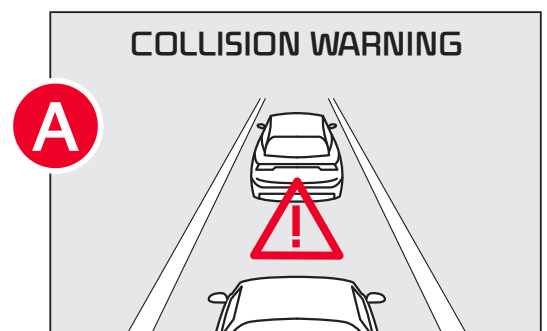





Forward Collision-Avoidance Assist (FCA)^{†4}

[Continued from previous page](#)

 
- **Lane-Change Oncoming** function **A** may help avoid a possible collision with a detected oncoming vehicle when changing lanes by assisting the driver's steering
- **Lane-Change Side** function **B** may help avoid a possible collision with the vehicle detected ahead in the next lane when changing lanes by assisting the driver's steering
- **Evasive Steering Assist** function **C** may help avoid a possible collision with a vehicle, pedestrian or cyclist detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering. If FCA detects a risk of collision with a pedestrian or cyclist, it may warn the driver and potentially assist the driver's steering

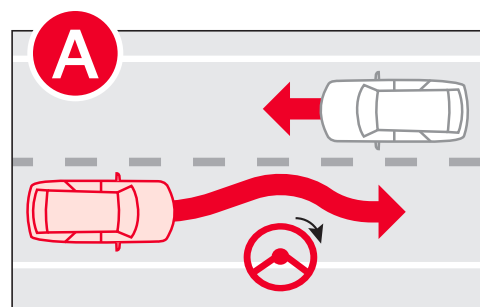

(Lane-Change Oncoming)

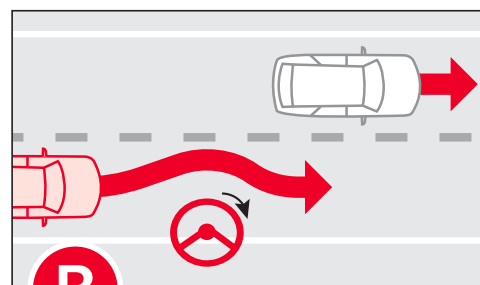 

(Lane-Change Side)

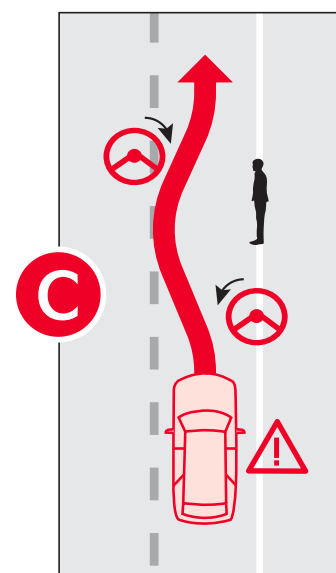 

(Evasive Steering Assist)

REMINDER: Once the risk factors are not detected, these functions will deactivate.

FCA Settings:

- FCA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



Forward Collision-Avoidance Assist (FCA)^{†4}

[Continued from previous page](#)




Driver Assistance -
Warning Methods &
Warning Volume

- **To access Vehicle Settings in the Infotainment System** - Press the SETUP button on the Infotainment System. Select the VEHICLE button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in DRIVING SAFETY, scroll through the selections and press the button to toggle the features on or off
- **Forward Safety Warning Timing** - When in DRIVING SAFETY, select STANDARD or LATE. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'
- **Warning Methods** - To adjust the Warning Methods settings, go to Vehicle Settings, Driver Assistance, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority
- FCA will become active when the:
 - Ignition is on or the Power button is ON
 - Vehicle is traveling faster than 5 mph
 - Electronic Stability Control (ESC) is ON

QUICK TIP

To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- FCA may warn the driver if the vehicle ahead is decelerating to turn or to pass speed bump
- When FCA is off, the Forward Safety warning indicator may remain on in the Instrument Cluster 

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)*†4

Blind-spot Collision-Avoidance Assist uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area, when exiting parallel parking, and before changing lanes. Initially,



**Blind-spot
Collision-Avoidance
Assist (BCA)**



 
 
 
**Driver Safety -
Forward/Lane/
Blind-spot Safety
& Safe Exit**

BCA is designed to provide Blind-spot Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rear-view mirrors. If there is a collision risk when exiting a parallel parking space, BCA may assist with braking the vehicle to help avoid a collision.

Vehicle detection: When another vehicle is detected within the BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and BCA will sound a warning.

Collision-Avoidance Assist*: When you are driving forward out of a parking space **C**, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it can help avoid collision by applying the brake.

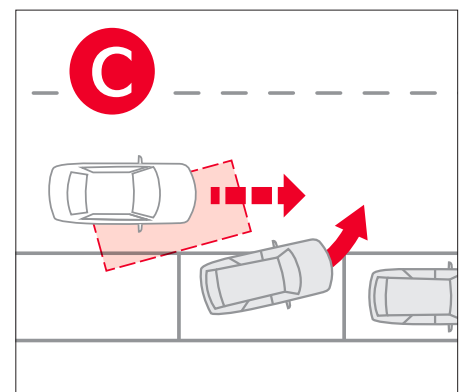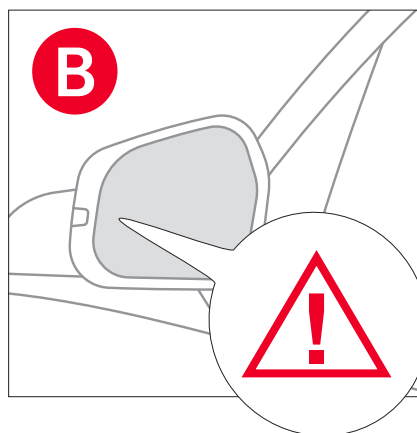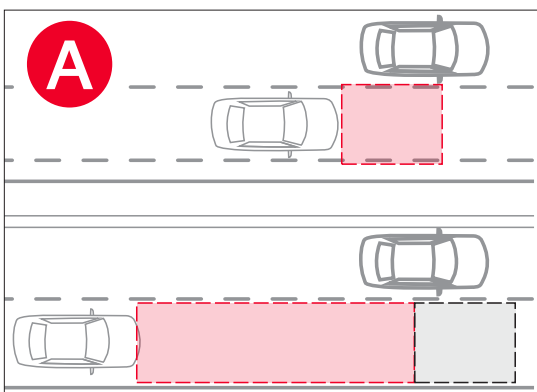

[*Continued on next page*](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Blind-spot Collision-Avoidance Assist (BCA)^{*†4}

[*Continued from previous page*](#)

BCA Settings:

- BCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. In DRIVER ASSISTANCE, select DRIVING SAFETY, then BLIND-SPOT SAFETY

[*Continued on next page*](#)



Blind-spot Collision-Avoidance Assist (BCA)*†4

[Continued from previous page](#)

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- BCA will activate when:
 - Blind-spot Safety is selected in the Vehicle Settings
 - Other vehicles are detected on the rear sides of your vehicle when driving above approximately 12 mph (20 km/h) and the other vehicle is driving above approximately 7 mph (10 km/h)
 - Collision Warning activates when driving above approximately 25 mph (40 km/h) and the other vehicle is driving above approximately 7 mph (10 km/h)
 - Collision-Avoidance Assist activates when driving below approximately 2 mph (3 km/h) and the other vehicle is driving above approximately 3 mph (5 km/h)
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:


- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is cycled, BCW returns to its previous state
- If the turn signal is activated for a left turn at an intersection, BCA may issue a warning regardless of whether the driver intends to complete the turn

When engaged, BCA is a supplemental system. Do not rely solely on this system. Always pay attention to the road and drive safely.

BCA is not a substitute for safe and proper driving. Refer to section 7 in the Owner's Manual for more information.



Lane Keeping Assist (LKA)^{†4}

Lane Keeping Assist is designed to detect the lane markers (or road edges) on the road with a front view camera on the windshield and may assist the driver's steering to help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator  will initially

illuminate gray or green. It will remain gray when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.



Lane Keeping Assist (LKA)



**Driver Safety -
Forward/Lane/
Blind-spot Safety
& Safe Exit**



When the front-view camera does not detect the lane traveled in, the lanes are gray.



When the front-view camera detects the lane traveled in, both lanes are white.



When the front-view camera detects the vehicle moving outside of the lane it is traveled in, the vehicle crossing lane will blink, either on the left or right lane (as shown in both images above)

If LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning on the Instrument Cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

[*Continued on next page*](#)

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.



Lane Keeping Assist (LKA)^{†4}

 
[Continued from previous page](#)

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- The vehicle is between the lane markers



Driver Assistance - Warning Methods & Warning Volume

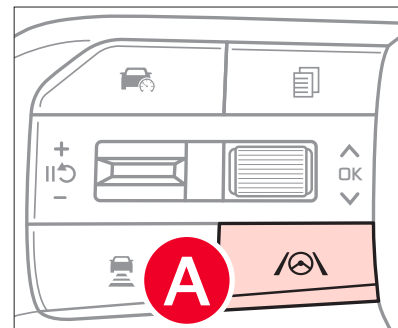

LKA Settings:

- Press and hold the Lane Safety button **A** to turn LKA on or off. You can also enable LKA in the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button is in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings, in DRIVER ASSISTANCE, DRIVING SAFETY, then LANE SAFETY

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation. Actual User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



Blind-spot View Monitor (BVM)*†4

Blind-spot View Monitor (BVM) displays the rear blind spot area of the vehicle in the cluster when the turn signal is turned on to help change lanes.

BVM Settings:

- Enable BVM in the Vehicle Settings in the Infotainment System
 - Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button in the ON position
 - **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then BLIND-SPOT SAFETY and BLIND-SPOT VIEW
- BVM will operate when the Engine Start/Stop button is ON and the turn signal is activated.

 
BVM will not operate when the Engine Start/Stop button is OFF, a turn signal is deactivated, or another warning screen comes up on the Instrument Cluster LCD.



Blind-spot View Monitor (BVM)



Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit

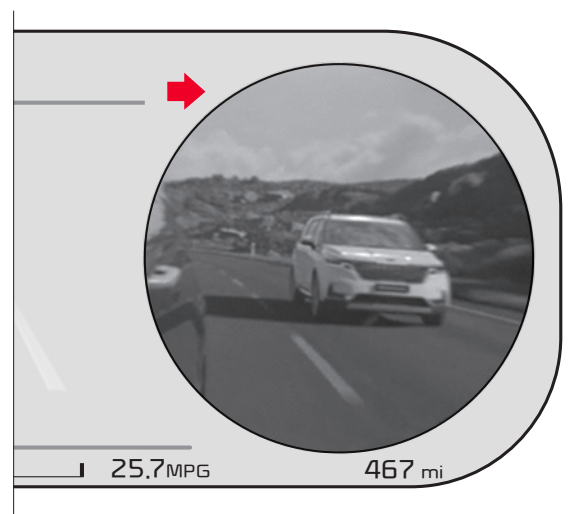

(Display showing left side of vehicle)


See section 7 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Driver Attention Warning (DAW)^{†4}

Driver Attention Warning is designed to detect inattentive driving practices and may give a warning signal to take a break from driving.

If DAW is on and activated, the message “Consider taking a break”  appears on the Instrument Cluster LCD and a warning sounds to suggest the driver take a break when the driver’s attention is below a certain level.



Driver Attention Warning (DAW)



Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert



Driver Assistance - Warning Methods & Warning Volume

Consider taking a break



QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 4 minutes.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 7 in the Owner’s Manual for more information.

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.



Leading Vehicle Departure Alert (LVDA)^{†4}

Leading Vehicle Departure Alert is designed to detect when the vehicle directly in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped, and when it detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, a message **A** may appear on the Instrument Cluster LCD.



Leading Vehicle Departure Alert (LVDA)



Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert



 
Driver Assistance - Warning Methods & Warning Volume

LVDA Settings:

- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button in the ON position
- To turn LVDA on, press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVER ATTENTION WARNING, and LEADING VEHICLE DEPARTURE ALERT



Leading vehicle is driving away

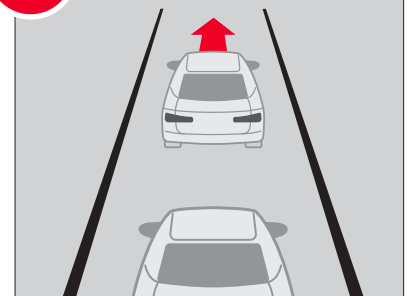

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

When engaged, LVDA is not a substitute for safe and proper driving. Always drive safely and use caution. See section 7 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Safe Exit Assist (SEA)^{†4}

Safe Exit Assist (SEA) can help prevent passengers from opening their door by sounding an audible warning and displaying a warning message on the Instrument Cluster LCD and outside rear-view mirror when your vehicle has stopped and a vehicle is detected approaching from behind.

In addition, when the electronic child safety lock button is in the LOCK position and a vehicle is detected approaching from behind, the electronic child safety lock button will not unlock even if the driver presses the button to prevent the rear doors from opening.

To turn on SEA, go to Vehicle Settings in the infotainment system. Select DRIVER ASSISTANCE, then DRIVING SAFETY, then select SAFE EXIT.



 
Safe Exit Assist (SEA)



Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

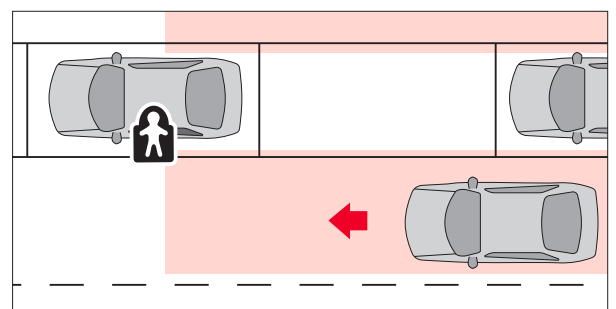

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS: SEA may not detect all objects and the occupants should always be mindful of their surroundings.



Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, SEA is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle.

See section 7 in the Owner's Manual for more information.



Lane Following Assist (LFA)^{†4}

Lane Following Assist is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The Instrument Cluster indicator will initially illuminate gray or green  **B**. It will remain white when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon  will illuminate green **B**.



Lane Following Assist (LFA)



 
 
Driver Safety - Forward/Lane/ Blind-spot Safety & Safe Exit

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. If LFA continually detects no hands on the Steering Wheel, LFA will turn off and give an additional emergency warning.

LFA Settings:

Press the Lane Safety button **C** to turn LFA on or off. LFA will operate only when these conditions are met:

- LFA detects both side lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph

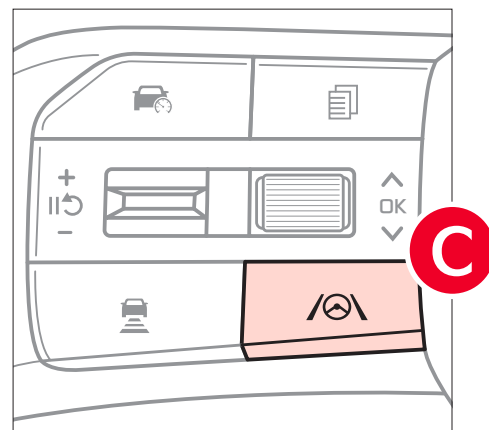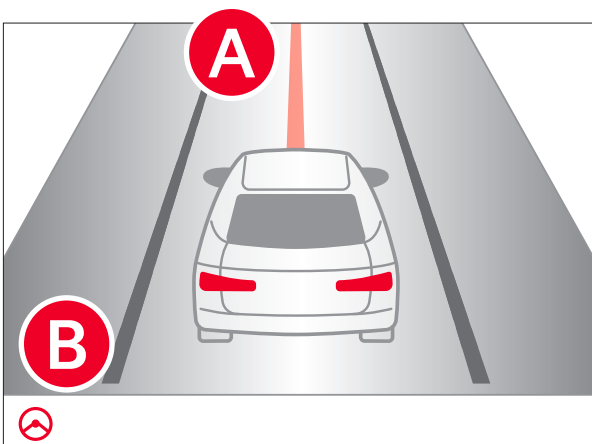

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual User Settings steps may vary by model. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.



Lane Following Assist (LFA)^{†4}

[Continued from previous page](#)



Driver Assistance -
Warning Methods &
Warning Volume

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- LFA is not a substitute for safe and proper driving. Always drive safely and use caution
- If LFA is activated in the Vehicle Settings menu and when combined with SCC and the ignition is cycled, LFA returns to its previous state, on or off. If using the Steering Wheel LKA button, then LKA defaults to off
- The images and colors in the Instrument Cluster may differ depending on the cluster type or theme selected from the settings menu

When engaged, LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

See section 7 in the Owner's Manual for more detailed information, limitations and conditions.



Smart Cruise Control (SCC)^{†4}

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to auto-matically slow to maintain a set distance from traffic without depressing the accelerator


or brake pedal. If SCC detects that the driver is attempting to overtake a vehicle ahead, SCC may help by assisting with acceleration. When SCC is on and activated, the vehicle distance set and the system detects a vehicle slowing or stopping, SCC can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, depress the accelerator pedal or operate the **+||↺- A** switch to start moving the vehicle.



Smart Cruise Control (SCC) with Overtaking Acceleration Assist



 Driver Convenience - Smart Cruise Control & Highway Driving Assist

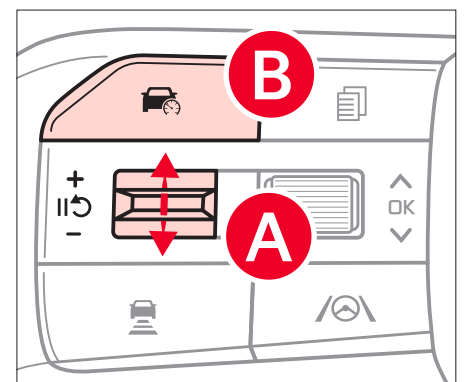

SCC Settings:

Only adjust SCC settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position. Press the SETUP key or onscreen SETUP button on the Infotainment System. Press VEHICLE, then select Driver Assistance, then Smart Cruise Control, and set the distance, acceleration and reaction speed.

To turn SCC on: Press the Driving Assist button **B** to turn system ON and set speed. The CRUISE indicator will illuminate and the speed will be set to the current speed on the Instrument Cluster.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

 


Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)


To set/adjust the SCC speed:

- **Increase speed:** Press the [+] switch **A** up to increase the set vehicle speed
- **Decrease speed:** Press the [-] switch **A** down to decrease the set vehicle speed
- The indicator light, set speed, and vehicle distance will illuminate on the Instrument Cluster

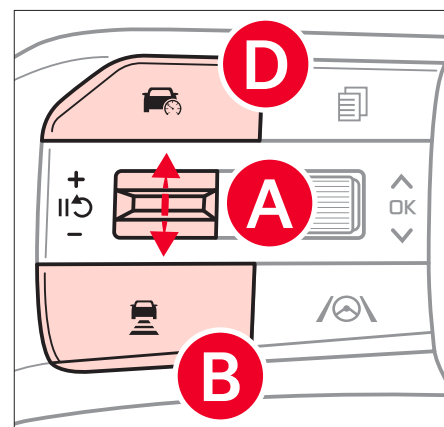

To pause or resume SCC operation: Press the pause/resume button **II↻** **A** or depress the brake pedal to pause the SCC operation. To resume Smart Cruise Control after the function was canceled, operate the +, - or press the **II↻** switch.

 - When pressing the + switch up or - switch down, the set speed will be set to the current speed on the Instrument Cluster
- When pressing the **II↻** switch, the vehicle speed will resume to the preset speed

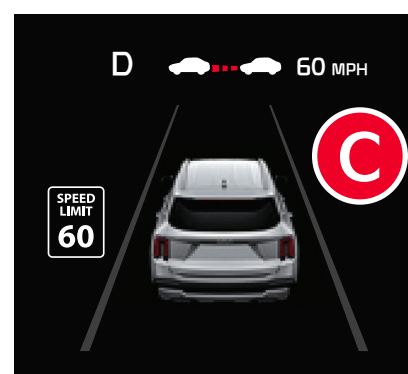

To set the vehicle-to-vehicle distance: Press the Vehicle Distance button **B** on the Steering Wheel. Each time the button is pressed the set distance cycles to the next of four possible distance settings. The image on the LCD screen **C** will change when scrolling through the settings.

To turn SCC system OFF: Press the Driving Assist button **D**.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



Smart Cruise Control (SCC)^{†4}

[Continued from previous page](#)

QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist **D** button, the set speed will be set to 20 mph
- When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected ahead

REMINDERS:


- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See Owner's Manual for other conditions
- If SCC is left enabled, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of




Navigation-based Smart Cruise Control (NSCC)*†4,9

Navigation-based Smart Cruise Control is designed to use navigation system data to help maintain a safe speed based on road conditions when driving on highways while Smart Cruise Control is active.

Highway Curve Zone Auto Slowdown:

NSCC can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system. When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed. During speed control the NAV indicator will blink . When the vehicle passes the curved road, the vehicle may return to its previously set speed.

SCC Operation: With SCC turned on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the  button must be pressed to start moving the vehicle.

 
SCC will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.



Navigation-based Smart Cruise Control (NSCC)



Driver Convenience - Smart Cruise Control & Highway Driving Assist

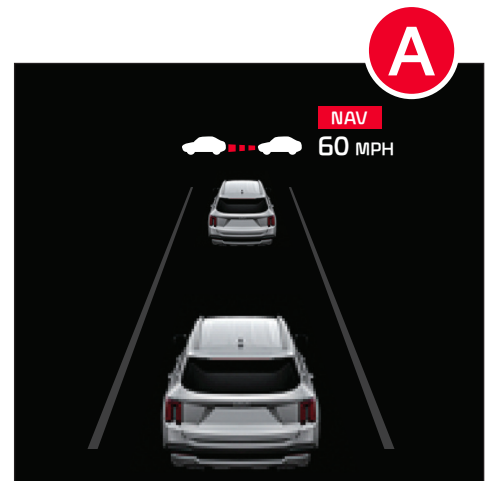

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.





 
Navigation-based Smart Cruise Control (NSCC)*†4,9

[Continued from previous page](#)

NSCC Settings:

- NSCC settings can be adjusted by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button is in the ON position
- **To enable the AUTO HIGHWAY Speed Change:** Press SETUP on the Infotainment System, and select VEHICLE. Then select DRIVER ASSISTANCE, DRIVING CONVENIENCE, and AUTO HIGHWAY SPEED CHANGE

To turn on/set/adjust the NSCC speed - Press the Driving Assist button  **A** on the Steering Wheel to activate SCC and the speed will be set to the current vehicle speed. SCC may decrease the speed to maintain the distance with the vehicle in front. The CRUISE indicator will illuminate on the Instrument Cluster. Press the  button **B** up/down to accelerate/decelerate to the desired speed. Press the button **B** to set the speed.

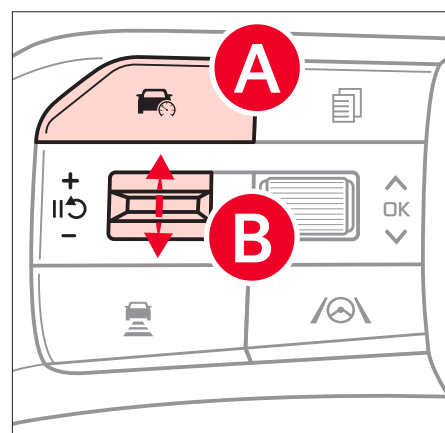

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Navigation-based Smart Cruise Control (NSCC)*†4,9

 
 
[Continued from previous page](#)

To set the vehicle distance: Press the Vehicle Distance button **A** on the steering wheel. Each time you press the button, the vehicle distance will change **B**, indicated by the number of bars that appear on the display.

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume button **C**. The NAV indicator on the Instrument Cluster will change.

To turn NSCC OFF: Press the Driving Assist button **D**. The CRUISE indicator on the Instrument Cluster will turn OFF.

To adjust the sensitivity of NSCC: Press the mode button **E** on the Steering Wheel. With the OK button **F**, select Drive Assistance, then SCC Response. Then select Fast, Normal or Slow.

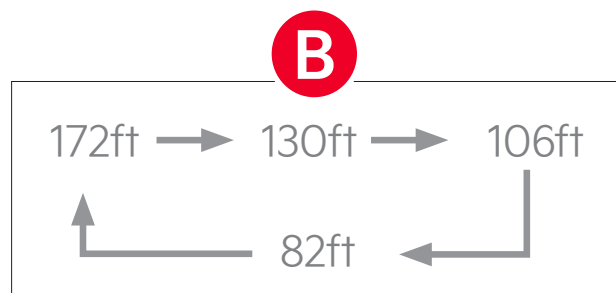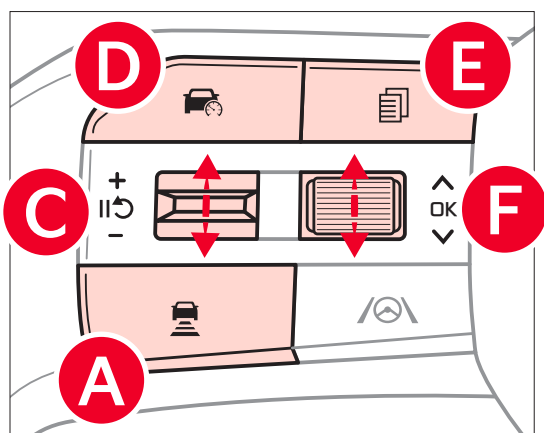

(Distances are approximate and vary depending on vehicle speed)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Navigation-based Smart Cruise Control (NSCC)*†4,9

[Continued from previous page](#)

QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn NSCC on, the set speed will be set to 20 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It can even bring the vehicle to a complete stop in certain conditions. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the +/- switch up/down to start the vehicle
- NSCC is designed to function above approximately 20 mph only
- NSCC will not activate until the brake pedal has been depressed at least once after ignition ON or engine start
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system

REMINDERS:

- CRUISE indicator must be ON in order to operate SCC
- The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed. See the owner's manual for more information
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), Electronic Parking Brake (EPB) is activated and various other conditions. See owner's manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The navigation part of NSCC does not function when a destination is not set on the infotainment navigation system.
- NSCC is only available on certain controlled access roads and highways

NSCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See section 7 in the Owner's Manual for more information. SCC may decelerate if a surrounding vehicle intervenes in front of your vehicle. Smart Cruise Control may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed.



Highway Driving Assist 2 (HDA2)*†4

Highway Driving Assist 2 (HDA2) is designed to help detect vehicles and lanes ahead, and may, in certain situations, help maintain distance from the vehicle detected ahead, maintain the set speed, and keep the vehicle between detected lane markers while driving on the highway or motorway.

 


Highway Driving Assist 2 (HDA2)



Driver Convenience - Smart Cruise Control & Highway Driving Assist

When HDA2 is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA2 will be in standby mode and the indicator light **B** will illuminate gray. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green **A**.

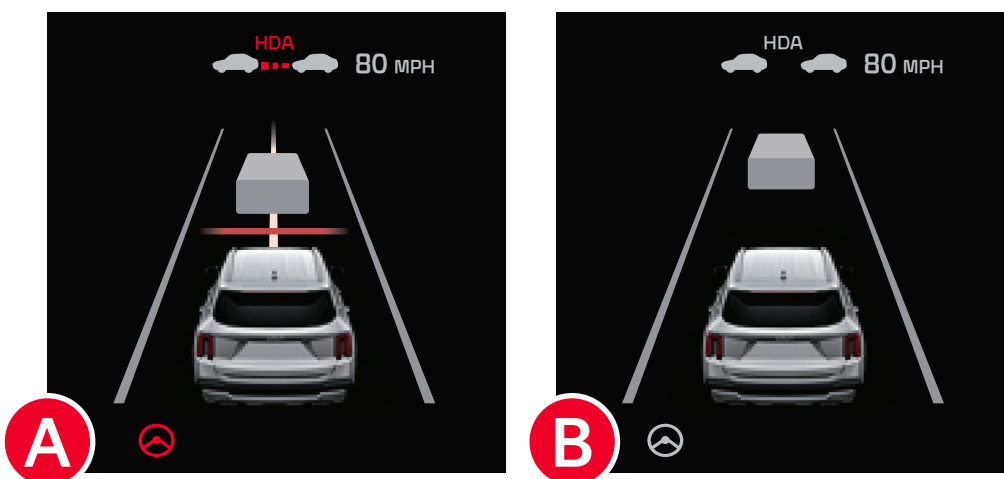

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands remain off the Steering Wheel, HDA2 will cancel.

[Continued on next page](#)

When engaged, Highway Driving Assist 2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 7 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
 


Highway Driving Assist 2 (HDA2)*†4

[Continued from previous page](#)

Highway Lane Change Assist* - Highway Lane Change Assist is designed to assist in changing lanes if the turn signal is on and if the lane change is possible.

- When ready, the indicator may illuminate green on the Instrument panel, blinking while it's operating. The lane markers will also illuminate green
- When in standby mode, the indicator will remain gray
- The indicator will blink white when operation is cancelled
- To cancel Highway Lane Change Assist, return the signal lever back to a neutral position

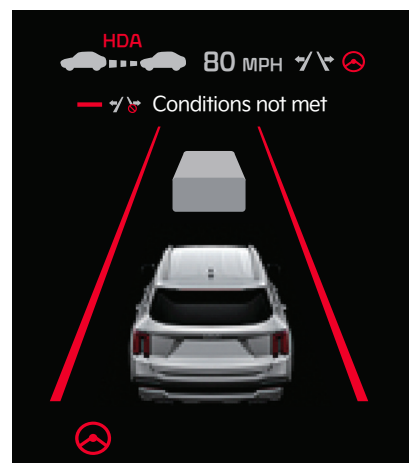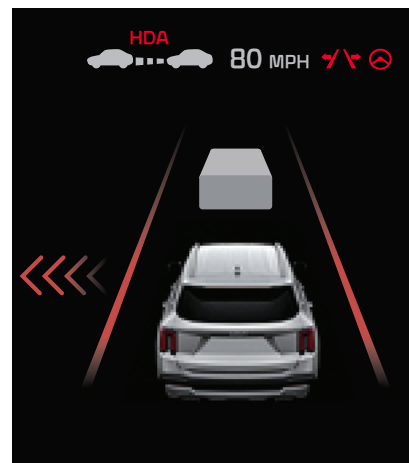

HDA2 Settings:

- HDA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button in the ON position
- **To access Vehicle Settings in the Infotainment System:** Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING CONVENIENCE and then select HIGHWAY DRIVING ASSIST to activate. You can also turn on HIGHWAY LANE CHANGE ASSIST

[Continued on next page](#)

When engaged, Highway Driving Assist 2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 7 in the Owner's Manual for more detailed information, limitations and conditions.



Highway Driving Assist 2 (HDA2)^{*†4}

[Continued from previous page](#)



Driver Assistance -
Warning Methods &
Warning Volume

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- Current highway speeds and controlled or limited access roads information may vary. Future navigation updates may change this information. See Owner's Manual for more information
- When the ignition is cycled, HDA2 returns to its previous state, on or off

When engaged, Highway Driving Assist 2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 7 in the Owner's Manual for more detailed information, limitations and conditions.



Rear View Monitor (RVM)^{†4}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the Infotainment System while the vehicle is in Reverse.

RVM activates when:

 
- Ignition or the Engine Start/Stop button is in the ON position
- Gear Shift is in the **R** (Reverse) position



Driver Assistance -
Parking Safety



Driver Assistance -
Warning Methods &
Warning Volume

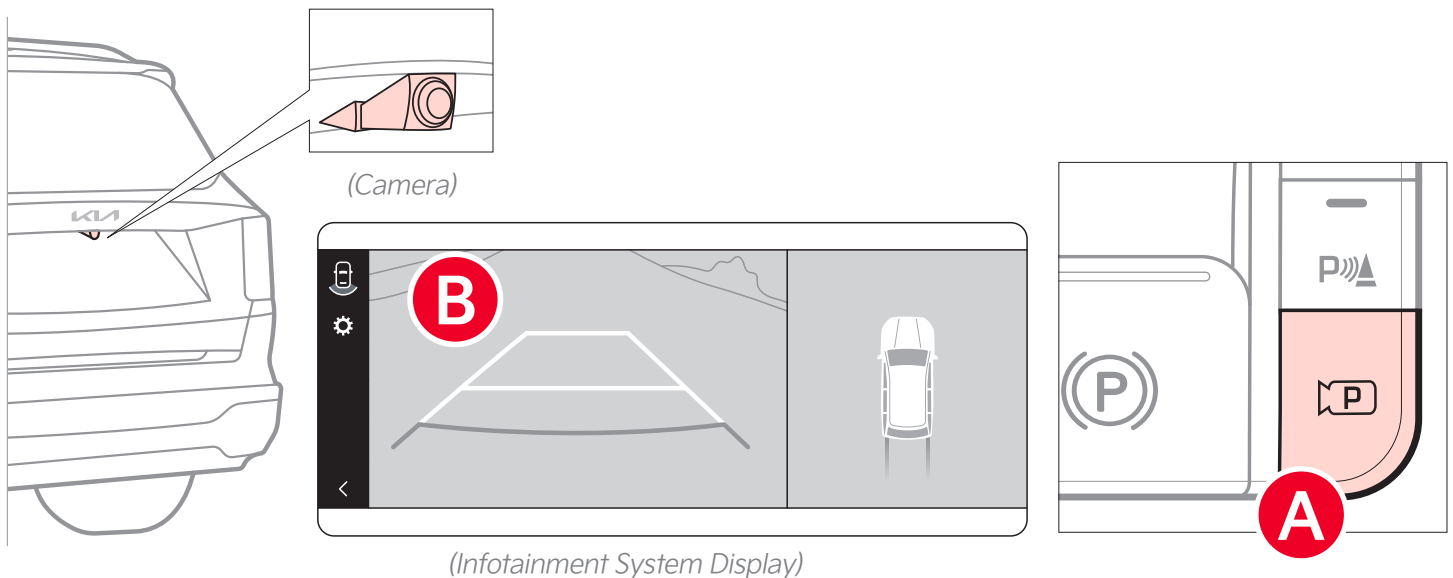

RVM Settings:

- Press the Parking/View button **A** to activate the Rear View Monitor. Then, select the Settings icon **B**, and choose Camera Settings to adjust the available options
- **To adjust the Warnings Methods:** The Warning Methods for the Rear View Monitor can be adjusted in the Infotainment System. Select the Setup, then select Vehicle, followed by Driver Assistance, and then choose Warning Methods

[Continued on next page](#)

When engaged, Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.



Rear View Monitor (RVM)^{†4}

[Continued from previous page](#)

To access Camera Settings in the Infotainment System: Select the SETUP key or the onscreen SETUP button, then VEHICLE. Select DRIVER ASSISTANCE, PARKING SAFETY and CAMERA SETTINGS

REMINDERS:

- RVM is ON by default when the ignition is cycled
- While the Rear View Monitor is active the volume will be lowered on all audio modes
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris, or spots that may have accumulated on the lens
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

When engaged, Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 7 in the Owner's Manual for more information.



Surround View Monitor (SVM)^{*†4}

Surround View Monitor is a parking support system that shows the areas around the front, rear, left, and right sides of the vehicle via four wide-view cameras displayed on the Infotainment System.

Press **A** to turn SVM on or off.

SVM will operate when:

- The Parking/View button **A** is pressed with the gear shift in **D** (Drive) or **N** (Neutral) when vehicle speed is below 6 mph
- Parking/View button **A** is pressed with the gear shift in **P** (Park)
- The gear shift is in **R** (Reverse). When the gear shift is in **R** (Reverse), SVM will turn ON regardless of vehicle speed or button status
- The gear shift is changed from **R** (Reverse) to **N** (Neutral) or **D** (Drive) when vehicle speed is below 6 mph

Off Conditions:

 
- Parking/View button **A** is depressed
- When vehicle speed is above 6 mph, SVM will turn OFF and the screen will change back to the previous Infotainment System
- One of the Infotainment System buttons is pressed without the gear in **R** (Reverse). The screen will change back to the previous Infotainment System



Surround View Monitor (SVM)



Driver Assistance - Parking Safety

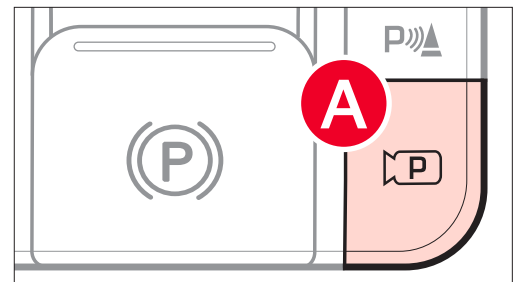

(Located below gear shift knob)

QUICK TIP

The Front View camera will turn off when the gear shift is moved into Park or Reverse or the Parking View button is pressed.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.





Surround View Monitor (SVM)*†4

 
[Continued from previous page](#)

SVM Settings:

- SVM can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the ENGINE START/STOP button is in the ON position

To access SVM Settings in the Infotainment System: Press the SETUP key or the onscreen SETUP button and select VEHICLE. Select DRIVER ASSISTANCE, then PARKING SAFETY and SURROUND VIEW MONITOR AUTO ON.

To change the SVM settings while SVM is operating, press the onscreen settings icon  .

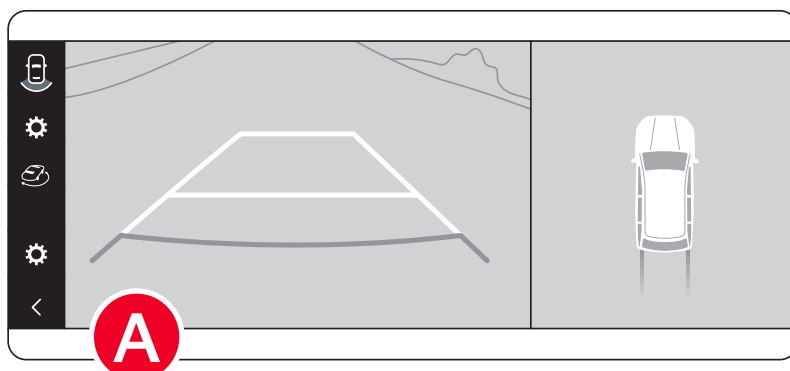

REMINDERS:

- The wide-view camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- While the SVM is active the volume will be lowered on all audio modes. To activate, go to VEHICLE, select DRIVER ASSISTANCE, WARNING METHOD and PARKING SAFETY PRIORITY
- Through normal use and after washing or inclement weather, the rear camera may need cleaning. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens

Surround View Monitoring is only a supplemental system. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.



Rear Cross-traffic Collision Avoidance Assist (RCCA)^{†4}

Rear Cross-traffic Collision-Avoidance Assist is designed to warn the driver, under certain conditions, and may temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in **R** (Reverse).

 
 
 


Rear Cross-traffic Collision Avoidance Assist (RCCA)

When a collision risk is detected, RCCA alerts the driver with a warning message displayed on the instrument cluster **A**, the infotainment screen **B**, and the outside rearview mirrors **C**. If RCCA detects that the collision risk has increased, the system automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in (R) Reverse
- When the vehicle is traveling slower than 5 mph
- When the approaching vehicle is within approximately 82 ft (25m) from the left or right side of your vehicle
- The speed of the vehicle approaching from the left or right is above 3 mph (5 km/h)

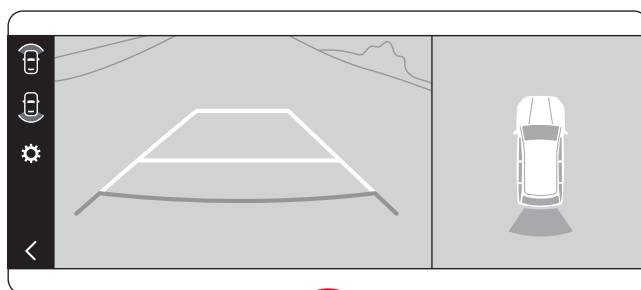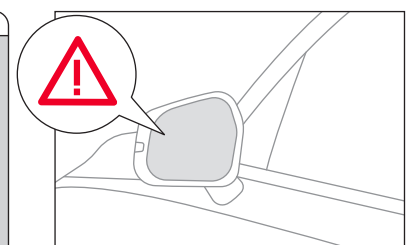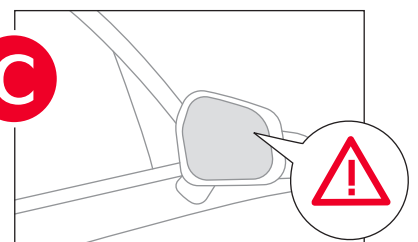**A****B****C**

[Continued on next page](#)

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



Rear Cross-traffic Collision Avoidance Assist (RCCA)^{†4}

[Continued from previous page](#)

RCCA Settings:



Driver Assistance -
Warning Methods &
Warning Volume

- RCCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park, and the ignition is on or the Engine Start/Stop button in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select REAR CROSS-TRAFFIC SAFETY

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: When vehicle power is cycled, RCCA will remain in the previous state.

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 7 in the Owner's Manual for more information.



Reverse Parking Collision-Avoidance Assist (PCA)*†4

Reverse Parking Collision-Avoidance Assist is a supplemental system designed to assist the driver when the vehicle is in Reverse by sounding a warning and temporarily braking if a pedestrian or any object is detected within the rear sensing area of the vehicle **A**, or to help reduce the possibility of a collision.



 
Reverse Parking Collision-Avoidance (PCA)




Driver Assistance - Parking Safety

PCA Settings:

- PCA can be turned on/off by pressing and holding the Parking Safety Button **B** for more than two seconds
- **To access Vehicle settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and BACKWARD SAFETY
- **To adjust the Warnings Methods:** The Warning Methods for Reverse PCA can be adjusted in the Infotainment System. Select the Setup, then select Vehicle, followed by Driver Assistance, and then choose Warning Methods

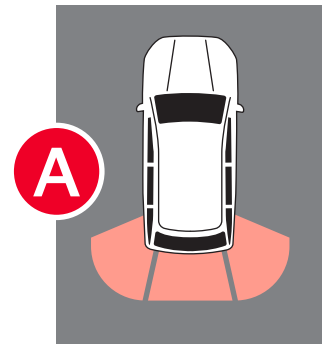

(Instrument Cluster Warning Indicator)

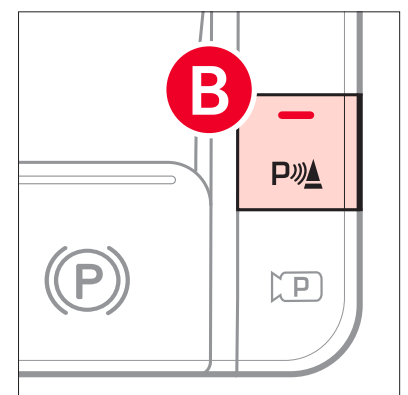 

(Located below gear shift)

Reverse Parking Collision-Avoidance Assist (PCA) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Reverse Parking Collision-Avoidance Assist (PCA) may not detect every object around the vehicle.*

 
See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only.



Forward/Reverse/Side Parking Distance Warning (PDW)*†4

Forward/Reverse Parking Distance Warning is a supplemental system designed to assist the driver by sounding a warning if an object is detected within the sensing area to the front, rear, and side of the vehicle when stopped or driving at a low speed. When an object is detected, warning indicators may illuminate on the Instrument Cluster **A** and the Infotainment System **B**.


To turn PDW on, press the Parking Safety button **C** (LED illuminated). To turn PDW off, press again **C** (LED not illuminated). PDW will activate when the ignition is on/ready and the vehicle is in **D** (Drive) or **R** (Reverse).

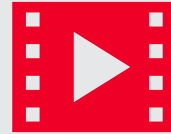

Forward/Reverse/
Side Parking
Distance Warning
(PDW)



 
Driver Assistance -
Parking Safety

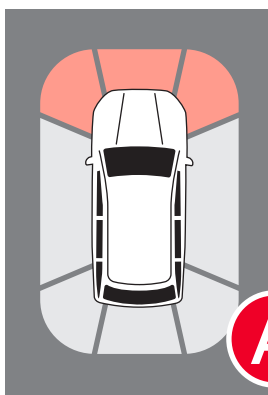

(Instrument Cluster
Warning Indicator)



 (Infotainment System
Warning Indicator)

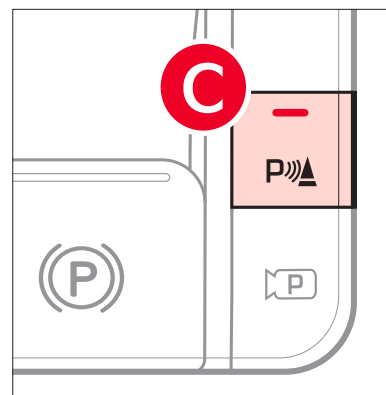

(Located below gear shift)

PDW Settings:

To enable in Vehicle Settings in the Infotainment System - Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select PARKING DISTANCE WARNING AUTO ON.

[Continued on next page](#)

Forward/Reverse Parking Distance Warning is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward/Reverse Parking Distance Warning may not detect every object around the vehicle.

See section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Forward/Reverse/Side Parking Distance Warning (PDW)*†4

[Continued from previous page](#)



Driver Assistance -
Warning Methods &
Warning Volume

QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

Forward/Reverse Parking Distance Warning is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward/Reverse Parking Distance Warning may not detect every object around the vehicle.

See section 7 in the Owner's Manual for more information.



Intelligent Speed Limit Assist (ISLA)^{†4}

Intelligent Speed Limit Assist is designed to use speed limit information from the navigation system to inform the driver of the posted speed limit.

When ISLA is on and active, the system will display the posted speed limit on the Instrument Cluster LCD **A**. If the vehicle's current speed exceeds the detected speed limit, the speed limit icon will illuminate red on the LCD.



 
Intelligent Speed Limit Assist (ISLA)



Driver Assistance - Intelligent Speed Limit Assist

ISLA Settings:

To turn ISLA on or off, press the SETUP key/button on the Infotainment System. Select VEHICLE button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, then SPEED LIMIT. Select one of the three modes:

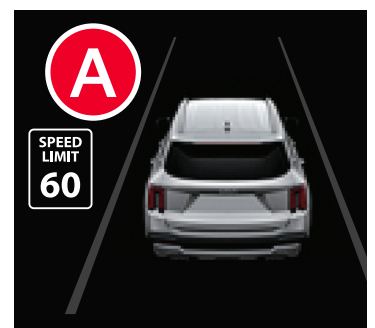

- **Speed Limit Assist:** Informs the driver of the detected speed limit, displays a message to change the set speed of the MSLA or SCC to help the driver stay within the posted speed limit
- **Speed Limit Warning:** Informs the driver of the detected speed limit and warns the driver when the vehicle is traveling faster than the displayed speed limit
- **Off:** ISLA is disabled

QUICK TIP

You can set a speed limit offset to the posted speed limit by going to VEHICLE SETTINGS, then DRIVER ASSISTANCE, select SPEED LIMIT and SPEED LIMIT OFFSET. Set the offset to "0" if you want the vehicle to travel at the detected speed limit, when ISLA is on.

REMINDERS:

 
- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected

When engaged, ISLA is a supplemental system. It is not a substitute for safe driving. Obey all speed limits and always pay attention to the road and its conditions. Refer to section 7 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Instrument Cluster Illumination Control

With the parking lights/headlights ON, press the button **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

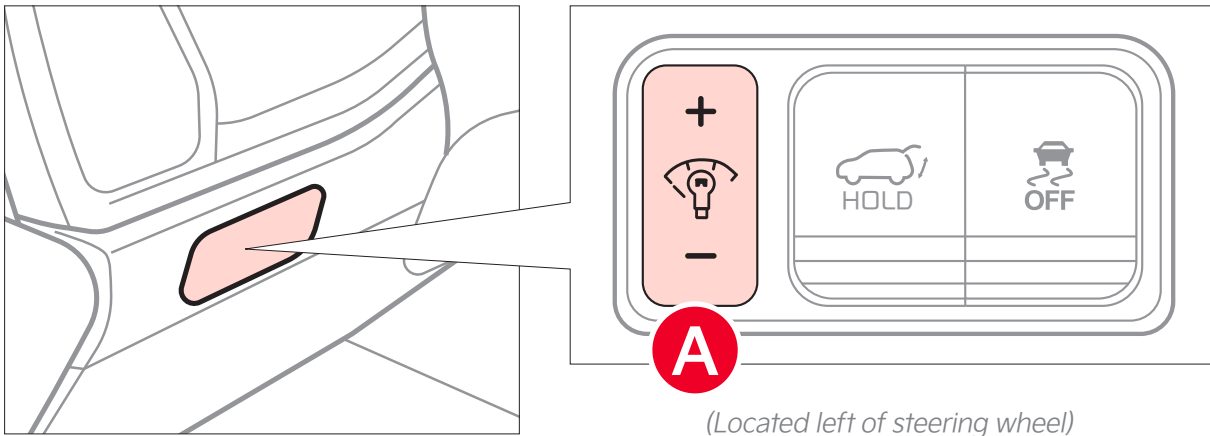

REMINDER: The Instrument Cluster illumination Control does not adjust brightness on the Infotainment System. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Electronic Stability Control (ESC)^{†6}

 
 
The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.



Electronic Stability Control


Press the ESC OFF button **A** to turn Traction Control OFF/ON.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds (ESC OFF indicator will illuminate, and an alert sounds). Press it again to turn ON.

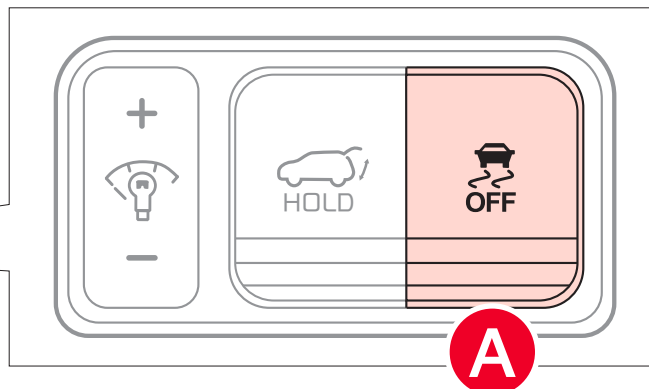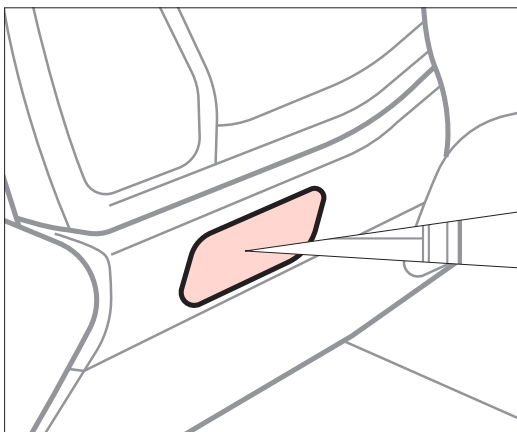

(Located left of steering wheel)

REMINDERS:

- ESC is active by default at vehicle startup. When the ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 6 in the Owner's Manual for more information.



Hill-start Assist Control (HAC)^{†6}

HAC helps prevent the vehicle from rolling backwards, for two seconds, when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator - this is normal HAC operation
- HAC provides a two-second delay before the vehicle may start rolling backwards

REMINDERS:

- HAC does not operate when the gear shift is in P (Park) or N (Neutral)
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Refer to section 6 in the Owner's Manual for more information.



Reverse Parking Aid Function*

 
 
When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backward, the outside rearview mirrors **A** will rotate downward to aid in reverse parking.

When either the L (left) or R (right) switch **B** is selected, the Reverse Parking Aid Function will operate (LED lit).

To turn OFF the function, press the button again.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror select button is moved to neutral position

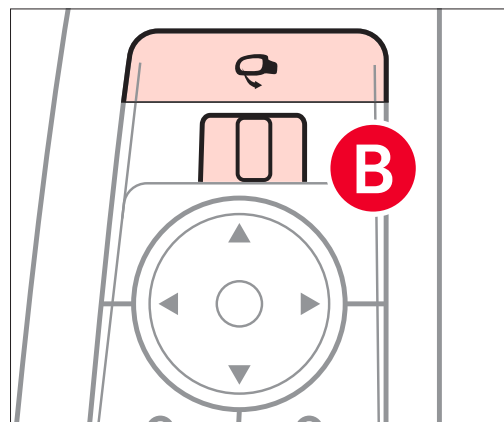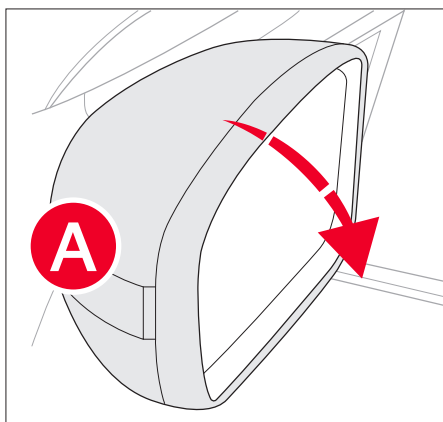

(Button/switch panel located on Driver's Door)

REMINDER: When the button **A** is not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.



Engine Start/Stop Button^{†7}

 
To start the engine:

1. Depress the brake pedal
2. Press the Engine Start/Stop button while the gear shift is in Park or Neutral



Engine Start/Stop Button

To turn the engine OFF, press the Engine Start/Stop button. To use the Engine Start/Stop button, the Smart Key fob must be inside the vehicle.

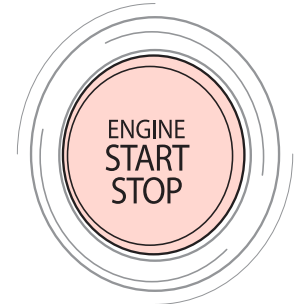

QUICK TIPS

To use electrical accessories:

- **ACC position**
 - When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once
- **ON position**
 - When already in the ACC position (amber light) and without depressing the brake pedal, press the Engine Start/Stop button again (red light)
 - When in the OFF position (no light) and without depressing the brake pedal, press the Engine Start/Stop button twice (reddish-orange light)
- Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 6 in the Owner's Manual for more information.



Power Windows, Window Lock & Central Door Lock

 
- A** Pull/Press to operate the Driver's Window Auto Up/Down
- B** Press to Lock/Unlock All Doors
- C** Press to disable Rear Passenger Windows / activate Electronic Child Safety Lock System disabling rear door handle operation

QUICK TIPS

- Press button **A** again to stop Auto Up/Down function
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- When button **C** is pressed, the window controls for Rear Passengers are disabled
- When closing, be mindful of any objects or people

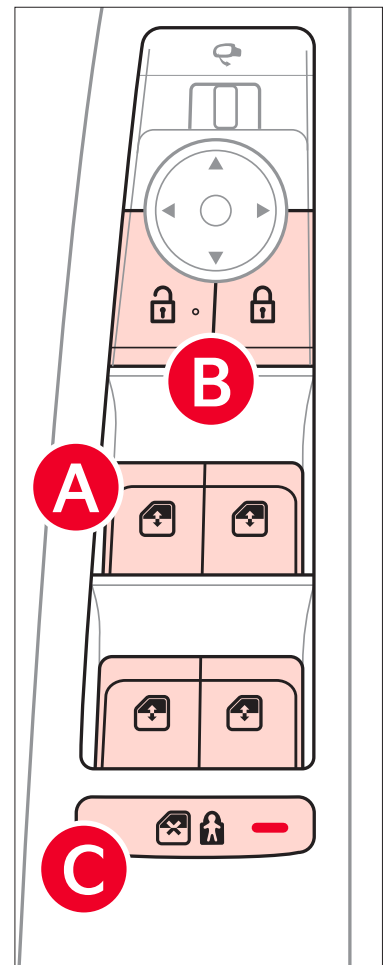

(Button/switch panel located on Driver's Door)

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the Vehicle Settings in the Infotainment System on how to turn Auto Door Lock/Unlock ON/OFF.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Button configuration may vary depending on vehicle model. Refer to section 5 in the Owner's Manual for more information.



Electronic Child Safety Lock System

Press button **A** to lock the rear passenger doors. An indicator will illuminate showing the system is active.

This system is on by default, and then activated once the button **A** is pressed. To deactivate, press the button again.



Electronic Child Safety Lock System



 
Rear Door Locks - Double Pull to Open

Rear Door Locks - Double Pull to Open

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.

QUICK TIP

- To open the Rear Doors, pull the inner door handles two times.

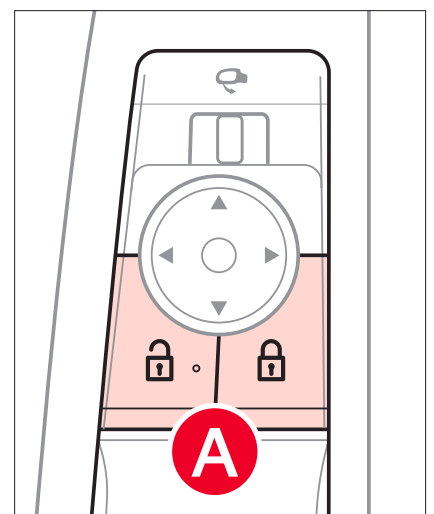

(Button/switch panel located on Driver's Door)

 
Button configuration may vary depending on vehicle model. Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



Power Folding Outside Mirrors*

- A** Move the L or R buttons to select the mirror to adjust
- B** Press button left/right or up/down to adjust mirror position
- C** Press the switch to unfold/fold the outside rearview mirrors
- A** Toggle button to center to automatically fold/unfold mirrors when:
 - The Smart Key* Lock/Unlock buttons are pressed
 - The door outside handle button* is pressed

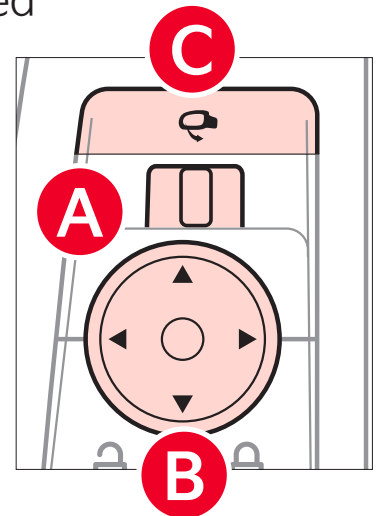


QUICK TIP

- The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

Power/Heated Outside Mirrors*

 Mirror heaters are activated when the Rear Defroster is turned on **D**. Use mirror to defog/deice side mirrors.

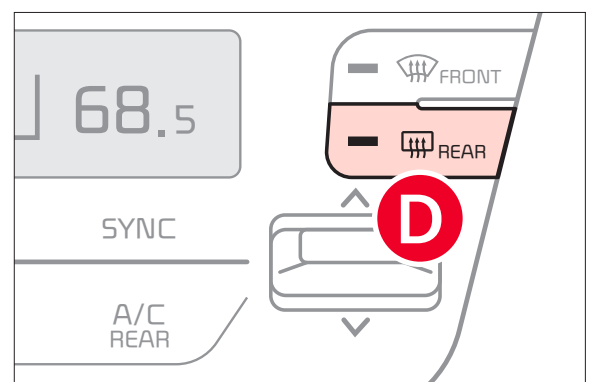


Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

 - If needed, pull the mirror firmly until it folds.

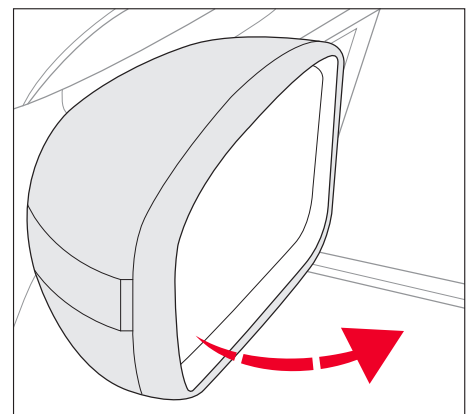

Refer to section 5 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.



Turn Signals & Fog Lights*

To operate:

 - Slightly move lever up/down to activate One-Touch Lane Change Signal **A**
- **Turn Signals** - Move lever Up/Down for Right/Left Turn Signal **B**
- **Fog Lights** - Press toggle switch **C** to turn Fog Lights ON/OFF

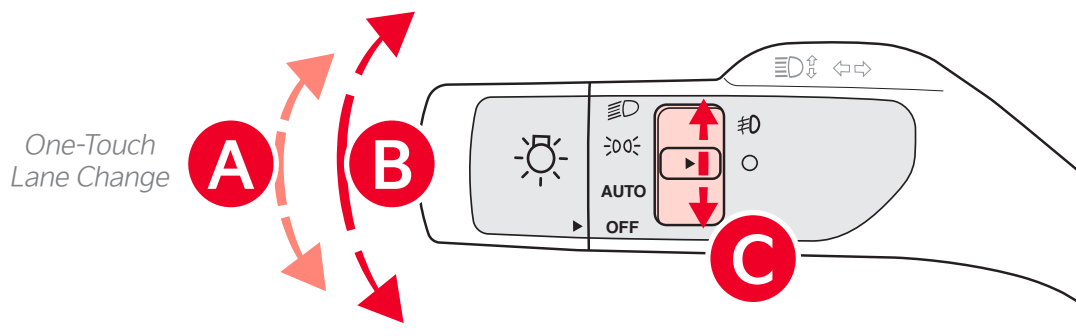

REMINDER: Headlights must be ON for Fog Light operation.

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing **A**. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to Vehicle Settings in the Infotainment System.

Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

 


Headlights & High Beams

To operate:

- Rotate the switch to change the Headlight function **A**
- Push the lever to turn High Beams ON **B**
- Pull the lever to flash Headlights/High Beams **C**

AUTO Light control — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

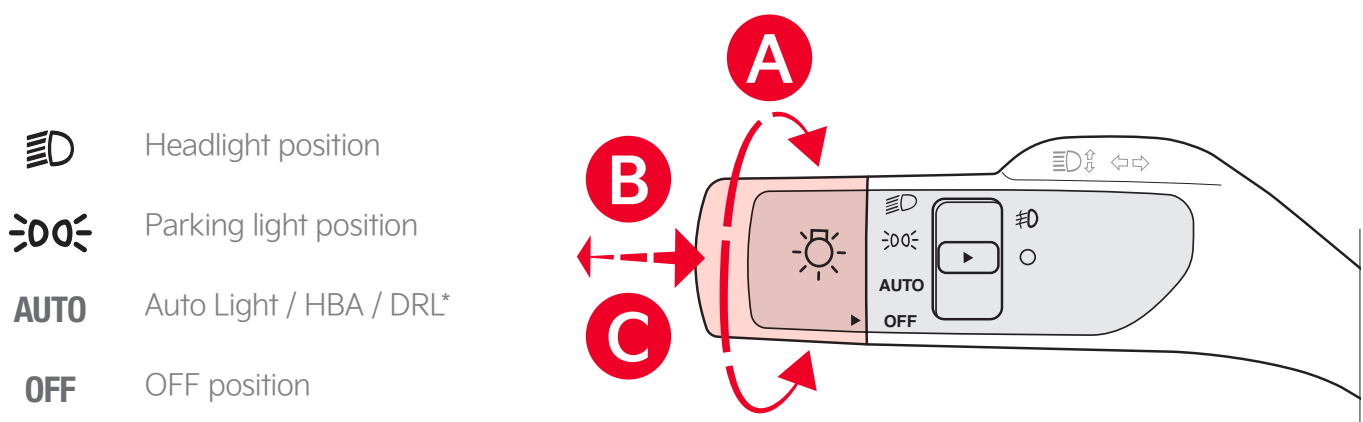

Daytime Running Lights (DRL)* — DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

Images are for illustrative purposes only and may not reflect actual feature or operation.






High Beam Assist (HBA)

 
High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.



High Beam Assist (HBA)

To enable HBA, go to Vehicle Settings in the Infotainment System. Select LIGHTS and HIGH BEAM ASSIST. To activate HBA, toggle the light switch to the AUTO Light position **A** and push the lever away from you **B**. The High Beam Assist indicator will illuminate  **AUTO**.

-  Headlight position
-  Parking light position
- AUTO** Auto Light / HBA / DRL*
- OFF** OFF position

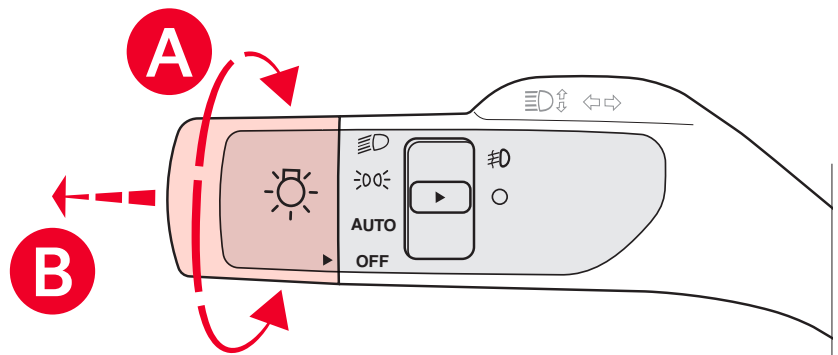

REMINDERS:

- HBA does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you when the high beam is off, the high beam will turn on without High Beam Assist canceled. If the lever is pulled towards you when the high beam is on by High Beam Assist, low beam will be on and the High Beam Assist will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When HBA is not working properly, the 'Check High Beam Assist system' warning message will appear and warning light will appear on the cluster. See an authorized Kia dealer for service

Refer to section 5 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Windshield Wipers & Washers

To operate:

- Move the lever Up/Down **A** to change Wiper modes
- Push switch **B** to adjust Intermittent Wipe Speed
- Pull the lever to spray and wipe **C**



Wipers and Wiper Stalk

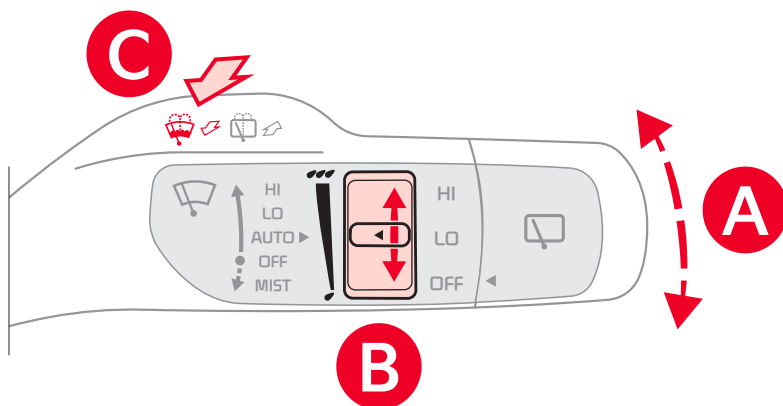

LO: Slow wipe

HI: Fast wipe

INT/AUTO*: Intermittent wipe/
Rain Sensing*

OFF: Wiper off

MIST: Single wipe

QUICK TIPS

- Moving switch **B** up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Rain Sensing* (Auto Control Wipe): The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To vary the speed setting, press the Wiper Switch up/down **A**.

If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system.

These illustrations are for demonstration purposes only. Actual feature(s) on vehicle may vary. Refer to section 5 in the Owner's Manual for more information.



 
Rear Wiper & Washer*

To operate:

- Rotate Rear Wiper switch to change Wiper modes **A**
- Push to spray and wipe **B**



Wipers and Wiper Stalk

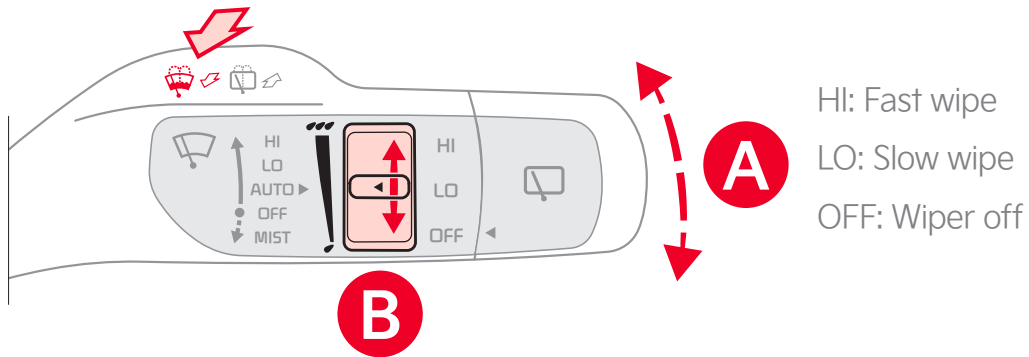

QUICK TIP

On Rear Wipers, the intermittent wipe function is not adjustable. LO and HI sets wiper speed.

Refer to section 5 in the Owner's Manual for more information.

Illustrations are for demonstration purposes only. Actual features on vehicle may vary.



Lifting Wipers (Wiper Service Mode)

 
 
To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **A** to prevent damaging the hood.



Lifting Wipers
(Wiper Service
Mode)

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch **B** to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

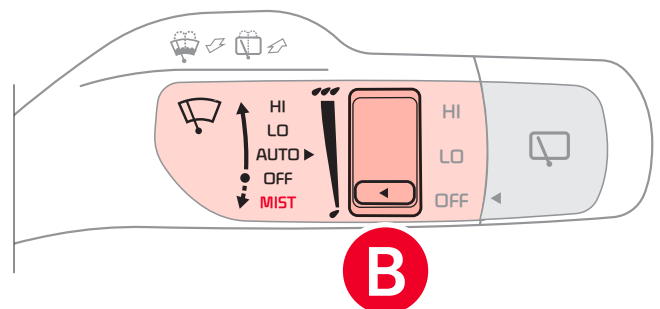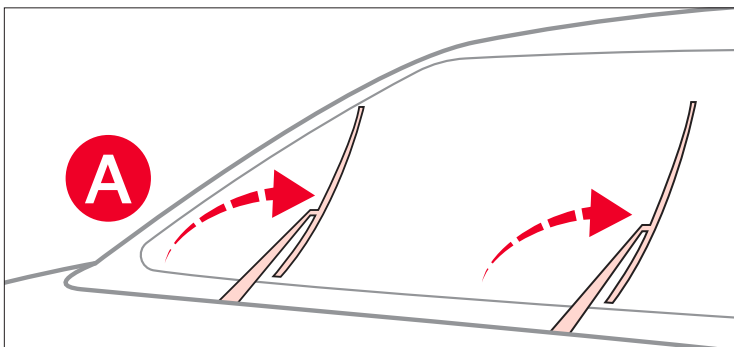

These illustrations are for demonstration purposes only. Actual feature on vehicle may vary. Refer to section 9 in the Owner's Manual for more information.



STEERING WHEEL CONTROLS

Tilt/Telescoping Steering Wheel^{†20}

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and distance **C**.

 
When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.



**Tilt/Telescoping/
Heated Steering
Wheel**



**Steering Wheel
Controls**

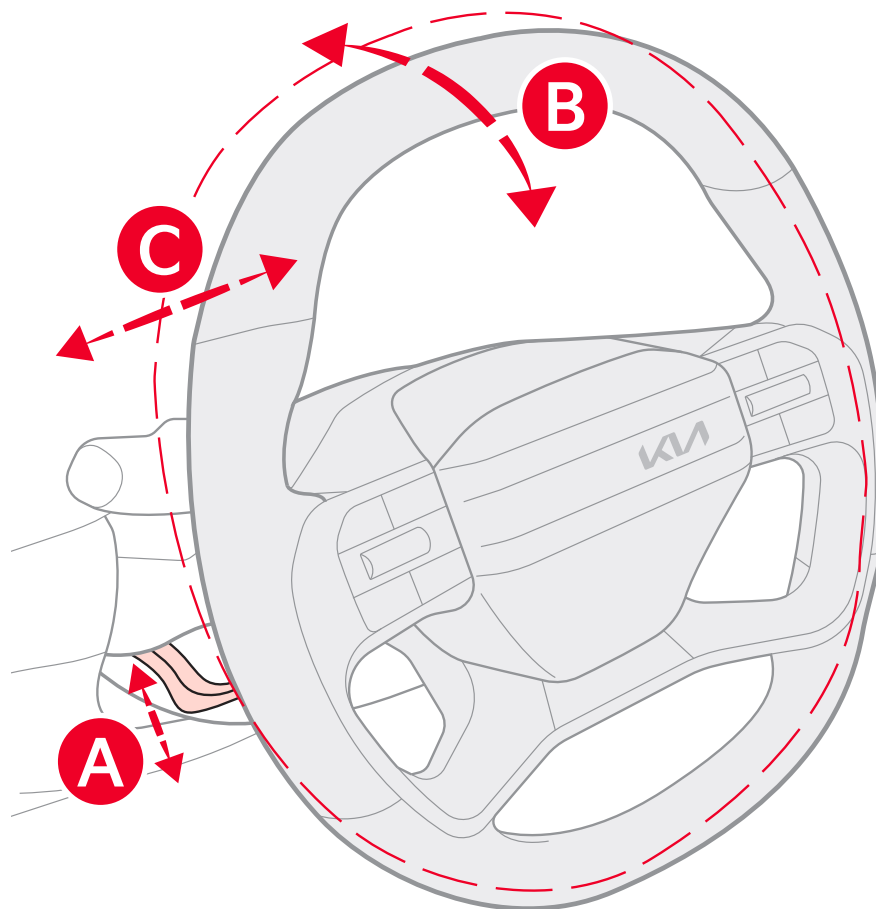

QUICK TIP

Prior to adjusting the angle, it may be helpful to first adjust the steering wheel's distance from the driver.

Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.

For illustrative purposes only. Your steering wheel may vary. See section 5 in the Owner's Manual for more information.



Steering Wheel Audio Controls^{†3,17,18}

A Audio MODE button: Press to cycle through FM/AM/SiriusXM[®]*/Media modes

B Seek/Preset buttons: FM/AM/SiriusXM[®]* Modes: Press to advance through Preset Stations. Press and hold to auto seek

C Volume button: Press up/down to raise/lower volume

 
Mute button: Press to mute all audio (Media pauses in some Media modes when pressed)



Steering Wheel Controls



Custom Star Buttons & Radio Favorites

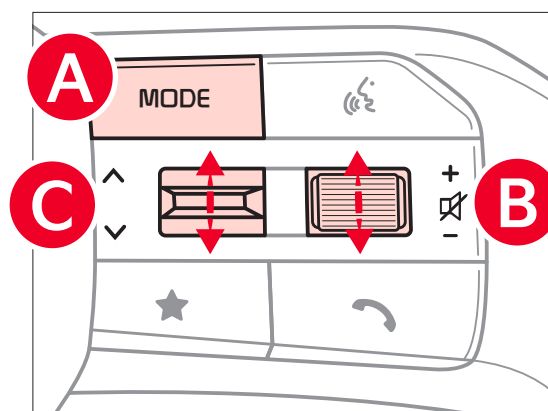

(Controls on right side of Steering Wheel)

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide. Images are for illustrative purposes only and may not reflect actual feature or operation.



Bluetooth® Wireless Technology^{†3,18}

- A Voice Recognition button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition



 
Steering Wheel Controls

Kia Connect^{†1} with Navigation*: When enrolled with a Kia Connect^{†1} subscription, press this button to activate the Kia Connect^{†1} Voice Assist to use navigation guidance and search destinations

- B Volume button:** Press up/down to raise/lower speaker volume

Mute button: Press to mute the microphone during a call

- C Call/End Call button:** Press to place/answer calls or to end a call, reject an incoming call or cancel a function. If no phone is paired, press the button to pair a phone

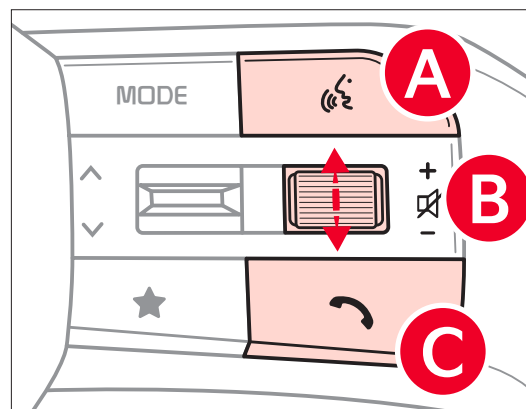

QUICK TIP

When using the voice command feature, wait for the system beep before speaking the command.

[Continued on next page](#)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.



Bluetooth® Wireless Technology^{†3,18}

[Continued from previous page](#)

Pairing a Phone - For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle's Quick Start Guide.



 
**Automatically
Activated
Bluetooth**

QUICK TIPS

- During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth*® connection requests.
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth*® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple *Bluetooth*® devices

How to Place a Call Using Steering Wheel Controls - When using the voice command feature, wait for the system beep before speaking the command. There are two options for placing a call:

- **Option 1:** Press the Call/End Call button **A** (displays the phone screen with call history)
- **Option 2*:** Press the Voice Recognition button* **B**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

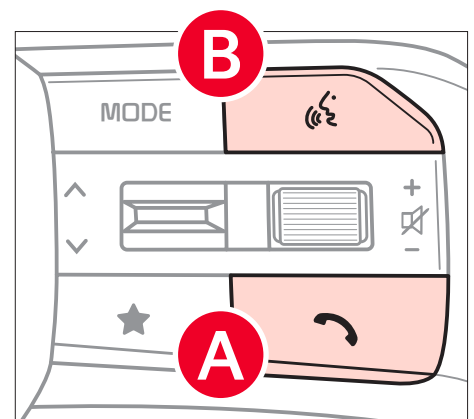

REMINDER: *Bluetooth*® Wireless Technology audio and calling functions are supported when connected to a *Bluetooth*® enabled device.

[Continued on next page](#)

Images are for illustrative purposes only.

Bluetooth® Wireless Technology†3,18

[Continued from previous page](#)

Voice Recognition* and Phone

Contact Tips: The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed

below. To help optimize the *Bluetooth®* Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)



Voice Recognition
Tips



Voice
Recognition -
Wake Up Word

QUICK TIPS

- **Bluetooth® Music Streaming** - If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- **Close windows and sunroof and turn off A/C** - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say “Help” to get a list of available commands
- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

For more information, refer to the *Car Infotainment System Quick Reference Guide* or the *Owner’s Manual*.

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



Android Auto™†³ / Apple CarPlay®†³ Setup

Wireless Android Auto:

1. To use Android Auto wirelessly, on the Infotainment System home screen, press SETUP, DEVICE CONNECTIONS, PHONE PROJECTION and ANDROID AUTO OPTIONS. Then select ENABLE ANDROID AUTO
2. On the DEVICE CONNECTIONS screen, press ADD NEW. Make sure Wi-Fi and *Bluetooth*® are enabled on your smartphone and follow the prompts on your phone
3. An Android Auto message will appear on the infotainment system screen when the phone is connected
4. Press YES to connect to Android Auto



Wireless
Android™ Auto



Wireless
Apple CarPlay®

Wireless Apple Carplay:

1. To use APPLE CARPLAY wirelessly, on the Infotainment System home screen, press SETUP and DEVICE CONNECTIONS. Then press ADD NEW
2. Turn on Wi-Fi and *Bluetooth*® on your iPhone. Select the vehicle name from the list of *Bluetooth*® devices. When you see the matching passkeys, click PAIR. You can allow contacts to download
3. On your iPhone select USE CARPLAY. On the Infotainment System screen, press YES to activate CarPlay

[*Continued on next page*](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Android Auto™†³ / Apple CarPlay®†³ Setup

[Continued from previous page](#)

QUICK TIP

If Android Auto™ / Apple CarPlay® randomly disconnects, visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns.

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - OS Android™ 8.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - iOS® software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
- It is recommended to update your phone to the latest operating system release
- Android Auto™ and Apple CarPlay® requires smartphone cellular data service. Normal data rates will apply

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



Kia Connect Activation^{*†1}

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your Infotainment System:
 - a. From the home screen, press the SETUP key
 - b. Press DATA/NETWORK
 - c. Press Under KIA CONNECT, press ACTIVATE SERVICES
 - d. Then press ACTIVATE
2. Read and agree to Terms of Service and Privacy Policy then press AGREE
3. Enter phone number or email address to receive a verification code, then press OK and SUBMIT
4. Click on the link and a page will open requesting you to create an account; Provide the information needed and select SAVE to create the account
5. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
6. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy



**Kia Connect
Activation**



**Kia Connect &
Kia Access App**

QUICK TIP

If you have already have a Kia Owners Portal account (owners.kia.com), you can use the same phone number or email that is registered to that account. You will need to enter the password prior to receiving the verification code.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.




Kia Connect Assistance^{*†1}

 
Kia Connect Local Search **A** -

Press to connect to the search function to find points of interest or other locations, like “cafe.”



Kia Connect Assistance

Roadside Assist^{†14}  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services.

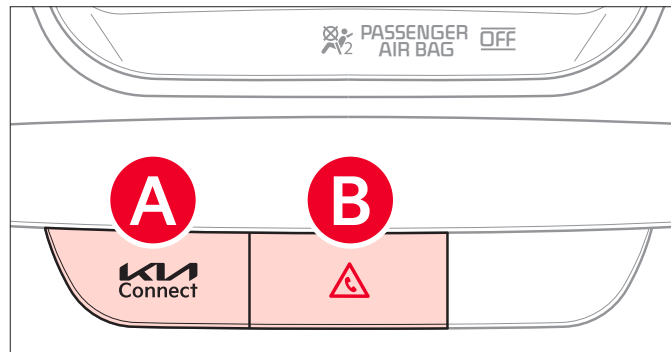

(Buttons on overhead console; in some models, the buttons are located in the Rear View Mirror)*

Images are for illustrative purposes only. For more information, refer to the Car Infotainment System Quick Reference Guide.



Kia Access App^{†2} Download

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and start an account (refer to Kia Connect^{†1} Activation page). Get to know your new Kia and the available convenient features on the app.



QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength to use Kia Connect^{†1}. If these conditions are not met, remote commands may not execute or may take longer to execute. It will also affect voice commands such as navigation POI or address search
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect^{†1} app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect^{†1} app, restart the vehicle

Download the Kia Access App by clicking this link.



**Download the
Kia Access App**



Kia Access App^{†2} Features Guide

The Kia Access App Features Guide is a step-by-step guide that helps you utilize the app to its full potential by detailing how to use each feature and adjust various settings. Below are some of the topics included:



**Kia Access App
Features Guide
Link**

 
- Remote Commands
- Set Climate
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

For further Kia Connect^{†1} operations, refer to the Car Infotainment System Quick Reference Guide.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.



Kia Connect with Navigation^{*†9} - FM/AM/ SiriusXM^{®†17}/Media (USB, *Bluetooth*^{®†3} Audio)

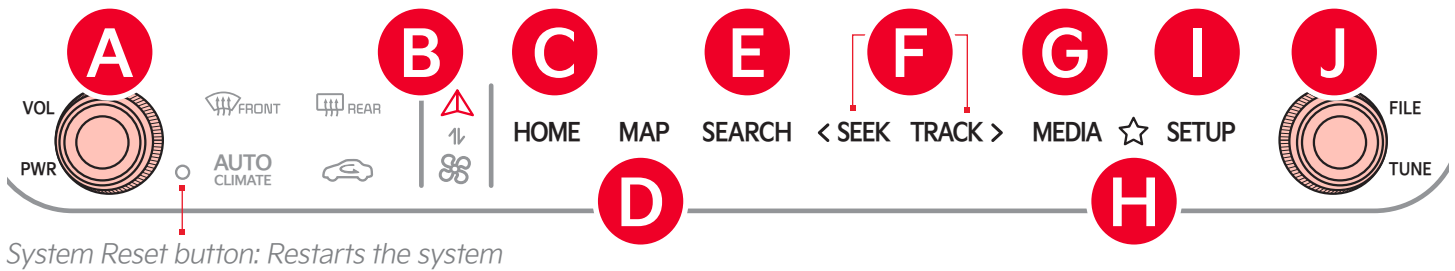

- A POWER button/VOLUME knob:** Press to turn the Media ON/OFF. Press and hold to turn off the screen and sound. Rotate to adjust the system volume (except for navigation sound)
- B Infotainment/Climate switch button:** Switch between control panel functions. Press/hold to access the control panel default settings screen
- C HOME button:** Press to go to the Home screen. Press and hold to turn the Quick Control function ON/OFF
- D MAP button:** Press to view the current location on the map. When receiving guidance on the Map screen, press to repeat voice guidance
- E SEARCH button:** Displays the Search screen
- F SEEK/TRACK buttons:** While listening to the radio, press to change the station. While playing media, press to change the track/file
- G MEDIA button:** press to play the connected media. Press and hold to display the Media Home screen
- H Custom button:** Press to play the user-defined function. Press and hold to display the function settings screen
- I SETUP button:** Displays the Settings screen. Press and hold to display the version information screen
- J TUNE knob:** While listening to the radio, press to adjust the frequency or change the station. While playing media, press to scan music or files. During scanning, press to select the current channel, music or file. While on the map screen, zoom in or out on the map (except for navigation sound)



Kia Connect with
Navigation - CCNC
Software



Navigation System
Important Tips



AC & Infotainment
System - Switchable
Controller

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Kia Connect with Navigation^{*†9} - FM/AM/ SiriusXM^{®†17}/Media (USB, *Bluetooth*^{®†3} Audio)

[Continued from previous page](#)

Sound Settings: To adjust the sound settings from any audio mode, press the SETUP button on the infotainment system, then select the onscreen SOUND button. Select the menu item to change settings, and use the onscreen buttons to adjust settings.

Radio Presets: To save a preset, press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

SiriusXM[®] Smart Favorites: In Radio mode, choose SiriusXM[®], then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program the Custom Key, press and hold to select an available feature you would like the Custom Key to open.



Infotainment
System Driver
Profile



Wifi Hotspot



Sound Settings &
Premium Sound

[Continued on next page](#)



Kia Connect with Navigation^{*†9} - FM/AM/ SiriusXM^{®†17}/Media (USB, *Bluetooth*^{®†3} Audio)

[*Continued from previous page*](#)

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay® (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt Kia Connect^{†1} Command Feedback by pressing the Voice Recognition button on the steering wheel

REMINDERS:

- To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.
- Prolonged use of the infotainment system in ACC mode may drain the vehicle's battery

For further Kia Connect with Navigation operations, refer to the Car Infotainment System Quick Reference Guide. Your vehicle's audio system may differ from that in the illustration.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



 
USB-C Charger Ports

USB-C Charger Ports* A: USB-C charger ports* are located in the Center Panel, inside and on the back of the Center Console.




USB-C Ports & Power Outlets

Power Outlets B: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

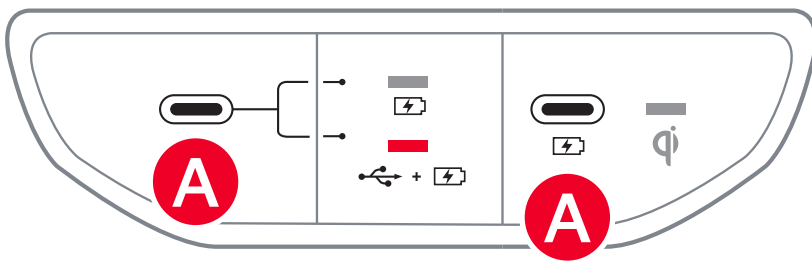

 (Located on Center Console below Climate Controls)

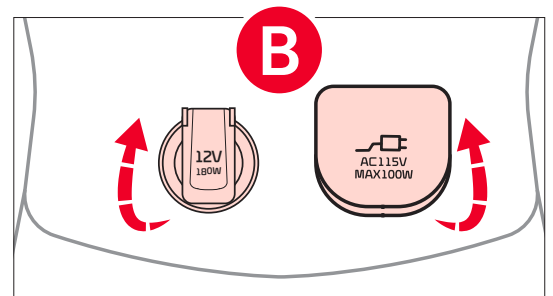

(Located on Back of Center Console)

QUICK TIP

The power outlets are inactive when the Engine Start/Stop button is OFF.

REMINDERS:

- Using the Power Outlet (accessory plug) and USB-C charger for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged periods of time with the Engine Start/Stop button in the IGN Position (Engine OFF)
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to device
- The USB-C data port (Multimedia USB-C port) is located next to the Power Outlets. The USB-C Charger ports do not support data transfer

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
Refer to section 5 in the Owner's Manual for more information.



AC Inverter*

The AC inverter supplies 115V/150W electric power to operate accessories or devices.

To use the AC inverter, open the AC inverter cover **A** and connect a plug to it. The AC inverter is ON when the vehicle is on.

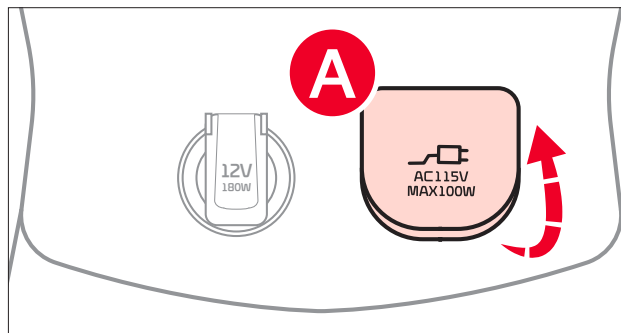

(Located on Back of Center Console)

Refer to section 5 in the Owner's Manual for more information.

Digital Clock - Infotainment System

Press SETUP, then select General, scroll down and select Date/Time from the menu to adjust. Then use the onscreen buttons to navigate through setup and return to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect⁺1 with Navigation*)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to the Car Infotainment System Quick Reference Guide for more information.



Wireless Smartphone Charging System*

Charge a compatible Qi Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

 


**Wireless
Smartphone
Charging**

1. Enable Wireless Charging in the User Settings mode in the Vehicle Settings in the Infotainment System, select CONVENIENCE then WIRELESS CHARGING SYSTEM
2. Place the compatible smartphone on the center of the charging pad **A**
3. Indicator light **B** may change to amber once wireless charging begins
4. Once charging is complete, the amber light may change to green

*Requires Qi-enabled device
or Qi-enabled case*

*(Located in front of gear
shifter)*

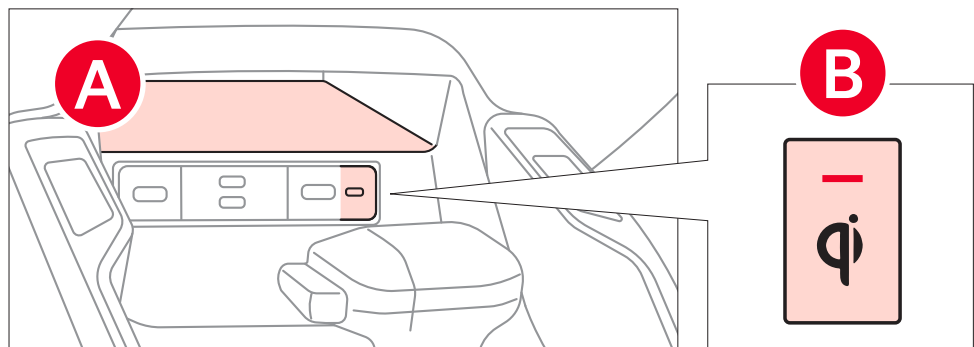

QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- Wireless charging must be enabled in user settings
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber
- For wireless charging to occur, all doors (excluding the rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- Removing the phone case may improve charging efficiency and ensure a secure connection

[Continued on next page](#)

Charging system only works with select devices. Refer to section 5 in the Owner's Manual for warnings and instructions. Images are for illustrative purposes only and may not reflect actual feature or operation.



Wireless Smartphone Charging System*

[*Continued from previous page*](#)

 
REMINDERS:

- Some smartphone models are not Qi certified, which may affect the availability, speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging, however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

Charging system only works with select devices. Refer to the section 5 in the Owner's Manual for warnings and instructions.



Automatic Climate Control*

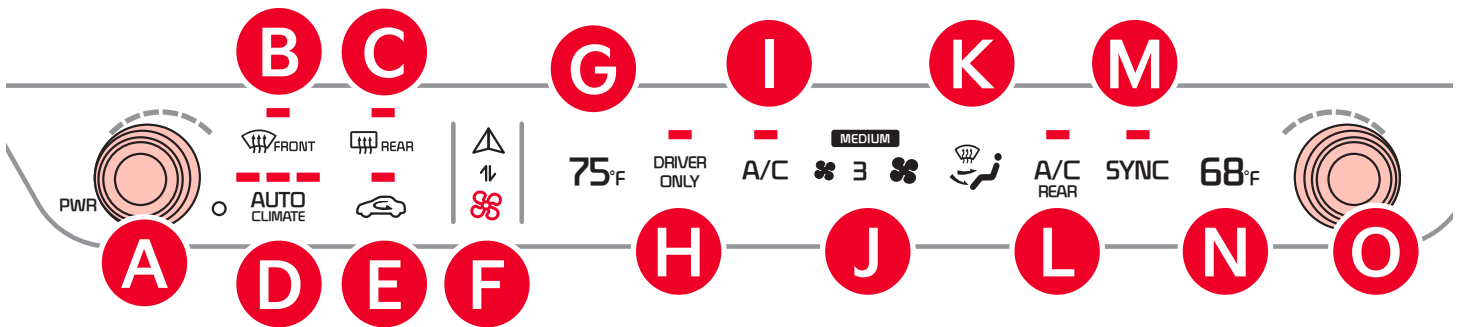

- A** Driver's temperature control knob
- B** Front windshield defroster button
- C** Rear window defroster button
- D** Auto Climate indicator
- E** Circulation control button
- F** Infotainment/Climate Control
- G** Driver's temperature setting
- H** Driver's A/C button
- I** A/C on/off button
- J** Fan speed control buttons
- K** Mode selection button



Automatic Climate Control Operation



AC & Infotainment System - Switchable Controller

- L** Rear A/C control button
- M** A/C Sync button
- N** Passenger temperature setting
- O** Passenger temperature control knob

Air Flow Modes - To select Air Flow Modes, press the mode buttons **K** to choose the desired mode:



REMINDERS:

- A/C button indicator **I** will not illuminate if the desired adjusted temperature is greater than that of the ambient temperature.
- Recirculation modes **E**: vehicle will automatically switch to recirculation mode when Max A/C is turned on

[*Continued on next page*](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Automatic Climate Control*


[Continued from previous page](#)

 
Climate Control Auto Function:

- Press A/C **A** to select Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected


- Press **B** to set desired fan speed
- Rotate the knob **C** to set desired temperature

Defrost/Defog Outside and/or Inside Windshield:

- Set Front Fan Speed **B** to the highest position
- Set Temperature **C** to Hot
- Press the Front Defrost button  **D**

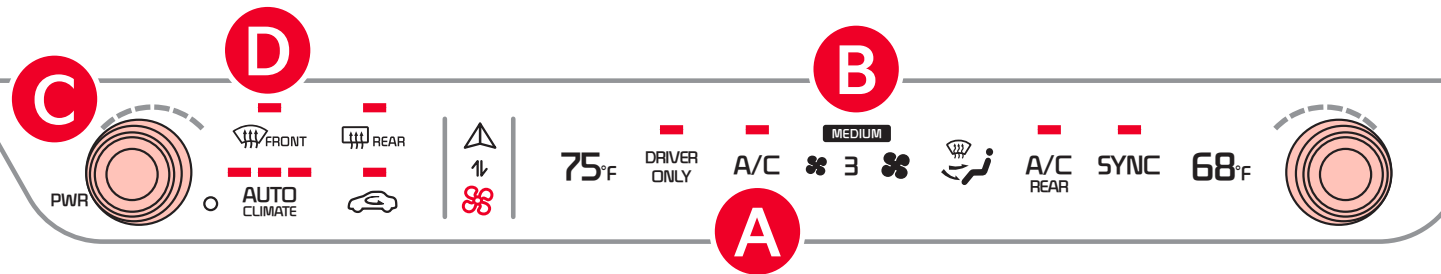

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

*IF EQUIPPED



Automatic Climate Control*

[Continued from previous page](#)

Auto Defogging System (ADS): Auto

Defogging is designed to reduce the fogging up of the inside of the windshield


by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode in certain conditions.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.



Auto Defogging System (ADS)

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

 
REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through the vents if the Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility and/or cause smell/odor

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.




Manual Climate Control*

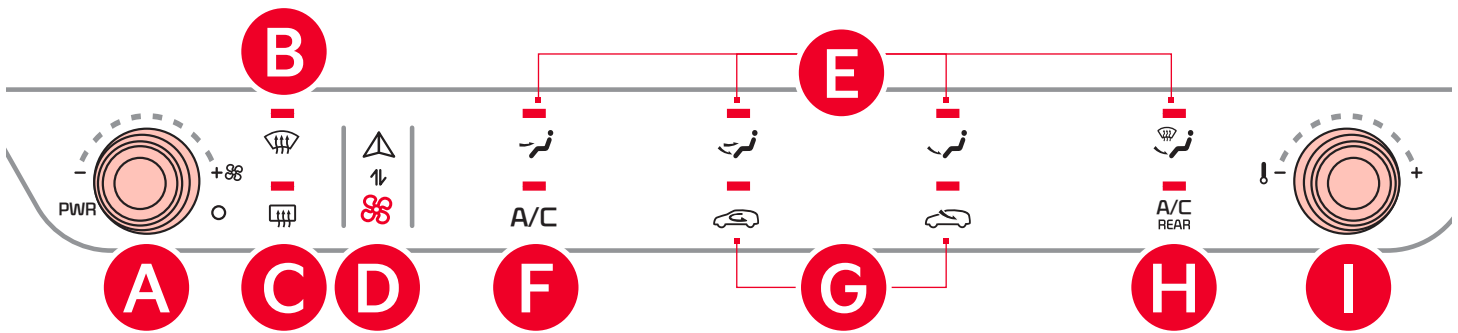

- A** Fan speed control knob
- B** Front windshield defroster button
- C** Rear window defroster button
- D** Using the infotainment/climate switchable controller
- E** Mode selection buttons
- F** A/C button
- G** Air intake control button
- H** Rear/3rd row A/C button*
- I** Temperature control knob

Defrost Outside and/or Inside Windshield:

1. Turn front fan knob **A** to the highest position
2. Turn temperature control knob **I** to hottest position
3. Press the front defrost button  **B**

Air Flow Modes - To select Air Flow Modes, press the Mode selection buttons **E** to the desired mode.



[Continued on next page](#)

Your Manual Climate Control system may differ from those in the illustrations. See section 5 in the Owner's Manual for more details.

Manual Climate Control*

[Continued from previous page](#)

QUICK TIPS

 
- Defrost Mode opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

3rd Row Climate Control*

- A** 3rd Row air conditioning ON/OFF button
- B** 3rd Row fan speed control knob

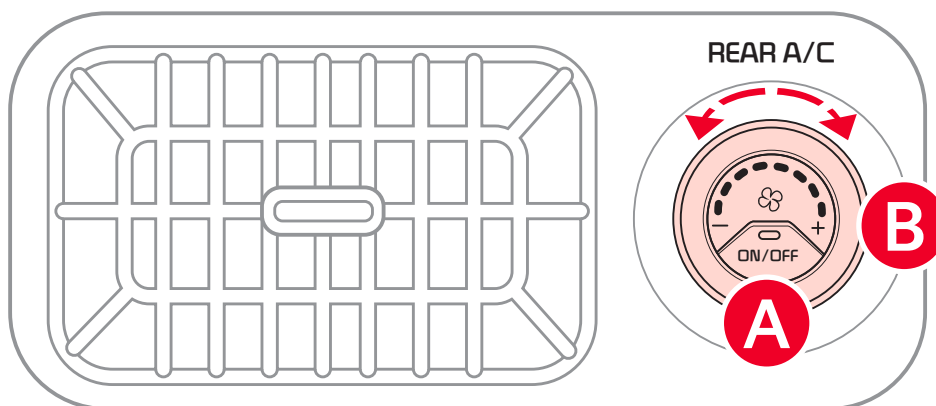

(Rear climate control)

Your Manual Climate Control system may differ from those in the illustrations. See section 5 in the Owner's Manual for more details.



Automatic Gear Shift with Sportmatic^{®†3} Shifting (Manual Mode)

P: Park - To shift into Park from any gear, press the Release button **A** on the gear shift while the vehicle is stationary and the brake pedal is depressed, and shift



Sportmatic Shifting with Gear Shift

R: Reverse - To shift into Reverse, depress the brake pedal, press the Release button **A**, and move the shift lever into Reverse.

 
N: Neutral

D: Drive

[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode: To enter the Manual mode, move shift lever from D to left gate. To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

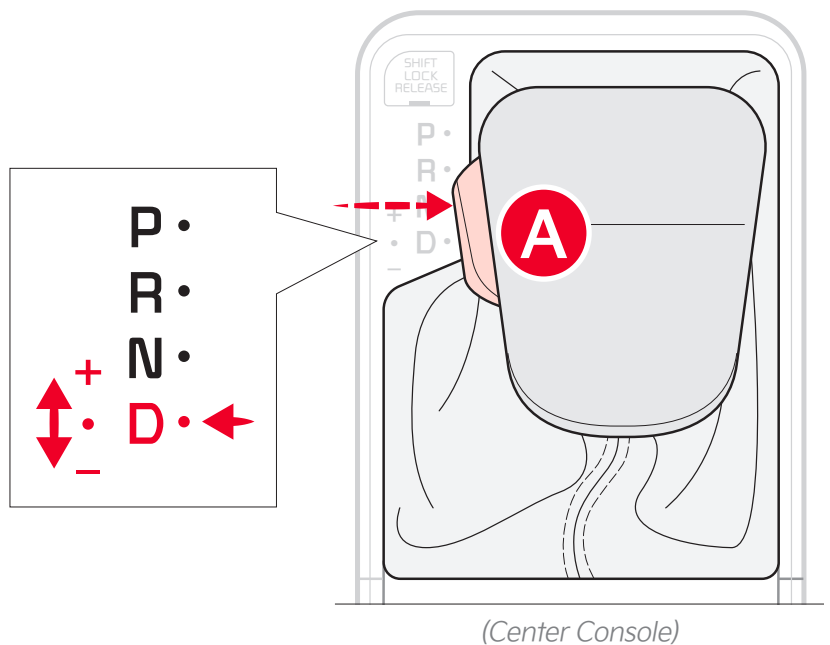

QUICK TIPS

- Press the brake pedal and depress release button to move the gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected


Refer to section 5 in the Owner's Manual for additional information on Automatic Gear Shift or DCT operation or call Kia Consumer Affairs for additional information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Dual Clutch Transmission (DCT)* (Shift Lever)

 
The dual clutch transmission has 8 forward speeds and one reverse speed. The individual speeds are selected automatically in the D (Drive) position.

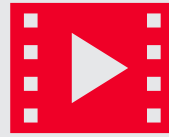

**Dual Clutch
Transmission
(DCT)**

The following are unique driving tips for the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

If the clutch is overheating, an amber warning light*  will be displayed in the Instrument Cluster. **Should this condition occur, pull over and place the vehicle in Park and idle the engine.**

Refer to section 5 in the Owner's Manual for additional information on Automatic Gear Shift or DCT operation or call Kia Consumer Affairs for additional information.



 
Paddle Shifters*

Paddle Shifters are operable when the shift lever is moved into the Drive (D) position.



**Sportmatic Shifting
with Gear Shift**

Paddle Shifting: The system changes from automatic mode to manual mode when you pull the [+] or [-] paddle shifter **A** once to shift up or down one gear.

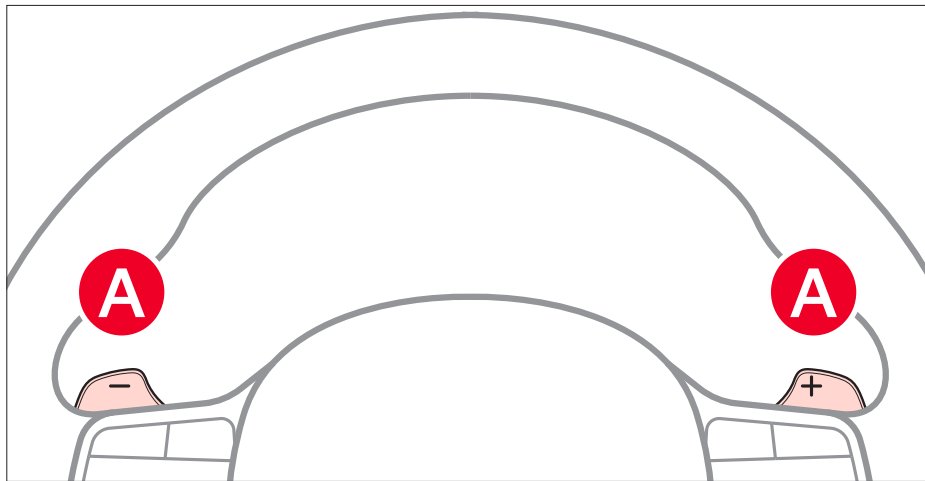

(Paddles on rear side of steering wheel)

For illustrative purposes only. Your actual steering wheel and/or paddle shifters may vary.

Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

Refer to section 6 in the Owner's Manual for more information.



All Wheel Drive (AWD/TERRAIN Mode)*

AWD/TERRAIN Mode helps the vehicle to maintain its best driving performance by controlling 4 wheels, engine, transmission and braking according to road conditions such as snow, mud, sand, etc.

 
You can switch from DRIVE MODE to TERRAIN Mode by pressing the DRIVE/ TERRAIN mode button **A**. Then select one of the following:

- **DRIVE MODE** is used when driving on roads in normal conditions, roads in urban areas, and on highways
- **MUD mode:** MUD mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on muddy, unpaved or rough roads
- **SAND mode:** SAND mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on sandy, graveled or unpaved off-roads
- **SNOW mode:** SNOW mode is used to appropriately distribute the vehicle's traction forces and prevent wheel slippage when driving on snowy or slippery road

When the TERRAIN mode is deactivated, a vibration may be felt as the traction forces on the front and rear wheels of the vehicle are released. This vibration is not a mechanical failure.



**All Wheel Drive
(AWD) - TERRAIN
Mode**

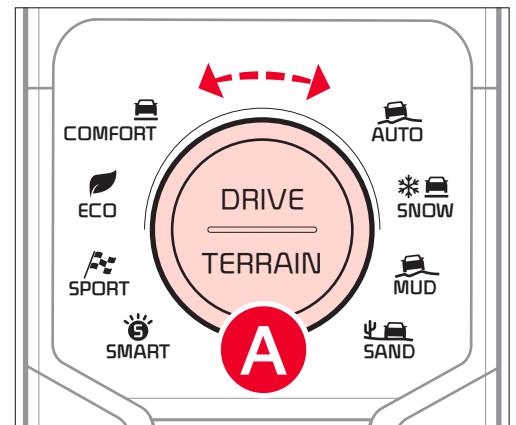

(Located on Center Panel next to Gear Shift)*

Images are for illustrative purposes only and may not reflect actual feature or operation.





Idle, Stop & Go (ISG) System


ISG is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.





Idle, Stop & Go (ISG) System

 
 
When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator   on the Instrument Cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When engine restarts, the green AUTO STOP indicator on the Instrument Cluster will turn off.

To deactivate the ISG System, press the ISG OFF button . If you press again, the system will be activated.


QUICK TIPS

- If the AUTO STOP indicator   is solid yellow, the system is functional, but just has not met all its enabling criteria to activate ISG at that time
- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

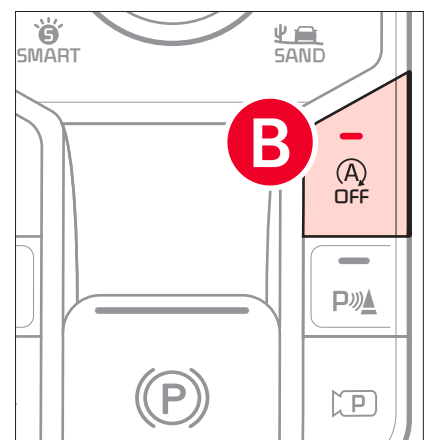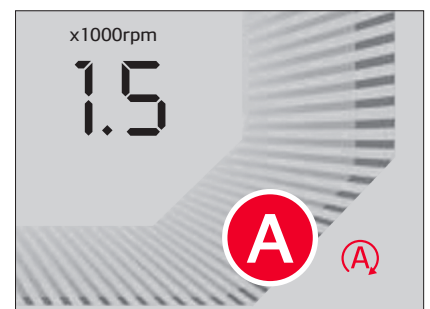

(Button on center console below gear shift)

REMINDERS:

- ISG is active by default at vehicle startup. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator  is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.



Electronic Parking Brake (EPB)

 
The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.



Electric Parking Brake (EPB) / Auto Hold

Applying the Parking Brake: Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated **(P) BRAKE** on the Instrument Cluster.

Releasing the Parking Brake: The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

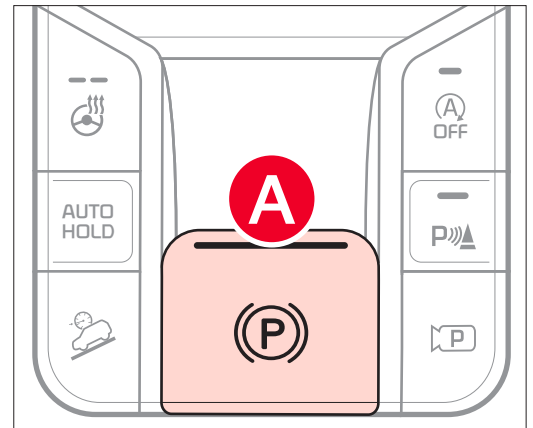

(Button on center console below gear shift)

To release the EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Image is for illustrative purposes only and may not reflect actual feature or operation.

 


Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate (trunk) must be closed, and the driver's seat belt must be fastened.



Electric Parking Brake (EPB) / Auto Hold

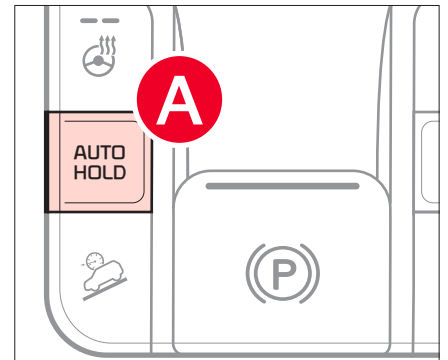

(Button on center console)

The Auto Hold indicator on the Instrument Cluster has four states:

- **White: Standby** - When vehicle is in Park and at a standstill, and AUTO HOLD button **A** is pressed On, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white
- **Green: Engaged** - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green
- **Off (not illuminated)** - The indicator will turn Off when the AUTO HOLD button **A** is manually pressed Off or when EPB is manually turned On
- **Yellow: Malfunction** - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer

REMINDERS:

- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Refer to section 6 in the Owner's Manual for more information. Refer to page 4 for location of Instrument Cluster indicators. Images are for illustrative purposes only and may not reflect actual feature or operation.



Heated Steering Wheel*

Press the Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off while the Engine Start/Stop button is in the ON position. The Steering Wheel Heater will turn off automatically in 30 minutes from the second level. Press the button **A** again to activate level 2. Press the button a third time to deactivate.



**Tilt/Telescoping/
Heated Steering
Wheel**



(Located below gear shift knob)

QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will return to its previous state
- The system returns to on when ignition is cycled. To turn the system off, press the Heated Steering Wheel button **A**
- With the heated steering switch in the ON position, the heating system in the steering wheel turns OFF or ON automatically depending on the steering wheel temperature, if equipped. If ignition is turned OFF, then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will return to its previous state

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Seat Warmers*†16 / Ventilated Seats*

A Seat Warmers

 
- Press the button up once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



Seat Warmers/
Ventilated Seats

B Ventilated Seats

- Press the button down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

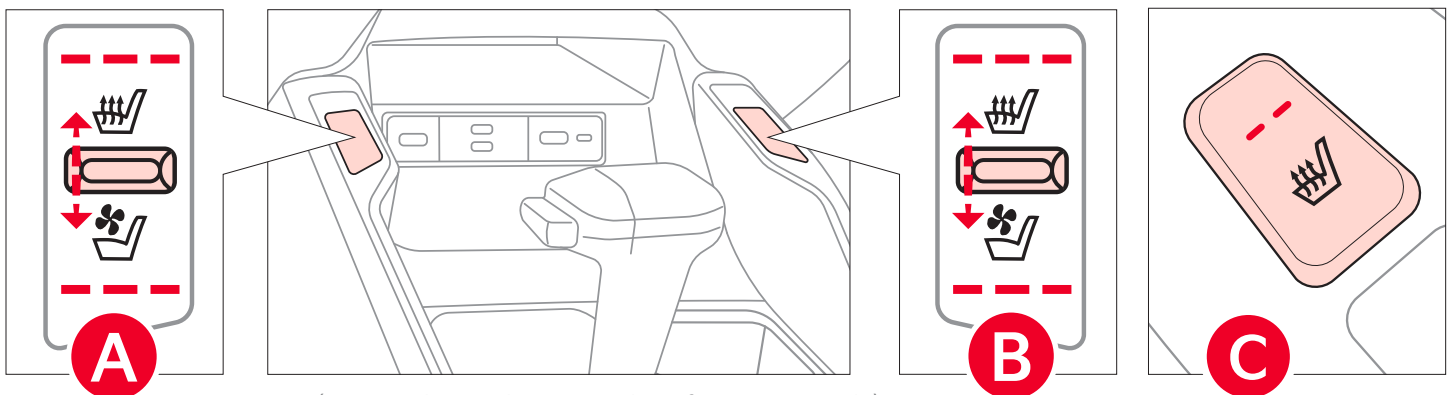

(Buttons located on top sides of center console)

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically, if equipped
- System is OFF by default
- Rear seat warmers* **C** only have a high and low temperature setting

REMINDERS:

- Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information
- If the Auto Climate Control is on, the seat warmers or ventilated seats may turn on automatically based on the set temperature and ambient temperature

Refer to section 5 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



 
Front Seat Headrest Adjustment^{†8}

Up/down adjustment:

- To raise the headrest, pull the headrest up **A** to the desired position
- To lower the headrest, press the button **B**, then press the headrest down **C**

Forward/backward adjustment*:

- Pull the headrest forward/backward **D** to one of three positions
- When forward, to move the headrest to the furthest backward position, pull it fully forward then release

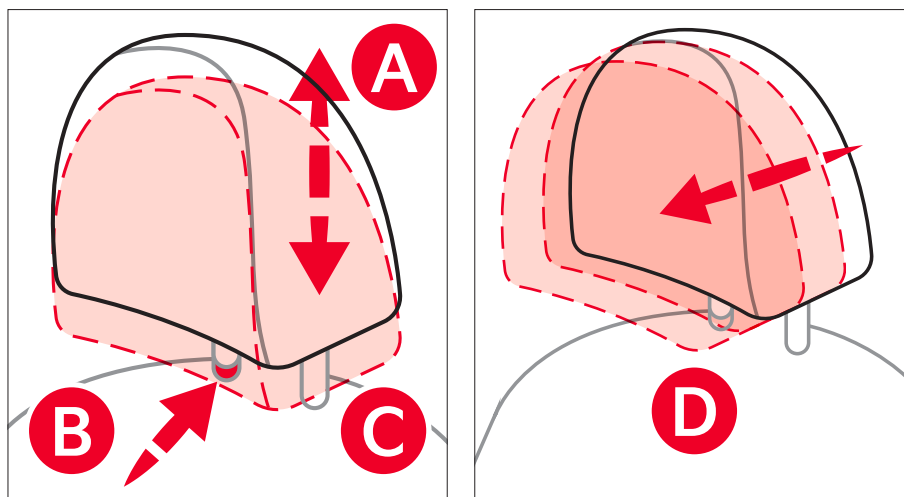

(Type A)

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Driver Position Memory System^{*†14}

 
The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.



Power Adjustable Driver's Seat with Memory Settings

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

1. Adjust the Driver's Seat and the Outside Mirrors
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 4 seconds. The system will beep twice when memory has been stored
4. "Settings 1 (or 2) saved" will appear on the Instrument Cluster LCD screen

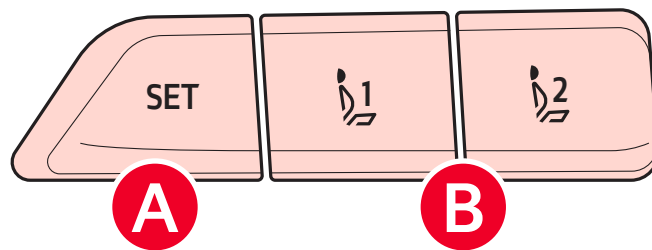

(Buttons located on Driver's Door Panel)

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.

 



Power Adjustable Driver's Seat*†14 / Power Lumbar*†14

Move/Press the controls to adjust the Seat forward/backward, the Seat Cushion height, the Seatback recline or the Lumbar up/down/forward/backward.




Power Adjustable Driver's Seat with Memory Settings

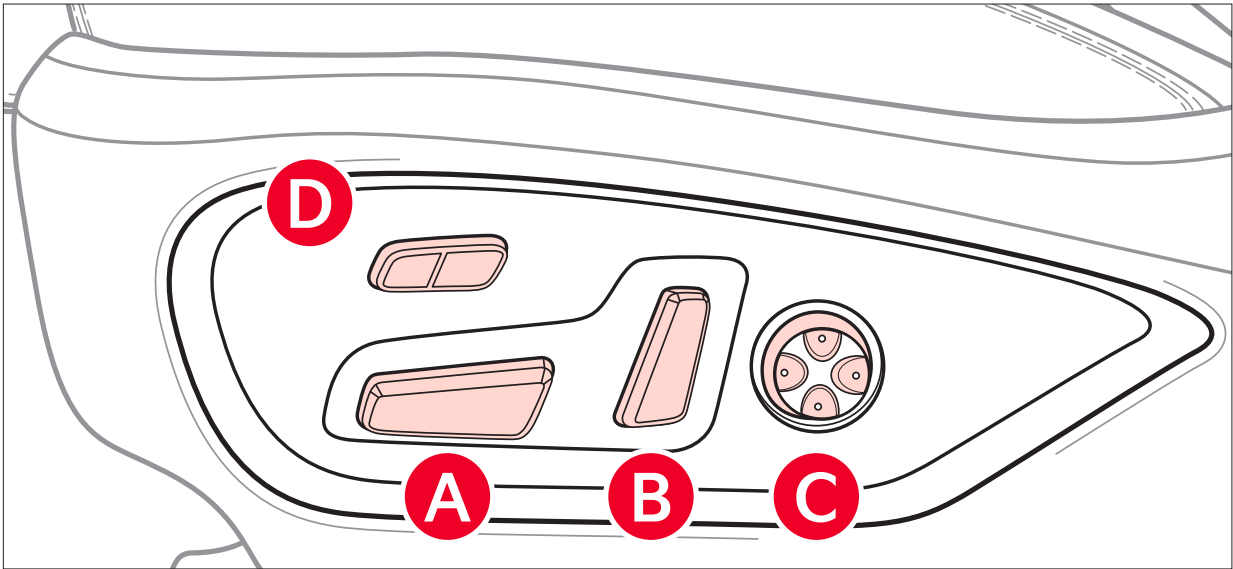


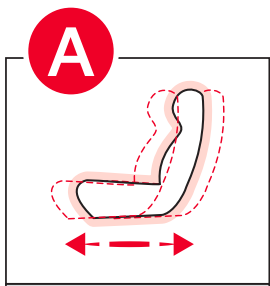


Seat

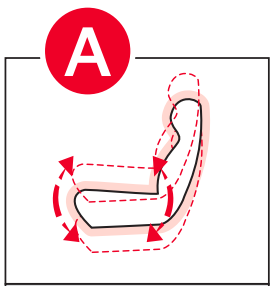


Seat Cushion

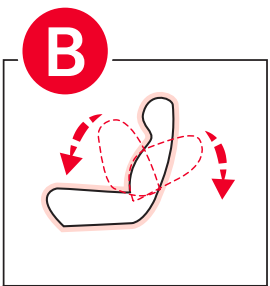

Seatback

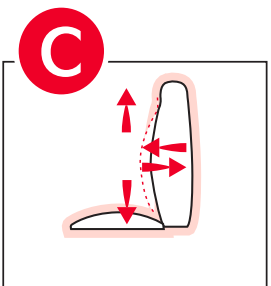

Lumbar

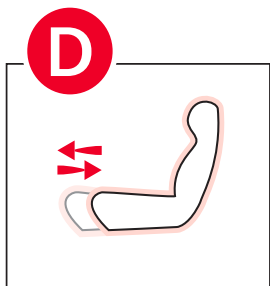

Seat Cushion Extension

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED

 


6-Way Manual Adjustable Driver's Seat^{*†14}

- Pull lever **A** up to slide the Seat forward/backward.
- Pull lever **B** up several times to raise the Seat Height
- Push lever **B** down several times to lower the Seat Height
- Pull lever **C** to adjust the Seatback recline.
- Press **D** to adjust the Lumbar support.



**Manual
Adjustable
Driver's Seat**

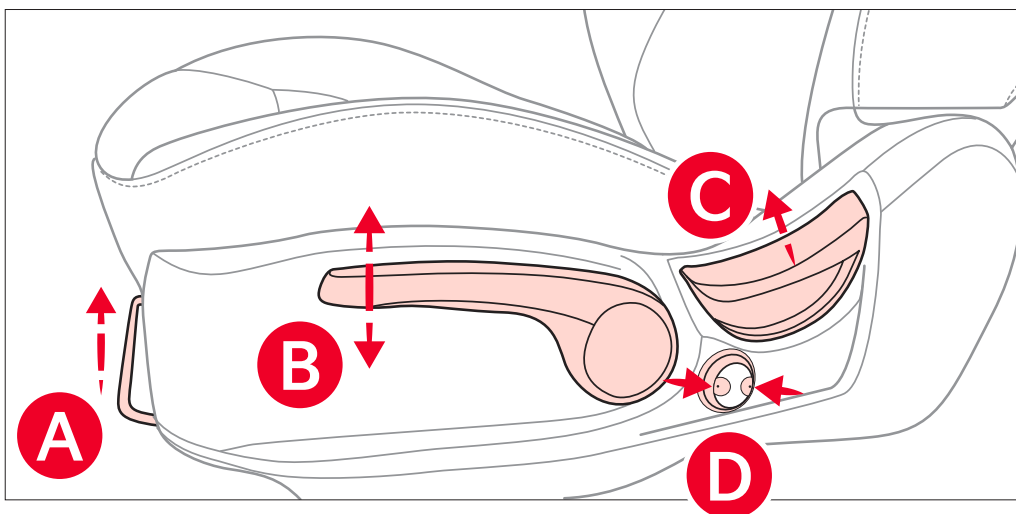

QUICK TIP

When adjusting the seat forward or backwards, ensure the seat clicks or locks into place before driving the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. Your seat controls may differ from those in the illustrations.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 4 in the Owner's Manual for more information.



2nd-Row Folding Seat*†14

Folding 2nd-Row Seat

 
 
1. Lower the 2nd-Row Seat Headrest to the lowest position
2. Pull up on the Seatback folding lever **A** or strap* and fold the Seatback down



2nd & 3rd Row
Folding Seats

Unfolding 2nd-Row Seat

Lift the folding Seatback lever **A** and move the Seatback backward to the desired position **B**

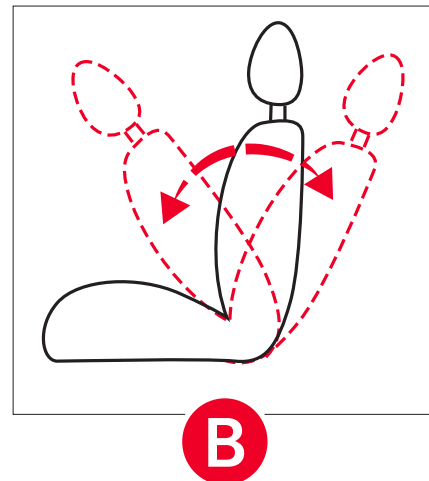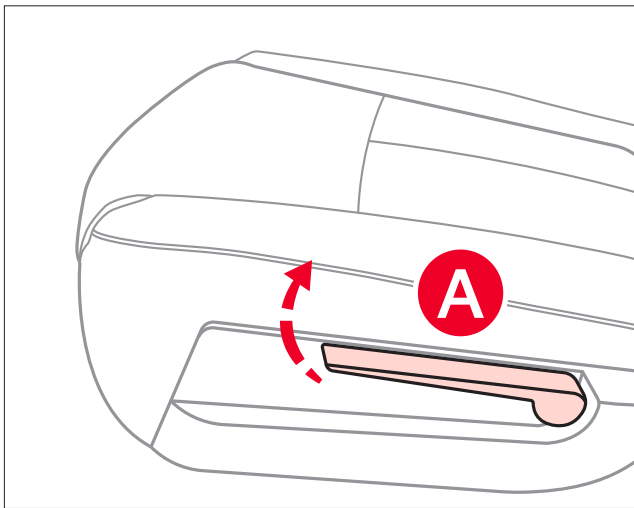

QUICK TIPS

- When you return the Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- Lower Rear Headrests to the lowest position

REMINDER: The lever must return to its original position for the Seatback to lock.

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
SEATING

2nd-Row Auto-Folding Seat*†14

Press buttons **A** to release and automatically fold 2nd-Row Seatback down.



2nd & 3rd Row Folding Seats

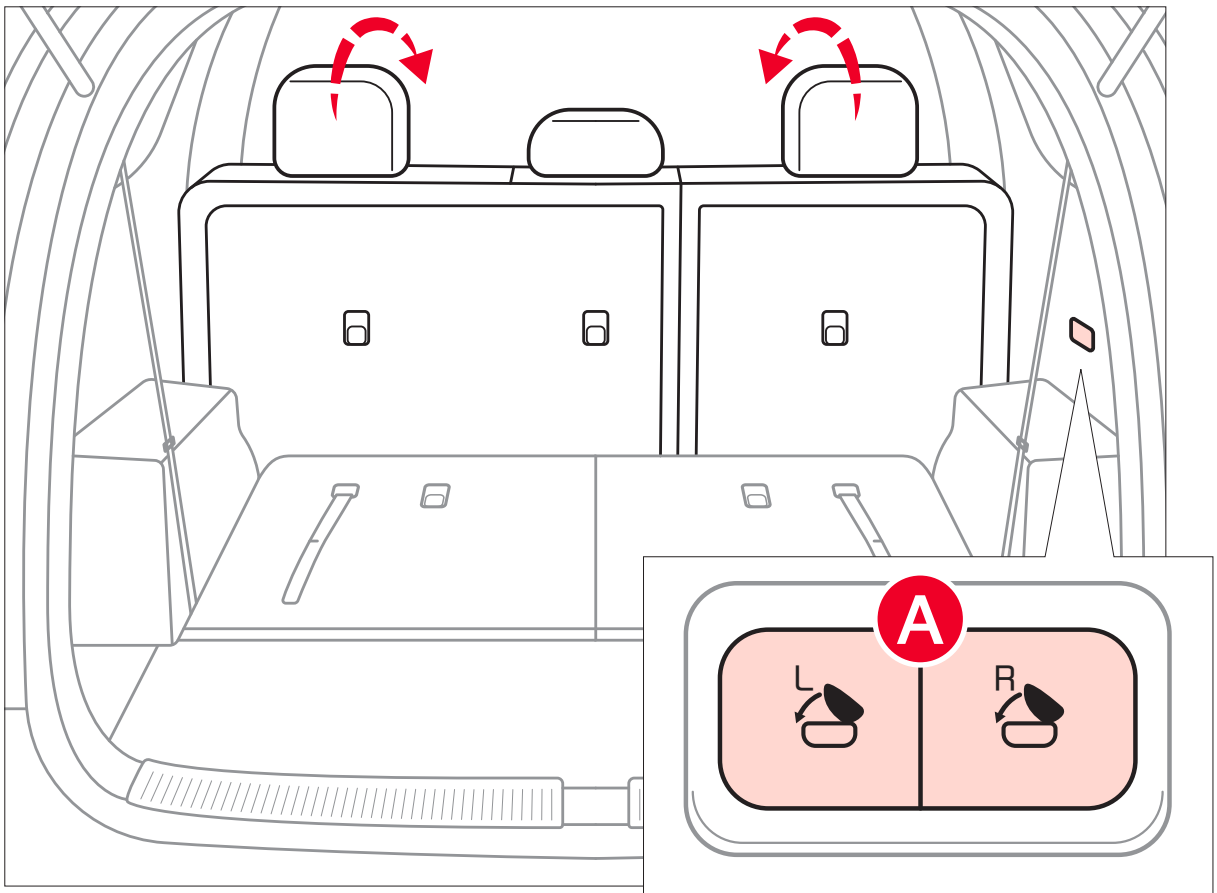

(Located on rear quarter-trim panels)

For more information on 2nd-Row Auto Folding Seat operation, refer to the Owner's Manual.


Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Unfastening Center Seat Belt^{†15}

 - If Seat Belt is buckled, press the release button on the buckle
- To retract the 2nd-Row Center Seatbelt **A** into the headliner, press the “release button” on the buckle by inserting the seat belt tongue plate **B** in the small slot on the center buckle **C**

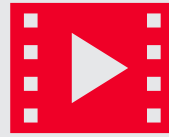

**Unfastening
Center Seatbelt**

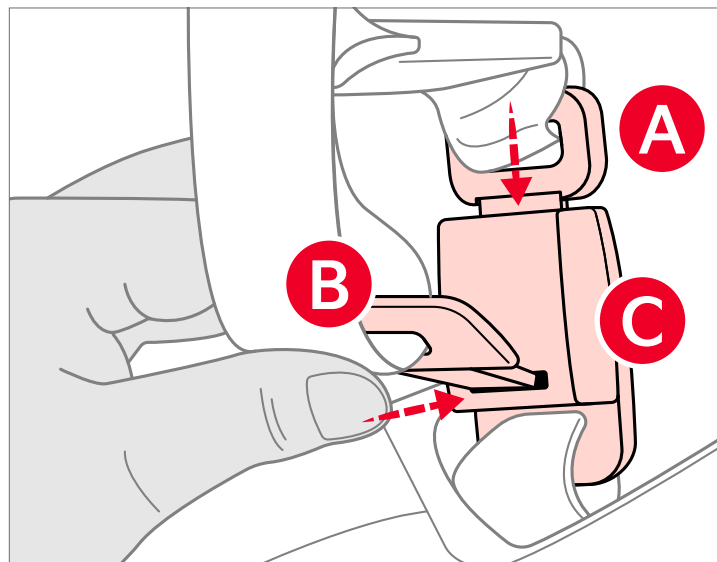 

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
3rd-Row Folding Seat^{*†14}

Folding 3rd-Row Seat:

1. Fully lower the headrest(s) **A**
2. Pull the Seat folding strap **B** located on the Seatback
3. Fold the Seat down



2nd & 3rd Row
Folding Seats

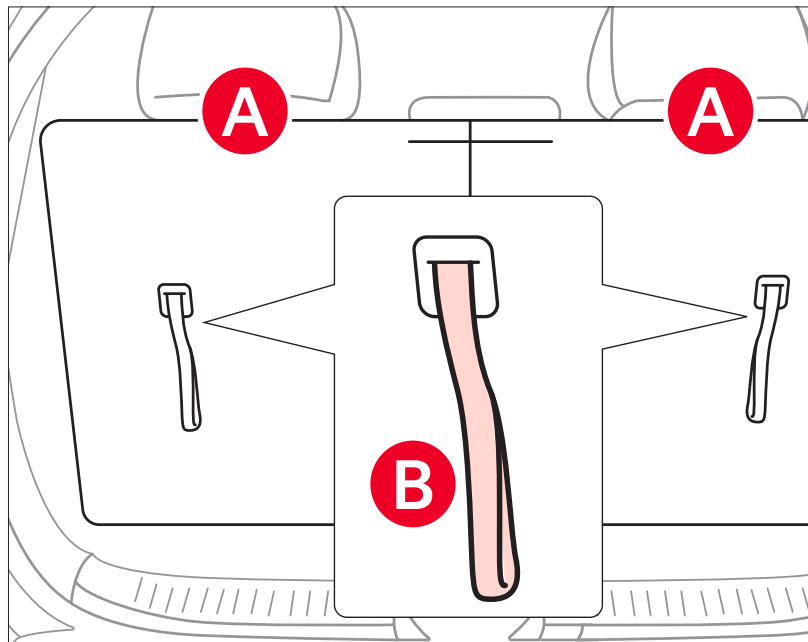

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



 
 
One-Touch Slide & Fold 2nd Row Seats^{*†14}

To get in and out of the 3rd Row Seat, adjust the 2nd Row Seat by pressing the One-Touch Slide & Fold 2nd Row Seats buttons (located on top **A** and side **B** of the 2nd-row seatback):



**One-Touch Slide
& Fold 2nd-Row
Seats**

1. Set the front seatback to the most upright position, and slide the seat forward, if needed
2. Lower the 2nd Row Seat Headrest to the lowest position
3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
4. Press the One-Touch Slide & Fold buttons to slide the Seat forward

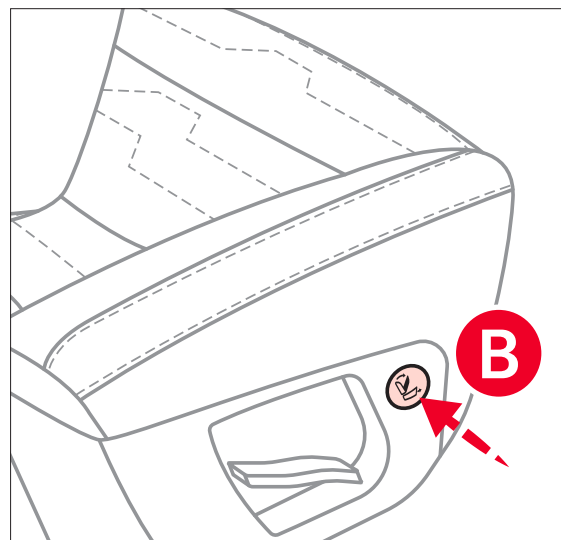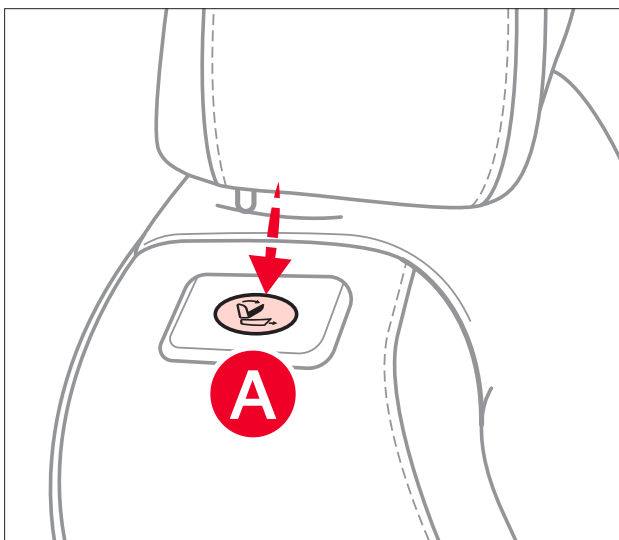

QUICK TIP

The strap can be used in the back of the 2nd Row Seat to slide and fold the 2nd Row Seats.

REMINDER: Do not use the One-Touch Slide & Fold buttons while the 2nd-row passenger seat is occupied.

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear Occupant Alert (ROA) with Ultrasonic Sensors^{†12}

Rear Occupant Alert (ROA) with Ultrasonic Sensors can help alert the driver when the system detects that rear passenger(s) are left in the rear seats using the ultrasonic sensors and door monitoring.

The system is designed to provide three separate alerts:

- The 1st alert is a message on the Instrument Cluster, "Check Rear Seats" **A**, and a chime will sound
- After the 1st alert, when the doors are locked and there is movement detected in the rear seats, the horn will sound for about 25 seconds. This alert may activate up to eight times within 24 hours, if movement is still detected and system has not been disabled
- If you have installed the Kia Access app on your smartphone, logged in and activated the Rear Occupant Alert notification, a third alert (notification) will be sent to your phone

To turn ROA on or off, on the Infotainment System, press Setup, select Vehicle, select Convenience, and then Rear Occupant Alert and check/uncheck the box. Rear Occupant with Ultrasonic Sensors activates under the following conditions:

- A rear passenger door is opened and closed
- The ignition has been turned off
- The driver's door has been opened, then closed
- The doors are locked with the Smart Key or the door lock button on the door handle



Rear Occupant Alert (ROA) with Ultrasonic Sensors



Check rear seat for passengers and belongings



OK : Sensing Off

[*Continued on next page*](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Rear Occupant Alert (ROA) with Ultrasonic Sensors^{†12}

[Continued from previous page](#)

QUICK TIPS

- The 1st alert message will not display on Instrument Cluster if the rear doors are never opened. Either rear doors must be opened after unlocking the vehicle before the system will activate
- To temporarily disable alerts, press the OK button on the Steering Wheel while the message is displayed
- To turn the alert off while sounding, press the unlock button on the Smart Key or press the door lock button on the door handle
- Must be enrolled in Kia Connect services and Kia Access app installed on the phone to receive ROA alert notifications on your smartphone

REMINDERS:

- To avoid false alerts, make sure the vehicle's windows are rolled up
- If objects such as boxes are stacked in front of the ultrasonic sensors, the system may not detect any movement
- The ultrasonic sensors may occasionally detect movement in the vehicle and cause false alerts, when there are no rear occupants present. False alerts can occur due to:
 - The presence of insects near the system sensor
 - Rushing air from a window that is rolled down
 - Movement around the exterior of the vehicle
 - Surrounding noise or vibration
 - Vehicle passing through a car wash
 - Movement in the driver or front passenger seat is detected
- The Rear Occupant Alert with Ultrasonic Sensors system may fail to detect movement and activate an alarm, among other things, if:
 - Movement is subtle or does not continue
 - A small child sits directly in a seat without a car seat
 - A rear passenger is covered with an object such as a blanket, obstructing the sensor's view

 
When engaged, ROA is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting. ROA notifications also require a Kia Connect subscription, a compatible smartphone, and a wireless signal with good coverage to function. Normal cellular service rates may apply. See section 5 in the Owner's Manual for more information.



OTHER KEY FEATURES

Sun Visor^{†19}

Use the Sun Visor to shield from direct light through the front or side windows. Slide or swing the Sun Visor out and adjust as needed.

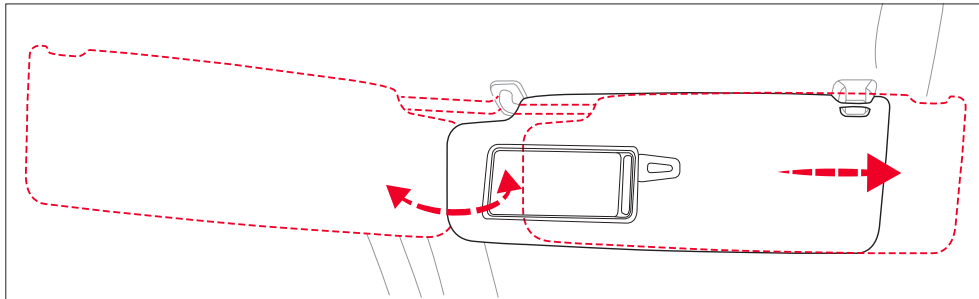

REMINDERS:

- Sun Visor may not shield from all direct light
- The Sun Visor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sun Visor is impairing your visibility
- Be aware of the seating position when adjusting or swinging Sun Visor around to and from the front or side windows

 
Refer to section 5 in the Owner's Manual for more information.

Manual Lock/Unlock All

Only the driver's door can be locked or unlocked using the manual key.

To operate door locks with the mechanical key:

- Pull on the door handle
- Press the lever **A** located inside the bottom part of the cover **B** with a key or flat-head screwdriver
- Push out the cover while pressing the lever
- Turn the key toward the rear of the vehicle to unlock and toward the front of the vehicle to lock

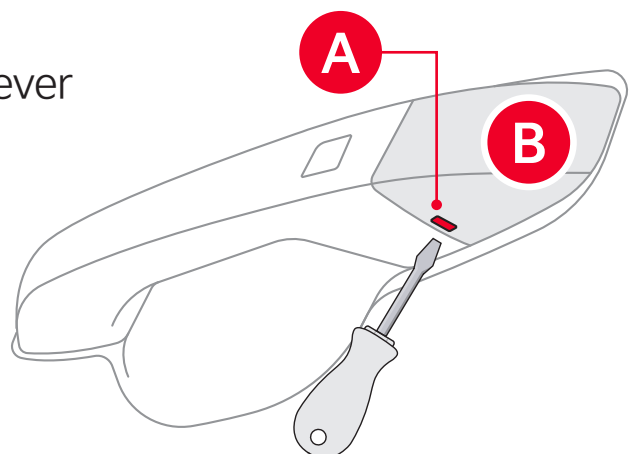

Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.



Digital Key 2 Touch*

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

 
1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App^{†2}, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
3. Open the Kia Access App and select DIGITAL KEY **A** Press CREATE OWNER KEY
4. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
5. Press CONTINUE and the wallet app will pair and add your digital key



Digital Key 2 Operation



Digital Key 2 Setup, Registration & Sharing

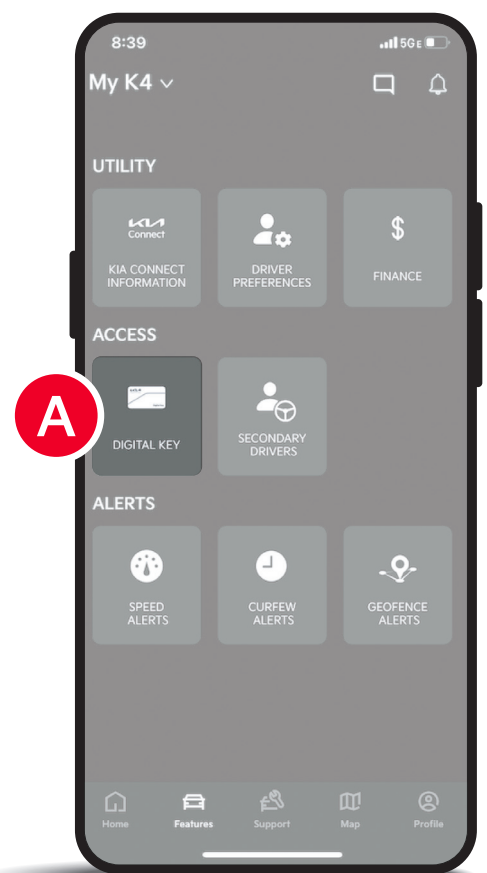

REMINDER: Actual steps may vary between devices.

[*Continued on next page*](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

 


Digital Key 2 Touch*

[Continued from previous page](#)

Digital Key 2 Setup for Smart-phones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEYS
5. Under MY SMARTPHONE KEY, press SAVE (vehicle must be on with Smart Key in the vehicle)
6. Open the **Kia Access App** and select DIGITAL KEYS. Press CONTINUE
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

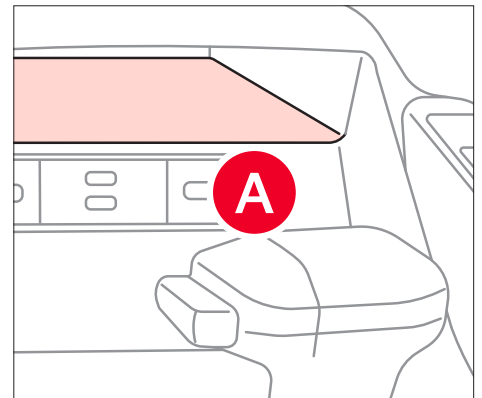

(Located in front of gear shifter)

QUICK TIP

When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features.

REMINDER: Actual steps may vary between devices.

[Continued on next page](#)



Digital Key 2 Touch*

[Continued from previous page](#)

Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

Revoking shared Digital Key access: You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings. Select the contact and click on REVOKE ACCESS.

To delete shared keys and the owner key: Go to the Vehicle Settings* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY, SHARE KEYS, and DELETE ALL.

[Continued on next page](#)



Digital Key 2 Touch*

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
 - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
 - iPhone XS® or later.
 - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
 - Apple Watch Series 5® or later
 - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
 - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
 - Galaxy S20™ or later
 - Galaxy Note20 5G™ or later
 - Galaxy Z Flip 5G™ or later
 - Galaxy Fold 2™ or later
 - For **Google™ Smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

REMINDER: Actual steps may vary between devices.

Refer to section 4 in the Owner's Manual for more information.



Smart Key with Remote Start^{†7}

- A** Press to lock All Doors
- B** Press to unlock the Driver's Door.
Press twice within 4 seconds to unlock All Doors and the Liftgate
- C** **Manual Liftgate***: Press and hold for more than 1 second to unlock the Liftgate (Trunk). Then lift by the handle to manually open the Liftgate

 
REMINDERS:

- Liftgate lid will partially open when **C** is pressed. To fully open, lift up manually
- The Liftgate (trunk) unlocks when the Smart Key fob is within close proximity of the vehicle


- C** **Power Liftgate*^{†10}**: Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close
- Remote Start***: First, lock the doors by pressing the door lock button **A** within approximately 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **D** for more than two (2) seconds to start the vehicle. To turn off, press the button again. If driver does not enter vehicle within three minutes of starting the vehicle, the engine will automatically turn off
- E** Press and hold for more than a half second for the Panic Alarm. To turn off the Alarm, press any button




Remote Start - Smart Key

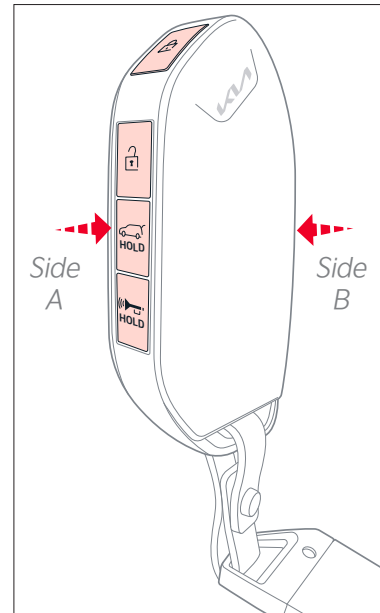

 (Buttons are located on side edges of key fob)

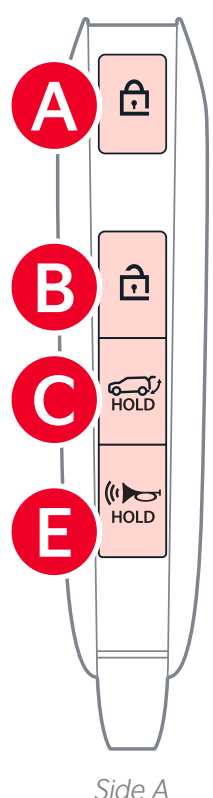

Side A

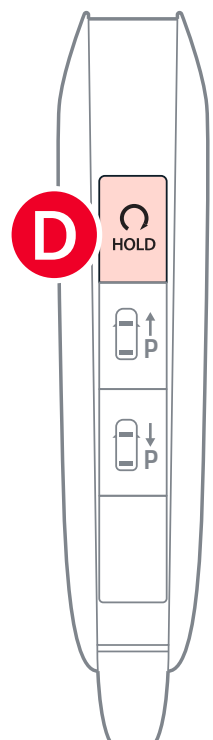 

Side B


[Continued on next page](#)

Images are for illustrative purposes only.

Smart Key with Remote Start^{†7}

[Continued from previous page](#)

 A Emergency Key

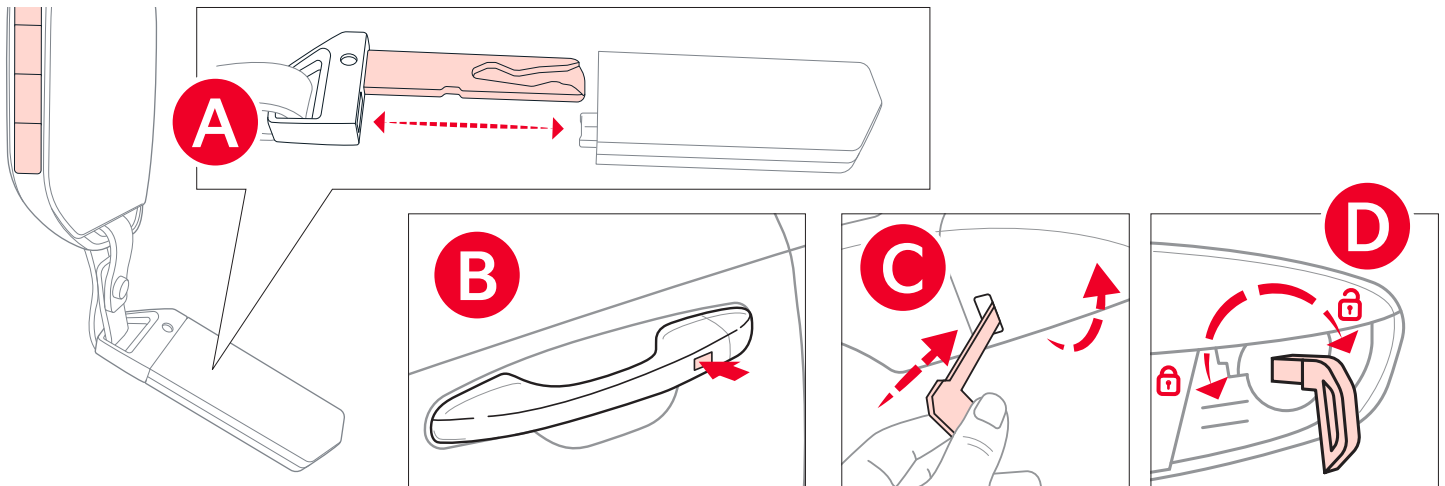

Driver's Door Lock/Unlock button **B:** Press button once to unlock the Driver's Door. Press again within 4 seconds to unlock all doors. Press again to lock all doors.

Emergency Key **A:** Pull out door handle. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **C**. Insert Mechanical Key and turn right to unlock the driver's door **D**. Turn left to lock the driver's door **D**.

- Return keyhole cover to its original position
- Use to unlock Liftgate, lock glove box* and to turn Child Protector Rear-Door Locks

QUICK TIPS

- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start the engine

REMINDERS:

- When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound
- Remote button configuration may vary depending on vehicle options

Images are for illustrative purposes only.



 
Power Liftgate w/ Auto Open/Close*†11

Opening from Inside the Vehicle: Press the power liftgate open/close button **A** for 1 second. The liftgate opens or closes with a warning sound. While the liftgate is opening or closing, press the button to stop liftgate operation.


Smart Key: To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

REMINDER: Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Opening from Inside the Power Liftgate: To open the Power Liftgate automatically, press the Liftgate Release button **C** on the exterior of the Liftgate. Automatically close by pressing the Power Liftgate Close button **D**.

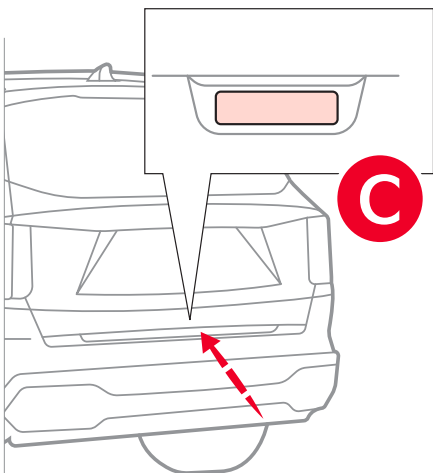

(Located on lower Liftgate exterior)

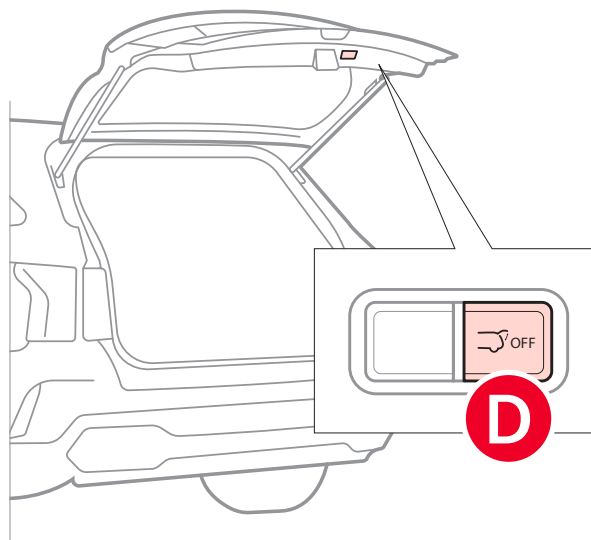 


(Located on Liftgate inside lip near latch)




Smart Power Liftgate



 Liftgate Buttons and Operation

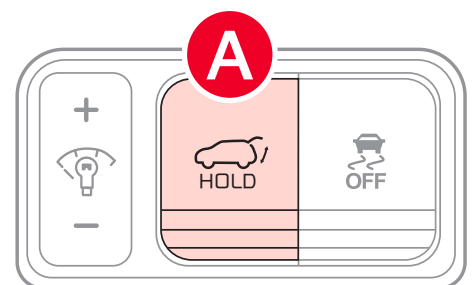

(Button located on Driver's Panel)

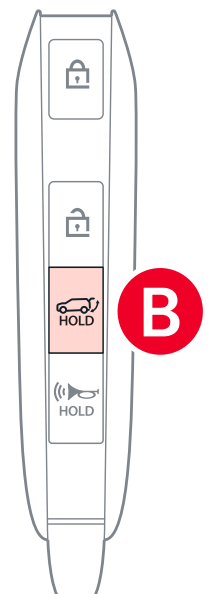 

(Button located on side of key fob)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Power Liftgate w/ Auto Open/Close*†11

[Continued from previous page](#)

 
Power Liftgate Opening Height

Adjustment: To adjust the Power Liftgate opening height, go to SETUP on the Infotainment System and select VEHICLE. Press DOOR, then POWER LIFTGATE OPENING HEIGHT. Select FULL OPEN, LEVEL 3, LEVEL 2, LEVEL 1 or USER HEIGHT SETTING.

To turn OFF the Power Liftgate Auto Open feature: Press the Automatic Close Release button, on the inside of the Liftgate, while the Liftgate is open.



Settings - Power Liftgate

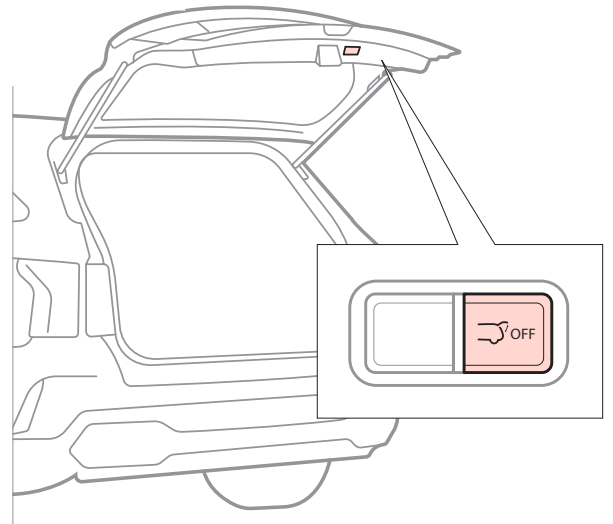

(Located on Liftgate inside lip near latch)

QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- **Smart Key with Auto Open***- When enabled in the Vehicle Settings, the Liftgate can be opened with no touch activation, if the following conditions are met:
 - after 15 seconds of all doors being closed and locked
 - if the Smart Key is within the detecting area for more than 3 seconds

REMINDER: When closing, be mindful of any objects or persons.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



Power Liftgate w/ Auto Open/Close^{*†11}

[*Continued from previous page*](#)

The Smart Liftgate with Auto Open/Close can be operated from several controls to either open, close or lock the Liftgate.

If enabled in the Vehicle Settings: When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

With the Smart Key still on your person and you walk away from the back of the vehicle, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Liftgate is about to close.

The Smart Liftgate with Auto Open/Close feature is OFF by default.

To enable the Smart Liftgate, go to Vehicle Settings in the Infotainment System.

QUICK TIPS

- During the Smart Liftgate alert, the Power Liftgate with Auto Open/Close can be deactivated with the Smart Key by pressing any button on the key fob
- The open height and speed can be adjusted. For information on how to set the open height and speed, see your owner's manual

[*Continued on next page*](#)



Power Liftgate w/ Auto Open/Close^{*†11}

[Continued from previous page](#)

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Liftgate with Auto Open/Close feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage, or move out of the detection area, to deactivate the Smart Power Liftgate function
- When the ignition is on, the Smart Liftgate with Auto Open/Close will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Liftgate with Auto Open/Close to operate
- When closing, be mindful of any objects or persons

Manual Liftgate^{*} / Liftgate Release Button

 
Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.



Manual Liftgate & Key Fob Controls

QUICK TIP

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button.

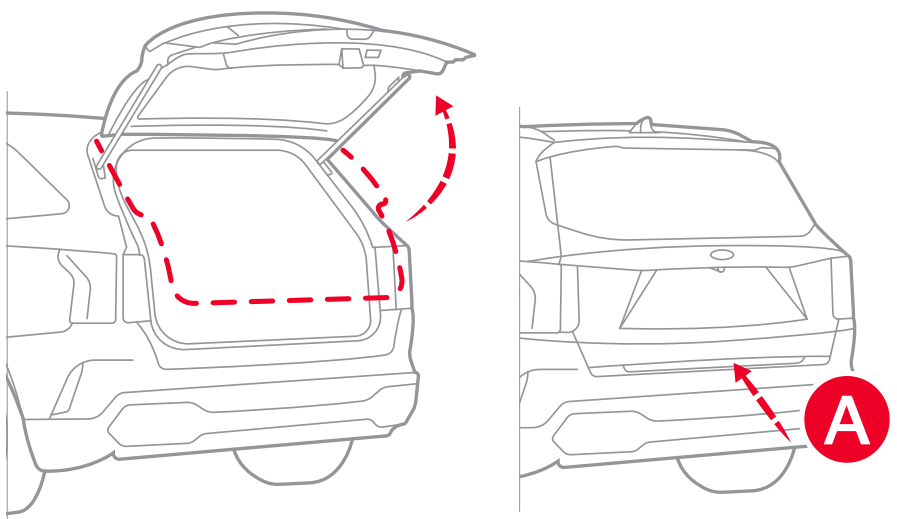

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 5 in the Owner's Manual for more information.

 


Map/Room Lamps

Automatic turn off function*: The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

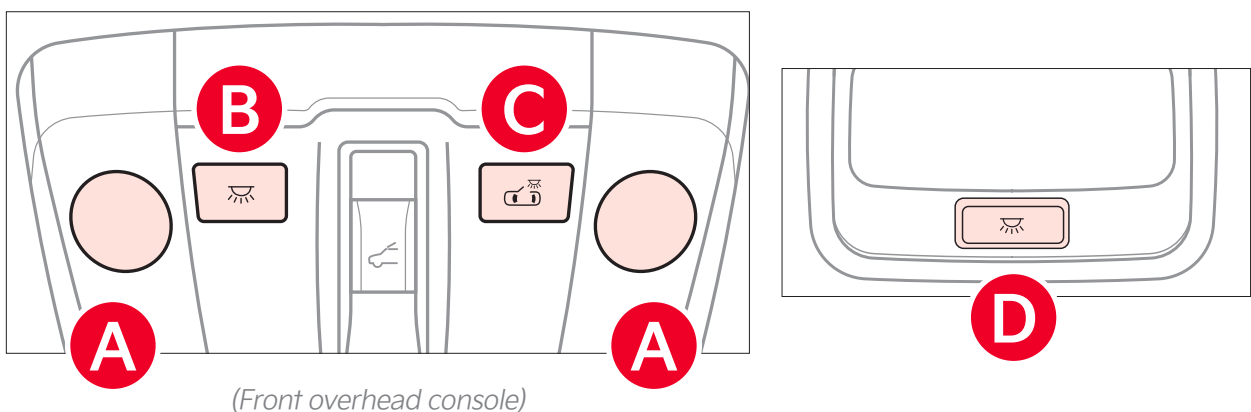

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 5 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Panoramic Sunroof with Power Sunshade*

 
The Sunroof and Sunshade operation is controlled through a multidirectional switch **A**. The ignition needs to be ON to operate the sunroof / power sunshade.



**Sunroof
Operation**

QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control switch in any direction.

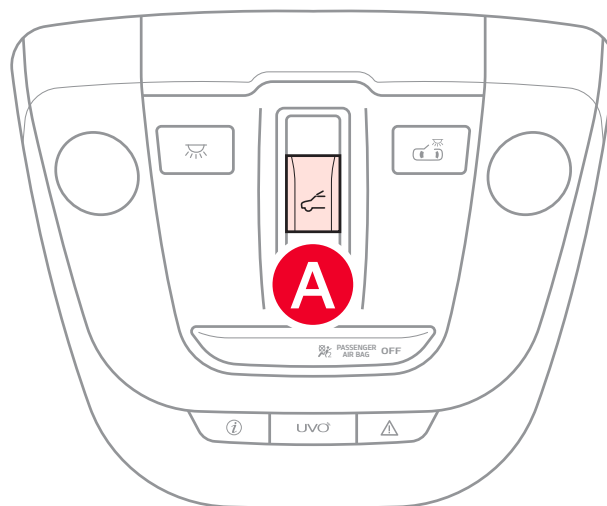

(Front overhead console. Buttons may vary)

REMINDERS:

- The sunroof can be operated for approximately 30 seconds after the ignition is turned off. If the front doors are opened, the sunroof cannot be operated even within the 30-second period.
- The Sunshade needs to remain OPEN while sunroof is open
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle
- When closing, be mindful of any objects or persons
- If the ignition/vehicle is turned off, and the driver's door is opened, with the sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



OTHER KEY FEATURES

Panoramic Sunroof with Power Sunshade*

[Continued from previous page](#)

To slide the power sunshade and sunroof:

- Auto Open - Push the switch **A** backward to the second detent position and release
- Auto Close - Push the switch **A** forward to the second detent position and release

To slide the power sunshade only:

- Auto Open - Push the switch **A** backward to the first detent position and release
- Auto Close - Push the switch **A** forward to the first detent position and release

Slide the sunroof (with sunshade open):

 
- Auto Open - Push the switch **A** backward to the first detent position and release
- Auto Close - Push the switch **A** forward to the first detent position and release to close sunroof glass only. Push the switch **A** forward to the second detent position and release to close sunroof glass and power sunshade

To tilt the sunroof:

- Raise: Push and release switch **A** upward
- Lower: Push and release switch **A** upward
- Auto-close sunroof and power sunshade: Push the switch **A** forward to the second detent position



Sunroof
Operation

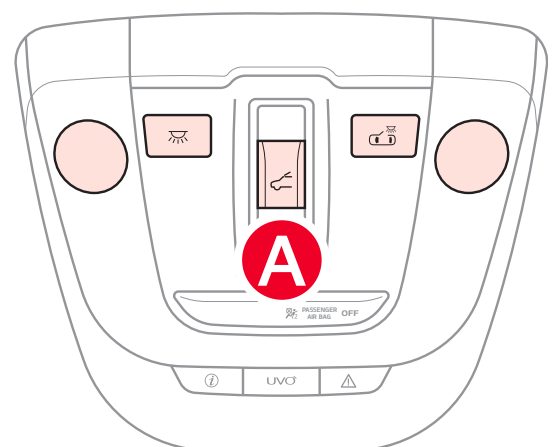

(Front overhead console.
Buttons may vary)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.

 


HomeLink[®]†3 with Auto-Dimming Rearview Mirror*

The HomeLink[®] / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.



HomeLink[®]
Support Link

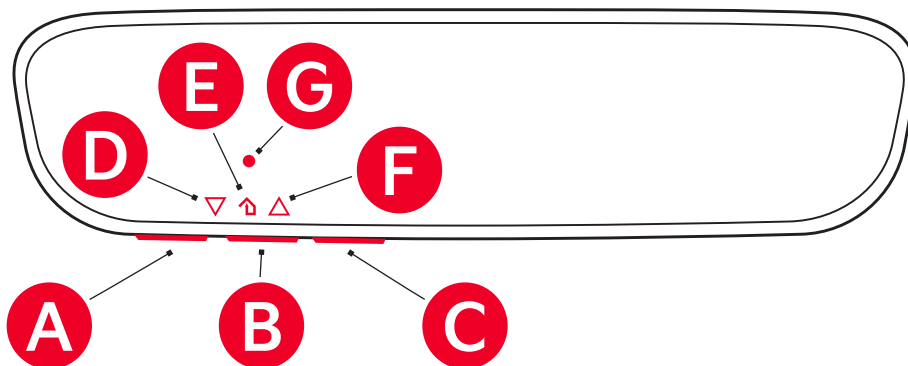

- | | |
|---|---|
| A HomeLink [®] Channel 1 | E HomeLink [®] Operation Indicator |
| B HomeLink [®] Channel 2 | F Garage Door Opener Status Indicator: Opening or Open |
| C HomeLink [®] Channel 3 | G HomeLink [®] User Interface Indicator |
| D Garage Door Opener Status Indicator: Closing or Closed | |

QUICK TIPS

- You can reprogram a single HomeLink[®] button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to section 5 in the Owner's Manual for more information.*

HomeLink^{®†3} with Auto-Dimming Rearview Mirror*

[Continued from previous page](#)

 
How to Sync Transmitter with HomeLink^{®*}

If programming for the first time, begin with Step 1 (repeating this step will delete all information). To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the **A** and **B** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A D B** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink[®] Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink[®] button up to three times

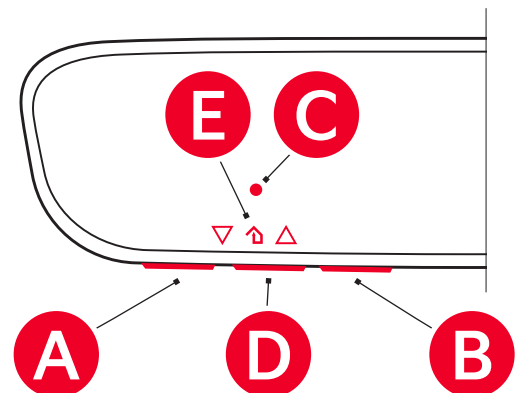

Operating HomeLink[®]: Press one of the programmed HomeLink[®] buttons.

Erasing programmed buttons: Press and hold the **A** and **B** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink[®] system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.


Images are for illustrative purposes only and may not reflect actual feature or operation.




Hood Release Lever and Latch

Opening the Hood:

 - Pull the Hood Release Lever **A** to unlatch the Hood
- In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
- It will open by itself after it has been raised about half way

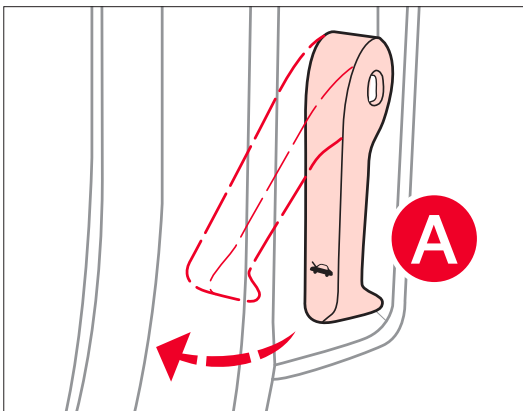

 (Lever located on Driver side kick panel)

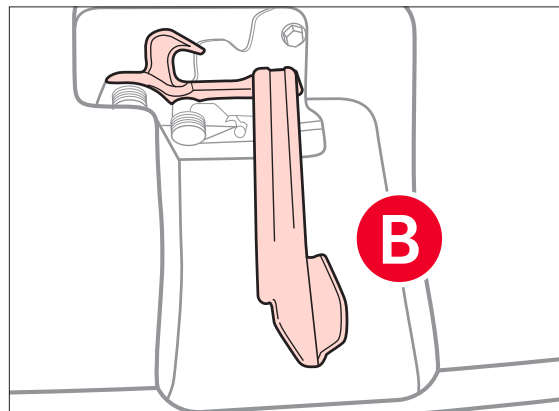

(Located inside of Hood's center)

REMINDERS:

- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- While lowering and closing, keep hands away from under the Hood

Closing the Hood:

- Lower the Hood about halfway by pressing the front center of the Hood and then press down to securely lock in place

REMINDERS:

- Make sure the hood is securely closed before driving.
- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.



Fuel Filler Lid Release

 
To open the Fuel Filler lid:

- Turn off the engine and ensure driver's door is unlocked. Press the right center edge of the Fuel Filler lid **A**



Fuel Filler Lid

- Pull the Fuel Filler lid out to fully open **B**
- To open the Fuel Cap, turn it counterclockwise **C**

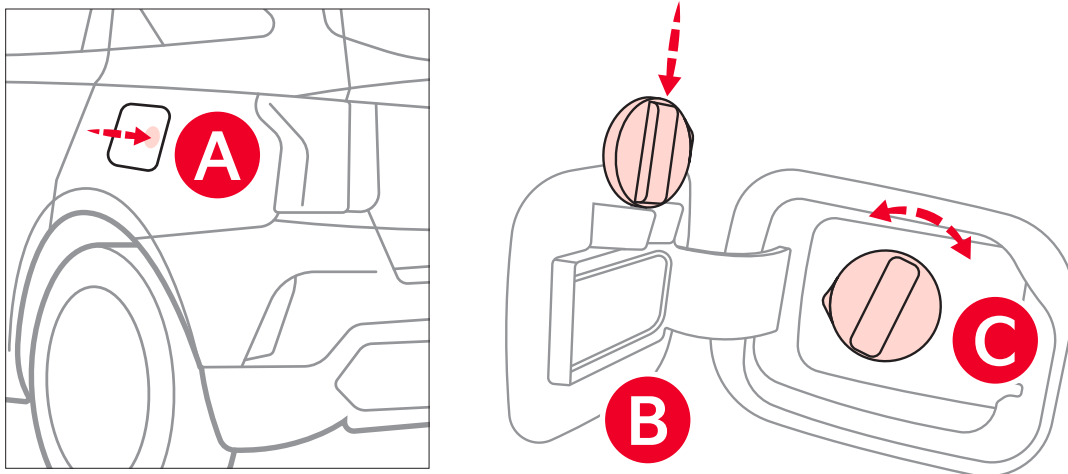

QUICK TIP

- Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling.

REMINDERS:


- The Fuel Filler Lid lock will unlock/open only when the unlock button on the Smart Key is pressed, central door unlock button is pressed or the driver's side door is unlocked.
- To lock the Fuel Filler Lid, press the lock button on the Smart Key or lock central door lock button
- All doors and Fuel Filler Lid will automatically lock after the vehicle speed exceeds 9 mph

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.



Fuel Cap / Malfunction Indicator (Check Engine Light)

Ensure the Fuel Cap is securely tightened to prevent the Check Engine light / Malfunction Indicator  from illuminating.



Kia Fuel Cap

It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back.

REMINDER: Vehicle must be unlocked first before attempting to open fuel filler door.

 


Occupant Detection System (ODS)^{†10} / Passenger Airbag^{†15} Off Indicator

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly. Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

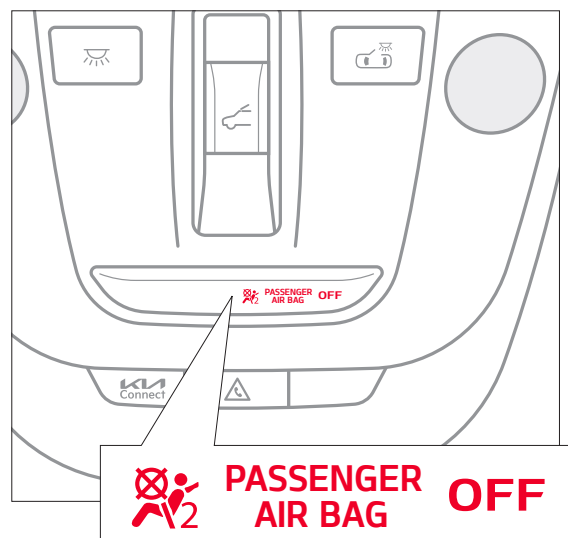

(ODS light is located on map/room lamp ceiling console)


REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

See section 4 in the Owner's Manual for more information.



 
Child-Protector Rear Door Locks

Located on the rear edge of the rear passenger doors, turn the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child-protector rear door lock is located on rear passenger door jamb.



**LATCH Anchors
for the Child
Restraint System**

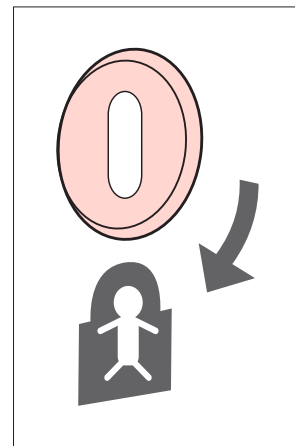

*(Lock located on rear passenger
inside door jamb)*

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
Refer to section 5 in the Owner's Manual for more information.



Seat Belts^{†15}

To properly fasten your Seat Belts:

- Insert the belt tongue plate **A** into the buckle **B** until it clicks
- Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**.

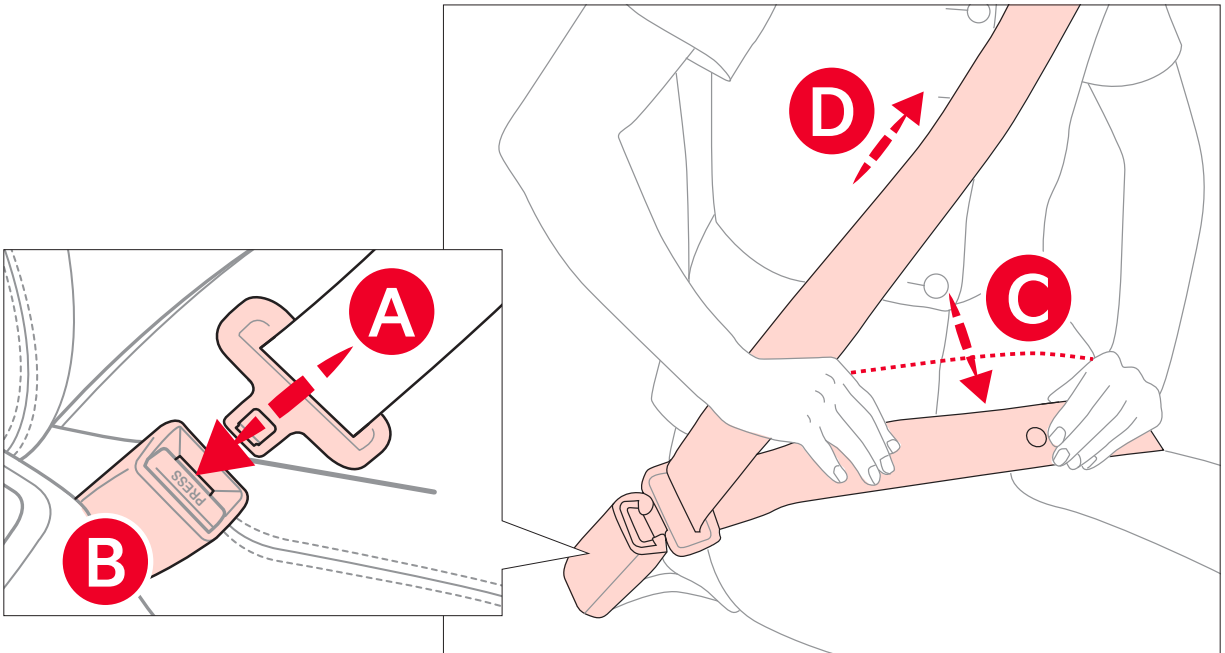

Seat Belt Retractor Locks: Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort. During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seatbelt retractors will automatically lock the belts to reduce the risk of injury.


QUICK TIP

The Seat Belt warning chime operates for the driver's seat only.

REMINDER: For maximum protection, always wear your seatbelt.

Images are for illustrative purposes only and may not reflect actual feature or operation.


See section 4 in the Owner's Manual for more information.

| <div>  <div> SORENTO MAINTENANCE SCHEDULE </div> </div> | MAINTENANCE INTERVALS (UP TO 64,000 MILES) ^A | | | | | | | |
|--|--|--------|--------|--------|--------|--------|--------|--------|
| | 8,000 | 16,000 | 24,000 | 32,000 | 40,000 | 48,000 | 56,000 | 64,000 |
| Rotate tires | P | P | P | P | P | P | P | P |
| Add fuel additive ^C | P | P | P | P | P | P | P | P |
| Engine oil & filter (Full Synthetic Oil) ^D | R | R | R | R | R | R | R | R |
| Air cleaner filter (Engine) | I | I | R | I | I | R | I | I |
| Climate control air filter | I | R | I | R | I | R | I | R |
| Brake fluid | I | I | I | I | I | R | I | I |
| Battery condition | I | I | I | I | I | I | I | I |
| Brake lines, hoses and connections | I | I | I | I | I | I | I | I |
| Brake discs and pads | I | I | I | I | I | I | I | I |
| Vacuum hoses | I | I | I | I | I | I | I | I |
| Steering gear rack, linkage & boots | I | I | I | I | I | I | I | I |
| Suspension ball joints | I | I | I | I | I | I | I | I |
| Air conditioner compressor/refrigerant | I | I | I | I | I | I | I | I |
| Exhaust system | I | I | I | I | I | I | I | I |
| Cooling system | I | I | I | I | I | I | I | I |
| Intercooler, in/out hose, air intake hose (Turbo GDI) | I | | I | | I | | I | |
| Drive shafts and boots | | I | | I | | I | | I |
| Propeller shaft (AWD) | | I | | I | | I | | I |
| Fuel tank air filter ^E | | I | | I | | I | | I |
| Parking brake (foot type) | | I | | I | | I | | I |
| Fuel tank and fuel filler cap | | I | | I | | I | | I |
| Fuel lines, fuel hoses and connections | | I | | I | | I | | I |
| Drive belts (First 48,000 miles, then every 8,000 miles) ^F | | | | | | I | I | I |
| Dual Clutch Transmission (DCT) fluid (Turbo GTI) | | | | I | | | | I |
| Transfer case oil ^G | | | | | I | | | |
| Rear differential oil (AWD) | | | | | I | | | |
| Spark plugs (Turbo GDI) (Every 48,000 miles) | | | | | | R | | |
| Coolant (Engine) ^H | Replace at 120,000 miles (195,000 km) or 120 months. After that, replace every 24,000 miles (39,000 km) or 24 months. | | | | | | | |

P = Perform
R = Replace
I = Inspect^{†B}

- A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule
- B. And, if necessary, adjust, correct, clean or replace
- C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives
- D. Check the engine oil level and leaks when stopping for fuel or before starting a long trip. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions
- E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is

- having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service
- F. The drive belt should be replaced when cracks occur or tension is reduced excessively
- G. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water
- H. When adding coolant, use only deionized water or soft water for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.
- See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.



Full Synthetic
Oil

© 2025 Kia America, Inc. All rights reserved.
 Consumer - Roadside Assistance^{†12}: 1-800-333-4KIA (4542)
 Part Number: MQ240-PS-004

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into your Kia Access App^{†2} or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect^{†1} only).

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



LEGAL DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death.

The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- 2. Kia Access app** for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a Kia Connect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model.
- 3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
- 4. Driver Assist Features - Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Blind-spot Collision-Avoidance Assist (BCA), Blind-spot View Monitor (BVM), Safe Exit Assist (SEA), Leading Vehicle Departure Alert (LVDA), Intelligent Speed Limit Assist (ISLA), Cruise Control (CC), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Lane Following Assist (LFA), Highway Driving Assist (HDA), Rear View Monitor (RVM), Surround View Monitor (SVM), Rear Cross-traffic Collision Avoidance Assist (RCCA), Reverse Parking Collision-Avoidance Assist (PCA), Forward/Reverse Parking Distance Warning (PDW):** When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 6. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 7. Engine Start/Stop Button / Smart Key w/ Remote Start:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 9. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
- 11. Smart Power Liftgate / Smart Power Liftgate with Auto Open/ Close:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for improved ventilation.
- 12. Rear Occupant Alert with Ultrasonic Sensors:** When engaged, ROA with Ultrasonic Sensors is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
- 13. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 14. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 15. Seat belts/Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
- 16. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 17. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2025 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 18. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 19. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
- 20. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 21. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.