


# Features & Functions Guide




**Sorento**  
**Plug-In Hybrid**

# Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



Getting Started  
With Your  
New Kia



How-to Resources:  
Videos & Online

## Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)  
Consumer Affairs - Roadside Assistance<sup>†12</sup>; 1-800-333-4KIA (800-333-4542)

*Always check the Owner’s Manual for complete operating information and safety warnings.*

†LEGAL DISCLAIMERS ON [PAGE 135](#) | \*IF EQUIPPED



## Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**This document is interactive:** from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.


**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

*The video resources should not be accessed while you are operating your Kia vehicle.*


# Getting Started

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:


|    |   |                     |
|----|---|---------------------|
| 1  | <a href="#">Smart Key with Remote Start . . . . .</a>                       | <a href="#">116</a> |
| 2  | <a href="#">Front Seat Headrest Adjustment .</a>                            | <a href="#">107</a> |
| 3  | <a href="#">Power Adjustable Driver's Seat. . .</a>                         | <a href="#">109</a> |
| 4  | <a href="#">Seat Warmers*/Ventilated Seats* .</a>                           | <a href="#">104</a> |
| 5  | <a href="#">2nd-Row Folding Seat. . . . .</a>                               | <a href="#">110</a> |
| 6  | <a href="#">Windshield Wipers &amp; Washers . . . .</a>                     | <a href="#">73</a>  |
| 7  | <a href="#">Navigation-based Smart<br/>Cruise Control (NSCC)* . . . . .</a> | <a href="#">46</a>  |
| 8  | <a href="#">Normal Maintenance Schedule ..</a>                              | <a href="#">134</a> |
| 9  | <a href="#">Vehicle Settings -<br/>Infotainment System . . . . .</a>        | <a href="#">18</a>  |
| 10 | <a href="#">Bluetooth® Wireless Technology. . .</a>                         | <a href="#">75</a>  |
| 11 | <a href="#">Kia Connect Activation . . . . .</a>                            | <a href="#">84</a>  |
| 12 | <a href="#">Kia Connect Assistance . . . . .</a>                            | <a href="#">85</a>  |
| 13 | <a href="#">Kia Connect with Navigation. . . . .</a>                        | <a href="#">88</a>  |
| 14 | <a href="#">Kia Access App Download. . . . .</a>                            | <a href="#">86</a>  |
| 15 | <a href="#">Kia Access App Features Guide . . .</a>                         | <a href="#">87</a>  |
| 16 | <a href="#">Android Auto™ Setup. . . . .</a>                                | <a href="#">79</a>  |
| 17 | <a href="#">Apple CarPlay® Setup . . . . .</a>                              | <a href="#">82</a>  |




Getting Started  
With Your  
New Kia




Vehicle Cameras  
Important Tips



Your New Kia  
Important  
Care Tips



Navigation System  
Important Tips



How-to Resources:  
Videos & Online

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

\*IF EQUIPPED

# Table Of Contents

|   |                  |
|---|------------------|
| <b><u>WELCOME TO THE KIA FAMILY!</u></b>                    | <b><u>02</u></b> |
| <b><u>VIDEOS &amp; NAVIGATION</u></b>                       | <b><u>03</u></b> |
| <b><u>GETTING STARTED</u></b>                               | <b><u>04</u></b> |
| <b>INSTRUMENT CLUSTER</b>                                   |                  |
| <u>Instrument Cluster Overview</u>                          | <u>08</u>        |
| <u>Plug-In Hybrid Indicators at Startup</u>                 | <u>09</u>        |
| <u>Indicators &amp; Warning Lights</u>                      | <u>10</u>        |
| <u>Tire Pressure Monitoring System (TPMS)</u>               | <u>11</u>        |
| <u>Fuel Economy / Tips for Economical Driving</u>           | <u>13</u>        |
| <u>Drive Mode Integrated Control System*</u>                | <u>14</u>        |
| <b>VEHICLE SETTINGS</b>                                     |                  |
| <u>Trip Modes / Trip Computer</u>                           | <u>16</u>        |
| <u>Instrument Cluster LCD Modes</u>                         | <u>17</u>        |
| <u>Vehicle Settings - Infotainment System</u>               | <u>18</u>        |
| <u>Vehicle Auto Shut-off System*</u>                        | <u>19</u>        |
| <u>Service Interval Mode</u>                                | <u>20</u>        |
| <b>PLUG-IN HYBRID SYSTEM</b>                                |                  |
| <u>Charging Connector Auto/Lock/Unlock Mode</u>             | <u>21</u>        |
| <u>Scheduled Charging</u>                                   | <u>22</u>        |
| <u>Charging the Plug-In Hybrid Vehicle</u>                  | <u>24</u>        |
| <u>Plug-in Hybrid Display (Infotainment System)</u>         | <u>28</u>        |
| <u>Plug-In Hybrid Modes</u>                                 | <u>29</u>        |
| <b>ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)</b>            |                  |
| <u>Forward Collision-Avoidance Assist (FCA)</u>             | <u>30</u>        |
| <u>Blind-spot Collision-Avoidance Assist (BCA)</u>          | <u>33</u>        |
| <u>Lane Keeping Assist (LKA)</u>                            | <u>36</u>        |
| <u>Intelligent Speed Limit Assist (ISLA)</u>                | <u>38</u>        |
| <u>Driver Attention Warning (DAW)*</u>                      | <u>40</u>        |
| <u>Leading Vehicle Departure Alert (LVDA)</u>               | <u>41</u>        |
| <u>Safe Exit Assist (SEA)</u>                               | <u>42</u>        |
| <u>Smart Cruise Control (SCC)</u>                           | <u>43</u>        |
| <u>Navigation-based Smart Cruise Control (NSCC)*</u>        | <u>46</u>        |
| <u>Lane Following Assist (LFA)</u>                          | <u>47</u>        |
| <u>Highway Driving Assist 2 (HDA2)*</u>                     | <u>49</u>        |
| <u>Rear View Monitor (RVM)</u>                              | <u>51</u>        |
| <u>Blind-spot View Monitor (BVM)*</u>                       | <u>52</u>        |
| <u>Surround View Monitor (SVM)*</u>                         | <u>53</u>        |
| <u>Rear Cross-traffic Collision-Avoidance Assist (RCCA)</u> | <u>55</u>        |
| <u>Reverse Parking Collision-Avoidance Assist (PCA)*</u>    | <u>57</u>        |
| <u>Forward/Reverse/Side Parking Distance Warning (PDW)*</u> | <u>58</u>        |

*Continued on next page*

# Table Of Contents

[Continued from previous page](#)

## DRIVER’S PANEL

|  |                    |
|--|--------------------|
| <a href="#">Instrument Cluster Illumination Control</a>            | <a href="#">60</a> |
| <a href="#">Electronic Stability Control (ESC)</a>                 | <a href="#">61</a> |
| <a href="#">Hill-start Assist Control (HAC)</a>                    | <a href="#">62</a> |
| <a href="#">Reverse Parking Aid Function*</a>                      | <a href="#">63</a> |
| <a href="#">ENGINE START/STOP Button</a>                           | <a href="#">64</a> |
| <a href="#">Power Windows, Window Lock &amp; Central Door Lock</a> | <a href="#">65</a> |
| <a href="#">Auto Door Lock/Unlock</a>                              | <a href="#">65</a> |
| <a href="#">Electronic Child Safety Lock System</a>                | <a href="#">66</a> |
| <a href="#">Rear Door Locks - Double Pull to Open</a>              | <a href="#">66</a> |
| <a href="#">Power/Heated Outside Mirrors*</a>                      | <a href="#">67</a> |
| <a href="#">Manual Folding Mirrors*</a>                            | <a href="#">67</a> |
| <a href="#">Power Folding Outside Mirrors*</a>                     | <a href="#">68</a> |

## STEERING WHEEL CONTROLS

|   |                    |
|---|--------------------|
| <a href="#">Tilt/Telescoping Steering Wheel</a>     | <a href="#">69</a> |
| <a href="#">Turn Signals &amp; Fog Lights*</a>      | <a href="#">70</a> |
| <a href="#">Headlights &amp; High Beams</a>         | <a href="#">71</a> |
| <a href="#">High Beam Assist (HBA)</a>              | <a href="#">72</a> |
| <a href="#">Windshield Wipers &amp; Washers</a>     | <a href="#">73</a> |
| <a href="#">Rear Wiper &amp; Washer*</a>            | <a href="#">74</a> |
| <a href="#">Lifting Wipers (Wiper Service Mode)</a> | <a href="#">74</a> |

## INFOTAINMENT SYSTEM

|  |                    |
|--|--------------------|
| <a href="#">Bluetooth® Wireless Technology</a>                                       | <a href="#">75</a> |
| <a href="#">Steering Wheel Audio Controls</a>  | <a href="#">78</a> |
| <a href="#">Android Auto™ Setup</a>  | <a href="#">79</a> |
| <a href="#">Apple CarPlay® Setup</a>   | <a href="#">82</a> |
| <a href="#">Kia Connect Activation</a>   | <a href="#">84</a> |
| <a href="#">Kia Connect Assistance</a>   | <a href="#">85</a> |
| <a href="#">Kia Access App Download</a>  | <a href="#">86</a> |
| <a href="#">Kia Access App Features Guide</a>  | <a href="#">87</a> |
| <a href="#">Kia Connect Infotainment System - (Non-Navigation &amp; Navigation)*</a> | <a href="#">88</a> |

## CENTER PANEL

|  |                    |
|--|--------------------|
| <a href="#">USB-C Charger Ports</a>                            | <a href="#">91</a> |
| <a href="#">Power Outlets / AC Inverter*</a>                   | <a href="#">92</a> |
| <a href="#">Digital Clock - Infotainment System</a>            | <a href="#">92</a> |
| <a href="#">Wireless Smartphone Charging System*</a>           | <a href="#">93</a> |
| <a href="#">Automatic Climate Control*</a>                     | <a href="#">95</a> |
| <a href="#">Rotary Dial Shifter Knob - Shift-By-Wire (SBW)</a> | <a href="#">98</a> |
| <a href="#">Paddle Shifters</a>                                | <a href="#">98</a> |
| <a href="#">All Wheel Drive (AWD/TERRAIN Mode)*</a>            | <a href="#">99</a> |

[Continued on next page](#)

\*IF EQUIPPED

# Table Of Contents

[Continued from previous page](#)

**CENTER PANEL CONTINUED**

|  |                     |
|--|---------------------|
| <a href="#">Electronic Parking Brake (EPB)</a> | <a href="#">100</a> |
| <a href="#">Auto Hold</a>                      | <a href="#">102</a> |
| <a href="#">Heated Steering Wheel*</a>         | <a href="#">103</a> |
| <a href="#">Seat Warmers/Ventilated Seats*</a> | <a href="#">104</a> |

**SEATING**

|   |                     |
|---|---------------------|
| <a href="#">Rear Occupant Alert (ROA) with Ultrasonic Sensors</a> | <a href="#">105</a> |
| <a href="#">Front Seat Headrest Adjustment</a>                    | <a href="#">107</a> |
| <a href="#">Driver Position Memory System*</a>                    | <a href="#">108</a> |
| <a href="#">Power Adjustable Driver’s Seat* / Power Lumbar</a>    | <a href="#">109</a> |
| <a href="#">2nd-Row Folding Seat</a>                              | <a href="#">110</a> |
| <a href="#">2nd-Row Auto-Folding Seat*</a>                        | <a href="#">111</a> |
| <a href="#">Unfastening Center Seat Belt</a>                      | <a href="#">111</a> |
| <a href="#">One-Touch Slide &amp; Fold 2nd-Row Seats</a>          | <a href="#">112</a> |
| <a href="#">3rd-Row Folding Seat*</a>                             | <a href="#">113</a> |

**OTHER KEY FEATURES**

|   |                     |
|---|---------------------|
| <a href="#">Sun Visor</a>   | <a href="#">114</a> |
| <a href="#">Touch Sensor-Type Door Handles*</a>                       | <a href="#">115</a> |
| <a href="#">Smart Key with Remote Start</a>                           | <a href="#">116</a> |
| <a href="#">Digital Key 2*</a>  | <a href="#">118</a> |
| <a href="#">Smart Power Liftgate with Auto Open/Close</a>             | <a href="#">122</a> |
| <a href="#">Map/Room Lamps</a>  | <a href="#">125</a> |
| <a href="#">Panoramic Sunroof with Power Sunshade*</a>                | <a href="#">126</a> |
| <a href="#">HomeLink® with Auto-Dimming Rearview Mirror*</a>          | <a href="#">128</a> |
| <a href="#">Hood Release Lever and Latch</a>                          | <a href="#">130</a> |
| <a href="#">Fuel Cap / Malfunction Indicator (Check Engine Light)</a> | <a href="#">130</a> |
| <a href="#">Fuel Filler Door Release</a>                              | <a href="#">131</a> |

**SAFETY FEATURES**

|  |                     |
|--|---------------------|
| <a href="#">Occupant Detection System (ODS) / Passenger Airbag Off Indicator</a> | <a href="#">132</a> |
| <a href="#">Seat Belts</a>   | <a href="#">133</a> |
| <a href="#">Normal Maintenance Chart</a>   | <a href="#">134</a> |

|                                   |                     |
|-----------------------------------|---------------------|
| <a href="#">LEGAL DISCLAIMERS</a> | <a href="#">135</a> |
|-----------------------------------|---------------------|

\*IF EQUIPPED



# INSTRUMENT CLUSTER

## Instrument Cluster Overview

 
- A** Speedometer
- B** Power Gauge
- C** Battery SOC (State of Charge) gauge
- D** Indicators & Warning Lights
- E** LCD Display (including Trip Computer)
- F** Fuel Gauge



Instrument  
Cluster Overview



Arrow direction indicates the side of the vehicle the fuel door is located

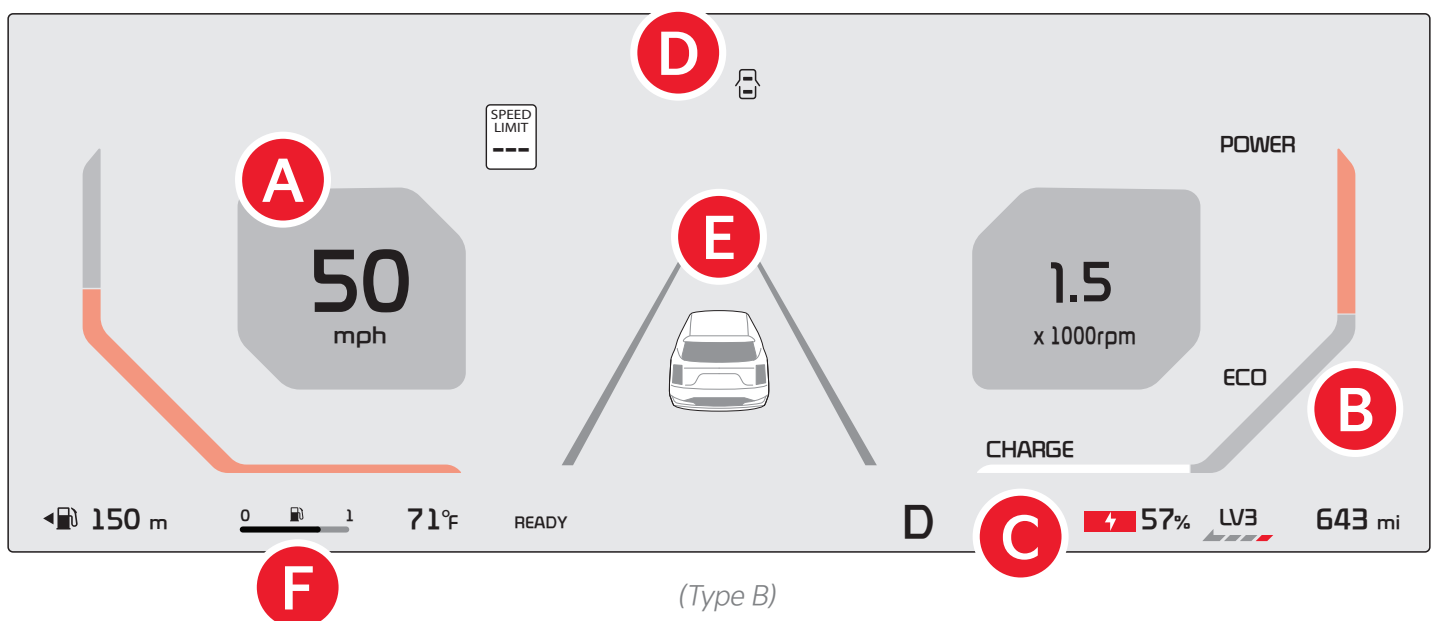

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. Refer to Section 3 in the Owner's Manual for more information.




## Plug-In Hybrid Indicators at Startup

 - A Power Gauge** - Indicates how economically the vehicle is being driven.
- B CHARGE** - Indicates that the energy made by the vehicle is being converted to electrical energy (regenerated energy)
- C ECO** - Indicates that the vehicle is being driven in an ECO-friendly manner
- D POWER** - Indicates that the vehicle is exceeding the ECO-friendly range
- E EV Mode** - Illuminates when only the electric motor is powering the vehicle
- F Ready** - Illuminates when the Hybrid system is operational. Even if the engine is off, the vehicle can be driven (Plug-In Hybrid indicator location may vary from image shown)
- G Service Indicator** - Illuminates when a malfunction occurs in the vehicle's Hybrid system. Have an authorized Kia dealer address the concern as soon as possible



Instrument Cluster Overview

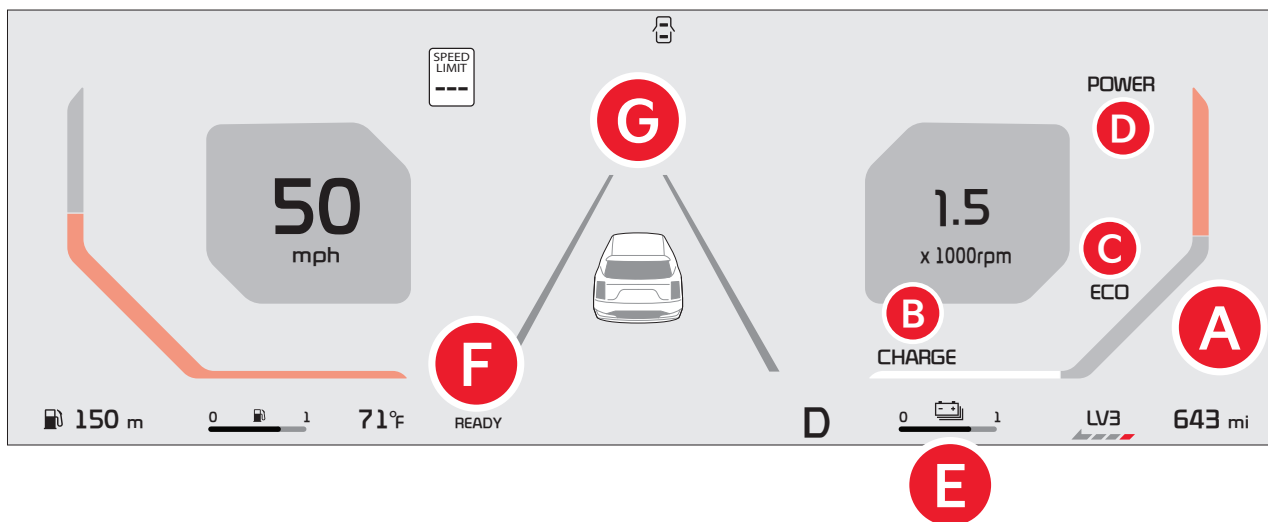

**REMINDER:** Avoid starting or driving the vehicle when the fuel tank is empty. As the engine will be incapable of charging the high-voltage Hybrid battery, the battery will lose its charge and may be damaged.

*Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, please refer to section 5 in the Owner's Manual.*

*These illustrations are for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.*



Indicators & Warning Lights

|              |  |                  |  |
|--------------|--|------------------|--|
| <b>READY</b> | READY Indicator  |                  | Electronic Stability Control (ESC) Indicator Light                                     |
| <b>EV</b>    | EV Mode Indicator  | <b>AUTO HOLD</b> | AUTO HOLD Indicator*   |
|              | Engine Oil Pressure Warning Light  |                  | <b>CRUISE</b> Cruise Control Indicator Light*  |
|              | Malfunction Indicator Light  | <b>SET</b>       | Cruise/SET Indicator Light*  |
| <b>EPB</b>   | Electric Parking Brake (EPB) Warning Light*  |                  | Washer Fluid Warning Light*  |
|              | Seat Belt Warning Light  |                  | Master Warning Light   |
|              | Light ON Indicator Light   |                  | Electronic Brake Force Distribution (EBD) System Warning Light (both lit at same time) |
|              | High Beam Indicator Light  |                  | Lane Safety Indicator Light  |
|              | Low Beam Indicator Light   |                  | LED Headlamp Warning Light*  |
|              | Front Fog Light Indicator Light*   |                  | Downhill Brake Assist (DBA) Indicator*   |
|              | High Beam Assist Indicator Light   | <b>SPORT</b>     | SPORT Mode Indicator Light   |
|              | Parking Brake & Brake Fluid Warning Light  | <b>ECO</b>       | ECO Mode Indicator Light   |
|              | Forward Safety Warning Light   | <b>SMART</b>     | SMART Mode Indicator Light   |
|              | All Wheel Drive (AWD) Warning Light*   | <b>SNOW</b>      | SNOW Mode Indicator Light  |
|              | All Wheel Drive (AWD) Lock Indicator Light*  |                  | Charging Cable Connection Indicator (Plug-In Hybrid)*                                  |
|              | Electronic Power Steering (EPS) Warning Light  |                  | Regenerative Brake Warning Light (appear simultaneously)                               |
|              | Charging System Warning Light*   |                  |  |
|              | Airbag Warning Light   |                  | Service Warning Light  |
|              | Low Fuel Level Warning Light   |                  | Emergency Steering Warning Light*  |
|              | Immobilizer Indicator Light*   |                  | Driver Attention Warning Light*  |
|              | Engine Coolant Temperature Warning Light*  |                  | Door Ajar Warning Light*   |
|              | Icy Road Warning Indicator Light*  |                  | Liftgate Open Warning Light*   |
|              | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator Light |                  | Intelligent Speed Limit Assist (ISLA) Indicator*                                       |
|              | Anti-Lock Braking System (ABS) Warning Light   |                  | Highway Lane Change Assist Indicator*  |
|              | Electronic Stability Control (ESC) OFF Indicator Light                                       |                  | Lane Following Assist Indicator*   |


Your vehicle’s instrument cluster & indicator light locations may differ from those in the illustrations. Refer to Section 5 in the Owner’s Manual for more information.


\*IF EQUIPPED






## Tire Pressure Monitoring System (TPMS)<sup>†20</sup>



The TPMS indicator  functions as both the Low Tire Pressure Light and the TPMS Malfunction Indicator.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate the tire(s) to specifications using an accurate tire pressure gauge to turn off the Low Tire Pressure Indicator . See the front driver's door jamb for PSI specifications.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See the dealer for service.



**Tire Pressure  
Monitoring  
System (TPMS)**

### Low tire pressure



24



35

35

35

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to Section 8 in the Owner's Manual for more information.*



# Tire Pressure Monitoring System (TPMS)<sup>†20</sup>

[\*Continued from previous page\*](#)

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain the recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

### REMINDERS:

- Check the recommended tire pressure label located on the left side of the driver’s door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

*Always check the Owner’s Manual for complete operating information and safety warnings.*



# Fuel Economy / Tips for Economical Driving

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics.

Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only\* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads



**Tips for  
Economical  
Driving**

*For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to section 5 in the Owner's Manual.*



## Drive Mode Integrated Control System\*

 
The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the Drive Mode knob **B**.

When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster and illuminate next to the Drive Mode knob. The system's default mode is NORMAL mode and when selected, the indicator will not be illuminated. If ECO or SMART mode is selected, the vehicle will remain in that mode when the engine is restarted.


- **ECO Mode**
- **NORMAL Mode**
- **SPORT Mode**
- **SMART Mode\*** - When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style
- **SNOW Mode\***
- **TERRAIN Mode\*** - Press the DRIVE/TERRAIN Mode to switch from DRIVE MODE to TERRAIN MODE



### Drive Mode Integrated Control System

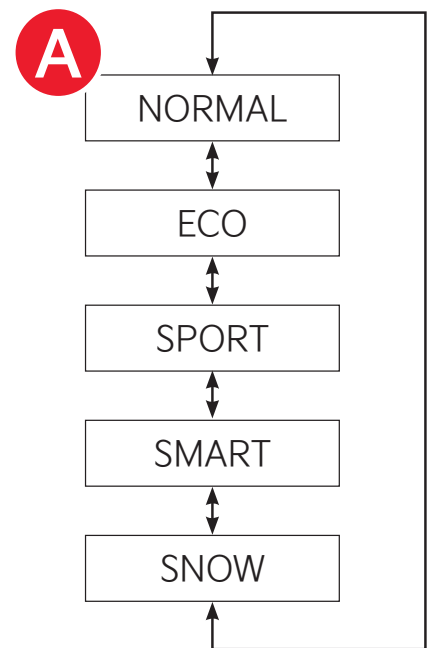

(Appears on LCD in Instrument Cluster)

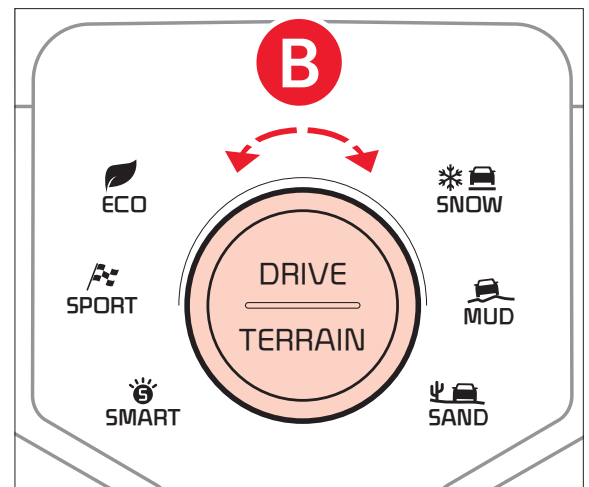 

[Continued on next page](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary. See section 6 in the Owner's Manual for more information.*



# Drive Mode Integrated Control System\*

[\*Continued from previous page\*](#)

### QUICK TIP

When vehicle is shut down while in SPORT Mode, the system will default to NORMAL mode when the engine is turned off. SPORT mode will need to be selected again once the vehicle is restarted.

### REMINDERS:


- When ECO mode is selected, the following may occur to help improve fuel economy:
  - Acceleration may be slightly reduced even when the accelerator is fully depressed
  - Air conditioner performance may be limited
  - Shift pattern of the automatic transmission may change
  - Engine noise may increase
  - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- The system defaults to NORMAL mode when ignition is turned on
- Steering effort may be slightly increased in SPORT mode

 


## Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the ENGINE START/STOP button is in the ON position.

To cycle through the LCD Instrument Cluster modes **A**, press the Mode button **B**.

To select and enter the Trip Computer mode , press the OK button **C** up/down and then press the button **C** to enter. To cycle through and select the different screens (Fuel Economy, Trip A, Trip B), press the OK button **C** up/down again and then press the OK button **C**. When displaying the TRIP A or TRIP B screens, press and hold the OK button **C** to reset the Tripmeter to zero. Press the OK button **C** to go back to the previous mode/item.

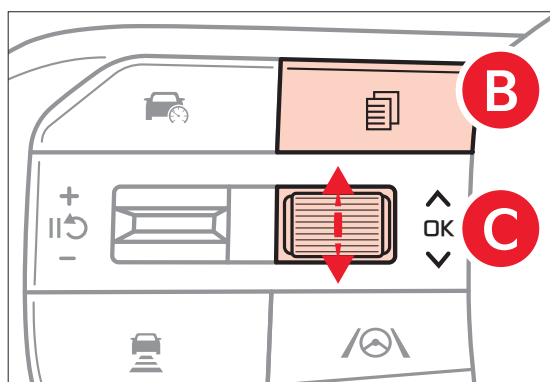

(Type A; Controls located on Steering Wheel)

### REMINDERS:

 
- Appearance of the Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected



**Instrument Cluster Overview**



**Steering Wheel Controls**

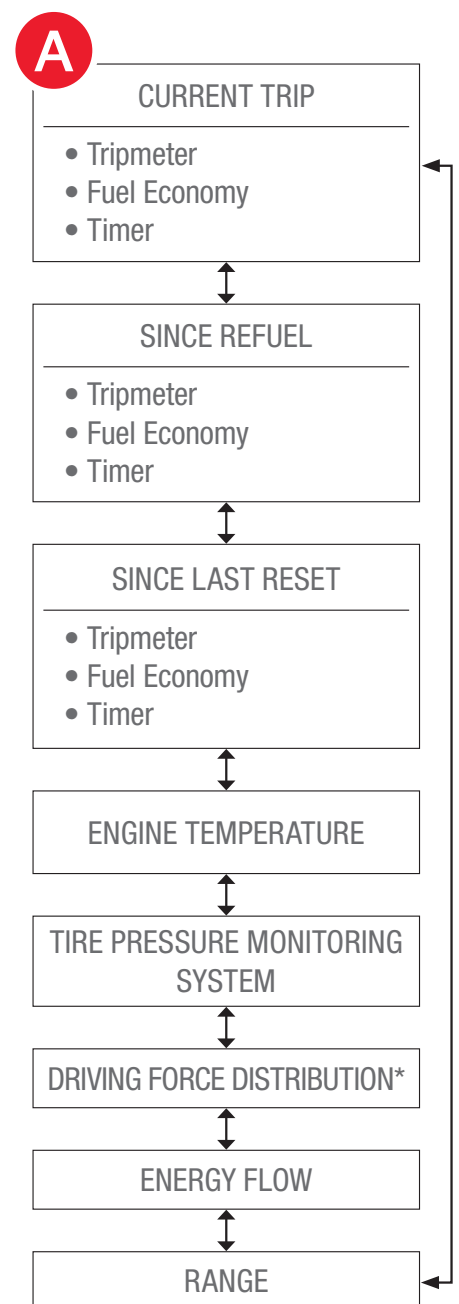

Your vehicle's steering wheel buttons may differ from those in the illustrations.



## Instrument Cluster LCD Modes

Press the Mode button **A** to cycle through the different Instrument Cluster LCD Modes:



**Trip Computer Mode:** Displays driving information for current trip, since refueling/last reset, energy flow, driving force distribution, range



**Driving Assist Mode:** Displays information on Lane Keeping Assist\*, Lane Following Assist/, Highway Driving Assist, Driver Attention Warning\*



**Turn-by-Turn Mode\*:** Displays the route guidance and destination information



 
**Information/Master Warning Mode:** Displays information on Intelligent Speed Limit Assist\*, TPMS, drive force distribution\*, and warning messages related to the vehicle when one or more systems is not operating normally



**Instrument Cluster Overview**



**Steering Wheel Controls**

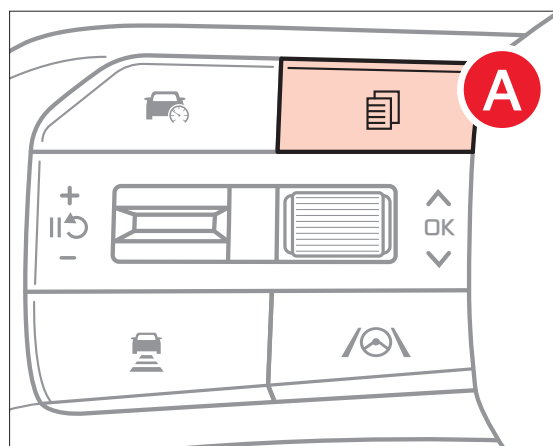

(Type A; Controls located on Steering Wheel)


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*Refer to Section 5 in the Owner's Manual for more information.*



## Vehicle Settings - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the SETUP button/key on the Infotainment System. Then press Vehicle , which will take you to Vehicle Settings. Use the touch-screen to navigate through the menus.



Vehicle Settings

**Driver Assistance:** Driving Convenience, Smart Cruise Control, Speed Limit, Warning Method, Driver Attention Warning, Driving Safety, Parking Safety

**Drive Mode:** My Drive Mode, Brake Mode, Drive Mode Change Alert, Trailer Mode, Climate Control ECO Mode

**Climate:** Recirculate Air\*, Automatic Ventilation\*, Defog/Defrost Options\*, Climate Features\*

 
**Seat:** Link to Climate Settings, Seating Easy Access, Seat Position Change Alert, Smart Posture Care, Smart Support, Ergo Motion Seat

**Lights:** Ambient Light, One Touch Turn Signal, Welcome Mirror Light, Headlight Delay, Lighting Pattern, Travel Mode, High Beam Assist, Intelligent High Beams, Interior Lights Always On

**Door:** Automatically Lock/Unlock, 2 Press Unlock, Power Liftgate, Power Liftgate Opening Speed/Height, Smart Liftgate, Remote Window Control

**Digital Keys\*:** Smartphone Key, NFC Card Key, Digital Key Information

**Convenience:** Rear Occupant Alert, Service Interval, Oil Change Reminder, Wireless Charging System, Auto Rear Wiper (in R), Smart Glass Tint, Trailer Mode/Checklist

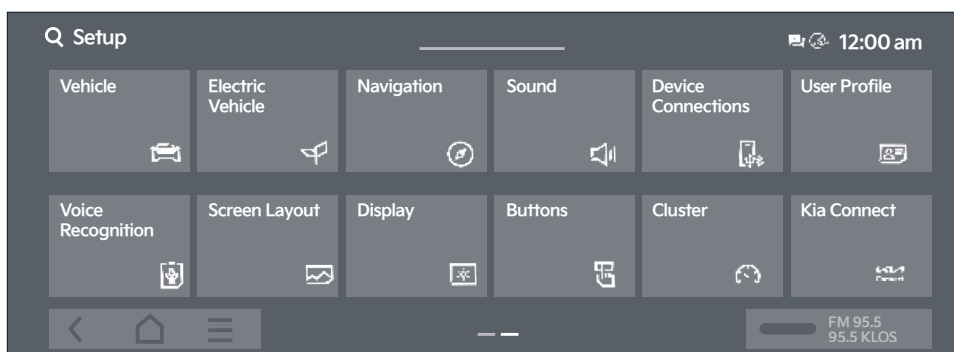

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*

*Images are for illustrative purposes only. Actual feature, buttons and screen may vary. For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide.*



## Vehicle Auto Shut-off System\*

The Vehicle Auto Shut-off, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes) in the User Settings ⚙️.

A warning on the Instrument Cluster LCD will appear stating the “Vehicle will be turned off automatically in...” and a chime will sound when the timer starts **A**.

### QUICK TIP

The timer that appears on the Instrument Cluster’s LCD can be reset using the OK button on the right side of the Steering Wheel.

When timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

**Auto Shut-off Settings** - The system is on by default and timer is pre-set to 30 minutes. To change the pre-set time settings, go to User Settings ⚙️ on the Instrument Cluster LCD by pressing the Mode button 📄 **B** on right side of the Steering Wheel. Select Convenience, then Vehicle Auto Shut-off. Move through the selections by pressing the OK button **C** on the Steering Wheel. Select 30 minutes, 60 minutes or Disable for off **D**.

### REMINDERS:

- When the vehicle is turned off then on again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
  - The vehicle is in (P) Park
  - The driver’s seat belt is unfastened
  - The driver’s door is opened
  - The passenger seat is not occupied



### Vehicle Auto Shut-off System

**A**

Vehicle will be turned off automatically in

59:01

OK : Reset

**D**

 
### Vehicle Auto Shut-off

↶ Back

60 min. ☒

30 min. ☐

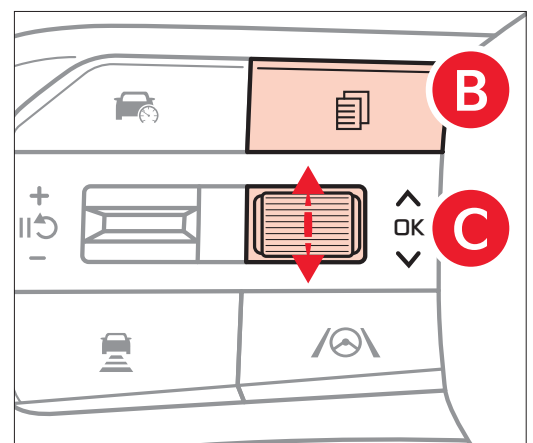

Off ☐



*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Service Interval Mode

To enter Service Interval Mode, press the Mode button  **A**, go to User Settings  and enter by pressing the OK button **B**.

Move up/down to Service Interval by pressing the OK button **B**, then press the OK button **B** to enter. System will display the number of miles remaining until the next service is due, as well as the type of service due.

When service is required, the following will be displayed: **Service Required**.


To reset the Service Interval Mode system, press and hold the OK button **B** for more than 1 second.

Press the OK button **B** up/down to go back to the previous mode/item.

To turn **Service Interval** OFF, go to User Settings.

 
### Service Interval Setting **C**

To set the service interval in User Settings mode:


- Press the Mode button  **A** to go to User Settings and press the OK button **B** to enter
- If Service Interval is OFF, press the OK button **B** to turn ON
- Press the OK button **B** up/down to select/change the interval setting
- Press the OK button **B** to select the interval



**Kia Full  
Synthetic Oil**

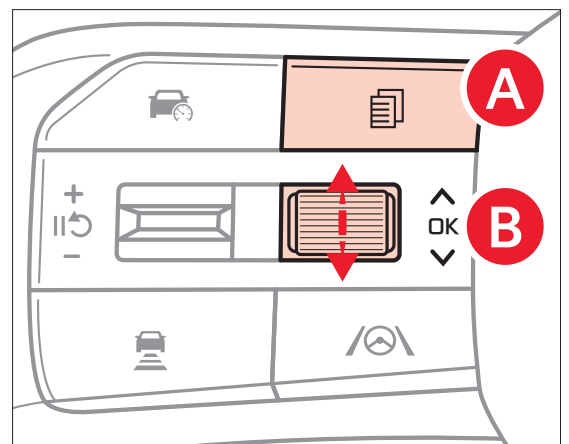

Service Interval

 

1500mi  
30day

### QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder in User Settings\*. Go to Convenience, then Oil Change.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# Charging Connector Auto/Lock/Unlock Mode

The charging connector automatically locks when the connector is plugged into the charging inlet.

When in Auto/Lock Mode and the vehicle is unlocked but if charging cable is not disconnected within 15 seconds, the connector will be automatically locked again.

If charging connector is unlocked but all doors are locked again, immediately, the connector will be automatically locked again.

If charging does not work, disconnect the connector and try charging again.

If the connector cannot be locked/unlocked, pull the emergency release lever in the trunk.

## Removing the Charging Connector

To prevent the risk of charging cable theft, the charging connector cannot be disconnected from the inlet when the doors are locked or the charging connector is in the LOCK mode. Unlock all doors to disconnect the charging connector from the inlet. If the release button does not work even after the all doors are unlocked, pull the emergency lift cable in the engine room.

### REMINDERS:

- If charging does not work, disconnect the connector and try charging again
- If the connector cannot be locked/unlocked, pull the emergency release lever in the trunk
- In unlock mode, the connector is not locked during charging and after completion of charging

*Refer to Section 1 in the Owner's Manual for more information.*



## Scheduled Charging

Charging time can be set in the Infotainment System home screen, under charge management, or using the Kia Access app<sup>†2</sup>.




Plug-In Hybrid  
Charging

### Charging with the Kia Access App<sup>†2</sup>:

The Kia Access app<sup>†2</sup> can help you find the nearest charging station and displays charging status and the Scheduled Charging information. On your Smartphone, go to an app store or market-place to download the Kia Access app<sup>†2</sup>.

**REMINDER:** When Scheduled Charging is set and the charger is plugged in, charging will not begin until the set time & date are met to complete the charging. The green charge indicator on top of the dash will temporary flash ON/OFF to show that scheduled/reserve charging is set.

**Deactivate Scheduled Charging** - Press the Deactivate Scheduled Charging button  for more than two seconds to disable the scheduled charging feature when immediate charging is required.

### REMINDERS:

- Reservation charging may not be available at public chargers
- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style
- If you operate the air conditioner / heater too much, the distance to empty will be reduced
- If you select "Charge ONLY during Off-peak" it will charge only during off-peak time, and then stop. The vehicle may not charge to 100%

[\*Continued on next page\*](#)



*For more detail and/or subsequent steps in charging your vehicle, please see section 1 of the Owner's Manual.*

 


# Scheduled Charging

[Continued from previous page](#)

QUICK TIP

When you press the Deactivate Scheduled Charging button\*   OFF the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting from the Infotainment System.

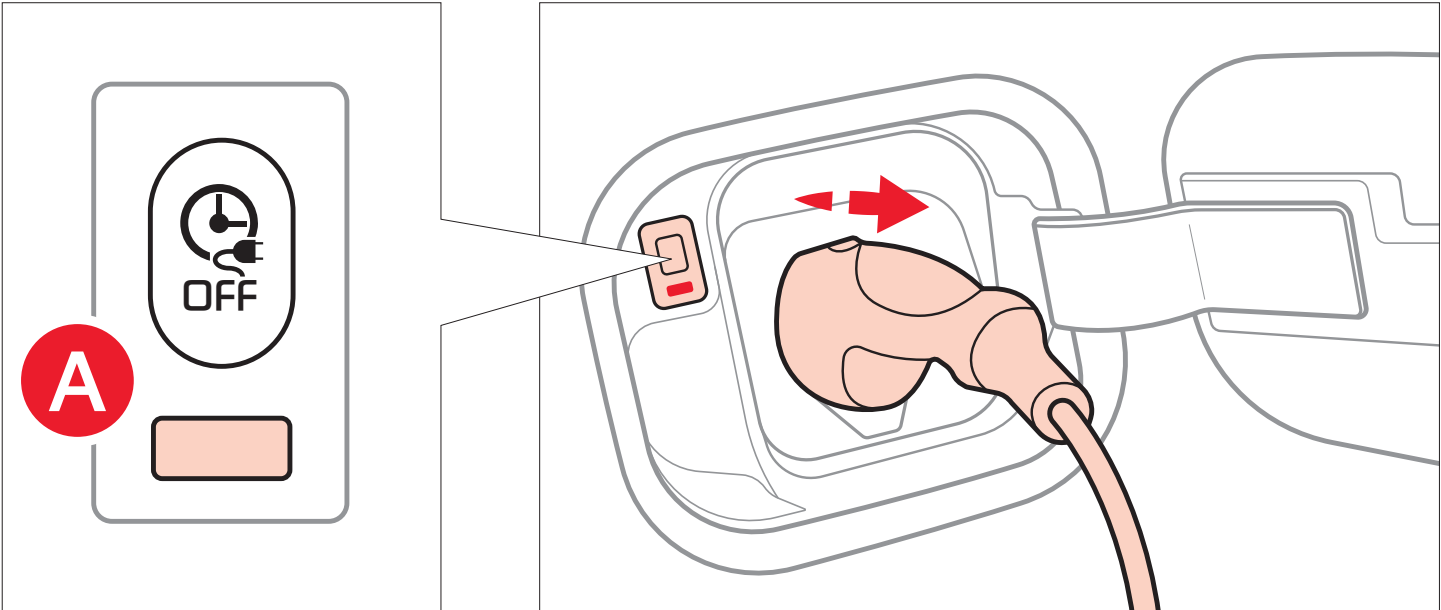

For illustrative purposes only. Your actual display, buttons and/or features may vary.

\*IF EQUIPPED



## Charging the Plug-In Hybrid Vehicle

### AC Level 1 Charger - "Trickle" Charge

A Level 1 or "trickle" charger is the most common type of charging system for a Plug-In Hybrid. This type of charger uses 120 volts of household electricity and takes up to 10.5 hours for a full charge.



Plug-In Hybrid  
Charging

 
### Trickle Charger Indicators:

- A** ICCB plug to a 120VAC outlet
- B** **Power** - When the charger and AC plug is plugged in and functioning normally, the indicator will turn green. Indicator is red if plug temperature sensor warning is present
- C** **Charge** - Indicates that the vehicle is charging

### REMINDERS:

- Do not use an extension cord. Plug trickle charger directly into wall socket. Do not charge to a receptacle that is old, damaged, corroded or cracked
- When using outdoors, be careful not to expose it to external environments such as rain, snow, and high temperatures
- When part A lights up in red, check if it is exposed to the external environment and then charge it again

- D** **Fault** - Indicates charge failure
- E** **Charge Level** - Indicates the level of charge: L (8A), M (10A), or H (12A)
- F** **ICCB** - In-Cable Control Box

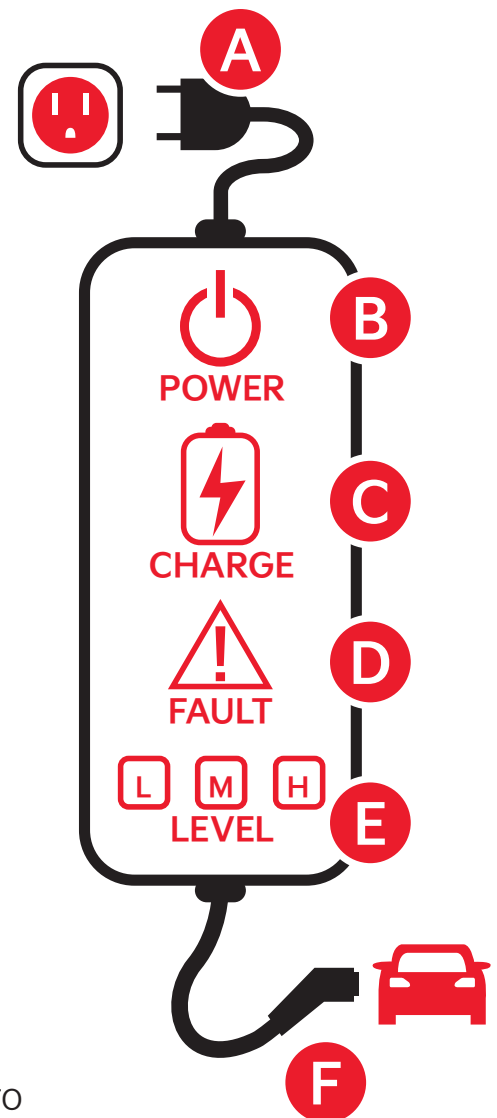

[Continued on next page](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# Charging the Plug-In Hybrid Vehicle

[Continued from previous page](#)

## AC Level 2 Charger - “Normal” Charge

A Level 2 or “normal” 240-volt charger is the recommended charging system for the Plug-In Hybrid. This type of charger uses 240 volts of electricity and takes approximately 3.5+ hours for a full charge (Based on Kia testing with SAE J1772 charger performed at 3.3kW). This charger may be able to be installed at your home or found at a public charging station.

**REMINDER:** Shape of charger and how to use the charger may be different for each manufacturer. Please see Owner’s Manual for more information.

### QUICK TIP

A Level 2 or “normal” 240-volt charger is recommended for regular charging of the vehicle.

[Continued on next page](#)


For more detail and/or subsequent steps in charging your vehicle, please see section 1 of the Owner’s Manual.



## Charging the Plug-In Hybrid Vehicle

 
 
 
 
[Continued from previous page](#)

To charge the Plug-In Hybrid vehicle using a Level 1 or 2 charger:

1. Connect the ICCB plug **A** to an electrical outlet
2. Check if the power light (green) **B** on the ICCB turns on
3. Press the brake pedal and engage the parking brake
4. Turn off all switches, put the shift lever in P (Park), and turn off the vehicle
5. Open the charging door **C** by pressing the rear center edge of charging door (Ensure doors are unlocked)
6. Remove any dust or water on the charging connector and charging inlet **D**
7. Hold the charging connector handle **E** and connect it to the vehicle's charging inlet **D** by pushing the connector until you hear a clicking sound
8. Charging begins automatically (Ensure the charge indicator light  is illuminated on your instrument cluster, indicating the vehicle is charging)



Plug-In Hybrid Charging

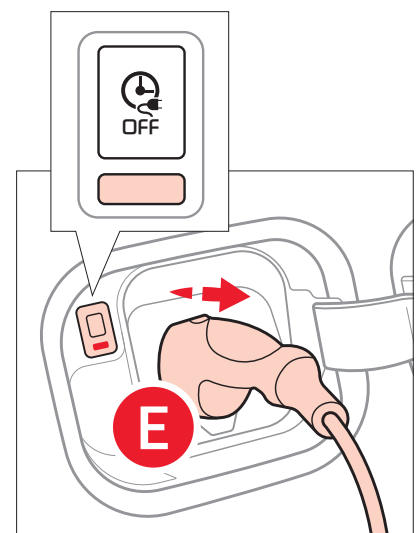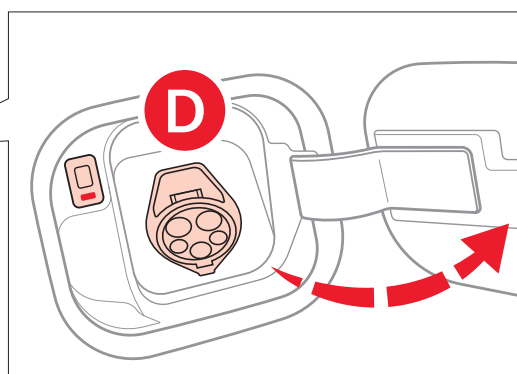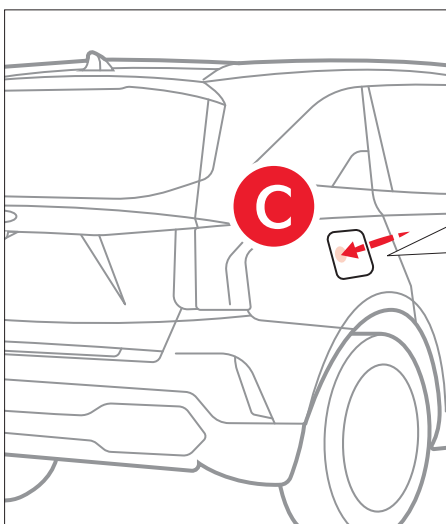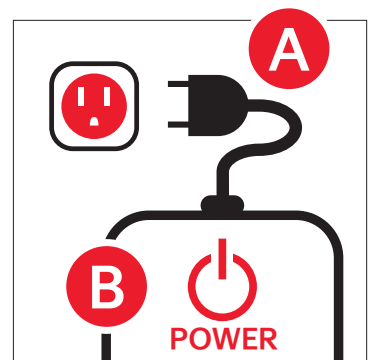

For more information about energy flow, refer to section 1 of the Owner's Manual.

[Continued on next page](#)


For illustrative purposes only. Your actual display, buttons and/or features may vary.

## Charging the Plug-In Hybrid Vehicle

 [Continued from previous page](#)

### Checking the Charging Status


The charging status can be checked by viewing the charging status indicator **A** near the charging inlet (bottom indicator). The charging indicator will blink yellow when charging, and the charge is from 0-65%. The charging indicator will blink green when charging and the charge is from 65-100%. The indicator will turn off within 5 seconds when charging is completed.

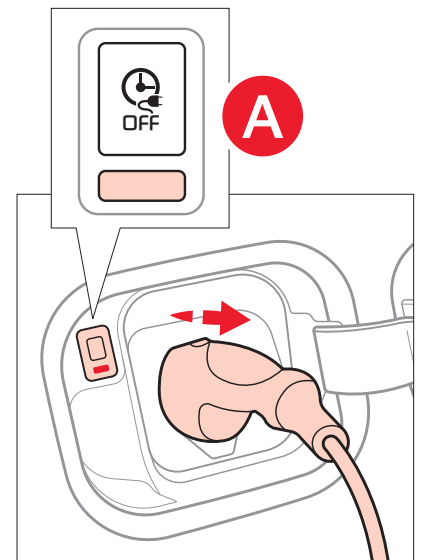

The remaining charging time will be displayed in the Instrument Cluster **B** for one minute, or when a driver's door is opened during charging.

### Removing the Charging Connector

 To help prevent the risk of charging cable theft, the charging connector cannot be disconnected from the inlet when the doors are locked or the charging connector is in the LOCK mode. Unlock all doors to disconnect the charging connector from the inlet. If the release button does not work even after the all doors are unlocked, pull the emergency lift cable in the engine room.

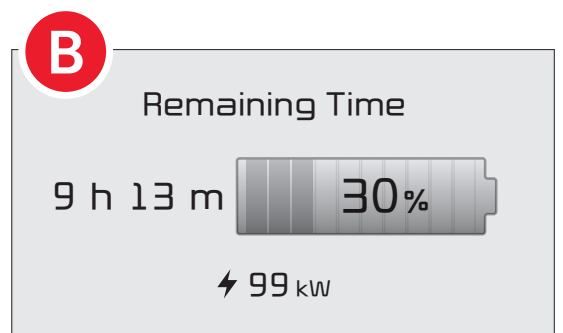

### REMINDERS:

- When indicator is blinking red, there's an error while trying to charge
- When the charging connector is connected and the reserved charging is in standby mode, the charging indicator is turned off and the scheduled charge release button indicator is turned on. The scheduled charge release button indicator will turn off after 3 minutes

 
 
 
 
*For illustrative purposes only. Your actual display, buttons and/or features may vary. For more detail and/or subsequent steps in charging your vehicle, please see section 1 of the Owner's Manual.*



## Plug-In Hybrid Display (Infotainment System)

The Infotainment System screen provides information on economical operation and Plug-In Hybrid system modes. To enter the Plug-In Hybrid display mode, press the ALL MENUS button on the Infotainment System home screen. Then select one of the menus: EV Range, Energy Information, Charge Management, ECO Driving, Energy Flow. Some examples are below:

- **Plug-In Hybrid System Home Screen** - Range, Energy Info, Charge Management, ECO Driving, Energy Flow
- **ECO Level** - The more economically you drive, the more the ECO Level increases
- **Energy Flow** - Displays the current flow of power between the main powertrain components
- **Fuel Economy** - Displays the average fuel economy over the duration of a trip

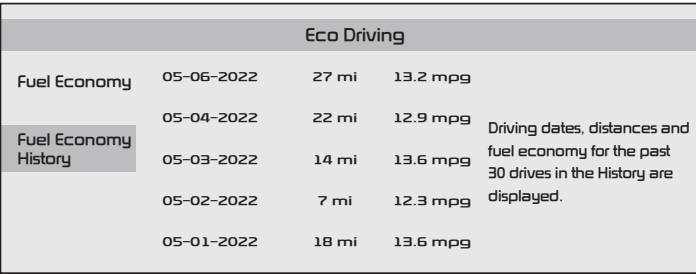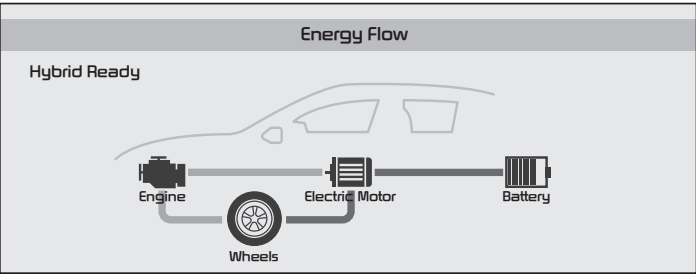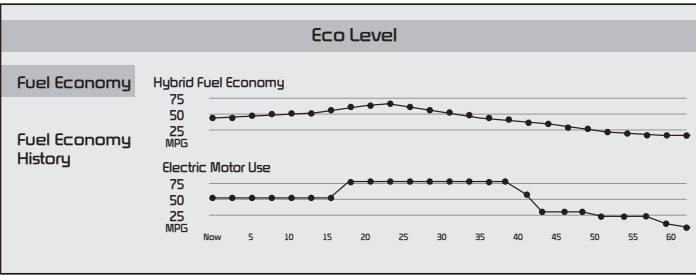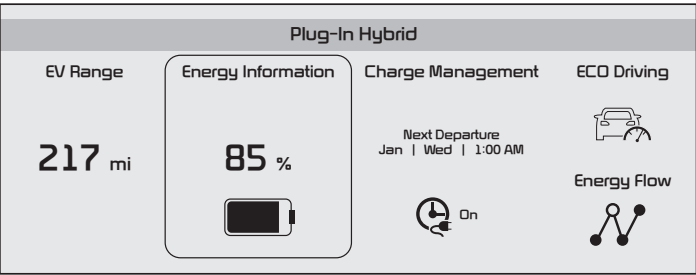

The images shown are for illustration purposes only. Not all available displays are shown. Screens may vary.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide.

\*IF EQUIPPED



## Plug-In Hybrid Modes

 
To change the Plug-In Hybrid Mode, press the EV/HEV button **A** (PHEV only); switch between Automatic mode, Electric (EV) mode and Hybrid (HEV) mode each time the button is pressed.



**Plug-In Hybrid Modes - Automatic, EV and HEV**

The LCD on the Instrument Cluster will display the mode selected:

- **Automatic Mode** - AUTO will be displayed on the instrument cluster and the vehicle will operate in Hybrid or Electric vehicle mode as needed
- **Electric Mode** - EV will display on the Instrument Cluster and the vehicle operates on the EV battery until the power is low, then it switches to HYBRID mode
- **Hybrid mode** - HEV will display on the Instrument Cluster and the high-voltage

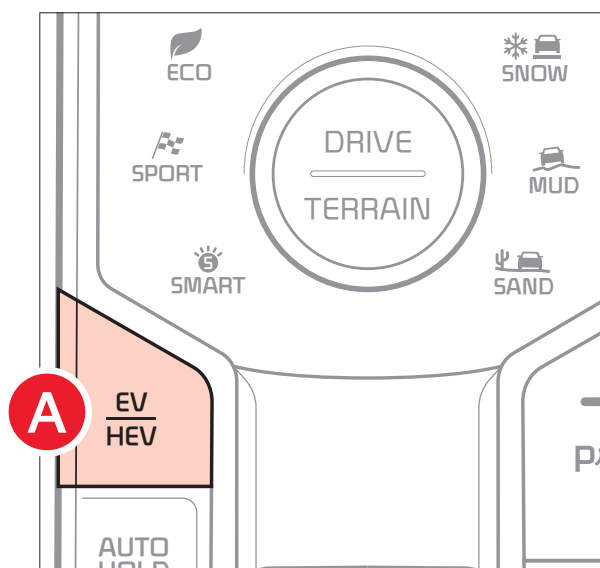

*(Located on button panel below Rotary Dial Shifter)\**

*For more information, refer to section 1 of the Owner's Manual.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Forward Collision-Avoidance Assist (FCA)<sup>†4</sup>

Forward Collision-Avoidance Assist is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA detects an increased risk of collision, it may automatically apply the brakes **B** to potentially reduce the effects of a possible collision.

- **Junction Turning** function **C** may help avoid a collision with an oncoming vehicle detected in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking
- **Junction Crossing** function **D** may help avoid a collision with oncoming vehicles detected on the left or right side when crossing an intersection by applying emergency braking
- **Direct Oncoming Response** function **E** may reduce the vehicle speed and temporarily apply braking when FCA detects a vehicle is approaching directly in front

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation. Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.*

 


**Forward Collision-Avoidance Assist (FCA) - Advanced Features**




**Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit**


**A**

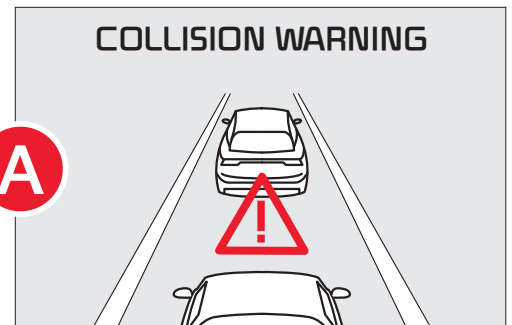


**B**

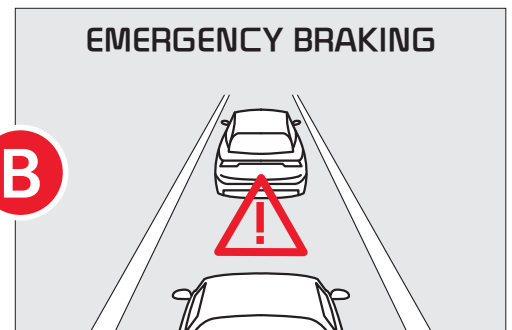 


**C**

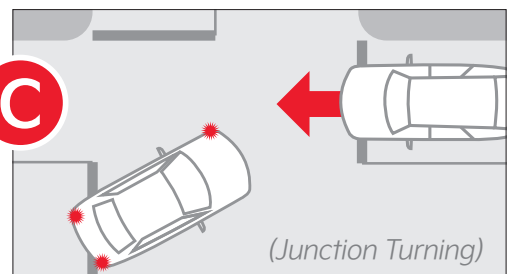 

**D**

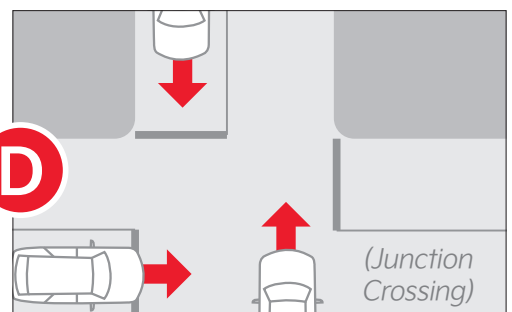 

**E**

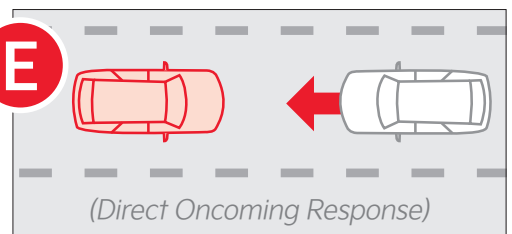 



## Forward Collision-Avoidance Assist (FCA)<sup>†4</sup>

[Continued from previous page](#)

- **Lane-Change Oncoming** function **A** may help avoid a possible collision with a detected oncoming vehicle when changing lanes by assisting the driver's steering
- **Lane-Change Side** function **B** may help avoid a possible collision with the vehicle detected ahead in the next lane when changing lanes by assisting the driver's steering
- **Evasive Steering Assist** function **C** may help avoid a possible collision with a vehicle, pedestrian or cyclist detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering. If FCA detects a risk of collision with a pedestrian or cyclist, it may warn the driver and potentially assist the driver's steering

 
**REMINDER:** Once the risk factors are not detected, these functions will deactivate.

### FCA Settings:


- FCA can be turned on/off by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position




Driver Assistance -  
Warning Methods &  
Warning Volume

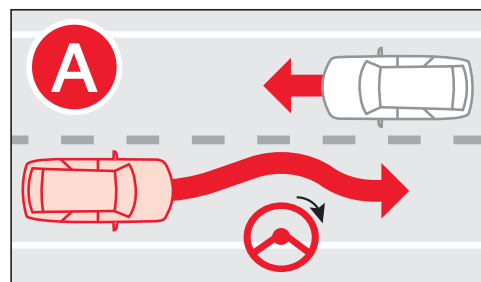

(Lane-Change Oncoming)

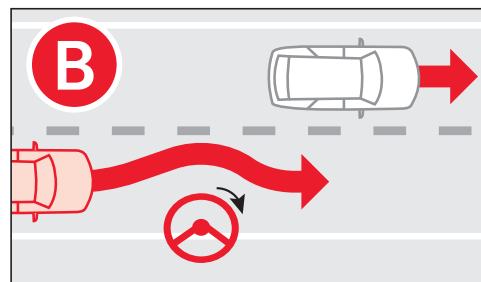 

(Lane-Change Side)

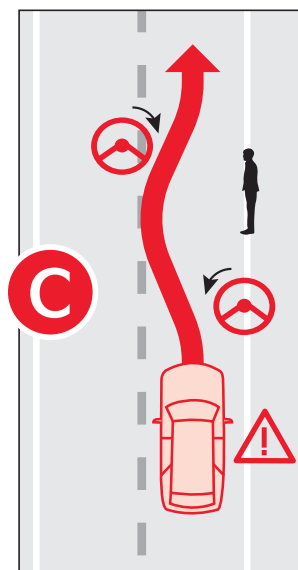 

(Evasive Steering Assist)

[Continued  
on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.



# Forward Collision-Avoidance Assist (FCA)<sup>†4</sup>


[Continued from previous page](#)

- **To access Vehicle Settings in the Infotainment System** - Press the SETUP button on the Infotainment System. Select the VEHICLE button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in DRIVING SAFETY, scroll through the selections and press the button to toggle the features on or off
- **Forward Safety Warning Timing** - When in DRIVING SAFETY, select STANDARD or LATE. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'
- **Warning Methods** - To adjust the Warning Methods settings, go to Vehicle Settings, Driver Assistance, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority
- FCA will become active when the:
  - Ignition is on or the Power button is ON
  - Vehicle is traveling faster than 5 mph
  - Electronic Stability Control (ESC) is ON

### QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method. You can also adjust the Haptic Warning.

### REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- FCA may warn the driver if the vehicle ahead is decelerating to turn or to pass speed bump
- When FCA is off, the Forward Safety warning indicator may remain on in the Instrument Cluster 

*Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.*



## Blind-spot Collision-Avoidance Assist (BCA)<sup>†4</sup>

BCA is designed to use rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. Initially, BCA is designed to provide a Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors.



**Blind-spot Collision-Avoidance Assist (BCA)**

 
 
 


**Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit**

**Vehicle detection:** When another vehicle is detected within BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

**Collision warning:** When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and BCA will sound a warning.

**Collision-Avoidance Assist\*:** If there is a collision risk when exiting a parallel space **C**, Blind-Spot Collision-Avoidance Assist may assist with braking your vehicle to help avoid a collision. The warning light on the outside rearview mirror, an audible warning and the steering wheel vibration will warn the driver of a collision. It assists in braking control to prevent a collision with a vehicle approaching from the blind spot area.

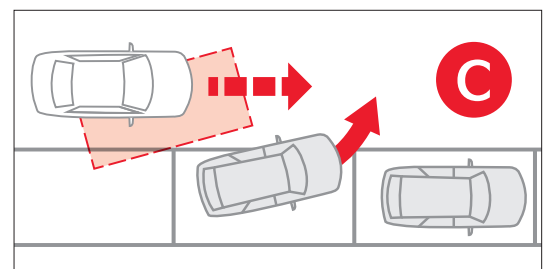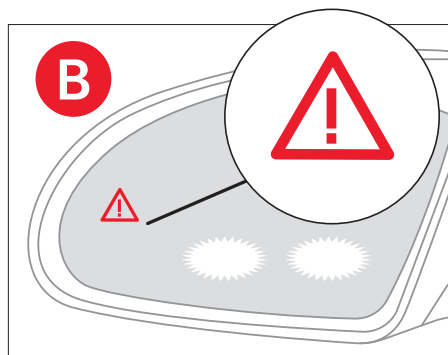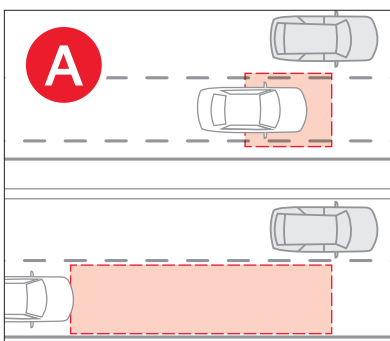

[Continued on next page](#)

*When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*The images on this page are for illustrative purposes only and may not reflect actual feature or operation.*

# Blind-spot Collision-Avoidance Assist (BCA)<sup>†4</sup>

[Continued from previous page](#)

## BCA Settings:

- BCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then select DRIVING SAFETY, followed by BLIND-SPOT SAFETY

## QUICK TIPS

- The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method. You can also adjust the Haptic Warning
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems
- BCA will activate when:
  - Blind-spot Safety is selected in the Vehicle Settings
  - Other vehicles are detected on the rear sides of your vehicle when driving above approximately 12 mph (20 km/h) and the other vehicle is driving above approximately 7 mph (10 km/h)
  - Collision Warning activates when driving above approximately 25 mph (40 km/h) and the other vehicle is driving above approximately 7 mph (10 km/h)
  - Collision-Avoidance Assist activates when driving below approximately 2 mph (3 km/h) and the other vehicle is driving above approximately 3 mph (5 km/h)

[Continued on next page](#)

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. For more information, refer to section 7 of the Owner’s Manual.

†LEGAL DISCLAIMERS ON [PAGE 135](#) | \*IF EQUIPPED



# Blind-spot Collision-Avoidance Assist (BCA)<sup>†4</sup>

[\*Continued from previous page\*](#)


### REMINDERS:

- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- If the turn signal is activated for a left turn at an intersection, BCA may issue a warning regardless of whether the driver intends to complete the turn

*When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. For more information, refer to section 7 of the Owner's Manual.*



## Lane Keeping Assist (LKA)<sup>†4</sup>

 
Lane Keeping Assist (LKA) is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator  will initially illuminate white or green. It will remain white when the vehicle is traveling slower than 40 mph. When LKA can assist the steering, the Lane Safety icon will illuminate green.




**Lane Keeping Assist (LKA)**





**Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit**

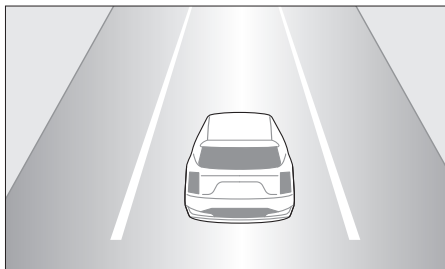

 *When LKA detects the lane markers, both lanes are displayed white*

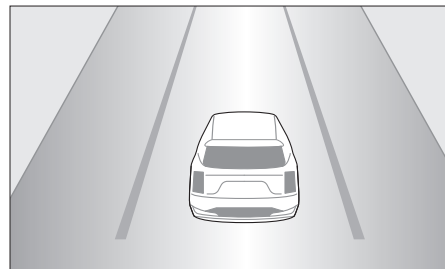

  *When LKA does not detect the lane markers, the lanes are displayed gray*

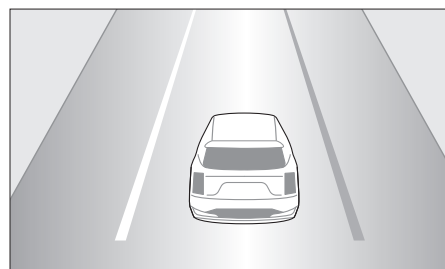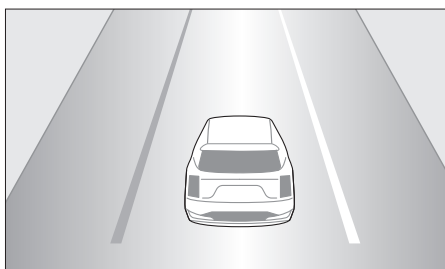

*When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)*

### QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method. You can also adjust the Haptic Warning, Lane Safety Audible Warning Off.

### REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

[\*Continued on next page\*](#)

*The images shown are for illustration purposes only. Not all available displays are shown. Screens may vary.*



# Lane Keeping Assist (LKA)<sup>†4</sup>

[Continued from previous page](#)

If LKA detects that you are moving outside of your lane, LKA may give an auditory warning and display Lane Departure Warning on the Instrument Cluster, or, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.




**Driver Assistance -  
Warning Methods &  
Warning Volume**

 
**Hands-off Warning** - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster.

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- The vehicle is between the lane markers

### LKA Settings:

- Press and hold the Lane Driving Assist button  **A** to turn LKA on or off, when it is first enabled in Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY and then LANE SAFETY

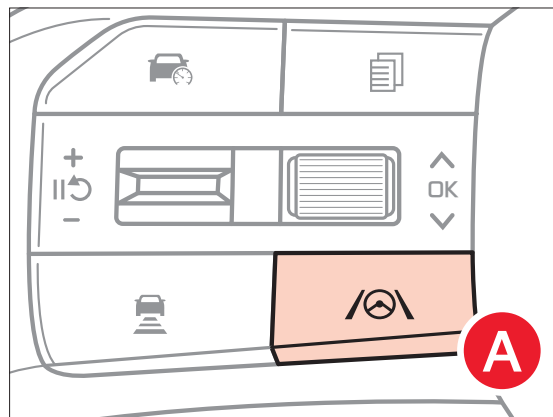

*Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.*

*Actual User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Intelligent Speed Limit Assist (ISLA)<sup>†4</sup>

Intelligent Speed Limit Assist is designed to alert the driver of the posted speed limit **A**; the navigation system will also inform the driver of the posted speed limit.

When ISLA is on and active, the system will display an alert on the Instrument Cluster LCD of the detected speed limit.

 
If the vehicle's current speed exceeds the detected speed limit, the speed limit information will illuminate red on the LCD.



Intelligent  
Speed Limit  
Assist (ISLA)



Driver Assistance -  
Intelligent Speed  
Limit Assist

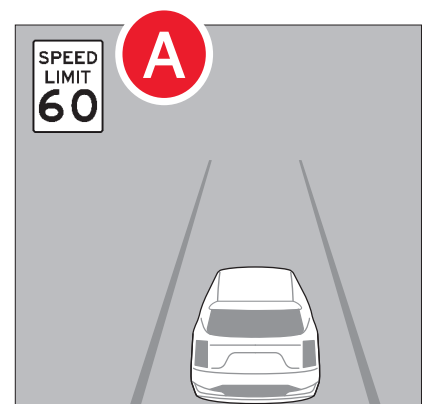

### LKA Settings:

To enable ISLA on, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, then SPEED LIMIT.

Select one of the three modes:

- **Speed Limit Assist:** Informs the driver of the detected speed limit, display a message change the set speed of the MSLA or SCC to help the driver stay within the posted speed limit. In addition, ISLA will inform the driver to change set speed of Manual Speed Limit Assist or Smart Cruise Control to help the driver stay within the speed limit
- **Speed Limit Warning:** Informs the driver of the detected speed limit **A** when driving at a speed higher than the displayed speed limit. The red speed limit indicator will appear
- **Off:** ISLA is disabled

[Continued on next page](#)

*Refer to section 7 in the Owner's Manual for more information. The images shown are for illustration purposes only. Not all available displays are shown. Screens may vary.*



# Intelligent Speed Limit Assist (ISLA)<sup>†4</sup>

[Continued from previous page](#)

### QUICK TIP

You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the detected speed limit, when ISLA is on.


### REMINDERS:

- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected

*Refer to section 7 in the Owner's Manual for more information. The images shown are for illustration purposes only. Not all available displays are shown. Screens may vary.*



## Driver Attention Warning (DAW)\*†5

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving. A message, "Consider taking a break,"  appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low.

**REMINDER:** When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 4 minutes.



 
 
Driver Attention Warning (DAW)



Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert



Driver Assistance - Warning Methods & Warning Volume

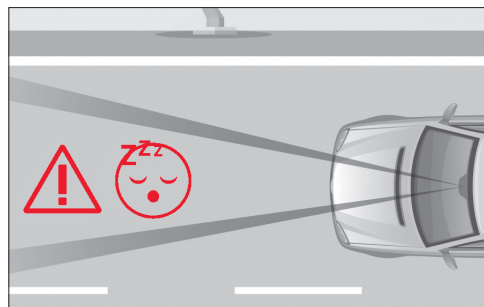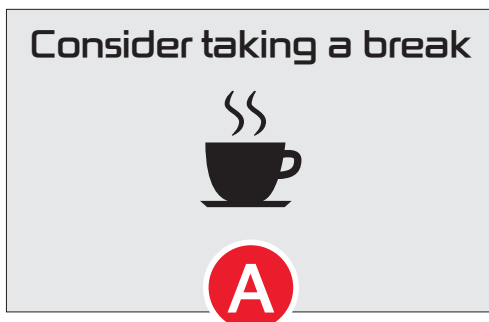

*The images shown are for illustration purposes only. Not all available displays are shown. Screens may vary.*

*Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*

*See section 7 in the Owner's Manual for more information.*



## Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>

Leading Vehicle Departure Alert is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped and detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.



Leading Vehicle Departure Alert (LVDA)



Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert



 
Driver Assistance - Warning Methods & Warning Volume

### LVDA Settings:

- To turn LVDA on, go to Vehicle Settings in the Infotainment System by pressing the **SETUP** button. Press **VEHICLE**, then DRIVER ASSISTANCE, DRIVER ATTENTION WARNING and select Leading Vehicle Departure Alert

### REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

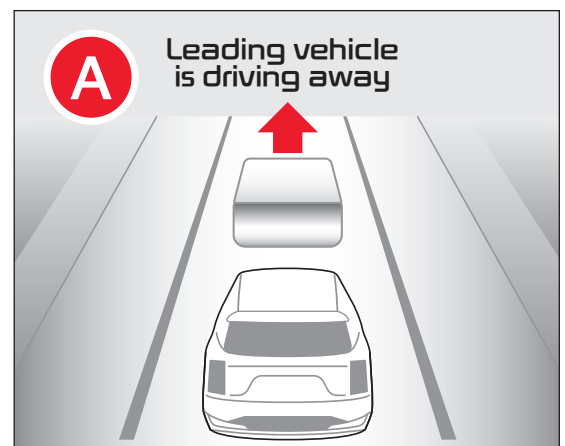

*The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 7 in the Owner's Manual for more information.*



## Safe Exit Assist (SEA)<sup>†4</sup>

Safe Exit Assist can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped. In addition, when the electronic child safety lock button is in the LOCK position and an approaching vehicle from the rear area is detected, the electronic child safety lock button will not unlock even if the driver presses the button to prevent the rear doors from opening.

To turn on SEA, go to the Vehicle Settings in the Infotainment System. Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY, followed by EXIT SAFETY.



 
Safe Exit Assist (SEA)



Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

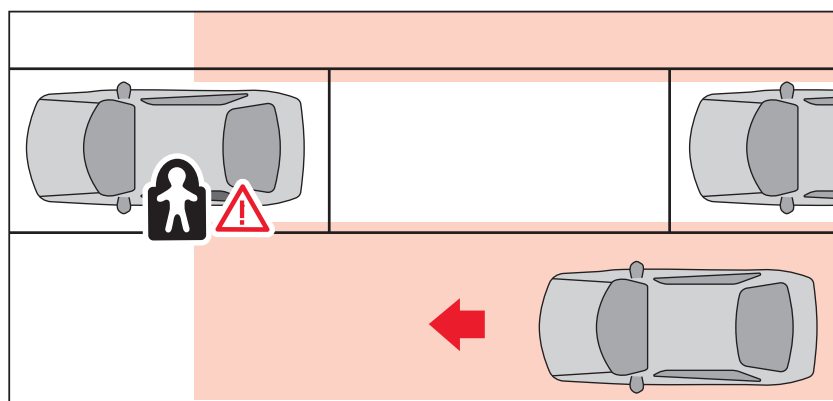

### QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method. You can also adjust the Haptic Warning.

**REMINDER:** SEA may not detect all objects and the occupants should always be mindful of their surroundings.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 7 in the Owner's Manual for more information.*



## Smart Cruise Control (SCC)<sup>†4</sup>

 
Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal. If SCC detects that the driver is attempting to overtake a vehicle in front, SCC may help by assisting acceleration.



**Smart Cruise Control (SCC)**



**Driver Convenience - Smart Cruise Control & Highway Driving Assist**

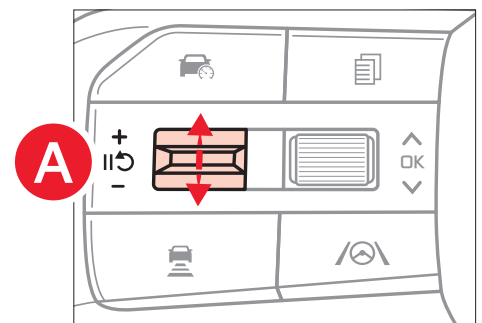

**SCC Operation:** When SCC is on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, SCC can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the **+||↻-** button **A** must be pressed to start moving the vehicle. SCC will accelerate the vehicle speed based on the Drive Mode selected on the Drive Mode Integrated Control System.

**SCC Settings:** SCC can be set by going to the Vehicle Settings in the Infotainment System. Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the on position.

**To access Vehicle Settings in the Infotainment System:** Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select Driver Assistance > Smart Cruise Control, and set the distance, acceleration and the reaction speed.

[\*Continued on next page\*](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




## Smart Cruise Control (SCC)<sup>†4</sup>

 [Continued from previous page](#)

### To turn on, set/adjust the SCC speed:

- Press the Driving Assist button **A** to turn the system ON & set to the current vehicle speed (One-Touch Set). The cruise indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front
- Increase speed:** Press the **+||↺-** switch **B** up to increase the set vehicle speed
- Decrease speed:** Press the **+||↺-** switch **B** down to decrease the set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Cluster screen **C**

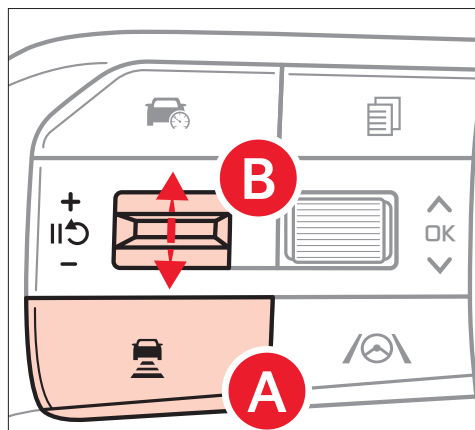


The distance settings are approximations and may vary depending on the vehicle speed at the time.

**To set the vehicle distance:** Press the Vehicle Distance button **A** on the steering wheel. The image on the Instrument Cluster LCD will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **D**.

**To pause or resume SCC operation:** Press the pause/resume **+||↺-** switch **B**. The SCC indicator on the Instrument Panel will turn OFF.

 **To turn SCC OFF:** Press the Driving Assist button **A**. The SCC indicator on the Instrument Panel will turn GRAY.

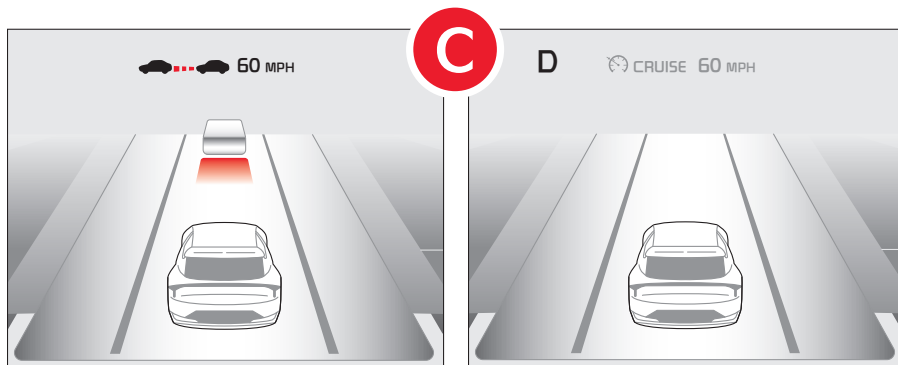

(Set speed and selected distance level are displayed on the LCD)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



# Smart Cruise Control (SCC)<sup>†4</sup>

[Continued from previous page](#)

**To adjust the sensitivity of the SCC system:** Go to Vehicle Settings in the Infotainment System by pressing the **SETUP** button. Go to DRIVING CONVENIENCE, SMART CRUISE CONTROL and select either BASED ON DRIVING STYLE or BASED ON DRIVING MODE.

### QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the +/- switch up/down to start the vehicle
- SCC will not activate until the brake pedal has been depressed at least once after ignition is ON or the ENGINE START/STOP button is pressed
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system

### REMINDERS:

- Smart Cruise Control indicator must be ON in order to operate SCC
- The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), Electronic Parking Brake (EPB) is activated and various other conditions. See owner's manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of

*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*


*When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

*See section 7 in the Owner's Manual for more information.*

## Navigation-based Smart Cruise Control (NSCC)\*†4,9

Navigation-based Smart Cruise Control is designed to use navigation system data to help maintain a safe speed based on road conditions when driving on highways, while Smart Cruise Control is active.

### Highway Curve Zone Auto Slowdown:

NSCC can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system. When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, during speed control, the NAV indicator  will blink. When the vehicle passes the curved road, the vehicle may return to its previously set speed.

### NSCC Settings:

- NSCC can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park (P) and the ignition is on or the ENGINE START/STOP button is in the on position

**To access Vehicle Settings in the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press VEHICLE to enter Vehicle Settings. Select Driver Assistance, then Driving Convenience, and select Highway Auto Speed Change.

**REMINDER:** NSCC is only available on certain controlled access roads and highways.


*Images are for illustrative purposes only and may not reflect actual feature or operation.*



Navigation-based Smart Cruise Control (NSCC)



 Driver Convenience - Smart Cruise Control & Highway Driving Assist

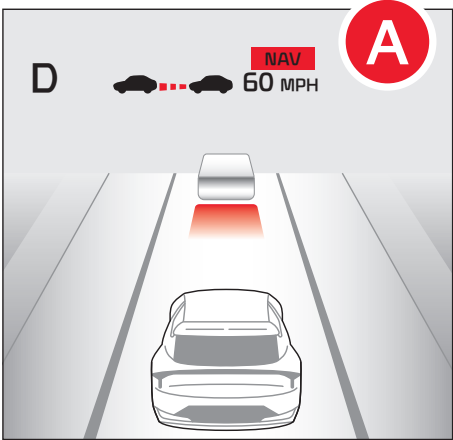

(Display on LCD screen)



## Lane Following Assist (LFA)<sup>† 4</sup>

Lane Following Assist (LFA) is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The Instrument Cluster indicator will initially illuminate white or green **B** when turned ON. It will remain white when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon will illuminate green **B**.

**Hands-off Warning** - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. If hands on the Steering Wheel are not detected continually, LFA will be turned off with additional emergency warning.

### LFA Settings:

Press the Lane Driving Assist button **C** to turn LFA on or off. LFA will operate only when these conditions are met:

 
 
- LFA detects both side lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph



**Lane Following Assist (LFA)**



**Driver Safety - Forward/Lane/ Blind-spot Safety & Safe Exit**

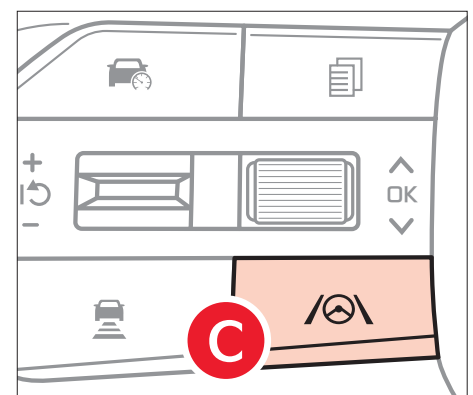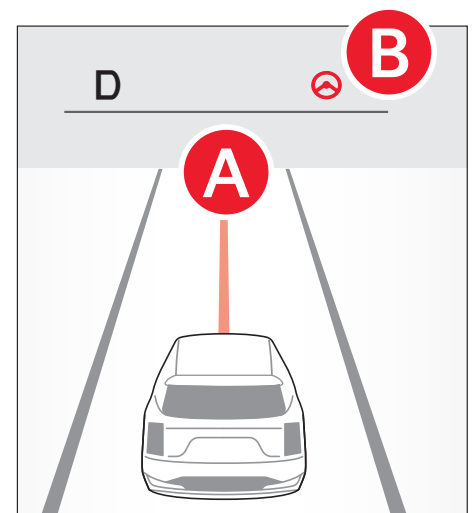

(Buttons located on steering wheel)

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Actual User Settings steps may vary by model. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



# Lane Following Assist (LFA)<sup>† 4</sup>

[Continued from previous page](#)

### QUICK TIPS

- The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems



**Driver Assistance -  
Warning Methods &  
Warning Volume**

### REMINDERS:

- LFA is not a substitute for safe and proper driving. Always drive safely and use caution
- If LFA is activated in the Vehicle Settings menu and when combined with SCC and the ignition is cycled, LFA returns to its previous state, on or off. If using the Steering Wheel LKA button, then LKA defaults to off
- The images and colors in the Instrument Cluster may differ depending on the cluster type or theme selected from the settings menu

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



*LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.*


*Actual User Settings steps may vary by model. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



## Highway Driving Assist 2 (HDA2)\*† 4

Highway Driving Assist 2 (HDA2) is designed to help detect vehicles and lanes ahead, and can, in certain situations, help maintain distance from the vehicle detected ahead, maintain the set speed, and keep the vehicle between lanes while driving on the highway (or motorway).

When HDA2 is activated and the conditions are met, the Instrument Cluster indicator  will illuminate green. If the conditions are not met, HDA2 will be in standby mode and the indicator light  will illuminate gray.

When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green .

 
**Hands-off Warning** - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands on the Steering Wheel is not detected, HDA2 will cancel.



Highway Driving Assist 2 (HDA2)



Driver Convenience - Smart Cruise Control & Highway Driving Assist

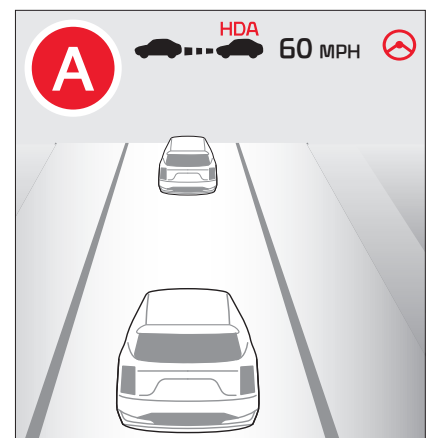

### HDA2 Settings:

- HDA2 can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*When engaged, Highway Driving Assist 2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



# Highway Driving Assist 2 (HDA2)<sup>\*†4</sup>

[Continued from previous page](#)

To access Vehicle Settings in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVING CONVENIENCE, and select HIGHWAY DRIVING ASSIST.



Driver Assistance -  
Warning Methods &  
Warning Volume

### REMINDERS:

- Current highway speeds and controlled or limited access roads information may vary
- When the ignition is cycled, HDA2 returns to its previous state, on or off

*When engaged, Highway Driving Assist 2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 7 in the Owner's Manual for more detailed information, limitations and conditions.*

## Rear View Monitor (RVM)<sup>†4</sup>

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the Infotainment System screen while the vehicle is in Reverse.

### RVM activates when the:

 
- Ignition or the ENGINE START/STOP button (Green) is in the ON position
- Rotary Dial Shifter is in the **R** (Reverse) position



**Driver Assistance -  
Parking Safety**



**Driver Assistance -  
Warning Methods &  
Warning Volume**

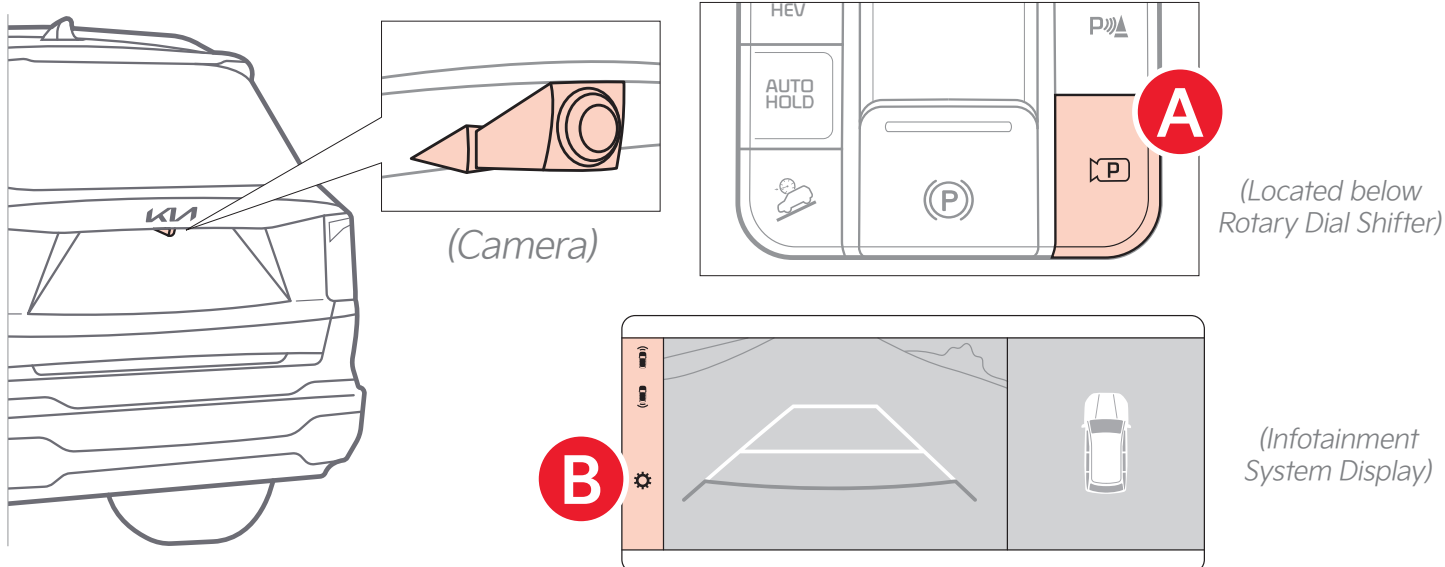

### RVM Settings:

- **To access Rear View Monitor settings** - Press the Parking/View button **A** to activate the Rear View Monitor. Then, select the Settings icon **B**, and choose Camera Settings to adjust the available options
- **To adjust the Warnings Methods** - The Warning Methods for the Rear View Monitor can be adjusted in the Infotainment System. Select the Setup, then select Vehicle, followed by Driver Assistance, and then choose Warning Methods

**REMINDER:** Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up. See section 7 in the Owner's Manual for more information.*



## Blind-spot View Monitor (BVM)\*†4

Blind-spot View Monitor displays the rear blind spot area of the vehicle in the cluster when the turn signal is turned on to help safely change lanes.



**Blind-spot View Monitor (BVM)**

### BVM Settings:

 
- Enable BVM in the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position
- **To access Vehicle Settings in the Infotainment System -**  
Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, BLIND-SPOT SAFETY and then BLIND-SPOT VIEW



**Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit**

BVM will operate when the ENGINE START/STOP button is ON and the turn signal is activated.

BVM will not operate when the ENGINE START/STOP button is OFF, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

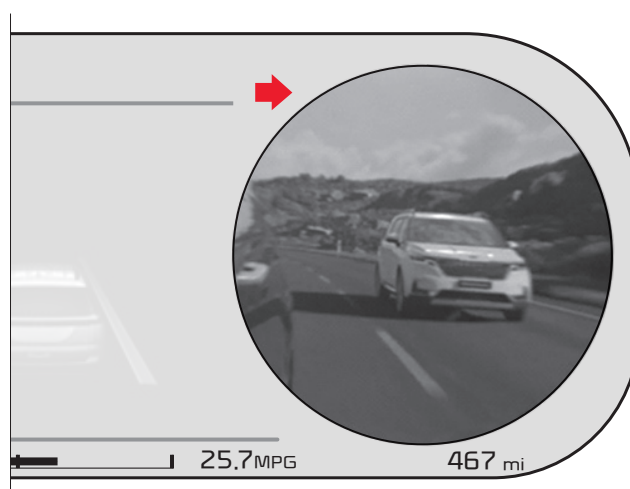

(Display showing left side of vehicle)

See section 7 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



## Surround View Monitor (SVM)\*†4

Surround View Monitor is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four wide-view cameras displayed onto the Infotainment System screen. Press **A** to turn SVM ON/OFF.

### SVM will operate when:

- The Parking/View button **A** is pressed with the gear in **D** (Drive) or **N** (Neutral) when vehicle speed is below 9 mph (15 km/h)
- Parking/View button **A** is pressed with the gear in **P** (Park)
- The gear shift is in **R** (Reverse). When the gear is in **R** (Reverse), Surround View Monitor will turn ON regardless of vehicle speed or button status
- The gear shift is changed from **R** (Reverse) to **N** (Neutral) or **D** (Drive) when vehicle speed is below 9 mph (15 km/h)

### Off Conditions:

 
- Parking/View button **A** is depressed
- When vehicle speed is above 9 mph (15 km/h), SVM will turn OFF and the screen will change back to the previous Infotainment System screen
- One of the Infotainment System buttons is pressed without the gear in **R** (Reverse). The screen will change back to the previous Infotainment System screen



**Surround View Monitor (SVM)**



**Driver Assistance - Parking Safety**

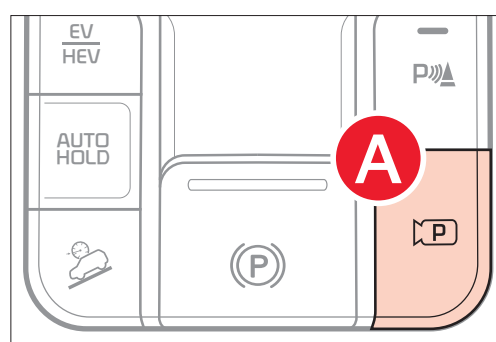

*(Located below Rotary Dial Shifter)*

### QUICK TIP

The Front View camera will turn off when the gear shift is moved into Park or Reverse or the Parking View button is pressed.



[\*Continued on next page\*](#)

 
*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# Surround View Monitor (SVM)\*†4

[Continued from previous page](#)

To change the SVM settings, press the onscreen settings icon  , while SVM is operating.

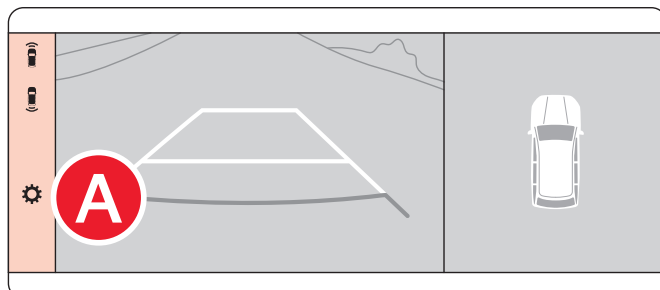

### REMINDERS:

- The wide-view camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. The Surround View Monitor system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear
- While the SVM is active the volume will be lowered on all audio modes if you select Driver Assistance then Warning Method and Parking Safety Priority in the Vehicle Settings in the Infotainment System
- Through normal use and after washing or inclement weather, the rear camera may need cleaning. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens

*The Surround View Monitoring (SVM) is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 7 in the Owner's Manual for more information.*



## Rear Cross-traffic Collision - Avoidance Assist (RCCA)<sup>†4</sup>

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver, under certain conditions, and may temporarily apply braking if it detects cross traffic approaching the vehicle, when vehicle is in reverse **A**.

 
 


Rear Cross-traffic Collision - Avoidance Assist (RCCA)

RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate, the steering wheel will vibrate and a message will appear on the Instrument Cluster LCD **B**. The warning will also appear on the Infotainment System screen. If RCCA detects that the collision risk has increased, the system automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

**RCCA is designed to operate under the following conditions:**

- When the gear shift is in Reverse
- When the vehicle is moving slower than 7.5 mph

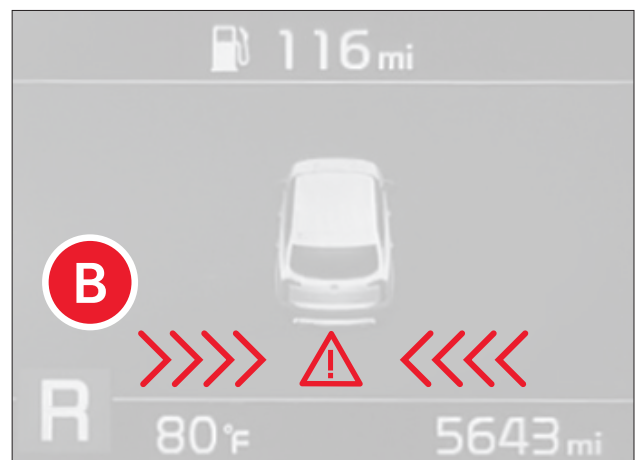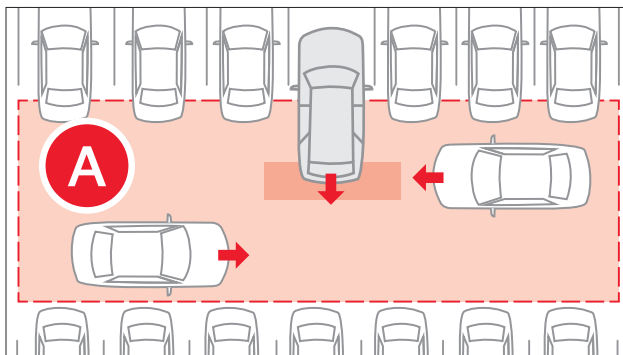

### REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

[Continued on next page](#)

*RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# Rear Cross-traffic Collision - Avoidance Assist (RCCA)<sup>†4</sup>

[Continued from previous page](#)

### RCCA Settings:



Driver Assistance -  
Warning Methods &  
Warning Volume

- RCCA can be turned ON/OFF by going to Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select REAR CROSS-TRAFFIC SAFETY

### QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method.

Refer to section 7 in the Owner's Manual for more information.



## Reverse Parking Collision-Avoidance Assist (PCA)\*†4

Reverse Parking Collision-Avoidance Assist is a supplemental system that is designed to assist the driver when the vehicle is in reverse by sounding a warning and temporarily braking, if a pedestrian or any object is detected within the sensing area of the rear of the vehicle, or to help reduce the possibility of a collision.



**Reverse Parking Collision-Avoidance Assist (PCA)**



 
**Driver Assistance - Parking Safety**

### PCA Settings:

- PCA can be turned ON/OFF by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the ON position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY, and then BACKWARD SAFETY

### QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings by pressing Setup, Vehicle, Driver Assistance. Then press Warning Method.

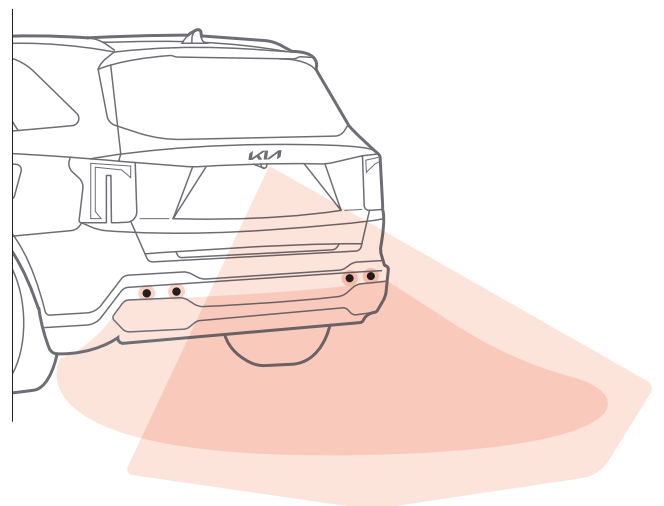

*Reverse Parking Collision-Avoidance Assist (PCA)\* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Reverse Parking Collision-Avoidance Assist (PCA) may not detect every object around the vehicle. See section 7 in the Owner's Manual for more information.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Forward/Reverse/Side Parking Distance Warning (PDW)\*†4

Forward/Reverse/Side Parking Distance Warning is a supplemental system that is designed to warn the driver by chiming if an object is detected within the sensing area to the front and rear of the vehicle when moving forward or backing up.

To turn PDW on, press the Parking Safety button **A** (LED illuminated). To turn PDW off, press again **A** (LED not illuminated). PDW will activate when the ignition is ON/READY and the vehicle is in **D** (Drive) or **R** (Reverse).

**Parking Distance Warning Auto On:** To set the parking distance warning to be on at low speeds, enable it in the Vehicle Settings in the Infotainment System.

**To enable in Vehicle Settings in the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select PARKING DISTANCE WARNING AUTO ON.



 
Forward/Reverse/  
Side Parking Distance  
Warning (PDW)



Driver Assistance -  
Parking Safety



Driver Assistance -  
Warning Methods &  
Warning Volume

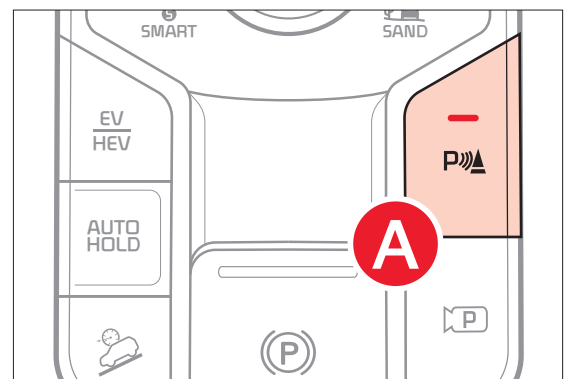

(Located below Rotary Dial Shifter)

[Continued on next page](#)

*Forward/Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward/Reverse Parking Distance Warning (PDW) may not detect every object around the vehicle.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.*



# Forward/Reverse/Side Parking Distance Warning (PDW)<sup>\*†4</sup>

[Continued from previous page](#)

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Timing and Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

 
 
*Forward/Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward/Reverse Parking Distance Warning (PDW) may not detect every object around the vehicle.*

*See section 7 in the Owner's Manual for more information.*



# Instrument Cluster Illumination Control

With the parking lights/headlights ON, press the button **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

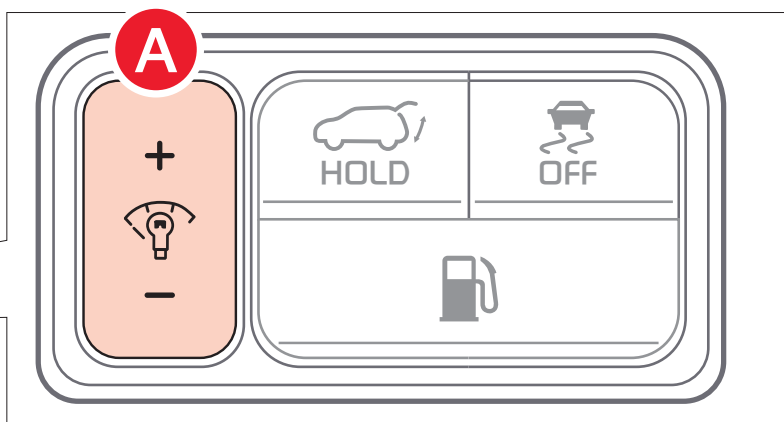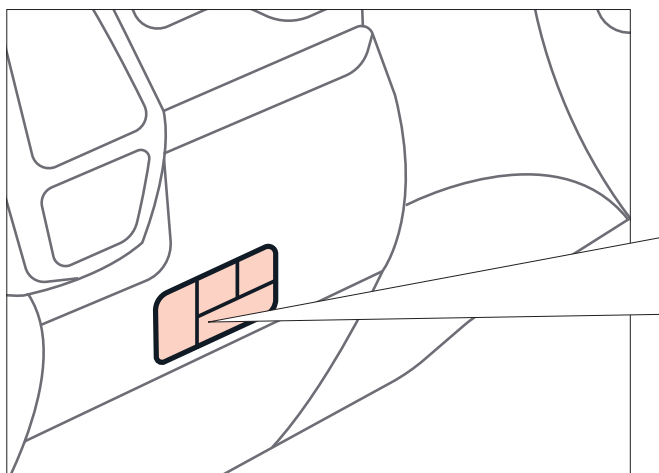

(Button panel located left of Steering Wheel)

**REMINDER:** The Instrument Cluster illumination Control does not adjust brightness on the Infotainment System screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 5 in the Owner's Manual for more information.*



# Electronic Stability Control (ESC)<sup>†6</sup>

 
 
The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.



Electronic Stability Control (ESC)


Press the ESC OFF button **A** to turn Traction Control OFF/ON.

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds. Press it again to turn ON.

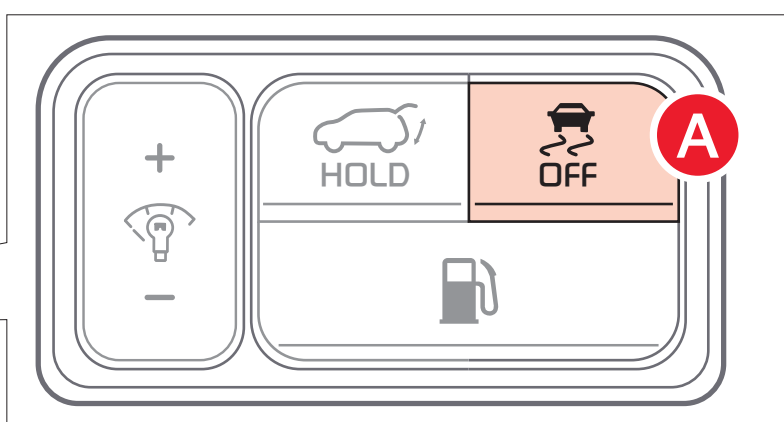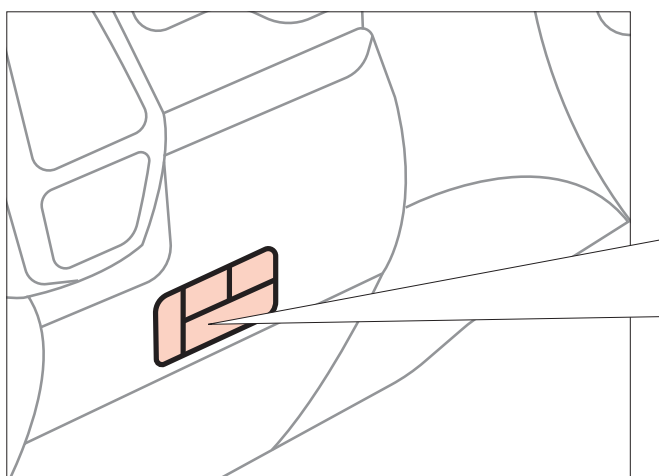

(Button panel located left of Steering Wheel)

### REMINDERS:

- ESC is active by default at vehicle startup. When the ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 6 in the Owner's Manual for more information.*



# Hill-start Assist Control (HAC)<sup>†6</sup>

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backward

### REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

*See section 5 in the Owner's Manual for more information.*



# Reverse Parking Aid Function\*

 
 
When the Rotary Dial Shifter is moved into R (Reverse) and while the vehicle is moving backward, the outside rearview mirrors **A** will rotate downward to aid in reverse parking.

When the left or right mirror buttons **B** are depressed, the Reverse Parking Aid Function will operate (LED lit).

**To turn OFF the function, press the buttons to the center position.**

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The Rotary Dial Shifter is moved to any position except R (Reverse)
- Outside rearview mirror buttons are not depressed

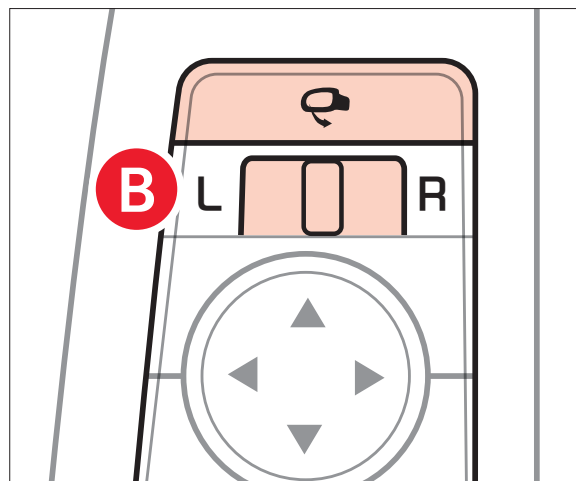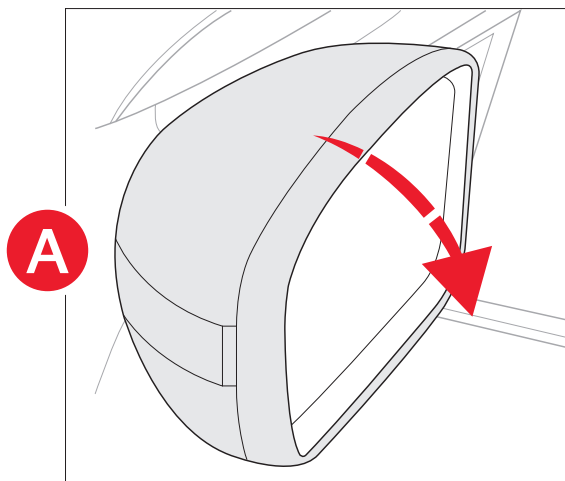

(Button/switch panel located on Driver's Door)

**REMINDER:** When one of the outside rearview mirror switches are not depressed (LED lit), the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 5 in the Owner's Manual for more information.*



# ENGINE START/STOP Button<sup>†7</sup>

### To start the engine:

 
1. Depress the brake pedal
2. Press the ENGINE START/STOP button while gear shift is in P (Park) or N (Neutral)



**ENGINE START/STOP Button**

**To turn the engine OFF:** Press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob inside the vehicle.

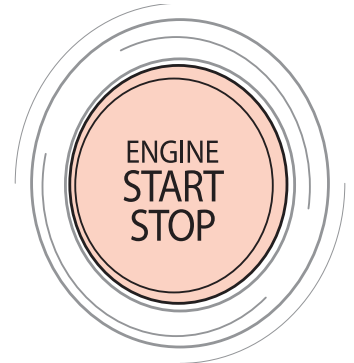

### QUICK TIPS

To use electrical accessories:

#### ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (amber light)

#### ON position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the ENGINE START/STOP button (red light)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (red light)

Keeping the vehicle in the ACC or ON position for extended periods of time without turning the engine on may discharge the vehicle's battery.

### REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine OFF and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start engine

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control. See section 6 in the Owner's Manual for more information.*



# Power Windows, Window Lock & Central Door Lock

**A** Pull/Press to operate Front Windows Auto Up/Down\*

### QUICK TIP

Press button again to stop Auto Up/Down function.

**B** Press to Unlock/Lock All Doors

**C** Press to disable Rear Passenger Windows

 
### REMINDERS:

- When pressed **C**, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

### QUICK TIPS

While driving with the rear windows down or with the sunroof\* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

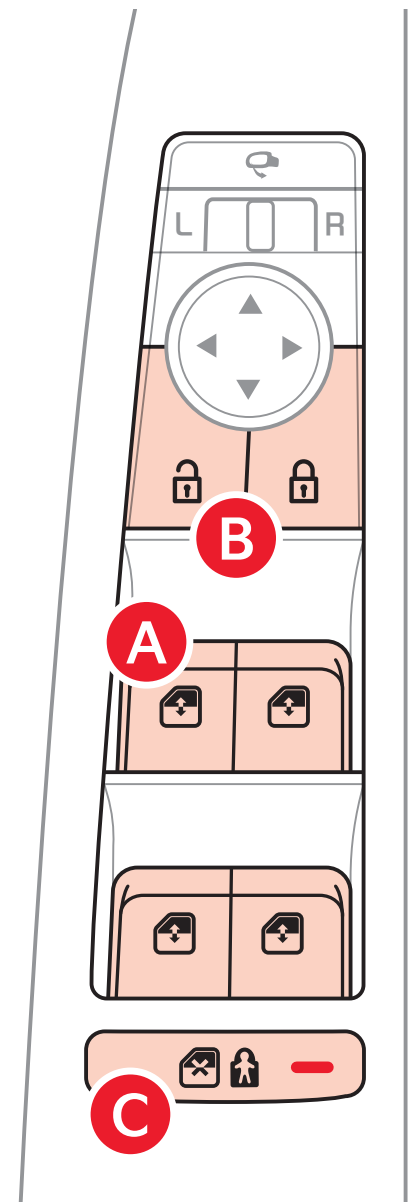

(Button/switch panel located on Driver's Door)

## Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the Vehicle Settings in the Infotainment System on how to turn Auto Door Lock/Unlock ON/OFF.

 
*Button configuration may vary depending on vehicle model. Refer to section 5 in the Owner's Manual for more information.*



# Electronic Child Safety Lock System

Press button **A** to lock the rear passenger doors. An indicator will illuminate showing the system is active.

This system is on by default, and then activated once the button **A** is pressed. To deactivate, press the button again.

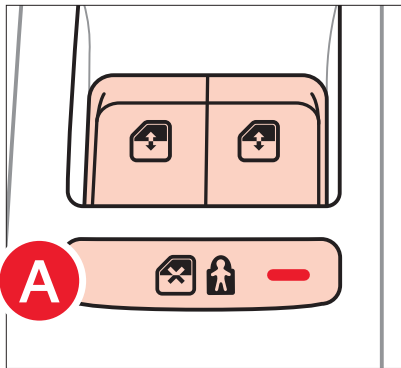

(Button/switch panel located on Driver's Door)



**Electronic Child Safety Lock System**



**Rear Door Locks - Double Pull to Open**

*See section 5 in the Owner's Manual for more information.*

## Rear Door Locks - Double Pull to Open

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.

### QUICK TIP

To open the Rear Doors, pull the inner door handles two times.

*See section 5 in the Owner's Manual for more information.*

 
*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Power/Heated Outside Mirrors\*

Mirror heaters are activated when the Rear Defroster is turned on **A**.

Refer to section 5 in the Owner's Manual for more information.

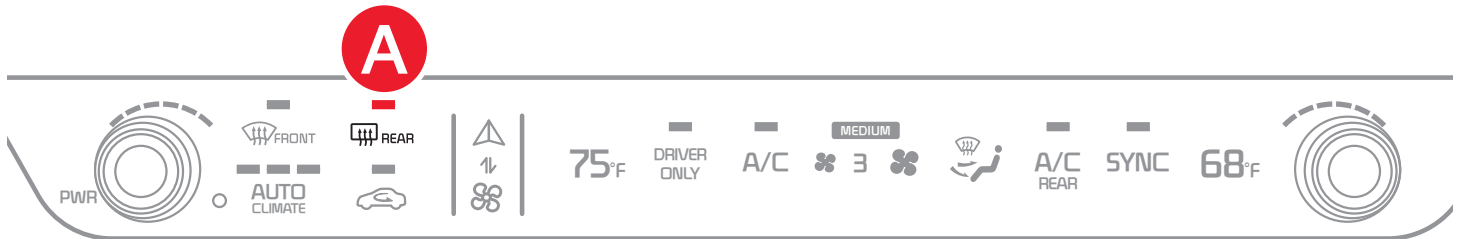


(Button located on Climate Control panel)

## Manual Folding Mirrors\*

 To fold the mirrors in manually, pull the mirror towards the window.

### QUICK TIP

If needed, pull the mirror firmly until it folds.

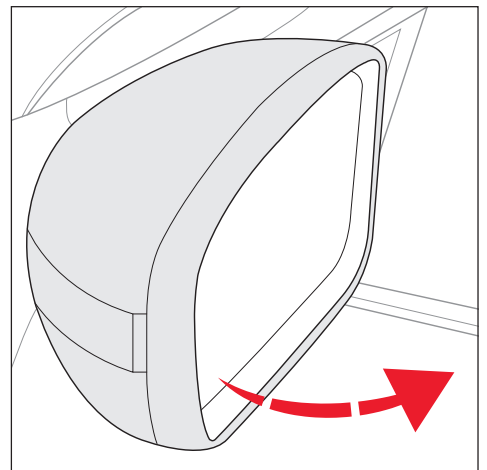

Refer to section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



# Power Folding Outside Mirrors\*

 
- A** Press the L or R buttons to select the mirror to adjust
- B** Press button arrows left/right or up/down to adjust mirror position
- C** Toggle button left/right to unfold/fold the outside rearview mirrors
- C** Toggle button to center to automatically fold/unfold mirrors when:
  - The Smart Key\* Lock/Unlock buttons are pressed
  - The door outside handle button\* is pressed

### REMINDERS:

- When the mirror button **A** is in the center, press the Lock button on the Smart Key to automatically fold the mirrors
- To lock the position of mirrors, toggle switch to the neutral (center) position

### QUICK TIP

The mirrors will automatically unfold when the Smart Key\* is within close proximity to the vehicle.

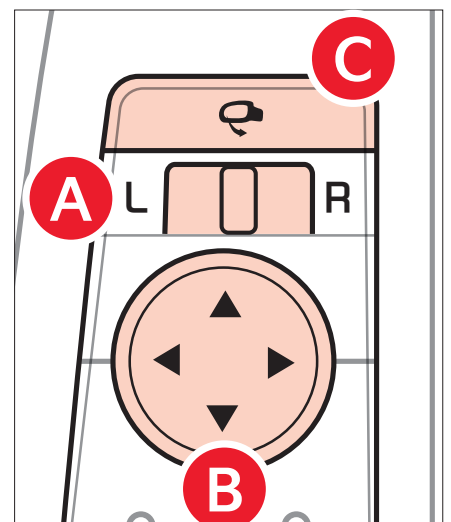

(Button/switch panel located on Driver's Door)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



### Tilt/Telescoping Steering Wheel<sup>†19</sup>

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and distance **C**.

 
When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.



**Tilt/Telescoping/  
Heated Steering  
Wheel**

#### QUICK TIP

To adjust the steering wheel angle, it may be helpful to first adjust the steering wheel's distance from the driver.

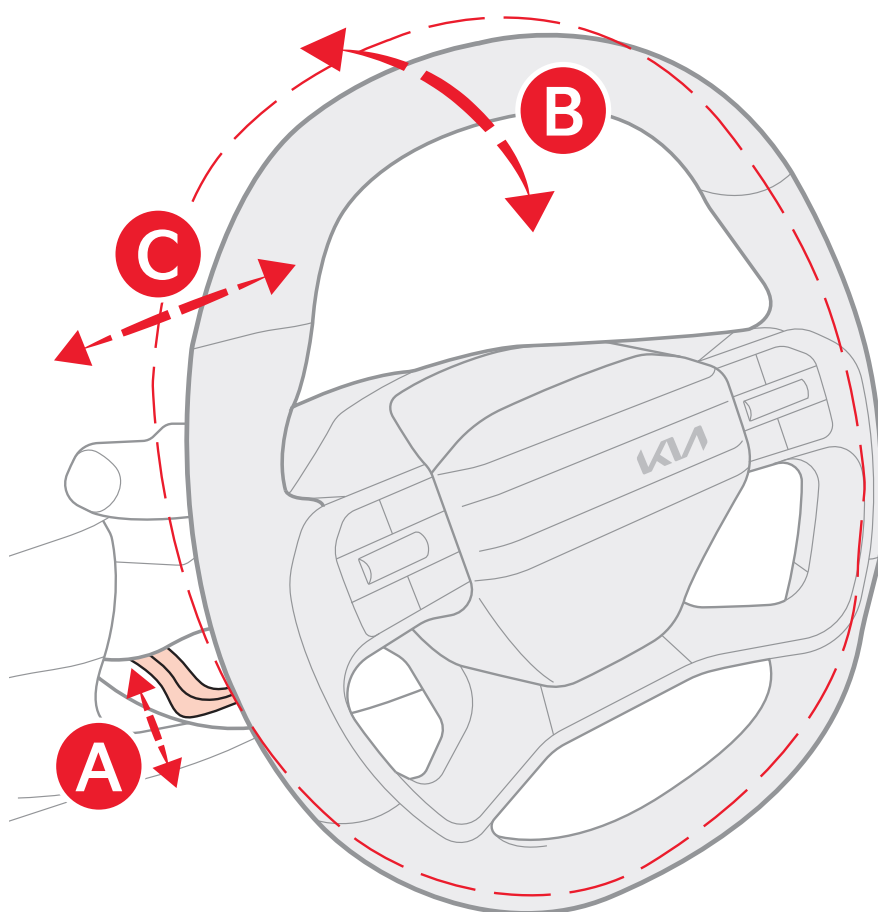

*Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.*

*For illustrative purposes only. Your steering wheel may vary. See section 5 in the Owner's Manual for more information.*




# Turn Signals & Fog Lights\*
 
### To operate:

- Slightly move lever up/down to activate One-Touch Lane Change Signal **A**
- Turn Signals - Move lever Up/Down for Right/Left Turn Signal **B**
- Fog Lights - Press toggle switch **C** to turn Fog Lights ON/OFF

**REMINDER:** Headlights must be ON for Fog Light operation.

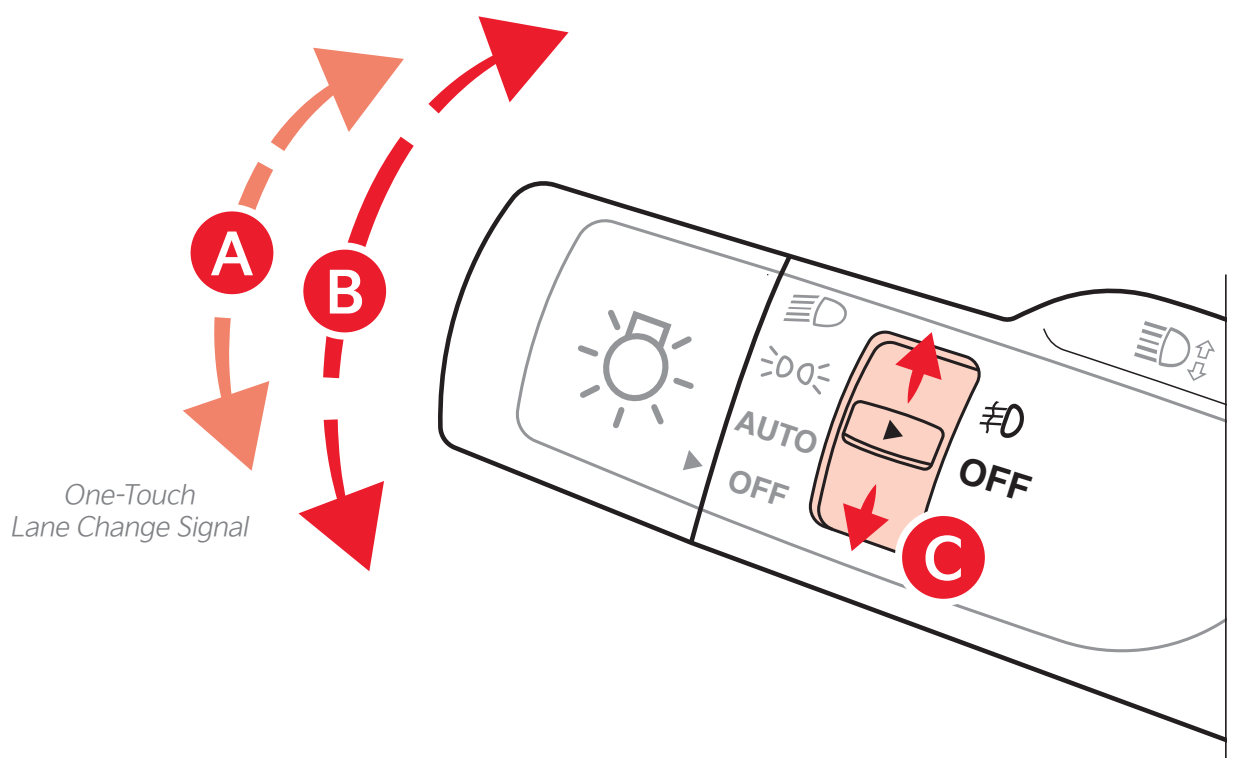

**One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing **B**. The lane change signal will blink 3 times.

To turn the One-Touch Lane Change Signal off/on, go to Vehicle Settings in the Infotainment System.

*Refer to section 5 in the Owner's Manual for more information.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*




# Headlights & High Beams
 
### To operate:

- Rotate the switch to change the Headlight function **A**
- Push the lever to turn the High Beams ON **B**
- Pull the lever to flash the Headlights/High Beams **C**

**AUTO Light position\*** - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

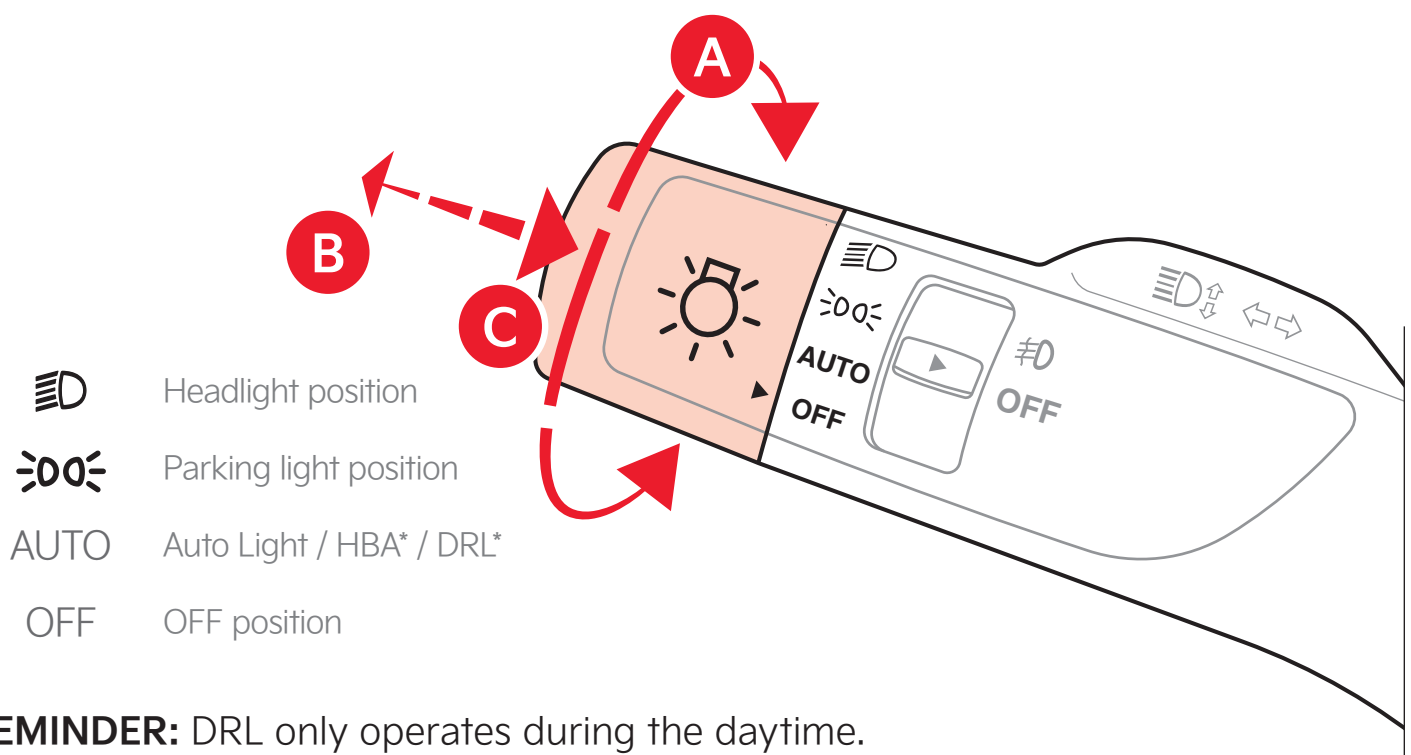

**REMINDER:** DRL only operates during the daytime.

**Daytime Running Lights (DRL)\*** - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or ENGINE START/STOP button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Headlight switch is in the OFF position

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.



**High Beam Assist  
(HBA)**

To enable HBA, toggle the light switch to the AUTO Light position and push the lever away from you. The High Beam Assist indicator will illuminate.

### REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you when the high beam is off, the high beam will turn on without High Beam Assist canceled. If the lever is pulled towards you when the high beam is on by High Beam Assist, low beam will be on and the High Beam Assist will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When HBA is not working properly, the "Check High Beam Assist system" warning message will appear and warning light will appear on the cluster. See an authorized Kia dealer for service

*See section 5 in the Owner's Manual for more information.*



# Windshield Wipers & Washers

### To operate:

- Move lever Up/Down **A** to change Wiper modes
- Push switch **B** to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe **C**



 
**Wipers and Wiper Stalk**

### Rain Sensing\* (Auto Control Wipe):

The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To vary the speed setting, press the Wiper Switch **B** up/down.

If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system.

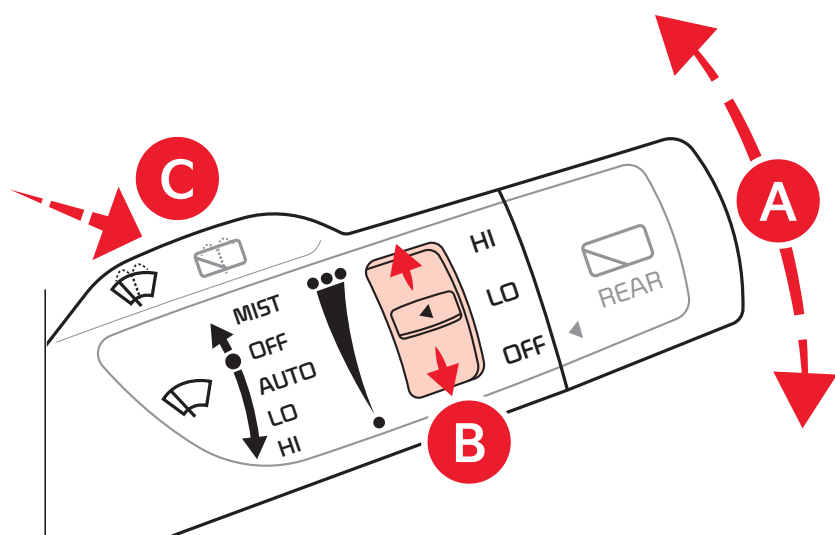

MIST: Single wipe  
OFF: Wiper off  
INT/AUTO\*: Intermittent Wipe/  
Rain Sensing\*  
LO: Slow wipe  
HI: Fast wipe

### QUICK TIPS

- Moving switch **B** up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



### Rear Wiper & Washer\*

#### To operate:

 
- Rotate Rear Wiper switch to change Wiper modes **A**
- Push to spray and wipe **B**



Lifting Wipers  
(Wiper Service  
Mode)


#### QUICK TIP

On Rear Wipers, the intermittent wipe function is not adjustable. LO and HI sets wiper speed.

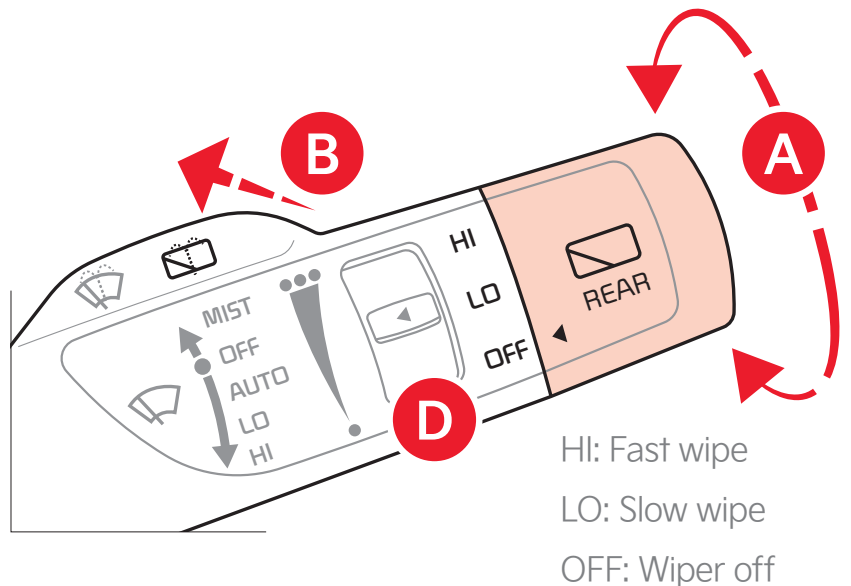

### Lifting Wipers (Wiper Service Mode)

 To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **C** to prevent damaging the hood.

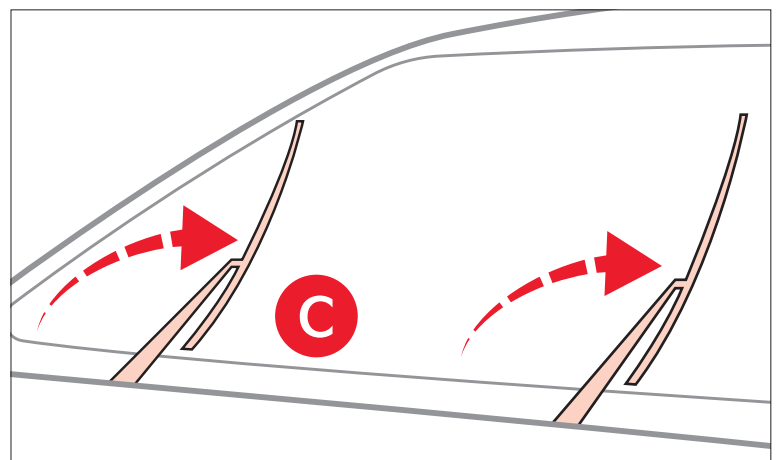

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch **D** to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

Refer to section 9 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.



# Bluetooth® Wireless Technology<sup>†3,17</sup>

**A Voice Recognition button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition

 
 
**Kia Connect<sup>†1</sup> with Navigation\*** - When enrolled with a Kia Connect<sup>†1</sup> subscription, press this button to activate the Kia Connect<sup>†1</sup> Voice Assist to use navigation guidance and search destinations

**B Volume button:** Press up/down to raise/lower speaker volume

**Mute button:** Press to mute the microphone and audio system speakers during a call, or to pause *Bluetooth®* streaming media

**C Call/End Call button:** Press to place/answer calls. If no phone is paired, press the button to pair a phone

**D Custom button ★:** Press to program the Custom Button, then select an available feature you would like the Custom Button to open

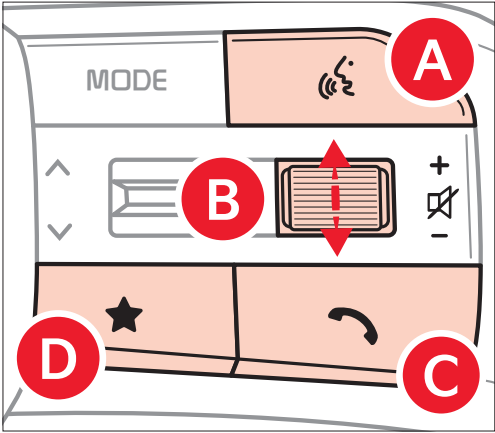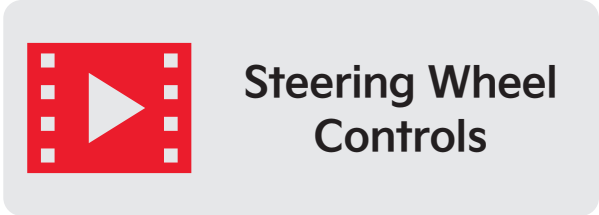

(Controls on right side of Steering Wheel)

## QUICK TIPS

- *Bluetooth®* Music Streaming: If the *Bluetooth®* music is inaudible or too low, you may need to turn up the volume on the connected phone
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and *Bluetooth®* Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple *Bluetooth®* devices

[Continued on next page](#)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 135](#) | \*IF EQUIPPED



# Bluetooth® Wireless Technology<sup>†3,17</sup>

[Continued from previous page](#)

## Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle's Quick Start Guide.



Automatically  
Activated  
Bluetooth

 
### QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future *Bluetooth®* connection requests.

## How to Place a Call Using Steering Wheel Controls:

When using the voice command feature, wait for the system to beep before speaking the command:

- **Option 1:** Press the Call/End Call button **A** (displays the phone screen with call history)
- **Option 2:** Press the Voice Recognition button **B**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

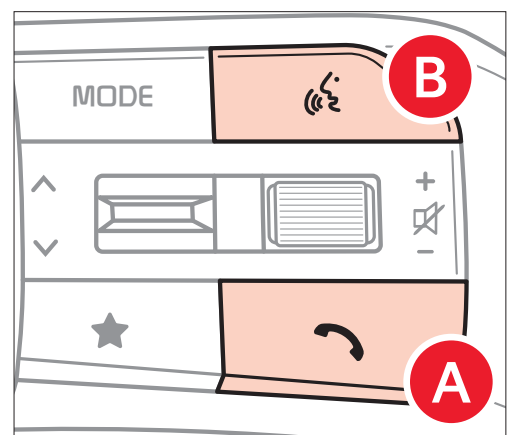

(Controls on right side of Steering Wheel)

**REMINDER:** *Bluetooth®* Wireless Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device.

[Continued on next page](#)

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual. For *Bluetooth®* Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), or call Consumer Information for *Bluetooth®* Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific *Bluetooth®* Wireless Technology phone pairing and operation instructions.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

# Bluetooth® Wireless Technology<sup>†3,17</sup>

[Continued from previous page](#)

## Voice Recognition and Phone

**Contact Tips:** The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the *Bluetooth®* Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.



**Voice Recognition  
Tips**



**Voice  
Recognition -  
Wake Up Word**

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)

### QUICK TIPS


- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the system to beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say “Help” to get a list of available commands

For more information, refer to the Owner’s Manual or the Car Infotainment System Quick Reference Guide.




# Steering Wheel Audio Controls<sup>†3,16,17</sup>

- A Audio MODE button:** Press to cycle through FM/AM/SiriusXM<sup>®\*</sup>/Media modes
- B Seek/Preset buttons:** FM/AM/SiriusXM<sup>®\*</sup> Modes: Press to advance through Preset Stations. Press and hold to auto seek



 
Steering Wheel Controls



Custom Star Buttons & Radio Favorites

**Media Modes:** Press up/down to move track up/down. Press and hold to fast forward/rewind (except for *Bluetooth*<sup>®</sup> Audio)

- C Volume button:** Press up/down to raise/lower volume
- Mute button:** Press to mute all audio (Media pauses in some Media modes when pressed)

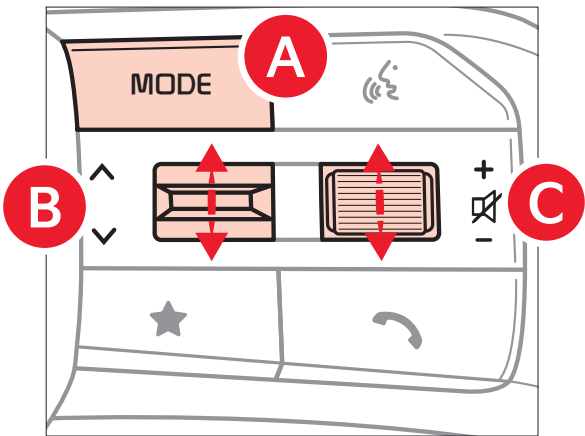

(Controls on right side of Steering Wheel)

For illustrative purposes only. Your actual display, buttons and/or features may vary.

For more information, refer to the Owner’s Manual or the Car Infotainment System Quick Reference Guide.

†LEGAL DISCLAIMERS ON [PAGE 135](#) | \*IF EQUIPPED



## Android Auto™†³ Setup

**Android Auto™ compatible smartphone setup** - Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.



**Wireless  
Android™ Auto**

### Wireless Connection setup for Android Auto™:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION, select ANDROID AUTO OPTIONS and then ENABLE ANDROID AUTO
3. Press PHONE PROJECTION, then ADD NEW
4. Press SETUP, select DEVICE CONNECTIONS, select DEVICE CONNECTIONS and select ADD NEW
5. Make sure Wi-Fi and *Bluetooth®* are activated on the smartphone and select the vehicle system from the list of searched *Bluetooth®* devices
6. Confirm that the verification codes on the smartphone and the infotainment screen match, and approve the connection from the smartphone
7. When connecting to Android Auto™ for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Android Auto from the smartphone
8. Press Android Auto™ from the home screen to see the available apps

[Continued on next page](#)

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.*



# Android Auto™†3 Setup

[Continued from previous page](#)

## Cable Connection setup for Android Auto™:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION, select ANDROID AUTO OPTIONS and then select ENABLE ANDROID AUTO
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps
5. Press the **SETUP** key on the Infotainment System
6. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
7. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
8. When connecting to Android Auto™ for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Android Auto™ from the smartphone
9. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

[Continued on next page](#)

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.*



# Android Auto™†3 Setup

[Continued from previous page](#)

### QUICK TIPS

- If Android Auto™ randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the Android Auto™ website for Android Auto™ app concerns

### REMINDERS:

- Android Auto™ compatibility requirements for connection:
  - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.*



# Apple CarPlay® Setup<sup>†3</sup>

## Wireless Connection setup for Apple CarPlay®:



Wireless  
Apple CarPlay®

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select DEVICE CONNECTIONS and select ADD NEW
3. Make sure Wi-Fi and *Bluetooth*® are activated on the smartphone and select the vehicle system from the list of searched *Bluetooth*® devices
4. Confirm that the verification codes on the iPhone® and the infotainment screen match, and approve the connection from the smartphone
5. When connecting to Apple CarPlay® for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Apple CarPlay® from the iPhone®
6. Press Apple CarPlay® from the home screen to see the available apps

## Cable Connection setup for Apple CarPlay®:

1. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
2. Press the **SETUP** button on the Infotainment System
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

[Continued on next page](#)

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.*



# Apple CarPlay® Setup<sup>†3</sup>

[Continued from previous page](#)

### QUICK TIPS

- If Apple CarPlay® randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the Apple CarPlay® website for Apple CarPlay® app concerns

### REMINDERS:

- Apple CarPlay® compatibility requirements for connection:
  - iOS® software 10.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
  - Always update your phone to the latest operating system release

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.*



# Kia Connect Activation<sup>†1</sup>

Follow these steps to activate your Kia Connect system:

1. To enter the activation screen on the Infotainment System:
  - a. From the home screen, press SETUP, then DATA/NETWORK key
  - b. Under KIA CONNECT, PRESS ACTIVATE SERVICES
  - c. Press ACTIVATE
2. Read and agree to Terms of Service and Privacy Policy and press AGREE
3. Enter phone number or email address to receive a verification code, then press OK and SUBMIT
4. Click on the link and a page will open requesting you to create an account; Provide the information needed and select SAVE to create the account
5. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
6. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy app, log in and enjoy



**Kia Connect  
Activation**



**Kia Connect &  
Kia Access App**

See Kia Connect Terms of Service at [owners.kia.com](https://owners.kia.com) for more information.



## Kia Connect Assistance<sup>†1</sup>

**Virtual Assistant** ⓘ **A** - Press to connect to a virtual assistant to hear information about the Kia Connect features

 


**Kia Connect Assistance**

**Kia Connect Voice Local Search** **B** (systems with navigation) - Press to connect to the search function to find points of interest or other locations, like “cafe”

**Kia Connect Voice Local Search** **B** (non-navigation systems) - Press to activate phone projection with Android Auto™ or Apple CarPlay® (smartphone must be connected via wireless or USB cable — see previous page for availability and setup)

**Roadside Assist** ⚠ **C** - Press to connect to a Roadside Assistant where you can request vehicle towing services

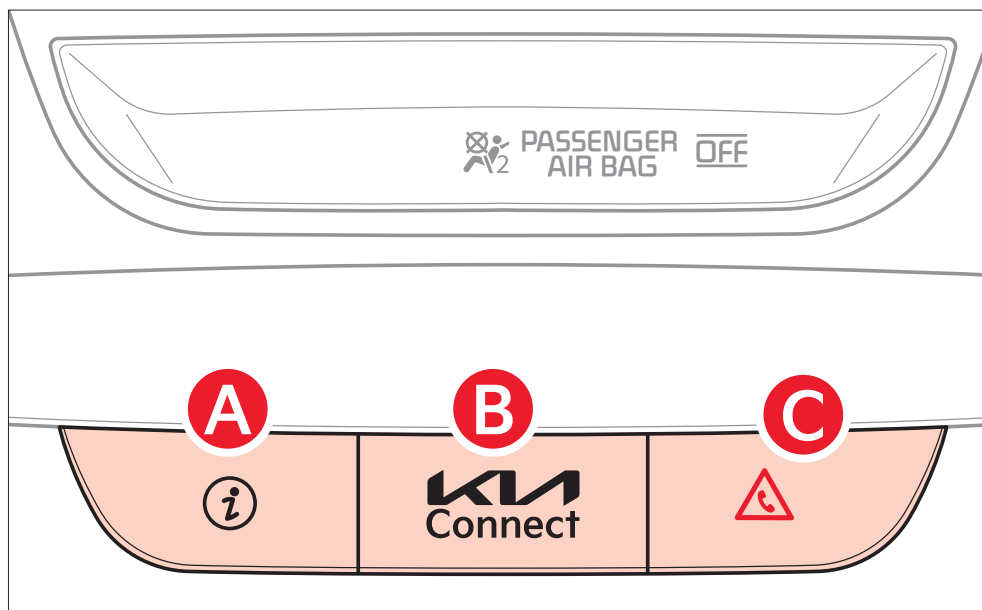

(Buttons on overhead console\*)

**REMINDER:** These buttons may be located in the rearview mirror or the overhead console.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, UVO Assistance buttons are located on the Rearview Mirror.*



# Kia Access App<sup>†2</sup> Download

Go to an app marketplace to download the Kia Access App. Once you download the app, make sure you register your vehicle and start an account (refer to Kia Connect<sup>†1</sup> Activation page). Get to know your new Kia and the available convenient features on the app.



### QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength to use Kia Connect<sup>†1</sup>. If these conditions are not met, remote command may not execute or may take longer to execute. It will also effect voice commands such as navigation POI or address search
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect<sup>†1</sup> app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect<sup>†1</sup> app, restart the vehicle

**Download the Kia Access App** by clicking this link. Some smartphone's operating systems may need to be updated to access link and download app.



**Download the  
Kia Access App**

*For further Kia Connect link operations, refer to the Car Infotainment System Quick Reference Guide.*



# Kia Access App<sup>†2</sup> Features Guide

The Kia Access App Features Guide is a step-by-step guide that helps you utilize the app to its full potential by detailing how to use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles



 
**Kia Access App  
Features Guide**

*For further Kia Connect<sup>†1</sup> operations, refer to the Car Infotainment System Quick Reference Guide.*

*Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.*



# Kia Connect Infotainment System - (Non-Navigation & Navigation<sup>+9</sup>)\*

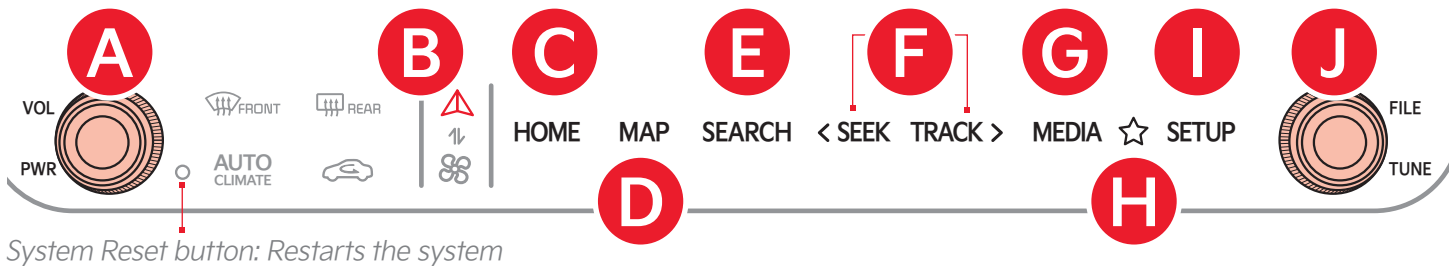

**A POWER button/VOLUME knob:**  
Press to turn the Media ON/OFF. Press and hold to turn off the screen and sound. Rotate to adjust the system volume (except for navigation sound)

**B Infotainment/Climate switch button:** Switch between control panel functions. Press/hold to access the control panel default settings screen

**C HOME:** Press to go to the Home screen. Press and hold to turn the Quick Control function ON/OFF

**D MAP button** (Systems with navigation): Pressing the Map button displays the Navigation\* System map and your current location  
**MAP button** (Systems without navigation): When a phone is paired and connected via phone projection, press to display the phone's native map screen. When a phone is not connected, it will display the phone projection setting screen

**E SEARCH button:** Displays the Search screen

**F SEEK/TRACK buttons:** While listening to the radio, press to change the station. While playing media, press to change the track/file

**G MEDIA button** (FM/AM, SiriusXM<sup>®+17</sup>, USB, Bluetooth<sup>®+3</sup> Audio): Press to play the connected media. Press and hold to display the Media Home screen

**H Custom button** ☆: Press to play the user-defined function. Press and hold to display the function settings screen

**I SETUP button:** Displays the Settings screen. Press and hold to display the version information screen



Kia Connect with Navigation



Navigation System Important Tips



Climate Control Switchable Controller


[Continued on next page](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# Kia Connect Infotainment System - (Non-Navigation & Navigation<sup>+9</sup>)\*

 [Continued from previous page](#)

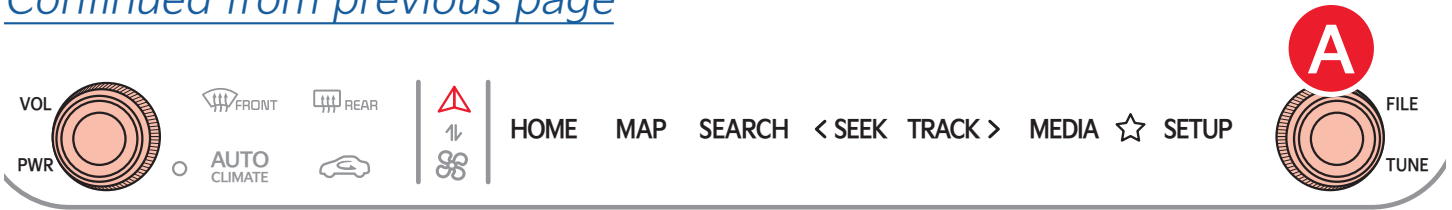

**A TUNE knob:** While listening to the radio, press to adjust the frequency or change the station. While playing media, press to scan music or files. During scanning, press to select the current channel, music or file. While on the map screen, zoom in or out on the map (except for navigation sound)

**Sound Settings:** To adjust the sound settings from any audio mode, press the SETUP button on the infotainment system, then select the onscreen SOUND button. Select the menu item to change settings, and use the onscreen buttons to adjust settings.

**Radio Presets:** To save a preset, press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

**SiriusXM<sup>®†17</sup> Smart Favorites:** In Radio mode, choose SiriusXM<sup>®</sup>, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key ☆:** To program the Custom Key, press and hold to select an available feature you would like the Custom Key to open.



**Infotainment  
System Drive  
Profile**



**Wifi Hotspot**



**Sound Settings &  
Premium Sound**

[Continued on next page](#)

# Kia Connect Infotainment System - (Non-Navigation & Navigation<sup>+9</sup>)\*

[Continued from previous page](#)

## QUICK TIPS

- Volume level between different audio modes:
  - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
  - When using *Bluetooth*® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto™ and Apple CarPlay® (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt Kia Connect<sup>†1</sup> Command Feedback by pressing the Voice Recognition button on the steering wheel

## REMINDERS:

- To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.
- Prolonged use of the Infotainment System in ACC mode may drain the vehicle's battery

*For further Kia Connect with Navigation operations, refer to the Car Infotainment System Quick Reference Guide. Your vehicle's audio system may differ from that in the illustration.*

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*



# USB-C Charger Ports

 
 
## USB-C Charger Ports\*

USB-C charger ports\* **A** are located in the Center Panel, inside and on the back of the Center Console. Press the center button **B** to toggle between charging and media use




**Multimedia USB Port, Power Outlets & USB Charger Port**

**Power Outlets **C**:** Use the power outlets (located in the 2nd row and 3rd row) for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

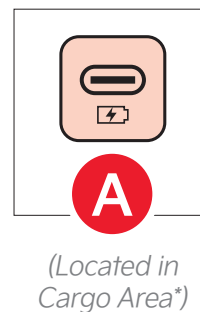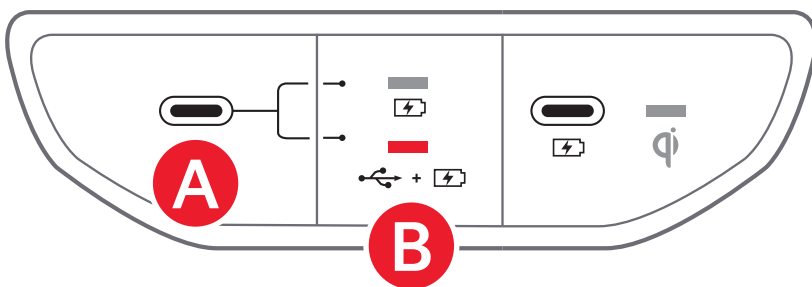

(Located in Cargo Area\*)

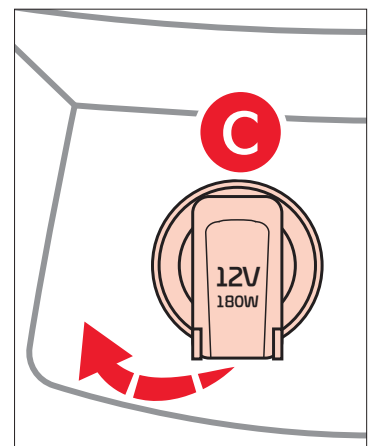 

(Located on Back of Center Console)

## QUICK TIP

The power outlets are inactive when the ENGINE START/STOP button is OFF.

## REMINDERS:

- Using the Power Outlet (accessory plug) and USB charger for prolonged periods of time with the ENGINE START/STOP button is in the ACC position (Engine OFF) for prolonged period time could cause the battery to discharge
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to device
- The USB-C Charger ports do not support data transfer

Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.



 
### Power Outlets / AC Inverter\*

**Power Outlet:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

**AC Inverter:** The AC inverter supplies 115V/150W electric power to operate accessories or devices.

To use the AC inverter, open the AC inverter cover and connect a plug to it. The AC inverter is ON when the vehicle is on.

*Refer to section 5 in the Owner's Manual for more information.*

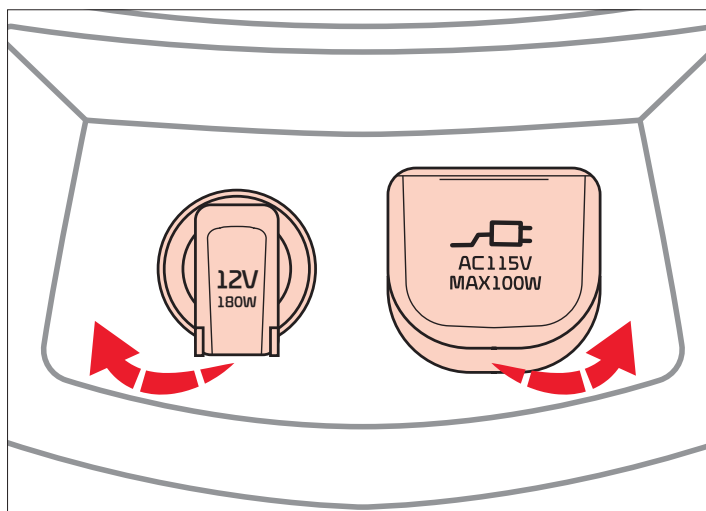

*(Located on Back of Center Console)*

### Digital Clock - Infotainment System

Press SETUP, then select General, scroll down and select Date/Time from the menu to adjust. Then use the onscreen buttons to navigate through setup and return to exit.

#### QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect<sup>†1</sup> with Navigation\*)

*Refer to the Car Infotainment System Quick Reference Guide for more information.*



 
## Wireless Smartphone Charging System\*

Charge a compatible Qi Certified smartphone wirelessly by placing it on the tray **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



**Wireless Charging**

1. Enable Wireless Charging in the Vehicle Settings in the Infotainment System, select CONVENIENCE, then WIRELESS CHARGING SYSTEM
2. Place the smartphone on the center of the charging pad **A**
3. Indicator light **B** may change to amber once wireless charging begins
4. Once charging is complete, the amber light may change to green

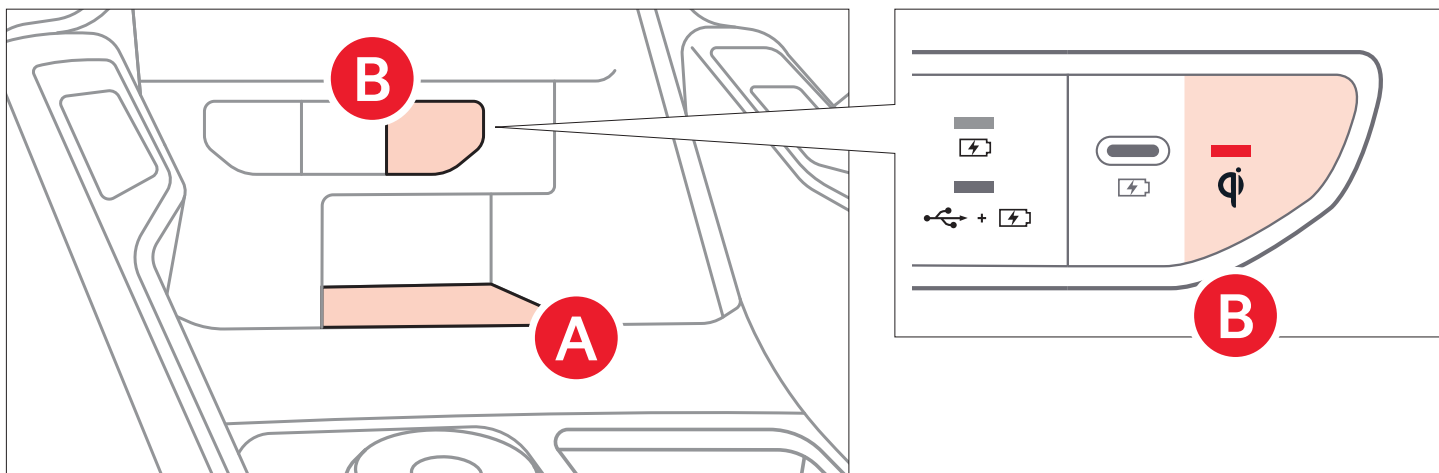

### QUICK TIPS

- Wireless charging must be enabled in Vehicle Settings
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area
- For wireless charging to occur, all doors (excluding the rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- Removing the phone case may improve charging efficiency and ensure a secure connection

[\*Continued on next page\*](#)

Refer to section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.



# Wireless Smartphone Charging System\*

[\*Continued from previous page\*](#)

 
## REMINDERS:

- The smartphone must be a compatible Qi certified phone with Qi function available. Some smartphone models are not Qi certified, which may affect the availability, speed or performance of the wireless charging
- If the driver door is opened, charging will be disabled
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance** - The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature** - If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption** - Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

*Refer to section 5 in the Owner's Manual for more information.*



## Automatic Climate Control\*

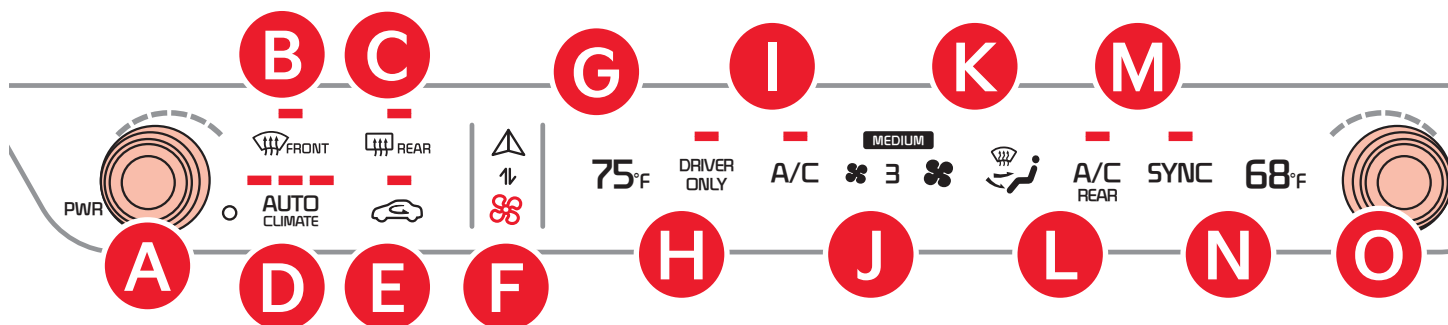

- A** Driver's temperature control knob
- B** Front windshield defroster button
- C** Rear window defroster button
- D** Auto Climate indicator
- E** Circulation control button
- F** Infotainment/Climate Switchable Control



**Climate Control  
Settings**



**Climate Control  
Switchable  
Controller**

- G** Driver's temperature setting
- H** Driver's A/C button
- I** A/C ON/OFF button
- J** Fan speed control buttons
- K** Mode selection button
- L** Rear A/C control button
- M** A/C SYNC button
- N** Passenger temperature setting
- O** Passenger temperature control knob

**Air Flow Modes** - To select Air Flow Modes, press the mode buttons **K** to choose the desired mode:



### REMINDERS:

- A/C button indicator **I** will not illuminate if the desired adjusted temperature is greater than that of the ambient temperature.
- Recirculation modes **E**: vehicle will automatically switch to recirculation mode when Max A/C is turned on

[\*Continued on next page\*](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



# Automatic Climate Control\*

[Continued from previous page](#)

## Climate Control Auto Function:

- Press A/C **A** to select Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
- Press **B** to set desired fan speed
- Rotate the knob **C** to set desired temperature




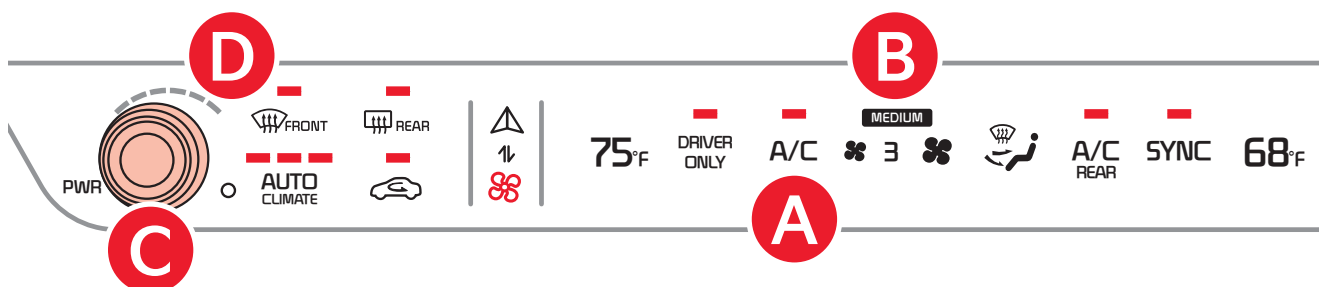 
Climate Control Settings




Climate Control Switchable Controller

## Defrost/Defog Outside and/or Inside Windshield:

- Set Front Fan Speed **B** to the highest position
- Set Temperature **C** to Hot
- Press the Front Defrost button  **D**



## QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

[Continued on next page](#)

For illustrative purposes only. Your actual display, buttons and/or features may vary.



# Automatic Climate Control\*

[Continued from previous page](#)

## Auto Defogging System (ADS):

Auto Defogging is designed to reduce the fogging up of the inside of the windshield


by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode in certain conditions.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.



**Auto Defogging System (ADS)**

## QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

## REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through the vents if the Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility and/or cause smell/odor

*Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.*



# Rotary Dial Shifter Knob - Shift-By-Wire (SBW)

P: Park - To shift into Park from any gear, press the Park (P) button **A** on the Rotary Dial Shifter Knob while the vehicle is stationary and the brake pedal is depressed

Rotate the Rotary Dial Shifter Knob for the following:

P: Park - Press to place in Park

R: Reverse

 
N: Neutral

D: Drive

*Refer to section 6 in the Owner's Manual for additional information on Automatic Gear Shift operation or call Kia Consumer Affairs for additional information.*



## Rotary Dial Shifter

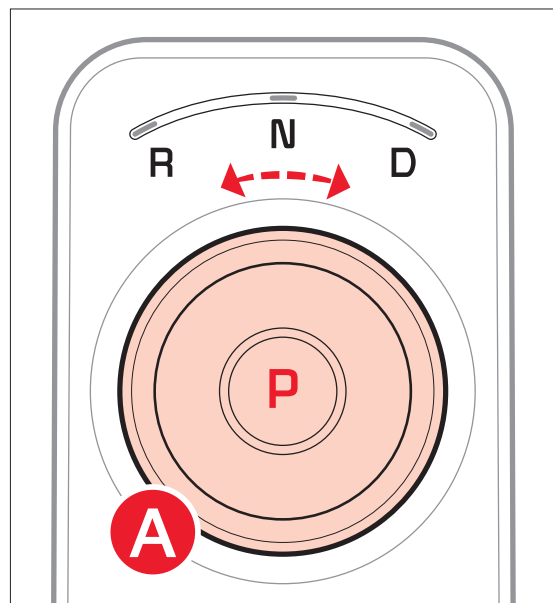


# Paddle Shifters

Paddle Shifters are operable when the shift lever is moved into the Drive (D) position.

**Paddle Shifting:** The system changes from automatic mode to manual mode when you pull the [+] or [-] paddle shifter **B** once to shift up or down one gear.


 
## Hybrid Paddle Shifters

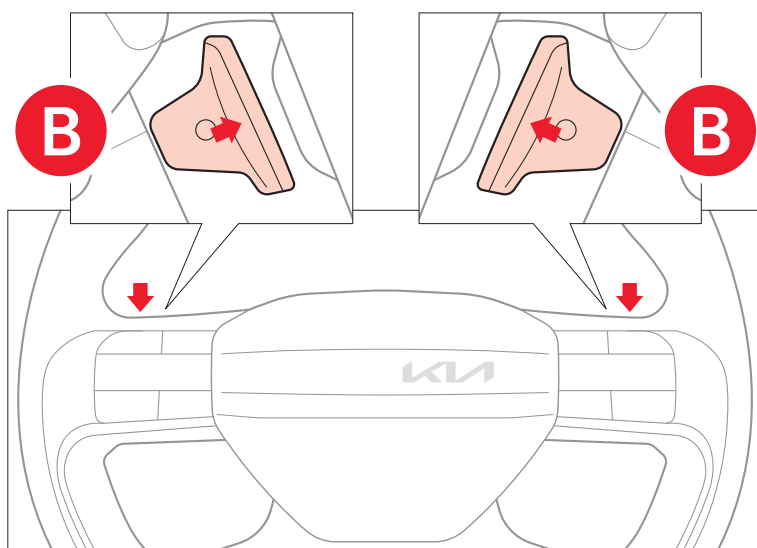

*For illustrative purposes only. Your actual steering wheel and/or paddle shifters may vary.*

*Refer to section 6 in the Owner's Manual for more information.*



# All Wheel Drive (AWD/TERRAIN Mode)\*

AWD/ TERRAIN Mode helps the vehicle to maintain its best driving performance by controlling 4 wheels, engine, transmission and braking according to road conditions such as snow, mud, sand, etc.

 


**All Wheel Drive  
(AWD/TERRAIN  
Mode)\***

You can switch from DRIVE MODE to TERRAIN Mode by pressing the DRIVE/TERRAIN mode button **A**. Then select one of the following:

- **DRIVE MODE** is used when driving on roads in normal conditions, roads in urban areas, and on highways
- **MUD mode:** MUD mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on muddy, unpaved or rough roads
- **SAND mode:** SAND mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on sandy, graveled or unpaved off-roads
- **SNOW mode:** SNOW mode is used to appropriately distribute the vehicle's traction forces and prevent wheel slippage when driving on snowy or slippery road

When the TERRAIN mode is deactivated, a vibration may be felt as the traction forces on the front and rear wheels of the vehicle are released. This vibration is not a mechanical failure.

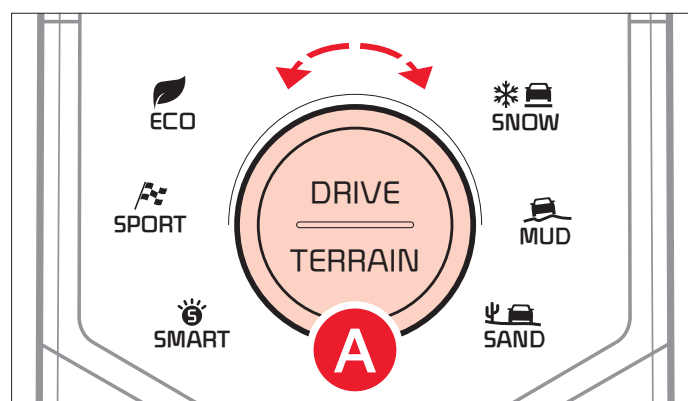

(Button on center console below Rotary Dial Shifter)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.



**Electric Parking Brake (EPB) / Auto Hold**

 
### Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated **(P) BRAKE** on the instrument cluster.

### Releasing the Parking Brake\*

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

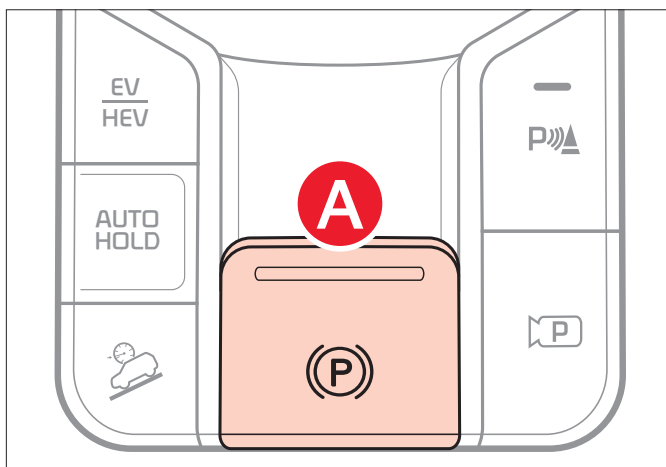

(Located below Rotary Dial Shifter)

[Continued on next page](#)

*Image is for illustrative purposes only and may not reflect actual feature or operation.*



# Electronic Parking Brake (EPB)

[\*Continued from previous page\*](#)

### QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

### REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

*Remote button configuration may vary depending on vehicle options. To turn OFF Alarm, press any button.*

*Refer to section 6 in the Owner's Manual for more information.*



# Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off

using the AUTO HOLD button **A** on the center panel below the Rotary Dial Shifter. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed, and the driver's seat belt must be fastened.

## The Auto Hold indicator on the Instrument Cluster has four states:

**White: Standby** - When vehicle is in Park and at a standstill, and AUTO HOLD button **A** is pressed On, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

 
**Green: Engaged** - When coming to a complete stop by pressing the brake pedal, the Auto Hold indicator changes from white to green.

**Off (not illuminated)** - The indicator will turn Off when the AUTO HOLD button **A** is manually pressed Off or when the EPB **B** is manually turned On.


**Yellow: Malfunction** - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

## REMINDERS:

- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped.
- Always pay attention to traffic and road conditions, and be prepared to depress the brakes

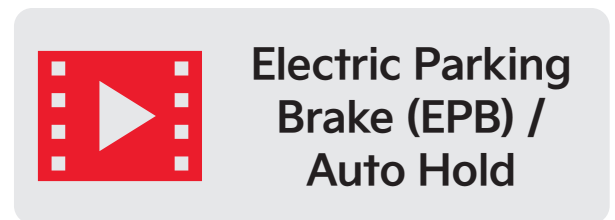

 Electric Parking Brake (EPB) / Auto Hold

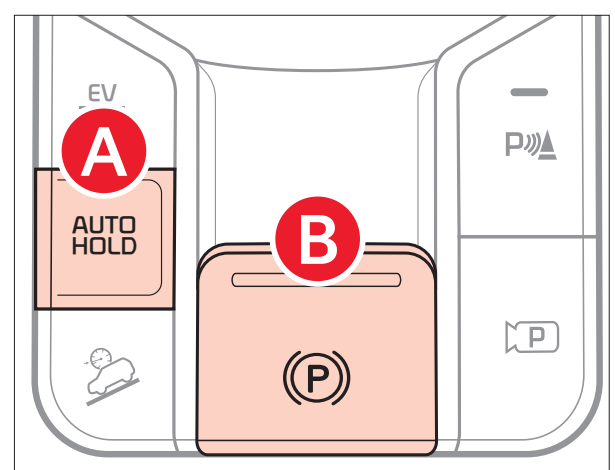

(Located below Rotary Dial Shifter)

*Image is for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information. Refer to page 10 for location of Instrument Cluster indicators.*




# Heated Steering Wheel\*

 Press the Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off while the Engine Start/Stop button is in the ON position. The Steering Wheel Heater will turn off automatically in 30 minutes from the second level. Press the button **A** again to activate level 2. Press the button a third time to deactivate.



**Tilt/Telescoping/  
Heated Steering  
Wheel**

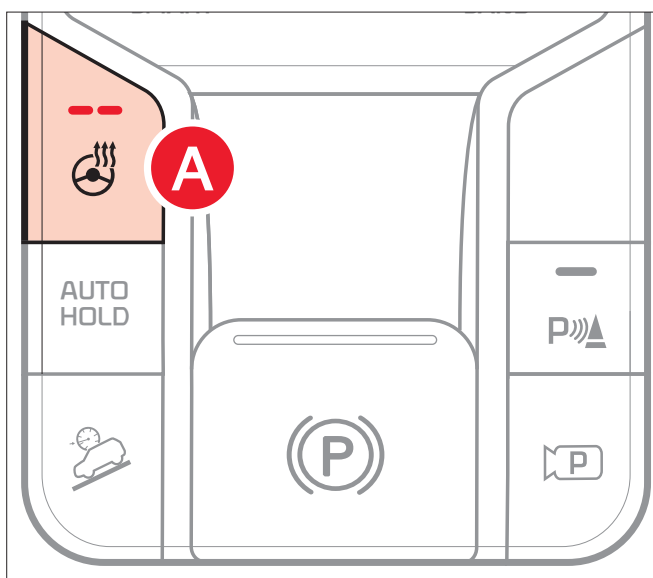

(Located below Rotary Dial Shifter)

### QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will return to its previous state
- With the heated steering switch in the ON position, the heating system in the steering wheel turns OFF or ON automatically depending on the steering wheel temperature

**REMINDER:** If the steering wheel becomes too warm, turn the system OFF. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

*Image is for illustrative purposes only and may not reflect actual feature or operation.*



# Seat Warmers\*†15 / Ventilated Seats\*

## A Seat Warmers

 
- Press the button up once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



Seat Warmers  
and Ventilated  
Seats

## B Ventilated Seats

- Press the button down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

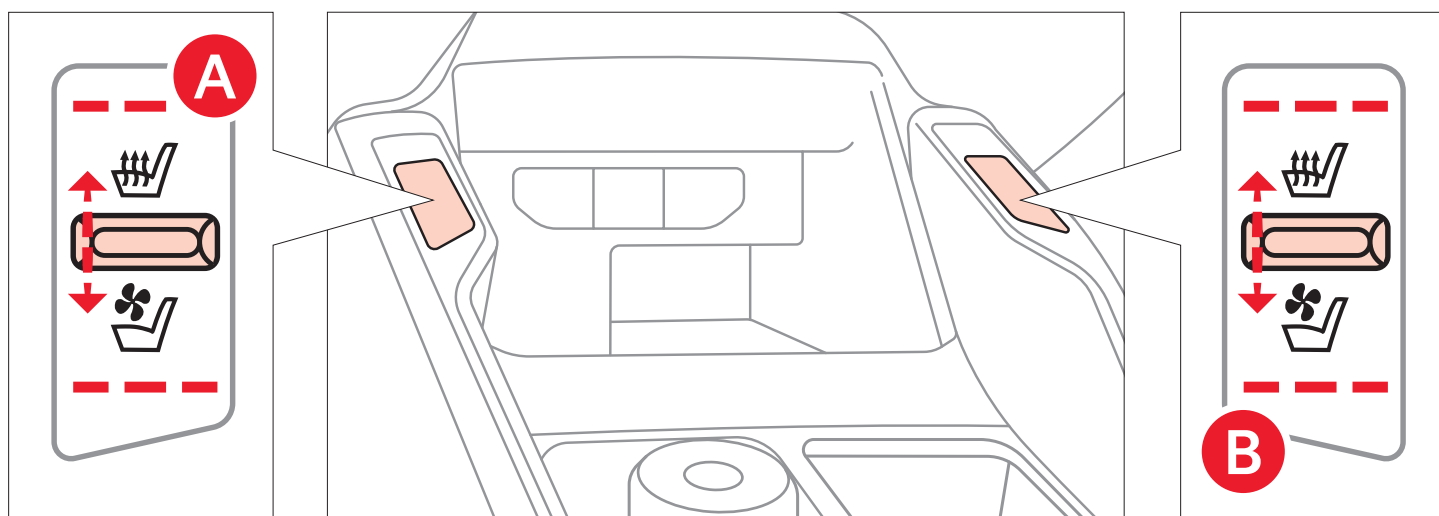

(Buttons located on top sides of center console)

## QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default wheel temperature
- Rear seat warmers\* **C** only have a high and low temperature setting



**REMINDER:** Use extreme caution when using the seat warmers to avoid burns.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 5 in the Owner's Manual for more information.*



## Rear Occupant Alert (ROA) with Ultrasonic Sensors<sup>†4</sup>

Rear Occupant Alert (ROA) with Ultrasonic Sensors can help alert the driver when the system detects rear passenger(s) are left in the rear seats using the ultrasonic sensors and door monitoring. The system is designed to provide three separate alerts:

- The 1st alert is a message on the Instrument Cluster, "Check Rear Seats" **A**, and a chime will sound
- After the 1st alert, when the doors are locked and there is movement detected in the rear seats, the horn will sound for about 25 seconds. This alert may activate up to eight times within 24 hours, if movement is still detected and system has not been disabled
- If you have installed the Kia Access app<sup>†2</sup> on your smartphone, logged in and activated the Rear Occupant Alert notification, a third alert (notification) will be sent to your phone

To turn the system ON or OFF, in the Instrument Cluster or Infotainment System, go to Settings, select Convenience, and then Rear Occupant Alert.

Rear Occupant with Ultrasonic Sensors activates under the following conditions:

- A rear passenger door is opened and closed
- The ignition has been turned off
- The driver's door has been opened, then closed
- The doors are locked with the Smart Key or the door lock button on the door handle



Rear Occupant Alert (ROA) with Ultrasonic Sensors



Check rear seat for passengers and belongings



**OK** : Sensing Off

*Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.*

See section 5 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

 
[Continued on next page](#)

# Rear Occupant Alert (ROA) with Ultrasonic Sensors<sup>†4</sup>

[Continued from previous page](#)


## REMINDERS:

- To avoid false alerts, make sure the vehicle's windows are rolled up
- If objects such as boxes are stacked in front of the ultrasonic sensors, the system may not detect any movement
- The ultrasonic sensors may occasionally detect movement in the vehicle and cause false alerts, when there are no rear occupants present. False alerts can occur due to:
  - The presence of insects near the system sensor
  - Rushing air from a window that is rolled down
  - Movement around the exterior of the vehicle
  - Surrounding noise or vibration
  - Vehicle passing through a car wash
  - Movement in the driver or front passenger seat is detected
- The Rear Occupant Alert with Ultrasonic Sensors system may fail to detect movement and activate an alarm if:
  - Movement is subtle or does not continue
  - A small child sits directly in a seat without a car seat
  - A rear passenger is covered with an object such as a blanket, obstructing the sensor's view

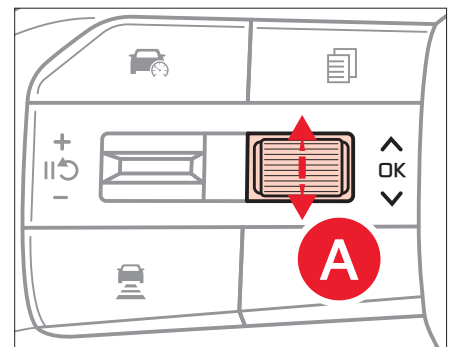

(Controls on right side of Steering Wheel)

## QUICK TIPS

- The 1st alert message will not display on Instrument Cluster if the rear doors are never opened. Either rear doors must be opened after unlocking the vehicle before the system will activate.
- To temporarily disable alerts, press the OK button  on the Steering Wheel while the message is displayed
- To turn the alert off while sounding, press the unlock button on the Smart Key or press the door lock button on the door handle
- Must be enrolled in Kia Connect<sup>†1</sup> services and Kia Access app<sup>†2</sup> installed on the phone to receive ROA alert notifications on your smartphone

*Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.*

*See section 5 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Front Seat Headrest Adjustment<sup>†13</sup>

### Up/down adjustment:

 
- To raise the headrest, pull headrest up **A** to the desired position
- To lower the headrest, press the button **B**, then press the headrest down **C**




Power  
Adjustable Driver's  
Seat with Memory  
Settings

### Forward/backward adjustment\*:

- Pull the headrest forward/backward **D** to one of three positions
- When forward, to move the headrest to the furthest backward position, pull it fully forward then release

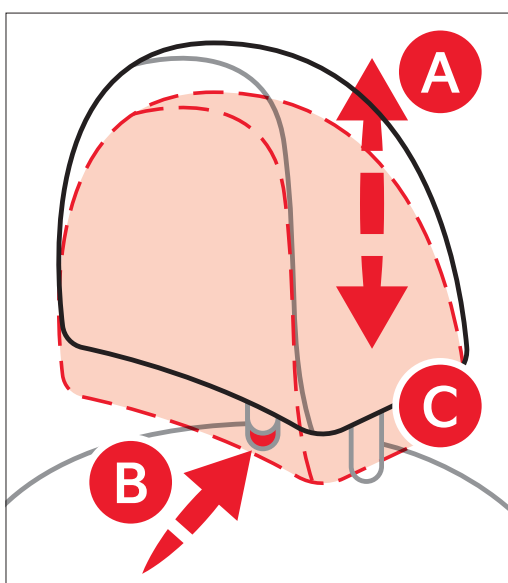

(Type A)

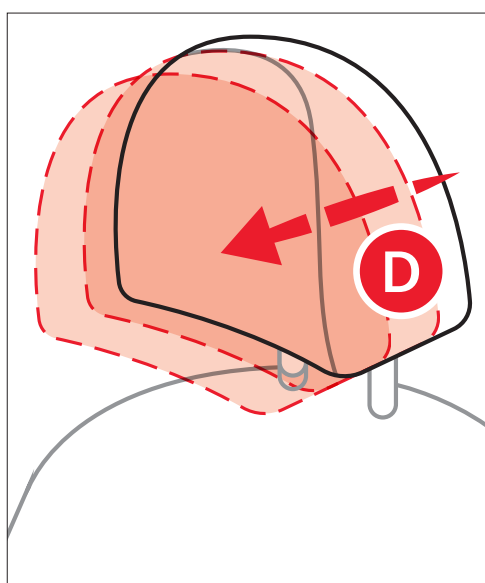 

(Type A)

### QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

### REMINDERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 4 in the Owner's Manual for more information.*



# Driver Position Memory System\*†13

 
The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.



**Power  
Adjustable Driver's  
Seat with Memory  
Settings**

To store positions into memory, first move the Rotary Dial Shifter into P (Park) while the ENGINE START/STOP button is in the ON position. Then:

1. Adjust the Driver's Seat and the Outside Mirrors
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored

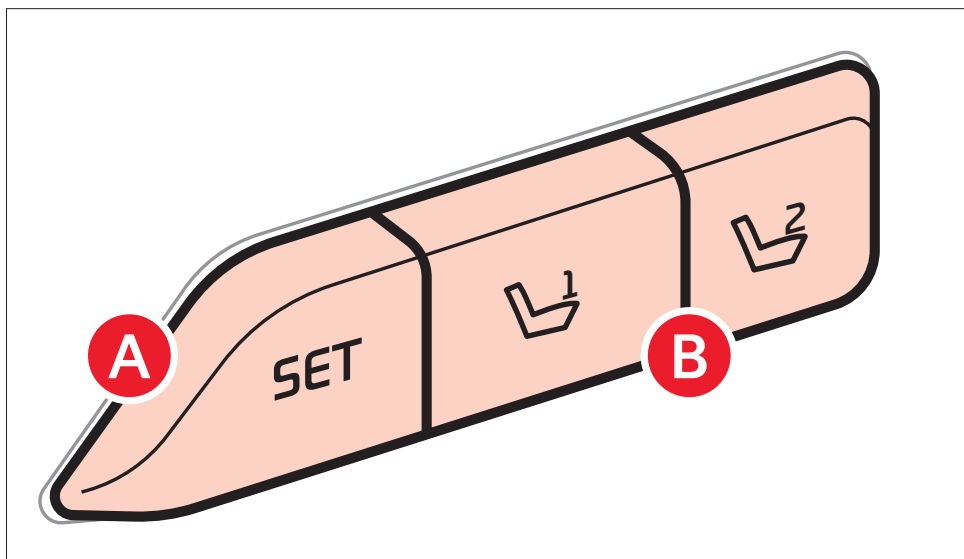

(Buttons located on Driver's Door Panel)

**REMINDER:** Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 5 in the Owner's Manual for more information.*




## Power Adjustable Driver's Seat / Power Lumbar<sup>†13</sup>

 
Move/Press the controls to adjust the Seat forward/backward, the Seat Cushion height, the Seatback recline, the Lumbar forward/backward or the Seat Cushion Extension\*.



**Power  
Adjustable Driver's  
Seat with Memory  
Settings**

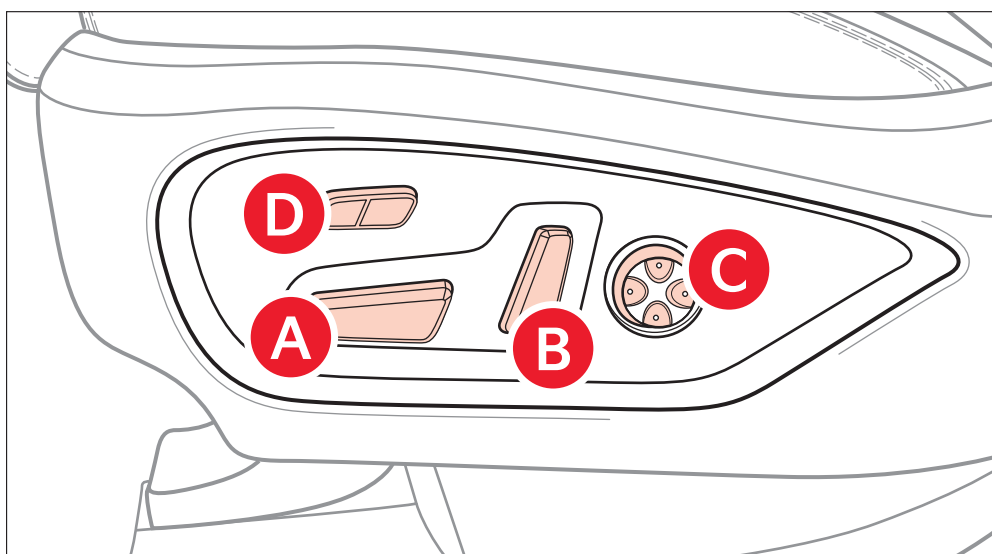

 **REMINDER:** Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

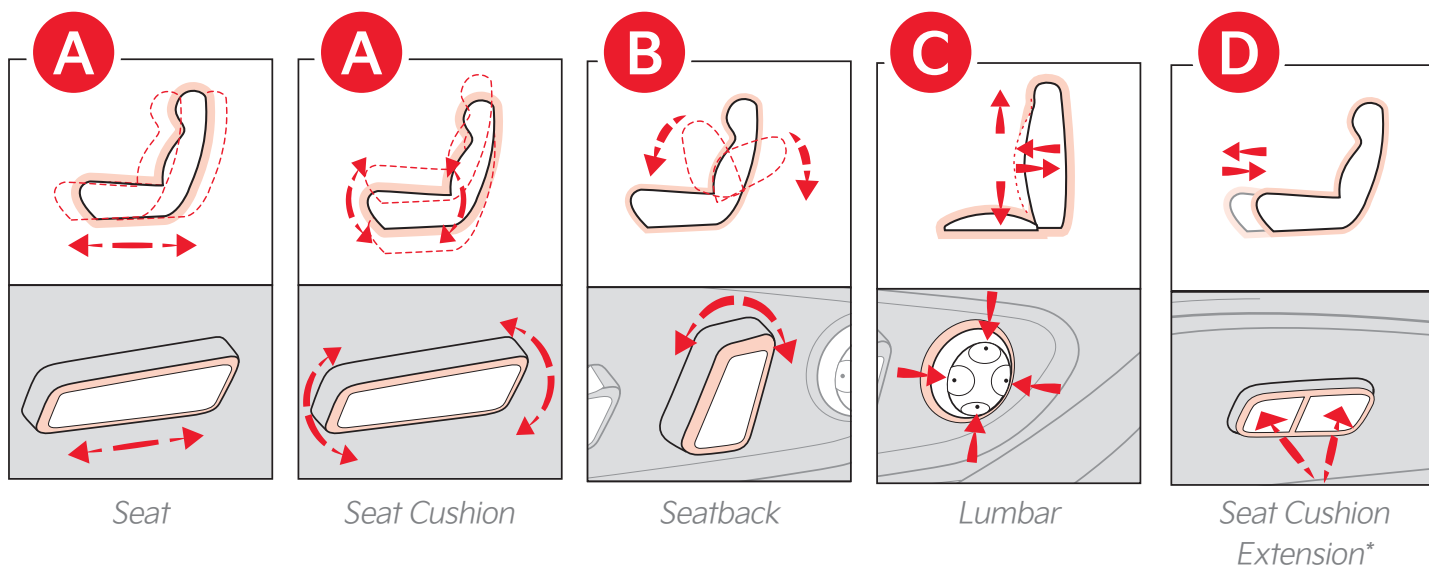

*Images are for illustrative purposes only and may not reflect actual feature or operation. Your seat controls may differ from those in the illustrations.*

*Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.*

*Refer to section 4 in the Owner's Manual for more information.*



## 2nd-Row Folding Seat<sup>†13</sup>

### Folding 2nd-Row Seat

Lower the 2nd-Row Seat Headrest to the lowest position.

 
 
Pull up on the Seatback folding lever **A** or strap\* and fold the Seatback down.

### Unfolding 2nd-Row Seat

Lift the folding Seatback lever **A** and move the Seatback backward to the desired position **B**.



2nd-Row Seats

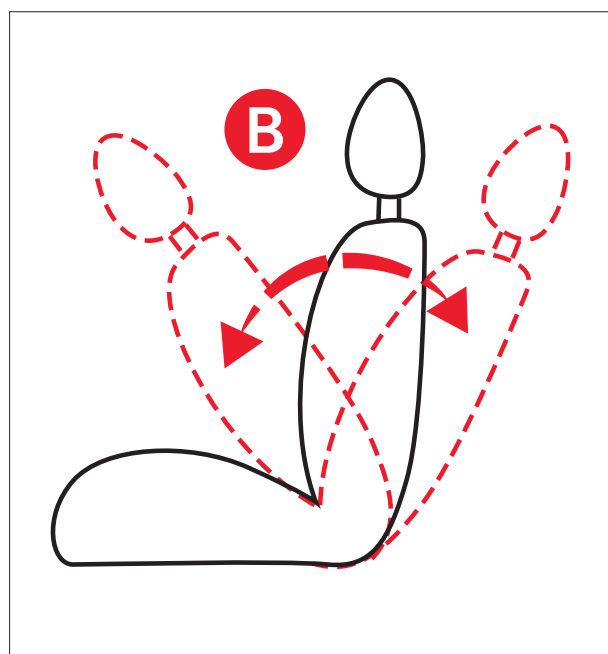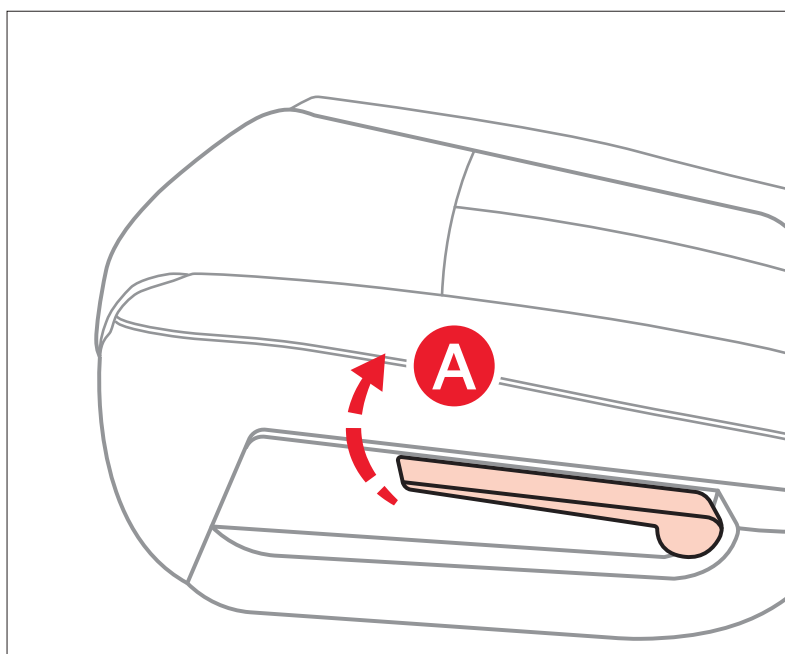

### QUICK TIPS

- When you return the Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- Lower Rear Headrests to the lowest position

**REMINDER:** The lever must return to its original position for the Seatback to lock.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 4 in the Owner's Manual for more information.*



### 2nd-Row Auto-Folding Seat\*†13

 
Press buttons **A** to release and automatically fold 2nd-Row Seatback down.



2nd-Row Seats



Unfastening  
Center Seat Belt

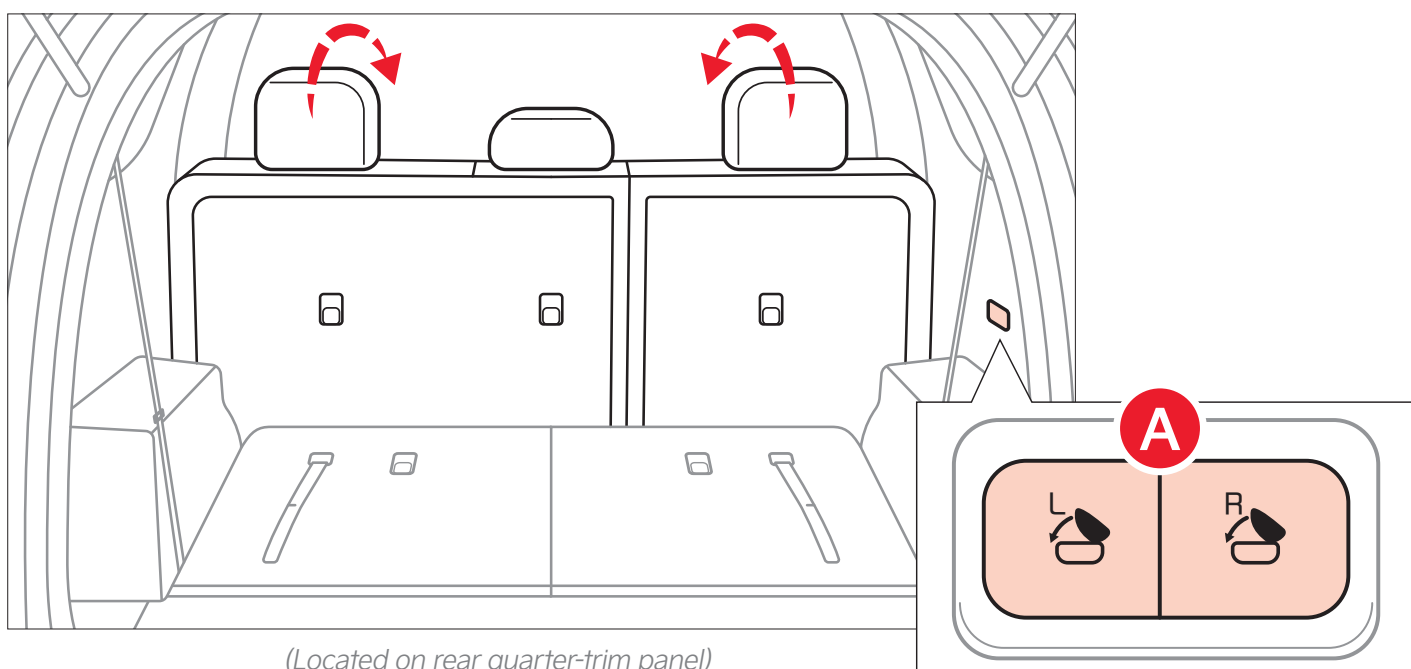


(Located on rear quarter-trim panel)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.

### Unfastening Center Seat Belt†14

 1. If Seat Belt is buckled, press the release button on the buckle
2. To retract the 2nd-Row Center Seat Belt **B** into the headliner, press the "release button" on the buckle by inserting the Seat Belt tongue plate **C** in the small slot on the center buckle **D**

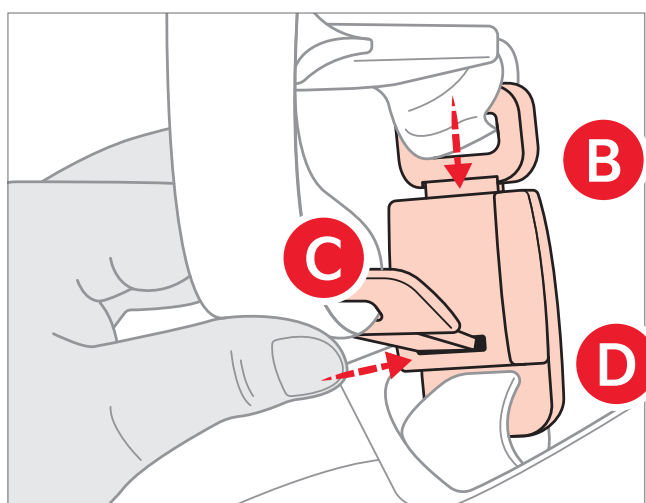

Refer to section 4 in the Owner's Manual for more information.



# One-Touch Slide & Fold 2nd-Row Seats<sup>†13</sup>

To get in and out of the 3rd Row Seat, adjust the 2nd Row Seat by pressing the One-Touch Slide & Fold 2nd Row Seats (located on top **A** and side **B** of the 2nd-row seatback):

 
 


**One-Touch Slide & Fold 2nd-Row Seats**

1. Set the front seatback to the most upright position, and slide the seat forward, if needed
2. Lower the 2nd Row Seat Headrest to the lowest position
3. Insert the Seat Belt buckle into the pocket between the rear seatback and the cushion
4. Press the One-Touch Slide & Fold buttons to slide the Seat forward

### QUICK TIP

The strap can be used in the back of the 2nd Row Seat to slide and fold the 2nd Row Seats.

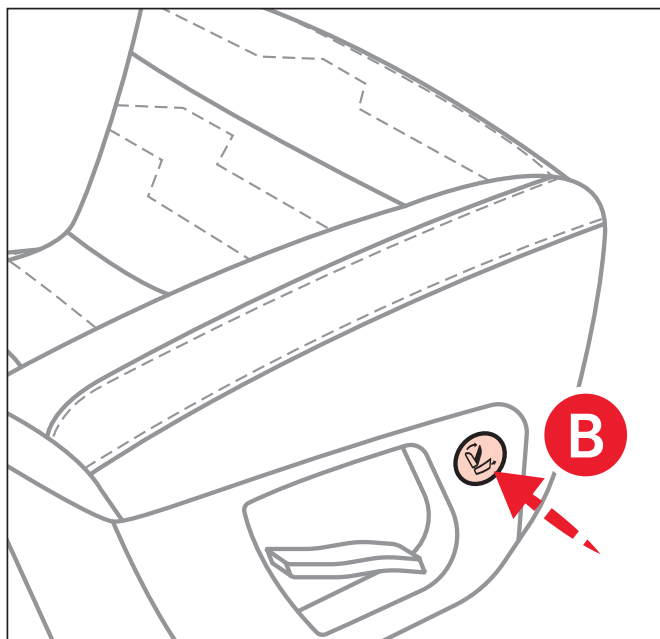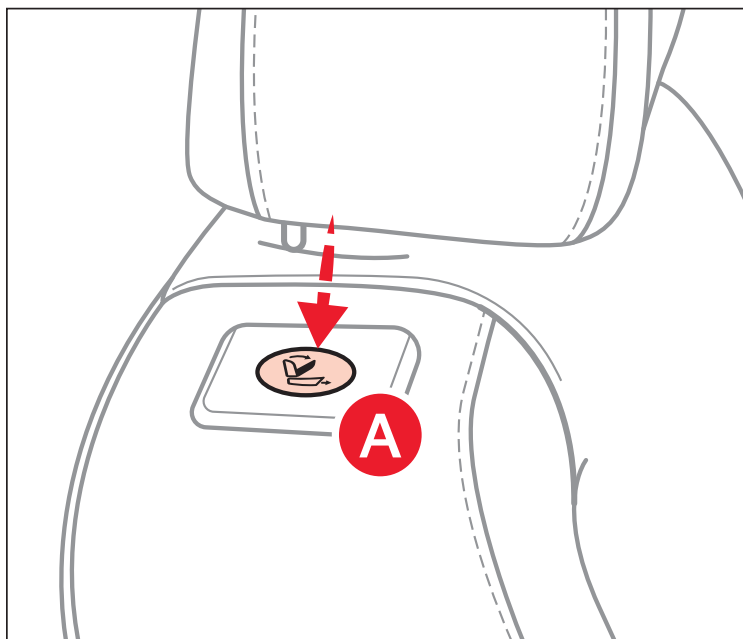

**REMINDER:** Do not use the One-Touch Slide & Fold buttons while the 2nd-row passenger seat is occupied.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 4 in the Owner's Manual for more information.*




### 3rd-Row Folding Seat<sup>\*†13</sup>
 
#### Folding 3rd-Row Seat

1. Fully lower the headrest **A**
2. Pull the Seat folding strap **B** located on the Seatback
3. Fold the Seat down




**One-Touch Slide  
& Fold 2nd-Row  
Seats**

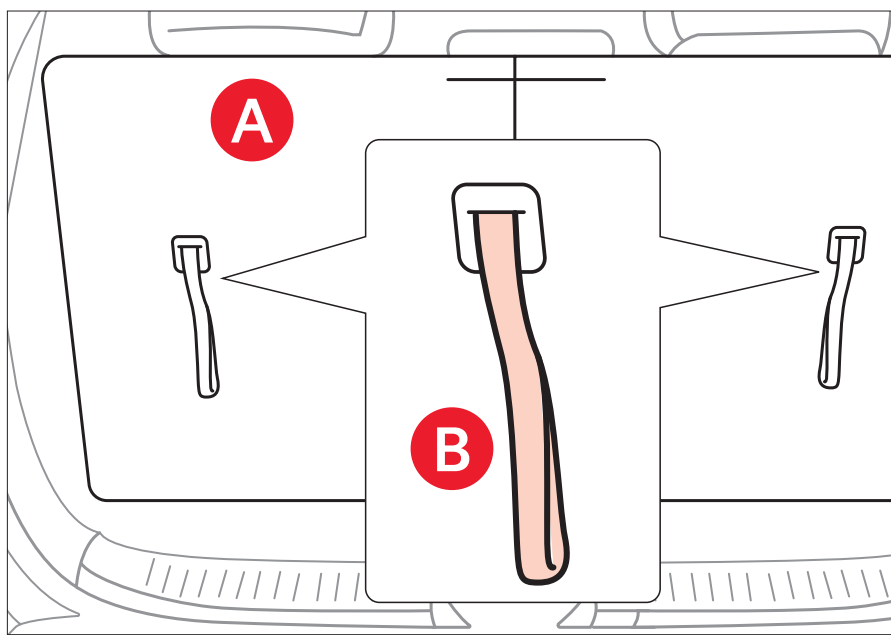

#### 2nd Row Seat folding (from the 3rd row)<sup>\*</sup>

 Press the buttons located in the 3rd row, to fold the 2nd row seats

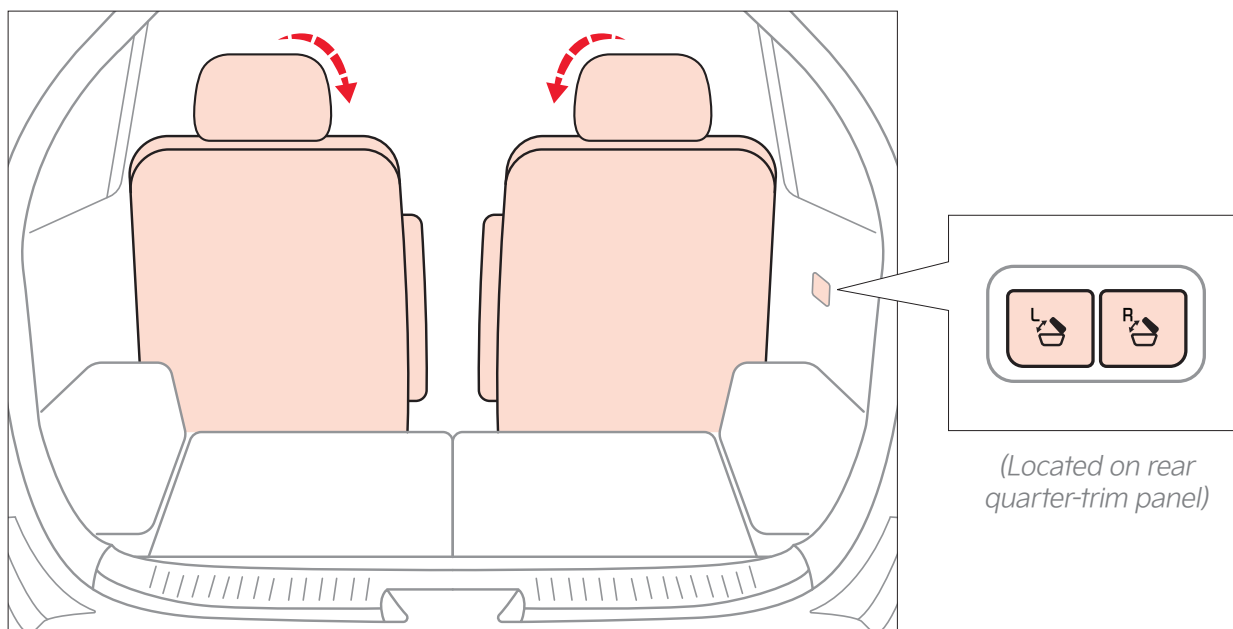


*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 4 in the Owner's Manual for more information.*



### Sun Visor<sup>†18</sup>

 Use the Sun Visor to shield from direct light through the front or side windows. Slide or swing the Sun Visor out and adjust as needed.

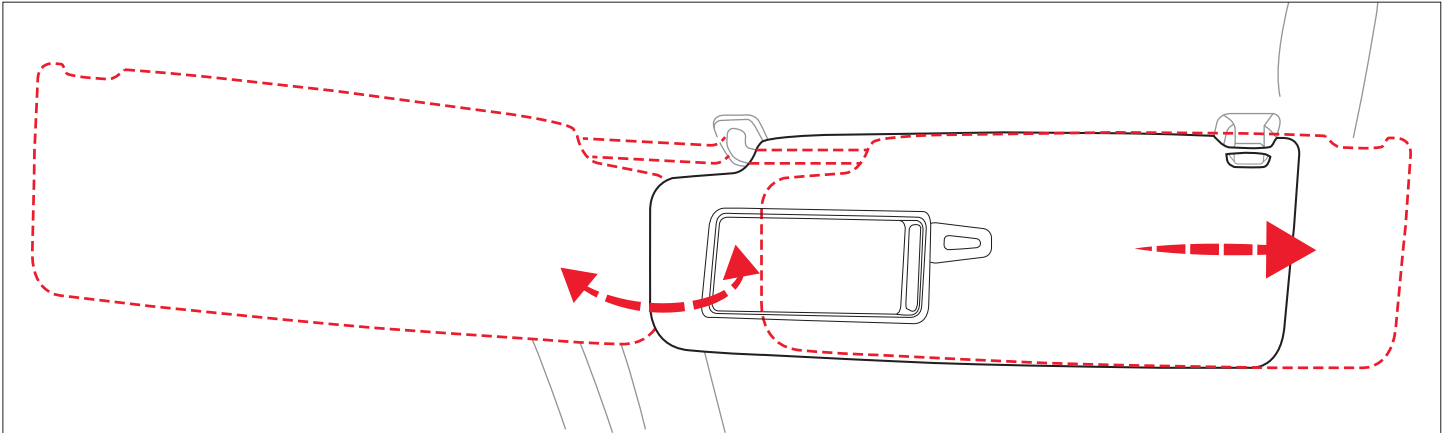

#### REMINDERS:

- Sun Visor may not shield from all direct light
- The Sun Visor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sun Visor is impairing your visibility
- Be aware of the seating position when adjusting or swinging Sun Visor around to and from the front or side windows

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to section 5 in the Owner's Manual for more information.*



# Touch Sensor-Type Door Handles\*

The Touch Sensor-Type Door Handles have sensors on the inside of the exterior door handles that detect the touch of your fingers to unlock the driver's door, all doors and liftgate.



**Touch Sensor-Type Door Handle**

**To unlock:** With the Smart Key fob within proximity, touch the inside of the door handle **A**. All doors and liftgate will unlock. Then pull the handle to open door. The hazard lights will blink twice to indicate that all doors and liftgate are unlocked.

 
**To lock:** With the Smart Key fob within proximity, with all doors and liftgate closed, touch the sensor button **B** on the outside of the door handle. All doors and the tailgate will lock. The hazard lights will blink once to indicate that all doors and liftgate are locked.

**2-Press Unlock feature:** With 2-Press Unlock enabled, touch the inside of the exterior door handle **A** once to unlock the driver's door. If you touch the inside of the door handle again, all doors and Liftgate will unlock.

To enable 2-Press Unlock, go to the Vehicle Settings in the Infotainment System. Press SETUP and then VEHICLE. Press DOOR, then check 2-PRESS UNLOCK.

### REMINDERS:

- The sensor button will only operate when the Smart Key is within 28-40 inches from the outside door handle
- If the outside door sensor button is pressed, the doors will not lock and a chime will sound if any of the following occurs:
  - The smart key is in the vehicle
  - The ENGINE START/STOP button is in the ACC or in the ON position
  - Any door, except the Liftgate, is opened

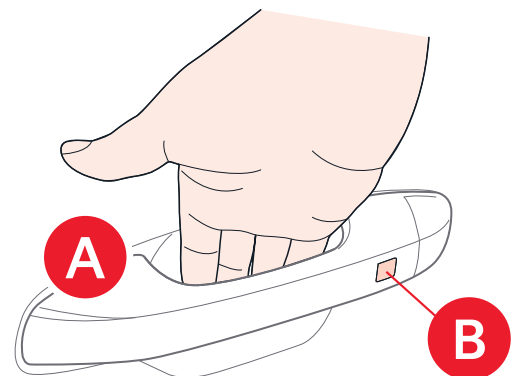

*Images are for illustrative purposes only and may not reflect actual feature or operation. Your seat controls may differ from those in the illustrations.*

*Refer to section 5 in the Owner's Manual for more information.*



## Smart Key with Remote Start<sup>†7</sup>

 
- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** Press to unlock the Driver's Door. Press twice within 4 seconds to unlock All Doors and the Liftgate
- C** **Power Liftgate\***: Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close

**REMINDER:** The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle.


- D** Press and hold for more than a half second for the Panic Alarm. To turn off the Alarm, press any button
- E** **Mechanical Key:** Use to lock/unlock Driver's Door by turning once or all doors by turning twice. Use to enable/disable Child Safety Locks, and to unlatch rear center seatbelt lower anchor



### Smart Key and Mechanical Key

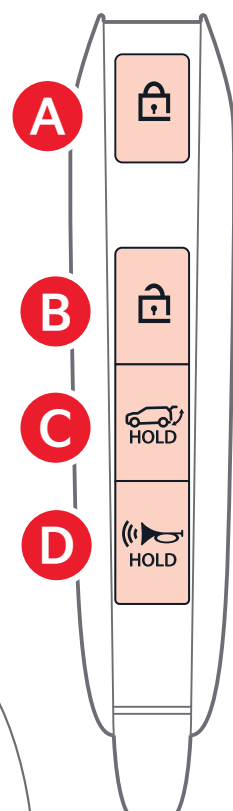


Side view of fob

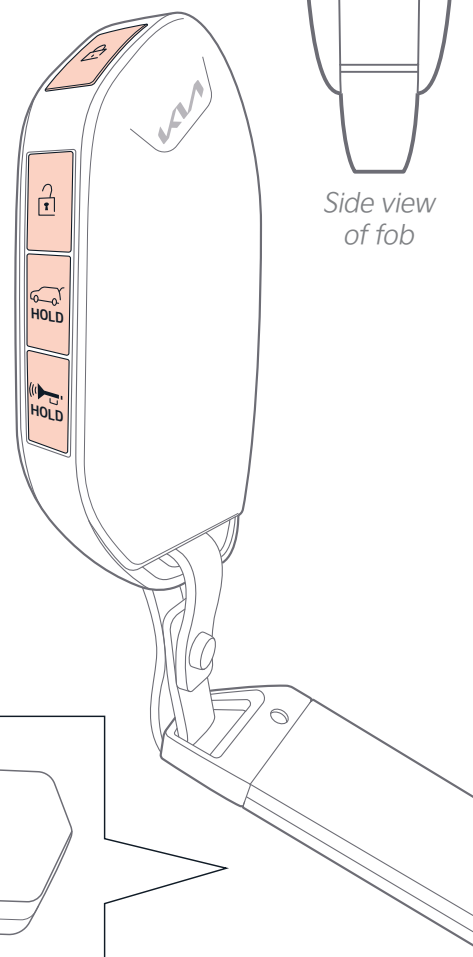 

### QUICK TIPS

 - The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press to start the engine

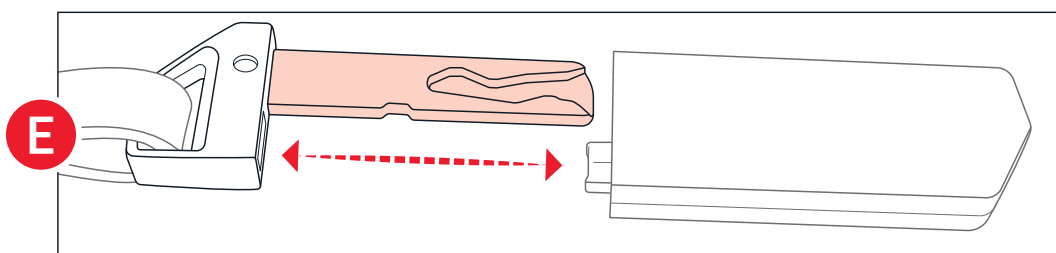

Remote button configuration may vary depending on vehicle options.

Refer to section 5 in the Owner's Manual for more information.

[Continued on next page](#)

## Smart Key with Remote Start<sup>†7</sup>

[Continued from previous page](#)

 
**A Remote Start\*:** Lock the doors by pressing the door lock button **B** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **B**, press and hold the Remote Start button **A** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver does enter vehicle within three (3) minutes of starting the vehicle, the engine will automatically turn off

### Driver's Door Lock/Unlock button **B**:



- Press button once to unlock the Driver's Door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

### Mechanical Key **C**: Use to unlock/lock Driver's Door:

- Pull out door handle
- Press the lever located inside the bottom part of the cover with a key or flat-head screwdriver **D**
- Pull off the cover while pressing the lever
- Turn the key toward the rear of the vehicle to unlock the door and toward the front of the vehicle to lock the door
- Return keyhole cover to its original position

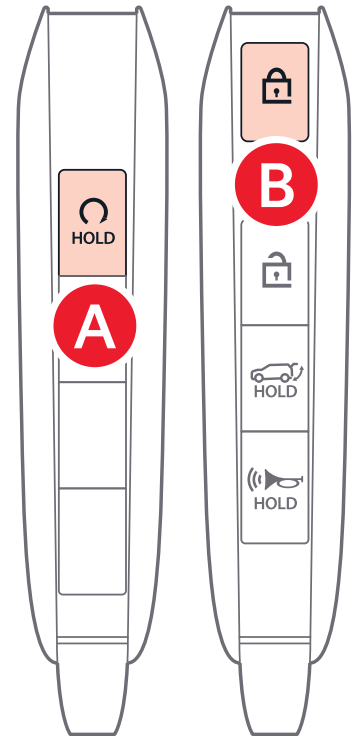

Opposite side views of fob

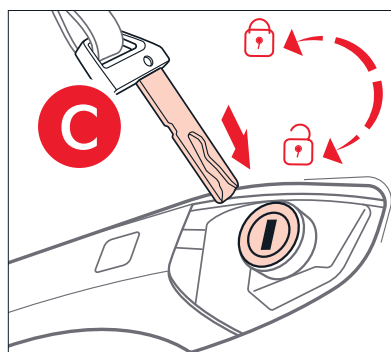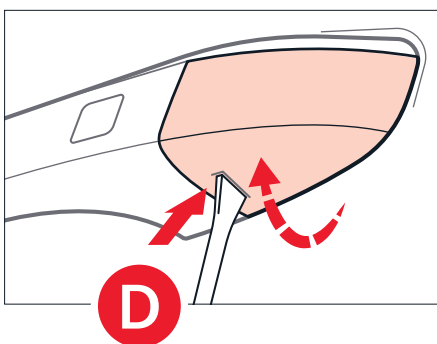  

**REMINDER:** When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound.

*Images are for illustrative purposes only. Remote button configuration may vary depending on vehicle options.*

*Refer to section 5 in the Owner's Manual for more information.*



## Digital Key 2<sup>\*†3</sup>

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

### Digital Key 2 Setup (for Smartphones with Ultra-Wide Band Technology (UWB)):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App<sup>†2</sup>, start an account, and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System
3. Open the Kia Access App<sup>†2</sup> and select DIGITAL KEYS **A**
4. Press CREATE OWNER KEY
5. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
6. Press CONTINUE and the wallet app will pair and add your digital key

**REMINDER:** Actual steps may vary between devices.

 
[Continued on next page](#)



Digital Key 2  
Operation



Digital Key 2  
Setup, Registration  
& Sharing

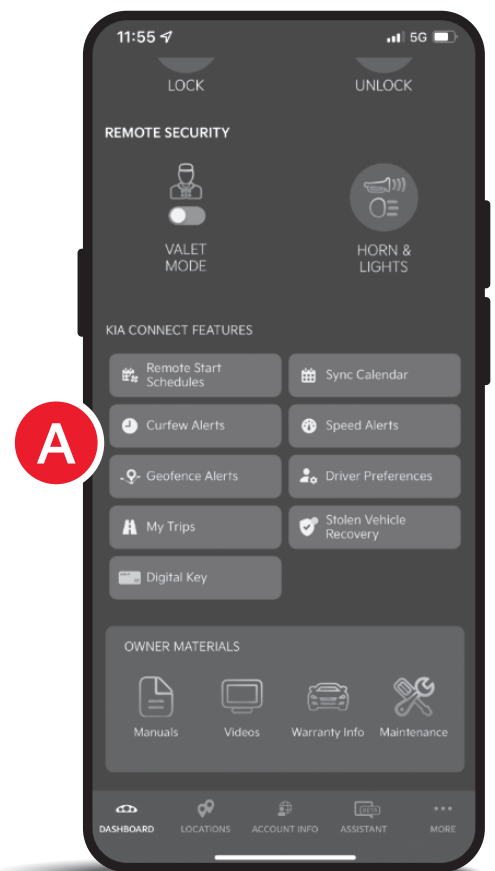

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*


*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

# Digital Key 2<sup>\*†3</sup>

 [Continued from previous page](#)

## Digital Key 2 Setup (for Smart-phones without Ultra-Wide Band Technology (UWB)):

1. Download the Kia Access App<sup>†2</sup>, start an account, and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access App**<sup>†2</sup> and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

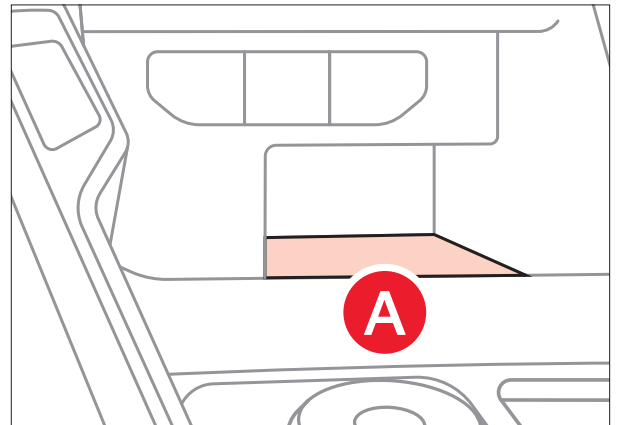

(Wireless charging pad located in center console)

### QUICK TIP

- When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features

**REMINDER:** Actual steps may vary between devices.

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

[Continued on next page](#)



## Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

### Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

### Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

**Revoking shared Digital Key access:** You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings. Select the contact and click on REVOKE ACCESS.

**To delete shared keys and the owner key:** Go to the Vehicle Settings on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY, SMARTPHONE KEY.

**REMINDER:** Actual steps may vary between devices.

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*

[Continued on next page](#)



# Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

### QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

### REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
  - The smart phone is removed from the in-vehicle authentication pad
  - Changing the infotainment system screen
  - The vehicle is powered off or the gear is shifted
  - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
  - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
    - iPhone XS® or later.
    - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
  - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
    - Apple Watch Series 5® or later
    - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
  - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
    - Galaxy S20™ or later
    - Galaxy Note20 5G™ or later
    - Galaxy Z Flip 5G™ or later
    - Galaxy Fold 2™ or later
  - For **Google™ Smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*



## Smart Power Liftgate with Auto Open/Close<sup>†11</sup>

The Smart Power Liftgate with Auto Open/Close can be operated from several controls to either open, close or lock the Liftgate. When the Smart Power Liftgate closes, it locks all doors and liftgate and arms the vehicle.

**Using the “Smart” feature:** When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime again before opening the Smart Power Liftgate.

As you leave proximity of the vehicle, with the Smart Key fob on your person, the hazard lights will blink and a chime will sound that the Liftgate is about to close.

The Smart Power Liftgate feature is off by default. To enable the Smart Liftgate:

- Go to Vehicle Settings in the Infotainment System by pressing SETUP
- Press VEHICLE, then DOOR
- Select the features you want to enable

**Opening/Closing from Inside the Vehicle:** Press and hold the Smart Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.

**Smart Key:** To open the Smart Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

**REMINDER:** Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

*Images are for illustrative purposes only. Remote button configuration may vary depending on vehicle options.*

 
*Refer to section 5 in the Owner’s Manual for more information.*




Smart Power Liftgate



Smart Key and Mechanical Key

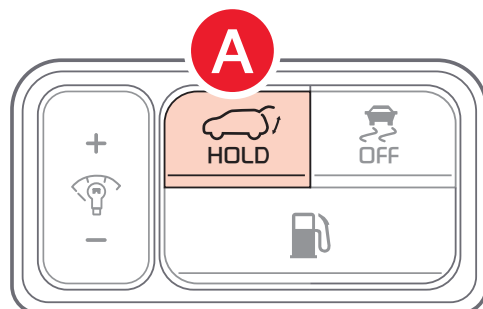

(Button located on Driver’s Panel)

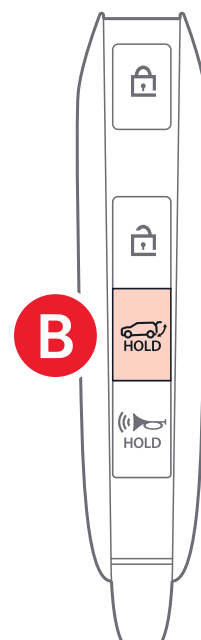 

Side view of fob

[Continued on next page](#)



# Smart Power Liftgate with Auto Open/Close<sup>†11</sup>

[Continued from previous page](#)

## Opening/Closing from Outside the Vehicle:

To open the Smart Power Liftgate automatically, press the Rear Hatch Release button **A** on the exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **B**.

 
## Power Liftgate Opening Height Adjustment

The height setting of a fully opened liftgate (tailgate) can be adjusted by the following steps:

1. Position the liftgate manually to the preferred height
2. Press the Smart Power Liftgate Close button **C** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height.

To change setting again, repeat steps 1-3.

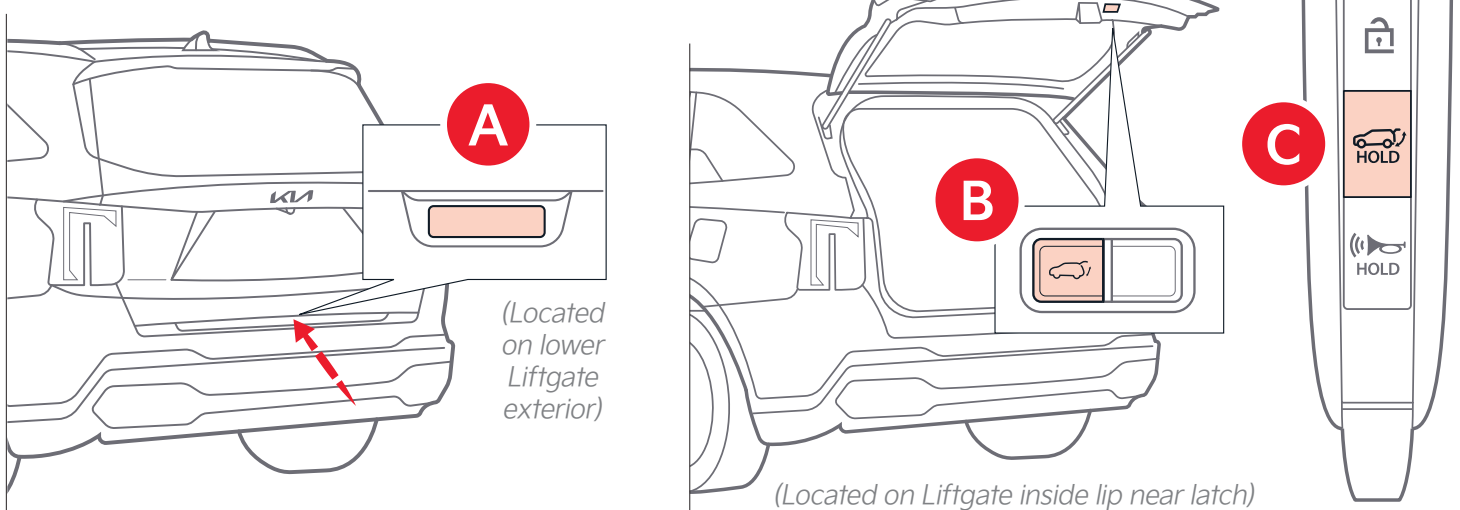

## QUICK TIPS

- During the Smart Liftgate open/close alert, the Smart Liftgate can be deactivated with the Smart Key by pressing any button on the key fob or moving away from the detection area
- The open height and speed can be adjusted. For information on how to set the open height and speed, see your owner's manual

**REMINDER:** When closing, be mindful of any objects or persons.

*Images are for illustrative purposes only. Remote button configuration may vary depending on vehicle options. See section 5 in the Owner's Manual for more information.*

[Continued on next page](#)

 


# Smart Power Liftgate with Auto Open/Close<sup>†11</sup>

[Continued from previous page](#)

### REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when:
  - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
  - A door is not locked or closed
  - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage, or move out of the detection area, to deactivate the Smart Power Liftgate function
- When the ignition is on, the Smart Power Liftgate will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Liftgate with Auto Open to operate
- Ensure obstacles and people are out of the way of the Liftgate
- When closing, be mindful of any objects or persons

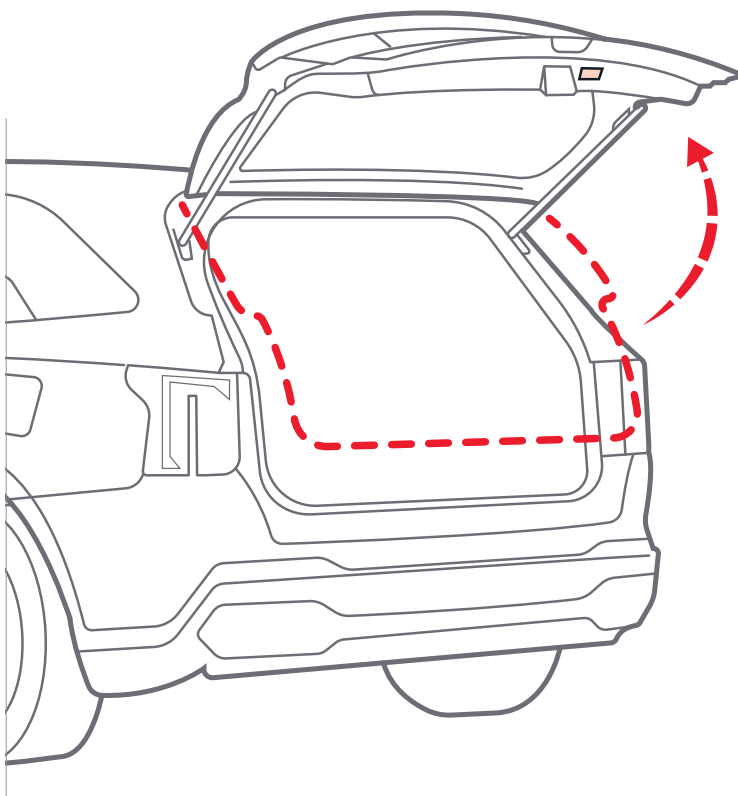

*Images are for illustrative purposes only. Remote button configuration may vary depending on vehicle options.*

*See section 5 in the Owner's Manual for more information.*



# Map/Room Lamps

### Automatic turn off function\*

 
The interior lights automatically turn off approximately 30 seconds after the ENGINE START/STOP button is OFF.

### Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

### QUICK TIPS

- When doors are unlocked by the Smart Key\*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 5 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

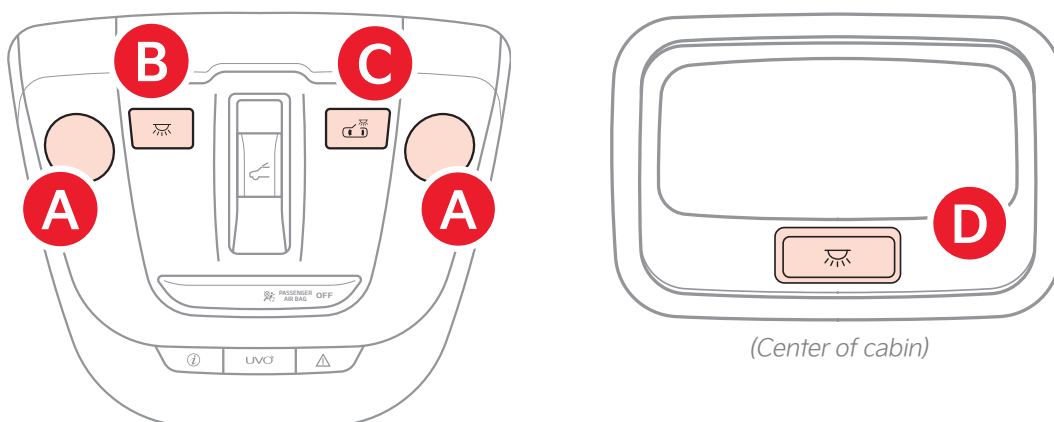

(Type B: Front overhead console. Buttons may vary)

Images are for illustrative purposes only. See section 5 in the Owner's Manual for more information.



## Panoramic Sunroof with Power Sunshade\*

 
The Sunroof and Sunshade operation is controlled through a multidirectional switch **A**. The ignition needs to be ON to operate the sunroof / power sunshade.



**Overhead Console  
- Sunroof & Room  
Lamp**

### QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control switch in any direction.

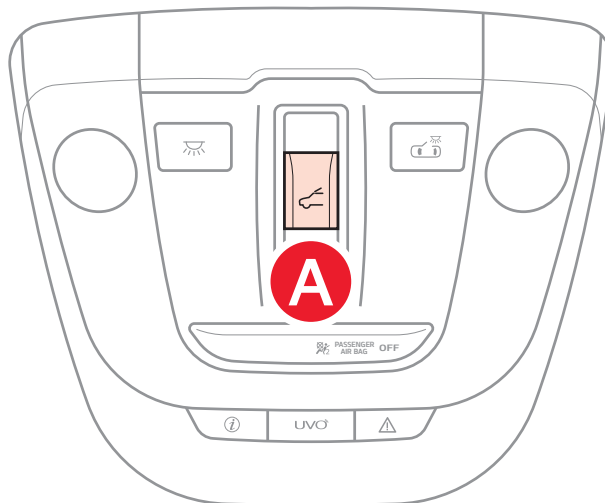

(Front overhead console. Buttons may vary)

### REMINDERS:

- The sunroof can be operated for approximately 30 seconds after the ignition is turned off. If the front doors are opened, the sunroof cannot be operated even within the 30-second period.
- The Sunshade needs to remain OPEN while sunroof is open
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle
- When closing, be mindful of any objects or persons
- If the ignition/vehicle is turned off, and the driver's door is opened, with the sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds

[Continued on next page](#)

Images are for illustrative purposes only. See section 5 in the Owner's Manual for more information.

## Panoramic Sunroof with Power Sunshade\*

[\*Continued from previous page\*](#)

### To slide the power sunshade and sunroof:

- Auto Open - Push the switch **A** backward to the second detent position and release
- Auto Close - Push the switch **A** forward to the second detent position and release

### To slide the power sunshade only:

- Auto Open - Push the switch **A** backward to the first detent position and release.
- Auto Close - Push the switch **A** forward to the first detent position and release.

### Slide the sunroof (with sunshade open):

 
- Auto Open - Push the switch **A** backward to the first detent position and release.
- Auto Close - Push the switch **A** forward to the first detent position and release to close sunroof glass only. Push the switch **A** forward to the second detent position and release to close sunroof glass and power sunshade.

### To tilt the sunroof:

- Raise: Push and release switch **A** upward
- Lower: Push and release switch **A** upward
- Auto-close sunroof and power sunshade: Push the switch **A** forward to the second detent position



**Overhead Console  
- Sunroof & Room  
Lamp**

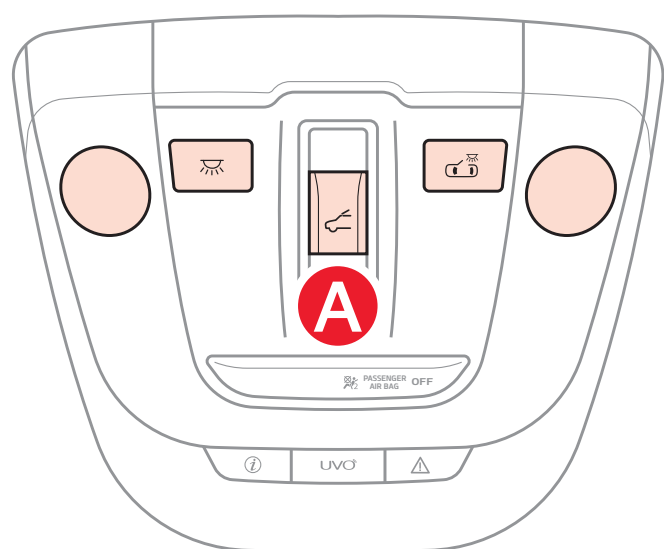

*(Front overhead console. Buttons may vary)*

*Images are for illustrative purposes only. See section 5 in the Owner's Manual for more information.*



# HomeLink<sup>®†3</sup> with Auto-Dimming Rearview Mirror\*

The HomeLink<sup>®</sup> / Auto-Dimming Rearview Mirror\* is designed to reduce glare from a vehicle’s headlights located in the rear and also connect up to three electronic transmitters into one location.



HomeLink<sup>®</sup>  
Support Website

- A

HomeLink<sup>®</sup> Channel 1

B

HomeLink<sup>®</sup> Channel 2

C

HomeLink<sup>®</sup> Channel 3

D

Garage Door Opener Status Indicator: Closing or Closed
- E

 
HomeLink<sup>®</sup> Operation Indicator

F

Garage Door Opener Status Indicator: Opening or Open

G

HomeLink<sup>®</sup> User Interface Indicator

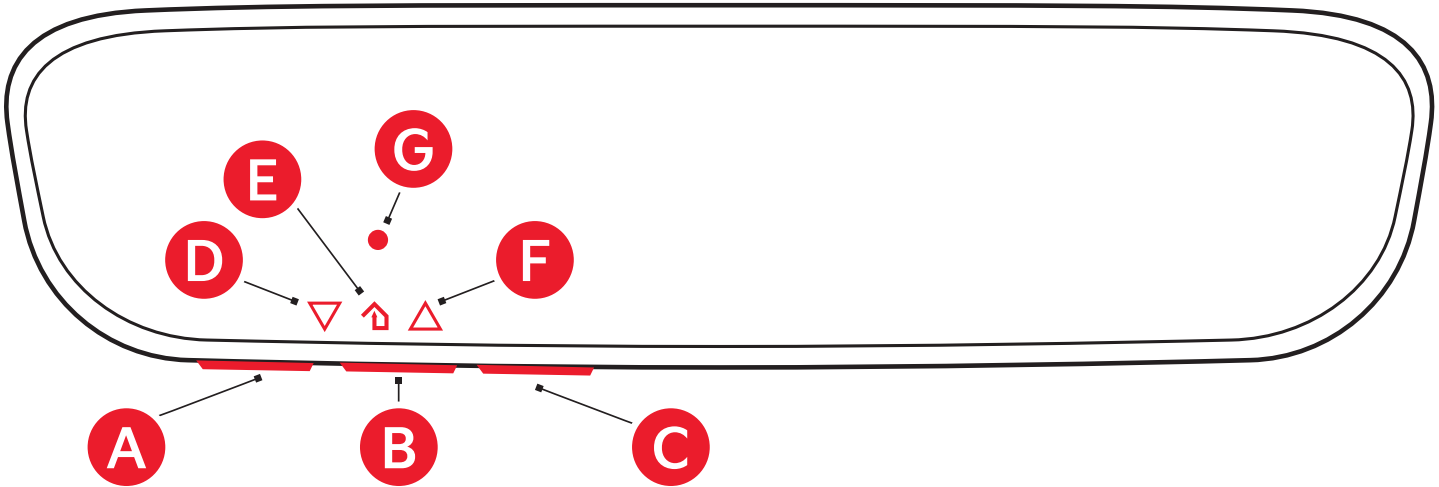

QUICK TIPS

- You can reprogram a single HomeLink<sup>®</sup> button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

If your garage door opener was manufactured in 2011 or later, and you’re unable to program your vehicle’s HomeLink<sup>®</sup> system, you may need to purchase a HomeLink Repeater Kit. For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 135](#) | \*IF EQUIPPED



# HomeLink<sup>®†3</sup> with Auto-Dimming Rearview Mirror\*

[Continued from previous page](#)

## How to Sync Transmitter with HomeLink<sup>®\*</sup>



HomeLink<sup>®</sup>  
Support Website

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and **B** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **D** or **B** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink<sup>®</sup> Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

 
3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink<sup>®</sup> button up to three times

## Operating HomeLink<sup>®</sup>:

Press one of the programmed HomeLink<sup>®</sup> buttons.

## Erasing programmed buttons:

Press and hold the **A** and **B** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

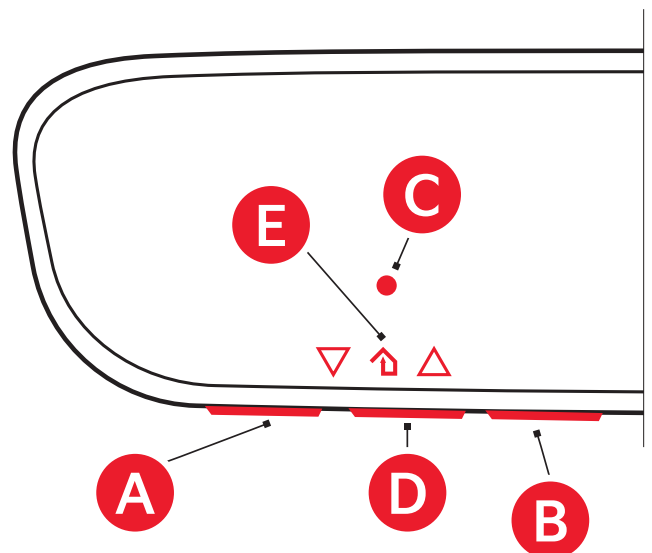

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




# Hood Release Lever and Latch

 
### Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
3. It will open by itself after it has been raised about half way

**REMINDER:** Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

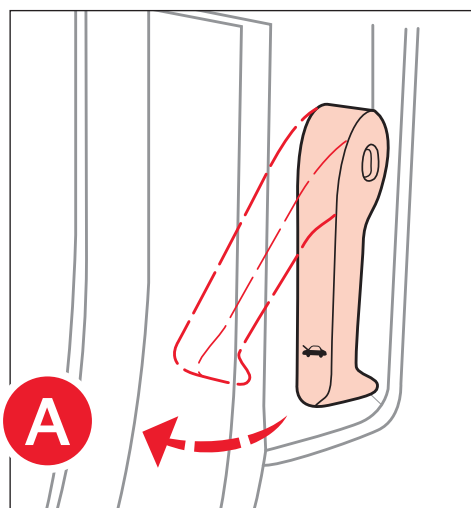

 
(Lever located near floor below Driver's Panel)

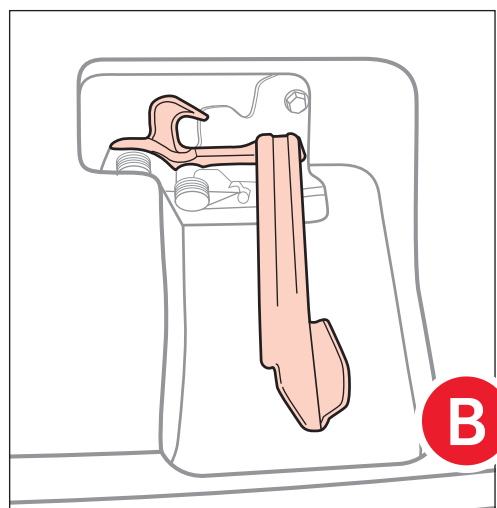

(Latch located inside hood)

**Closing the Hood:** Lower the Hood about halfway and then press down to securely lock in place.

## Fuel Cap / Malfunction Indicator (Check Engine Light)

Ensure the Fuel Cap is securely tightened (one-click on the Plug-In Hybrid) to prevent the Check Engine light / Malfunction Indicator  from illuminating.



Kia Fuel Cap

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 5 in the Owner's Manual for more information.*



# Fuel Filler Door Release

### To open the Fuel Filler Door:

 
1. Press the Fuel Filler Lid Release button **A**, located on Driver's Panel, left of Steering Wheel
2. Fully open the Fuel Filler Door **B**, unscrew the Fuel Cap **C** counterclockwise
3. Place the Fuel Cap in the holder **D**





Fuel Filler Lid

### REMINDERS:

- To lock the Fuel Filler Lid, press the lock button on the Smart Key or lock central door lock button
- All doors and Fuel Filler Lid will automatically lock after the vehicle speed exceeds 9 mph

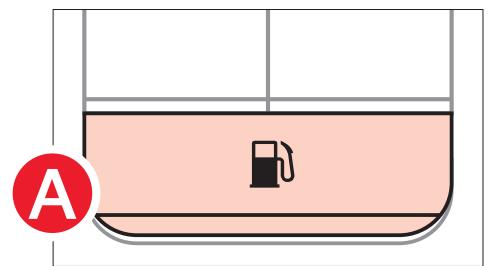

  (Button located on Driver's Panel, left of Steering Wheel)

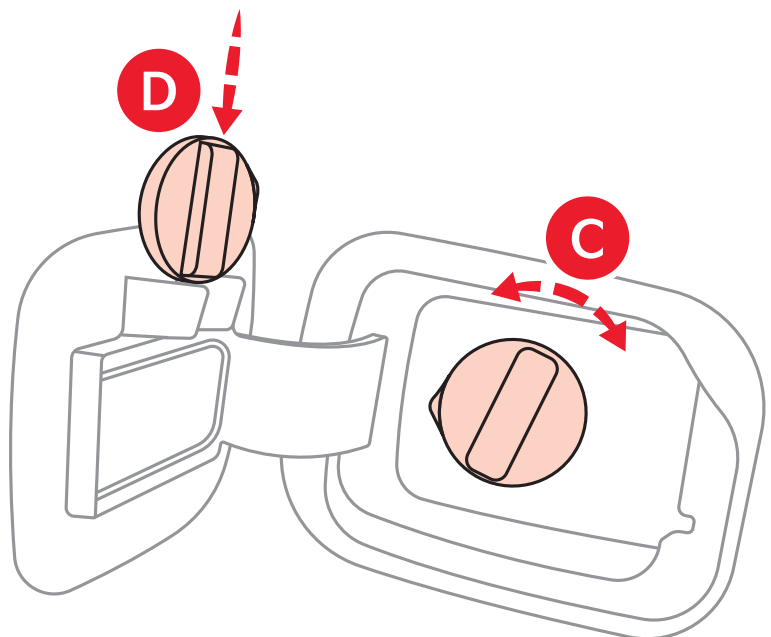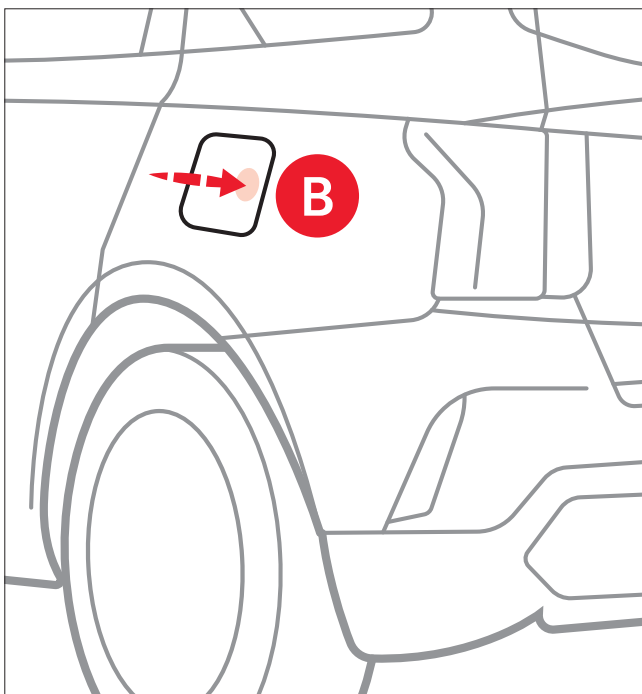

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.



# Occupant Detection System (ODS)<sup>†10</sup> / Passenger Airbag<sup>†14</sup> Off Indicator

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

**REMINDER:** Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.



(ODS light is located on map/room lamp ceiling console)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 4 in the Owner's Manual for more information.*



### Seat Belts<sup>†14</sup>

#### To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

 
 


**Latch Anchors for the Child Restraint System**

#### Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seatbelt retractors will automatically lock the belts to reduce the risk of injury.

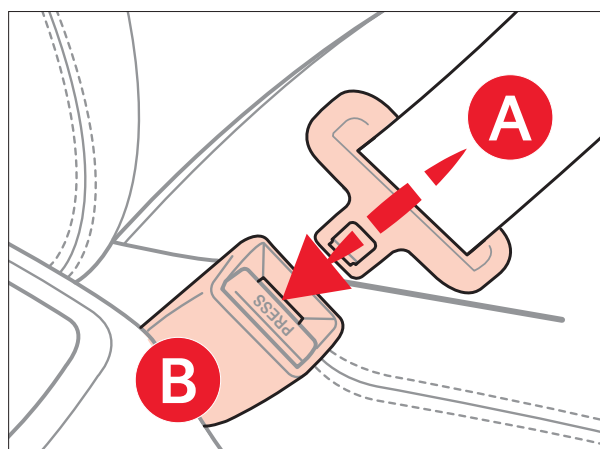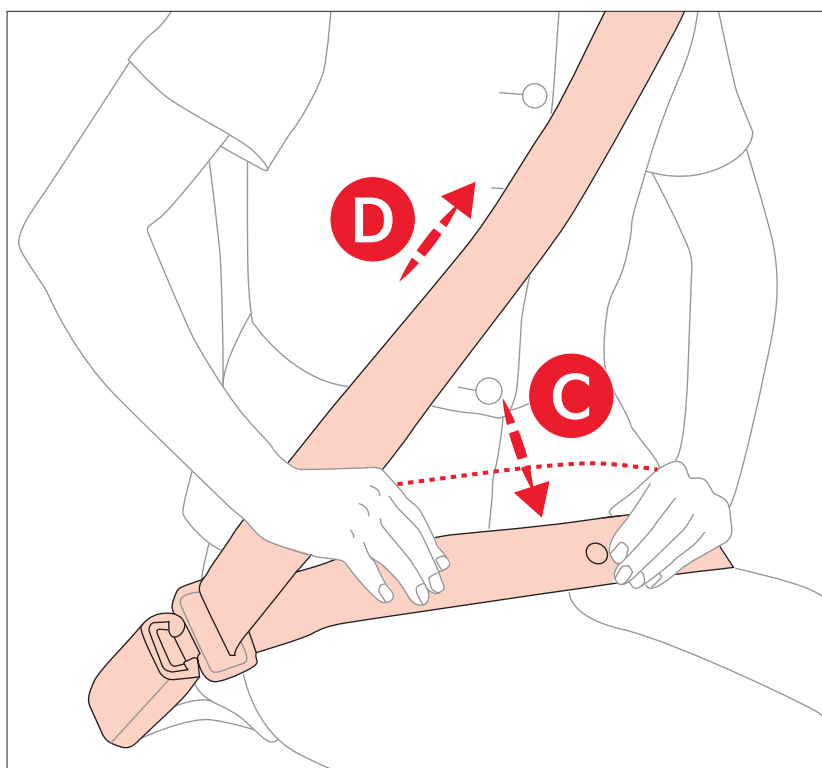

#### QUICK TIP

The seat belt warning chime operates for the driver's seat only.

**REMINDER:** For maximum protection, always wear your seat belt.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See section 4 in the Owner's Manual for more information.*

|  SORENTO<br>PLUG-IN HYBRID | MAINTENANCE INTERVALS (UP TO 64,000 MILES) |        |        |        |        |        |        |        |
|---|--|--------|--------|--------|--------|--------|--------|--------|
|   | 8,000                                      | 16,000 | 24,000 | 32,000 | 40,000 | 48,000 | 56,000 | 64,000 |
| Add fuel additive <sup>A</sup>  | P  | P      | P      | P      | P      | P      | P      | P      |
| Rotate tires  | P  | P      | P      | P      | P      | P      | P      | P      |
| Engine oil & oil filter (full synthetic oil) <sup>B</sup>   | R  | R      | R      | R      | R      | R      | R      | R      |
| Climate control air filter  | I  | R      | I      | R      | I      | R      | I      | R      |
| Air cleaner filter (engine)   | I  | I      | R      | I      | I      | R      | I      | I      |
| Brake fluid   | I  | I      | I      | I      | I      | R      | I      | I      |
| HSG (hybrid starter and generator) belt <sup>C</sup>  | I  | I      | I      | I      | I      | I      | I      | R      |
| Battery condition   | I  | I      | I      | I      | I      | I      | I      | I      |
| Brake lines, hoses and connections  | I  | I      | I      | I      | I      | I      | I      | I      |
| Brake discs and pads  | I  | I      | I      | I      | I      | I      | I      | R      |
| Steering gear rack, linkage & boots   | I  | I      | I      | I      | I      | I      | I      | I      |
| Suspension ball joints  | I  | I      | I      | I      | I      | I      | I      | I      |
| Air conditioner compressor/refrigerant  | I  | I      | I      | I      | I      | I      | I      | I      |
| Exhaust system  | I  | I      | I      | I      | I      | I      | I      | I      |
| Cooling system  | I  | I      | I      | I      | I      | I      | I      |        |
| Intercooler, in/out hose, air intake hose (turbo)   | I  |        | I      |        | I      |        | I      | I      |
| Fuel lines, hoses and connections   |  | I      |        | I      |        | I      |        | I      |
| Propeller shaft (AWD)   |  | I      |        | I      |        | I      |        | I      |
| Driveshaft and boots  |  | I      |        | I      |        | I      |        | I      |
| Fuel tank air filter/fuel tank, and fuel cap <sup>†D</sup>  |  | I      |        | I      |        | I      |        | I      |
| Rear differential / transfer case oil (AWD) <sup>E</sup>  |  |        |        |        | I      |        |        |        |
| Spark plugs (every 48,000 miles)  |  |        |        |        |        | R      |        |        |

**P** = Perform  
**R** = Replace  
**I** = Inspect<sup>†</sup>

† And, if necessary, adjust, correct, clean or replace.

A. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

B. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions.

C. Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Transfer case oil and rear differential oil should be changed anytime they have been submerged in water.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.



**Kia Full  
Synthetic  
Oil**

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

**QUICK TIP**

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect<sup>†1</sup> account by logging into your Kia Access App<sup>†2</sup> or your account on <https://owners.kia.com>

† LEGAL DISCLAIMERS ON [PAGE 135](#) | \*IF EQUIPPED



# DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at [owners.kia.com/us/en/privacy-policy.html](https://owners.kia.com/us/en/privacy-policy.html)) and Terms of Service (available at [owners.kia.com/us/en/terms-of-service.html](https://owners.kia.com/us/en/terms-of-service.html)). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit [www.kia.com](https://www.kia.com) or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.

**2. Kia Access app** for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a Kia Connect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model.

**3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

**4. Driver Assist Features - Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Blind-spot Collision-Avoidance Assist (BCA), Blind-spot View Monitor (BVM), Safe Exit Assist (SEA), Leading Vehicle Departure Alert (LVDA), Intelligent Speed Limit Assist (ISLA), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Lane Following Assist (LFA), Highway Driving Assist 2 (HDA2), Rear View Monitor (RVM), Surround View Monitor (SVM), Rear Cross-traffic Collision Avoidance Assist (RCCA), Reverse Parking Collision-Avoidance Assist (PCA), Forward/Reverse/Side Parking Distance Warning (PDW), Rear Occupant Alert (ROA) with Ultrasonic Sensors:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

**5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

**6. Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

**7. ENGINE START/STOP Button / Smart Key with Remote Start:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

**8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

**9. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

**10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute
- for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.

**11. Power Liftgate / Smart Power Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

**12. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance\*, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.

**13. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

**14. Seat belts/airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.

**15. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information

**16. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](https://www.siriusxm.com). Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2025 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

**17. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

**18. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if sun visor is impairing your visibility.

**19. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

**20. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

\*IF EQUIPPED