

Features & Functions Guide




Sportage



Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**Getting Started
With Your
New Kia**

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com
Consumer Affairs - Roadside Assistance^{†12}: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

† LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.




**Getting Started
With Your
New Kia**

This document is interactive: from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).


This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.


Getting Started




Getting Started
With Your
New Kia




Your New Kia
Important
Care Tips



Vehicle Cameras
Important Tips



Kia Connect
Infotainment
System



Benefits of
Over-the-Air
Updates

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems.

You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia’s most used features:

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

[Smart Key with Remote Start](#)

[Fuel Filler Lid Release](#)

[Power Adjustable Driver’s Seat* / Front Seat Headrest Adjustment](#)

[Seat Warmers / Ventilated Seats*](#)

[Reclining / Folding Rear Seats](#)

[Front & Rear Windshield Wipers & Washers](#)

[Smart Cruise Control \(SCC\)](#)

[Smart Power Liftgate*](#)

[Normal Maintenance Schedule](#)

[Vehicle Settings - Infotainment System](#)

[Bluetooth® Wireless Technology](#)

[Kia Connect Activation* / Kia Connect Assistance*](#)

[Kia Connect Infotainment System \(non-Navigation\)](#)

[Kia Connect with Smart Navigation*](#)

[Android Auto™ / Apple CarPlay® Setup](#)

93

101

87, 89

85

91

54

35

109

119

17

58

64-65

68

69

62-63

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

*IF EQUIPPED

Table Of Contents

<u>WELCOME TO THE KIA FAMILY!</u>	<u>02</u>
<u>VIDEOS & NAVIGATION</u>	<u>03</u>
<u>GETTING STARTED</u>	<u>04</u>
INSTRUMENT CLUSTER	
<u>Instrument Cluster Overview.</u>	<u>08</u>
<u>Indicators & Warning Lights</u>	<u>09</u>
<u>Tire Pressure Monitoring System (TPMS)</u>	<u>10</u>
<u>Fuel Economy / Tips for Economical Driving</u>	<u>12</u>
<u>Drive Mode Integrated Control System</u>	<u>13</u>
<u>All Wheel Drive (AWD/TERRAIN Mode)*</u>	<u>14</u>
VEHICLE SETTINGS	
<u>Instrument Cluster LCD Modes</u>	<u>15</u>
<u>Trip Modes / Trip Computer</u>	<u>16</u>
<u>Vehicle Settings - Infotainment System</u>	<u>17</u>
<u>Service Interval Mode</u>	<u>18</u>
ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)	
<u>Forward Collision-Avoidance Assist 2 (FCA2)*.</u>	<u>19</u>
<u>Blind-spot Collision-Avoidance Assist (BCA)*</u>	<u>22</u>
<u>Rear Cross-traffic Collision-Avoidance Assist (RCCA).</u>	<u>24</u>
<u>Lane Keeping Assist (LKA)</u>	<u>26</u>
<u>Blind-spot View Monitor (BVM)*</u>	<u>28</u>
<u>Safe Exit Warning (SEW)*.</u>	<u>29</u>
<u>Lane Following Assist (LFA)</u>	<u>30</u>
<u>Highway Driving Assist 2 (HDA2)*</u>	<u>31</u>
<u>Forward/Side*/Reverse Parking Distance Warning (PDW)*</u>	<u>33</u>
<u>Smart Cruise Control (SCC)*</u>	<u>35</u>
<u>Navigation-based Smart Cruise Control - (NSCC)*</u>	<u>38</u>
<u>Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA).</u>	<u>39</u>
<u>Rear View Monitor (RVM)</u>	<u>41</u>
<u>Surround View Monitor (SVM)*.</u>	<u>43</u>
<u>Reverse Parking Collision-Avoidance Assist (PCA)*</u>	<u>44</u>
DRIVER'S PANEL	
<u>Instrument Cluster Illumination Control</u>	<u>45</u>
<u>Electronic Stability Control (ESC).</u>	<u>45</u>
<u>Hill-start Assist Control (HAC)</u>	<u>46</u>
<u>Power Liftgate Open/Close Button*</u>	<u>47</u>
<u>Power Windows, Window Lock & Central Door Lock</u>	<u>48</u>
<u>Automatic Door Lock/Unlock</u>	<u>48</u>
<u>Power Outside Mirrors*.</u>	<u>49</u>
<u>Heated Outside Mirrors*</u>	<u>49</u>
<u>Manual Folding Mirrors*</u>	<u>49</u>
<u>Engine Start/Stop Button*</u>	<u>50</u>

Continued on next page

Table Of Contents

[Continued from previous page](#)

STEERING WHEEL CONTROLS

Headlights & High Beams	51
High Beam Assist (HBA)	52
Turn Signals & Fog Lights*	53
Windshield Wipers & Washers	54
Rear Wiper & Washer	55
Tilt/Telescoping Steering Wheel	56
Heated Steering Wheel*	57

INFOTAINMENT SYSTEM

Bluetooth® Wireless Technology	58
Voice Recognition	60
Steering Wheel Audio Controls	61
Android Auto™ Setup	62
Apple CarPlay® Setup	63
Kia Connect Activation*	64
Kia Connect Assistance*	65
Kia Access App Download	66
Kia Access App Features Guide	67
Kia Connect Infotainment System* (non-Navigation)	68
Kia Connect with Navigation*	69

CENTER PANEL

Multimedia USB Port, Power Outlets & USB Charger Port	72
Digital Clock	73
Wireless Smartphone Charging System*	74
Automatic Climate Control*	76
Manual Climate Control*	79
Rotary Dial Shifter	81
Electronic Parking Brake (EPB)*	82
Auto Hold*	83
Downhill Brake Control	84
Seat Warmers* / Ventilated Seats*	85

SEATING

Rear Occupant Alert (ROA) with Door Monitoring	86
Power Adjustable Driver's Seat*	87
6-Way Manual Adjustable Driver's Seat*	88
Front Seat Headrest Adjustment	89
Driver Position Memory System*	90
Reclining/Folding Rear Seats	91
Unfastening Center Seat Belt	92

[Continued on next page](#)

*IF EQUIPPED

Table Of Contents

[Continued from previous page](#)

OTHER KEY FEATURES

Smart Key with Remote Start* / Remote Smart Parking Assist (RSPA)	93
Digital Key 2*	95
Double-Turn Lock/Unlock All.	99
Fuel Cap / Malfunction Indicator (Check Engine Light)	100
Fuel Filler Lid Release.	101
HomeLink® with Auto-Dimming Rearview Mirror*	102
Power Liftgate*	107
Smart Power Liftgate*	109
Manual Liftgate* / Liftgate Release Button	110
Map/Room Lamps	111
Panoramic Sunroof with Power Sunshade*	112
Sun Visor	114
Hood Release Lever and Latch.	115
Tire Mobility Kit*	116

SAFETY FEATURES

Seat Belts	117
Child-Protector Rear Door Lock	118
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	118

MAINTENANCE SCHEDULE	119
--------------------------------------	---------------------

LEGAL DISCLAIMERS	120
-----------------------------------	---------------------

*IF EQUIPPED



 
Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Coolant Temperature Gauge
- E** Indicator & Warning Lights Area (see next page)
- F** Gear Shift Position, Trip Modes
- G** Range
- H** Outside Temperature
- I** Odometer
- J** Fuel Gauge



Instrument Cluster Overview

⬅️➡️ Arrow direction indicates the side of the vehicle the fuel door is located

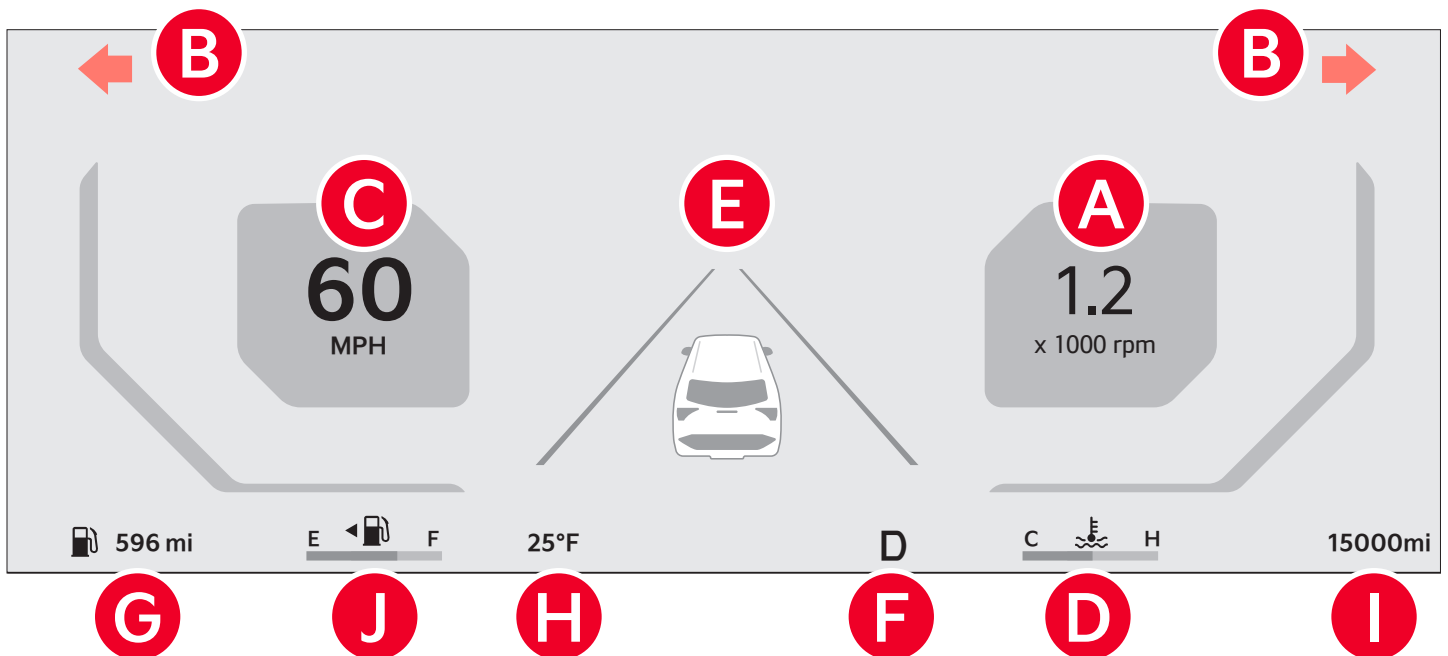

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.



Indicators & Warning Lights

	Turn Signal Indicators		Downhill Brake Control (DBC) Indicator
	Low Engine Oil Level Warning Light		Low Tire Pressure Light/TPMS Malfunction Indicator
	ECO Indicator		Anti-Lock Braking System (ABS) Warning Light
	Sport Mode Indicator*		Electronic Stability Control (ESC) Indicator
	High Beam Assist Indicator*		Electronic Stability Control (ESC) OFF Indicator
	High Beam Indicator		All Wheel Drive (AWD) Warning Light*
	Light ON Indicator		AWD LOCK Indicator*
	Front Fog Light Indicator*		Low Fuel Level Warning Light
	Master Warning Light*		Auto Hold Indicator*
	Electric Parking Brake (EPB) Warning Light		Icy Road Warning Indicator*
	Cruise Control SET Indicator*		Immobilizer Indicator*
	Forward Safety Warning Light		LED Headlamp Warning Light*
	Lane Safety Indicator		Inattentive Driving Warning Light*
	Electric Power Steering (EPS) Warning Indicator		Rear Fog Indicator*
	Charging System Warning Light		Door Ajar Warning Light
	Engine Oil Pressure Warning Light		Lane Following Assist Indicator*
	Parking Brake & Brake Fluid Warning Light		Press Brake Indicator*
	Seat Belt Warning Light		Key Out Indicator
	Airbag Warning Light		Parking Brake Engaged Indicator*
	Malfunction Indicator		Intelligent Speed Limit Assist Indicator*
	Cruise Indicator Light		Trunk Open Warning Light
	Electronic Brakeforce Distribution (EBD) System Warning Light		Low Beam Indicator*
	(Two separate indicators on instrument cluster at same time)		Overspeed Warning Light*


This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD. Your vehicle’s instrument cluster & indicator light locations may differ from those in the illustrations.

For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 4 in the Owner’s Manual.



*IF EQUIPPED




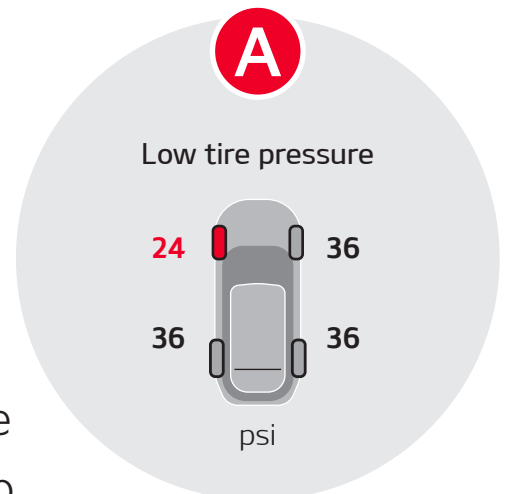 
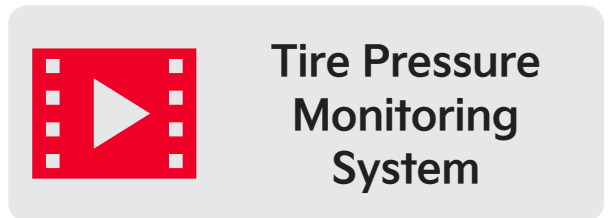 
Tire Pressure Monitoring System (TPMS)^{†19}

The TPMS indicator  functions as both a Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without a TPMS sensor or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off the Low Tire Pressure Indicator . See front driver's door jamb for air pressure specification. The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.



QUICK TIPS

- Even with TPMS, the tire pressure should be checked manually at least once a month. Only adjust the tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain the recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

[Continued on next page](#)

The above images are for illustrative purposes only and may not reflect actual display. Refer to section 6 in the Owner's Manual for more information.



Tire Pressure Monitoring System (TPMS)^{†19}

[*Continued from previous page*](#)

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate



Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight

and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:



**Tips for
Economical
Driving**

- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep the tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on the roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 4 in the Owner's Manual for more information or snap the QR Code above to view a video.



Drive Mode Integrated Control System

 
The Drive Mode may be selected based on the driver's preferences and road conditions.



**Drive Mode
Integrated
Control System**

To cycle through the different Drive Modes, press the DRIVE MODE button **A**. The Instrument Cluster will display SPORT or MY DRIVE mode when selected. When in NORMAL mode, it will not display in the instrument cluster.

- **NORMAL** - This mode balances the drivability and efficiency. Normal mode automatically changes the vehicle to 2WD or AWD*, depending on the road conditions
- **SPORT** - This mode provides enhanced acceleration and dynamic drivability. The electric energy efficiency may decrease in this mode
- **MY DRIVE** - In MY DRIVE mode, the driver can select separate modes and combine them on the Infotainment System

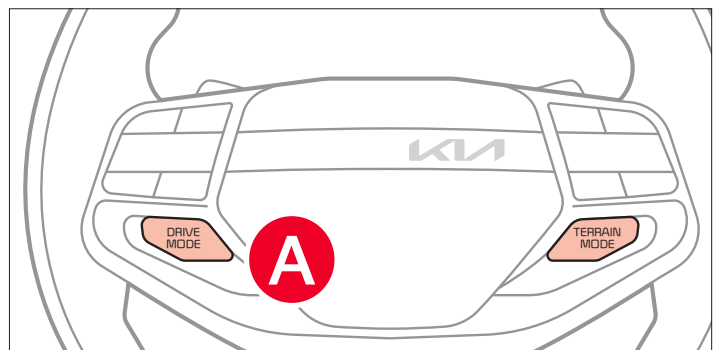

REMINDERS:

- Steering effort may be slightly increased in SPORT mode
- When SPORT mode is selected, fuel economy may decrease

Images are for illustrative purposes only and may not reflect actual feature or operation. Your vehicle's buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.



 
All Wheel Drive (AWD/TERRAIN Mode)*

When you select TERRAIN mode, by pressing the TERRAIN button **A**, it helps the vehicle to maintain its best driving performance by controlling all wheels, engine, transmission and braking according to road conditions such as snow, mud, sand, etc.



All Wheel Drive (AWD/TERRAIN Mode)*

- **MUD mode:** MUD mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on muddy, unpaved or rough roads
- **SAND mode:** SAND mode is used to ensure safe driving by appropriately distributing the vehicle's traction forces when driving on sandy, graveled or unpaved off-roads
- **SNOW mode:** SNOW mode is used to appropriately distribute the vehicle's traction forces and prevent wheel slippage when driving on snowy or slippery road

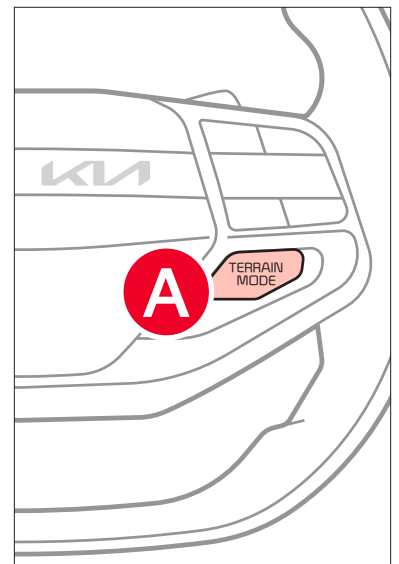


When the TERRAIN mode is deactivated, a vibration may be felt as the traction forces on the front and rear wheels of the vehicle are released. This vibration is not a mechanical failure.

Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.



Instrument Cluster LCD Modes

Press the Mode button  **A** to cycle through different Instrument Cluster's LCD Modes:



Instrument Cluster Overview



Driving Assist: Displays information for Forward Collision-Avoidance Assist, Lane Keeping Assist, Blind-Spot Collision-Avoidance Assist*, Smart Cruise Control*, Lane Following Assist, Driver Attention Warning



Trip Computer Mode: Displays driving information for fuel economy, accumulated info, AUTO STOP* etc.



Turn-by-Turn Mode*: Displays information for the route guidance and destination



User Settings* Mode: Change settings of the Driver Assistance cluster, doors, lights, convenience, units, and other features



Information/Master Warning Mode: Informs of Drive Force Distribution and warning messages related to the vehicle, TPMS, Driver Assist systems



(Buttons located on steering wheel)


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.


Refer to section 4 in the Owner's Manual for more information.

 


Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the ENGINE START/STOP button is in the ON position.

To cycle through the different Instrument Cluster's LCD Modes, press the Mode button  **A**.


When in Trip Computer mode , press the OK button **B** up/down to cycle through the screens. When displaying trip information or the fuel economy screens, press and hold the OK button **B** to reset the Tripmeter to zero.

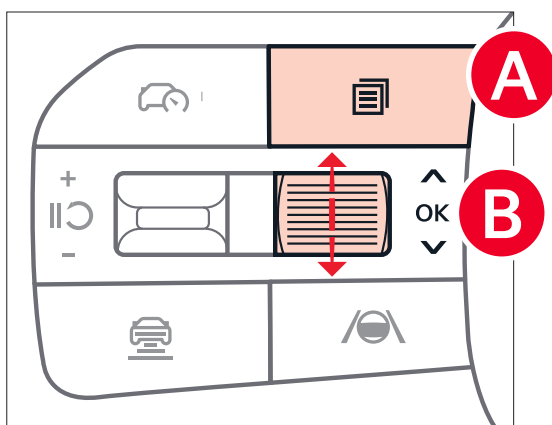

(Buttons located on steering wheel)



 Steering Wheel Controls

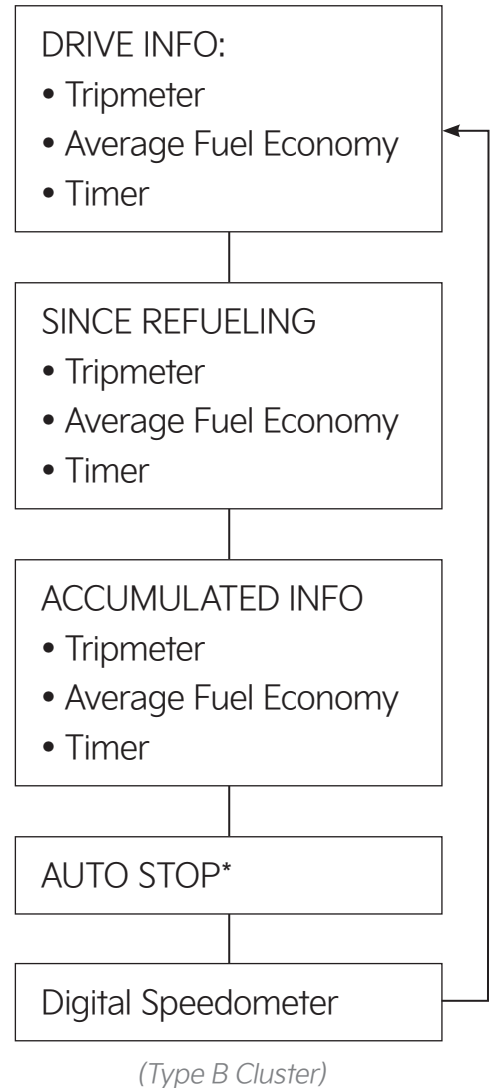

REMINDERS:

- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected


Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.



Vehicle Settings* - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the SETUP key on the infotainment system unit.

Then press the Vehicle icon , which will take you to the Vehicle Settings screen. Use the touchscreen to navigate through the menus.

Driver Assistance:

- Driving Convenience
- Driving safety
- Driver Attention Warning
- Parking Safety
- Speed Limit

Climate:

- Recirculate Air
- Automatic Ventilation
- Defrost/Defog Options
- Climate Features

Doors:

- Settings for Auto Lock/Unlock
- Two-press Unlock
- Power Liftgate
- Power Liftgate Opening Speed/Height
- Smart Liftgate
- Open Windows Remotely

Digital Keys*:

- Smartphone Key
- NFC Card Key
- Digital Key Information

Lights:

- One-touch Turn Signal
- Headlight Delay
- Welcome Mirror/Light
- High Beam assist
- Interior Light Always On



Vehicle & User Settings



Kia Connect Infotainment System



Infotainment System Overview

Drive Mode:

- My Drive Mode
- Drive Mode Change Alert

Convenience:

- Turn On/Off Rear Occupant Alert
- Service Interval
- Oil Change Reminder
- Wireless Charging System for Mobile Devices
- Auto Rear Wiper (in R)

Seats:

- Seating Easy Access
- Seat Position Change Alert



Active Sound Design:

- Smallest Change
- Moderate Change
- Largest Change

Some settings in certain models may be available through User Settings in the Instrument Cluster LCD. See section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide. Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.



Service Interval Mode

To enter Service Interval Mode, press SETUP on the Infotainment System, VEHICLE, CONVENIENCE, , then SERVICE INTERVAL MODE . System will display tire pressure status, number of miles remaining until next service is due, as well as the type of service due.

When service is required, the following will be displayed: **Service Required** .

To turn Service Interval reminders off, uncheck Service Interval.

QUICK TIP


- An “Engine Oil Change Due Soon” message appears on the Instrument Cluster when the engine oil needs to be changed. After oil change, reset the oil change reminder in the Vehicle Settings under CONVENIENCE.




Full Synthetic Oil



Settings -
Service Interval
& Maintenance




Service Required




-200 mi
-6 days

Service in
Off



Service in



1500 mi
30 days

Images are for illustration purposes only and may vary.
Refer to section 4 in the Owner’s Manual for more information.

*IF EQUIPPED



Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

Forward Collision-Avoidance Assist 2 is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA2 detects an increased risk of collision, it may automatically apply the brakes or steer the vehicle* to potentially reduce the effects of a possible collision **B**.

Junction Turning function **C** may help avoid a collision with an oncoming vehicle detected in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.

Junction Crossing function **D** may help avoid a collision with oncoming vehicles detected on the left or right side when crossing an intersection by applying emergency braking.

 
 
 
 
Direct Oncoming Response function may reduce the vehicle speed and temporarily apply braking when FCA 2 detects a vehicle is approaching directly in front.



Forward Collision-Avoidance Assist (FCA)



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

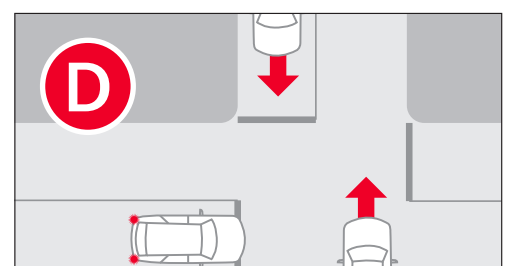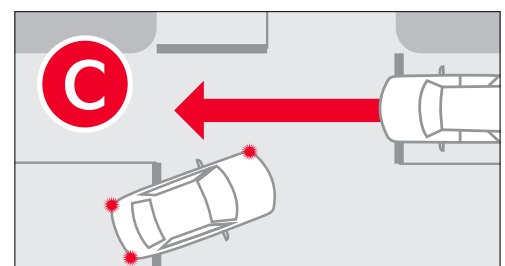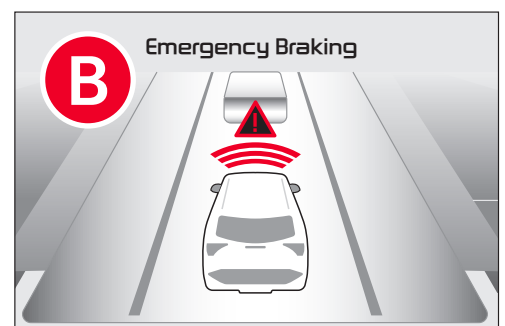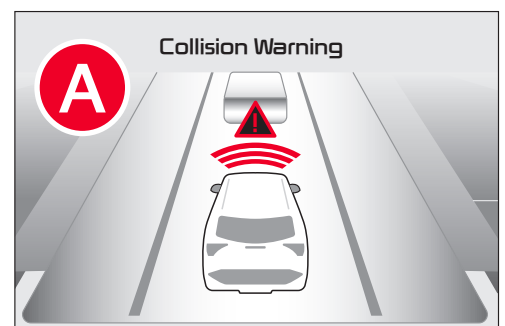

(Junction Crossing)

[Continued on next page](#)

For illustrative purposes only. Your actual display, buttons and/or features may vary.



 
Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

[Continued from previous page](#)


Lane-Change Oncoming function A may help avoid a possible collision with a detected oncoming vehicle when changing lanes by assisting the driver's steering.

Lane-Change Side function B may help avoid a possible collision with the vehicle detected ahead in the next lane when changing lanes by assisting the driver's steering.


Evasive Steering Assist function C may help avoid a possible collision with a vehicle, pedestrian or cyclist detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function will warn the driver and if the driver steers to avoid collision it may assist the driver's steering.

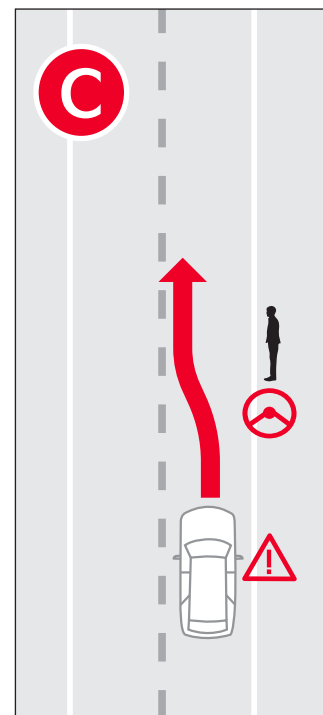

(Evasive Steering Assist)

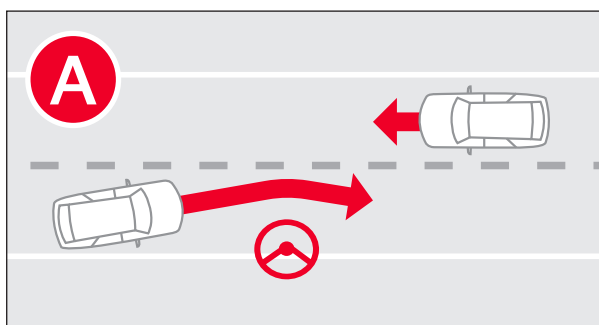 

(Lane Changing - Oncoming Traffic)

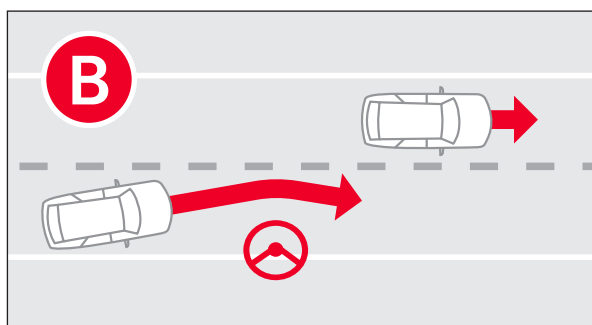 

(Lane Changing - Side)

REMINDER:

- Once the risk factors are not detected, these functions will deactivate, and the driver must steer the vehicle.

[Continued on next page](#)

Refer to the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Forward Collision-Avoidance Assist 2 (FCA2)^{†4}

[Continued from previous page](#)

FCA 2 Settings:



Driver Assistance -
Warning Methods
& Warning Volume

- FCA 2 features can be turned ON/OFF by going to the Vehicle Settings in the Infotainment System
- To access settings, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, and in DRIVING SAFETY, scroll through the selections and press the button to toggle the features on or off
- **Forward Safety Warning Timing:** When in DRIVING SAFETY, select STANDARD or LATE. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'
- **Warning Methods:** To adjust the Warning Methods settings, go to Vehicle Settings, Driver Assistance, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority

FCA 2 will become active when the:

- Ignition is on or the Power button is ON
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON

When engaged, FCA is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 5 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

BCA is designed to help detect approaching vehicles in the driver's blind spot areas and may warn the driver of a possible collision with a warning light and a warning sound. If a collision risk is detected when exiting a parallel space, BCA may assist with braking to help avoid a collision.

 
 


Blind-spot Collision Avoidance Assist (BCA)



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

Vehicle detection: **A** If another vehicle is detected within the BCA warning boundary **B**, an indicator may illuminate on the outside Rearview mirrors **B**, on the Instrument Cluster and the head-up display.*

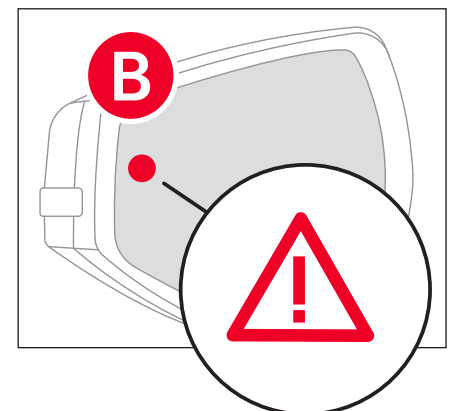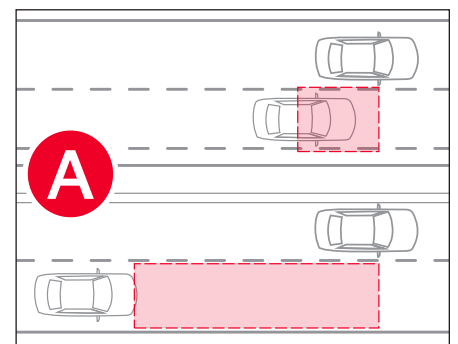

Collision warning: When the vehicle detection warning is on and the driver activates a turn signal, an indicator may flash on the outside rearview mirrors and the system may sound a warning, and the steering wheel may vibrate.*

Collision Avoidance Assist: When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it may help avoid collision by applying the brake.

[*Continued on next page*](#)

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 7 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{†4}

[Continued from previous page](#)

BCA Settings:



Driver Assistance -
Warning Methods
& Warning Volume

- To enable BCA, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter Vehicle Settings. Select DRIVER ASSISTANCE and then BLIND-SPOT SAFETY
- **Warning Methods:** To adjust the Warning Methods settings, go to Vehicle Settings, DRIVING SAFETY, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning, Blind-Spot Safety Warning Sound and Driving Safety Priority

QUICK TIPS

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- Collision warning of BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle at speeds above 6mph
 - Vehicle speed is above approximately 25 mph

REMINDERS:

- The BCA warning may sound when turning left into an intersection. Maintain a proper distance from oncoming vehicles
- BCA will not issue a warning if the vehicle speed is calculated to be 6 mph or more than the surrounding vehicles

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.



Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver under certain conditions. It may activate the Electronic Stability Control (ESC) and temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.

 
 


Rear Cross-traffic
Collision-Avoidance
Assist (RCCA)

When the RCCA rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster **B** and the Infotainment System screen. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

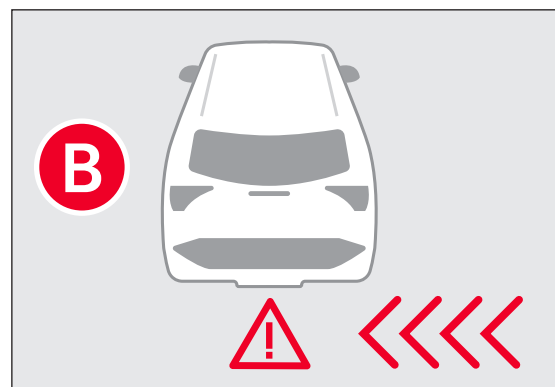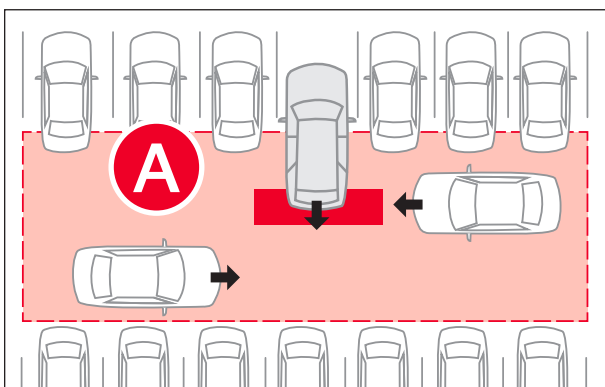

[Continued on next page](#)



Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{*†4}

[Continued from previous page](#)

RCCA Settings:



Driver Assistance -
Warning Methods
& Warning Volume

- **To turn RCCA on:** Press the **SETUP** key on the Infotainment System. Press **VEHICLE** to enter VEHICLE SETTINGS. Select DRIVER ASSISTANCE, PARKING SAFETY, and then REAR CROSS TRAFFIC SAFETY
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning

REMINDERS:


- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, RCCA will show a warning
- Adjusting the Warning Volume may adjust volume levels for other driving assist systems

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 5 in the Owner's Manual for more information.



Lane Keeping Assist (LKA)^{†4}

Lane Keeping Assist is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator will initially illuminate gray. It will remain gray when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the Lane Safety icon  will illuminate green.

If LKA detects that you are moving outside of your lane, LKA may give an audible warning and display a Lane Departure Warning on the Instrument Cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

 
When enabled in Vehicle Settings, press and hold the Lane Driving Assist button  to turn on or off.




Lane Keeping Assist (LKA)




Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

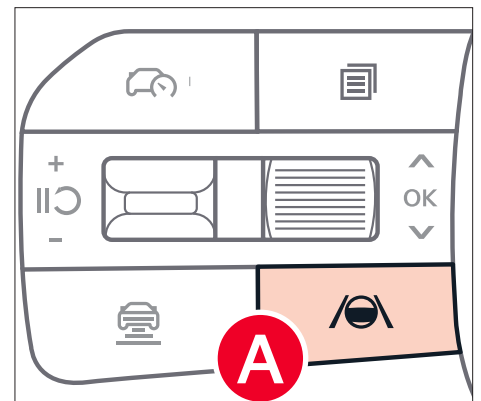


(Buttons located on steering wheel)

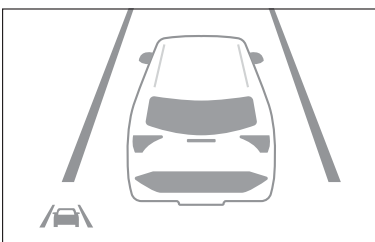 

 
When the front-view camera does not detect the lane traveled in the lanes are not illuminated

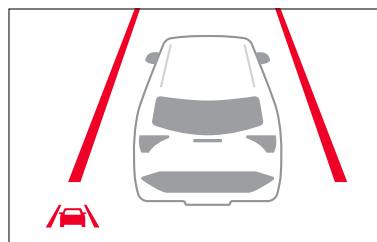

 If the vehicle detects the lane markings, the gray-colored lane lines on the cluster turns into white.

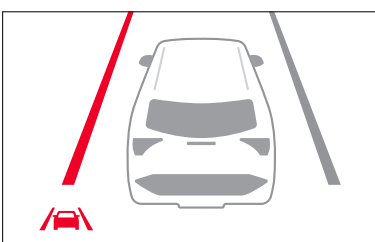

 When the front-view camera detects the vehicle moving outside of the lane being traveled in, a yellow indicator will illuminate either on the left or right lane (shown in both images above)

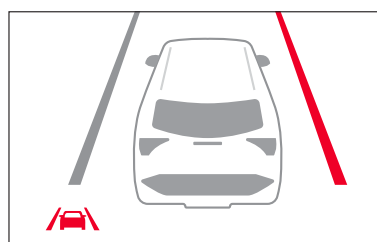

[Continued on next page](#)

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary. Actual Vehicle Settings steps may vary by model. Refer to section 5 in the Owner's Manual for more information.



Lane Keeping Assist (LKA)^{†4}

[Continued from previous page](#)

LKA Settings:

To enable LKA: Press the **SETUP** key on the Infotainment System. Press **VEHICLE**



Driver Assistance -
Warning Methods
& Warning Volume

to enter Vehicle Settings. Select DRIVER ASSISTANCE then LANE SAFETY

- **Warning Methods:** To adjust the Warning Methods settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust the Warning Volume, Haptic Warning, Lane Safety Warning Sound and Driving Safety Priority

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state
- Adjusting the Warning Timing and Warning Volume may adjust timing and volume levels for other driving assist systems



Blind-spot View Monitor (BVM)*†4

Blind-spot View Monitor is designed to display the rear and side of the vehicle blind spot areas in the Instrument Cluster **A** when the system is activated.

To turn BVM on: Press the **SETUP** key on the Infotainment System. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, BLIND SPOT SAFETY, then BLIND SPOT VIEW.

When operating the turn signal **B**, BVM displays video of the blind-spot view for the direction indicated.

 
BVM will not operate when the Power button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster.




Blind-spot View Monitor (BVM)



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit

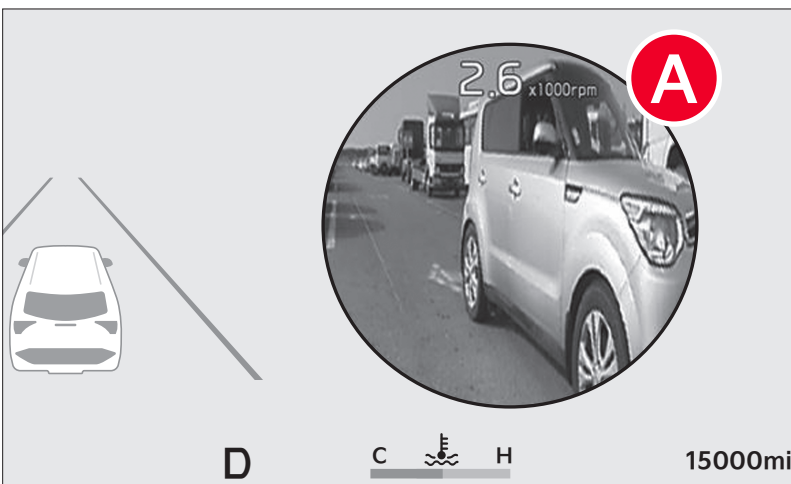

 (LCD display showing right side of vehicle)

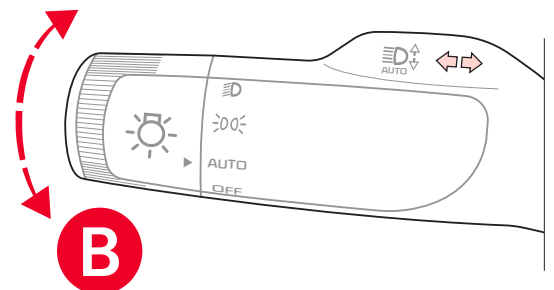

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.



Safe Exit Warning (SEW)*†4

Safe Exit Warning is designed to provide a warning message on the Instrument Cluster **A** and sounding an audible warning when a vehicle is detected **B**, approaching from behind, after your vehicle has stopped.

 
To turn SEW on: Press the **SETUP** key on the Infotainment System. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, BLIND SPOT SAFETY, then SAFE EXIT.




Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

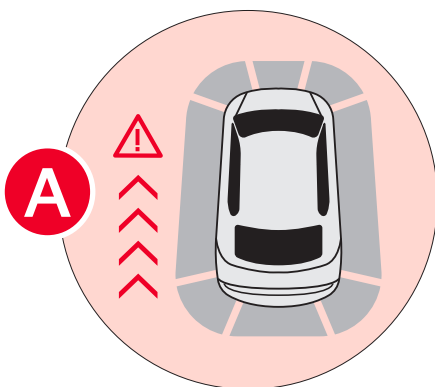

(Message on Cluster Display)

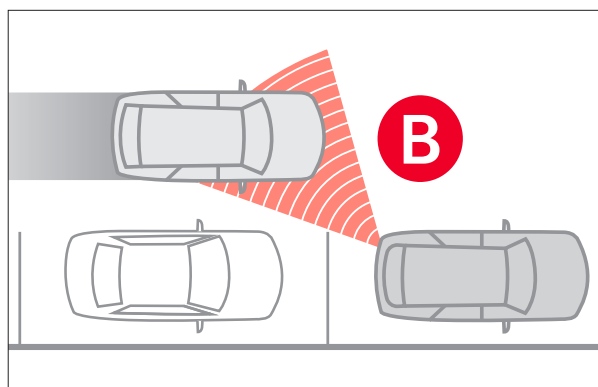 

QUICK TIPS

- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume and Driving Safety Priority
- Adjusting the Warning Volume may adjust volume levels for other driving assist systems

When engaged, these systems are not substitutes for safe driving and may not always detect objects or people around the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.



Lane Following Assist (LFA)^{†4}

Lane Following Assist (LFA) is designed to help the vehicle stay centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The instrument cluster indicator will initially illuminate gray **B** when turned ON. It will remain gray when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LFA icon will illuminate green **B**.

To turn LFA ON or OFF - Press the LFA button **C** on the Steering Wheel.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands-on Steering Wheel is not detected continuously, LFA will turn off with an additional warning message and audio message.

LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph



 
 
Lane Following Assist (LFA)



Driver Safety - Forward/Lane/Blind-Spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

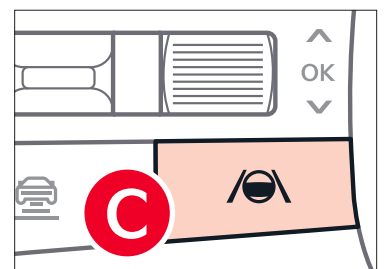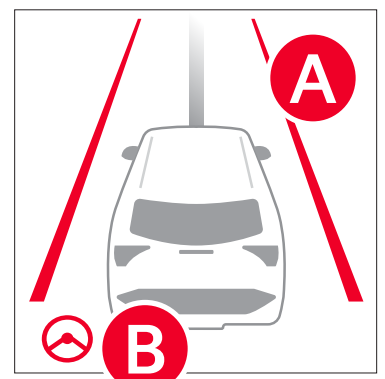

QUICK TIPS

- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume and Driving Safety Priority
- Adjusting the Warning Volume may adjust volume levels for other driving assist systems

LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions. Actual Vehicle Settings steps may vary by model. See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist 2 (HDA2)*†4

Highway Driving Assist 2 (HDA2) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.

Highway Lane Change Assist may assist in changing lanes, if the driver has turned on the turn signal and if the system detects the lane change is possible.



Highway Driving Assist (HDA)

 
 


Driver Convenience - Smart Cruise Control & Highway Driving Assist

When HDA2 is activated and the proper conditions are met, the Instrument Cluster indicator **A** will illuminate green. If proper conditions are not met, HDA2 will be in standby mode and the HDA2 indicator light **B** will illuminate gray. When in operation, and if both lanes are detected, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green **A**.

HDA2 will operate when these conditions are met:

- Driving on the main road of certain highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of certain highways while Lane Following Assist and Smart Cruise Control are operating

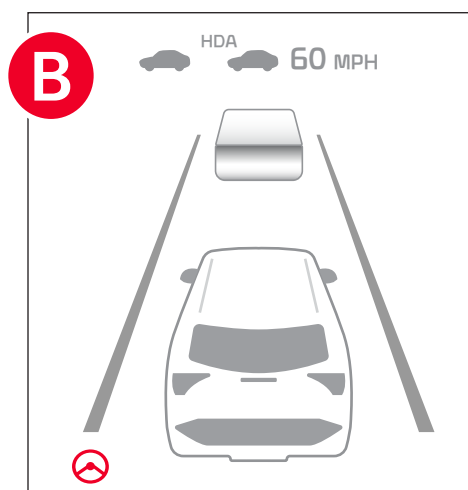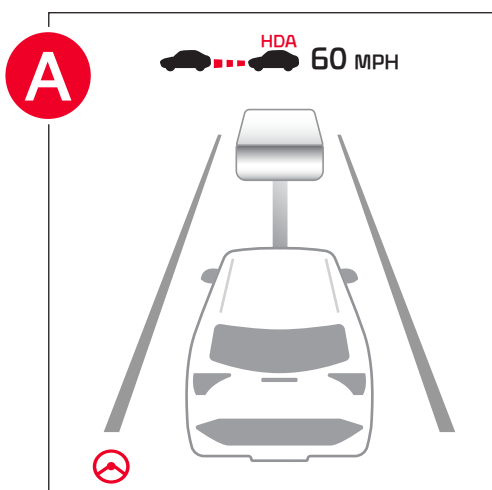

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist 2 (HDA2)^{*†4}

[Continued from previous page](#)

HDA 2 Settings:

- **To enable HDA2:** press the **SETUP** button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER CONVENIENCE, and select HIGHWAY DRIVING ASSIST
- Select HIGHWAY LANE CHANGE ASSIST to activate this feature
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning and Driving Safety Priority.



Driver Assistance -
Warning Methods
& Warning Volume

REMINDER: Adjusting the Warning Methods will adjust settings for other driver assistance systems.

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 6 in the Owner's Manual for more detailed information, limitations and conditions.



Forward/Side*/Reverse Parking Distance Warning (PDW)*†4

While driving at low speed, Forward/Side*/Reverse Parking Collision-Avoidance Assist is designed to detect pedestrians or objects and may warn the driver or assist with braking to help avoid a collision.

 
 
- When enabled, to turn PDW on, press the Parking Safety button **A** (LED illuminated). To turn PDW off, press the button **A** again (LED not illuminated)
- PDW will activate when the ignition is on/ready and the vehicle is in Drive or Reverse
- **Parking Distance Warning Auto On** - To set the Parking Distance Warning Auto On, at low speeds, enable it in Vehicle Settings in the Infotainment System
- **To enable PDW** - Press and hold the MODE button **B** on the Steering Wheel. You can also press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select PARKING DISTANCE WARNING AUTO ON



Forward/Reverse
Parking Distance
Warning (PDW)



Driver Assistance -
Parking Safety

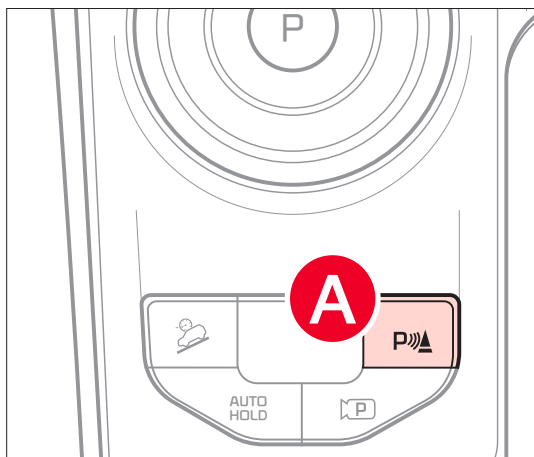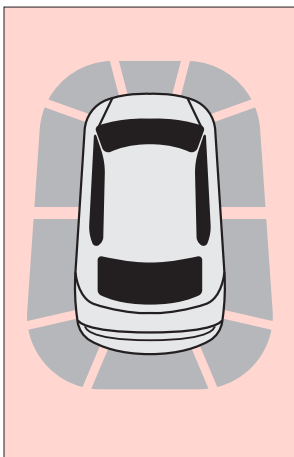

(Center Console)



(Buttons located on steering wheel)

[Continued on next page](#)



Forward/Side*/Reverse Parking Distance Warning (PDW)^{*†4}

[Continued from previous page](#)

QUICK TIP

- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume



Driver Assistance -
Warning Methods
& Warning Volume

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, PDW may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first
- Adjusting the Warning Volume may adjust volume levels for other driving assist systems

When engaged, PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. PDW may not detect every object in front of or behind the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

† LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



Smart Cruise Control (SCC)*†4


Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal. If SCC detects that the driver is attempting to overtake a vehicle in front, SCC may help by assisting acceleration.



Smart Cruise Control (SCC) with Overtaking Acceleration Assist



 
Driver Convenience - Smart Cruise Control & Highway Driving Assist

With SCC activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, depress the accelerator pedal or operate the  switch **A** to start moving the vehicle.

Smart Cruise Control will operate based on the driving style, such as vehicle to vehicle distance, acceleration and reaction speed.

To enable this feature, go to **SETUP**, VEHICLE, DRIVER ASSISTANCE, SMART CRUISE CONTROL and select BASED ON DRIVING STYLE.

To disable, press and hold the Vehicle Distance button **B**.

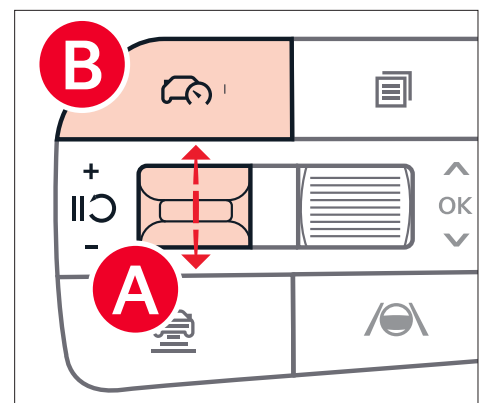

[Continued on next page](#)

Images are for illustrative purposes only and may vary on actual vehicle.




Refer to section 6 in the Owner's Manual for more information.

 
 


Smart Cruise Control (SCC)*†4


[Continued from previous page](#)

To turn on SCC and set/adjust SCC speed:

- Press the button  **A** to turn system on and set speed. The CRUISE indicator will illuminate on the instrument cluster
- **Increase speed:** Press the  switch **B** up to increase the set vehicle speed
- **Decrease speed:** Press the  switch **B** down to decrease the set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Panel screen **C**

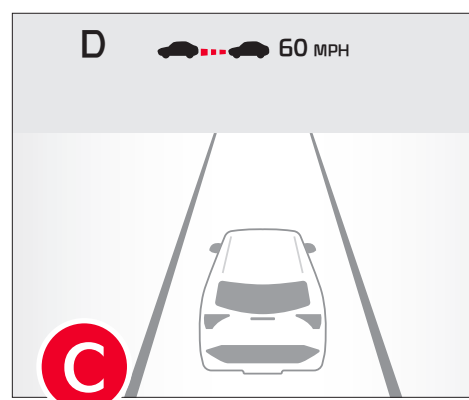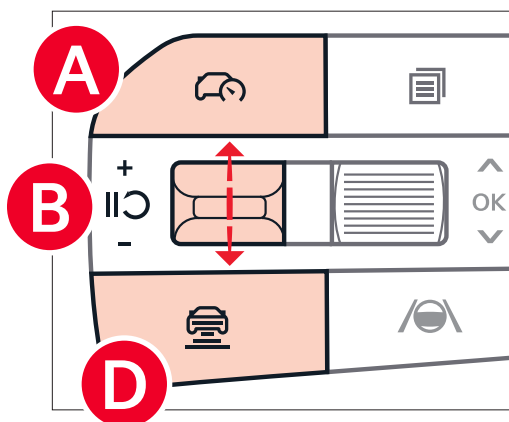

To pause or resume SCC operation: Press the pause/resume button  **B**. The SCC indicator on the Instrument Panel will turn off/on.

To set the vehicle-to-vehicle distance: Press the Vehicle Distance button  **D** on the steering wheel. The image on the LCD screen will change when scrolling through the settings.

To turn SCC system OFF: Press the Driving Assist button  **A**.

[Continued on next page](#)

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.



Smart Cruise Control (SCC)^{*†4}

[*Continued from previous page*](#)

QUICK TIPS

- Pressing the brake pedal cancels the SCC operation
- For SCC to operate:
 - When no vehicle is in front, you must be traveling at 5 mph minimum
 - When following a vehicle, there is no minimum speed requirement
 - If your vehicle speed is between 0-20 mph when pressing the Driving Assist button to turn SCC on, the set speed will be set to 20 mph

REMINDERS:

- SCC will not activate until the brake pedal has been depressed at least once after the ignition is on or engine started
- When following a vehicle, SCC will automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of Drive, EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- It is the responsibility of the driver to always check the speed and distance to the vehicle ahead
- SCC may decelerate if a surrounding vehicle intervenes in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead



Navigation-based Smart Cruise Control (NSCC)*†4

While Smart Cruise Control is operating, Navigation-based Smart Cruise Control may automatically adjust vehicle speed when driving on certain highways by using road information from the navigation function.

To enable NSCC, it must be turned on with the SCC activated, and the vehicle is driving on a limited/ controlled access highway. The NAV icon **A** will then illuminate white on the Instrument Cluster.

To turn NSCC on, refer to SCC Settings on the previous pages.

When NSCC detects a curve ahead, activates, and reduces the vehicle speed, the NAV icon **A** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

Autoset* (Automatic change of set speed): To enable autoset, go to ISLA settings in the Vehicle Settings. When it is activated, the AUTO icon will appear on the Instrument Cluster **B**.

REMINDERS:

 
 
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system
- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways



Navigation-based Smart Cruise Control (NSCC)




Driver Convenience - Smart Cruise Control & Highway Driving Assist

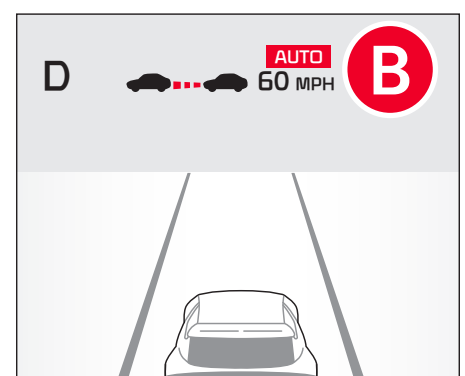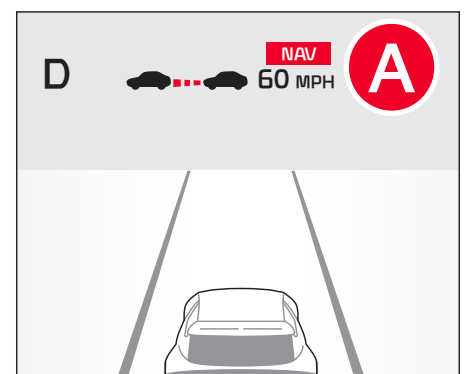

See section 6 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide. NSCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.



Driver Attention Warning (DAW) / Leading Vehicle Departure Alert* (LVDA)^{†4,5}

Driver Attention Warning (DAW) is designed to alert the driver if it detects inattentive driving patterns and, in certain situations, can give a warning signal to take a break. A message, “Consider taking a break” , and a warning sound, appears on the LCD, to suggest the driver take a break when DAW detects that the driver’s attention level has become low.



**Driver Attention
Warning (DAW)**



**Leading Vehicle
Departure Alert
(LVDA)**



**Driver Assistance -
Driver Attention
Warning & Leading
Vehicle Departure Alert**

Leading Vehicle Departure Alert

(LVDA), a part of DAW, is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped, and it detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, a second message will appear on the Instrument Cluster.



[Continued on next page](#)

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Refer to section 5 in the Owner’s Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

 


Driver Attention Warning (DAW) / Leading Vehicle Departure Alert* (LVDA)^{†4,5}

[Continued from previous page](#)

DAW/LVDA Settings:

- DAW/LVDA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- **To access DAW/LVDA Settings** - Press and hold the MODE button  **A** on the Steering Wheel. You can also press the **SETUP** key or the onscreen SETUP button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVER ATTENTION WARNING and select LEADING VEHICLE DEPARTURE ALERT, THEN INATTENTIVE DRIVING WARNING

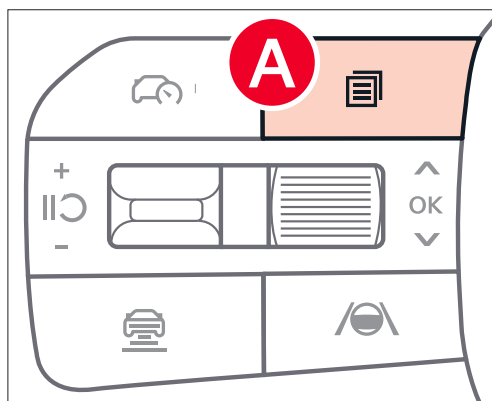

REMINDER: Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the ENGINE START/STOP button is in the on position.

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

 
Refer to section 5 in the Owner's Manual for more information.



Rear View Monitor (RVM)^{†4}

Rear View Monitor (RVM) is a supplemental system that displays the view behind the vehicle through the infotainment system screen while the vehicle is in Reverse.

To turn RVM on/off, press the Parking/View button **A** on the center console.

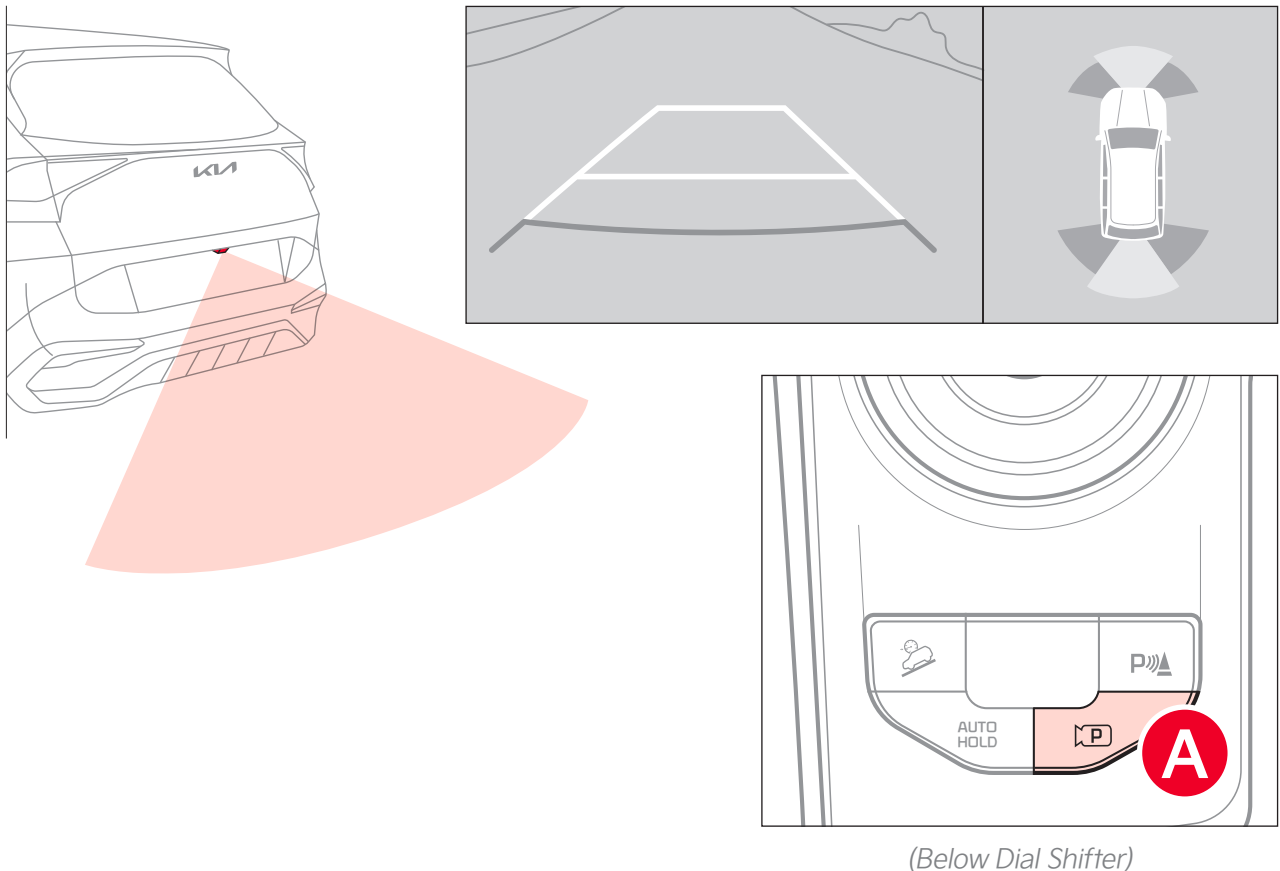

(Below Dial Shifter)

[Continued on next page](#)

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.


The images shown are for illustration purposes only and may not reflect actual operation. Rear View Monitor may not display every object behind the vehicle.



Rear View Monitor (RVM)^{†4}

[Continued from previous page](#)

RVM Settings:

- **To access Camera Settings** - Press and hold the MODE button  **A** on the Steering Wheel. You can also press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter VEHICLE SETTINGS. Select DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS
- **To adjust WARNING METHOD settings:** go to Vehicle Settings on the Infotainment System by pressing **SETUP**, VEHICLE, DRIVER ASSISTANCE, and WARNING METHODS. Under WARNING METHODS, you can select PARKING SAFETY PRIORITY on or off



 
Driver Assistance -
Warning Methods
& Warning Volume

The Rear View Monitor activates when the:

- Engine Start/Stop button is in the ON position
- Gear shifter is in the Reverse position

REMINDERS:

- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Infotainment System. All other features are disabled
- Adjusting the Warning Timing and Warning Volume may adjust timing and volume levels for other driving assist systems
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens

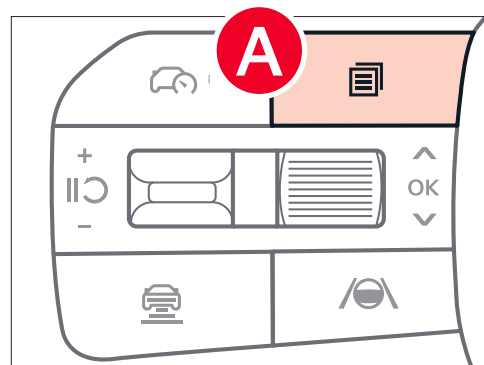

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Rear View Monitor may not display every object behind the vehicle.



 
Surround View Monitor (SVM)^{†4}

Surround View Monitor uses the wide view cameras and displays images around the vehicle through the infotainment system screen to assist with parking.

- **To turn on the Surround View Monitor** press the Parking/View button **A**. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen
- **Surround View Monitor Auto On:** To enable, go to Vehicle Settings on the Infotainment System by pressing **SETUP**, VEHICLE and, select DRIVER ASSISTANCE, PARKING SAFETY, SURROUND VIEW MONITOR AUTO ON. The front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in Drive

To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating.

Warning Methods: To adjust the Warning Method settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume and Driving Safety Priority.

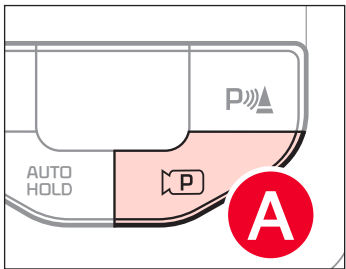

(Below Dial Shifter)

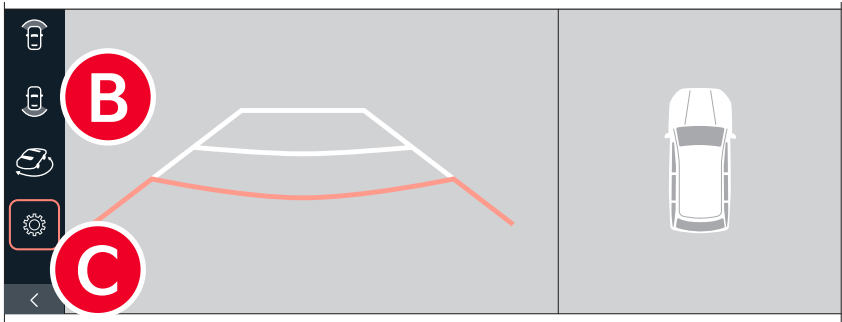 


Image is for illustrative purposes only and may not reflect actual feature or operation.

QUICK TIP

- The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.

REMINDER: The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance.


When engaged, Surround View Monitoring (SVM) is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear. See section 6 in the Owner's Manual for more information.



Reverse Parking Collision-Avoidance Assist (PCA)*†4

 
 
Reverse Parking Collision-Avoidance Assist is designed to detect pedestrians or objects behind the vehicle and may warn the driver or assist with braking to help avoid a collision while the vehicle is backing up.

PCA Settings:

To turn PCA on - Press and hold the MODE button  **A** on the Steering Wheel. You can also press the **SETUP**

key or the onscreen SETUP button on the Infotainment System. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, PARKING SAFETY and BACKWARD SAFETY.

Warning Methods: To adjust the Warning Method settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume and enable the Haptic Warning.

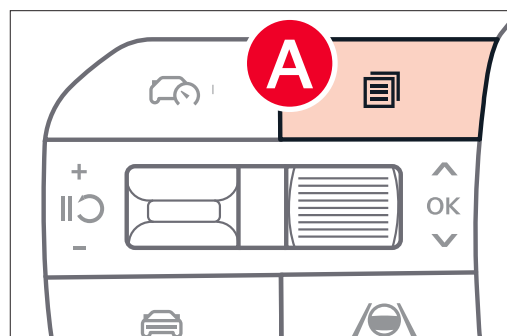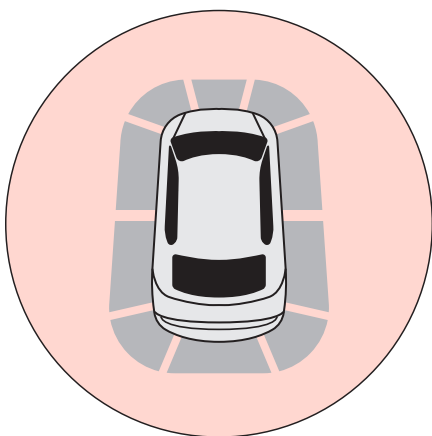

(Buttons located on steering wheel)

REMINDER: Adjusting the Warning Volume may adjust volume levels for other driving assist systems. Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Reverse Parking Collision-Avoidance Assist (PCA)



Driver Assistance - Warning Methods & Warning Volume

 


Driver Assistance - Parking Safety



Instrument Cluster Illumination Control

With parking lights/headlights on, press switch **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

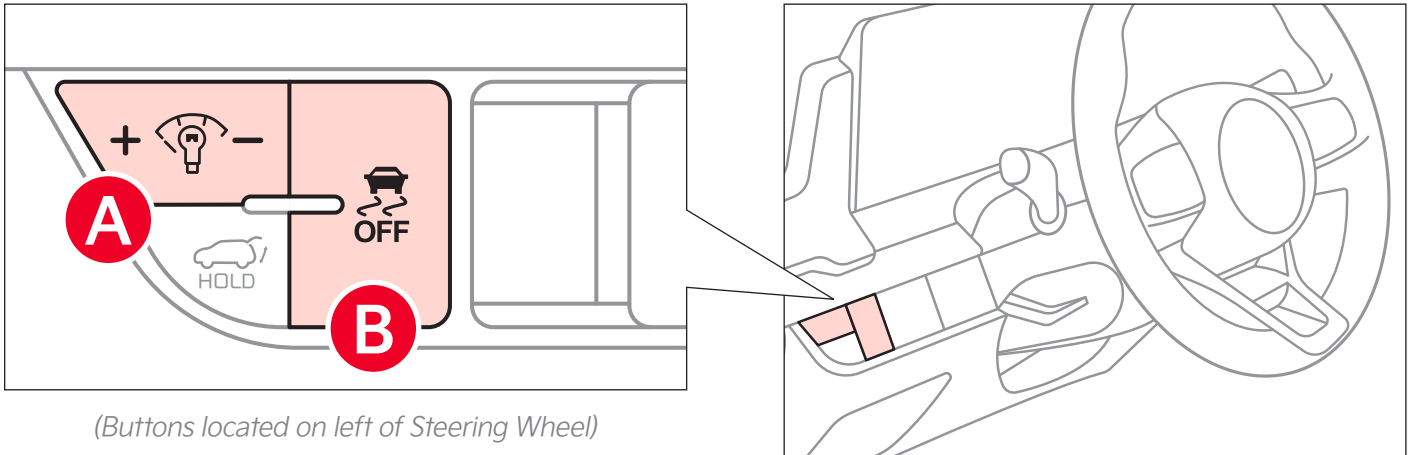

REMINDER: This control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 4 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Electronic Stability Control (ESC)^{†6}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press and hold the ESC button **B** turn ESC off/on.

REMINDERS:

- ESC is turned on by default at vehicle startup. When ignition is cycled, ESC will turn on again
- The ESC Indicator Light in the Instrument Cluster will illuminate whenever the ESC is in operation

Refer to section 5 in the Owner's Manual for more information.



Hill-start Assist Control (HAC)^{†6}

HAC is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator — this is normal operation
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDERS:

- HAC does not operate when the gear shift is in the Park or the Neutral position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service



 
Power Liftgate Open/Close Button^{†11*}

Open: Press and hold briefly the **A** button for approximately one second to open the liftgate.




**Settings -
Power Liftgate**

Close: Press and hold the **A** button until liftgate is completely closed. If the button **A** is released while closing, the power liftgate will stop and a warning chime will sound.

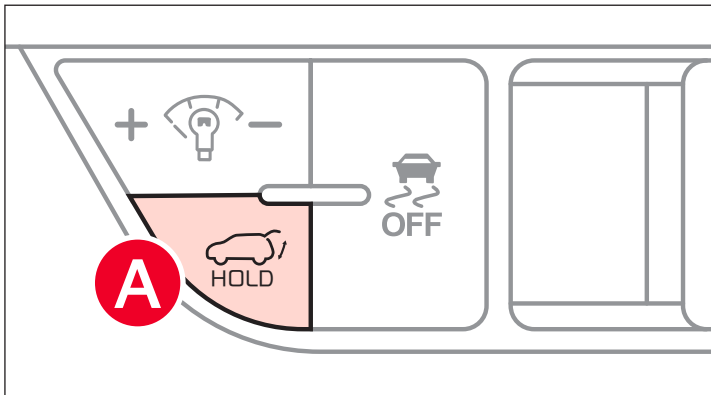

 (Button located to the left of the steering wheel)

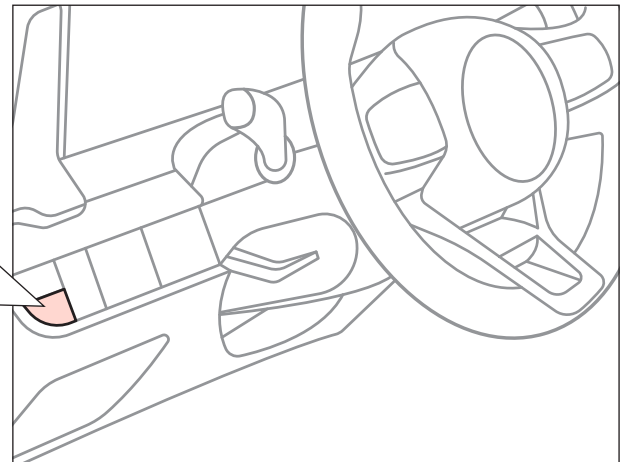

Refer to section 4 in the Owner's Manual for more information.



Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate the Driver's Window Auto Up*/Down

QUICK TIP

- Press button again to stop Auto Up/Down function.

B Press to Lock/Unlock All Doors (also unlocks Fuel Door)

C Press to disable Rear Passenger Window

 
QUICK TIPS

- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- When pressed **C**, the rear passengers cannot operate the window controls.
- When closing, be mindful of any objects or persons

Button configuration may vary depending on vehicle model.

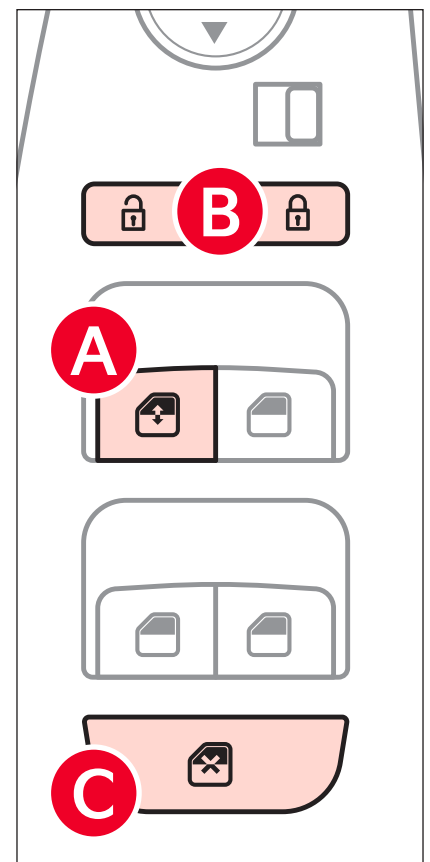

(Driver's Door Panel)

Automatic Door Lock/Unlock

 
Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the Park position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock on/off.

Refer to section 4 in the Owner's Manual for more information.



Power Outside Mirrors*

- A** Move the button to the right or left to select the mirror to adjust
- B** Press button arrows left/right or up/down to adjust mirror position

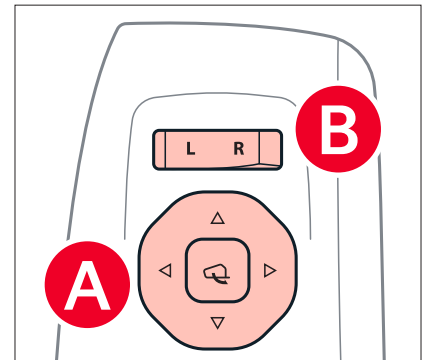

(Driver's Door Panel)

Heated Outside Mirrors*

 
Mirror heaters automatically turn on/off at the same time the Rear Window Defroster is turned on/off. The Rear Window Defroster button* is located on climate control system panel.

Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

- If needed, pull the mirror firmly until it folds.

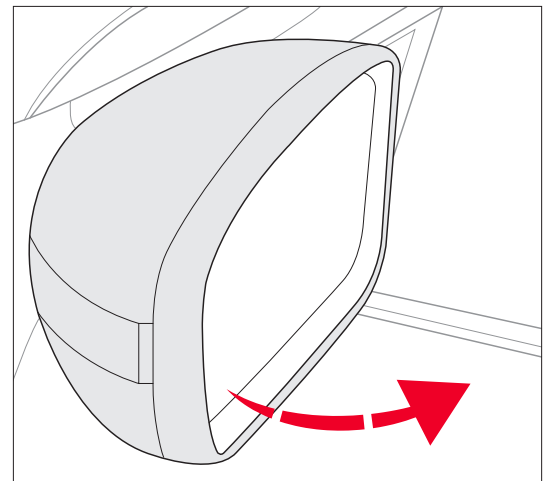

Refer to section 4 in the Owner's Manual for more information.



Engine Start/Stop Button^{*†7}

To start the engine:

 
1. Depress the brake pedal
2. Press the Engine Start/Stop button while the gear shift is in Park or Neutral



Engine Start/Stop Button

To turn the engine OFF: Press the ENGINE START/STOP button.

To use the Engine Start/Stop button, you must have the Smart Key fob on your person or inside the vehicle.

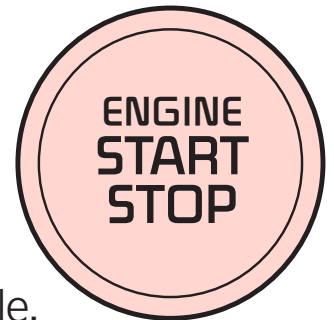

QUICK TIPS

- To use electrical accessories:
ACC position
 - When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once
- On position**
 - When already in the ACC position and without depressing the brake pedal, press the Engine Start/Stop button again
 - When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice
- Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the Engine Start/Stop button, hold the fob up against the Engine Start/Stop button and press and hold until the engine starts
- Do not turn the vehicle off by pushing the Engine Start/Stop button while the vehicle is in motion. If the vehicle has been turned off the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

 
Refer to section 5 in the Owner's Manual for more information.



Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams on
- Pull lever to flash Headlights / High Beams

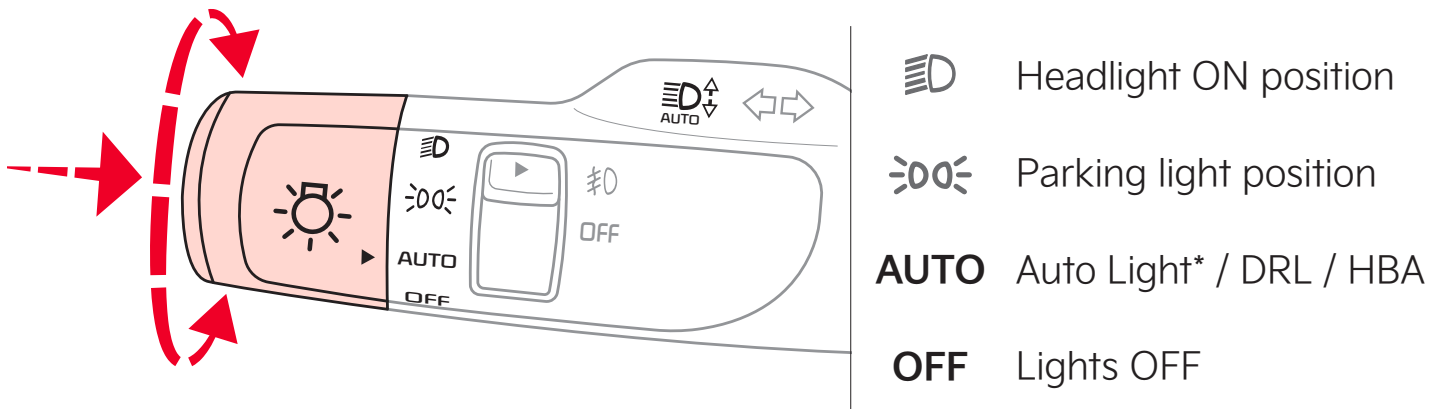

AUTO Light*: When the light switch is in the AUTO Light position, the tail lights and headlights will turn on/off automatically, depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL)

DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/ Stop button is in the ON position and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Engine is turned off
- Switch is in the OFF position


REMINDER: DRL only operates during the daytime.

Refer to section 4 in the Owner's Manual for more information.



 
High Beam Assist (HBA)



High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position **A** and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

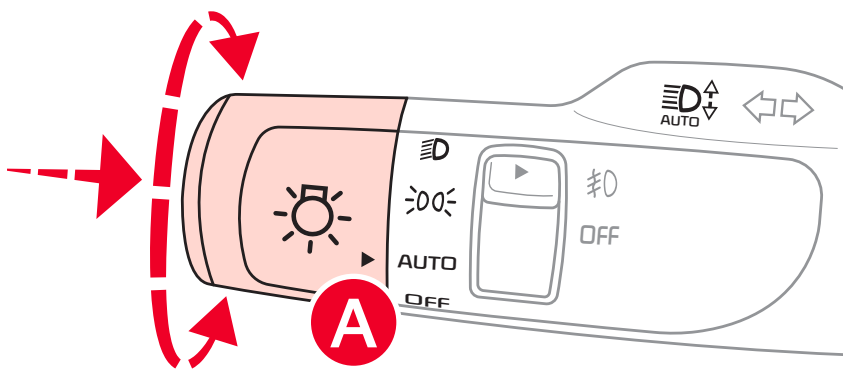

High Beam Assist (HBA)



-  Headlight ON position
-  Parking light position
- AUTO** Auto Light* / DRL / HBA
- OFF** Lights OFF

REMINDERS:

- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously
- If the light switch is switched to the headlight position, HBA will turn off and the low beams will be on continuously

Refer to section 4 in the Owner's Manual for more information.

 


Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights on/off

REMINDER: Headlights must be ON for fog light operation.

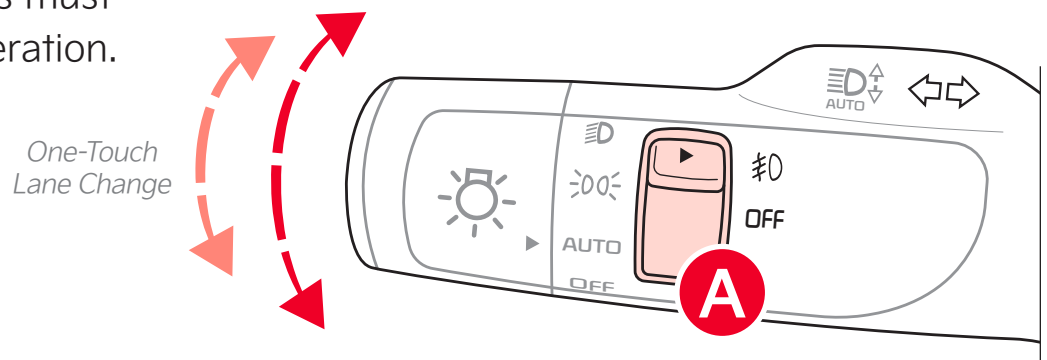

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever up/down for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to the User Settings* in the Instrument Cluster and select Lights, then One-Touch Turn Signal.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

For more information on the User Settings Mode, please refer to section 4 in the Owner's Manual.



Windshield Wipers and Washers

Front Wiper & Washer

To operate front wipers and washers:

 
- Move lever Up/Down to change Wiper modes
- Press INT switch **A** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe



**Wipers and
Wiper Stalk**



**Wiper Service
Mode**

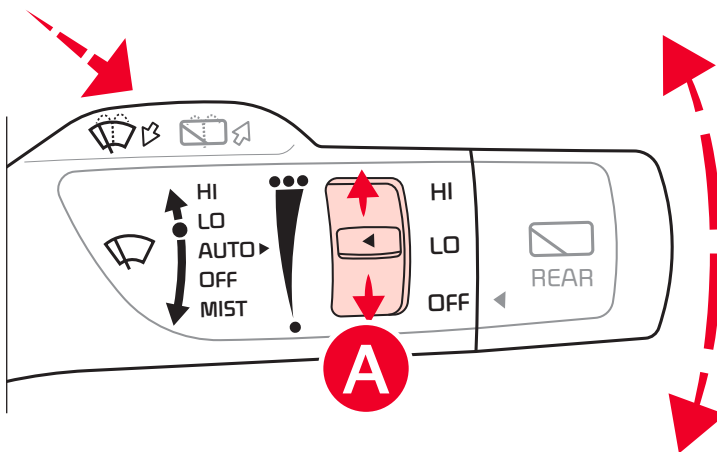

HI: High wiper speed
LO: Slow wiper speed
INT: Intermittent wipe
AUTO> : Auto control wipe
OFF: Wiper off
MIST: Single wipe

QUICK TIPS

- Moving switch **A** to HI increases intermittent wipe frequency and wipe speed. Moving switch **A** to LO decreases frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use



Rear Wiper and Washer

To operate rear wipers and washers:

 
- Rotate Rear Wiper switch to change Wiper modes
- Push the Lever to spray and wipe



**Wipers and
Wiper Stalk**



**Wiper Service
Mode**

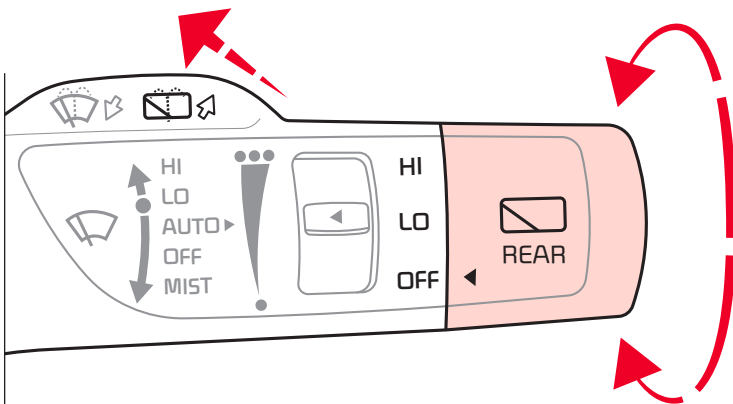

HI: Continuous wipe

LO: Slow wipe

OFF: Wiper off

QUICK TIP

- LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers.

Refer to section 4 in the Owner's Manual for more information.



 
Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, press the lock-release lever **A** down and adjust to the desired angle **B** and then the distance **C**.



**Tilt/Telescoping/
Heated Steering
Wheel**

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

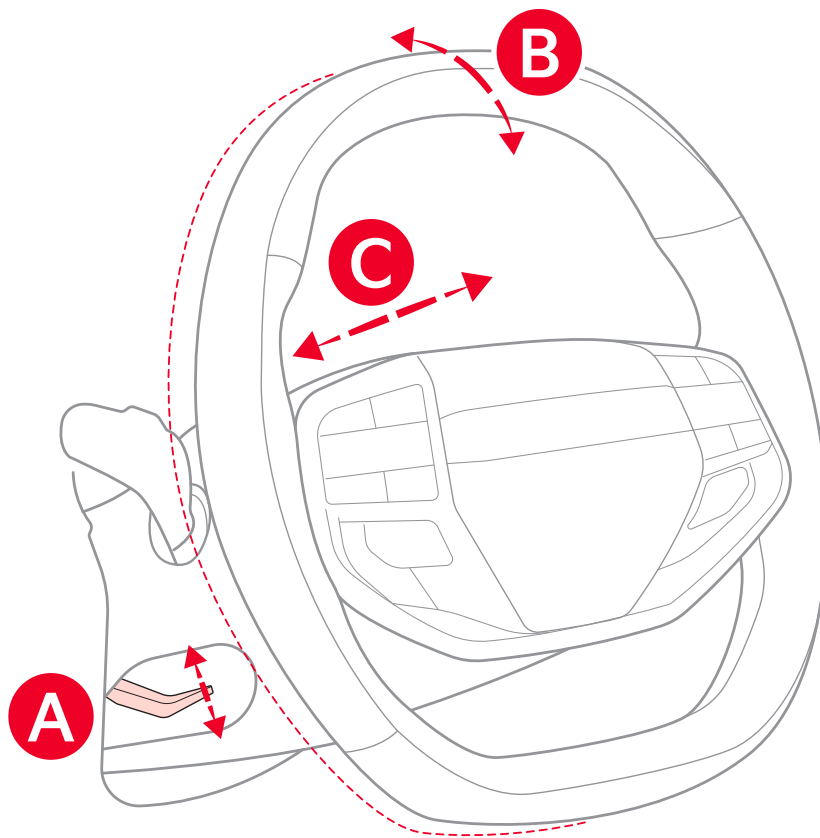

QUICK TIP

- It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle. Refer to section 4 in the Owner's Manual for more information.



Heated Steering Wheel*

While the Engine Start/Stop button is in the ON position, press the Heated Steering Wheel button **A** to turn the steering wheel heater on/off. The steering wheel heater will turn off automatically in 30 minutes, or when button **A** is pressed again to deactivate.



Tilt/Telescoping/
Heated Steering
Wheel



(Center Console)

QUICK TIP

- If ignition is cycled, the Heated Steering Wheel turns off. Press button again to turn on.

 
REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 4 in the Owner's Manual for more information.



Bluetooth® Wireless Technology^{†2,16}

- A Voice Recognition button:** Press to activate voice recognition/bring up menus/set destinations (if equipped with navigation) with minimal voice command prompts from the system. Press and hold to exit voice recognition
- B Volume button:** Press up/down to raise/lower speaker volume
- Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- C Call/End Call button:** Press to receive/place/end calls. If no phone is paired, press the button to pair a phone

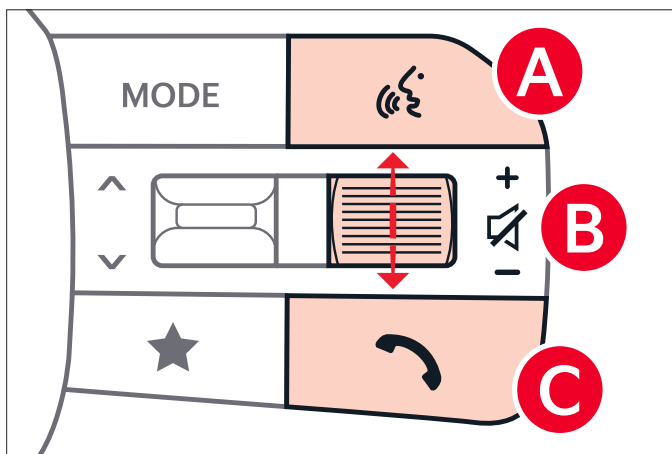

(Buttons on right side of steering wheel)

QUICK TIPS

- When using the voice command feature, wait for the system to BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Functionality may differ from one phone to another because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming

[Continued on next page](#)

For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® wireless technology FAQs, go to www.kia.com, Owners section.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Bluetooth® Wireless Technology†2,16

[Continued from previous page](#)

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle’s Quick Start Guide.

QUICK TIP

 
- During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call

When using the voice command feature, wait for the system to beep before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

- **Option 1:** Press the Call/End Call button **A** (system displays the call history with the most recent calls)
- **Option 2*:** Press the Voice Recognition button **B** (system will BEEP to indicate it is ready for call placement). Then say the command “Call {name}” or “Dial {number}”

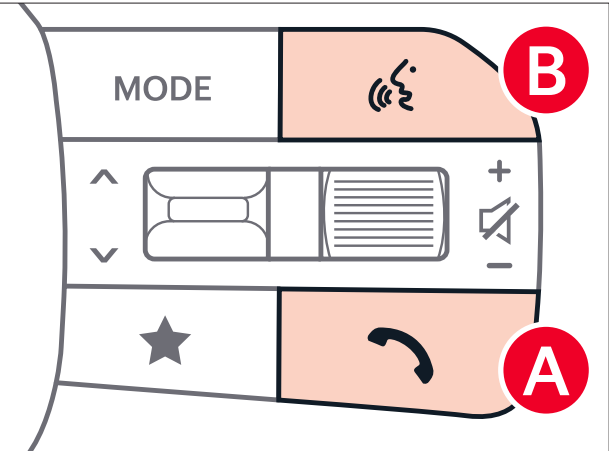

(Buttons on right side of steering wheel)

Your vehicle’s steering wheel buttons may differ from those in the illustrations. See your Owner’s Manual for more details.

REMINDER: Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device.

For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

† LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



Voice Recognition^{†2,16}

The system may have difficulty understanding some accents or uncommon names. Improve the

performance by making a few simple

changes to your phone contacts, listed below. To help optimize the

Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)



Voice Recognition Tips

QUICK TIPS

- The system may register or pair multiple *Bluetooth*® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth*® Music Streaming: If the *Bluetooth*® music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Opened windows, Sunroof, weather (wind/rain), or an A/C operating at higher speeds can interfere with Voice Recognition. Closing windows/sunroof and turning off A/C may help voice recognition register your voice
- Press the Voice Recognition button and say “Help” to get a list of available commands



Steering Wheel Audio Controls^{†3, 15, 16}

A Audio Mode button: Press to cycle through FM/AM/SiriusXM®/ Media modes. Press to turn power on; Press and hold to turn power off; Press and hold to go to Advanced Setting / Steering Wheel mode (Kia Connect^{†1} with Smart Navigation*)

 


Steering Wheel Controls



Button Settings

- B Seek/Preset button**
Radio Mode (FM/AM/SiriusXM®*): Press to advance through Preset Stations.
Media Modes: Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind (except for *Bluetooth*® Audio)
- C Volume button:** Press up/down to raise/lower volume
Mute button: Press to mute all audio (in some Media modes the media pauses when pressed)
- D Custom button:** Press to access user-selected feature. Press and hold the button to set the button to one of the features available

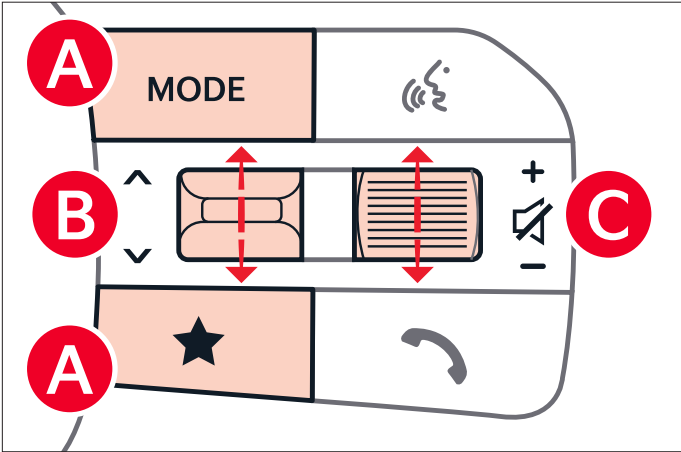

QUICK TIP

- Pressing the Audio Mode button **A** for more than 1 second will turn Audio Mode ON/OFF.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations. Refer to section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide for more information.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

[†] LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



Android Auto™ Setup†3

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.



**Phone Projection -
Apple CarPlay /
Android Auto**



**Device
Connections &
Settings**

Wireless Connection setup for Android Auto™:

1. Press the **SETUP** key on the infotainment system
2. Press DEVICE CONNECTIONS
3. Press PHONE PROJECTION
4. Press ANDROID AUTO OPTIONS
5. Press ENABLE ANDROID AUTO
6. Then under DEVICE CONNECTIONS, press DEVICE CONNECTIONS again and ADD NEW
7. On your smartphone, turn WiFi and Bluetooth on, and select the Vehicle Name that's on the Infotainment System screen
8. Confirm the verification code
9. When connecting to Android Auto for the first time, check the pop up window displayed on the Infotainment System screen and press YES.
10. On the smartphone, agree to Enable Android Auto
11. Go to the Infotainment System home screen and select Android Auto to see the Android Auto™ supported apps

Refer to the Car Infotainment System Quick Reference Guide for more information. Refer to this guide on how to connect via USB cable and for compatibility requirements.



Apple CarPlay® Setup^{†3}

Apple CarPlay® Setup for iPhone:

1. On the Infotainment System home screen, press SETUP
2. Press DEVICE CONNECTIONS
3. And DEVICE CONNECTIONS again
4. Press ADD NEW
5. On your smartphone, turn WiFi and Bluetooth on, and select the Vehicle Name that's on the Infotainment System screen
6. Confirm the verification code
7. When connecting to Apple CarPlay for the first time, check the pop-up window displayed on the Infotainment System screen and press YES.
8. On the smartphone, agree to Enable Apple CarPlay
9. Go to the Infotainment System home screen and select Apple CarPlay to see the Apple CarPlay supported apps



Phone Projection -
Apple CarPlay /
Android Auto



Device
Connections &
Settings

 
Refer to the Car Infotainment System Quick Reference Guide for more information. Refer to this guide on how to connect via USB cable and for compatibility requirements.



Kia Connect Activation^{*†1}

Follow these steps to activate your Kia Connect system:

1. To enter the activation screen on the Infotainment System:
 - a. Press the **SETUP** key from the touch panel
 - b. Press the DATA/NETWORK
 - c. Under Kia Connect, press ACTIVATE
2. Read and agree to Terms of Service and Privacy Policy then press SUBMIT
3. Enter phone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to access your verification code via text or email:
 - a. Check your text message or email for verification code. Click the link, in your text or email, to open the activation page where you will be instructed to create a new account
 - b. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code. Enter the code in the Infotainment System and press ACTIVATE
 - c. On your phone, go back to the page with your verification code and press "I have entered my verification code." A link will be provided to download the Kia Access⁺² app from your app store. After installing the app, log in and enjoy

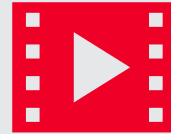

**Kia Connect
Activation**



**Kia Connect &
Kia Access App**

REMINDER: This vehicle is equipped with over-the-air system updates. Download map updates for the navigation system by going to update.kia.com. Check for updates that are generally available twice a year.

For further Kia Connect information, refer to the Car Infotainment System Quick Reference Guide. Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.




Kia Connect Assistance^{*†1}

 
Virtual Assistant - Press to connect to a virtual assistant to hear information about the Kia Connect features



Kia Connect Assistance

Kia Connect  **A** - Connect to the Kia Connect Call Center

Roadside Assist  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services

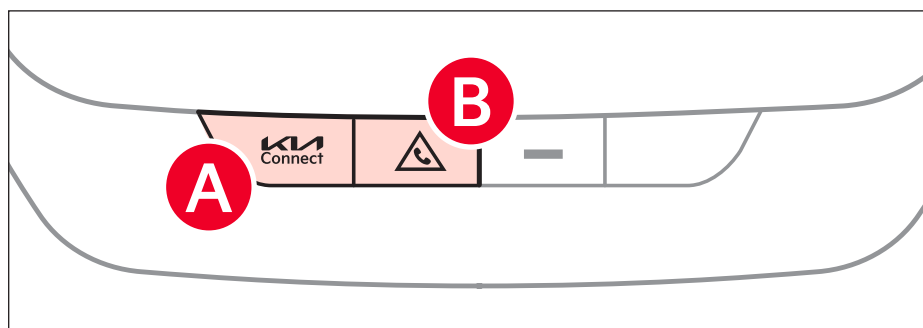

(Buttons on overhead lamp console)*

REMINDER: These buttons may be located in the rearview mirror or the overhead console.

For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, Kia Connect Assistance buttons are located on the Rearview Mirror.



Kia Access^{†2} App Download

Go to an app marketplace to download the new Kia Access App. Once downloaded, make sure you register your vehicle and set up an account (refer to Kia Connect^{†1} Activation). Get to know your new Kia and the available convenient features on the app.



**Kia Connect App
Overview**



QUICK TIP

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use Kia Connect^{†1}. If these conditions are not met, voice commands may fail or will take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal

Download the Kia Access App
by clicking this link.



**Download the Kia
Access App**



Kia Access^{†2} App Features Guide

 
The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings.

Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Dealer Settings
- Manage Vehicles and Profiles

Kia Access App Features Guide.

Click this link to access the guide.

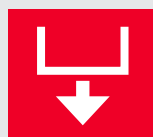

**View/Download
Kia Access App
Features Guide**

 
Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information on its availability.

Kia Access App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.



Kia Connect Infotainment System* (non-Navigation)^{†1, 3, 8, 15}

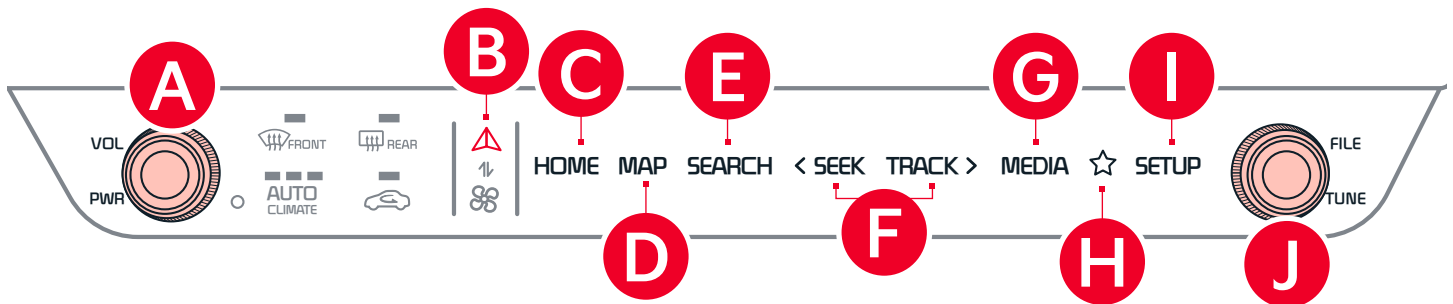


- A** Press to Power ON/OFF. Rotate to adjust Volume
- B** Infotainment System/Climate Control mode switching button
- C** Press to display the **HOME** screen
- D** **Map:** When a phone is paired and connected via phone projection, press to display the phone's native map screen. When a phone is not connected, it will display the phone projection setting screen
- E** Press to **SEARCH** media tracks
- F** Press briefly to do the following:
- FM/AM mode: Play the previous/next frequency
 - SiriusXM® mode: Change the channel
 - MEDIA mode: Change the track, file or title
- Press and hold to do the following (over 0.8 seconds):
- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
 - MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth®* Audio)
- G** Press to select **MEDIA** mode
- H** Press to select **Custom** (set) menu
- I** Press to display the **SETUP** mode
- J** In Radio/SiriusXM®/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file



**Kia Connect
Infotainment
System**



 Kia Connect with Navigation* - FM/AM/ SiriusXM®/Media (USB, *Bluetooth*® Audio)^{†1, 3, 8, 15}

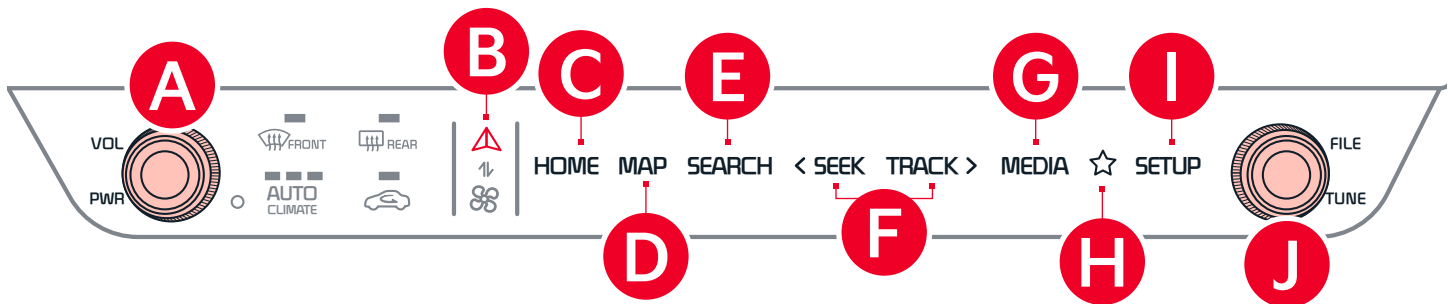

- A** Press to Power ON/OFF. Rotate to adjust Volume
- B** Infotainment System/Climate Control mode switching button

- C** Press to display the HOME screen
- D** Press to display the MAP screen for the current position mode

- E** Press to SEARCH media tracks

- F** Press briefly to do the following:
- FM/AM mode: Play the previous/next frequency
 - SiriusXM® mode: Change the channel
 - MEDIA mode: Change the track, file or title

Press and hold to do the following (over 0.8 seconds):

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*® Audio)

- G** Press to select MEDIA mode

- H** Press to select Custom (set) menu

- I** Press to display the SETUP mode

- J** In Radio/SiriusXM®/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file



**Kia Connect
Infotainment
System**




**Climate Control -
Switchable
Controller**

[Continued on next page](#)



Kia Connect with Navigation* - FM/AM/SiriusXM®/Media (USB, *Bluetooth*® Audio)[†]1, 3, 8, 15

[*Continued from previous page*](#)




Infotainment System / Climate Control mode switching button - Press to toggle between Infotainment System and Climate Control Modes. Press and hold the Climate Control button  to set the default button display mode.

To adjust the sound settings (Position, Volume Tone, Priority, Navigation Volume, Advanced, Default, Beep) from any audio mode:

1. Press the SETUP key on the audio control unit or the onscreen SETUP button
2. Select the onscreen SOUND button. Select the menu item to change settings
3. Use the onscreen buttons to adjust settings

Radio Presets: To save a preset, press and hold the desired slot. This saves the current station in the selected slot.

SiriusXM® Smart Favorites: In Radio mode, choose SiriusXM®, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.


Custom Button  - To program the Custom Button to one of the available features, press and hold the SETUP button, then press the Custom Button . Select one of the available features you would like the Custom Button  to open.

[*Continued on next page*](#)

Kia Connect with Navigation* - FM/AM/ SiriusXM®/Media (USB, *Bluetooth*® Audio)[†]1, 3, 8, 15

[Continued from previous page](#)

Map/software updates - To keep your map and software up to date, Kia provides over-the-air updates, free of charge. You can also visit the official Kia update webpage at <https://update.kia.com>. Note, visiting a dealer for software update may include an additional charge.



**Benefits of
Over The Air (OTA)
Updates**

QUICK TIPS

- The system can register or pair multiple *Bluetooth*® devices
- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*® Audio, the overall volume is dependent on your device’s volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Prolonged use of the Infotainment System in ACC mode may drain the vehicle’s battery
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge

For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

† LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



Multimedia USB Port, Power Outlets & USB Charger Port

 
Power Outlets: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.



Multimedia USB Port, Power Outlets & USB-C Charger Port

Multimedia USB Port A: Use Multimedia USB port to connect USB audio devices and smartphones.

USB-C Charger Port B: Devices can be recharged using a USB-C cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB-C Charger Port.

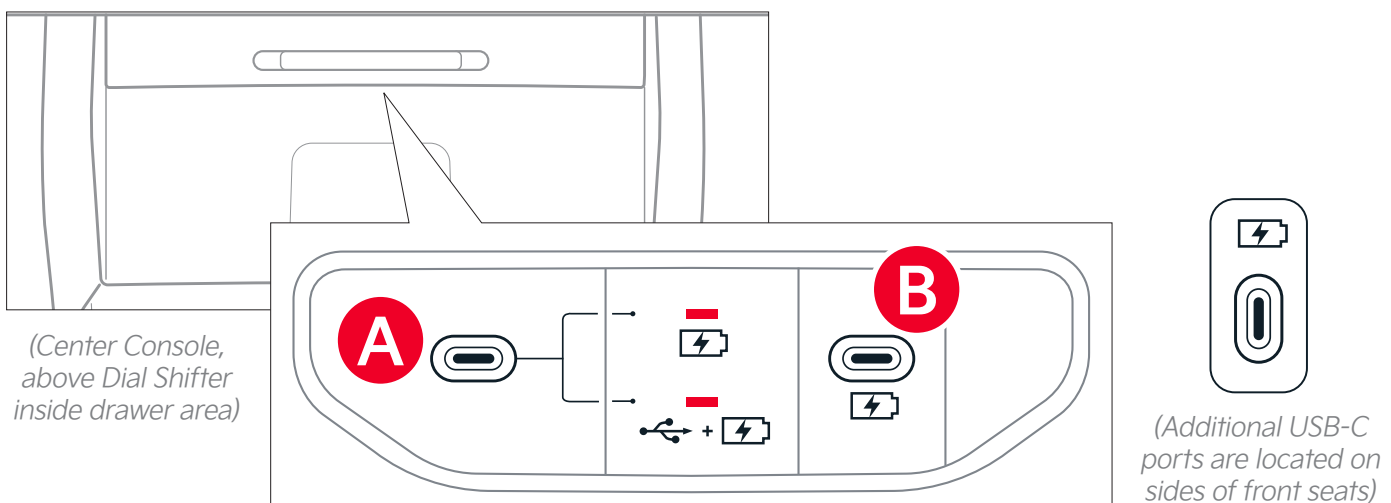

QUICK TIPS

- The power outlets are inactive when ignition the is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets. The USB Charger Port does not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

REMINDERS:

- Using the power outlets and the USB ports for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine off) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device

For more information on the Aux/USB Ports and Power Outlets, refer to section 4 in the Owner's Manual.



Digital Clock

Press the SETUP key on the Infotainment System, then select General. Press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

QUICK TIPS

- The clock can be set to adjust automatically. To enable auto time setting, DAYLIGHT SAVINGS must be selected, in the Settings Screen
- To manually set the time and date, the GPS time must be turned off in the Clock Settings (Kia Connect with Smart Navigation^{*†1,8)}

For more information, refer to the Car Infotainment System Quick Reference Guide.



 
Wireless Smartphone Charging System^{*†20}

Charge a compatible smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator **B**, while the ignition is on.



**Wireless
Smartphone
Charging**

1. Enable Wireless Charging in the User Settings* in the Instrument Cluster or the Vehicle Settings* on the Infotainment System, select Convenience then Wireless Charging System
2. All doors must be closed
3. Place a compatible smartphone on the center of the charging pad
4. Indicator light **B** may change to amber once wireless charging begins
5. Once charging is complete, the amber light may change to green

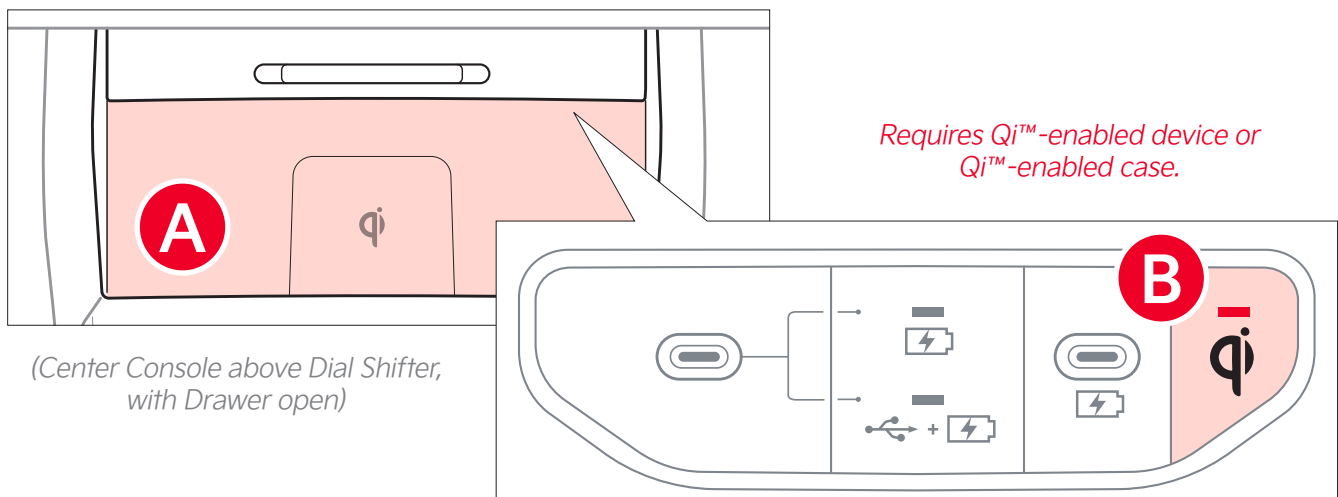

QUICK TIPS

- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place smart-phone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber.
- Avoid placing other metal items in the bin while charging as to not impede the charging area

[Continued on next page](#)



Wireless Smartphone Charging System^{*†20}

[*Continued from previous page*](#)

REMINDERS:

- The smartphone must be a compatible phone with Qi™ function available; Some smartphone models are not Qi™ certified, which may effect the speed or performance of the wireless charging
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- **Charging Performance:** Your device's position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled

 


Automatic Climate Control*

Infotainment System / Climate Control mode switching button A - Press to toggle between Infotainment System and Climate Control Modes.



Climate Control System

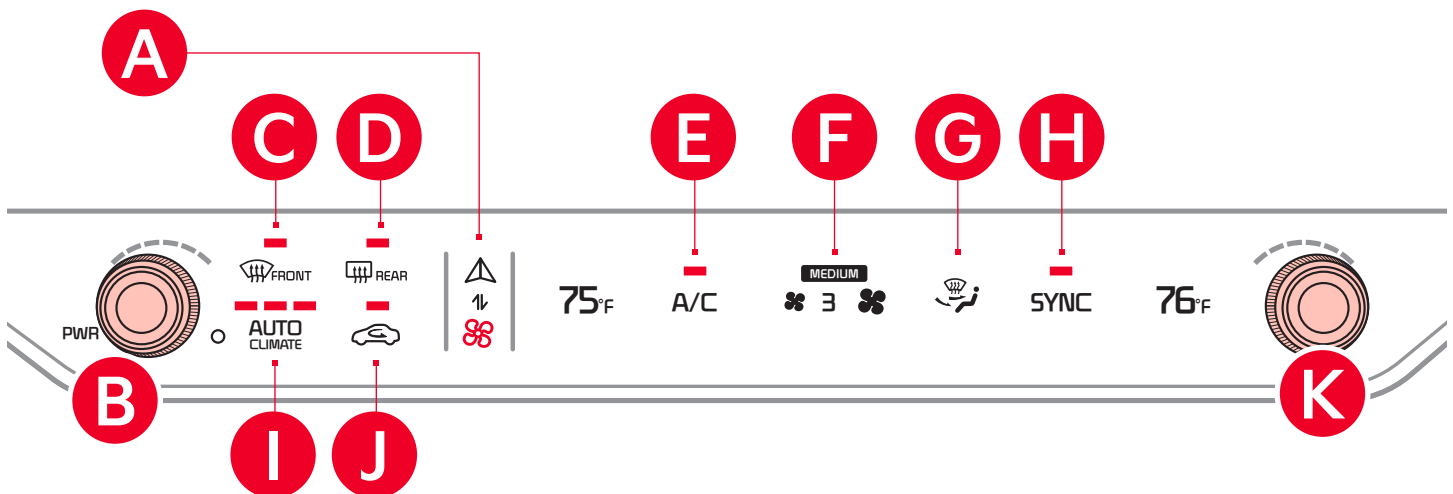

- | | |
|--|---|
| B Driver's temperature control | G Mode selection button |
| C Front windshield defroster button | H SYNC button |
| D Rear window defroster button | I Automatic Climate Control button |
| E Air conditioning button* | J Air intake control button |
| F Fan speed control buttons | K Passenger's temperature control |

Climate Control Auto Function

1. Press AUTO to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected and the ambient condition
2. Set desired Temperature
3. Press SYNC to sync the left and right temperature control

[*Continued on next page*](#)



Your Automatic Climate Control system may differ from the illustration.

 


Automatic Climate Control*



[Continued from previous page](#)

Defrost Outside Windshield:

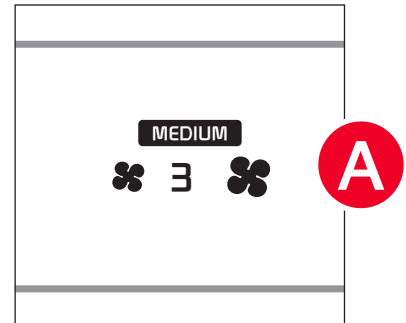1. Set Fan Speed to highest position 
2. Set Temperature to highest temperature
3. Press the Front Defrost button 



Defog Inside Windshield:


1. Set Fan Speed to highest position or to desired temperature 
2. Set Temperature to highest position or to desired temperature
3. Press the Front Defrost button 

Air Flow Modes

To select Air Flow Modes, press the mode selection button to cycle to the desired mode:



QUICK TIPS

- Defrost  mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may not illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

[Continued on next page](#)





Automatic Climate Control*

[*Continued from previous page*](#)

Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture. The system will automatically change to defrost mode when needed.

Auto Defogging is set on by default and will operate when the Climate Control system is on. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

REMINDERS:

 
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed on (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control
- When defogging, setting temperature to highest position will result in a faster defogging



**Settings -
Climate Control**



Manual Climate Control*

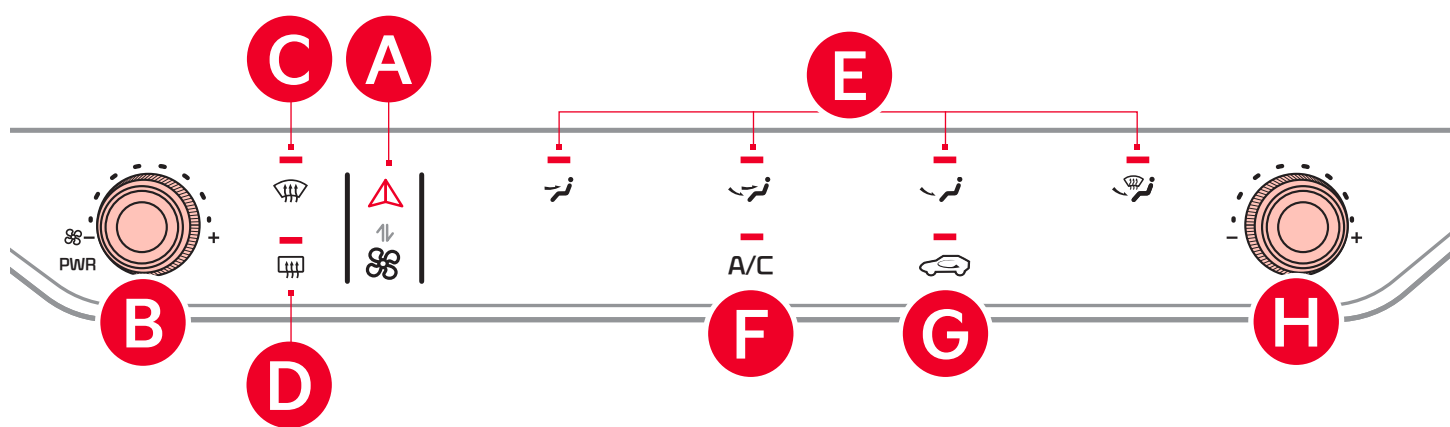

- B**

Climate ON/OFF, fan speed control
- C**

Front windshield defroster button
- D**

Rear window defroster button
- E**

Mode selection buttons
- F**

A/C On/Off button
- G**

Air intake control button
- H**

Temperature Control

Air Flow Modes

To select Air Flow modes, press the Mode selection buttons:

- Face-Level
- Floor-Level
- Bi-Level
- Floor/Defrost-Level

[Continued on next page](#)

Your Manual Climate Control system may differ from those in the illustrations. See section 4 in the Owner’s Manual for more details.


*IF EQUIPPED




Manual Climate Control*

[*Continued from previous page*](#)


Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set Temperature to highest temperature
3. Press the Front Defrost button 

Defog Inside Windshield:

1. Set Fan Speed to desired position
2. Set Temperature to desired position
3. Press the Front Defrost button 

QUICK TIPS

- Set the mode to the desired position. The Defrost  mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- MAX A/C mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging



Rotary Dial Shifter

Rotate dial for the following:

 
P: Park - Press to place in Park. To move out of Park, rotate dial to R, D or N

R: Reverse

N: Neutral

D: Drive

REMINDER: The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.

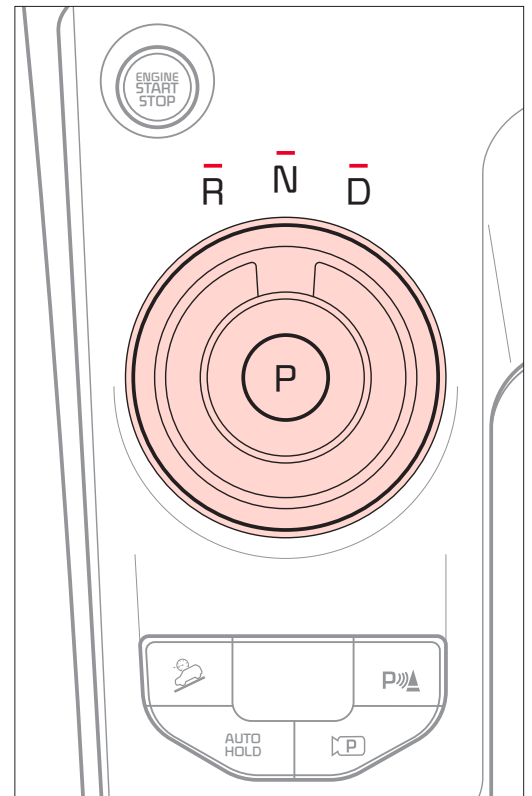

(Located on center console below Power button)



Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.



Electric Parking Brake (EPB) & Auto Hold

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the Instrument Cluster.

 
If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application.

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of Park to Reverse or shifted out of

Neutral to Reverse or Drive. To release EPB

manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

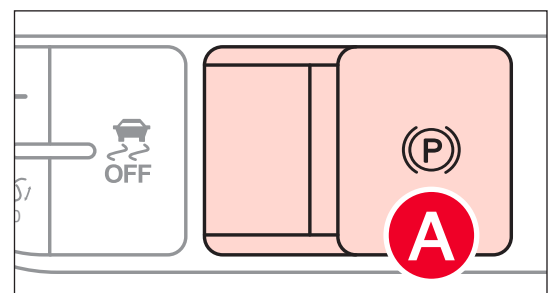

(Located on Driver's Panel, left of Steering Wheel)

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- With the EPB system activated, pull up and hold EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

See section 5 in the Owner's Manual for more information.



Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood, and liftgate must be closed.



Electric Parking Brake (EPB) & Auto Hold

 
The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle at a standstill and AUTO HOLD button **A** pressed ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn off when the AUTO HOLD button **A** is manually pressed off.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

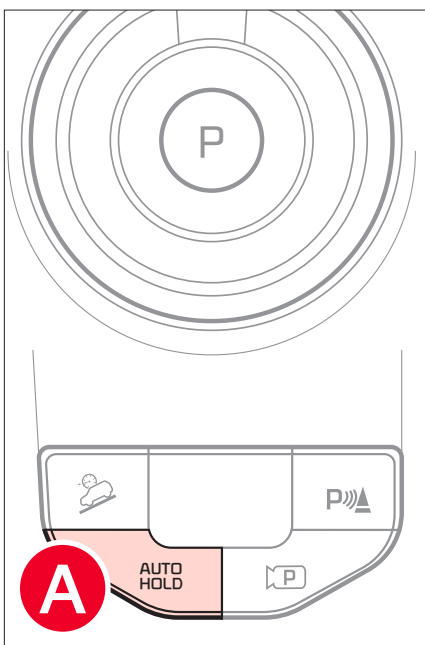

(Center Console)

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

See section 5 in the Owner's Manual for more information.



 
Downhill Brake Control (DBC)^{†6}

DBC helps drivers maneuver down steep hills by automatically applying braking inputs, allowing drivers to concentrate on steering.

Press button **A** to turn DBC ON/OFF.

QUICK TIPS

- When on, DBC will turn off when the button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

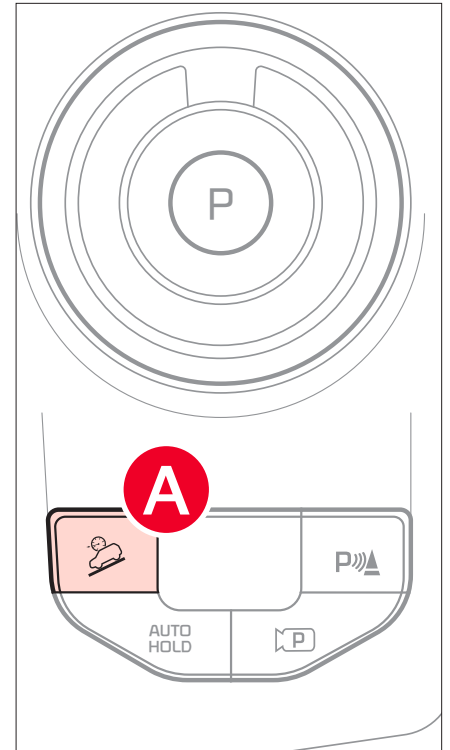

(Center Console)

REMINDER: DBC defaults to off when ignition is cycled.

The DBC system is a supplemental system and does not replace the need for the driver to apply the brakes. Pay attention to road and traffic conditions and be prepared to depress the brakes.

Refer to section 5 in the Owner's Manual for more information.



Seat Warmers / Ventilated Seats^{*†15}

A Seat Warmers:

 
- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



Seat Warmers/
Ventilated Seats

B Ventilated Seats:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

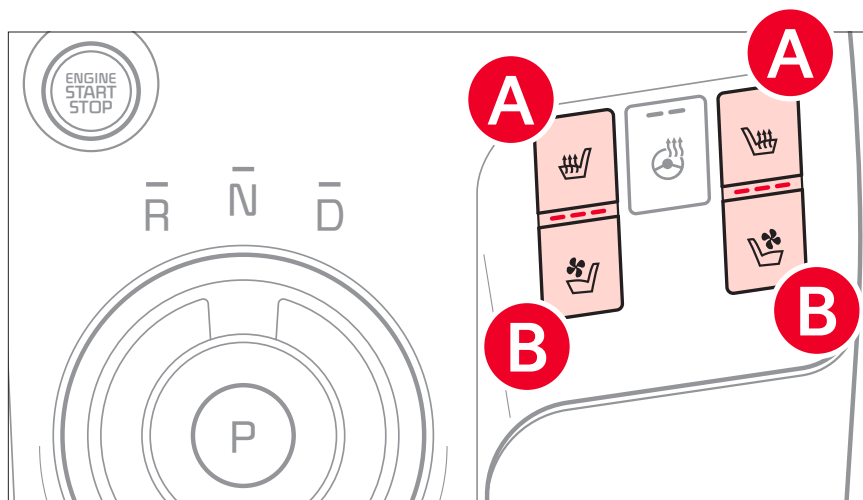

(Center Console: Buttons located to the right of rotary shift)

QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

REMINDER: Use extreme caution when using the seat warmers to avoid burns.

Refer to section 4 in the Owner's Manual for more information.



Rear Occupant Alert (ROA) with Door Monitoring^{†10}

 
Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the

Instrument Cluster stating to “Check rear seats” **A** and an alert will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to Vehicle Settings on the Infotainment System, by selecting VEHICLE, then select Convenience, then Rear Occupant Alert and check/uncheck the box.



Rear Occupant Alert (ROA) with Door Monitoring

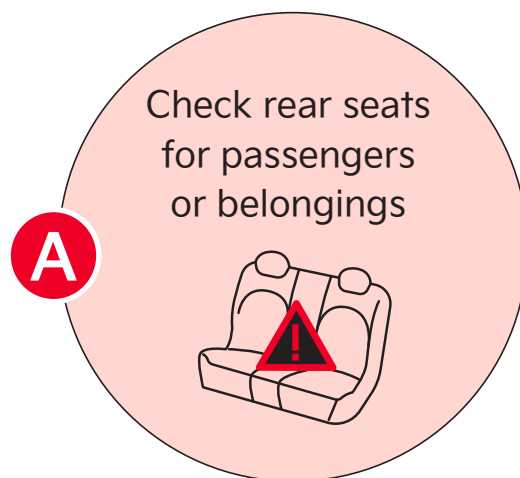

(Message on Cluster Display)

REMINDERS:

- Always be sure to check the passenger areas before leaving the vehicle
- ROA uses a rear door opened/closed history, which is reset after the driver turns the vehicle off, exits the vehicle and locks the door remotely. So even if a rear door does not reopen, Rear Occupant Alert (ROA) alert can occur

When engaged, Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle interior when exiting the vehicle.

Refer to section 5 in the Owner's Manual for more information.

 
 


Power Adjustable Driver's Seat^{*†13}

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar^{*} forward/backward.



Power Adjustable Driver's Seat with Memory Settings

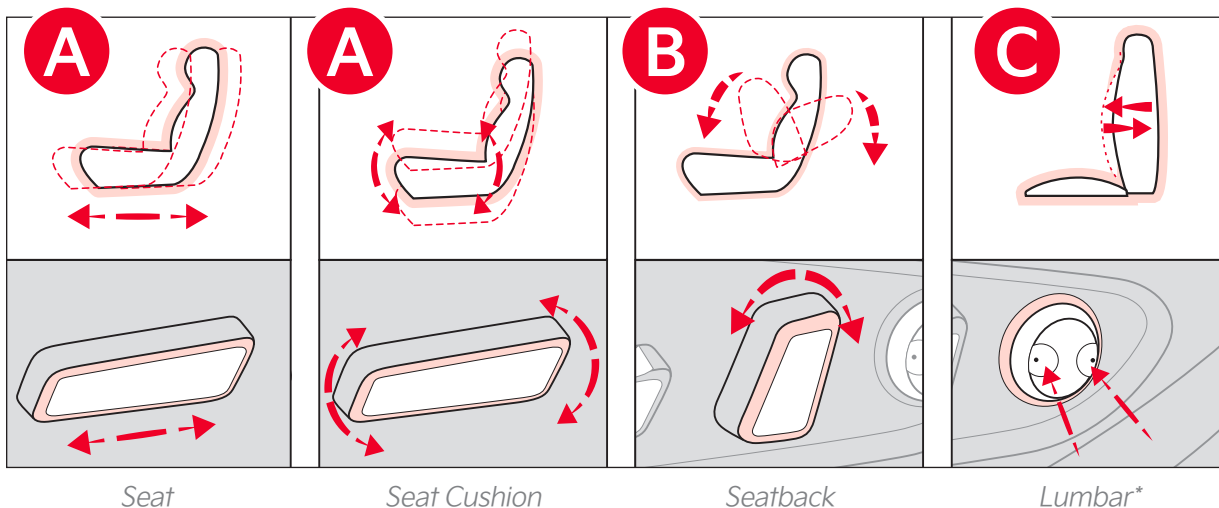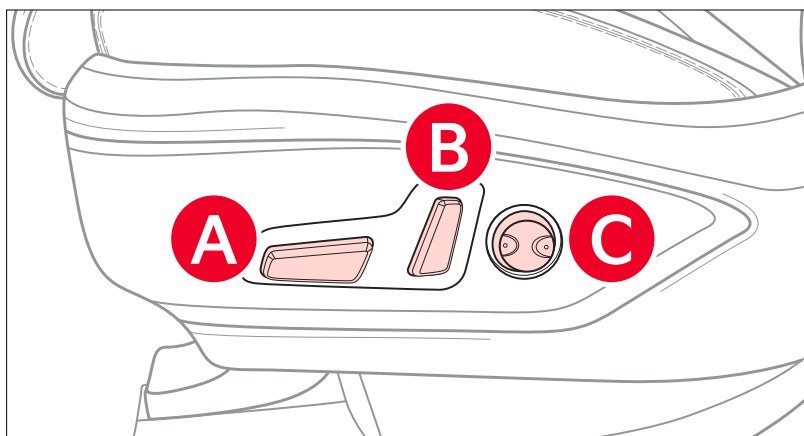

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.



6-Way Manual Adjustable Driver's Seat^{*†13}

Pull lever **A** to slide seat forward/backward.

Pull lever **B** up several times to raise Seat Height.

 
Push lever **B** down several times to lower Seat Height.

Pull lever **C** to adjust seatback recline.

Press **D** to adjust lumbar support.



Manual Seat Adjustment

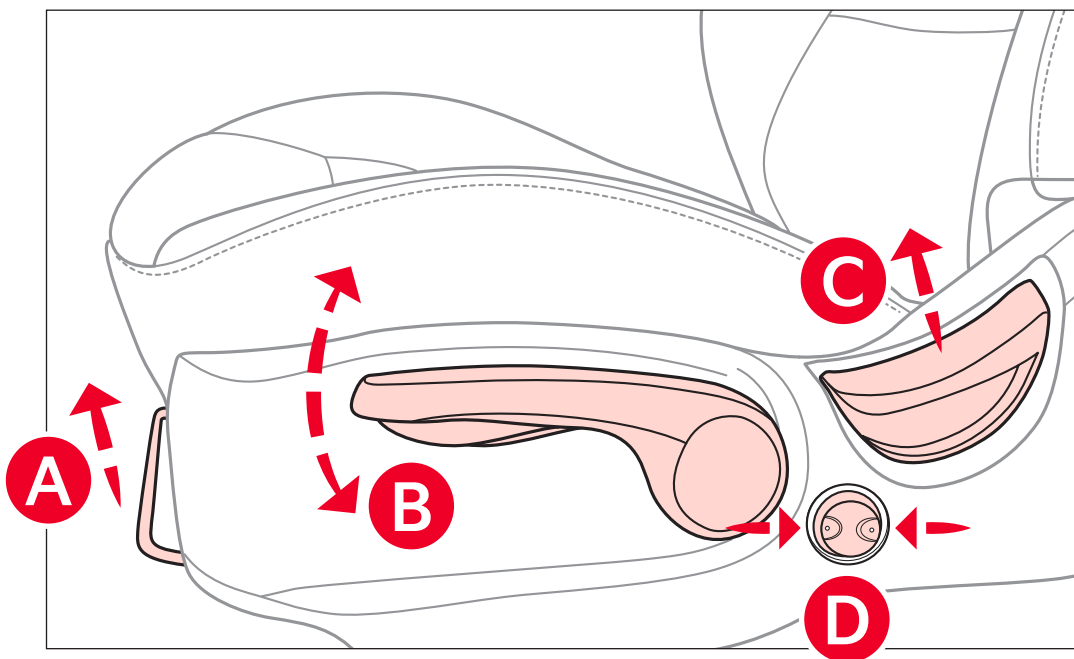

QUICK TIP

- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

 
For more information on 6-Way Manual Adjustable Driver's Seat operation, refer to section 3 in the Owner's Manual.



Front Seat Headrest Adjustment^{†8}

To raise headrest — Pull headrest up to the desired position.

To lower headrest — Press lock **A**, then press the headrest down.

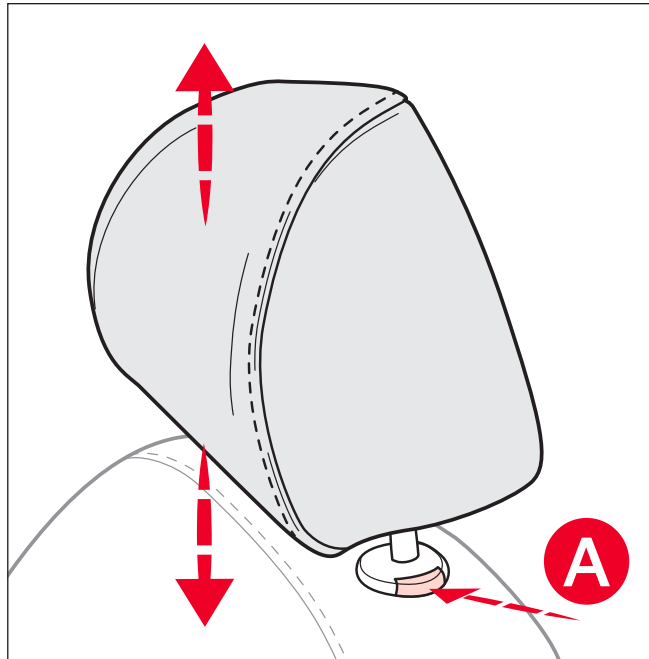

QUICK TIP

- For easy adjustments, hold the headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

Refer to section 3 in the Owner's Manual for more information.

 


Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors. To store positions into memory, first place the gear shift into Park while the ENGINE START/STOP button is in the ON position. Adjust the Driver's Seat and the Outside Mirrors. Then, press and hold one of the memory buttons 1 or 2 **A**. The system will beep once when memory has been stored.



Power Adjustable
Driver's Seat with
Memory Settings

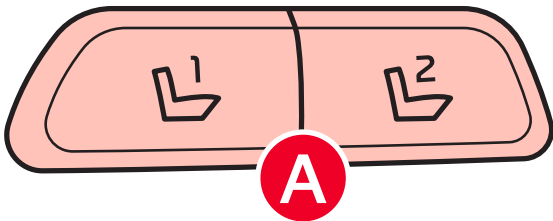

(Buttons located on driver's side door)

*IF EQUIPPED

 


Reclining/Folding Rear Seats^{†13}

(Seat type with lever in front)

To recline the Rear Seatback:

1. Pull lever **A** up to unlock seat
2. Holding the lever **A** up, adjust Seatback to desired position **B**
3. Release the lever **A** and ensure the Seatback is locked in place

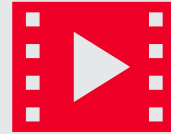

2nd-Row Seats



2nd Row Seats-
Remote Folding /
Unfolding Seats
and Seat Straps

 
To fold the Rear Seatback:

1. Set the front seatback in the most upright position and if needed, slide the seat forward
2. Lower the headrest to the lowest position
3. Insert the rear seat belt buckle into the pocket between the rear seatback and cushion. Insert the seatbelt webbing in the guide
4. Lift seatback folding lever **A** up to unlock seat
5. Fold Seatback flat

QUICK TIP

- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

REMINDER: The lever must return to its original position for the Seatback to lock.

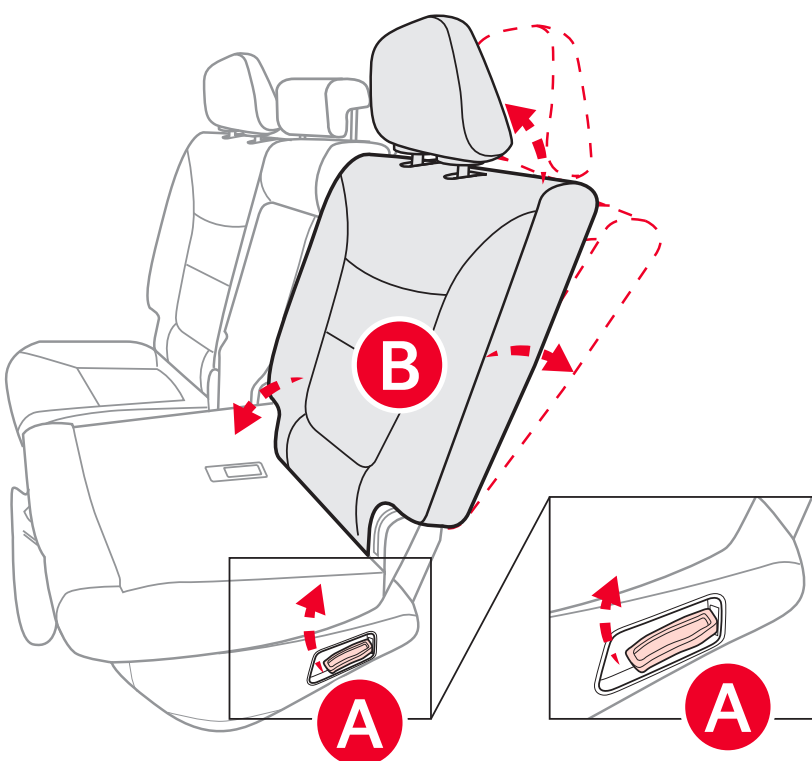

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

 


Unfastening Center Seat Belt^{†14}

1. If Seat Belt is buckled, press the release button on the buckle
2. To retract the 2nd-Row Center Seatbelt **A** into the headliner, press the “release button” on the buckle by inserting the seat belt tongue plate **B** in the small slot on the center buckle **C**



**Unfastening
Center Seat Belt**

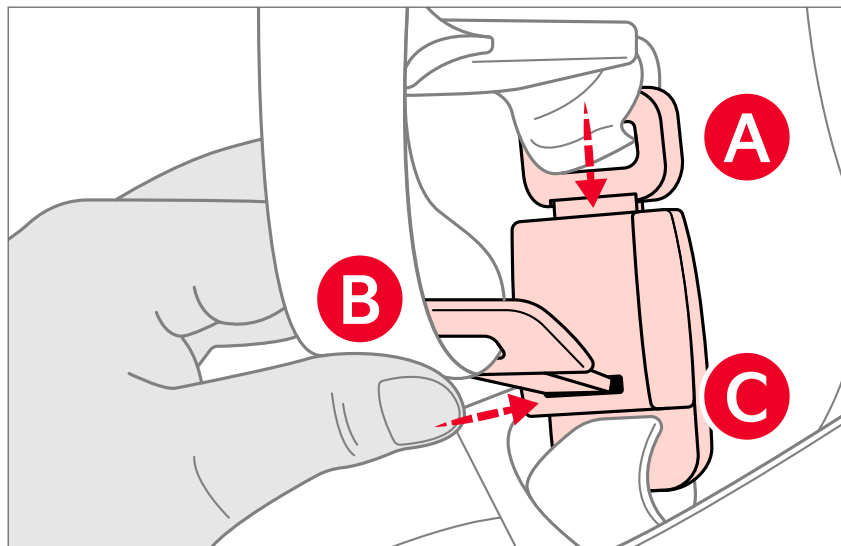

Refer to section 3 in the Owner's Manual for more information.



Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)*†7

- A** Press to lock All Doors. Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate.

 
Manual Liftgate*: Lift the Liftgate handle to manually open Liftgate

REMINDER: The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle Liftgate.


- D** Press and hold more than one second for Panic Alarm. To turn off Alarm, press any button

E Mechanical Key:

- Use to lock/unlock Driver's Door by turning once or all doors by turning twice **F**
- Use to enable/disable Child Safety Locks
- Use to unlatch rear center seatbelt lower anchor

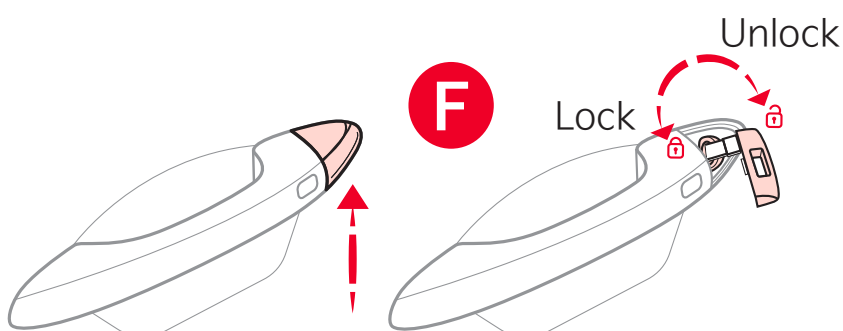

Smart Key and Mechanical Key

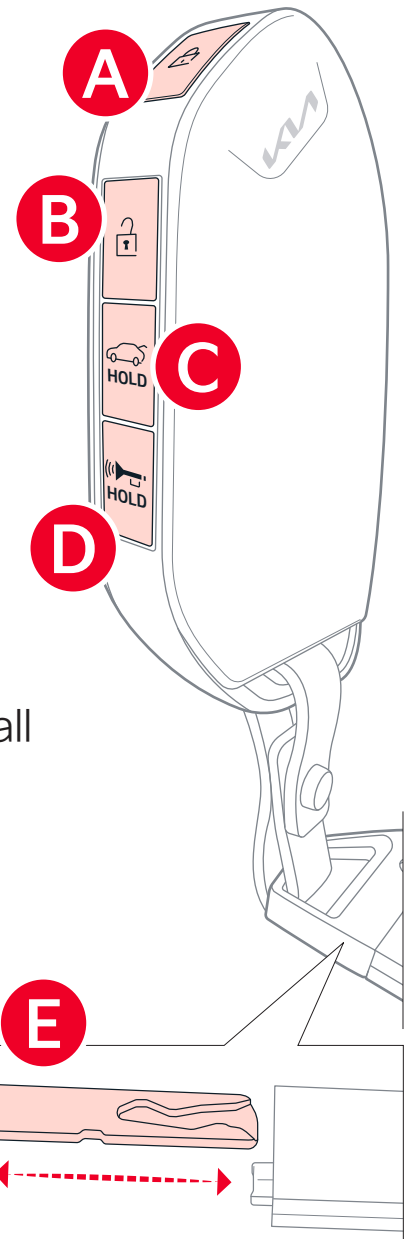 

[Continued on next page](#)

Remote button configuration may vary depending on vehicle options. For more information on the Mechanical Key, please refer to section 4 in the Owner's Manual.



OTHER KEY FEATURES

Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)*†7

 
[Continued from previous page](#)

A Remote Start*: Lock the doors by pressing the door lock button **B** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **A** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If the driver does not enter vehicle within 3 minutes of starting the vehicle, the vehicle will automatically turn off.

Remote Smart Parking Assist (RSPA)*: To park or exit a parking space remotely use buttons **C** and **D** as needed. For more information, see your Owner's Manual or scan the QR code.



Remote Smart Parking Assist (RSPA) 2

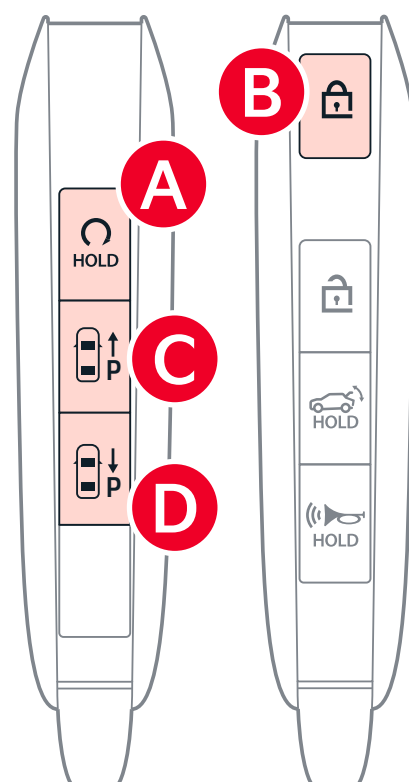

(Keyfob seen from the sides)

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the POWER button (Lock button side closest) and press to start vehicle
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDERS:

- Remote button configuration may vary depending on vehicle options
- One/two button turn logic can be changed in the Vehicle Settings in the Infotainment System
- When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound

Refer to section 4 in the Owner's Manual for more information.



Digital Key 2^{*†3}

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Setup for Smartphones with Ultra-Wide Band Technology (UWB):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access^{†2} App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
3. Open the Kia Access^{†2} App and select DIGITAL KEYS **A**
4. Press CREATE OWNER KEY
5. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
6. Press CONTINUE and the wallet app will pair and add your Digital Key

 
REMINDER: Actual steps may vary between devices.



Digital Key 2
Operation Video



Digital Key 2
Setup, Registration
& Sharing Video

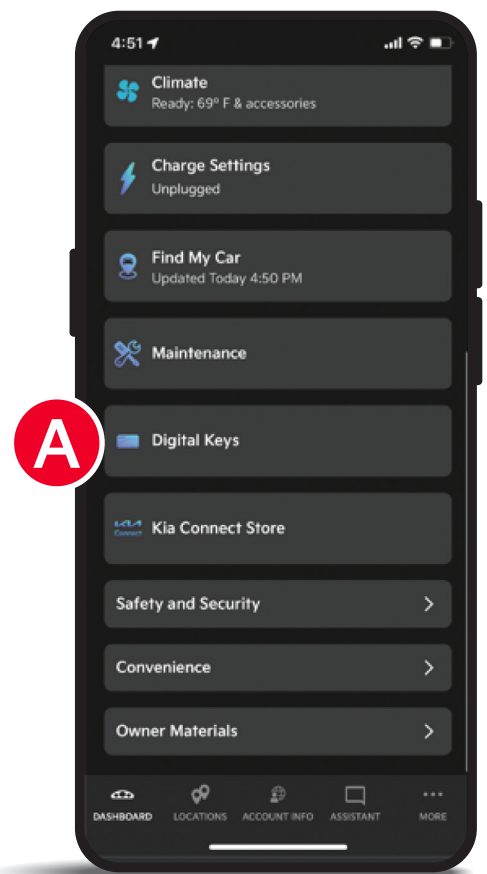

[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.

 
Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

Digital Key 2^{*†3}

[Continued from previous page](#)

Digital Key 2 Setup for Smart-phones without Ultra-Wide Band Technology (UWB):

1. Download the Kia Access^{†2} App, start an account, and activate Kia Connect^{†1} in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access^{†2} App** and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's infotainment system detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your Digital Key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

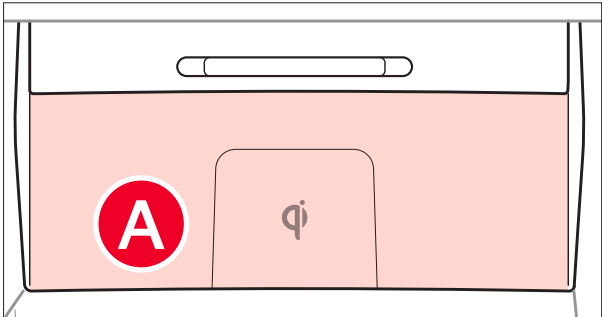

(Center Console above Dial Shifter, with Drawer open)

QUICK TIP

- When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features

REMINDER: Actual steps may vary between devices.

[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.

† LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



Digital Key 2^{*†3}

[Continued from previous page](#)

Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, ensure you have your smartphone with you. Lightly touch the lock/unlock sensor (a curved area) on the exterior door handle. Once detected, the doors will automatically unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is “unlock and drive,” or you can select “unlock only”
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

Revoking shared Digital Key access: You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Select the contact and click on **Revoke Access**.

To delete shared keys and the owner key: Go to the Vehicle Settings* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY. Select the Digital Key and press DELETE.

REMINDER: Actual steps may vary between devices.

[Continued on next page](#)

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Digital Key 2^{*†3}

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

REMINDERS:

 
- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
 - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
 - iPhone XS® or later.
 - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
 - Apple Watch Series 5® or later
 - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
 - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
 - Galaxy S20™ or later
 - Galaxy Note20 5G™ or later
 - Galaxy Z Flip 5G™ or later
 - Galaxy Fold 2™ or later
 - For **Google™ Smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.



Double-Turn Lock/Unlock All

- Turn clockwise once to unlock driver's door
- Turn clockwise again within 4 seconds to unlock all doors
- Turn counterclockwise once to lock all doors

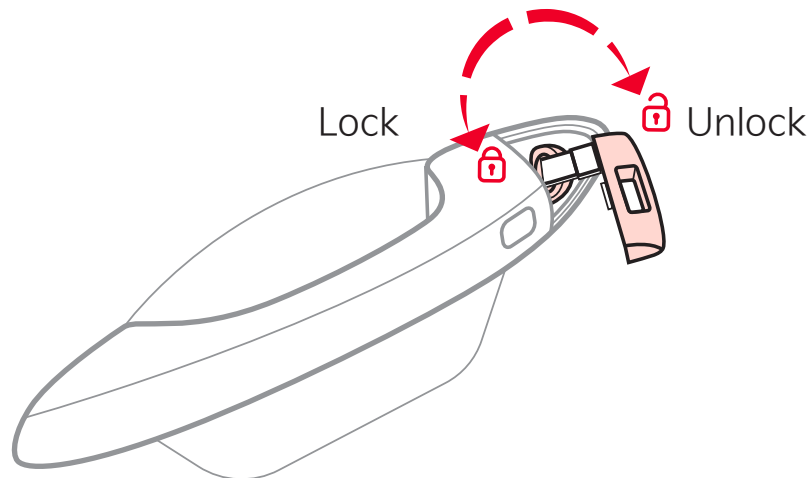

Refer to section 4 in the Owner's Manual for more information.

 


Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent
Malfunction Indicator  from illuminating.



Kia Fuel Cap

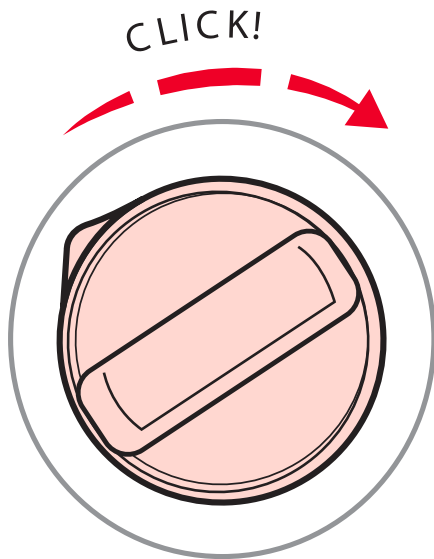

REMINDERS:

- To open the fuel door, press the right edge of the fuel door
- It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back

Refer to section 4 in the Owner's Manual for more information.



Fuel Filler Lid Release

To open the Fuel Filler lid:

 
 
1. When all doors are unlocked, press the right center edge of the Fuel Filler lid **A**



Fuel Filler Lid

2. Pull the Fuel Filler lid out to fully open **B**

To open the Fuel Cap, turn it counterclockwise **C**.

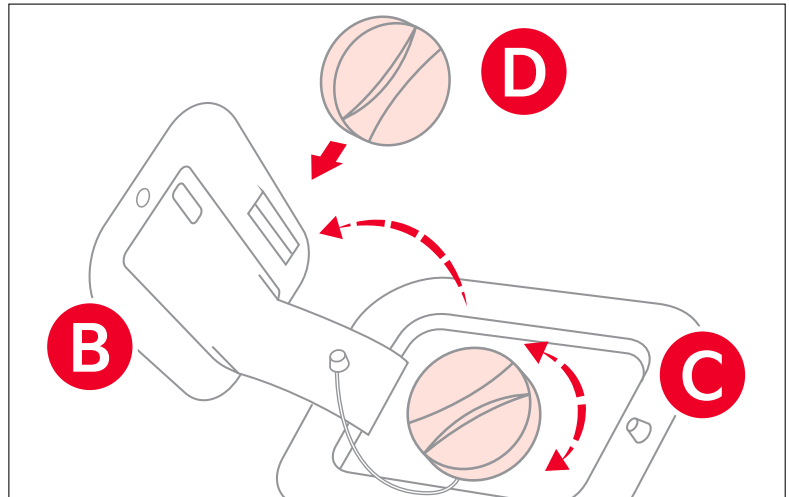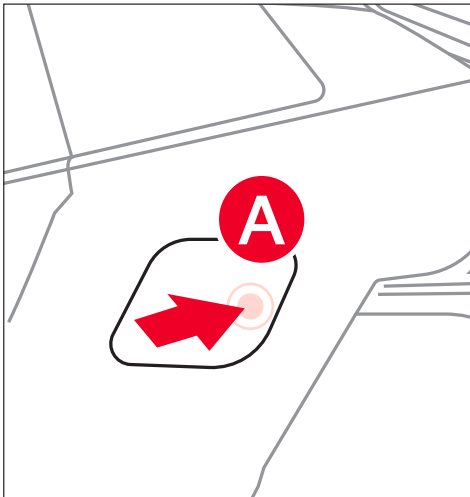

QUICK TIP

- Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **D**.

REMINDERS:

- The fuel filler lid will unlock when the Driver's door is unlocked
- To unlock the fuel filler lid:
 - Press the unlock button on your smart key
 - Press the Central Door unlock button on the armrest trim of the driver's door
 - Pull the driver's inside door handle outward
 - The fuel filler lid will lock when all doors are locked
- To lock fuel filler lid:
 - Press the lock button on your smart key
 - Press the Central Door lock button on armrest trim of the driver's door
 - All doors and fuel filler lid will automatically lock after the vehicle speed exceeds 9 mph

Refer to section 4 in the Owner's Manual for more information.



HomeLink® with Auto-Dimming Rearview Mirror*†3

The HomeLink® Universal Transceiver is designed to connect to your garage door opener, electric gate, home lighting, etc.

The Auto-Dimming Rearview Mirror is

designed to help reduce glare coming from a vehicle's headlights in the rear. HomeLink® with Auto-Dimming Rearview Mirror can connect to three electronic transmitters.



 
HomeLink®
Support Link

REMINDER: Mirror indicator light will illuminate when automatic dimming is ON.

Programming a New HomeLink® Button:

1. Press and release the HomeLink® Channel button **A**, **B** or **C**, you would like to program. The HomeLink® User Interface Indicator **D** will flash orange slowly (If it doesn't, go to the steps of "Erasing HomeLink® Buttons" section on next page, and start over)
2. Position the garage-door opener remote 1-3 inches away from the HomeLink® buttons
3. While the HomeLink® User Interface Indicator **D** is flashing orange, press and hold the garage-door opener remote button until the HomeLink® User Interface Indicator **D** changes from orange to green
4. Wait until your garage door comes to a complete stop, regardless of position, before proceeding to the next step

[*Continued on next page*](#)

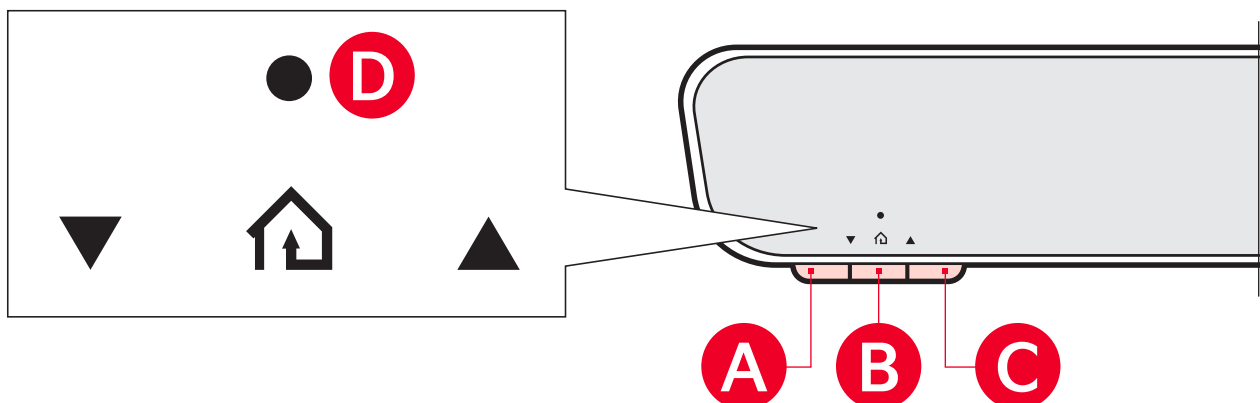


HomeLink® with Auto-Dimming Rearview Mirror*†3

[Continued from previous page](#)

5. Press and release the HomeLink® Channel button **A**, **B** or **C** that you're programming. If the HomeLink® User Interface Indicator **D** is solid green, HomeLink® is connected and should operate when the HomeLink® Channel button **A**, **B** or **C** is pressed. If your device operates, programming is complete
- If the indicator light rapidly flashes green, firmly press, and hold the HomeLink® Channel button **A**, **B** or **C** slowly, for two seconds up to three times in a row, to complete the programming process. Do not press the HomeLink® Channel button rapidly. If your device now operates, programming is complete
 - If the device does not operate, continue with step 6
6. At the garage door opener motor, (security gate motor, etc.) locate the "Learn", "Smart", "Set" or "Program" button. This can usually be found where the hanging antenna wire is attached to the motor-head unit (see the device's manual to identify this button). The name and color of the button may vary by manufacturer. A ladder and/or second person may simplify the following steps

 
[Continued on next page](#)

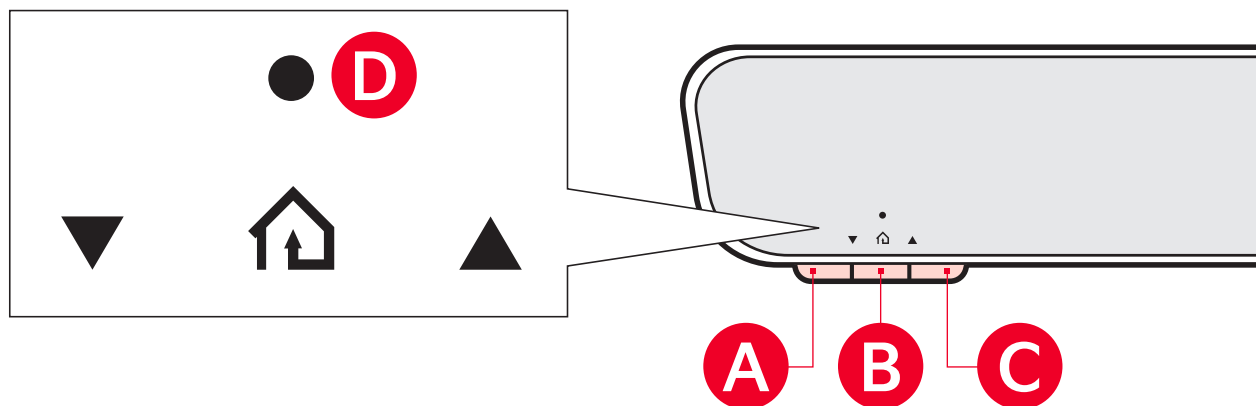

HomeLink® with Auto-Dimming Rearview Mirror*†3

[Continued from previous page](#)

 7. Firmly press and release the “Learn”, “Smart”, “Set” or “Program” button.
You now have up to 30 seconds to complete the next step
8. Return to the vehicle and firmly press and hold the HomeLink® button slowly, for two seconds, up to three times in a row. Do not press the HomeLink® button rapidly. As soon as you see the garage door start to move, stop pressing any buttons until a few seconds after the garage door has come to a complete stop, regardless of position. At this point programming is complete and your device should operate when the HomeLink® Channel button is pressed

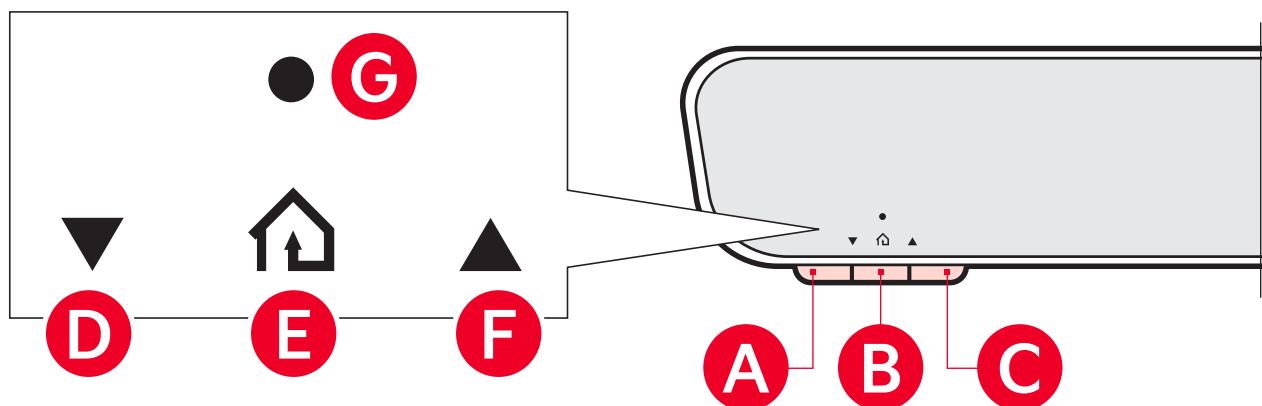

- A** HomeLink® button
- B** HomeLink® button
- C** HomeLink® button
- D** Garage Door Opener Status Indicator: Closing or Opening
- E** HomeLink® Operation Indicator
- F** Garage Door Opener Status Indicator: Closing or Opening
- G** HomeLink® User Interface Indicator

 
[Continued on next page](#)

HomeLink® with Auto-Dimming Rearview Mirror*†3

[Continued from previous page](#)

Operating HomeLink®

Press and release the desired programmed HomeLink® Channel button **A**, **B** or **C**. The HomeLink® User Interface Indicator **D** should light green, solid or flashing, and your programmed device should operate. If your device does not operate, the HomeLink® programming was not successful, and you'll need to reprogram the button(s).

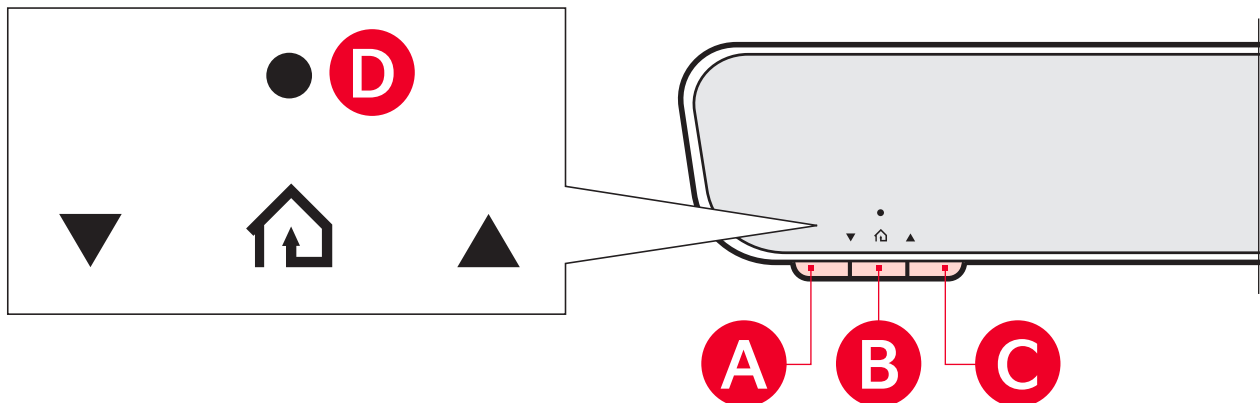

QUICK TIPS

- If your garage door opener has the "myQi"^{†20} logo on its side, it has two-way communication capability to display "Closing" or "Opening" status message on Homelink® mirror. Refer to section 4 in the Owner's Manual on how to set this up or for more information.
- When programming, park outside of the garage door
- The ENGINE STAR/STOP button needs to be in the accessory (ACC) position
- Replace the hand-held garage door transmitter for quicker and accurate programming

 
[Continued on next page](#)

HomeLink® with Auto-Dimming Rearview Mirror*†3

[Continued from previous page](#)

Erasing a Programmed Button:

1. Press and hold the desired HomeLink® Channel button **A**, **B** or **C** you want to re-program. DO NOT release the button
2. The HomeLink® User Interface Indicator **D** will illuminate solid green. Release the button as soon as the HomeLink® User Interface Indicator **D** begins to flash orange, usually about 20 seconds
3. Proceed with the steps in the “Programming a New HomeLink® Button” section

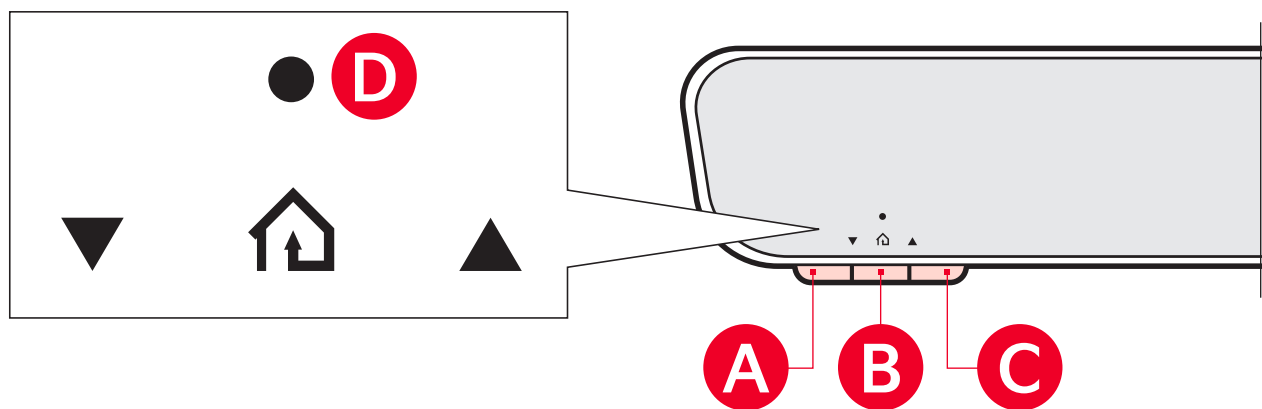

QUICK TIP

- For information on how to erase all programmed buttons at the same time, refer to section 4 of the Owner’s Manual.

REMINDERS:

- Erasing programmed buttons will delete all trained transmitters
- A ladder may be needed to access the garage door opener
- A second person may be needed to help
- Some of the steps are time sensitive

For more information, go to [HomeLink.com](https://www.homelink.com) or call (800) 355-3515.

See section 4 in the Owner’s Manual for more information.



Power Liftgate^{*†11}

Opening from Outside the Vehicle:

To open Power Liftgate automatically, press the Rear Hatch Release button **A** on exterior of the Liftgate.



 
Settings - Power Liftgate

Automatically close by pressing the Power Liftgate Close button **B**.


Opening from Inside the Vehicle:

Open: Press and briefly hold the Power Liftgate Open/Close button **C** to automatically close the Liftgate.

Close: Press and hold the button **C** until liftgate is completely closed. If the button **C** is released while closing, the power liftgate will stop and a warning chime will sound.

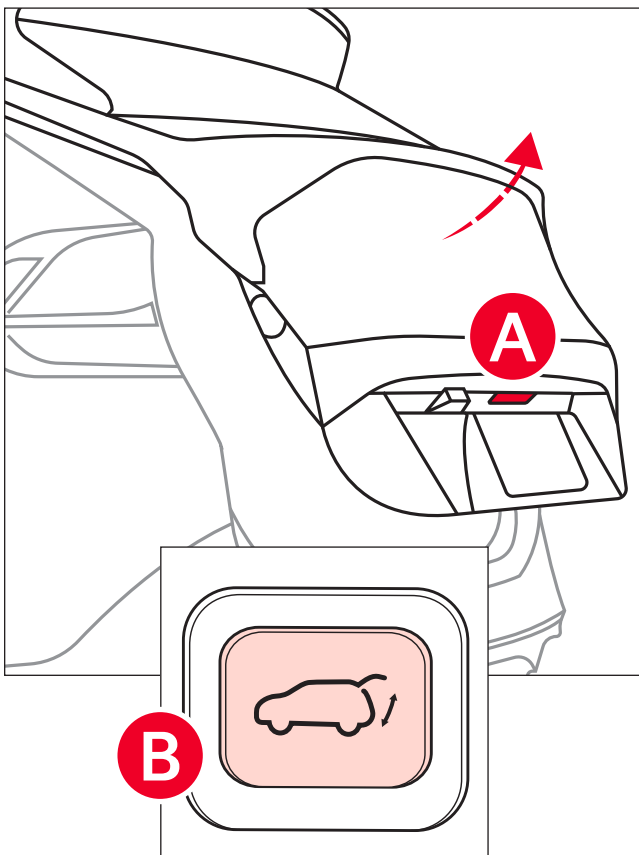

 (Located on Liftgate inside lip near latch)

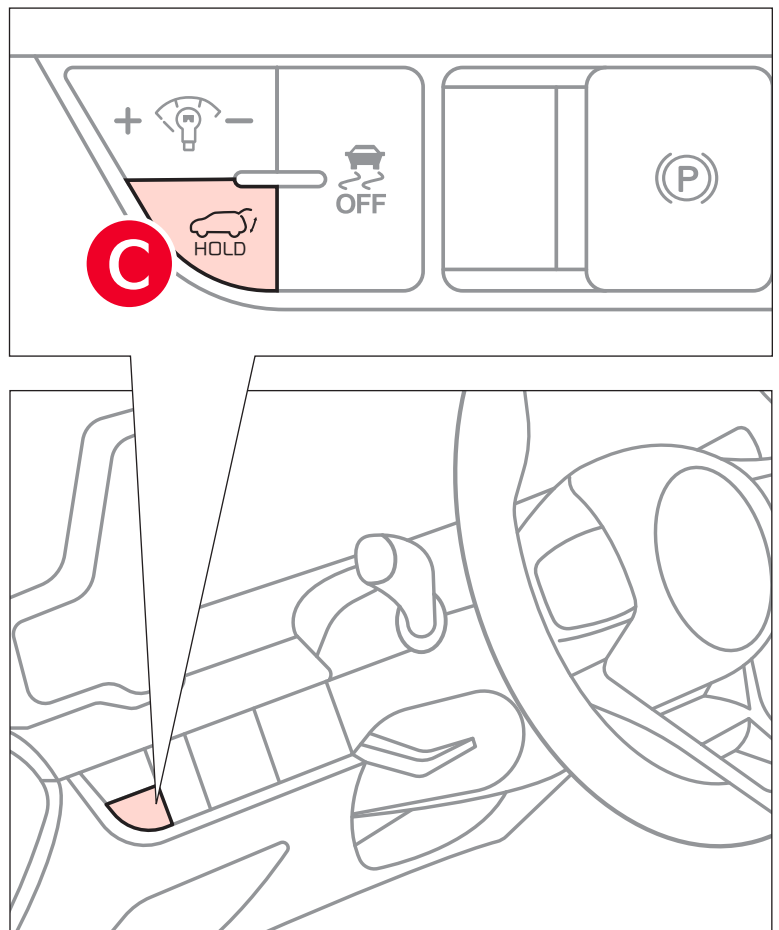

(Button located on Driver's Panel)

[Continued on next page](#)

Power Liftgate^{*†11}

[Continued from previous page](#)

Smart Key: To open the Power Liftgate, press and hold the Liftgate button **A** until the Liftgate begins opening. Press and hold to close, and until the liftgate is closed completely. If button is released while closing, the liftgate will stop and a chime will sound.

REMINDERS:

- Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate
- When closing, be mindful of any objects or persons

Power Liftgate Opening Height Adjustment

Set the opening height in Vehicle Settings*. Press the SETUP key/button on the infotainment system, select VEHICLE, DOOR, then POWER LIFTGATE OPENING HEIGHT. Select the desired option.

To manually set the opening height, do the following steps:

 
 
1. Position the liftgate manually to the preferred height
2. Press and hold Power Liftgate Close button **B** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.

REMINDER: Ensure objects and people are out of the way when operating the power liftgate.



Smart Key & Mechanical Key

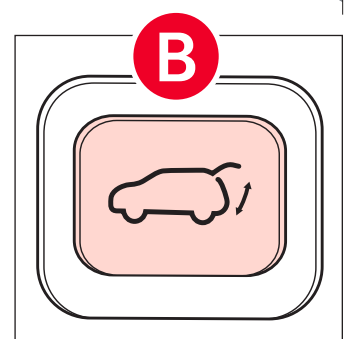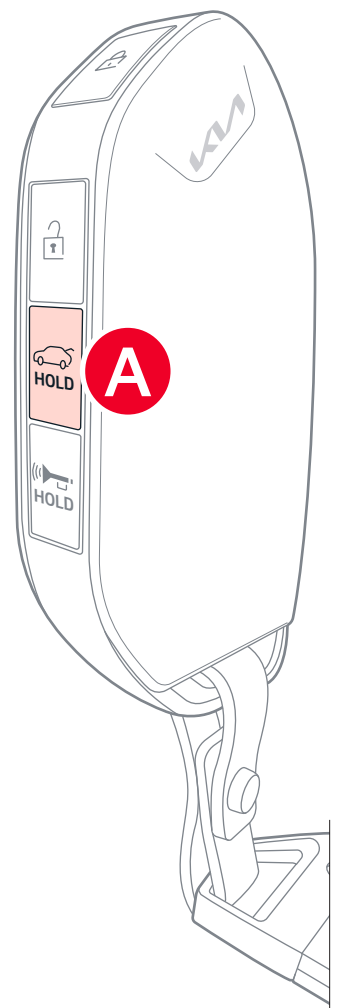

(Located on Liftgate inside lip near latch)



Smart Power Liftgate^{*†11}

When the Smart Key fob is on your person and you are within close proximity to the back of the vehicle, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.



Settings - Power Liftgate



Smart Power Liftgate

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to Vehicle Settings* in the Infotainment System. Press the **SETUP** key or onscreen button, then Vehicle. Select Door, then Smart Liftgate.

QUICK TIPS

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob
- The open height can be adjusted. For information on how to set the open height, see your Owner's Manual

REMINDERS:

- All doors are closed and locked after about 15 seconds for the system to operate
- The Smart Power Liftgate feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function
- Ensure obstacles and people are out of the way of the liftgate



OTHER KEY FEATURES

 
Manual Liftgate* / Liftgate Release Button

The Liftgate Release Button is located underneath the rear liftgate hatch.

With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.



**Manual Liftgate
& Key Fob
Controls**

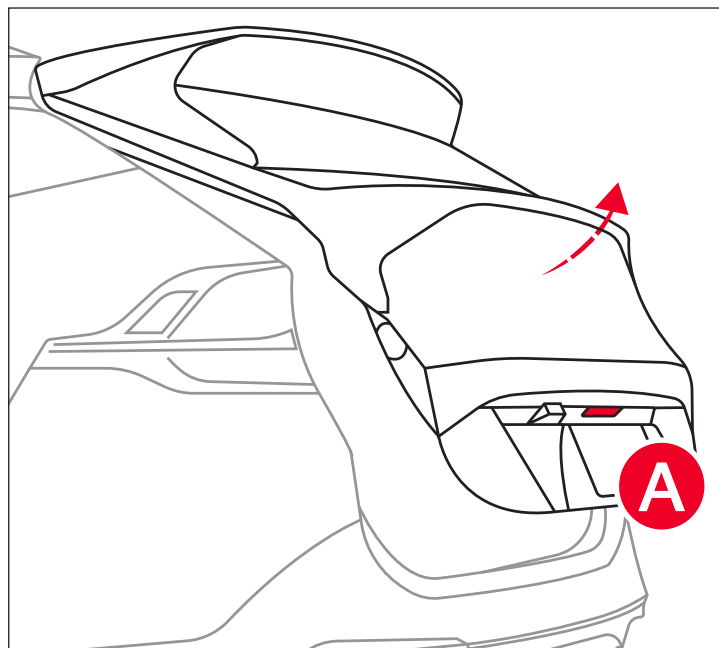

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The liftgate unlocks automatically and can then be opened, when the Smart Key fob* is within close proximity to the vehicle

Refer to section 4 in the Owner's Manual for more information.



 
Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button* is OFF.

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.

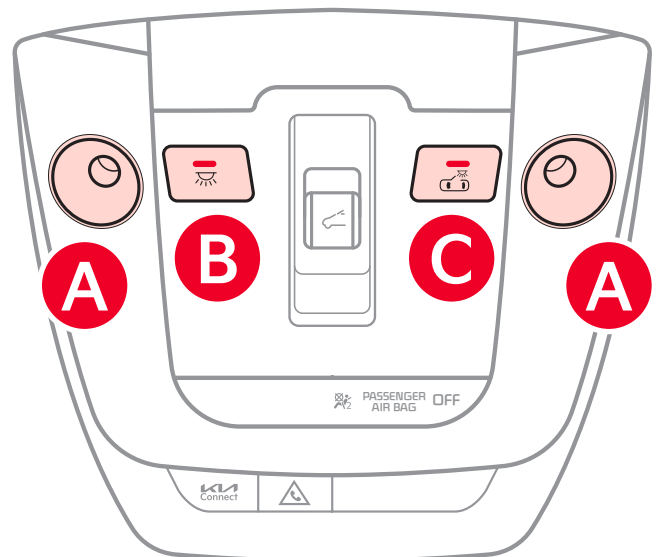

(Type B)

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Refer to section 4 in the Owner's Manual for more information.



Panoramic Sunroof Operation with Power Sunshade*

The sunroof operation is controlled through a multidirectional switch. The ignition or ENGINE START/STOP button* needs to be in the ON position to operate the sunroof.

To slide the power sunshade and sunroof:

- Auto Open: Slide the switch **A** backward to the farthest position and release
- Auto Close: Slide the switch **A** forward to the farthest position and release

To slide the power sunshade only:

- Auto Open: Slide the switch **A** partially backward to the first detent position and release
- Auto Close: Slide the switch **A** partially forward to the first detent position and release

To slide the sunroof (with power sunshade open):

 
- Open: Slide the switch **A** backward to the first detent position and release
- Close: Slide the switch **A** forward to the first detent position and release to close sunroof glass only. Slide the lever backward to the farthest position and release to close sunroof glass and sunshade

To tilt the sunroof:

- Raise: Push switch **A** upward
- Lower: Push switch **A** forward



**Overhead Console
- Sunroof and
Room Lamp**

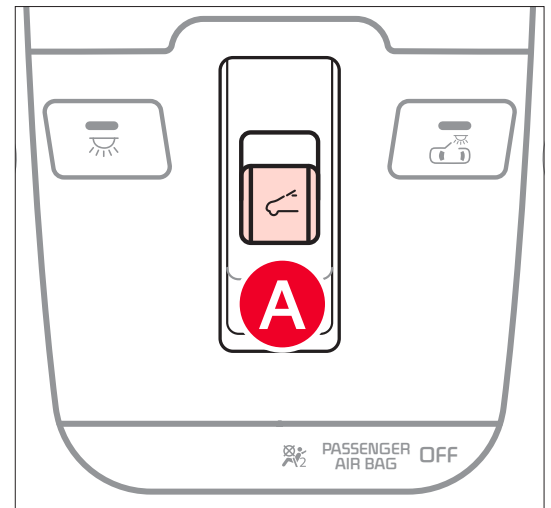

QUICK TIP

- To stop the sunroof/sunshade at any position, push or pull the sunroof control switch in any direction.

[*Continued on next page*](#)



Panoramic Sunroof Operation with Power Sunshade*

[*Continued from previous page*](#)

 
REMINDERS:

- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster will display a warning message and a chime will sound for a few seconds
- Power sunshade needs to remain OPEN while sunroof is open
- Power sunshade cannot slide when the sunroof is in the tilt position or tilt while in an open or slide position
- Do not adjust the power sunroof or sunshade while driving. This could result in loss of control of the vehicle
- When closing, be mindful of any objects or persons



Sun Visor^{†18}

Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

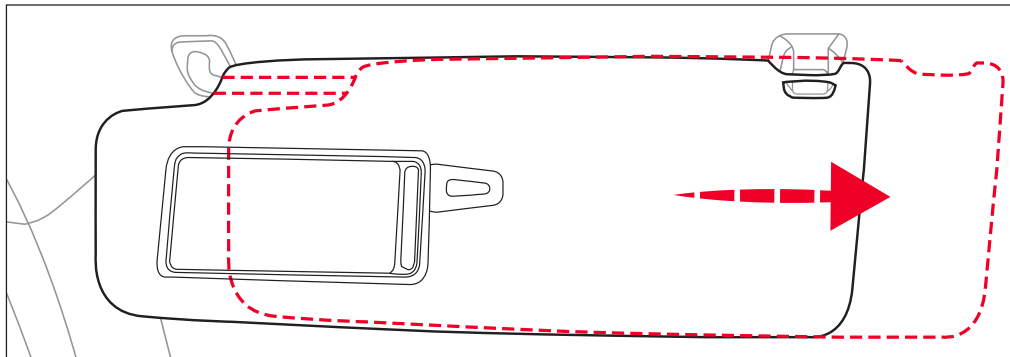

REMINDERS:

- Sun Visor may not shield all direct light
- The Sun Visor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sun Visor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sun Visor around to or from the front or side windows

Refer to section 4 in the Owner's Manual for more information.



 
Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left and lift the Hood

Closing the Hood:

Lower the Hood first to about 12 inches away from being closed. Then, press down to securely lock in place.

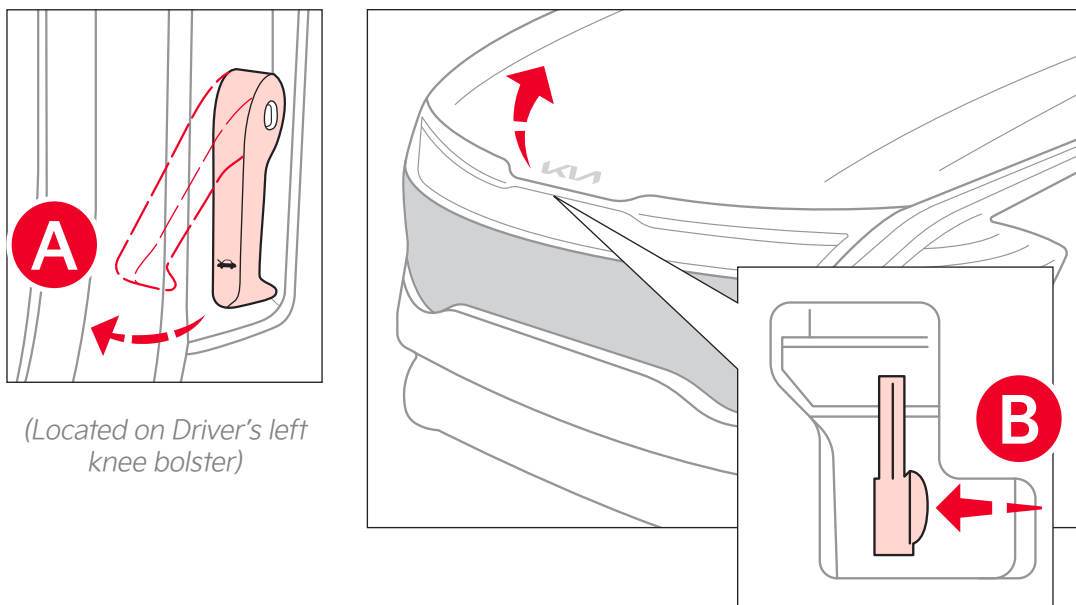

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in Park position and setting the parking brake
- Make sure the hood is securely closed before driving

Refer to section 6 in the Owner's Manual for more information.



OTHER KEY FEATURES

Tire Mobility Kit*

 
The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.



Tire Mobility Kit

- A** Compressor
- B** Sealant Bottle

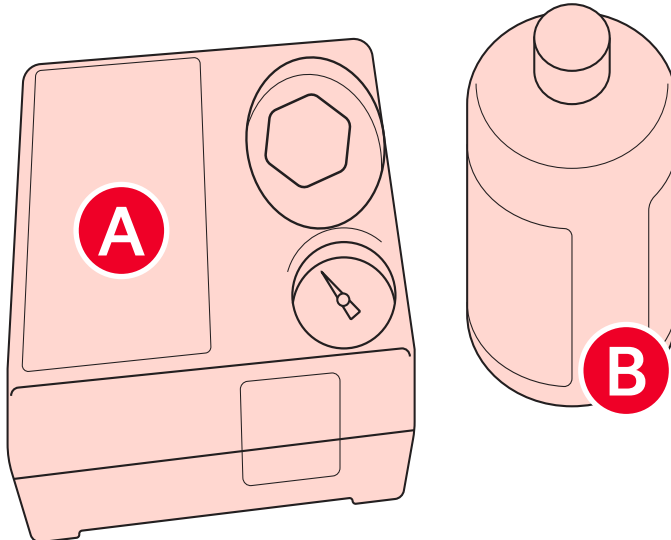

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

REMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet port area
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for no longer than a maximum distance of 120 miles

Refer to section 6 in the Owner's Manual for more information.

 


Seat Belts^{†14}

To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as low on the hips as possible **C**. Adjust the belt to a snug fit by pulling up on the shoulder portion **D**

REMINDER: For maximum protection, always wear your seat belt.

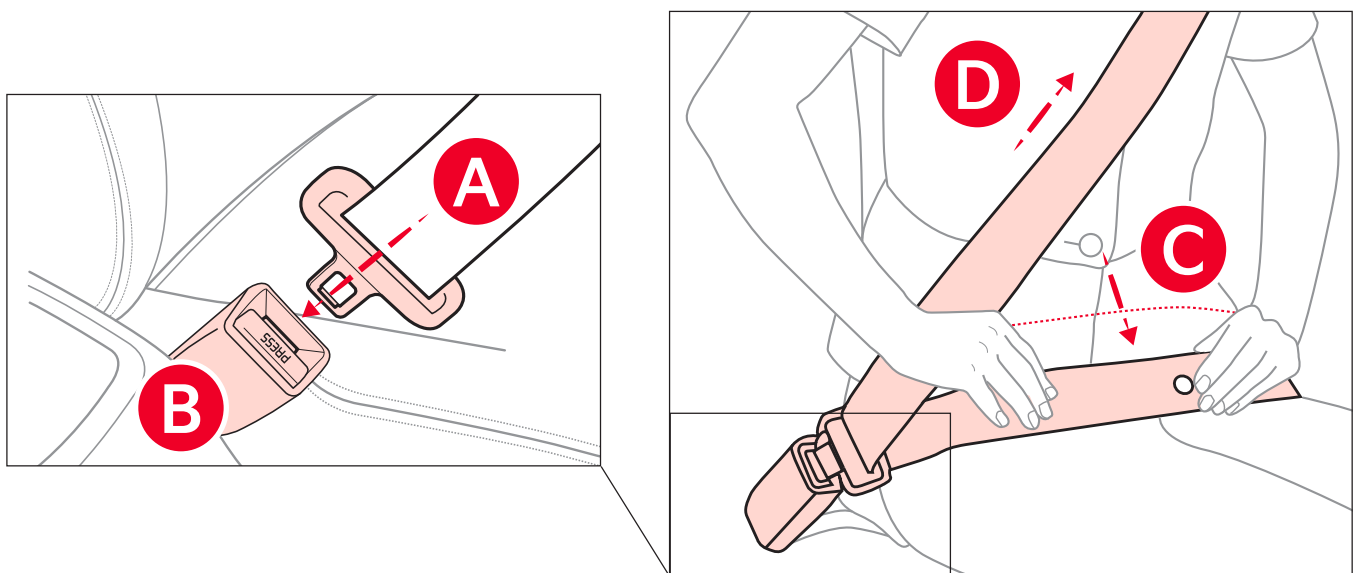

QUICK TIP

- The Seat Belt warning chime operates for driver's seat only

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort. During a strong stop, sudden turn or certain collisions, seat belt retractors will automatically lock the belts to reduce the risk of injury.

Refer to section 3 in the Owner's Manual for more information.

 


Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the lock position to disable the inner door handles from opening the rear doors.

REMINDERS:

- Child-Protector Rear Door Lock is located on rear passenger's door jamb
- To allow the door to be opened from inside the vehicle, unlock the Child-Protector Rear Door Lock
- To open the Rear Door, pull the outside door handle

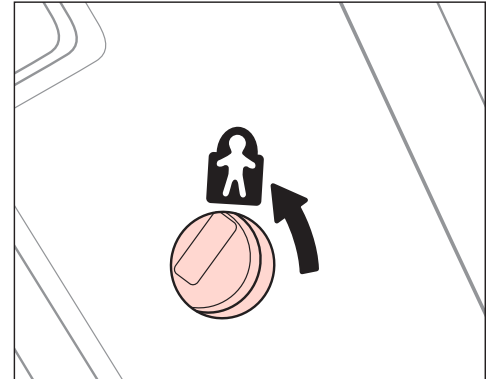

(Located on rear edge of rear passenger doors)

 
Refer to section 4 in the Owner's Manual for more information.

Occupant Detection System (ODS)^{†10} / Passenger Airbag Off Indicator^{†14}

ODS is designed to detect the presence of the front passenger and turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Deactivated)
- If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" indicator will illuminate.

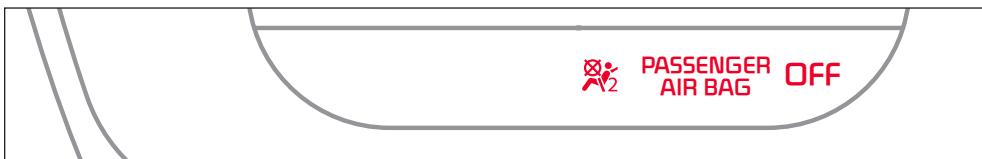

(Type B; overhead lamp console)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

Refer to section 3 in the Owner's Manual for more information.

<div>  <div>SPORTAGE NORMAL MAINTENANCE SCHEDULE</div> </div>	MAINTENANCE INTERVALS (UP TO 64,000 MILES) ^A							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Rotate tires	P	P	P	P	P	P	P	P
Add fuel additive ^C	R	R	R	R	R	R	R	R
Engine oil & filter (full synthetic oil)	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Air cleaner filter (engine)	I	I	R	I	I	R	I	I
Cooling system	I	I	I	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
12V battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hoses	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/ refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Propeller shaft (AWD)		I		I		I		I
Fuel tank air filter ‡ ^E		I		I		I		I
Parking brake		I		I		I		I
Fuel filler cap and fuel tank		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Drive belts (engine) ^F					I	I	I	I
Differential oil, rear (AWD) ^G					I			
Transfer case oil (AWD) ^G					I			

P = Perform

R = Replace

I = Inspect^B

‡ If equipped

A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having

issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Inspect water pump when replacing the drive belt.

F. The drive belt should be replaced when cracks occur or tension is reduced excessively.

G. If your vehicle has been submerged in water or in a flooded area, the fluids should be changed as a precaution

See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule.

Warranty may be voided if maintenance schedule is not followed.



Full Synthetic Oil

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into your Kia Access^{†2} App or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect^{†1} only)

† LEGAL DISCLAIMERS ON [PAGE 120](#) | *IF EQUIPPED



DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death.

The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

- 1. Kia Connect:** Purchase/lease of certain 2026 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect is currently unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- 2. Kia Access app for smartphone and smartwatch** requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model, model year and trim; remote climate control not supported on other vehicles not equipped with fully automatic temperature control.
- 3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®, SiriusXM®, Sportmatic®, Digital Key 2, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
- 4. Driver Assist Features - Forward/Side*/Reverse Parking Distance Warning (PDW), Blind-Spot Collision Warning (BCW), Rear Cross-Traffic Collision Warning (RCCA), Lane Keeping Assist (LKA), Rear View Monitor (RVM), Forward Collision-Avoidance Assist (FCA), Smart Cruise Control (SCC) , Blind-spot Collision Avoidance Assist (BCA), Blind-spot View Monitor (BVM), Safe Exit Warning (SEW), Lane Following Assist (LFA), Highway Driving Assist (HDA), Navigation-based Smart Cruise Control (NSCC), Leading Vehicle Departure Alert (LVDA), Surround View Monitor (SVM), Reverse Parking Collision-Avoidance Assist (PCA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 6. Electronic Stability Control (ESC)/Traction Control System (TCS)/Hill-start Assist Control (HAC), Downhill Brake Control (DBC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 7. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.
- 8. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 9. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- 11. Power Liftgate / Smart Power Liftgate:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation
- 12. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth® within the cellular service coverage area is required.
- 13. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 14. Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.
- 15. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 16. SiriusXM®:** SiriusXM® Satellite Radio, SiriusXM® Traffic and SiriusXM® Travel Link each require a subscription sold separately, or as a package, by SiriusXM® Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM® Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM®. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM® is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM® satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM® Internet Radio service is available throughout our satellite service area and in AK and HI. ©2025 SiriusXM® Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM® Radio Inc.
- 17. Steering Wheel Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 18. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
- 19. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
- 20. The myQ logo** is a registered trademark of The Chamberlain Group, Inc.

© 2025 Kia America, Inc. All rights reserved.
Consumer - Roadside Assistance^{†12}: 1-800-333-4KIA (4542)

*IF EQUIPPED