


# Features & Functions Guide



**Sportage**  
**Plug-In Hybrid**

# Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**How-To  
Resources  
Videos & Online**

## Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)  
Consumer Affairs - Roadside Assistance<sup>†12</sup>; 1-800-333-4KIA (800-333-4542)

*Always check the Owner’s Manual for complete operating information and safety warnings.*

† LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED



## Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:


[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)

**This document is interactive:** from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).


This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.

**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.


# Getting Started




Getting Started  
With Your  
New Kia



Your New Kia  
Important Care  
Tips



Vehicle Cameras  
Important Tips



Navigation System  
Tips

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems.

You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia’s most used features:

1

Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)\* . .

113

2

Fuel Filler Lid. . . . .

123

3

Power Adjustable Driver’s Seat\* . . . . .

106

4

Front Seat Headrest Adjustment . . . . .

109

5

Seat Warmers\* / Ventilated Seats\* . . . . .

105

6

Reclining/Folding Rear Seats. . . . .

111

7

Front & Rear Windshield Wipers & Washers . . . . .

73

8

Smart Cruise Control (SCC). . . . .

50

9

Power Liftgate\* Open/Close Button. . . . .

63

10

Normal Maintenance Schedule . . . . .

142

11

Vehicle Settings - Infotainment System. . . . .

22

12

Bluetooth® Wireless Technology . . . . .

78

13

Kia Connect Activation\* . . . . .

86

14

Kia Connect Assistance\* . . . . .

87

15

Kia Connect with Navigation\* . . . . .

90

16

Android Auto™ Setup. . . . .

81

17

Apple CarPlay® Setup . . . . .

84

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.*

\*IF EQUIPPED



# Table Of Contents

<b>WELCOME TO THE KIA FAMILY!</b>	<b>02</b>
<b>VIDEOS &amp; NAVIGATION</b>	<b>03</b>
<b>GETTING STARTED</b>	<b>04</b>
<b>INSTRUMENT CLUSTER</b>	
<a href="#">Instrument Cluster Overview</a>	<a href="#">08</a>
<a href="#">Plug-In Hybrid Indicators at Startup</a>	<a href="#">09</a>
<a href="#">Indicators &amp; Warning Lights</a>	<a href="#">10</a>
<a href="#">Tire Pressure Monitoring System (TPMS)</a>	<a href="#">12</a>
<a href="#">Tips for Economical Driving</a>	<a href="#">14</a>
<a href="#">Drive Mode Integrated Control System.</a>	<a href="#">15</a>
<a href="#">All-Wheel Drive (AWD/TERRAIN MODE)*.</a>	<a href="#">16</a>
<b>VEHICLE SETTINGS</b>	
<a href="#">Instrument Cluster LCD Modes</a>	<a href="#">17</a>
<a href="#">Trip Modes / Trip Computer</a>	<a href="#">18</a>
<a href="#">Head-Up Display (HUD) - 10" Display*</a>	<a href="#">19</a>
<a href="#">Average/Instant Fuel Economy</a>	<a href="#">20</a>
<a href="#">Service Interval Mode.</a>	<a href="#">21</a>
<a href="#">Vehicle Settings - Infotainment System.</a>	<a href="#">22</a>
<b>PLUG-IN HYBRID SYSTEM</b>	
<a href="#">Plug-In Hybrid Display*</a>	<a href="#">23</a>
<a href="#">Charging Your Plug-In Hybrid</a>	<a href="#">24</a>
<a href="#">Energy Flow - Instrument Cluster LCD</a>	<a href="#">28</a>
<a href="#">Scheduled Charging</a>	<a href="#">30</a>
<a href="#">Plug-In Hybrid Modes</a>	<a href="#">31</a>
<a href="#">Charging Connector Auto/Lock Mode</a>	<a href="#">32</a>
<b>ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)</b>	
<a href="#">Blind-spot Collision-Avoidance Assist (BCA)*.</a>	<a href="#">33</a>
<a href="#">Rear Cross-traffic Collision-Avoidance Assist (RCCA)*</a>	<a href="#">35</a>
<a href="#">Lane Keeping Assist (LKA)</a>	<a href="#">37</a>
<a href="#">Blind-spot View Monitor (BVM)*.</a>	<a href="#">39</a>
<a href="#">Safe Exit Warning (SEW)*.</a>	<a href="#">40</a>
<a href="#">Lane Following Assist (LFA)</a>	<a href="#">41</a>
<a href="#">Forward Collision-Avoidance Assist 2 (FCA2)*</a>	<a href="#">43</a>
<a href="#">Highway Driving Assist 2 (HDA2)*.</a>	<a href="#">47</a>
<a href="#">Forward/Side*/Reverse Parking Distance Warning (PDW)</a>	<a href="#">49</a>
<a href="#">Smart Cruise Control (SCC)</a>	<a href="#">50</a>
<a href="#">Navigation-based Smart Cruise Control - (NSCC)*</a>	<a href="#">52</a>
<a href="#">Driver Attention Warning (DAW).</a>	<a href="#">53</a>
<a href="#">Leading Vehicle Departure Alert (LVDA)</a>	<a href="#">54</a>

**CONTINUED ON NEXT PAGE**

# Table Of Contents

## CONTINUED FROM PREVIOUS PAGE

### ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS) continued

<a href="#">Remote Smart Parking Assist (RSPA)*</a>	<a href="#">55</a>
<a href="#">Intelligent Speed Limit Assist (ISLA)*</a>	<a href="#">56</a>
<a href="#">Rear View Monitor (RVM)</a>	<a href="#">58</a>
<a href="#">3D Surround View Monitor (SVM)*</a>	<a href="#">59</a>
<a href="#">Reverse Parking Collision-Avoidance Assist (PCA)*</a>	<a href="#">61</a>

### DRIVER’S PANEL

<a href="#">Instrument Cluster Illumination Control</a>	<a href="#">62</a>
<a href="#">Electronic Stability Control (ESC)</a>	<a href="#">62</a>
<a href="#">Power Liftgate Open/Close Button*</a>	<a href="#">63</a>
<a href="#">Hill-start Assist Control (HAC)</a>	<a href="#">64</a>
<a href="#">Power Windows, Window Lock &amp; Central Door Lock</a>	<a href="#">65</a>
<a href="#">Automatic Door Lock/Unlock</a>	<a href="#">66</a>
<a href="#">Power Outside Mirrors</a>	<a href="#">67</a>
<a href="#">Heated Outside Mirrors*</a>	<a href="#">67</a>
<a href="#">Engine Start/Stop Button</a>	<a href="#">68</a>

### STEERING WHEEL CONTROLS

<a href="#">Headlights &amp; High Beams</a>	<a href="#">70</a>
<a href="#">Daytime Running Lights (DRL)</a>	<a href="#">70</a>
<a href="#">High Beam Assist (HBA)</a>	<a href="#">71</a>
<a href="#">Turn Signals &amp; Fog Lights*</a>	<a href="#">72</a>
<a href="#">Windshield Wipers &amp; Washers</a>	<a href="#">73</a>
<a href="#">Rear Wiper &amp; Washer</a>	<a href="#">74</a>
<a href="#">Tilt/Telescoping Steering Wheel</a>	<a href="#">75</a>
<a href="#">Heated Steering Wheel*</a>	<a href="#">76</a>

### INFOTAINMENT SYSTEM

<a href="#">Audio Controls - Steering Wheel</a>	<a href="#">77</a>
<a href="#">Bluetooth® Wireless Technology</a>	<a href="#">78</a>
<a href="#">Android Auto™ Setup</a>	<a href="#">81</a>
<a href="#">Apple CarPlay® Setup</a>	<a href="#">84</a>
<a href="#">Kia Connect Activation*</a>	<a href="#">86</a>
<a href="#">Kia Connect Assistance*</a>	<a href="#">87</a>
<a href="#">Kia Access App Download</a>	<a href="#">88</a>
<a href="#">Kia Access App Features Guide</a>	<a href="#">89</a>
<a href="#">Kia Connect with Navigation*</a>	<a href="#">90</a>

## CONTINUED ON NEXT PAGE

\*IF EQUIPPED

# Table Of Contents

## CONTINUED FROM PREVIOUS PAGE

### CENTER PANEL

<a href="#">Multimedia USB Port, Power Outlets &amp; USB Charger Port</a>	<a href="#">93</a>
<a href="#">Digital Clock (Infotainment System)</a>	<a href="#">94</a>
<a href="#">Wireless Smartphone Charging System*</a>	<a href="#">95</a>
<a href="#">Rotary Dial Shifter</a>	<a href="#">97</a>
<a href="#">Paddle Shifters</a>	<a href="#">98</a>
<a href="#">Automatic Climate Control</a>	<a href="#">99</a>
<a href="#">Electronic Parking Brake (EPB)</a>	<a href="#">102</a>
<a href="#">Auto Hold</a>	<a href="#">103</a>
<a href="#">Downhill Brake Control (DBC)</a>	<a href="#">104</a>
<a href="#">Seat Warmers / Ventilated Seats*</a>	<a href="#">105</a>

### SEATING

<a href="#">Power Adjustable Driver’s Seat*</a>	<a href="#">106</a>
<a href="#">Driver Position Memory System*</a>	<a href="#">107</a>
<a href="#">Infotainment System Seat Settings*</a>	<a href="#">107</a>
<a href="#">6-Way Manual Adjustable Driver’s Seat*</a>	<a href="#">108</a>
<a href="#">Front Seat Headrest Adjustment</a>	<a href="#">109</a>
<a href="#">Rear Occupant Alert (ROA) with Door Monitoring</a>	<a href="#">110</a>
<a href="#">Reclining/Folding Rear Seats</a>	<a href="#">111</a>
<a href="#">Unfastening Center Seat Belt</a>	<a href="#">112</a>

### OTHER KEY FEATURES

<a href="#">Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)*</a>	<a href="#">113</a>
<a href="#">Digital Key 2*</a>	<a href="#">116</a>
<a href="#">Remote Keyless Entry (Folding Key)*</a>	<a href="#">120</a>
<a href="#">Double-Turn Lock/Unlock All</a>	<a href="#">121</a>
<a href="#">Fuel Cap / Malfunction Indicator</a>	<a href="#">122</a>
<a href="#">Fuel Filler Lid</a>	<a href="#">123</a>
<a href="#">HomeLink® with Auto-Dimming Rearview Mirror*</a>	<a href="#">124</a>
<a href="#">Power Liftgate*</a>	<a href="#">129</a>
<a href="#">Smart Power Liftgate*</a>	<a href="#">131</a>
<a href="#">Manual Liftgate* / Liftgate Release Button</a>	<a href="#">132</a>
<a href="#">Map/Room Lamps</a>	<a href="#">133</a>
<a href="#">Panoramic Sunroof Operation with Power Sunshade*</a>	<a href="#">134</a>
<a href="#">Sun Visors</a>	<a href="#">136</a>
<a href="#">Hood Release Lever and Latch</a>	<a href="#">137</a>
<a href="#">Tire Mobility Kit*</a>	<a href="#">138</a>

### SAFETY FEATURES

<a href="#">Seat Belts</a>	<a href="#">139</a>
<a href="#">Child-Protector Rear Door Lock</a>	<a href="#">140</a>
<a href="#">Occupant Detection System (ODS) / Passenger Airbag Off Indicator</a>	<a href="#">141</a>

<a href="#">MAINTENANCE SCHEDULE</a>	<a href="#">142</a>
--------------------------------------	---------------------

<a href="#">LEGAL DISCLAIMERS</a>	<a href="#">143</a>
-----------------------------------	---------------------

\*IF EQUIPPED



## INSTRUMENT CLUSTER

 
### Instrument Cluster Overview

- A** Turn Signal Indicators
- B** Gear Shift Position, Range, Trip Modes
- C** Speedometer
- D** Indicator & Warning Lights
- E** Tachometer
- F** Fuel Gauge
- G** Outside Temperature, Odometer
- H** Hybrid battery State of Charge gauge



Instrument Cluster Display

◀▶ Arrow indicates the side of the vehicle on which the fuel door is located.

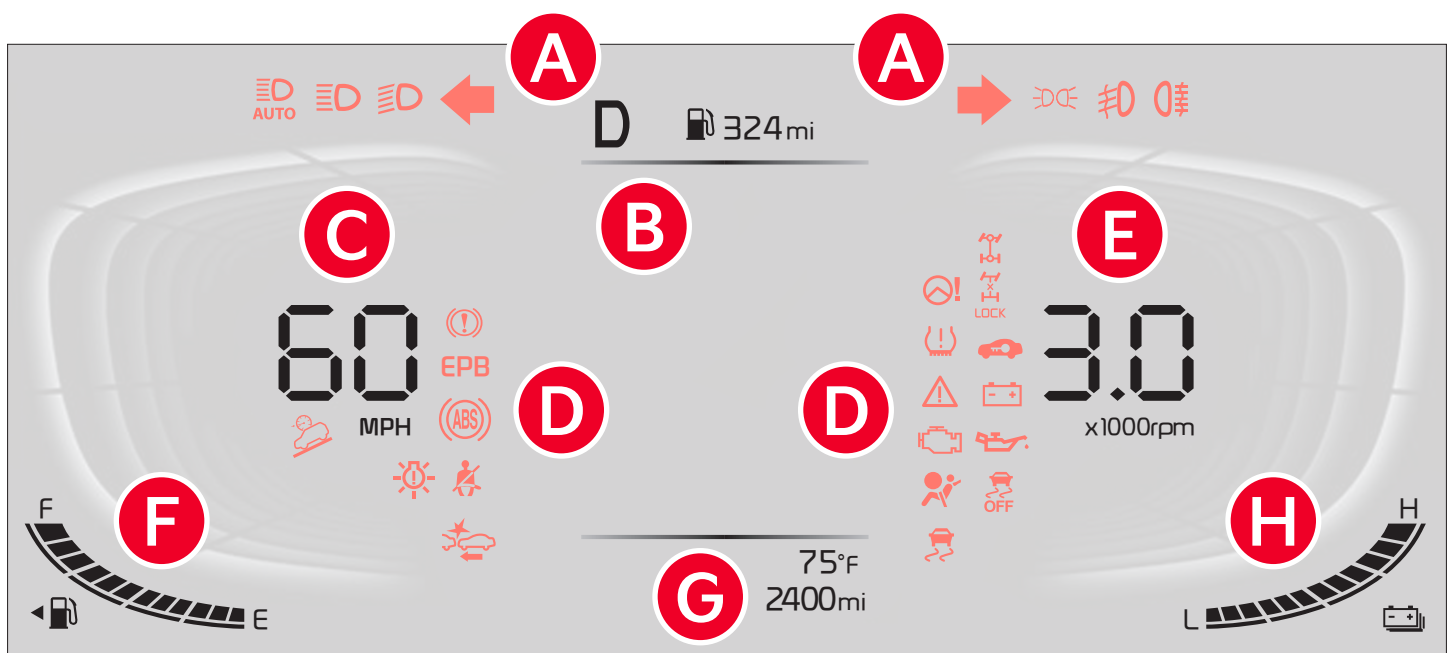

(Conventional Type A Cluster)

These illustrations are for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.



## Plug-In Hybrid Indicators at Startup

**Power Gauge** - Indicates how economically the vehicle is being driven.

 
- **CHARGE A** - Indicates that the energy made by the vehicle is being converted to electrical energy (regenerated energy)
- **ECO B** - Indicates that the vehicle is being driven in an efficient manner
- **POWER C** - Indicates that the vehicle is exceeding the fuel efficiency range

**D EV Mode** - Illuminates when only the electric motor is powering the vehicle

**E Ready** - Illuminates when the Hybrid system is operational. This means that even if the engine is off, the vehicle can be driven (Plug-In Hybrid indicator location may vary from image shown)

**F Service Indicator** - Illuminates when a malfunction occurs in the vehicle's Hybrid system. Have an authorized Kia dealer address the concern as soon as possible

**G Hybrid battery State of Charge gauge**

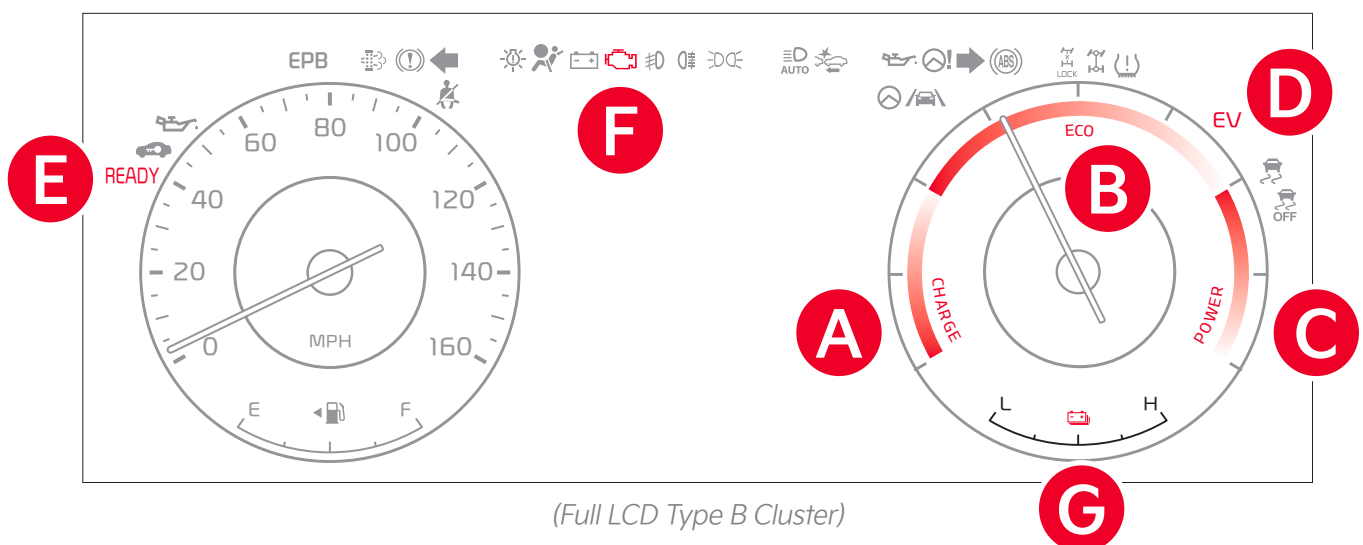


(Full LCD Type B Cluster)

**REMINDER:** Avoid starting or driving the vehicle when the fuel tank is empty. As the engine will be incapable of charging the high-voltage Hybrid battery, the battery will lose its charge and may be damaged.

*Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information, please refer to sections 1 and 5 in the Owner's Manual.*



## Indicators & Warning Lights

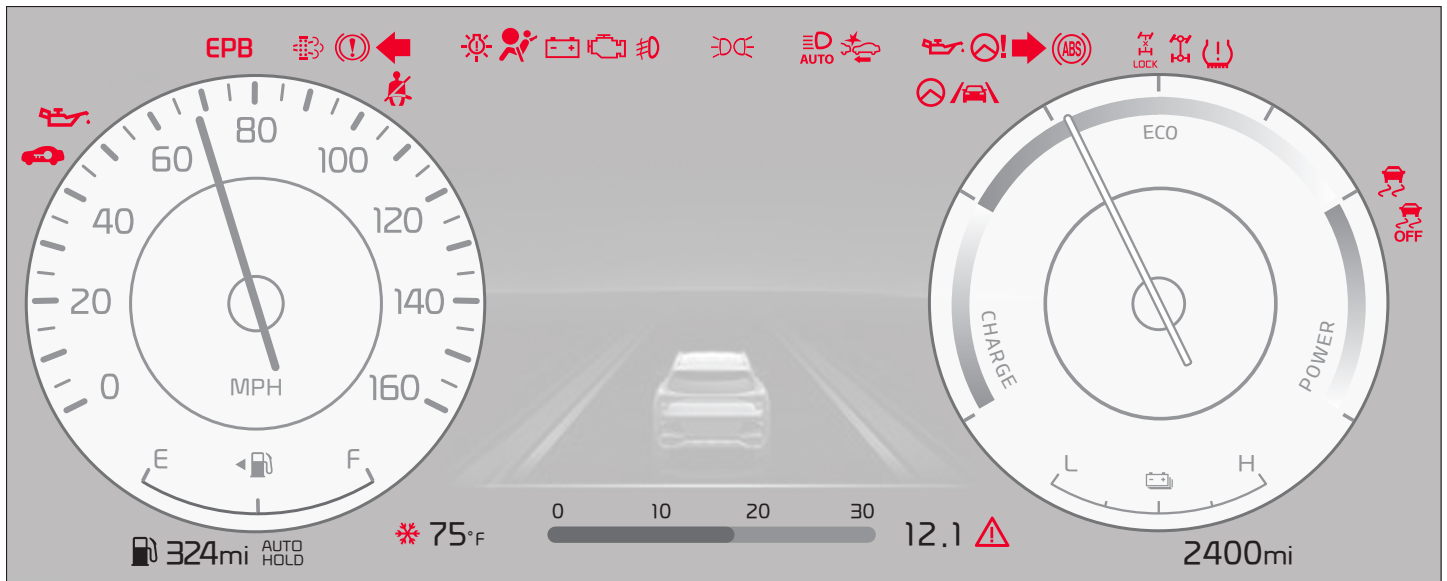 

(Full LCD Type B Cluster)



Immobilizer Indicator\*



Malfunction Indicator



Engine Oil Pressure  
Warning Light



Front Fog Light Indicator\*

**EPB**

Electric Parking Brake (EPB)  
Warning Light\*



Light ON Indicator



Exhaust System (GFS)  
Warning Light



High Beam Assist  
Indicator\*



Turn Signal Indicators



Forward Safety Warning Light



Seat Belt Warning Light



Lane Following Assist (LFA)  
Indicator



LED Headlamp Warning Light\*



Lane Safety Indicator



Airbag Warning Light



Electric Motor Driven Power  
Steering (MDPS) Warning  
Indicator



Charging System Warning Light



 
Anti-lock Braking System (ABS)  
Warning

[Continued on next page](#)



Indicators & Warning Lights

[Continued from previous page](#)

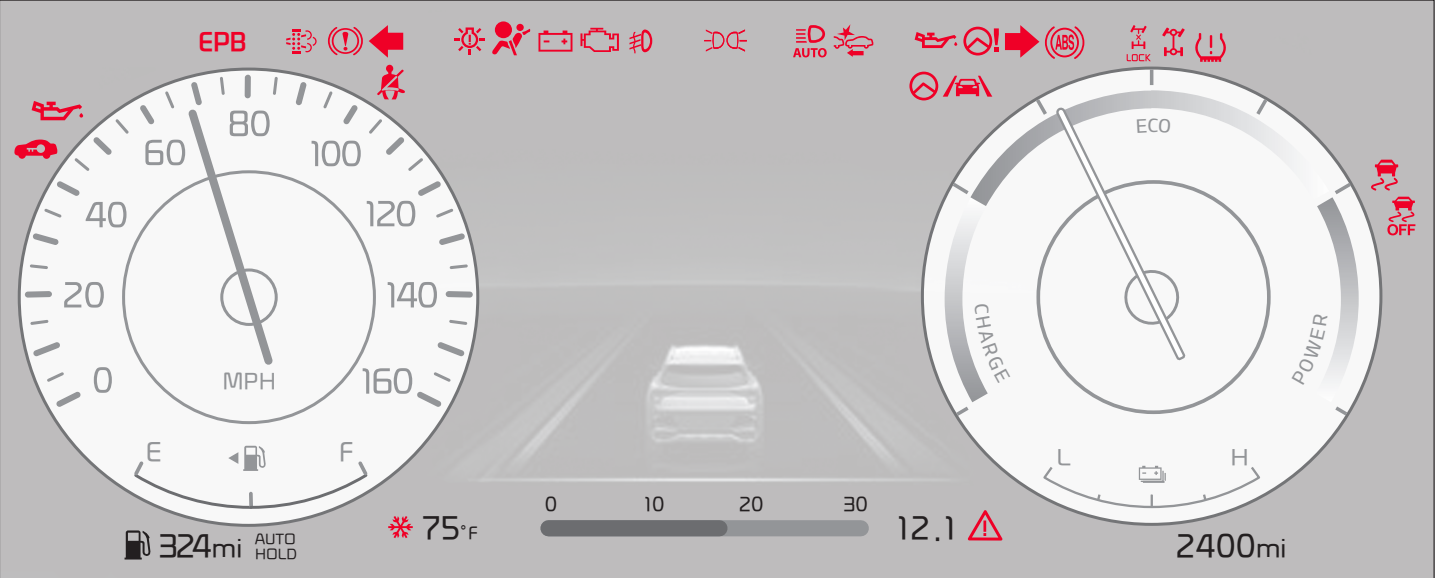

(Full LCD Type B Cluster)

	AWD LOCK Indicator Light*		Auto Hold Indicator Light*
	All Wheel Drive (AWD) Warning Light*		EV Mode Indicator Light
	Low Tire Pressure Light /Tire Pressure Monitoring System (TPMS) Malfunction Indicator		Sport Mode Indicator Light*
	Electronic Stability Control (ESC) Indicator Light		ECO Indicator Light
	Electronic Stability Control (ESC) OFF Indicator Light		Parking Brake & Brake Fluid Warning Light
	Icy Road Warning Indicator Light*		Cruise Indicator Light*
	Master Warning Light*		Downhill Brake Control (DBC) Indicator Light
	Low Fuel Level Warning Light		Electronic Brakeforce Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time)

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle’s Instrument Cluster & indicator light locations may differ from those in the illustrations.

For more information on the Instrument Cluster and the function of all indicator and warning lights, please refer to section 5 in the Owner’s Manual.


\*IF EQUIPPED





## Tire Pressure Monitoring System (TPMS)<sup>†21</sup>


The TPMS indicator  functions as both a Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  will illuminate if it detects one or more tires are significantly underinflated, the vehicle has a tire installed without TPMS.

Inflate tire(s) to specifications using an accurate tire pressure gauge to turn off Low Tire Pressure Indicator

. See front driver's door jamb

for PSI specification. The Low Tire

Pressure Position Indicator  is displayed on the Instrument Cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction

Indicator  will blink for approximately one minute and then illuminate.

 
See dealer for service.



**Tire Pressure  
Monitoring  
System (TPMS)**

**A**

**Low Tire Pressure**

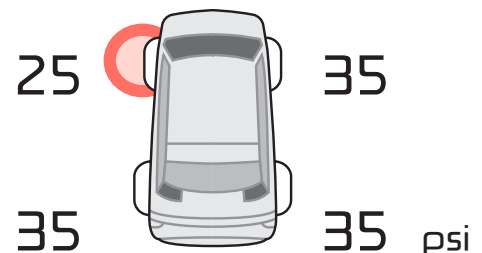

*The above images are for illustrative purposes only and may not reflect actual display*

[Continued on next page](#)

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 8 in the Owner's Manual for more information.*





# Tire Pressure Monitoring System (TPMS)<sup>†21</sup>

[Continued from previous page](#)

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate



# Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:



**Tips for  
Economical  
Driving**

- Use the climate control system less often. Use the Driver Only\* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

*Refer to section 5 in the Owner's Manual for more information or tap the video link above to view a video.*



## Drive Mode Integrated Control System

The Drive Mode may be selected based on the driver's preferences and road conditions.

 


**Drive Mode  
Integrated Control  
System**

To cycle through the different Drive

Modes **A**, press the DRIVE MODE button **B**. The Instrument Cluster will display MY DRIVE, SPORT or ECO mode when selected.

- **ECO** - This mode can help increase fuel efficiency through engine and transmission control
- **SPORT** - This mode provides enhanced acceleration and dynamic drivability. The electric energy efficiency may decrease in this mode
- **MY DRIVE** - This mode allows the driver to select separate modes and combine them on the Infotainment System

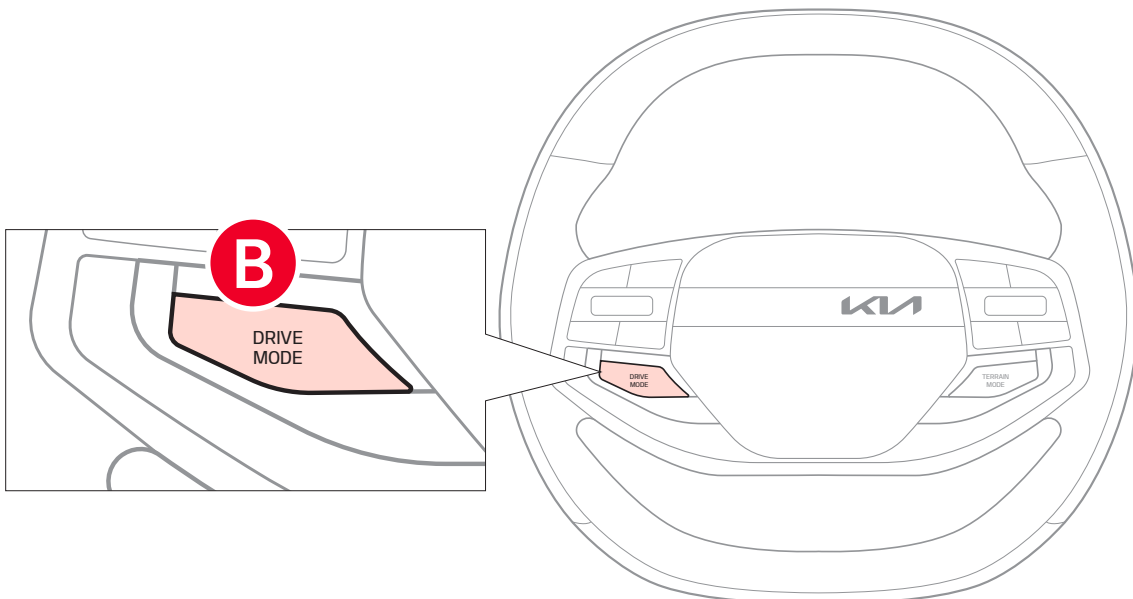

(Button located on left side of steering wheel. Button configuration may vary.)

### REMINDERS:

- Steering effort may be slightly increased in SPORT mode
- Fuel economy may decrease in SPORT mode

*Image is for illustrative purposes only and may not reflect actual feature or operation. Your vehicle's buttons may differ from those in the illustrations.*

*Refer to section 6 in the Owner's Manual for more information.*



### All-Wheel Drive (AWD/TERRAIN MODE)\*

Terrain Mode activates the All-Wheel Drive (AWD) system to help the vehicle maintain its best driving performance by controlling the wheels, engine,

 
transmission and braking to best suit the road conditions, such as snow, mud or sand. To turn on Terrain Mode, press the TERRAIN MODE button **A** and select SNOW, MUD or SAND mode.



**All-Wheel Drive  
(AWD/TERRAIN  
Mode)**

- **SNOW mode** ensures safe driving by appropriately distributing the vehicle's traction forces to prevent wheel slippage on snowy or slippery roads
- **MUD mode** ensures safe driving by appropriately distributing the vehicle's traction forces on muddy, unpaved or rough roads
- **SAND mode** ensures safe driving by appropriately distributing the vehicle's traction forces on sandy, graveled or unpaved roads

When Terrain Mode is deactivated, a vibration may be felt as the traction forces on the front and rear wheels of the vehicle are released. This vibration is not a mechanical failure.

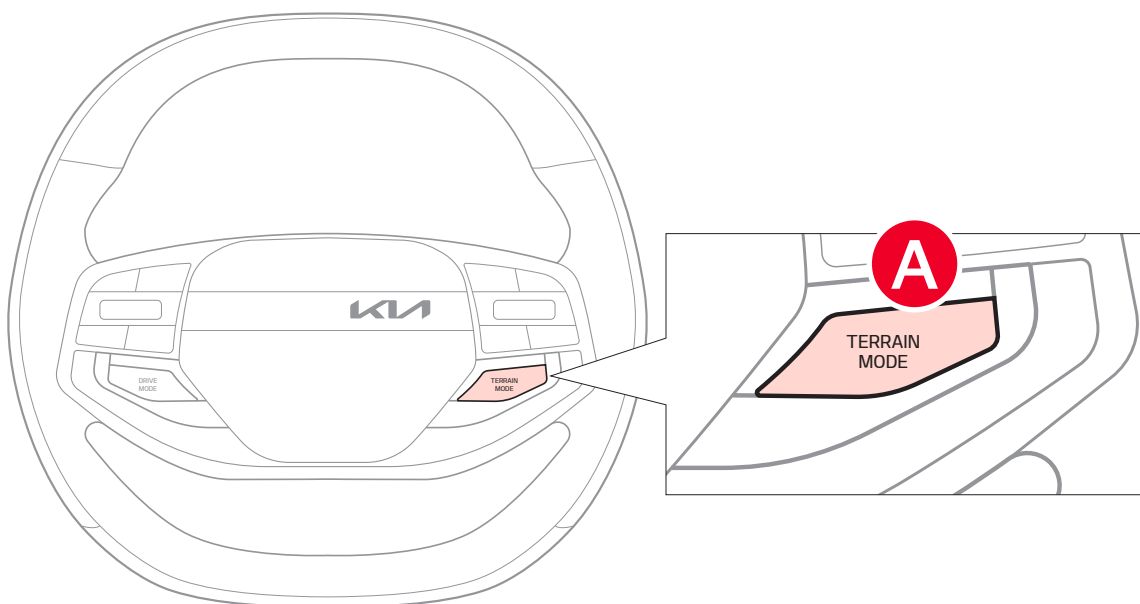


(Button located on right side of steering wheel. Button configuration may vary.)

*Image is for illustrative purposes only and may not reflect actual feature or operation. Your vehicle's buttons may differ from those in the illustrations. Refer to section 6 in the Owner's Manual for more information.*



## Instrument Cluster LCD Modes

Press the Steering Wheel Mode button  **A** to cycle through different Instrument Cluster Modes:



**Instrument Cluster Display**



**Trip Computer Mode:** Displays driving information for fuel economy, accumulated info, etc.



**Turn-by-Turn Mode\*:** Displays the state of info on route guidance and destination



 
**Driving Assist:** Displays information for Highway Driving Assist\*, Lane Keeping Assist, Blind-spot Collision-Avoidance Assist\*, Smart Cruise Control\*, Lane Following Assist



**User Settings:** Change settings of Driver Assistance Cluster, doors, lights, convenience, units, and other features



**Information/ Master Warning Mode:** Informs of driving force distribution and warning messages related to the vehicle, TPMS<sup>†</sup>, Driver Assist systems

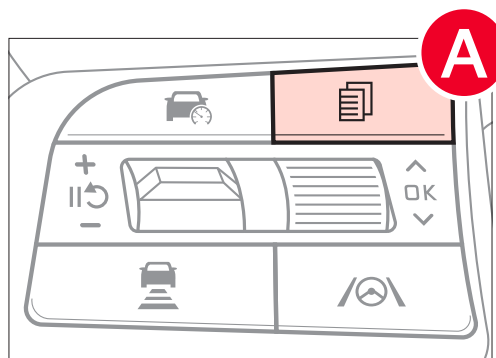

(Buttons located on left side of Steering Wheel. Button configuration may vary.)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*


*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*


*Refer to section 5 in the Owner's Manual for more information.*



# Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. The ignition switch or the Engine Start/Stop button must be in the ON position for the information to display.

To cycle through the different Instrument Cluster modes, press the Mode button  **A**.

When in Trip Computer mode , press the OK button **B** up/down to cycle through the screens **C**. When displaying trip information or the fuel economy screens, press and hold the OK button **B** to reset the Trip distance to zero.

 
REMINDERS:

- Appearance of Trip Computer display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected


*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations.*

*Refer to section 5 in the Owner's Manual for more information.*

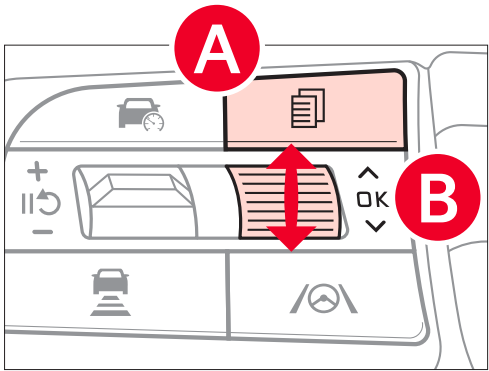

 (Buttons located on left side of Steering Wheel. Button configuration may vary.)

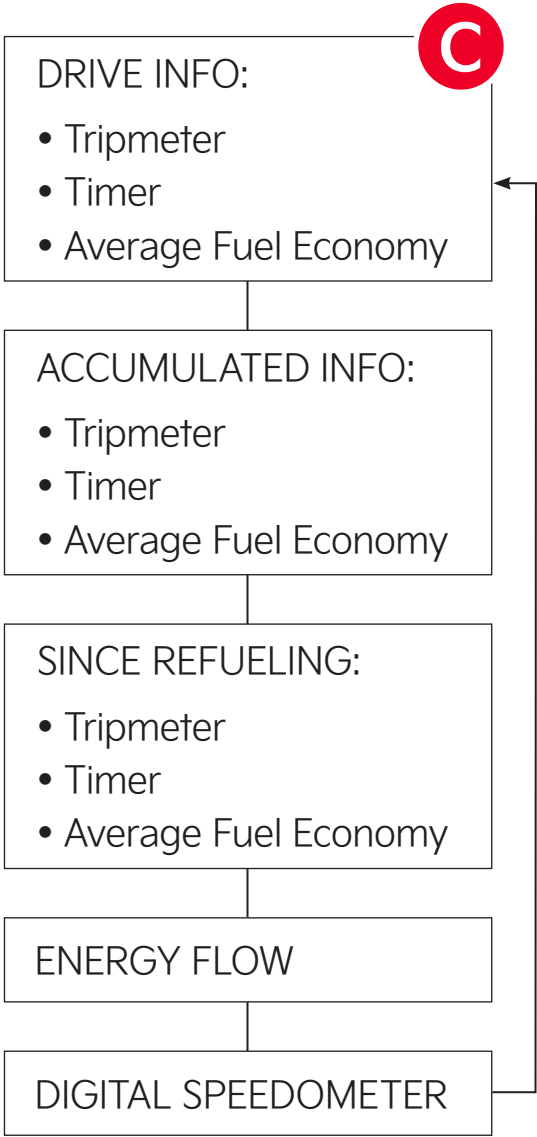

(Type A Cluster)

\*IF EQUIPPED



### Head-Up Display (HUD) - 10" Display<sup>\*†4,9</sup>

The Head-up Display (HUD) is a semi-transparent display that projects selected information, such as driving speed and road-related info, onto the windshield.

The following types of information can be selected to appear on the HUD:

 
- Turn by Turn (TBT) directions for navigation
- Traffic sign information
- Driving Convenience information
- Blind-spot safety information
- Media information

HUD can be activated and adjusted in the Vehicle Settings. On the Infotainment System, press **SETUP**, then **CLUSTER/HEAD-UP DISPLAY**:

- **ENABLE HEAD-UP DISPLAY:** Select to turn HUD on or off
- **DISPLAY ADJUSTMENT CONTROL:** Adjust the height, rotation and brightness
- **CONTENT SELECTION:** Selectively turn on or off the different types of information you want to display in the HUD



**Head-Up  
10" Display**

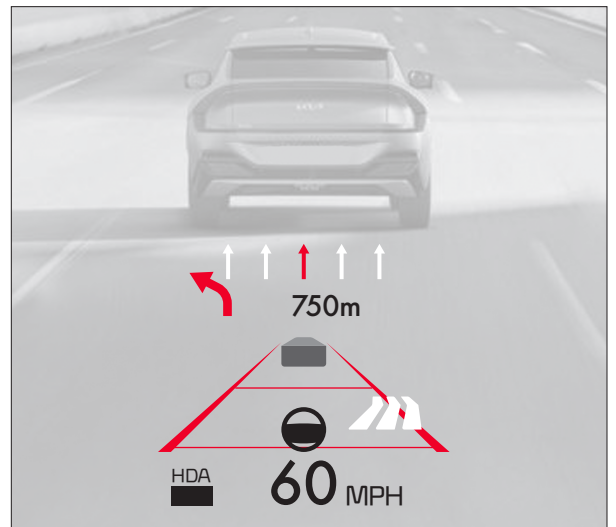

*Available settings may differ depending on vehicle model and specifications.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. When engaged, HUD is a supplemental system. Do not rely solely on the system, always drive safely and pay attention to the driving conditions on the road. For more information, refer to the Car Infotainment System Quick Reference Guide.*



### Average/Instant Fuel Economy

This information is always displayed at the bottom center of the Instrument Cluster. The average fuel economy is calculated by the total driving distance and fuel consumption since the last reset. Instant fuel economy displays the fuel economy during the last few seconds, when the vehicle speed is faster than approximately 6 mph.



**Steering Wheel  
Controls**




**REMINDER:** If the vehicle speed exceeds 6.2 mph after being refueled with more than 1.6 gallons, the average fuel economy will be reset to zero (----).

 
*Refer to section 5 in the Owner's Manual for more information.*





## Service Interval Mode

To enter Service Interval Mode, press the Mode button  **A** and cycle to User Settings , then Service Interval Mode . Then press the OK button **B** to enter. System will display the number of miles and days remaining until the next service is due.

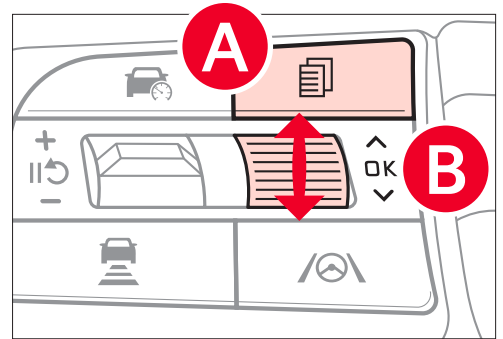

(Buttons located on left side of Steering Wheel. Button configuration may vary.)




If you do not service your vehicle according to the maintenance schedule, when service is required, the following will be displayed:

### Service Required.

When in Service Mode, to reset the system, press and hold the OK button **B** for more than 1 second. To turn Service Interval reminders off, uncheck Service Interval.



**Service Interval Setting:** When in the **Service Interval Mode** screen, set the service interval:

- Press the Mode button  **A** to cycle to User Settings 
- Scroll to Convenience, then to Service Interval  and select
- If Service Interval is not checked, press the OK button **B** to turn ON
- Press the OK button **B** up/down to select/change the interval setting
- Press the OK button **B** to set the interval


### QUICK TIP

An “Engine Oil Change Due Soon” message appears on the Instrument Cluster when the engine oil needs to be changed. After oil change, reset the oil change reminder in User Settings\*. Go to Convenience, then Oil Change Reminder, then press and hold the OK button **B** for more than 1 second. On the Infotainment System, go to Settings, then Vehicle, then Cluster, then Oil Change Reminder.

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. Images are for illustrative purposes only and may vary. Refer to section 5 in the Owner’s Manual for more information.*



# Vehicle Settings - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System, press the **SETUP** button onscreen. Then press **VEHICLE** , which will take you to Vehicle Settings.



Vehicle Settings

Use the touchscreen to navigate through the menus.

- **Driver Assistance** - Warning Method, Driving Safety, Parking Safety and other driver assist systems
- **ECO Vehicle** - Settings to customize various fuel efficiency features
- **Cluster** - Instrument Cluster settings including theme selection, wiper/lights display, traffic signs, etc.
- **Climate\*** - Settings for recirculating air, automatic ventilation and defrost/defog options
- **Seat\*** - Settings for seat easy access, seat position change alert
- **Lights** - Settings for Ambient Light, One-touch turn signal, headlight delay, illumination and High Beam Assist
- **Door\*** - Settings for Auto Lock/Unlock, Two-press unlock, power liftgate and smart liftgate\*
- **Convenience** - Turn on/off Rear Occupant Alert, Wireless Charging System, Auto Rear Wiper and settings for Service Interval

*Some settings in certain models may be available through User Settings in the Instrument Cluster. Refer to the Car Infotainment System Quick Reference Guide.*

 
 
 
*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*



# Plug-In Hybrid Display\* (Navigation Infotainment System only)

The Infotainment System screen provides information on economical operation and Plug-In Hybrid\* system modes. To enter the Plug-In Hybrid display mode, press the PHEV button on the Infotainment System’s home screen. Then select one of the menus: EV Range, Energy Information, Charge Management, ECO Driving, Energy Flow. Some examples are below:

- **Plug-In Hybrid System Home Screen** - EV Range, Energy Info, Charge Management, ECO Driving, Energy Flow
- **ECO Level** - The more economically you drive, the more the ECO Level increases
- **Energy Flow** - Displays the current flow of power between the main powertrain components
- **Fuel Economy** - Displays the average fuel economy over the duration of a trip

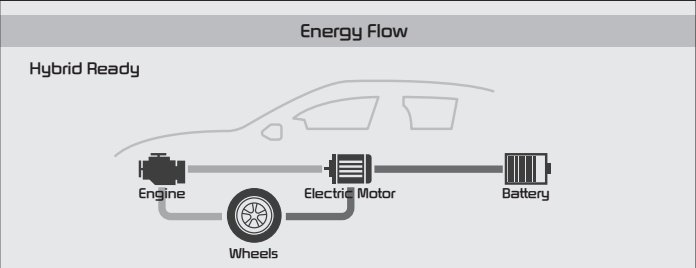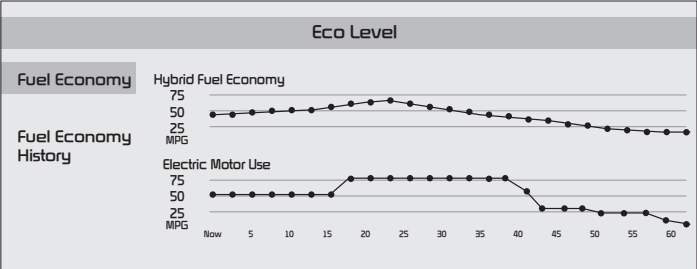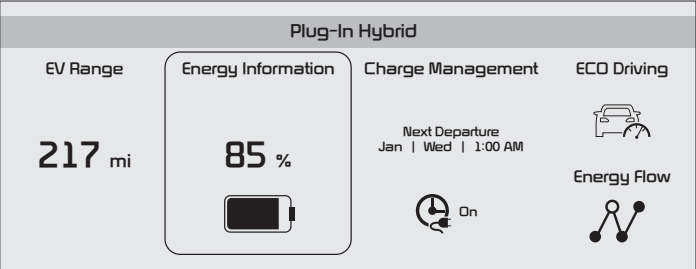

Eco Driving				
Fuel Economy	05-06-2022	27 mi	13.2 mpg	Driving dates, distances and fuel economy for the past 30 drives in the History are displayed.
Fuel Economy History	05-04-2022	22 mi	12.9 mpg	
	05-03-2022	14 mi	13.6 mpg	
	05-02-2022	7 mi	12.3 mpg	
	05-01-2022	18 mi	13.6 mpg	

The images shown are for illustrative purposes only. Not all available displays are shown. Screen content may vary.

For more information, refer to section 1 in the Owner’s Manual or the Car Infotainment System Quick Reference Guide.

\*IF EQUIPPED



## Charging Your Plug-In Hybrid

### Level 1 Charging - AC Charge

A Level 1 or AC charger uses 120 volts of household electricity and takes up to 10.5 hours for a full charge.



Charging Your Electric Vehicle



 
Plug-In Hybrid Charging & Connector

### Portable Charger Components:

- A** Charging Connector
- B** Cable
- C** In-Cable Control Box (ICCB)
- D** Display
- E** NEMA 14-50P
- F** NEMA 5-15P

### REMINDERS:

- Do not use an extension cord. Plug trickle charger directly into wall socket. Do not charge to a receptacle that is old, damaged, corroded or cracked
- When using outdoors, be careful not to expose it to external environments such as rain, snow, and high temperatures

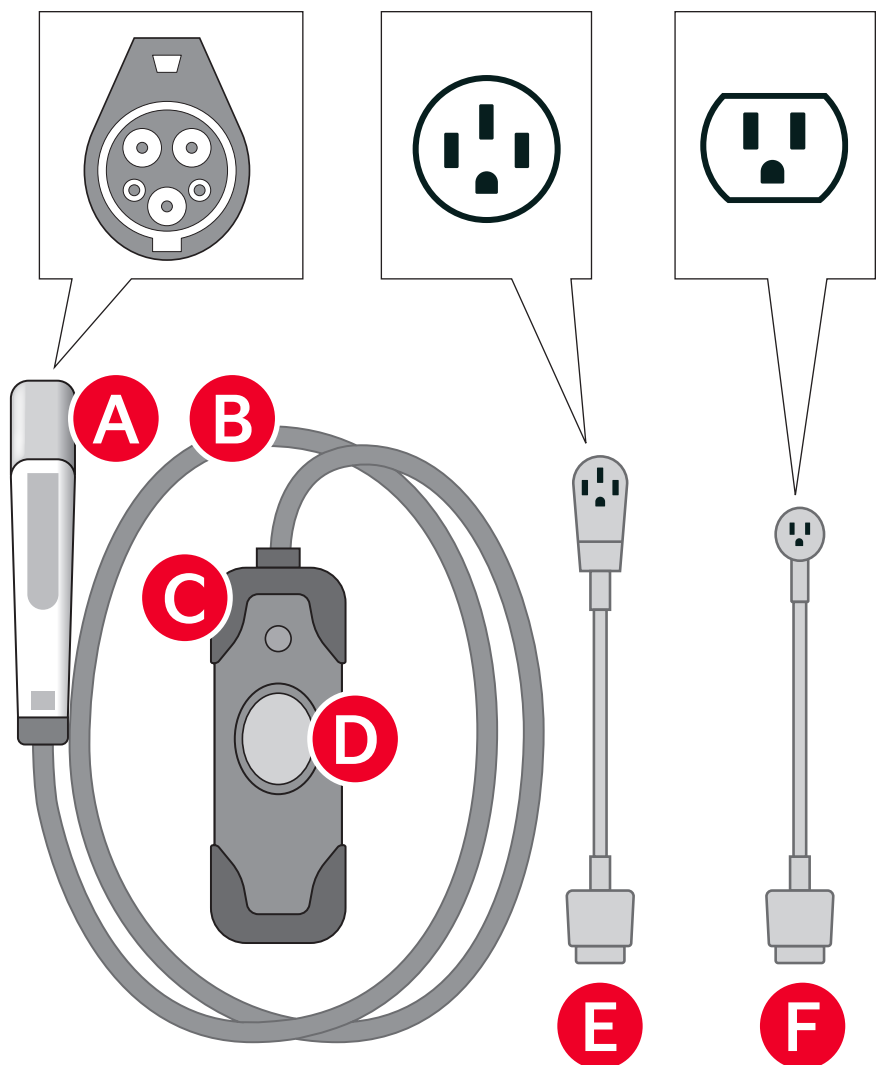

[Continued on next page](#)



# Charging Your Plug-In Hybrid

[\*Continued from previous page\*](#)

## Level 2 Charging - "Normal" Charge

A Level 2 or 240-volt AC charger is the recommended charging system for the Plug-In Hybrid. This type of charger uses 240 volts of electricity and takes approximately 3.5+ hours for a full charge (Based on Kia Motors Corporation testing with SAE J1772 charger performed at 3.3kW). This charger may be able to be installed at your home or found at a public charging station.

**REMINDER:** Kia does not recommend primarily charging with a DC charger because it can reduce the lifespan of the battery. Shape of charger and how to use the charger may be different for each manufacturer. Please see Owner's Manual for more information.

[\*Continued on next page\*](#)

*The images are for illustrative purposes only and may not reflect actual feature or operation.*

*For more information, refer to section 1 in the Owner's Manual.*

 


## Charging Your Plug-In Hybrid

[Continued from previous page](#)

### To charge the Plug-In Hybrid vehicle using an AC charger:

1. Ensure scheduled charging is not set on the Infotainment System or the Kia Access App<sup>\*†2</sup>
2. Press the brake pedal and engage the parking brake
3. Turn off all switches, put the shift lever in P (Park), and turn off the vehicle
4. Open the charging door **A** by pressing the rear center edge of charging door (Ensure doors are unlocked)
5. Remove any dust or water on the charging connector and charging inlet **B**
6. Remove the charging inlet cover **C**
7. Hold the charging connector handle **D** and connect it to the vehicle's charging inlet **B** by pushing the connector until you hear a clicking sound
8. Charging begins automatically (Ensure the charge indicator light is illuminated near the charging inlet, indicating the vehicle is charging)

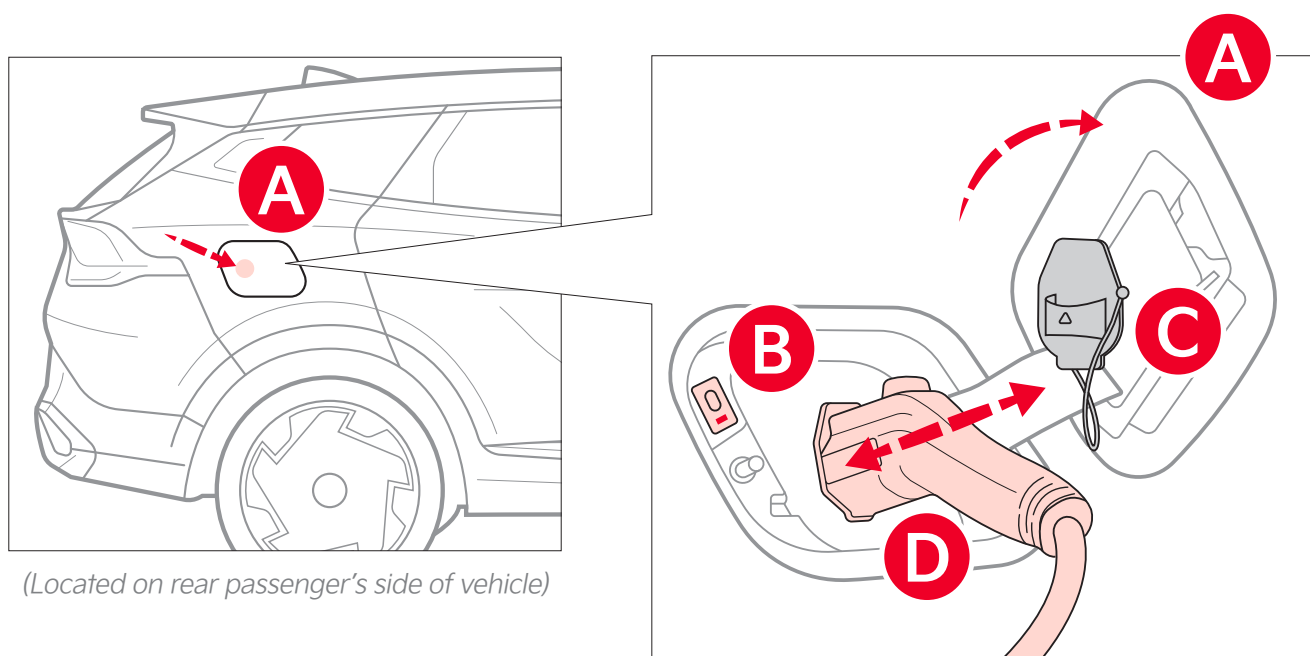


[Continued on next page](#)

# Charging Your Plug-In Hybrid

 [Continued from previous page](#)

## Checking the Charging Status:

The charging status can be checked by viewing the charging status indicator **A** near the charging inlet (bottom indicator). The charging indicator will blink yellow when charging, and the charge is from 0-65%. The charging indicator will blink green when charging and the charge is from 65-100%. The indicator will turn off within 5 seconds when charging is completed. When indicator is blinking red, there's an error while trying to charge.

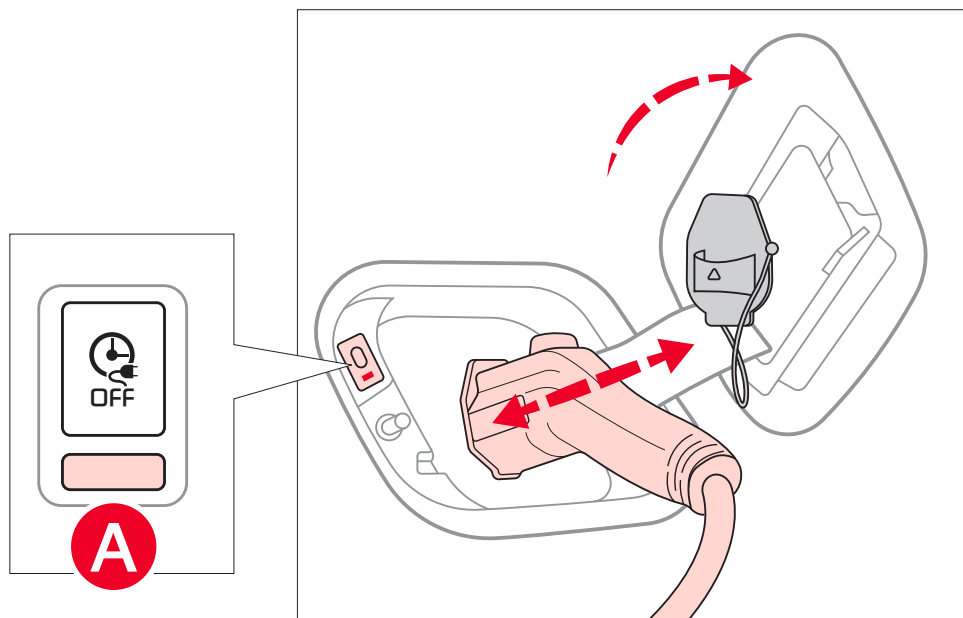

**REMINDER:** When the charging connector is connected and the scheduled charging is in standby mode, the charging indicator is turned off and the scheduled charge release button indicator is turned on. The scheduled charge release button indicator will turn off after 3 minutes (refer to [page 30](#) for more information on Schedule Charging).

*The images are for illustrative purposes only and may not reflect actual feature or operation.*


*For more information, refer to section 1 in the Owner's Manual.*




## Energy Flow - Instrument Cluster LCD

 Plug-In Hybrid's Instrument Cluster LCD screen displays the following Plug-In Hybrid system modes to inform the driver of its status. To change modes, go to User Settings in the Instrument Cluster modes.


**EV Propulsion** - The electric motor is moving the vehicle.

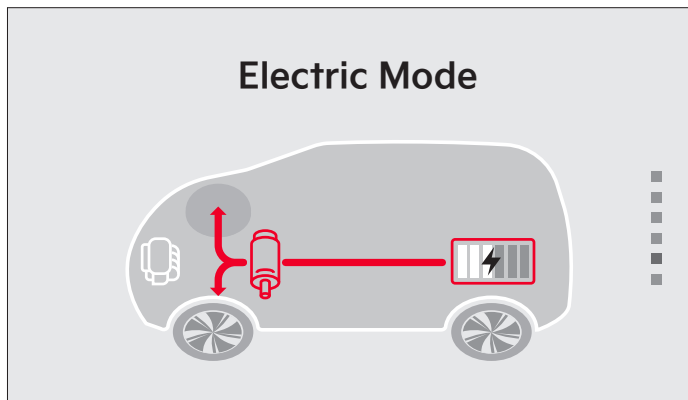

 
**Engine-Only Propulsion** - The engine is moving the vehicle.

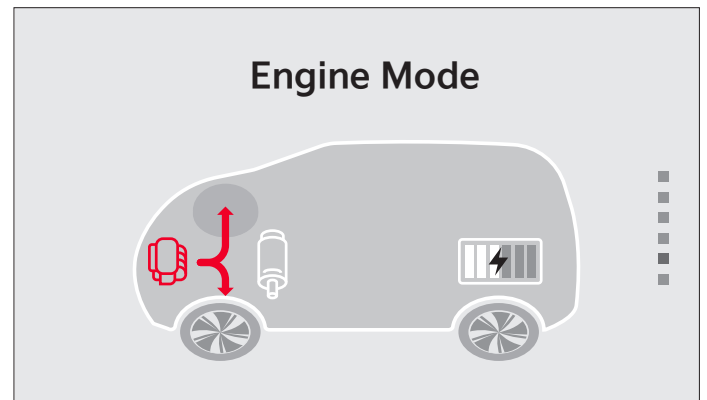

 **Power Assist** - Both the electric motor AND the engine are moving the vehicle.

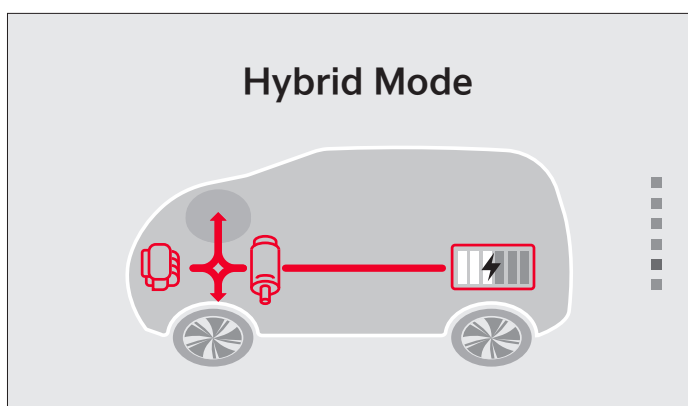

 **Engine Generation** - While the vehicle is stopped, the engine is charging the Hybrid/Plug-In battery.

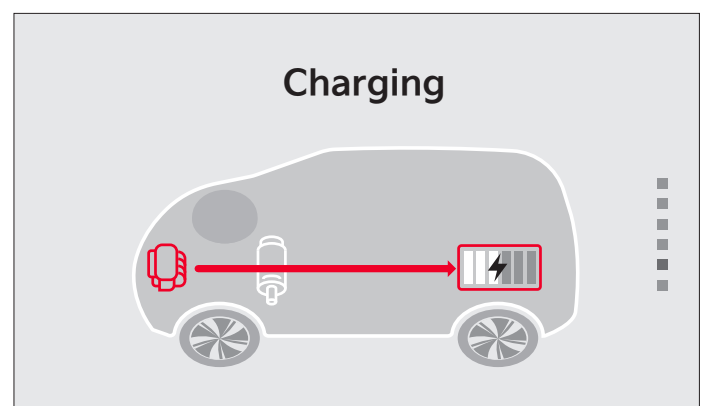

[\*Continued on next page\*](#)

*Your vehicle's Instrument Cluster display locations may differ from those in the illustrations. For more information on the Instrument Cluster, please refer to section 1 in the Owner's Manual.*

*For more information, refer to section 1 in the Owner's Manual.*







## Energy Flow - Instrument Cluster LCD

 [Continued from previous page](#)


Plug-In Hybrid's Instrument Cluster LCD screen displays the following Plug-In Hybrid system modes to inform the driver of its status. To change modes, go to User Settings in the Instrument Cluster modes.

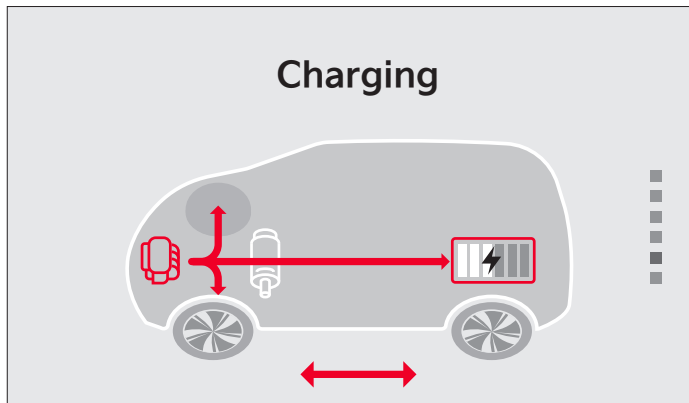

 
**Power Reserve** - While the engine powers the vehicle, it is also recharging the Plug-In Hybrid battery.

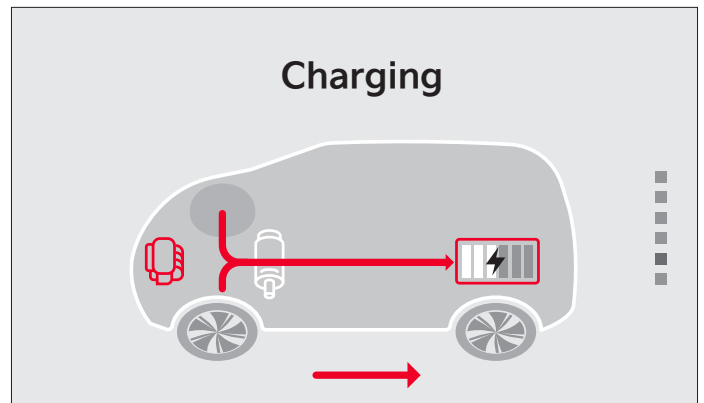

 **Engine Brake/Regeneration** - The regenerative braking system is recharging the Plug-In Hybrid battery.

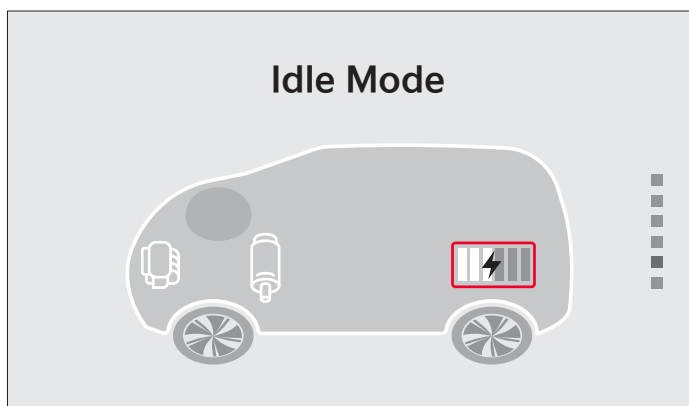

 **Vehicle Stop** - The vehicle's Plug-In Hybrid system is standing by.

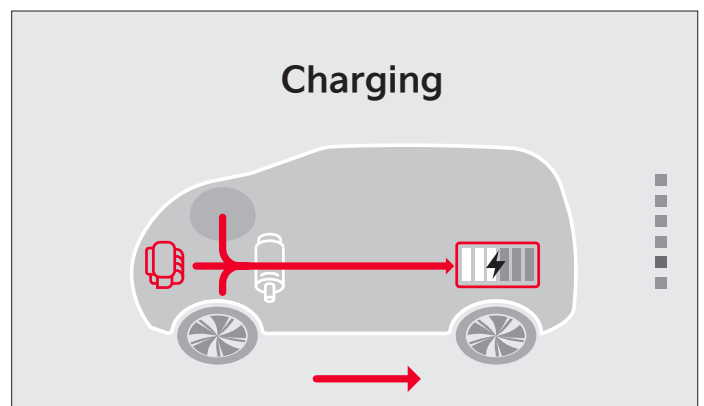

**Engine Generation/Regeneration** - The engine and the regenerative braking system are both recharging the Plug-In Hybrid battery.

*Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster, please refer to section 1 in the Owner's Manual.*

*These illustrations are for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.*



## Scheduled Charging


Charging time can be set in the Plug-In Hybrid Infotainment System, under charge management, or using the Kia Access app<sup>†2</sup>.

 


Plug-In Hybrid  
Scheduled  
Charging


**Charging with the Kia Connect<sup>†1</sup> Smartphone App:** The Kia Access app<sup>†2</sup> can help you find the nearest charging station and displays charging status and the Scheduled Charging information. On your Smartphone, go to an app store or marketplace to download the Kia Access app<sup>†2</sup>.

**REMINDER:** When Scheduled Charging is set and the charger is plugged in, charging will not begin until the set time & date are met to complete the charging. The green charge indicator, located on top of the dash, will temporary flash ON/OFF to show that scheduled/reserve charging is set.

**Deactivate Scheduled Charging** - Press the Deactivate Scheduled Charging button  to disable the scheduled charging feature when immediate charging is required.

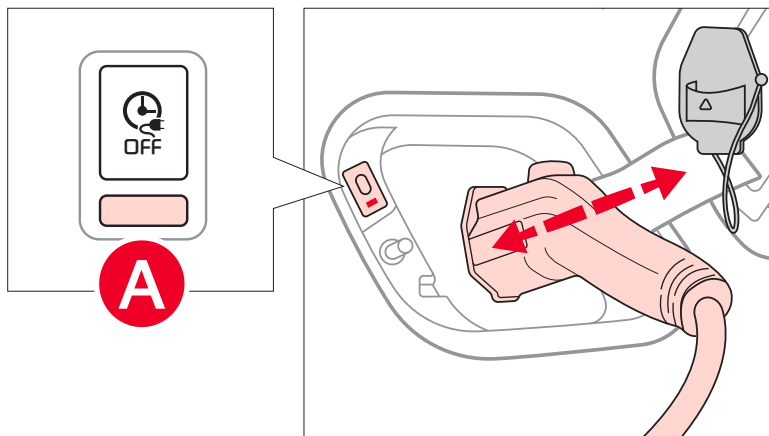

### QUICK TIP

When you press the Deactivate Scheduled Charging button\*  the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting from the Infotainment System.

**REMINDER:** Scheduled charging may not be available at public chargers.

*For more detail and/or subsequent steps in charging your vehicle, refer to section 1 in the Owner's Manual.*



## Plug-In Hybrid Modes

 
To change the Plug-In Hybrid Mode, press the EV/HEV button **A**; switch between Automatic mode, Electric (EV) mode and Hybrid (HEV) mode each time the button is pressed.



Plug-In Hybrid  
Charging  
& Connector

The LCD on the Instrument Cluster will display the mode selected:

- **Automatic Mode**
- **EV Electric Mode - Charge Depleting:** The high-voltage (hybrid) battery is being used to drive the vehicle.
- **HEV Hybrid mode - Charge Sustaining:** The high-voltage (hybrid) battery and gasoline engine are being used to drive the vehicle.

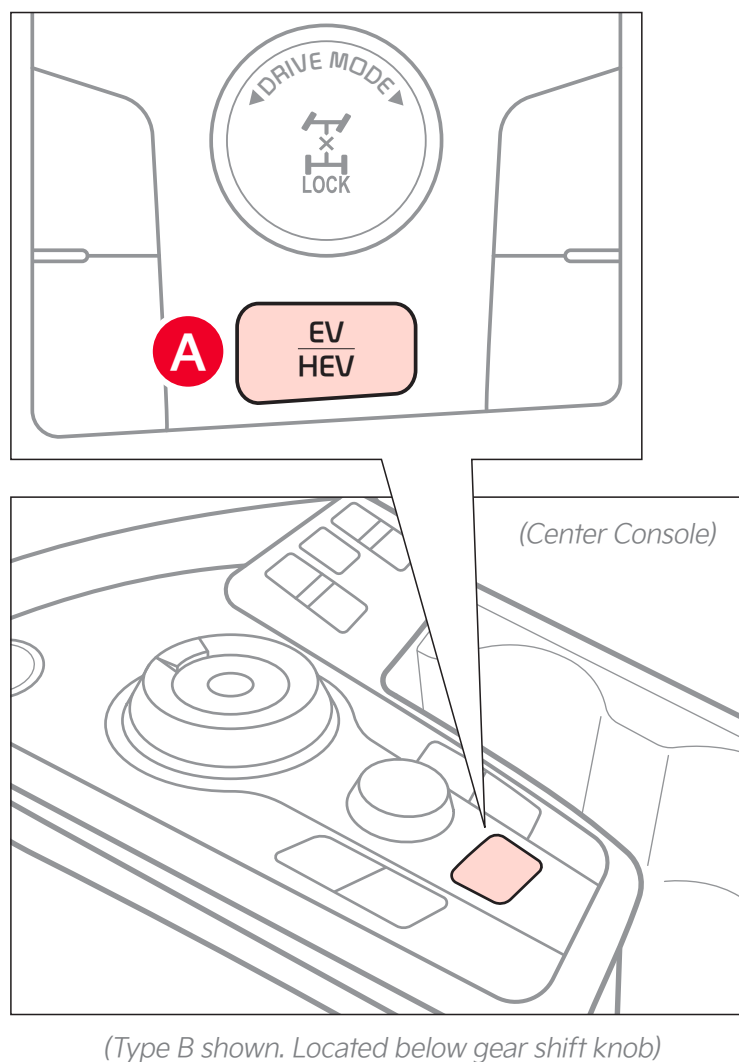

For more information, refer to section 1 in the Owner's Manual.



# Charging Connector Auto/Lock Mode

The Charging Connector can be set to be locked or unlocked while in the charging inlet and charging. To select the locking mode, go to the Vehicle Settings mode in the Infotainment System. Press the SETUP key on the Infotainment System or the SETUP button on the screen. Select **VEHICLE**, then ECO VEHICLE. Select CHARGING CONNECTOR LOCK.



Plug-In Hybrid  
Charging  
& Connector

**If the charging connector does not disconnect as needed, open the luggage board in the trunk area, remove the storage box and slightly pull the emergency cable to disconnect the charging connector.**

### QUICK TIPS

- If Charging Connector is in lock mode & the doors are unlocked, the charging connector unlocks, but if the charging cable is not disconnected within 10 seconds, the connector will automatically become locked again
- If the charging connector is unlocked but all the doors are locked again, immediately, the connector will automatically lock
- If charging does not work, disconnect the connector and try connecting again

*For more information, refer to section 1 in the Owner's Manual.*



## Blind-spot Collision-Avoidance Assist (BCA)\*†4

BCA is designed to detect approaching vehicles in the driver's blind spot areas and warn the driver of a possible collision with a warning light and a warning sound.

If a collision risk is detected when exiting a parallel space, BCA may assist with braking to help avoid a collision.

 
 
**Vehicle detection:** If another vehicle is detected within the BCA warning boundary **A**, an indicator may illuminate on the outside rearview mirrors **B**, on the Instrument Cluster and on the head-up display.\*

**Collision warning:** When the vehicle detection warning is on and the driver activates a turn signal, an indicator may flash on the outside rearview mirrors and the system may sound a warning, and the steering wheel may vibrate.

**Collision Avoidance Assist:** When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it may help avoid collision by applying the brake.



**Blind-spot Collision  
Avoidance Assist  
(BCA)**

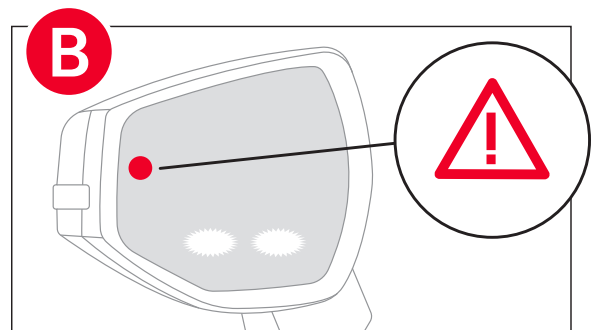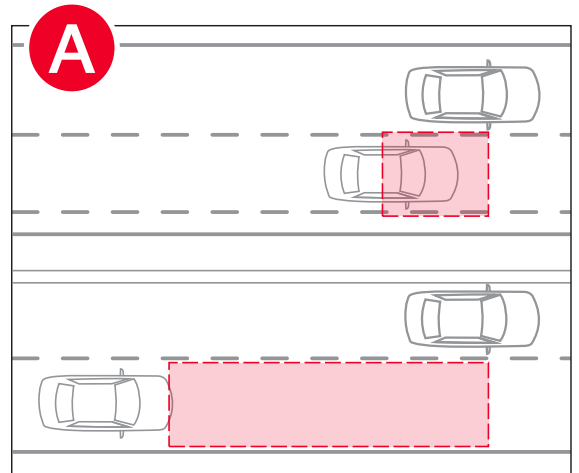

[\*Continued on next page\*](#)



# Blind-spot Collision-Avoidance Assist (BCA)<sup>\*†4</sup>

[Continued from previous page](#)

### BCA Settings:

- To enable BCA, press the **SETUP** button on the Infotainment System. Select the **VEHICLE** button to enter Vehicle Settings. Select DRIVER ASSISTANCE and then BLIND-SPOT SAFETY
- **Warning Methods:** To adjust the Warning Methods settings, go to Vehicle Settings, DRIVING SAFETY, and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning, Blind-spot Safety Warning Sound and Driving Safety Priority



Driver Safety -  
Forward/Lane/  
Blind-spot Safety  
& Safe Exit



Driver Assistance -  
Warning Methods  
& Warning Volume

### QUICK TIPS

- Adjusting the Warning Methods will adjust settings for other driver assistance systems
- Collision warning of BCA will activate when:
  - The system is turned on
  - Other vehicles are detected on the rear sides of the vehicle at speeds above 6mph
  - Vehicle speed is above approximately 25 mph

### REMINDERS:

- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is turned off, then on again, BCA returns to its previous state
- If the turn signal is activated for a left turn at an intersection, the Blind-spot Collision-Avoidance Assist (BCA) system may issue a warning regardless of whether the driver intends to complete the turn

*When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Refer to section 7 in the Owner's Manual for more information.*



## Rear Cross-traffic Collision-Avoidance Assist (RCCA)\*†4

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to help warn the driver under certain conditions. It may activate the Electronic Stability Control (ESC) and temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.

If the RCCA rear corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle

**A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster **B** and the Infotainment System screen. If RCCA detects that the collision risk has increased, RCCA may automatically apply the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

**RCCA is designed to operate under the following conditions:**

 
- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

[Continued on next page](#)



**Rear Cross-traffic  
Collision-Avoidance  
Assist (RCCA)**

**A**

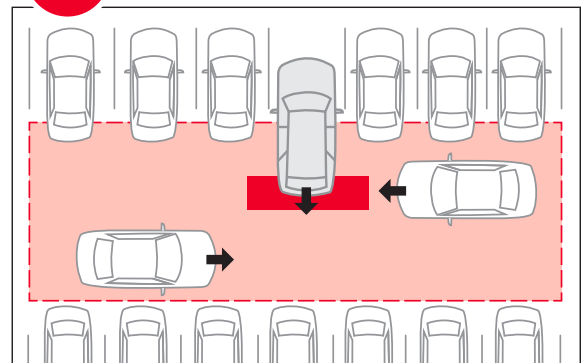

**B**



*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Refer to section 7 in the Owner's Manual for more information.*





# Rear Cross-traffic Collision-Avoidance Assist (RCCA)\*†4

[Continued from previous page](#)

### RCCA Settings:

- **To turn RCCA on:** Press the **SETUP** key on the Infotainment System. Press **VEHICLE** to enter VEHICLE SETTINGS. Select DRIVER ASSISTANCE, PARKING SAFETY, and then REAR CROSS TRAFFIC SAFETY
- **Warning Methods:** To adjust the Warning Volume settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE and under WARNING METHODS, you can adjust the Warning Volume, activate Haptic Warning



Driver Assistance -  
Warning Methods  
& Warning Volume

### REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, RCCA will show a warning
- Adjusting the Warning Volume may adjust volume levels for other driving assist systems

*When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Refer to section 7 in the Owner's Manual for more information.*







## Lane Keeping Assist (LKA)<sup>†4</sup>

 
Lane Keeping Assist is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially




### Lane Keeping Assist (LKA)


help keep the vehicle in the lane. When turned on, the Instrument Cluster indicator will initially illuminate gray . It will remain gray when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green .

If the LKA detects that you are moving outside of your lane without using the turn signal, LKA may give an auditory warning and display Lane Departure Warning on the Instrument Cluster or LKA may provide steering inputs to help prevent the vehicle from moving outside its lane. If LKA detects that the vehicle continues moving outside of the lane, LKA may give an auditory warning and display a Lane Departure Warning on the Instrument Cluster.

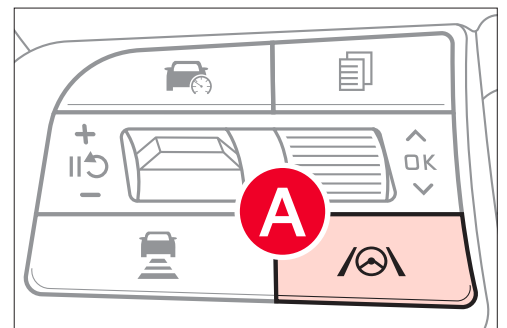


(Buttons located on left side of Steering Wheel. Button configuration may vary.)

 
When enabled press and hold the Lane Safety button  to turn it on or off.

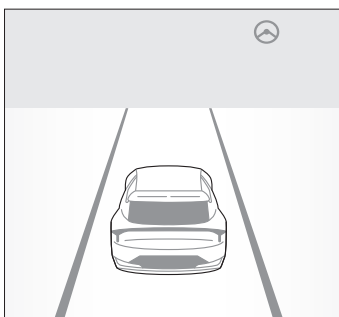

 
When the front-view camera does not detect the lane traveled in the lanes are not illuminated

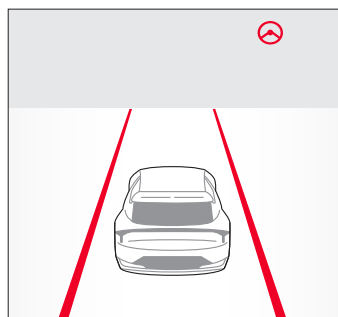

 When the front-view camera detects the lane traveled in, both lanes are illuminated

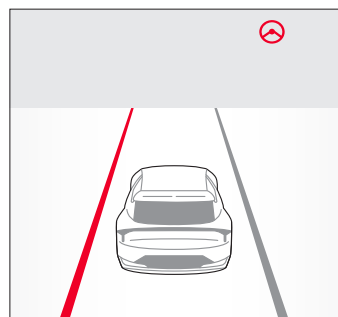

 When the front-view camera detects the vehicle moving outside of the lane being traveled in, a red indicator will illuminate either on the left or right lane (shown in both images above)

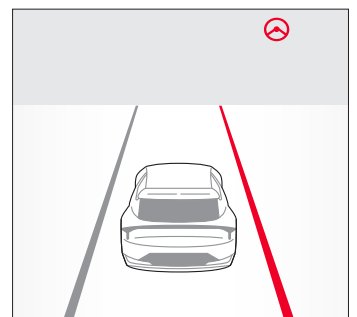

[Continued on next page](#)



# Lane Keeping Assist (LKA)<sup>†4</sup>

[Continued from previous page](#)

### LKA Settings:

- **To enable LKA:** Press the SETUP key on the Infotainment System. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE then LANE SAFETY
- **Warning Methods:** To adjust the Warning Methods settings, go to VEHICLE SETTINGS, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust the Warning Volume, Haptic Warning, Lane Safety Warning Sound and Driving Safety Priority



**Driver Safety -  
Forward/Lane/  
Blind-spot Safety  
& Safe Exit**



**Driver Assistance -  
Warning Methods  
& Warning Volume**

### QUICK TIPS

- All systems will operate under the following conditions:
  - The vehicle speed exceeds approximately 40 mph
  - LKA recognizes the lane the vehicle is traveling in
  - The vehicle is between the lane markers

### REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state oncoming vehicles

*When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Your actual display, buttons and/ or features may vary.*

*Actual Vehicle Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.*



## Blind-spot View Monitor (BVM)\*†4

Blind-spot View Monitor is designed to display the rear and side of the vehicle blind spot areas in the Instrument Cluster

**A** when the system is activated.

To turn BVM on, go to Vehicle Settings in the Infotainment System press the **SETUP** key/button on the Infotainment System. Select **VEHICLE**, Driver Assistance, Driving Safety, and Blind-spot View.

When operating the turn signal **B**, BVM displays video of the Blind-spot View for the direction indicated.

 
BVM will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster.



### Blind-spot View Monitor (BVM)



(LCD display showing right side of vehicle)

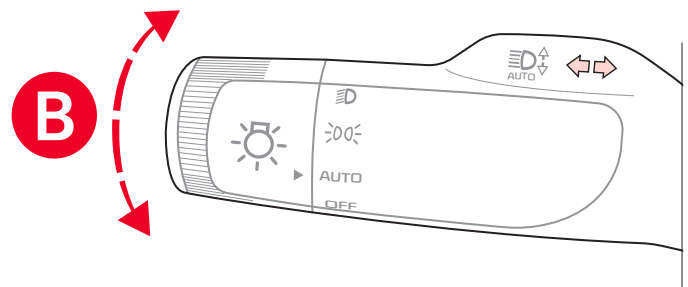

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.*



## Safe Exit Warning (SEW)\*†4

Safe Exit Warning can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster **A** and sounding an auditory warning when a vehicle is detected **B**, approaching from behind, after your vehicle has stopped.

 


Safe Exit Warning (SEW)




Driver Safety - Forward/Lane/Blind-spot Safety & Safe Exit

To turn on SEW, go to **VEHICLE** Settings in the Infotainment System or press the SETUP key/button on the Infotainment System. Select **VEHICLE**, then select Driver Assistance, Driving Safety, and select Safe Exit.

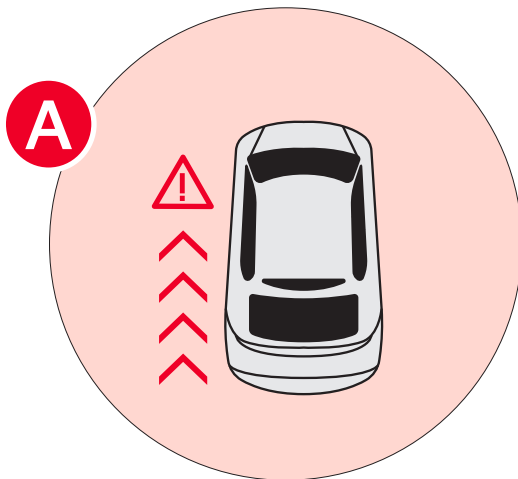

(Message on Cluster Display)

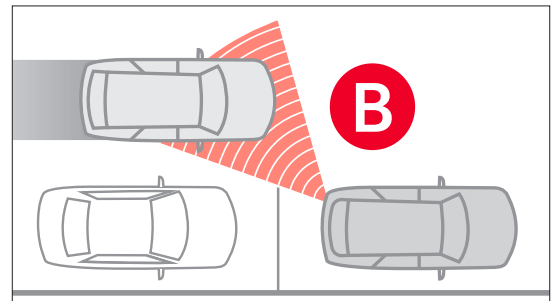 

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

*When engaged, these systems are not substitutes for safe driving and may not always detect objects or people around the vehicle.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.*



## Lane Following Assist (LFA)<sup>†4</sup>

Lane Following Assist is designed to help the vehicle stay centered in its driving lane by monitoring the detected lane markings ahead and adjusting the steering. Press the Lane Driving Assist button **A** to turn LFA on or off. When turned ON, the Instrument Cluster indicator **B** will initially illuminate gray. It will remain white when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon will illuminate green **C**.

 
 
**Hands-off Warning** - If the driver takes their hands off the steering wheel for several seconds, a warning message will appear on the Instrument Cluster. If hands on the steering wheel are not detected continually, LFA will be turned off with additional emergency warning.

LFA will operate only when these conditions are met:

- LFA detects both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 125 mph



### Lane Following Assist (LFA)

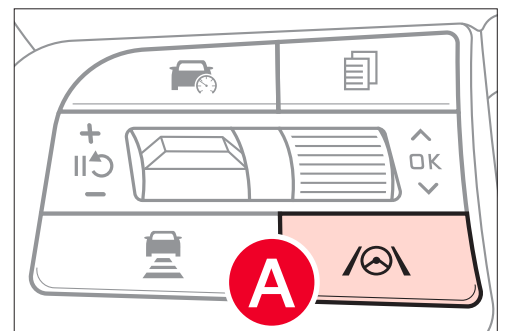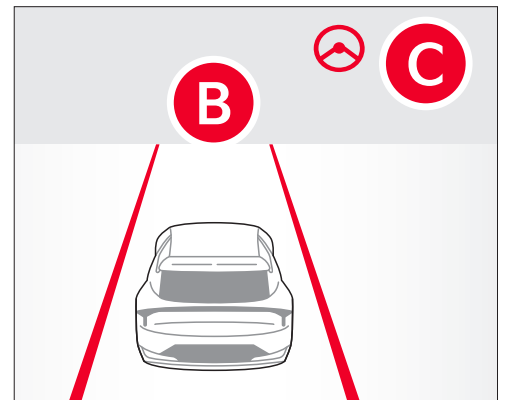

(Buttons located on left side of Steering Wheel. Button configuration may vary.)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.




# Lane Following Assist (LFA)<sup>†4</sup>

 [Continued from previous page](#)

## LFA Settings:

- Press the Lane Driving Assist button **A** on the steering wheel to turn LFA ON or OFF

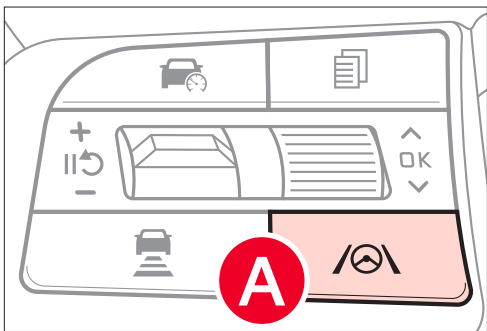

Driver Safety - Forward/Lane/ Blind-spot Safety & Safe Exit



Driver Assistance - Warning Methods & Warning Volume

## QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.

When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.

<sup>†</sup> LEGAL DISCLAIMERS ON [PAGE 143](#) | <sup>\*</sup>IF EQUIPPED





## Forward Collision-Avoidance Assist 2 (FCA2)\*†4

FCA is designed to detect a vehicle ahead or detect a pedestrian/cyclist in the roadway through front view camera recognition and front radar signals. FCA warns the driver that a collision is imminent, and if necessary, temporarily applies emergency braking. If FCA detects a potential collision, FCA emits an audible warning, steering wheel haptic warning, and visual alert on the Instrument Cluster **A**.

 
 
 
If FCA detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed **B**, potentially helping to reduce the effects of a possible collision.

**Junction Turning** - With the left turn signal on, if it detects a potential collision, Junction Turning **C** may help to avoid the collision with an oncoming vehicle in an adjacent lane by applying emergency braking.


**Junction Crossing\*** - When approaching an intersection the Junction Crossing function\* **D** may help mitigate or avoid a collision with oncoming vehicles on the left or right side when crossing an intersection by applying emergency braking.



### Forward Collision-Avoidance Assist (FCA) - Advanced Features

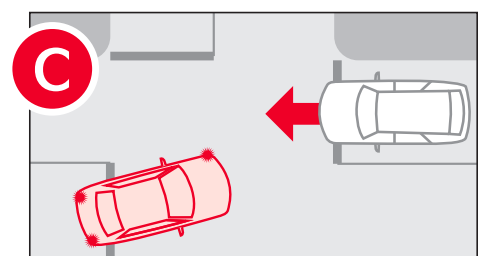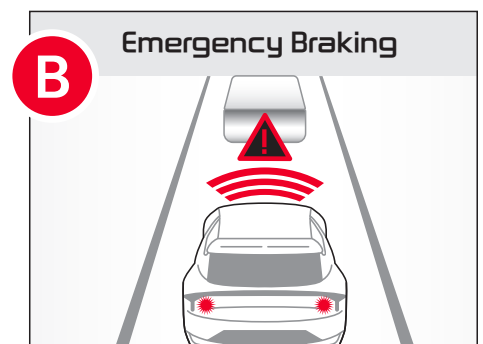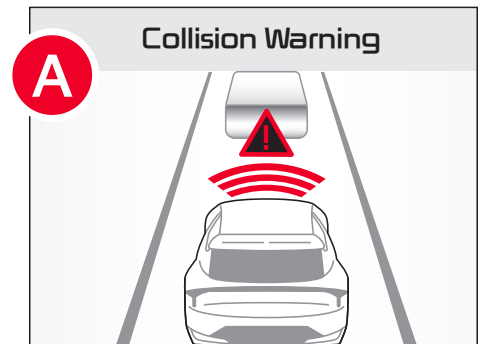

(Junction Turning)

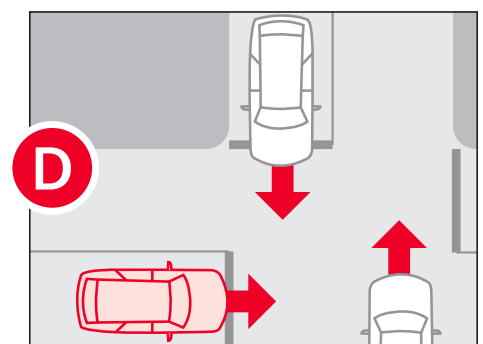 

(Junction Crossing)

[Continued on next page](#)


*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Forward Collision-Avoidance Assist 2 (FCA2)\*†4

 
[Continued from previous page](#)

**Direct Oncoming Vehicle function\*** - The Direct Oncoming function **A** may help reduce the vehicle speed to help prevent a collision when a vehicle or powered two-wheeler is detected and approaching from the opposite direction.

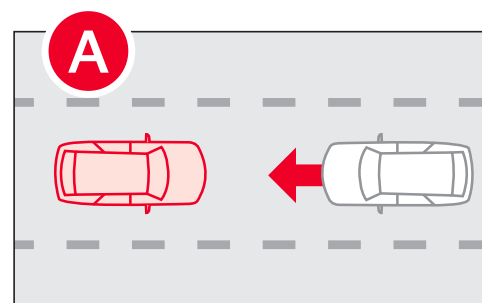


(Direct Oncoming Vehicle function)

 **Lane-Change Oncoming vehicle function\*** - Lane-Change Oncoming function **B** may mitigate or avoid a collision with oncoming vehicles or powered two-wheelers when changing lanes by assisting the driver's steering.

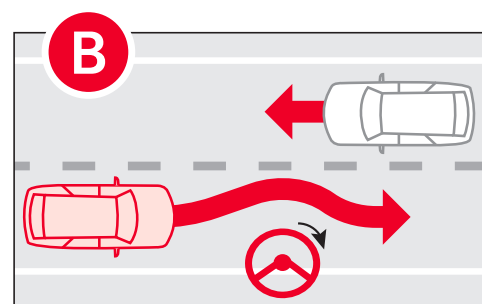

(Lane-Change Oncoming Vehicle function)

 **Lane-Change Side function\*** - Lane-Change Side function **C** may help mitigate or avoid a collision with vehicles or powered two-wheelers in the next lane when changing.

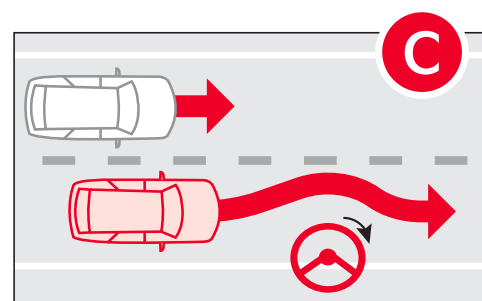

(Lane-Change Side function)

[Continued on next page](#)





# Forward Collision-Avoidance Assist 2 (FCA2)\*†4

 
[Continued from previous page](#)

## Evasive Steering Assist function\*


- **Driver Steering Assist A** - If a possible collision with a vehicle ahead, pedestrian, cyclist, or powered two-wheeler is detected and you steer to avoid the collision, Evasive Steering Assist may assist the driver in steering
- **Evasive Steering Assist B** - The Evasive Steering Assist function may help mitigate or avoid a collision with a vehicle, pedestrian cyclist, etc. in the same lane in front of you. When a risk of collision is detected, Evasive Steering Assist may warn you and assist your steering if you move the steering wheel



Driver Safety -  
Forward/Lane/  
Blind-spot Safety  
& Safe Exit

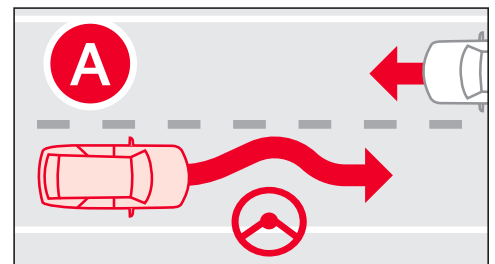

(Driver Steering Assist)

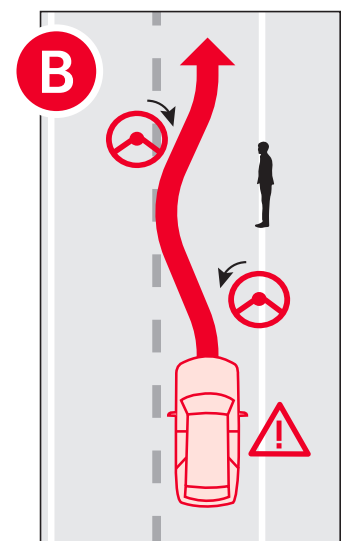 

(Evasive Steering Assist)

## FCA Settings:

FCA is ON by default. FCA can be enabled or disabled in the Vehicle Settings in the Infotainment System. Make sure the vehicle is at a standstill, gear shift in Park and the Engine Start/Stop button is in the ON position.

**Infotainment System Vehicle Settings** - Press the **SETUP** key or the onscreen SETUP button on the Infotainment System. Press the VEHICLE button to enter Vehicle Settings. In Driver Assistance, select Driving Safety, and then you may select Forward Safety, Forward Cross-traffic Safety, and Forward/Side Safety.

[Continued on next page](#)

*When engaged, Forward Collision-Avoidance Assist 2 is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.*

*Actual Vehicle and User Settings steps may vary by model. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.*



# Forward Collision-Avoidance Assist 2 (FCA2)\*†4

[Continued from previous page](#)

### Forward Safety Warning Timing -

To set the Warning Timing, in Driver Assistance, select Driving Safety, then in Forward Safety Warning Timing, select Standard or Late.

FCA will become active when the:

- Ignition is on or the Engine Start/Stop button is in the ON position
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON




**Driver Assistance -  
Warning Methods  
& Warning Volume**

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- FCA2 will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA2 is operating and the ESC (Electronic Stability Control) is turned off, FCA2 is automatically turned off
- When FCA2 is off, the Forward Safety warning light is on in the Instrument Cluster 
- Once the risk factors are not detected, these functions will deactivate, then the driver must steer the vehicle

*When engaged, Forward Collision-Avoidance Assist 2 is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.*

*Actual Vehicle and User Settings steps may vary by model. Refer to section 7 in the Owner's Manual for more information.*



## Highway Driving Assist 2 (HDA2)\*†4

HDA2 Assist is designed to detect lanes and vehicles ahead, help maintain the distance from the vehicle ahead and the set speed, and center the vehicle in the lane while driving on certain highways/freeways.

When HDA2 is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA2 will be in standby mode and the indicator light **A** will illuminate gray. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA2 indicator illuminated green **A**.

 
 
**Hands-off Warning** - If the driver takes their hands off the steering wheel for several seconds, a warning message will appear on the Instrument Cluster and an audible warning will sound. If you keep taking your hands off the steering wheel, then the Emergency Stop will activate. The Emergency Stop system maintains the car in the center of the road and assists in stopping through deceleration control.



**Highway Driving Assist (HDA) - Lane Change Assist**



**Driver Convenience - Smart Cruise Control & Highway Driving Assist**

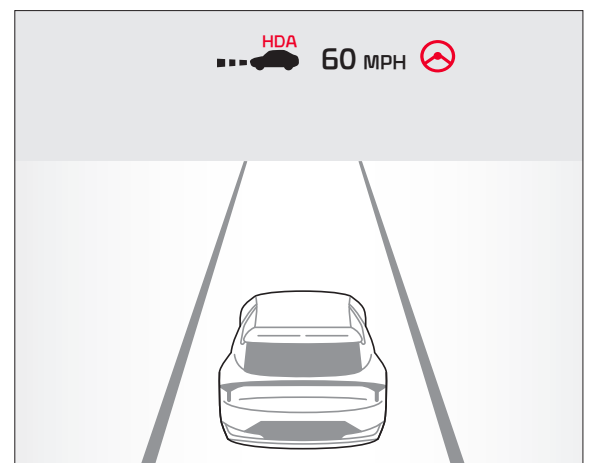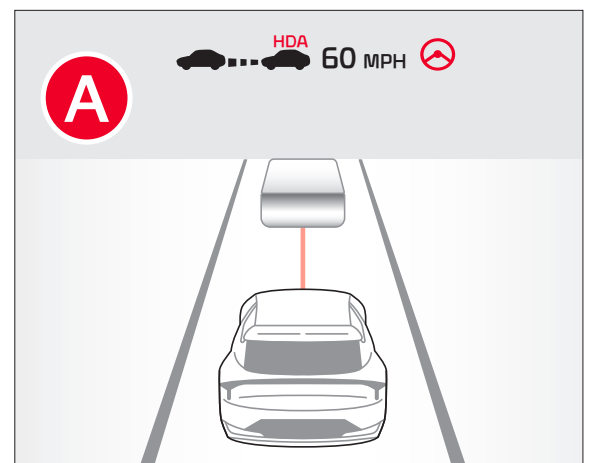

[Continued on next page](#)

*When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



# Highway Driving Assist 2 (HDA2)<sup>\*†4</sup>

[Continued from previous page](#)

### HDA2 Settings:

- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the Engine Start/Stop button is in the ON position
- **To enable HDA2** - Press the **SETUP** button on the Infotainment System. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then select Highway Driving Assist, and Highway Lane Change Assist



**Driver Assistance -  
Warning Methods  
& Warning Volume**

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING and DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- When vehicle power is cycled, the system returns to its previous state, on or off
- If the driver changes the speed while in automatic speed setting mode, it deactivates and enters a manual mode

See section 7 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.



## Forward/Side\*/Reverse Parking Distance Warning (PDW)<sup>†4</sup>

When parking, Forward/Side\*/Reverse Parking Distance Warning (PDW) uses ultrasonic sensors to detect objects or pedestrians in front of, beside or behind the vehicle. When PDW detects that the vehicle is too close to an object or pedestrian, a warning will sound and an indicator will appear on the Instrument Cluster.

 
Press the Parking Safety button **A** to turn off the PDW warning sound. Press the button again to turn the warning sound on.



Parking Distance Warning (PDW) - Forward/Side\*/Reverse



Driver Assistance - Parking Safety

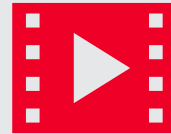


Driver Assistance - Warning Methods & Warning Volume

### QUICK TIPS

 - To activate PDW from the Infotainment System, press the SETUP button, select VEHICLE, select DRIVER ASSISTANCE, select PARKING SAFETY, and select PARKING DISTANCE WARNING AUTO ON
- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

### REMINDERS:

- If the vehicle is moving at speeds over 6 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be detected first

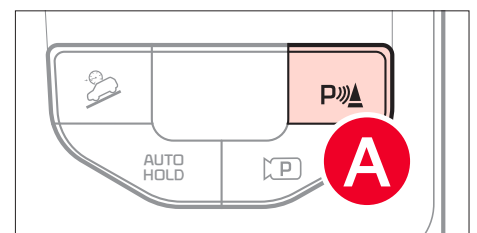

(Button located in Center Console.)


When engaged, Forward/Side\*/Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe reverse procedures. Always drive safely and use caution when moving the vehicle forward or in reverse. Forward/Side\*/Reverse Parking Distance Warning (PDW) may not detect every object in front of, beside or behind the vehicle.

Image is for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.






## Smart Cruise Control (SCC)<sup>†4,18</sup>

Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed in certain circumstances. When traffic is detected, the vehicle is designed to automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal. With SCC on and activated and the vehicle distance set, if the system detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop.

When the vehicle ahead starts to move forward, SCC re-engages and the vehicle will move forward automatically. If the vehicle ahead stops for more than 3 seconds, depress the accelerator pedal, operate the (+) switch, (-) switch, or press the SCC RESUME  **A** switch to start moving the vehicle.

### To activate and set/adjust SCC speed:

- Accelerate to your desired speed and press the Driving Assist  **B** button on the steering wheel to turn system ON and set speed. The  indicator will illuminate on the Instrument Cluster
- Increase speed:** Press the [+] switch **A** up to increase set vehicle speed
- Decrease speed:** Press the [-] switch **A** down to decrease set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Panel screen

 
**To pause or resume SCC operation:** Press the brake pedal or pause/resume button  **A**. The SCC indicator on the Instrument Panel will turn gray.

[Continued on next page](#)

*When engaged, SCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*



Smart Cruise Control (SCC) with Overtaking Acceleration Assist

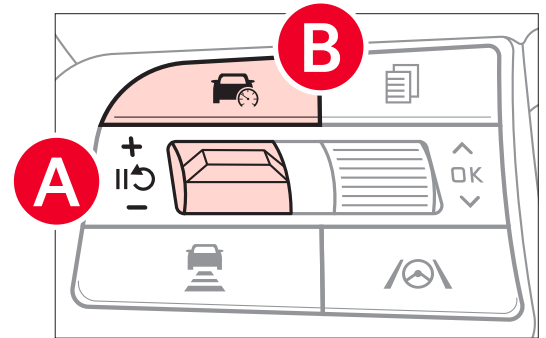

(Buttons located on left side of Steering Wheel. Button configuration may vary.)






## Smart Cruise Control (SCC)<sup>†4,18</sup>

[Continued from previous page](#)

### To set the vehicle-to-vehicle distance:

Press the Vehicle Distance button  **A** on the Infotainment System on the right of the steering wheel. The image on the LCD screen **B** will change when scrolling through the settings.

 
 
**To turn SCC system OFF:** Press the Driving Assist button **C**.

### To adjust the sensitivity of the SCC system:

Go to Vehicle Settings in the Infotainment System by pressing the **SETUP** button. Under DRIVER ASSISTANCE, select SMART CRUISE CONTROL and set the distance, acceleration and the reaction speed. Even if equipped with Based on Driving Style, the driving style can be adjusted manually.



Driver Convenience -  
Smart Cruise Control  
& Highway Driving  
Assist

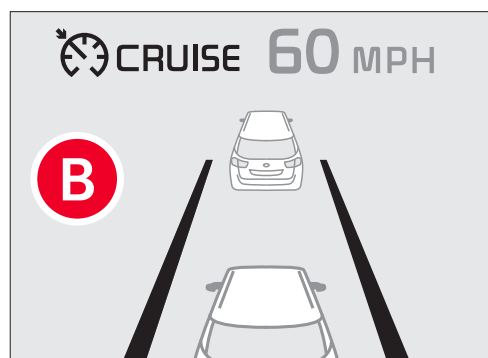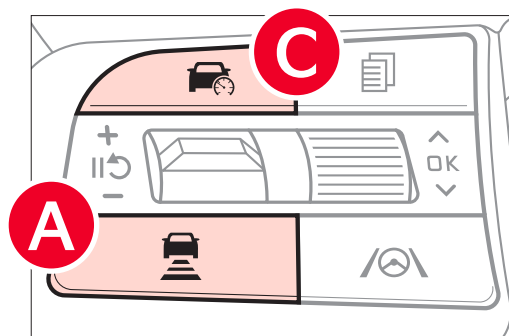

### QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist button **C**, the set speed will be set to 20 mph
- When following a vehicle, the system will automatically adjust your driving speed based on the vehicle detected ahead

### REMINDERS:

- SCC is also canceled when the driver's door is opened, gear shift is changed out of **D** (Drive), EPB is activated and various other conditions
- If SCC is left enabled, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- When following a vehicle, the system is designed to automatically adjust your cruise speed based on the vehicle detected in front


*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. Images are for illustrative purposes only and may vary on actual vehicle. Refer to section 7 in the Owner's Manual for more information.*




## Navigation-based Smart Cruise Control (NSCC)<sup>\*†4,8</sup>

While **Smart Cruise Control** is operating, Navigation-based **Smart Cruise Control** may automatically adjust vehicle speed when driving on certain highways by using road information from the navigation function.

 
 
To activate NSCC to adjust vehicle speed on the highway based on navigation data, go to DRIVER ASSISTANCE, then DRIVING CONVENIENCE, and then select HIGHWAY AUTO SPEED CHANGE.

When SCC is on and operating, the vehicle is driving on limited/controlled access highways and NSCC is enabled and turned on, the NAV icon  will illuminate green on the Instrument Cluster.

When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, the NAV icon  will be blinking green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

### REMINDERS:

- NSCC requires an active navigation subscription
- NSCC is only available on certain controlled access roads and highways

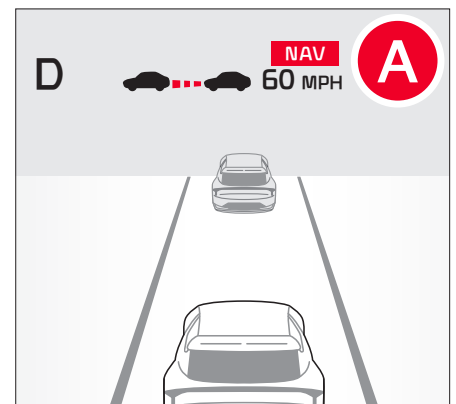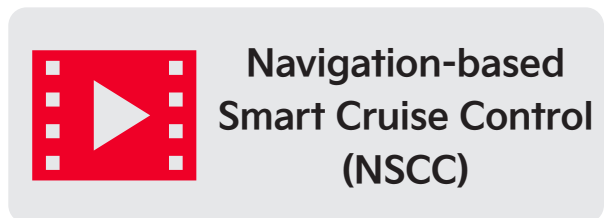

*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more information.*

*For more setting information, refer to the Car Infotainment System Quick Reference Guide. NSCC and SCC are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*





## Driver Attention Warning (DAW)<sup>†5</sup>

Driver Attention Warning (DAW) is designed to monitor inattentive driving practices and, under certain conditions, warn the driver that they may need a break. If DAW is activated, a message, “Consider taking a break,” **A** appears on the LCD and a warning sound is emitted to suggest the driver take a break when the driver’s attention level becomes low.



**Driver Attention Warning (DAW)**



**Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert**

### DAW Settings:

- DAW can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position



### DAW Settings:

- **To access Vehicle settings on the Infotainment System** - Press the **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Inattentive Driving Warning

### REMINDERS:

- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 4 minutes
- DAW will enter a standby mode if the camera does not detect the lanes

*When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*

*Refer to section 7 in the Owner’s Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>

 
Leading Vehicle Departure Alert is a feature part of Driver Attention Warning (DAW), and is designed to inform the driver when it detects the vehicle in front starts moving or departs from a stop. When Driver Attention Warning (DAW) is on, your vehicle is stopped and detects that the leading vehicle is driving away, DAW sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message will appear on the Instrument Cluster.



**Leading Vehicle Departure Alert (LVDA)**



**Driver Assistance - Driver Attention Warning & Leading Vehicle Departure Alert**

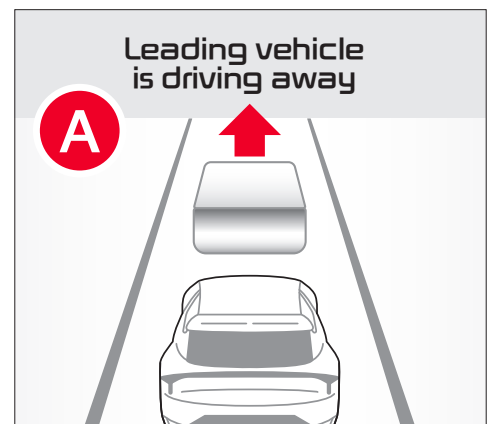

### LVDA Settings:

- LVDA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position
- **To access Vehicle settings on the Infotainment System** - Press the **SETUP** button, then **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert

### REMINDERS:

- When the vehicle power is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

*When engaged, Leading Vehicle Departure Alert is not a substitute for safe and proper driving. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.*



## Remote Smart Parking Assist (RSPA)\*†4

 
Remote Smart Parking Assist is designed to use the vehicle sensors to help park and exit parking spaces remotely from outside the vehicle by automatically searching for parking spaces and then controlling the steering wheel, transmission, and vehicle speed to park the vehicle.

### To park with Remote Parking (from outside the vehicle), using the Smart Key:


- While in the vehicle, with the vehicle stopped in front of the parking space, vehicle aligned, and the transmission in Park, press and hold the Parking/View button **A**
- Remote Parking Instructions will appear on the Infotainment System screen. When ready, exit the vehicle with the Smart Key on hand. Ensure all doors are closed
- The emergency lights will blink to when the system is ready to be activated
- Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how you want to park, and the vehicle will move in the direction of whichever button you press. Press and hold the Remote Start button **D** to turn off the vehicle




### Remote Smart Parking Assist (RSPA)

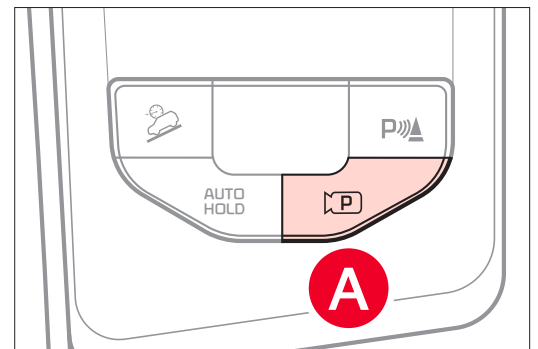

(Button located in Center Console.)

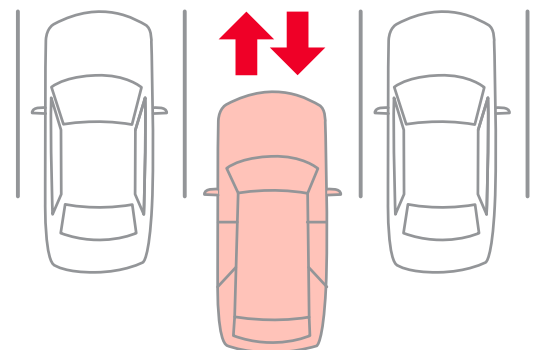 

Remotely moving forward or backward

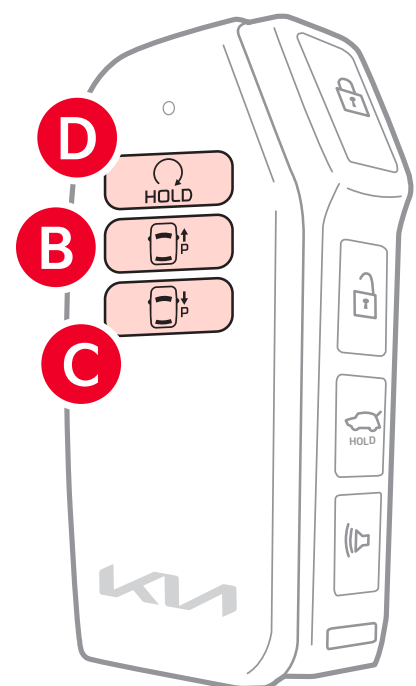 

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.



## Intelligent Speed Limit Assist (ISLA)\*†4

Intelligent Speed Limit Assist is designed to use the information from the posted speed limit and the navigation system to inform the driver of the speed limit.



**Intelligent Speed  
Limit Assist (ISLA)**

When ISLA is on and active, the system will display an alert on the Instrument Cluster of the detected speed limit. If the vehicle's current speed exceeds the detected speed limit, a warning will sound and the vehicle's current speed will blink on the LCD.

### QUICK TIP

You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on.

### REMINDERS:

- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected


[\*Continued on next page\*](#)

 


# Intelligent Speed Limit Assist (ISLA)\*†4

[Continued from previous page](#)

### ISLA Settings:

- To enable ISLA, press the SETUP key/button on the Infotainment System. Select the VEHICLE button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, SPEED LIMIT, and adjust the settings:
  - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message to change the speed to help the driver stay within the posted speed limit
  - **Speed Limit Warning:** Informs the driver of the posted speed limit  and warns the driver when the vehicle is traveling faster than the posted speed limit
  - **Off:** ISLA is disabled
- **Speed Limit Offset:** Allows you to determine the speed limit offset preferred before ISLA engages
- **Auto set speed change:** If the set speed is set to the current speed limit during SCC or MSLA operation, the set speed is changed automatically whenever the speed limit changes on roads with a speed limit on above 45 mph

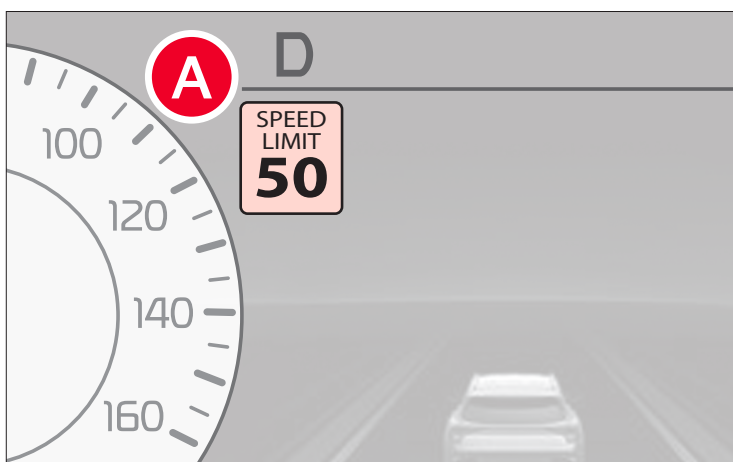

*Images are for illustrative purposes only and may not reflect actual feature or operation. See section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



## Rear View Monitor (RVM)<sup>†4</sup>

 
Rear View Monitor is a supplemental system that is designed to display the view behind the vehicle through the Infotainment System screen while the vehicle is in Reverse. To turn RVM on/off, shift the gear to **R** (Reverse) or press the Parking/View button **A** on the center console.





Driver Assistance -  
Parking Safety



Driver Assistance -  
Warning Methods  
& Warning Volume

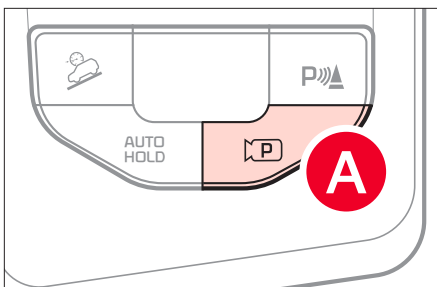

(Button located in Center Console.)

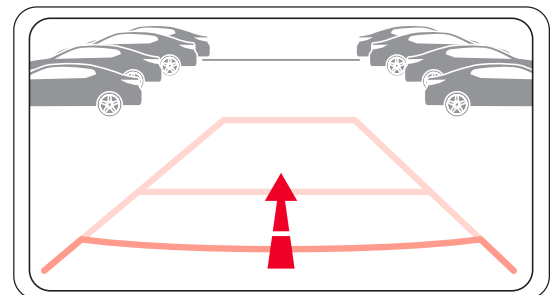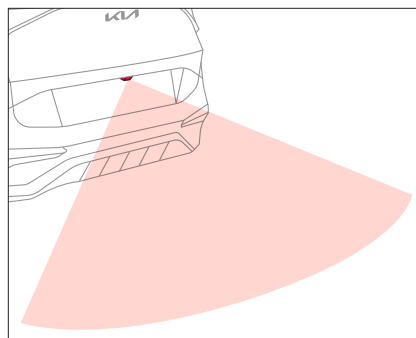  

(Infotainment System display)

**RVM Camera Settings** - Press the **SETUP** button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS to adjust display contents

The Rear View Monitor activates when the POWER button is in the ON/READY position, and Gear shifter is in the **R** (Reverse) position.

### QUICK TIPS

**To automatically reduce audio volume during operation** - Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can turn PARKING PRIORITY on or off.

### REMINDERS:

- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Infotainment System. All other features are disabled

*When engaged, RVM is not a substitute for proper and safe reverse procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when vehicle is in reverse. Refer to section 7 in the Owner's Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*





## 3D Surround View Monitor (SVM)\*†4

Surround View Monitor (SVM) is a parking support system that is designed to show the areas around the front, rear, left and right sides of the vehicle, as well as a 3D view of the vehicle via four cameras displayed onto the infotainment screen.

 


3D Surround View Monitor (SVM)



Driver Assistance - Parking Safety


- Press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen

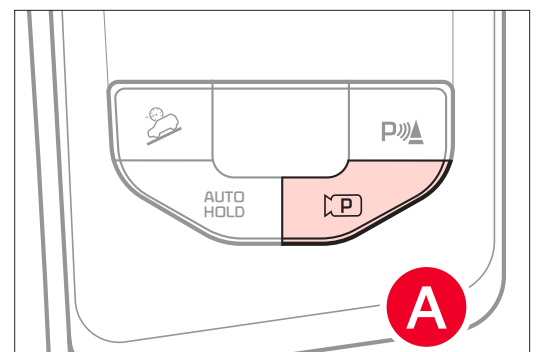

(Button located in Center Console.)

- **Surround View Monitor Auto On:** From the Vehicle Settings menu, select Driver Assistance, Parking Safety, and Surround View Monitor Auto On

 To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating.

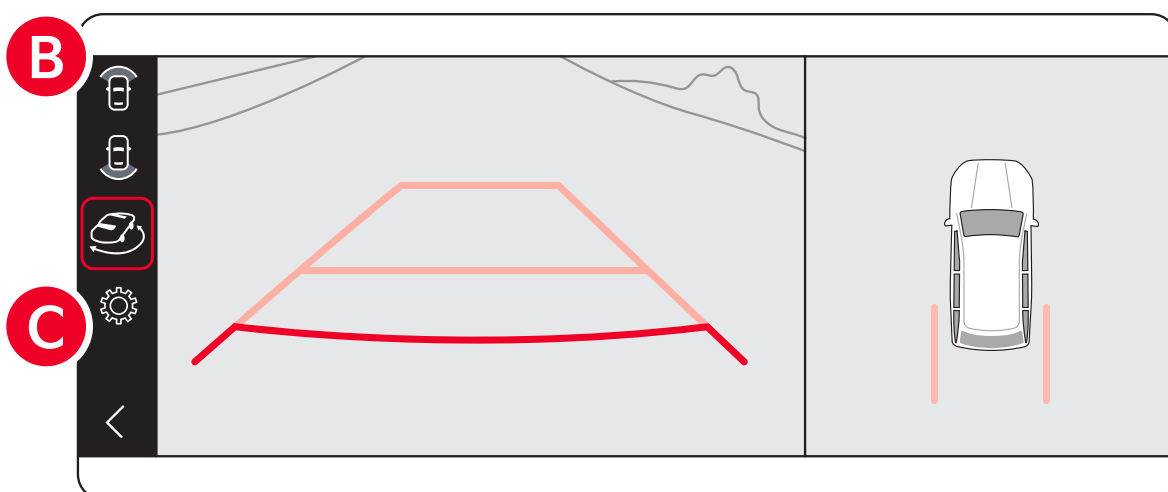

[Continued on next page](#)



# 3D Surround View Monitor (SVM)<sup>\*†4</sup>

[Continued from previous page](#)



Driver Assistance -  
Warning Methods  
& Warning Volume

### QUICK TIPS

- With SVM Auto On selected, SVM will turn on automatically and the camera view will display on the Infotainment System whenever the vehicle is in Drive or Reverse and traveling at speeds below 6 mph
- **To automatically reduce audio volume during operation** - Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can turn PARKING SAFETY PRIORITY on or off
- The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.

### REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- While SVM is active, and Parking Safety Priority is selected in the User Settings/ Vehicle Settings, the volume will be lowered on all audio modes

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*When engaged, Surround View Monitoring (SVM) is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.*

*See section 7 in the Owner's Manual for more information.*





## Reverse Parking Collision-Avoidance Assist (PCA)\*†4

Reverse Parking Collision-Avoidance Assist is designed to detect certain objects/pedestrians behind the vehicle and issues an auditory warning and/or applies emergency braking to help reduce the possibility of a collision when the vehicle is in reverse. When Reverse PCA is activated, lines appear behind the vehicle image **A** in the Instrument Cluster.

**PCA Settings:** PCA is ON by default. PCA can be enabled or disabled in the Vehicle Settings in the Infotainment System. Make sure the vehicle is at a standstill, gear shift in Park and the Engine Start/Stop button is in the ON position.

- **Infotainment System Vehicle Settings** - Press the **SETUP** key or the onscreen SETUP button on the Infotainment System. Press the **VEHICLE** button to enter Vehicle Settings. In Driver Assistance, select Parking Safety, and then you may select Backward Safety.



 
Reverse Parking Collision-Avoidance Assist (PCA)



Driver Assistance - Parking Safety



Driver Assistance - Warning Methods & Warning Volume

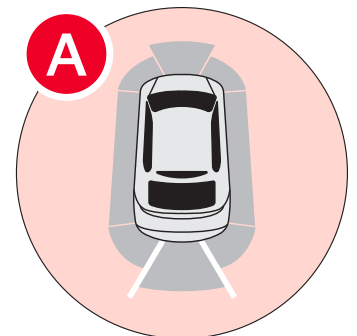

(Message on Cluster Display)

### QUICK TIPS

 
- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 7 in the Owner's Manual for more information.*




# Instrument Cluster Illumination Control

With parking lights/headlights ON, press switch **A** (+) or (-) to adjust the brightness of the Instrument Panel illumination.

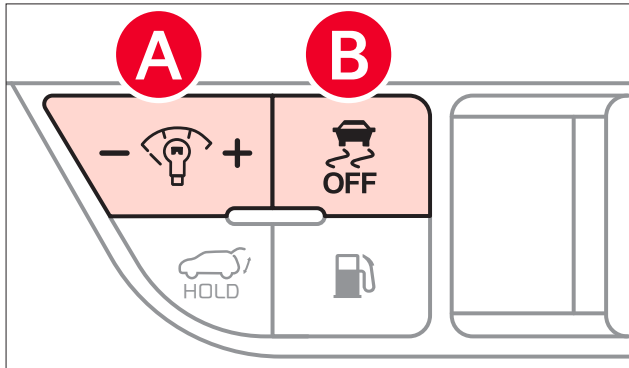

 (Button panel located left of Steering Wheel)

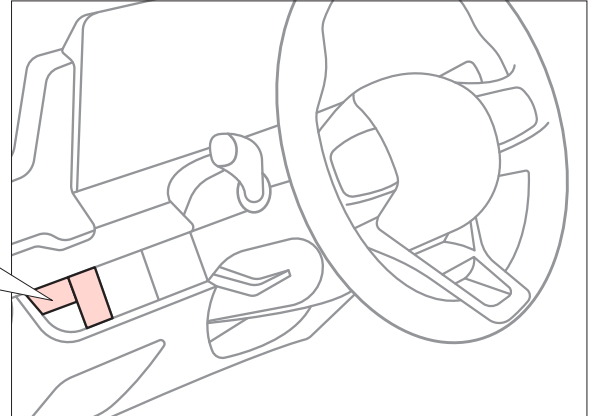

**REMINDER:** This control does not adjust brightness on the Infotainment System screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 5 in the Owner's Manual for more information.

## Electronic Stability Control (ESC)<sup>†6</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.



**Electronic Stability Control (ESC)**

Press and hold the ESC button **B** turn ESC OFF/ON.

### REMINDERS:

- ESC is turned ON by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the Instrument Cluster will illuminate whenever the ESC is in operation

Refer to section 6 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.



 
# Power Liftgate Open/Close Button\*

**Open:** Press and hold briefly the **A** button for approximately one second to open the liftgate.


**Close:** Press and hold the **A** button until liftgate is completely closed. If the button **A** is released while closing, the power liftgate will stop and a warning chime will sound.



Power Liftgate,  
Key Fob & Opening  
Height/Speed  
Adjustment

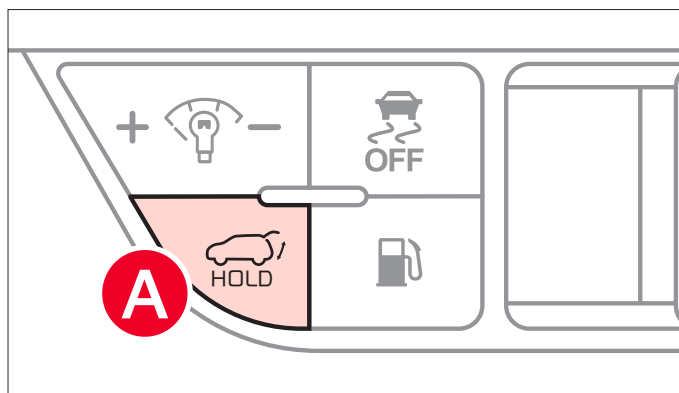

 (Button located to the left  
of Steering Wheel)

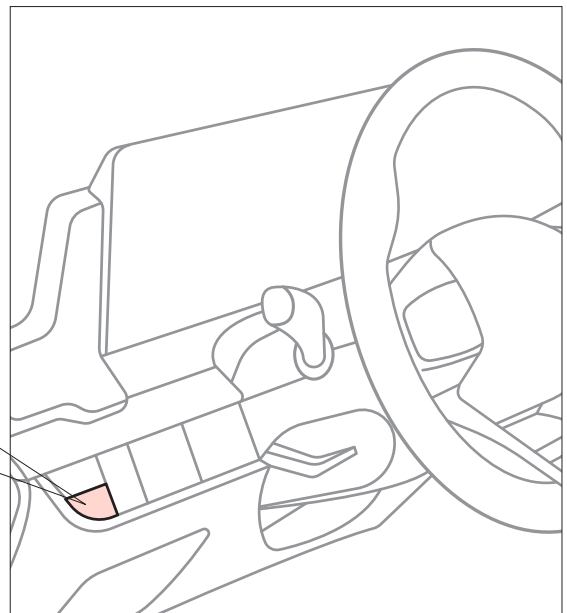

Refer to section 5 in the Owner's Manual for more information.



# Hill-start Assist Control (HAC)<sup>†6</sup>

HAC is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline. HAC provides a 2-second delay before the vehicle may start rolling backward by keeping the brakes momentarily engaged even after you depress the accelerator. HAC automatically activates during initial acceleration from a stop on an incline whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service



# Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's Window Auto Up\*/Down

### QUICK TIP

- Press button again to stop Auto Up/Down function.

- B** Press to Lock/Unlock All Doors (also unlocks Fuel Door)

- C** Press to disable Rear Passenger Windows

 
### QUICK TIPS

While driving with the rear windows down or with the sunroof\* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

### REMINDERS:

- When pressed **C**, the rear passengers cannot operate the window controls.
- When closing, be mindful of any objects or persons or pets in the rear seats
- If the inner rear door handle is pulled once when the door is locked, the door will unlock. If the inner rear door handle is pulled once more, the door will open

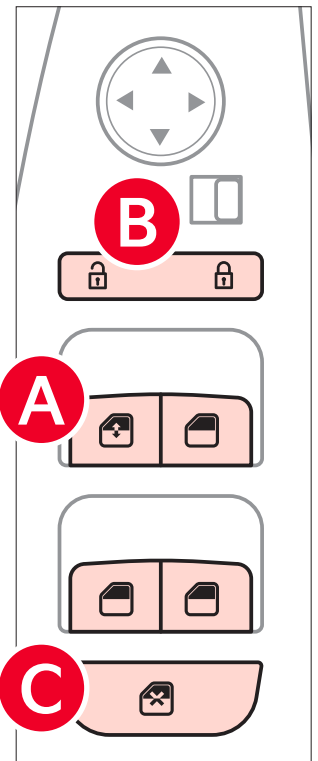

(Controls located on driver's door)

Button configuration may vary depending on vehicle model. Refer to section 5 in the Owner's Manual for more information.



# Automatic Door Lock/Unlock

Auto Door Lock will engage when gear is moved out of **P** (Park) and Unlock when moved into **P**. Refer to the Vehicle Settings in the Infotainment System on how to turn Auto Door Lock/Unlock ON/OFF.

**REMINDER:** All driver and passenger doors must be closed for doors to auto-lock.

*Refer to section 5 in the Owner's Manual for more information.*



### Power Outside Mirrors

 
- A** Move the button to the right or left to select the mirror to adjust
- B** Press button arrows left/right or up/down to adjust mirror position

Refer to section 5 in the Owner's Manual for more information.

### Heated Outside Mirrors\*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button\* is located on climate control system panel.

Refer to section 5 in the Owner's Manual for more information.

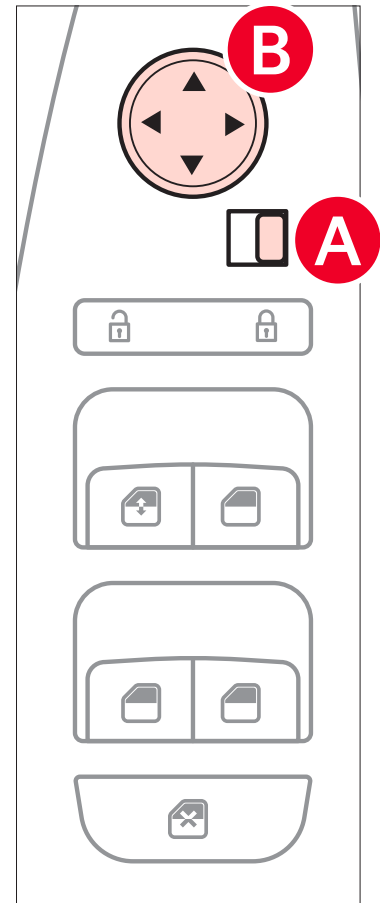

(Controls located on driver's door)



## Engine Start/Stop Button<sup>†7</sup>

### To start the engine:

 
1. Depress the brake pedal
2. Press the Engine Start/Stop button while the gear shift is in **P** (Park) or **N** (Neutral)



Engine Start/Stop Button

**To turn the engine OFF**, press the Engine Start/Stop button **A**.

To use the Engine Start/Stop button, you must have the Smart Key fob on your person or inside the vehicle.

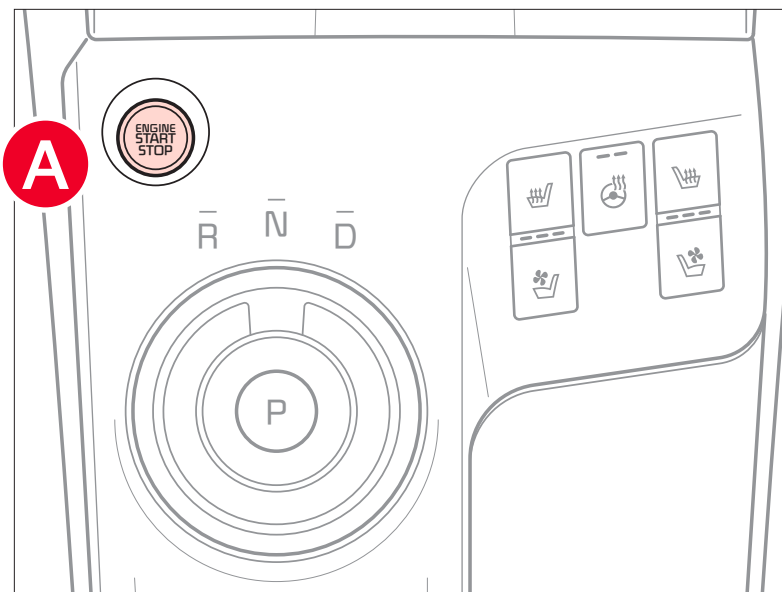

(Center Console)

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*





# Engine Start/Stop Button<sup>\*†7</sup>

[Continued from previous page](#)

### QUICK TIPS

To use electrical accessories:

ACC position of the Engine Start/Stop button

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once

On position

- When already in the ACC position and without depressing the brake pedal, press the Engine Start/Stop button again
- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice

Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

### REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the Engine Start/Stop button, hold the fob up against the Engine Start/Stop button and press and hold until the engine starts
- Do not turn the vehicle off by pushing the Engine Start/Stop button while the vehicle is in motion. If the vehicle has been turned off the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

*Refer to section 6 in the Owner's Manual for more information.*



## Headlights & High Beams

### To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

 
**AUTO Light\*** — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

## Daytime Running Lights (DRL)

DRL may help others to see the front of your vehicle during the day.

The Daytime Running Lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Fog lights are on
- Switch is in the OFF position
- Parking brake is applied
- Engine is turned off

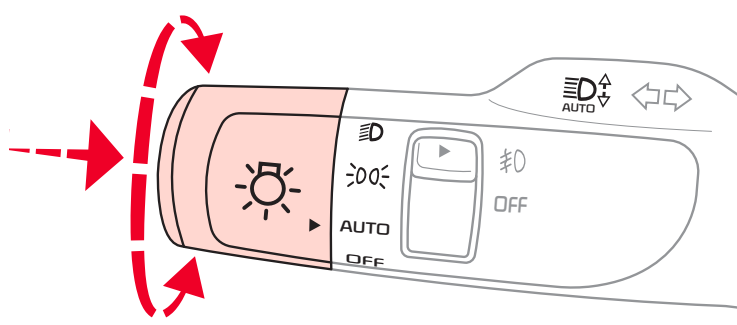

 Headlight ON position

 Parking light position

**AUTO** Auto Light\* / DRL / HBA

**OFF** Lights OFF

**REMINDER:** DRL only operates during the daytime.

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*




### High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.



**High Beam Assist  
(HBA)**

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

#### REMINDERS:

- HBA will operate when vehicle speed exceeds 20 mph. High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously
- If the light switch is switched to the headlight position, HBA will turn off and the low beams will be on continuously

*Refer to section 5 in the Owner's Manual for more information.*



### Turn Signals & Fog Lights\*

 
#### To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

**One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to the Vehicle Settings in the Instrument Cluster and select Lights, then One-Touch Turn Signal.

**REMINDER:** Headlights must be ON for Fog Light operation.

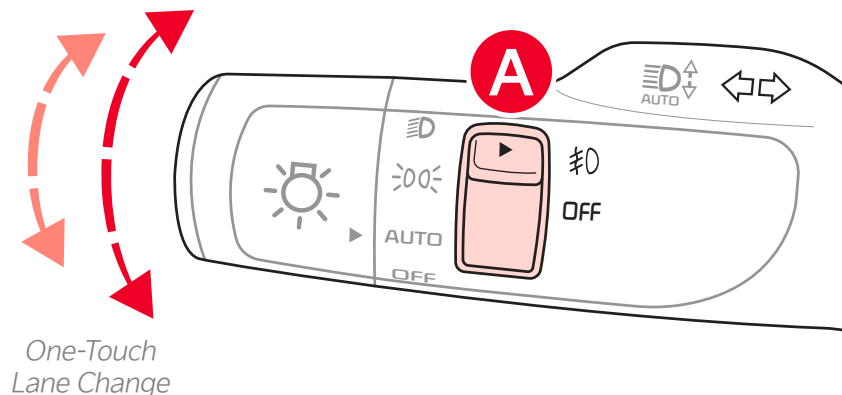

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*For more information on the User Settings Mode, please refer to section 5 in the Owner's Manual.*



## Windshield Wipers & Washers

 
### Front Wiper & Washer

To operate front wipers and washers:



Wipers and Wiper Stalk

- Move lever Up/Down to change Wiper modes
- Press INT switch **A** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

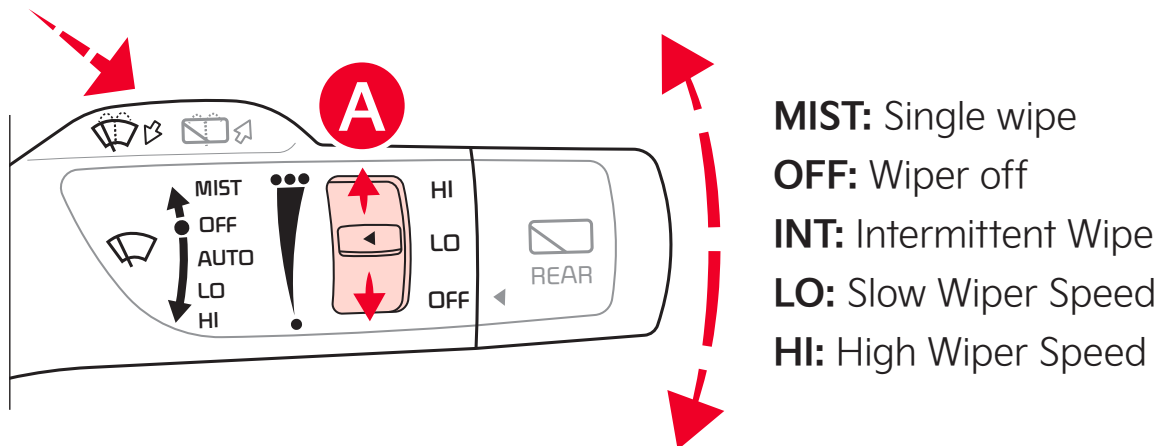

### QUICK TIPS

- Moving switch **A** to HI increases intermittent wipe frequency and wipe speed. Moving switch **A** to LO decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use


*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



## Rear Wiper & Washer

To operate rear wipers and washers:

 - Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

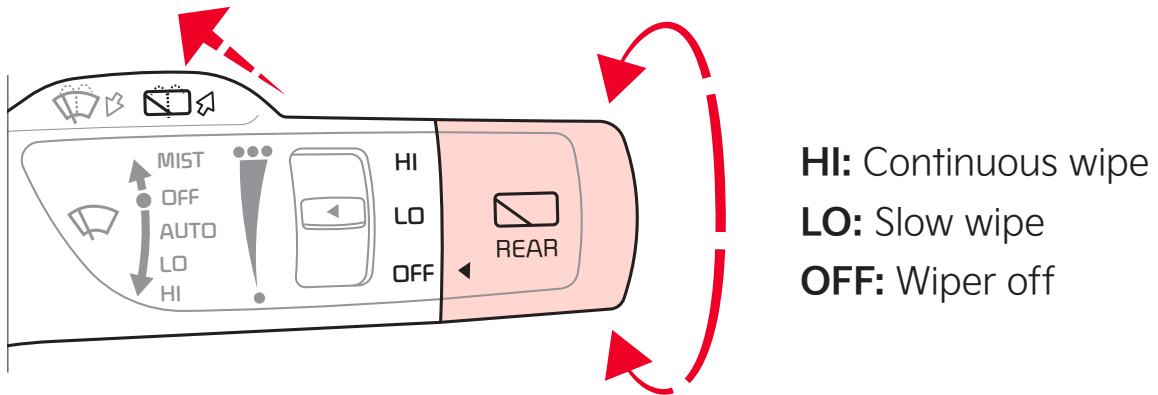

### QUICK TIP

- LO and HI sets the wiper speed. There is no intermittent wipe function on the Rear Wipers

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



 
## Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, press the lock-release lever **A** down and adjust to the desired angle **B** and then the distance **C**.



**Tilt/Telescoping/  
Heated Steering  
Wheel Controls**

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

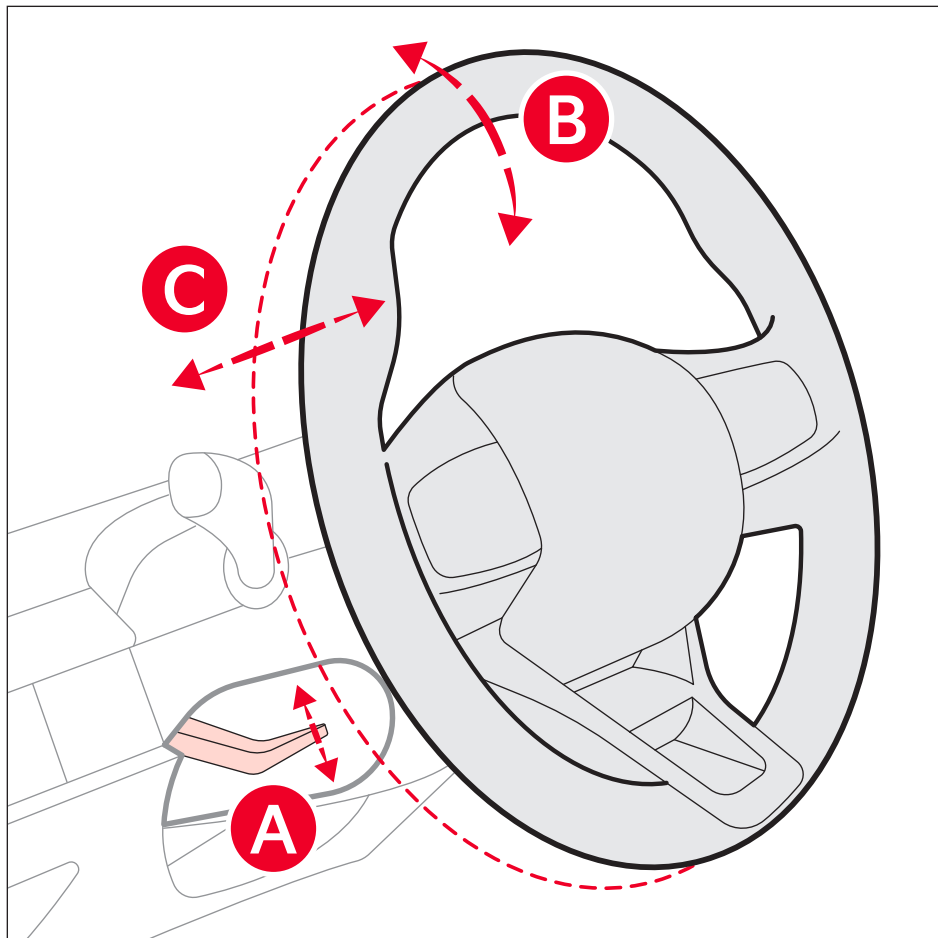

*For illustrative purposes only. Your steering wheel and/or controls may vary.*

### QUICK TIP

- It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust the desired distance prior to adjusting the angle.

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*

 
*Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.*





### Heated Steering Wheel\*

While the Engine Start/Stop button is in the ON position, press the Heated Steering Wheel button **A** once to activate level 1 heating and twice to activate level 2 heating. Press again to adjust to level 1 heating and once more to turn OFF. The steering wheel heater will turn off automatically in 30 minutes, or when button **A** is pressed again to deactivate.

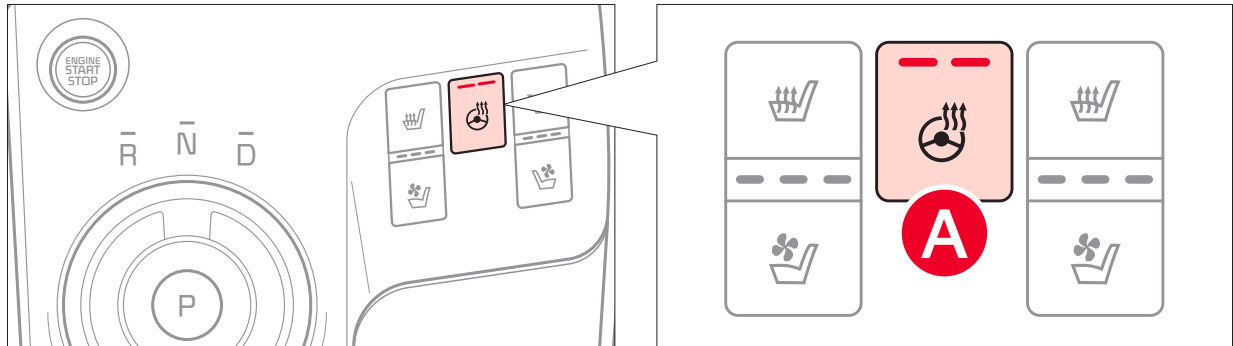

*Refer to section 5 in the Owner's Manual for more information.*

#### QUICK TIP

- If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

**REMINDER:** If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*



## Audio Controls - Steering Wheel<sup>†18</sup>

**A Audio MODE button:** Press to cycle through FM/AM/SiriusXM<sup>™†16</sup>/ Media modes. Press to turn power on; Press and hold to turn power off (Standard Audio System only); Press and hold to go to Advanced Setting / Steering Wheel mode (Kia Connect<sup>†1</sup> with Smart Navigation\*)

**B Seek/Preset button**  
Radio Mode (FM/AM/SiriusXM<sup>™\*†16</sup>): Press to advance through Preset Stations. Press and hold to Auto Seek

**Media Modes:** Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind (except for *Bluetooth®* Audio)

**C Volume button:** Press up/down to raise/lower volume

**Mute button:** Press to mute all audio (in some Media modes the media pauses when pressed)

 
**D Custom button:** Press to access user-selected feature. Press and hold the button to set the button to one of the features available



Steering Wheel Controls



Custom Star Buttons & Radio Favorites

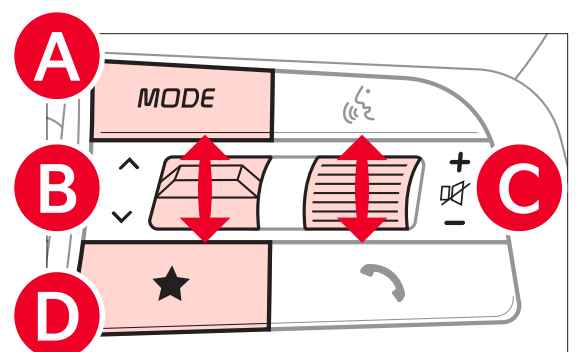

(Buttons located on right side of Steering Wheel. Button configuration may vary.)

### QUICK TIP

Pressing the Audio MODE button **A** for more than 1 second will turn Audio Mode ON/OFF.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations. For further audio system operation, refer to pages 77-90. Refer to section 5 in the Owner's Manual or the Car Infotainment System Quick Reference Guide for more information.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.



 
## Bluetooth® Wireless Technology<sup>†3,18</sup>

**A Voice Recognition button:** Press to activate voice recognition/bring up menus/set destinations (if equipped with navigation) with minimal voice command prompts from the system. Press and hold to exit voice recognition

**B Volume button:** Press up/down to raise/lower speaker volume

**Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media

**C Call/End Call button:** Press to receive/place/end calls. If no phone is paired, press button to pair a phone

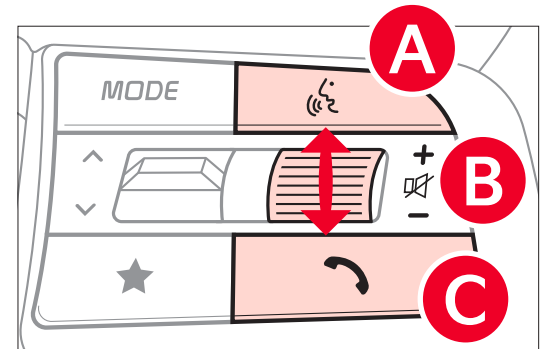

(Buttons located on right side of Steering Wheel. Button configuration may vary.)

### QUICK TIPS

- When using the voice command feature, wait for the system to BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

[Continued on next page](#)

For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

For more information, refer to the Car Infotainment System Quick Reference Guide. Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

# Bluetooth® Wireless Technology<sup>†3,18</sup>

[Continued from previous page](#)

## Pairing a Phone

For instructions on how to pair a phone, refer to the audio system’s user’s guide or your vehicle’s Quick Start Guide.

**QUICK TIP**

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

## How to Place a Call

 
When using the voice command feature, wait for the system beep before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

- **Option 1:** Press the Call/End Call button **A**  
(system displays the call history with the most recent calls)
- **Option 2\*:** Press the Voice Recognition button **B** (the system will BEEP to indicate it is ready for call placement). Then say the command “Call {name}” or “Dial {number}”

**REMINDER:** Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device.

[Continued on next page](#)

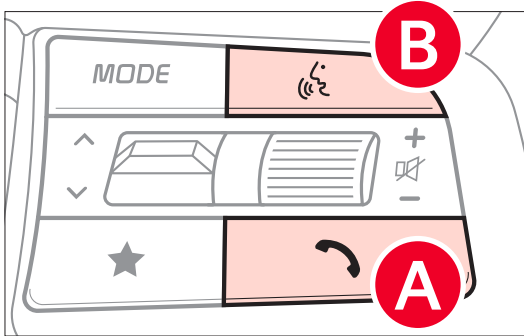

(Buttons located on right side of Steering Wheel. Button configuration may vary.)

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner’s Manual. For further audio system operation, refer to pages 77-90.*

<sup>†</sup> LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED

# Bluetooth® Wireless Technology<sup>†3,18</sup>

[Continued from previous page](#)

## Voice Recognition\* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the *Bluetooth®* Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, \*, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital lettersSpell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)



Voice Recognition Tips



Steering Wheel Controls

### QUICK TIPS

- The system may register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth®* Music Streaming: If the *Bluetooth®* music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Close windows and sunroof and turn off A/C. The noise from an A/C fan operating at higher speeds or wind noise from open windows or sunroof can interfere with Voice Recognition
- Press the Voice Recognition button and say “Help” to get a list of available commands

<sup>†</sup> LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED



## Android Auto™ †3 Setup

### Android Auto™ compatible

**smartphone setup** - Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.



**Wireless  
Android™ Auto**

### Wireless Connection setup for Android Auto™:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION, select ANDROID AUTO OPTIONS and then ENABLE ANDROID AUTO
3. Press PHONE PROJECTION, then ADD NEW
4. Press SETUP, select DEVICE CONNECTIONS, select DEVICE CONNECTIONS and select ADD NEW
5. Make sure Wi-Fi and *Bluetooth®* are activated on the smartphone and select the vehicle system from the list of searched *Bluetooth®* devices
6. Confirm that the verification codes on the smartphone and the infotainment screen match, and approve the connection from the smartphone
7. When connecting to Android Auto™ for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Android Auto from the smartphone
8. Press Android Auto™ from the home screen to see the available apps

[Continued on next page](#)

*Android Auto™ runs on your smartphone cellular data service. Normal data rates will apply.*



# Android Auto™†3 Setup

[Continued from previous page](#)

## Cable Connection setup for Android Auto™:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION, select ANDROID AUTO OPTIONS and then select ENABLE ANDROID AUTO
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps
5. Press the **SETUP** key on the Infotainment System
6. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
7. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
8. When connecting to Android Auto™ for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Android Auto™ from the smartphone
9. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

[Continued on next page](#)

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. Handheld devices, other equipment, or vehicle systems which distract the driver's focus and attention should never be used during operation of the vehicle.*





## Android Auto™†<sup>3</sup> Setup

[Continued from previous page](#)

### QUICK TIPS

- If Android Auto™ randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the Android Auto™ website for Android Auto™ app concerns

### REMINDERS:

- Android Auto™ compatibility requirements for connection:
  - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

*Refer to the Car Infotainment System Quick Reference Guide for more information.*



# Apple CarPlay<sup>®†3</sup> Setup

## Wireless Connection setup for Apple CarPlay<sup>®</sup>:

1. Press the **SETUP** button on the Infotainment System
2. Press DEVICE CONNECTIONS, select DEVICE CONNECTIONS and select ADD NEW
3. Make sure Wi-Fi and *Bluetooth*<sup>®</sup> are activated on the smartphone and select the vehicle system from the list of searched *Bluetooth*<sup>®</sup> devices
4. Confirm that the verification codes on the iPhone<sup>®</sup> and the infotainment screen match, and approve the connection from the smartphone
5. When connecting to Apple CarPlay<sup>®</sup> for the first time, check the pop-up window displayed on the system and press YES. Agree to enable Apple CarPlay<sup>®</sup> from the iPhone<sup>®</sup>
6. Press Apple CarPlay<sup>®</sup> from the home screen to see the available apps



Wireless  
Apple CarPlay<sup>®</sup>

## Cable Connection setup for Apple CarPlay<sup>®</sup>:

1. Connect the Apple CarPlay<sup>®</sup> compatible iPhone<sup>®</sup> with the vehicle's USB port using the manufacturer's cable provided with your iPhone<sup>®</sup>
2. Press the **SETUP** button on the Infotainment System
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay<sup>®</sup>
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay<sup>®</sup>
5. From the Infotainment System home screen, select the Apple CarPlay<sup>®</sup> button, where you'll see all the Apple CarPlay<sup>®</sup> supported apps

[\*Continued on next page\*](#)

*Android Auto<sup>™</sup> runs on your smartphone cellular data service. Normal data rates will apply.*



## Apple CarPlay<sup>®†3</sup> Setup

[Continued from previous page](#)

### QUICK TIPS

- If Apple CarPlay<sup>®</sup> randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the Apple CarPlay<sup>®</sup> website for Apple CarPlay<sup>®</sup> app concerns

### REMINDERS:

- Apple CarPlay<sup>®</sup> compatibility requirements for connection:
  - iOS<sup>®</sup> software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
  - Always update your phone to the latest operating system release

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle. Apple CarPlay<sup>®</sup> runs on your smartphone cellular data service. Normal data rates will apply. Refer to the Car Infotainment System Quick Reference Guide for more information.*



## Kia Connect Activation<sup>\*†1</sup>

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your Infotainment System:
  - a. Press the **SETUP** key
  - b. Press DATA/NETWORK
  - c. Under KIA CONNECT, press  
ACTIVATE SERVICE and then press ACTIVATE
2. Read the Terms of Service and press AGREE
3. Enter number or email address to receive a verification code, then press SUBMIT
4. On your smartphone, click on the link provided by text message or email and a page will open requesting you to create an account
5. If you have an account, enter the password to log in. Otherwise, provide the information needed to create the account
6. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press SUBMIT, then press OK again
7. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in to access the Kia Connect features



**Kia Connect  
Activation**



**Kia Connect &  
Access app**

**Note:** If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code.


**REMINDER:** This vehicle is equipped with over-the-air system updates. Or you download map updates for the navigation system. Go to [update.kia.com](https://update.kia.com). Check for updates that are generally available twice a year.

*For further Kia Connect information, refer to the Car Infotainment System Quick Reference Guide.*

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*




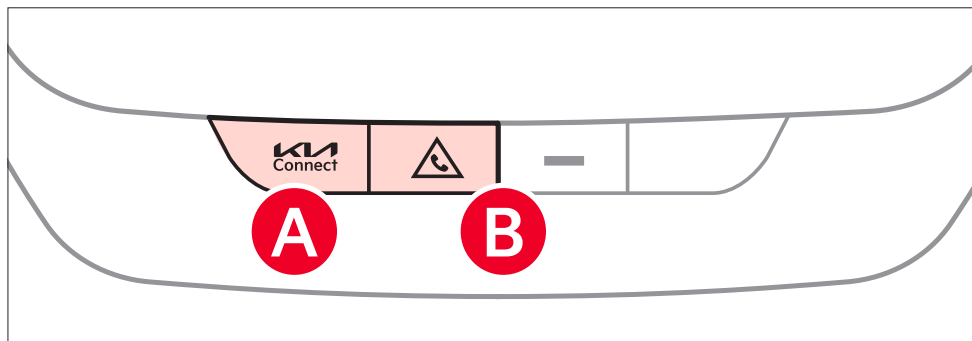 
## Kia Connect Assistance<sup>\*†1</sup>

**Kia Connect**  **A** - Press to connect to a virtual assistant to hear information about the Kia Connect features.



**Kia Connect Assistance**

**Roadside Assist**  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services. To contact Roadside Assistance from the Infotainment System screen, select KIA CONNECT and select ROADSIDE ASSIST. You should be automatically connected.



*(Buttons on overhead console\*)*

**REMINDER:** These buttons may be located on the rearview mirror or the overhead console.

*For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, Kia Connect Assistance buttons are located on the Rearview Mirror.*



## Kia Access<sup>†2</sup> App Download

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and set up an account (refer to Kia Connect<sup>†1</sup> Activation, [page 86](#)).



**Kia Access App  
Download**



Get to know your new Kia and the available convenient features on the app.

### QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use Kia Connect<sup>†1</sup>. If these conditions are not met, voice commands may fail or may take longer to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect<sup>†1</sup> will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect<sup>†1</sup> again



## Kia Access<sup>†2</sup> App Features Guide

The Kia Access App Features Guide is a guide helping you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

**Kia Access App  
Features Guide**

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

*For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.*

 
*Kia Connect may currently be unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at [owners.kia.com](https://owners.kia.com) for more information on its availability.*

*Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.*





## Kia Connect<sup>††1</sup> with Navigation<sup>††9</sup> - FM/AM/ SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

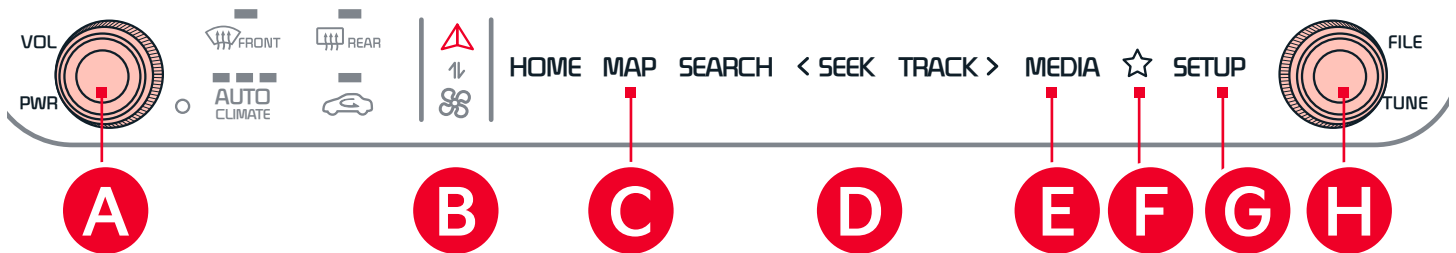

- A** Press to Power ON/OFF. Rotate to adjust Volume. Press and hold to turn off the screen and sound
- B** Infotainment System/Climate Control mode switching button
- C** Press to display the current position on the map or repeat voice guidance
- D** Press briefly to do the following:
  - While listening to the radio, change the station
  - While playing media, change the track/file
- E** Press to run connected MEDIA; press and hold to display the Media Home screen
- F** Press to select the custom feature, press and hold to display the function settings screen
- G** Press to display the Settings screen
- H** In radio mode, adjust the frequency or change the station. In media mode, scan music or files. Press to select current channel, music or file. On map screen, zoom in or out of the map


[\*Continued on next page\*](#)



## Kia Connect<sup>\*†1</sup> with Navigation<sup>\*†9</sup> - FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

[Continued from previous page](#)

### Infotainment System / Climate Control mode switching button - Press to

toggle between Infotainment System and Climate Control modes. Press and hold the Climate Control button  to set the default button display mode.




Kia Connect with Navigation





Navigation System Tips

### To adjust the sound settings:

1. Press the **SETUP** button on the Infotainment System
2. Select the onscreen SOUND button. Select the item to change settings
3. Use the onscreen buttons to adjust settings

**Radio Presets:** To save a preset, press the star button . This saves the current station in the selected slot.

**SiriusXM™ Smart Favorites:** In Radio mode, choose SiriusXM™, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

**Custom Key**  - To program the Custom Key to one of the available features, press and hold the Custom Key . Select one of the available features you would like the Custom Key to open.

**Map/software updates** - To keep your map and software up to date, Kia provides over-the-air updates, free of charge. You can also visit the official Kia update webpage at <https://update.kia.com>. **Note**, visiting a dealer for software update may include an additional charge.

[Continued on next page](#)



# Kia Connect<sup>\*†1</sup> with Navigation<sup>\*†9</sup> - FM/AM/ SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

[Continued from previous page](#)

### QUICK TIPS

- The system can register or pair up to six *Bluetooth*<sup>®</sup> devices
- When connected to Android Auto<sup>™</sup> or Apple CarPlay<sup>®</sup> on your smartphone, the smartphone's navigation system may also be available
- Prolonged use of the audio system in ACC mode of the Engine Start/Stop button may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge

Your vehicle's audio system may differ from that in the illustration. For more information, refer to the Car Infotainment System Quick Reference Guide. For further audio system operation, refer to pages 88-103.

Kia Connect may currently be unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at [owners.kia.com](https://owners.kia.com) for more information on its availability.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



# Multimedia USB Port, Power Outlets & USB Charger Port

 
**Power Outlets **A**:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

**Multimedia USB Port **B**:** Use Multimedia USB port to connect USB audio devices and smartphones.

**USB-C Charger Port **C**:** Devices can be recharged using a USB-C cable. The Engine Start/Stop button needs to in the ACC/ON/START position to operate the USB-C Charger Port.



**Multimedia USB Port,  
Power Outlets  
& USB Charger Port**

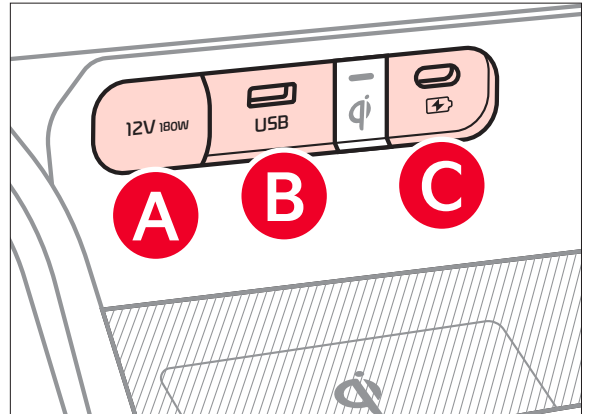

(Ports on panel in front of gear shift knob)

### QUICK TIPS

- The power outlets are inactive when ignition is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets. The USB Charger Port does not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

### REMINDERS:

- Using the power outlets and the USB ports for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device

*Images are for illustrative purposes only. Actual image or feature may vary.*

*For more information on the Aux/USB Ports and Power Outlets, refer to section 5 in the Owner's Manual.*



# Digital Clock (Infotainment System)

Press the SETUP key on the Infotainment System, then select General. Press the Date & Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

### QUICK TIPS

- When needed, Daylight Savings must be enabled in the Date & Time screen
- To access manual date and time setting, turn off SET TIME AUTOMATICALLY

*For more information, refer to the Car Infotainment System Quick Reference Guide.*



 
## Wireless Smartphone Charging System\*

Charge a Qi™ Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



**Wireless  
Smartphone  
Charging**

1. Enable Wireless Charging in the Vehicle Settings in the Infotainment System, select Convenience and then Wireless Charging System
2. All doors must be closed
3. Place a compatible smartphone on the center of the charging pad
4. Indicator light **B** may change to amber once wireless charging begins
5. Once charging is complete, the amber light may change to green

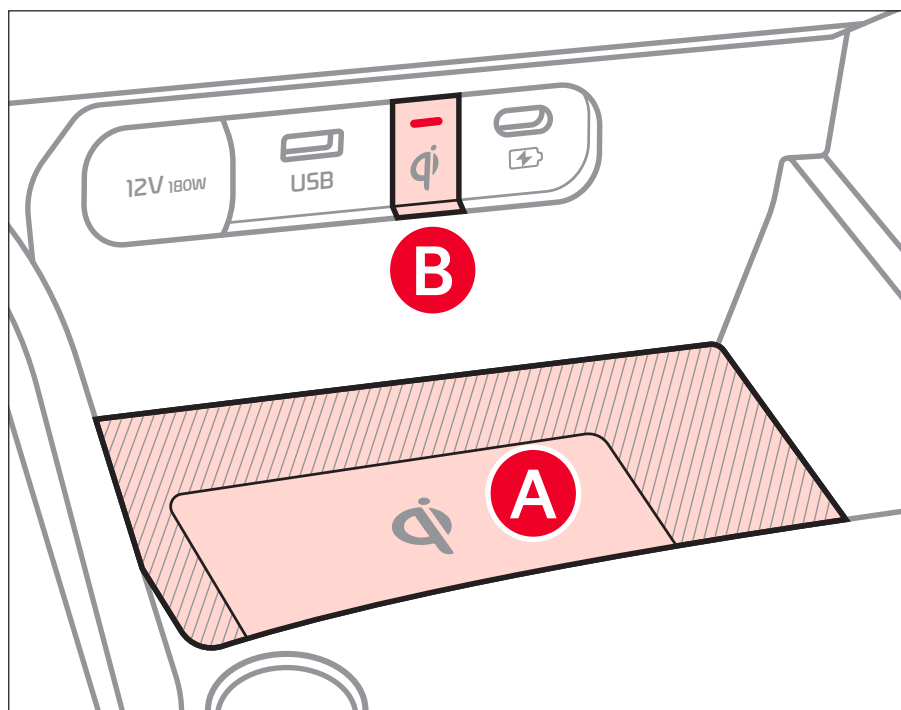

*Requires Qi™-enabled device or Qi™-enabled case.  
(Wireless tray in front of gear shift knob)*

[Continued on next page](#)



# Wireless Smartphone Charging System\*

[\*Continued from previous page\*](#)

### QUICK TIPS

- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area

### REMINDERS:

- The smartphone must be a compatible Qi™ certified phone with Qi™ function available. Some smartphone models are not Qi™ certified, which may effect the speed or performance of the wireless charging
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*





## Rotary Dial Shifter

**P:** Park - Press to place in Park

**R:** Reverse

**N:** Neutral

 
**D:** Drive



**Rotary Dial  
Shifter**

### REMINDERS:

- When in P (Park), if the brake pedal is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

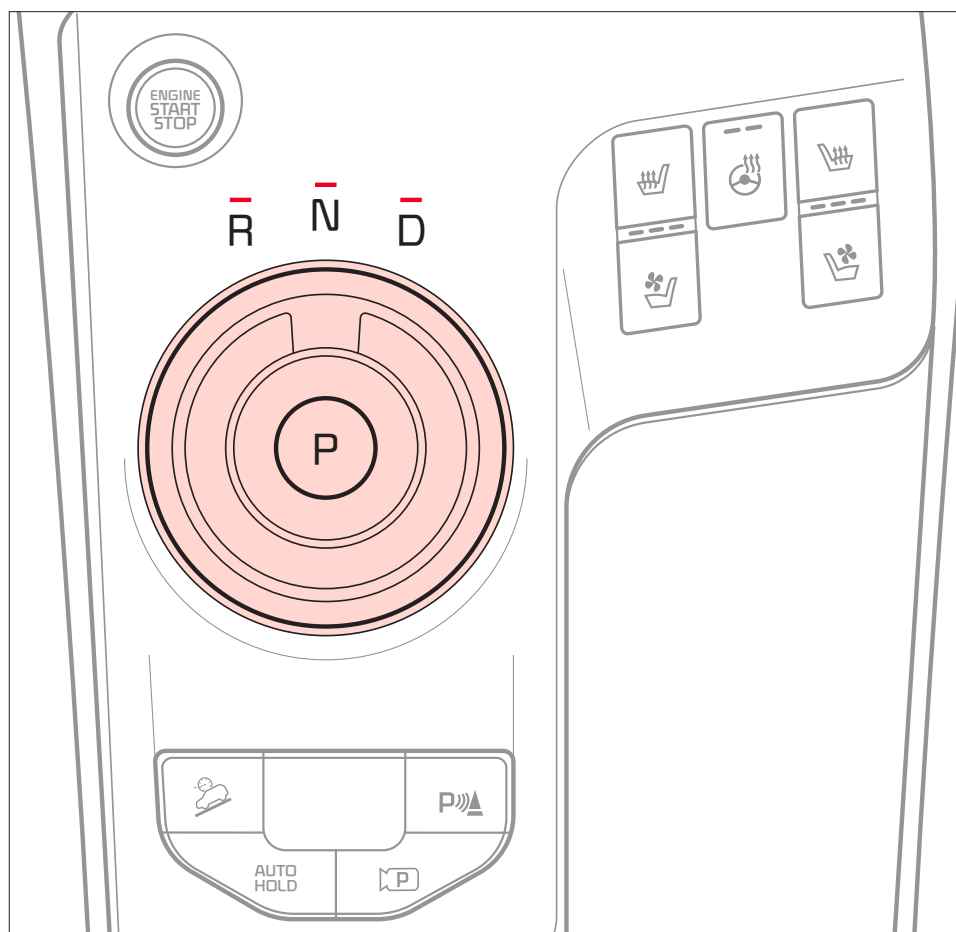

(Center Console)

*Image is for illustrative purposes only and may not reflect actual feature or operation. Your vehicle's buttons may differ from those in the illustrations.*

*Refer to section 6 in the Owner's Manual for more information.*



# Paddle Shifters

Paddle Shifters are operable when the shift lever is in the **D** (Drive) position.

 
**Paddle Shifting:** Pull the [+] or [-] paddle shifter **A** once to shift up or down one gear.

**[+]:** Manual Mode Upshift

**[-]:** Manual Mode Downshift

To change back to automatic shift mode, pull and hold the [+] paddle shifter for at least one second.

Automatic shift mode also activates when gently pressing the accelerator for more than approximately six seconds, or when the vehicle speed is slower than 2mph.

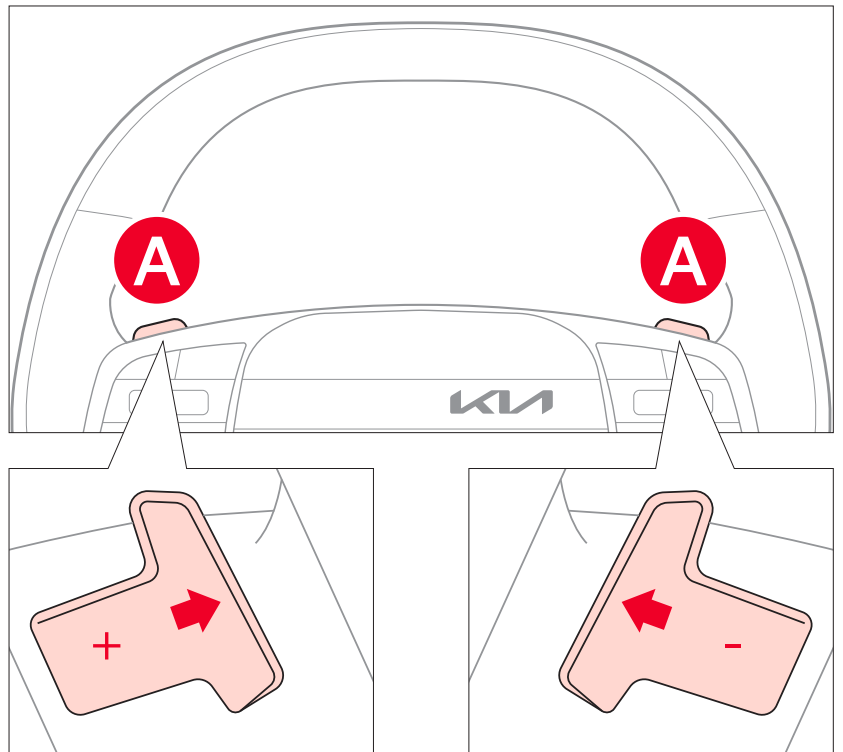

(Paddle shifters positioned behind Steering Wheel.)

### QUICK TIPS

- Press brake pedal and depress release button to move gear shift from **N** to **P**, **N** to **R** or from **P** to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For illustrative purposes only. Your actual steering wheel and/or paddle shifters may vary.*



 
# Automatic Climate Control

## Infotainment System / Climate Control mode switching button **A**:

1. Press to toggle between Infotainment System and Climate Control modes
2. Press and hold to set default mode
3. For quicker access, the custom button (★) on the steering wheel controls can also be configured to switch modes
4. The default mode can also be set in the User Settings menu



Climate Control - Switchable Controller

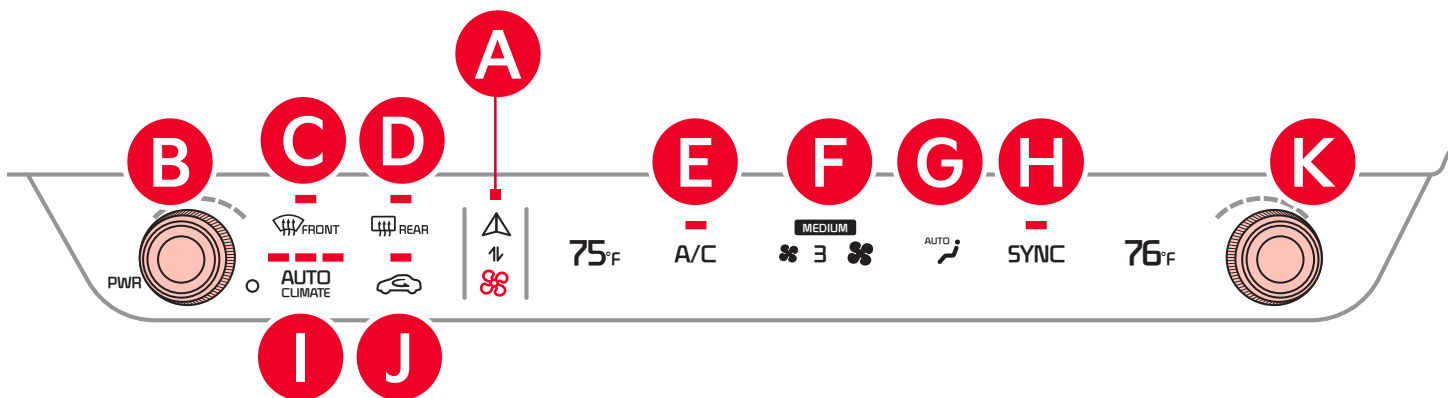

- |  |   |
|--|---|
| <b>B</b> Driver's temperature control knob | <b>H</b> SYNC button                          |
| <b>C</b> Front windshield defroster button | <b>I</b> Automatic Climate Control button     |
| <b>D</b> Rear window defroster button      | <b>J</b> Air intake control button            |
| <b>E</b> Air conditioning button*          | <b>K</b> Passenger's temperature control knob |
| <b>F</b> Fan speed control buttons         |   |
| <b>G</b> Mode selection button             |   |

## Climate Control Auto Function

1. Press AUTO to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected and the ambient condition
2. Set desired Temperature
3. Press SYNC to sync the left and right temperature control

Your Automatic Climate Control system may differ from the illustration.


[Continued on next page](#)




## Automatic Climate Control

[Continued from previous page](#)

### Defrost Outside Windshield:

1. Set Temperature to Hot
2. Press the Front Defrost button 

### Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button 

### Air Flow Modes

To select Air Flow Modes, press the mode selection button to cycle to the desired mode:



Face-Level



Floor-Level





Bi-Level



Floor/Defrost-Level

### Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.


[Continued on next page](#)



# Automatic Climate Control

[Continued from previous page](#)

### QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach the desired temperature and reduce humidity
- Keep the inside glass as clean as possible to reduce window fogging

### REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



# Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

## Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the Instrument Cluster.

 
If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application.

## Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive). To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.



**Electronic Parking Brake (EPB) / Auto Hold**

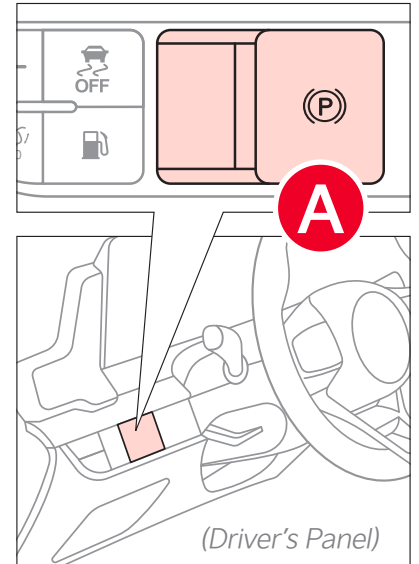

(Driver's Panel)

## QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

## REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

*Actual image or feature may vary. Refer to section 6 in the Owner's Manual for more information.*

 


### Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood, and liftgate (trunk) must be closed.



**Electronic Parking Brake (EPB) / Auto Hold**

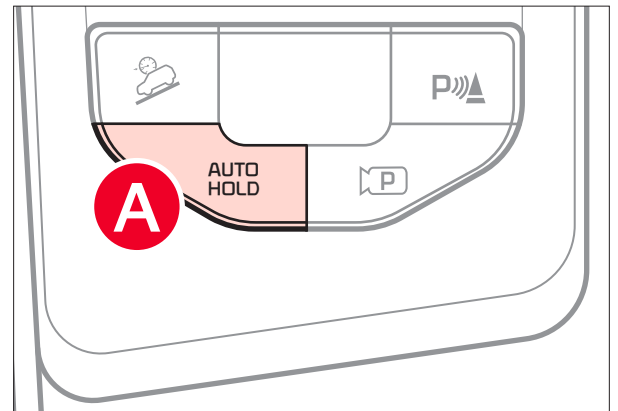

**The AUTO HOLD indicator on the Instrument Cluster has four states:**

**White: Standby** - With vehicle at a standstill and AUTO HOLD button **A** pressed ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

**Green: Engaged** - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

**Off (not illuminated)** - The indicator will turn off when the AUTO HOLD button **A** is manually pressed off.

**Yellow: Malfunction** - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

#### REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes


*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 6 in the Owner's Manual for more information.*

 




# Downhill Brake Control (DBC)<sup>†6</sup>

DBC is designed to help drivers maneuver down steep hills by automatically applying braking inputs, allowing drivers to concentrate on steering.

Press button **A** to turn DBC ON/OFF. When on, the DBC indicator  will illuminate.

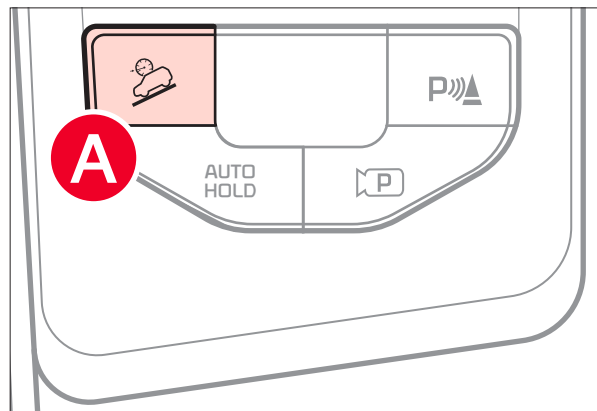

### QUICK TIPS

- When on, DBC will turn OFF when vehicle speed exceeds 38 mph
- If the indicator illuminates red, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

**REMINDER:** DBC defaults to OFF when ignition is cycled.

*Images are for illustrative purposes only. Actual image or feature may vary.*

*The DBC system is a supplemental system and does not replace the need for the driver to apply the brakes. Pay attention to road and traffic conditions and be prepared to depress the brakes.*

*Refer to section 6 in the Owner's Manual for more information.*



## Seat Warmers / Ventilated Seats<sup>\*†15</sup>

### **A** Seat Warmers\*:

 
- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

### **B** Ventilated Seats\*:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



### Seat Warmers & Ventilated Seats

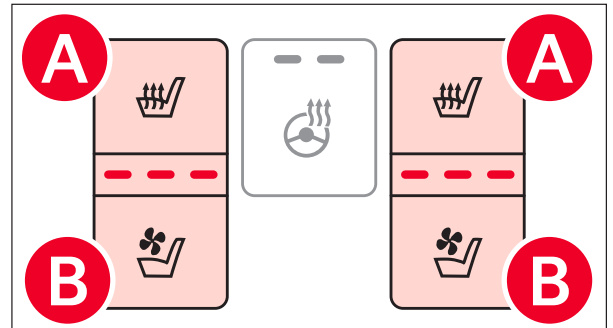

(Buttons located to the right of gear shift)



(Located on passenger's door panel)

### QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically
- When manually turned on, the seat warmer system automatically controls the seat temperature to help prevent low-temperature burns. When manually adjusted to increase heat, soon after, the seat warmer returns to the automatic function
- When pressing and holding the seat warmer buttons, the seat warmer will turn off
- Rear seat warmers\* **C** only have a high and low temperature setting

**REMINDER:** Use extreme caution when using the seat warmers to avoid burns.

*Images are for illustrative purposes and may not reflect actual feature or operation. Refer to section 5 in the Owner's Manual for more information.*

 
 


## Power Adjustable Driver's Seat\*†13


Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar\* forward/backward.




**Power Adjustable Driver's Seat with Memory Settings**

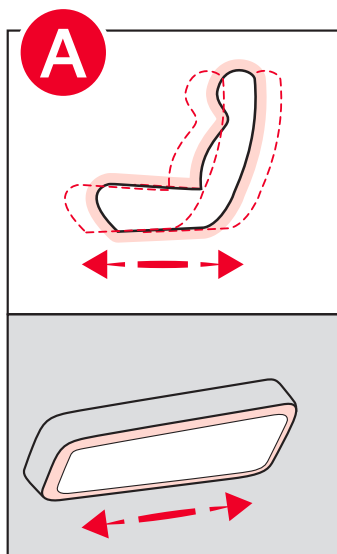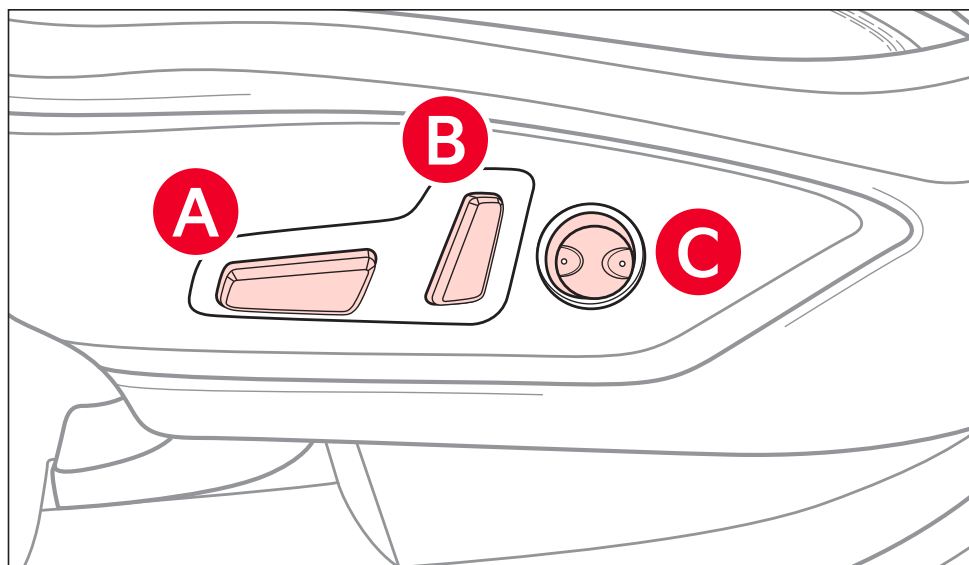


Seat

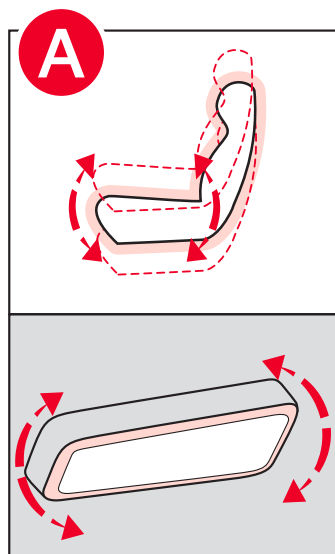 

Seat Cushion

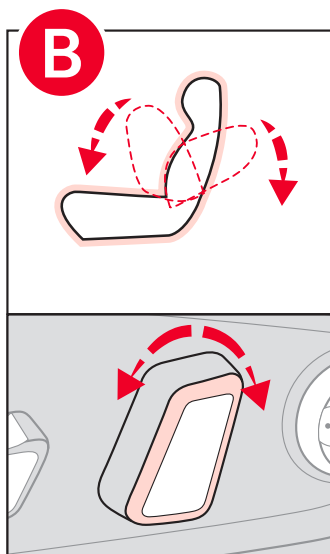 

Seatback

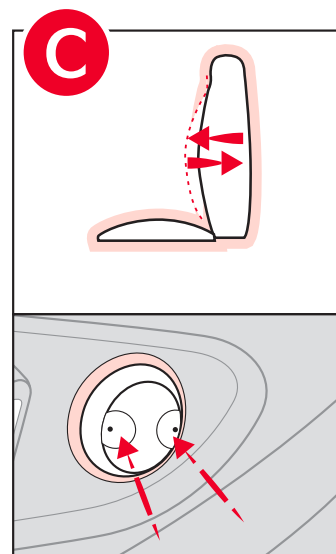 

Lumbar\*

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 4 in the Owner's Manual for more information.



## Driver Position Memory System\*†13

 
The integrated system stores into memory the position of the Driver's Seat.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:



Power Adjustable Driver's Seat - Memory Settings

1. Adjust the Driver's Seat
2. Press and hold one of the memory buttons **A**. The system will beep once when memory has been stored

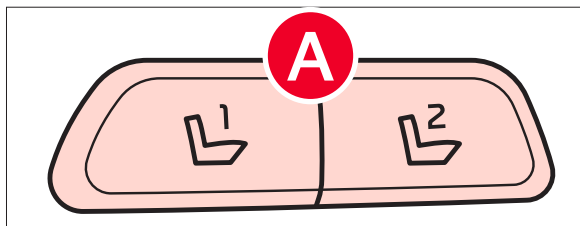


(Buttons located on Driver's Door Panel)

**REMINDER:** Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

## Infotainment System Seat Settings\*

 You can adjust various features related to the seats and steering wheel by pressing the **SETUP** button on the Infotainment System. Press VEHICLE, then select SEATS to access these features:

- **Link to Climate Settings for Auto-Adjustment\*:** Adjusts steering wheel warmer and driver seat warmer/ventilation
- **Seating Easy Access:** Moves the steering wheel and front and rear seats to provide easier entry/exit for driver and passengers
- **Seat Position Change Alert:** Displays details and images of seat position changes

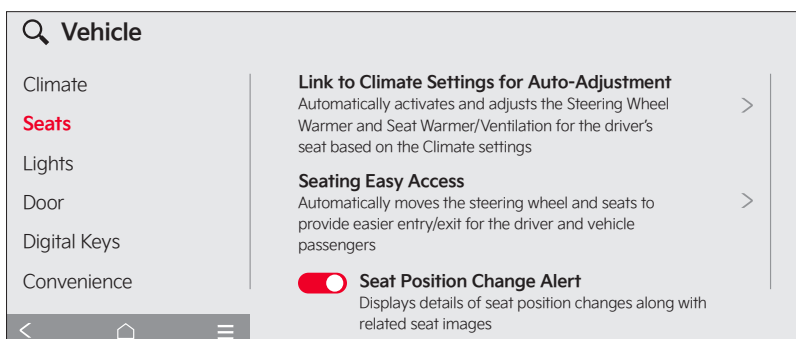

**REMINDER:** Additional seat settings may be available if equipped.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.*




### 6-Way Manual Adjustable Driver's Seat<sup>\*†13</sup>

 - Pull lever **A** to slide seat forward/backward
- Pull lever **B** up several times to raise Seat Height
- Push lever **B** down several times to lower Seat Height
- Pull lever **C** to adjust seatback recline



**Manual Seat Adjustment**

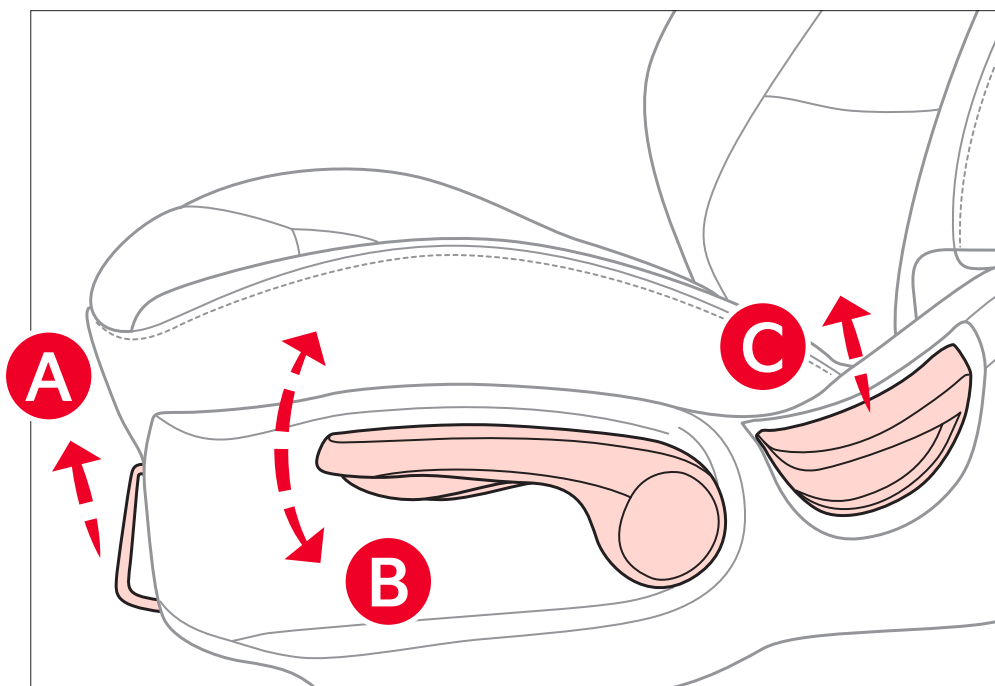

#### QUICK TIP

- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

*Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.*

 
*For more information on 6-Way Manual Adjustable Driver's Seat operation, refer to section 4 in the Owner's Manual.*



# Front Seat Headrest Adjustment<sup>†8</sup>

**To raise headrest** — Pull headrest up to the desired position.

**To lower headrest** — Press lock **A**, then press the headrest down

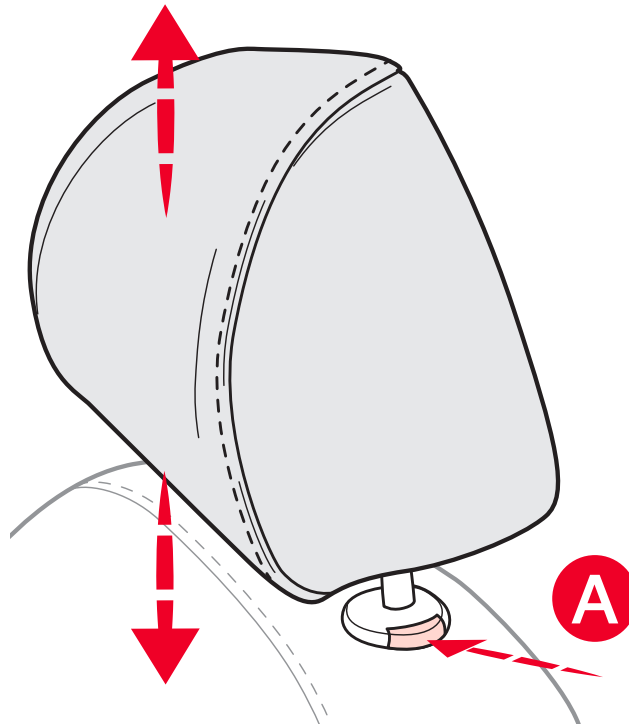

### QUICK TIP

- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

### REMINDERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

*Refer to section 4 in the Owner's Manual for more information.*



 
# Rear Occupant Alert (ROA) with Door Monitoring<sup>†10</sup>

Rear Occupant Alert with Door Monitoring can help alert the driver when the system detects that a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats” **A** and an alert will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to Vehicle Settings on the Infotainment System, by selecting VEHICLE, then select Convenience, then Rear Occupant Alert and check/uncheck the box.



**Rear Occupant Alert (ROA) with Door Monitoring**

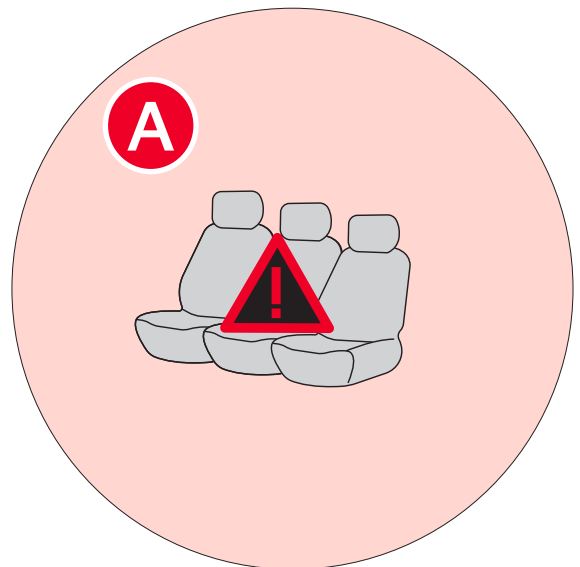

(Message on Cluster Display)

### REMINDERS:

- Always be sure to check the passenger areas before leaving the vehicle
- ROA uses a rear door opened/closed history, which is reset after the driver turns the vehicle off, exits the vehicle and locks the door remotely. So even if a rear door does not reopen, Rear Occupant Alert (ROA) alert can occur

*Images are for illustrative purposes only. Actual image or feature may vary.*

*When engaged, Rear Occupant Alert is not a substitute for one's attention and does not detect all movement within the vehicle. Always check the vehicle interior when exiting the vehicle.*

*See section 5 in the Owner's Manual for more information.*





# Reclining/Folding Rear Seats<sup>†13</sup>

(Seat type with lever in front)

### To recline the Rear Seatback:

1. Pull lever **A** up to unlock seat
2. Holding the lever **A** up, adjust Seatback to desired position **B**
3. Release the lever **A** and ensure the Seatback is locked in place



2nd-Row Seats

 
### To fold the Rear Seatback:

1. Set the front seatback in the most upright position and if needed, slide the seat forward.
2. Lower the headrest to the lowest position
3. Insert the rear seat belt buckle into the pocket between the rear seatback and cushion. Insert the seatbelt webbing in the guide
4. Lift seatback folding lever **A** up to unlock seat
5. Fold Seatback flat

### QUICK TIP

- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

**REMINDER:** The lever must return to its original position for the Seatback to lock.

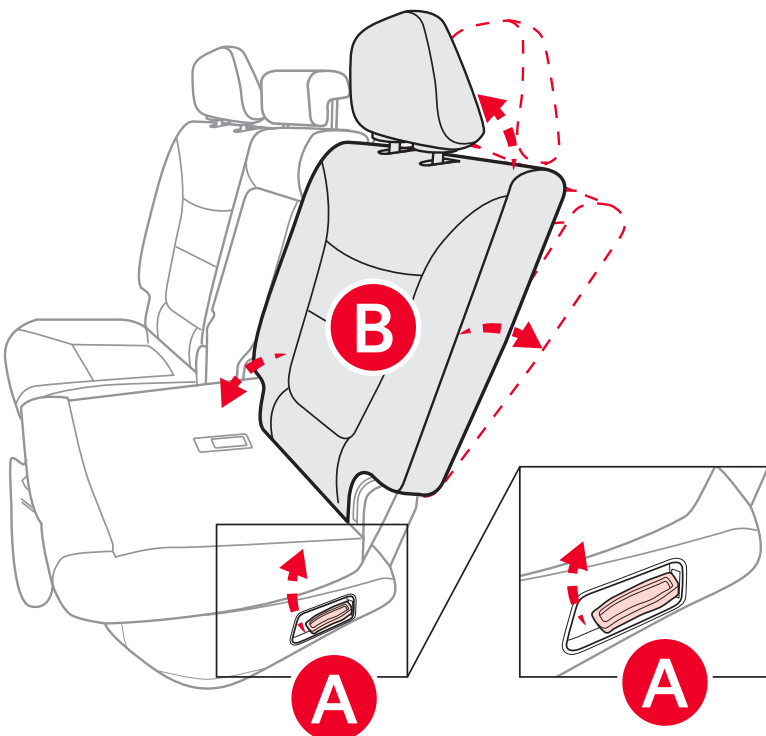

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to section 4 in the Owner's Manual for more information.*





# Unfastening Center Seat Belt<sup>†14</sup>

  If Seat Belt is buckled, press the release button on the buckle.



**Unfastening  
Center Seat Belt**

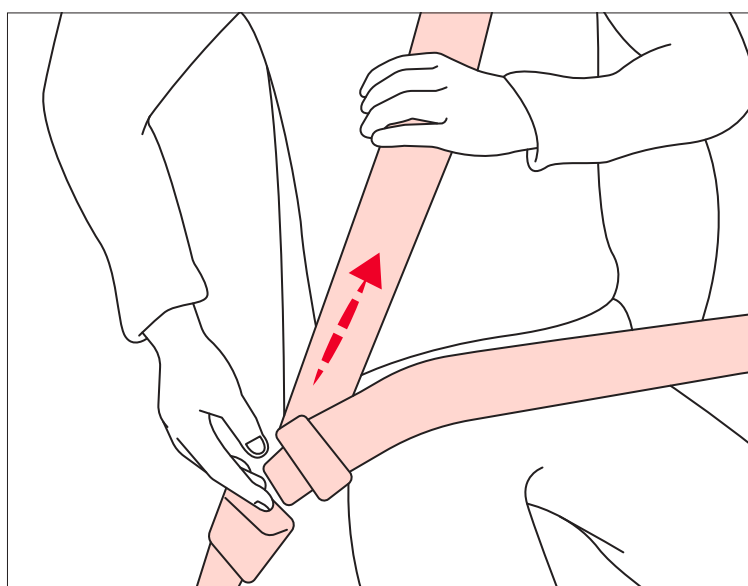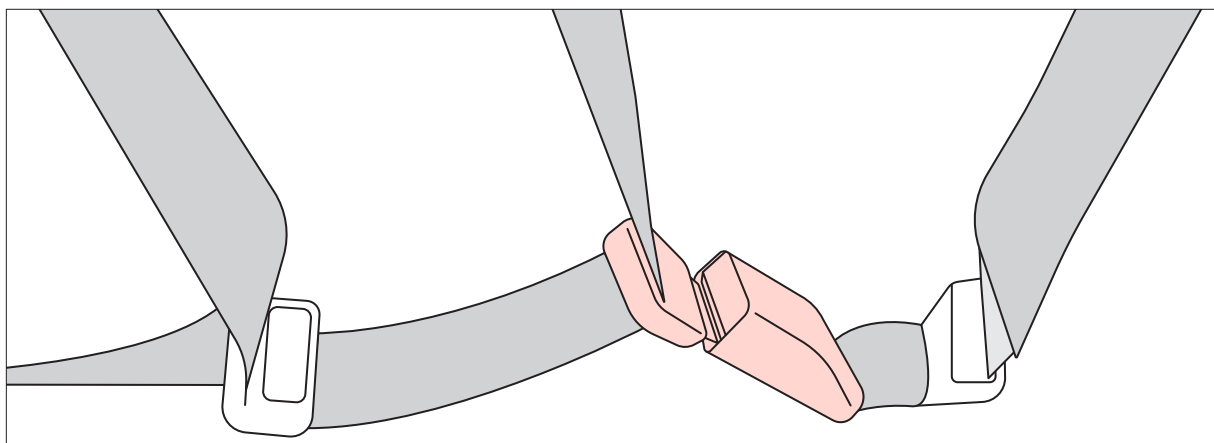

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only. Actual belt buckle/tongue plate may vary.



## Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)\*†4,7

- A** Press to lock All Doors  
(all doors must be closed to lock)
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors

- C** **Power Liftgate\***: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close

**Manual Liftgate\***: Press and hold to unlock the Liftgate and then manually open

- D** Press and hold for more than a half-second for Panic Alarm. To turn off Alarm, press any button

 
- E** Press to release Mechanical Key **F**

- G** **Remote Start\***: Lock the doors by pressing the door lock button **A** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **G** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver does enter vehicle within ten minutes of starting the vehicle, the engine will automatically turn off

**Remote Smart Parking Assist (RSPA)\*** - To park into a parking space remotely **H** **I**, see instructions on [page 55](#).



Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)

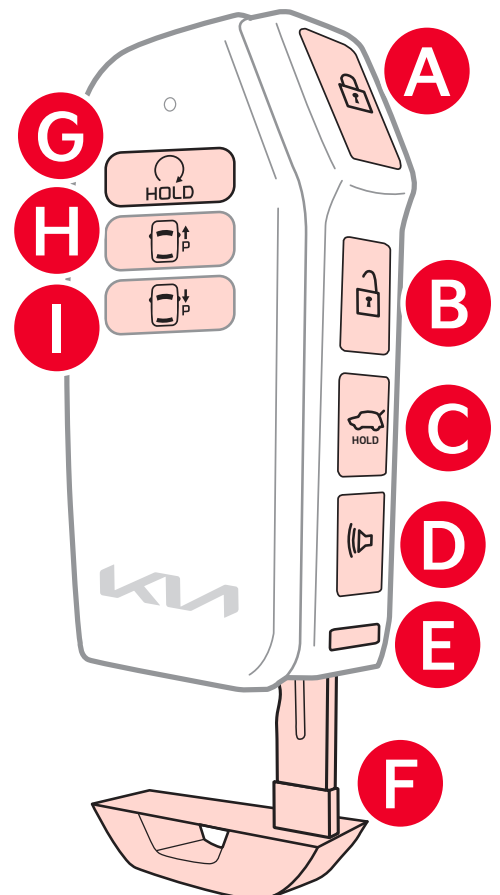

[Continued on next page](#)



# Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)\*†4,7

[Continued from previous page](#)

 
 
 
 
### Driver's Door Lock/Unlock button **A**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

### Mechanical Key **B**:

1. Pull out door handle
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **C**
3. Insert Mechanical Key **D** and turn left to unlock Driver's Door. Turn left twice within 4 seconds to unlock all doors
4. Insert Mechanical Key and turn right to lock Driver's Door to lock all doors
5. Return keyhole cover to its original position

Use to turn Child-Protector Rear Door Lock.

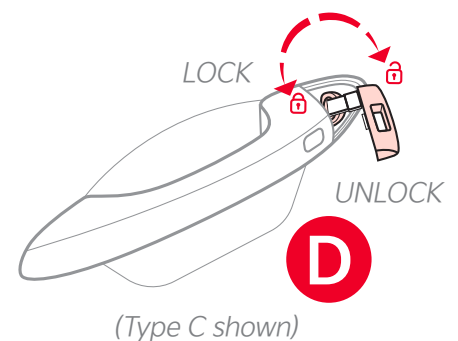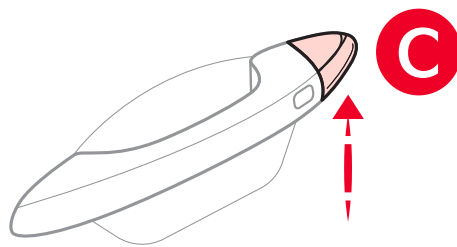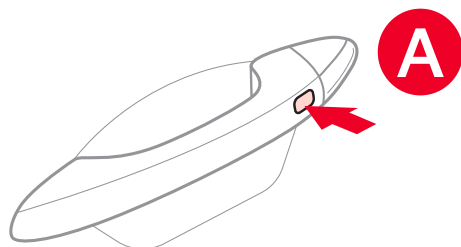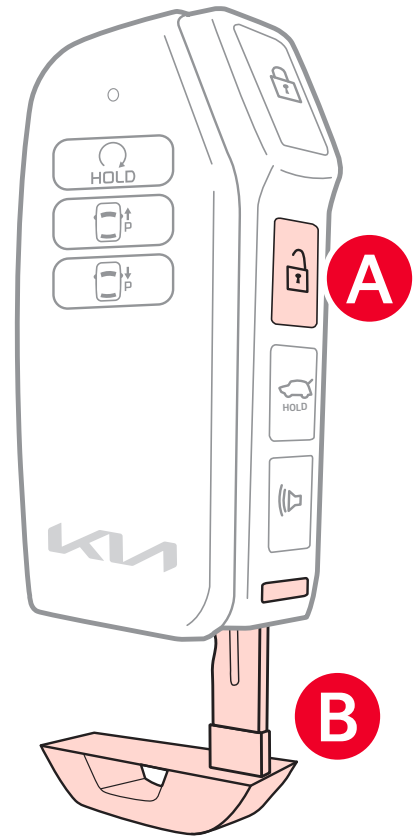

[Continued on next page](#)



# Smart Key with Remote Start / Remote Smart Parking Assist (RSPA)\*†4,7

[Continued from previous page](#)

### QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

*Remote button configuration may vary depending on vehicle options. For more information on the Mechanical Key, please refer to section 5 in the Owner's Manual.*

*Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.*



 
### Digital Key 2<sup>\*†3</sup>

Digital Key 2, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

#### Digital Key 2 Setup (for Smartphones with Ultra-Wide Band Technology (UWB)):

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App<sup>†2</sup>, start an account, and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System
3. Open the Kia Access App<sup>†2</sup> and select DIGITAL KEYS **A**
4. Press CREATE OWNER KEY
5. When your vehicle's Infotainment System detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
6. Press CONTINUE and the wallet app will pair and add your digital key

**REMINDER:** Actual steps may vary between devices.

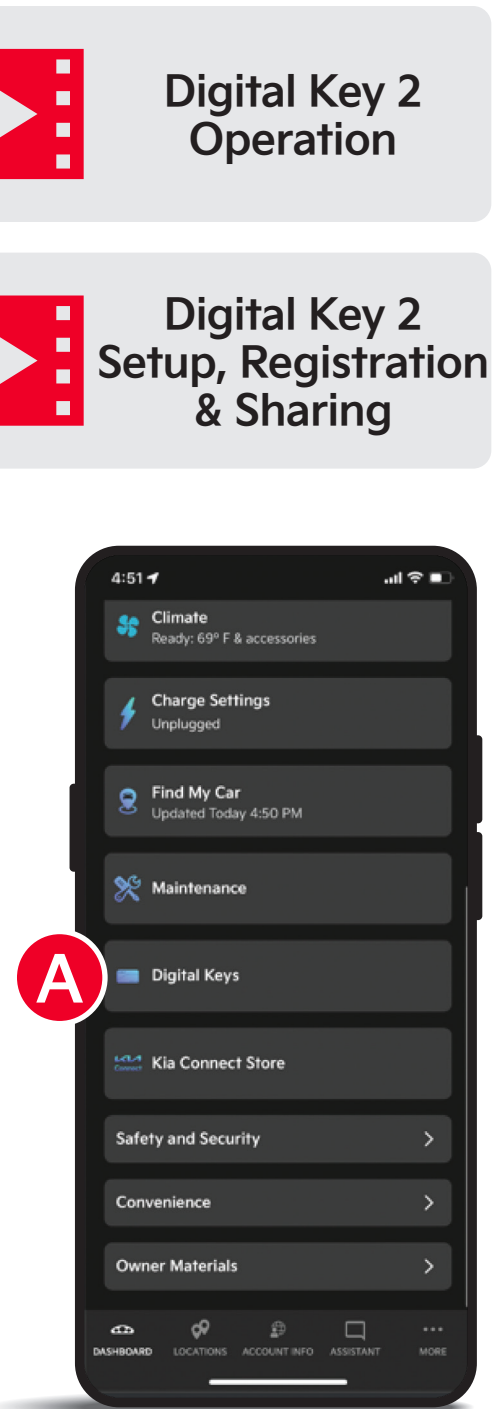

[Continued on next page](#)

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*


*Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

# Digital Key 2<sup>\*†3</sup>

 [Continued from previous page](#)

## Digital Key 2 Setup (for Smartphones without Ultra-Wide Band Technology (UWB)):

1. Download the Kia Access App<sup>†2</sup>, start an account, and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System
2. Ensure your Smart Key is inside the vehicle and vehicle is on
3. On the vehicle's **Infotainment System**, select SETUP
4. Press VEHICLE, then DIGITAL KEY
5. Select SMARTPHONE and MY SMARTPHONE KEY
6. Open the **Kia Access App** and select DIGITAL KEY
7. Press CREATE OWNER KEY and place your smartphone in the authentication pad (wireless charging pad) **A** to complete registration
8. Click SAVE on the Infotainment System and a message will appear showing the process is in place
9. When your vehicle's Infotainment System detects your device, the CONTINUE TO WALLET APP button will illuminate. Select it to open the wallet app
10. Press CONTINUE and the wallet app will pair and add your digital key
11. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the Digital Key in your smartphone's wallet app

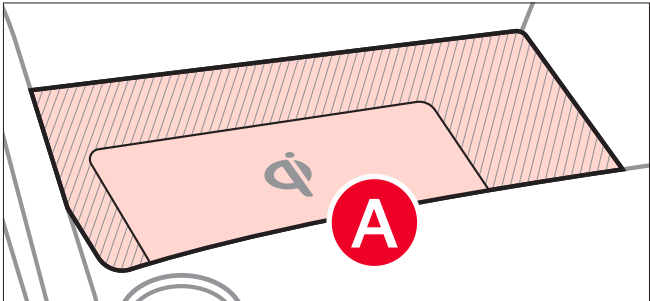

[Continued on next page](#)

**QUICK TIP**

When in the wallet app, click on the Digital Key and select the menu icon to adjust other settings or use other features.

**REMINDER:** Actual steps may vary between devices.

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device. Button configuration may vary. Images are for illustrative purposes only and may not reflect actual feature or operation.*

† LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED





## Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

### Using your Digital Key 2 (Smartphones with UWB):

1. To unlock your vehicle, simply have your smartphone on your person and as you approach the driver's door, the doors will unlock
2. To start your vehicle with Digital Key 2, with your smartphone in the vehicle, press the brake pedal and the Engine Start/Stop button

### Sharing your Digital Key 2:

1. Open the wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Press INVITE and SET ACCESS, to set the level of access of the shared Digital Key. The default is "unlock and drive," or you can select "unlock only"
3. Then select INVITE and input the name of the contact to whom you want to send the Digital Key
4. Select SEND, and CONFIRM to share your Digital Key. The invitation will show pending, until your contact has accepted the invitation and activated the shared Digital Key

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

**Revoking shared Digital Key access:** You can also revoke a digital key using the wallet app on your smartphone. Open the wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Select the contact and click on **Revoke Access**.

**To delete shared keys and the owner key:** Go to the Vehicle Settings\* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEYS, SMARTPHONE KEY. Select the Digital Key and press DELETE.

**REMINDER:** Actual steps may vary between devices.

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*

[Continued on next page](#)

## Digital Key 2<sup>\*†3</sup>

[Continued from previous page](#)

### QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

### REMINDERS:

- Digital Key 2 is currently only compatible with Apple iPhone® & iWatch®, Google™ Wallet and Samsung™ smartphones
- Your iPhone® Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
  - The smart phone is removed from the in-vehicle authentication pad
  - Changing the Infotainment System screen
  - The vehicle is powered off or the gear is shifted
  - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
  - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
    - iPhone XS® or later.
    - iPhone 11 Pro® or later (for passive entry or remote features on compatible cars)
  - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
    - Apple Watch Series 5® or later
    - Apple Watch Series 6® or later (for passive entry or remote features on compatible cars)
  - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
    - Galaxy S20™ or later
    - Galaxy Note20 5G™ or later
    - Galaxy Z Flip 5G™ or later
    - Galaxy Fold 2™ or later
  - For **Google™ Smartphones:** Ensure the device has the latest version of Google™ operating system and latest application version of Google™ Wallet

*Kia Digital Key 2 Touch requires an eligible Kia Connect subscription and a compatible smart device with an active data plan. Normal cellular service rates may apply when using a smart device.*



### Remote Keyless Entry (Folding Key)\*

 
- A** Press the release button to unfold the key
- B** Press to lock all doors
- C** Press to unlock driver's door. Press twice in 4 seconds to unlock all doors and Liftgate
- D** Press and hold to unlock the liftgate and then manually open
- E** Press and hold more than 0.5 seconds (half a second) for Panic Alarm. To turn OFF Alarm, press any button



Kia Smart & Folding Key Fobs

#### REMINDERS:

- The Liftgate/trunk does not automatically open when the button **D** is pressed
- Remote button configuration may vary depending on vehicle options
- The Liftgate unlocks when the Smart Key fob is within close proximity of the Liftgate

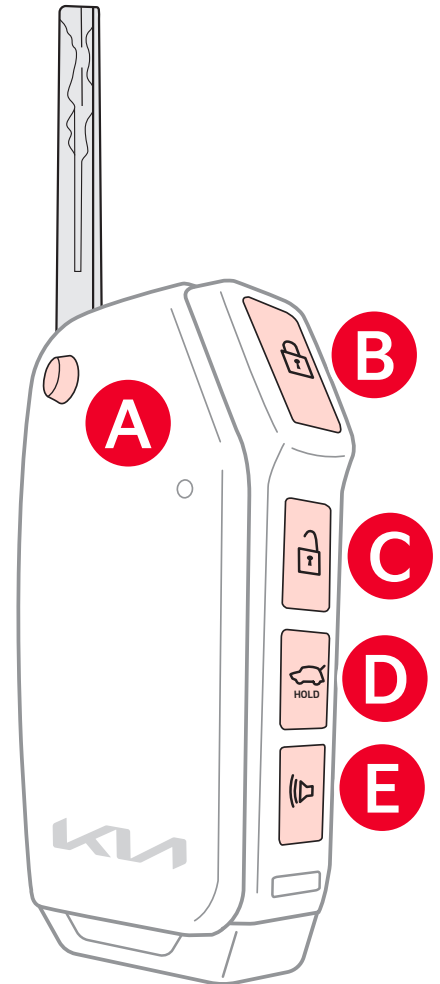


*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



### Double-Turn Lock/Unlock All

 
- Turn to the right once to unlock driver's door
- Turn to the right again within 4 seconds to unlock all doors
- Turn to the left once to lock all doors

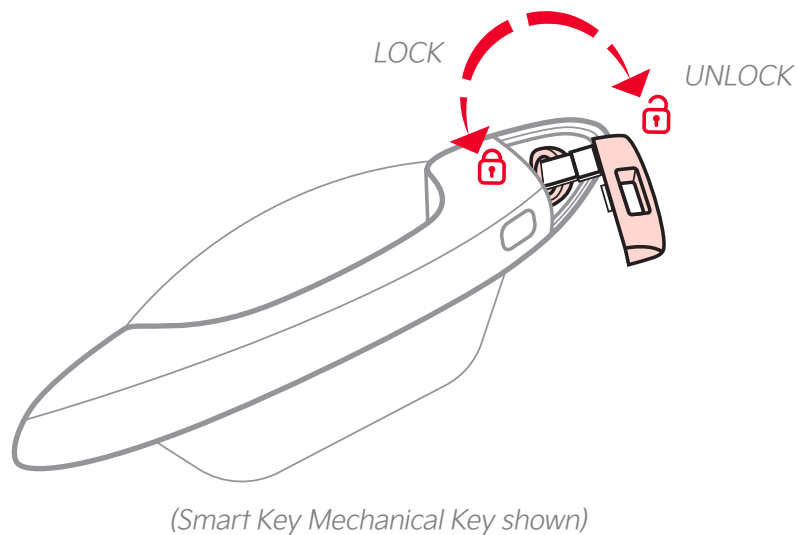

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*




# Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.



Kia Fuel Cap

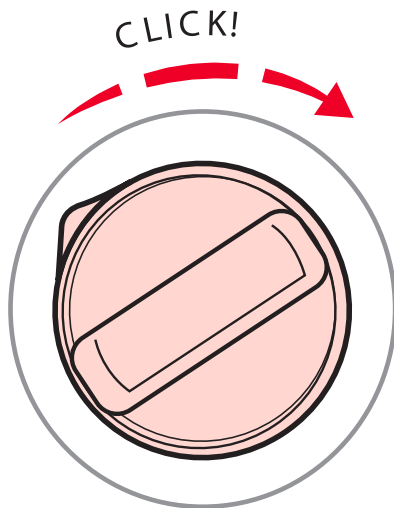

### REMINDERS:

- To open the fuel door, press the right edge of the fuel door
- It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



## OTHER KEY FEATURES

 
 
### Fuel Filler Lid

With the vehicle off and driver's door unlocked, press the right center edge of the Fuel Filler Lid **A**. Then pull the Fuel Filler Lid out to fully open.

To open the Fuel Cap, turn it counterclockwise **B**.



Fuel Filler Lid

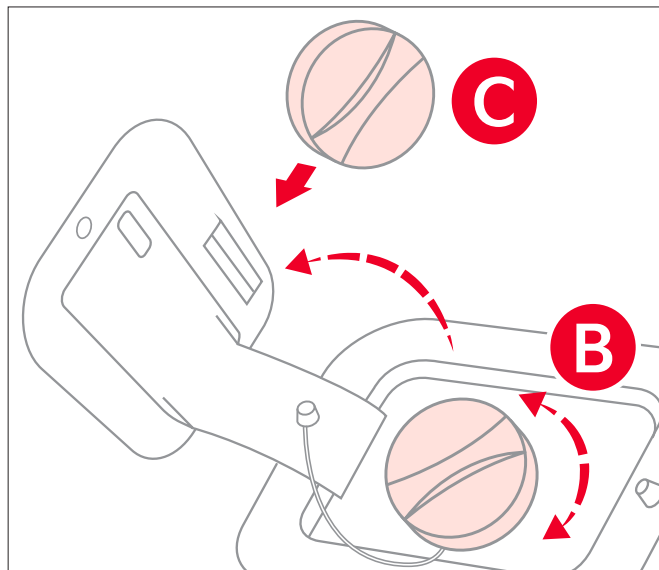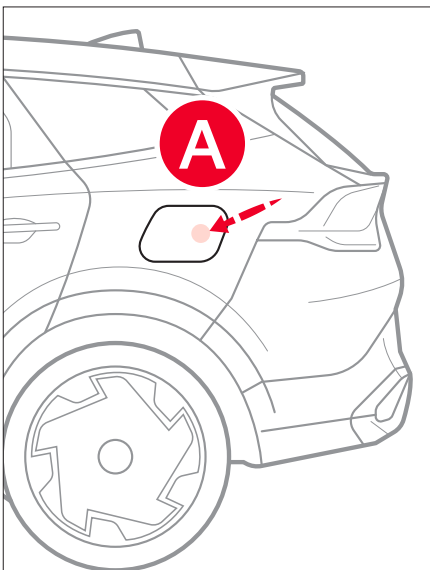

#### QUICK TIP

- Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **C**

#### REMINDERS:

- To lock Fuel Filler Lid:
  - Press the lock button on your smart key
  - Press the Central Door lock button on armrest trim of driver's door
  - All doors and Fuel Filler Lid will automatically lock after the vehicle speed exceeds 9 mph

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



## HomeLink<sup>®</sup> †3 with Auto-Dimming Rearview Mirror\*

The HomeLink<sup>®</sup> Universal Transceiver is designed to connect to your garage door opener, electric gate, home lighting, etc.



 
HomeLink<sup>®</sup>  
Support Link

The Auto-Dimming Rearview Mirror is designed to help reduce glare coming from a vehicle's headlights in the rear. HomeLink<sup>®</sup> with Auto-Dimming Rearview Mirror can connect to three electronic transmitters.

**REMINDER:** Mirror indicator light will illuminate when automatic dimming is ON.

### Programming a New HomeLink<sup>®</sup> Button:

1. Press and release the HomeLink<sup>®</sup> Channel button **A**, **B** or **C**, you would like to program. The HomeLink<sup>®</sup> User Interface Indicator **D** will flash orange slowly (If it doesn't, go to the steps of "Erasing HomeLink<sup>®</sup> Buttons" section on next page, and start over)
2. Position the garage-door opener remote 1-3 inches away from the HomeLink<sup>®</sup> buttons
3. While the HomeLink<sup>®</sup> User Interface Indicator **D** is flashing orange, press and hold the garage-door opener remote button until the HomeLink<sup>®</sup> User Interface Indicator **D** changes from orange to green
4. Wait until your garage door comes to a complete stop, regardless of position, before proceeding to the next step

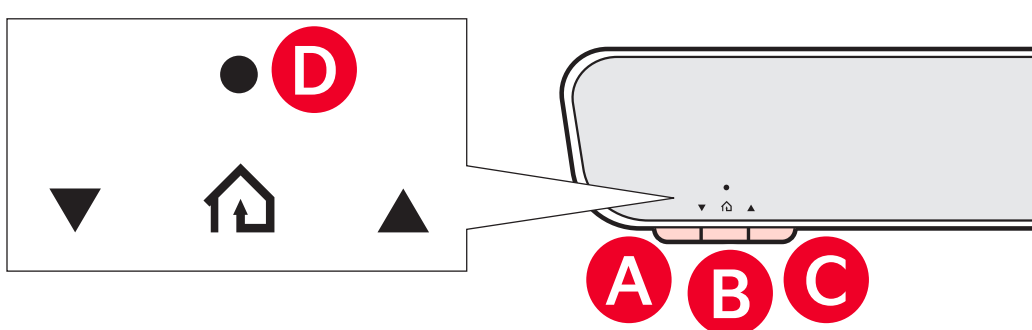


[Continued on next page](#)



## HomeLink<sup>®†3</sup> with Auto-Dimming Rearview Mirror\*

 [Continued from previous page](#)

5. Press and release the HomeLink<sup>®</sup> Channel button **A**, **B** or **C** that you're programming. If the HomeLink<sup>®</sup> User Interface Indicator **D** is solid green, HomeLink<sup>®</sup> is connected and should operate when the HomeLink<sup>®</sup> Channel button **A**, **B** or **C** is pressed. If your device operates, programming is complete
- If the indicator light rapidly flashes green, firmly press, and hold the HomeLink<sup>®</sup> Channel button **A**, **B** or **C** slowly, for two seconds up to three times in a row, to complete the programming process. Do not press the HomeLink<sup>®</sup> Channel button rapidly. If your device now operates, programming is complete
  - If the device does not operate, continue with step 6
6. At the garage door opener motor, (security gate motor, etc.) locate the "Learn", "Smart", "Set" or "Program" button. This can usually be found where the hanging antenna wire is attached to the motor-head unit (see the device's manual to identify this button). The name and color of the button may vary by manufacturer. A ladder and/or second person may simplify the following steps

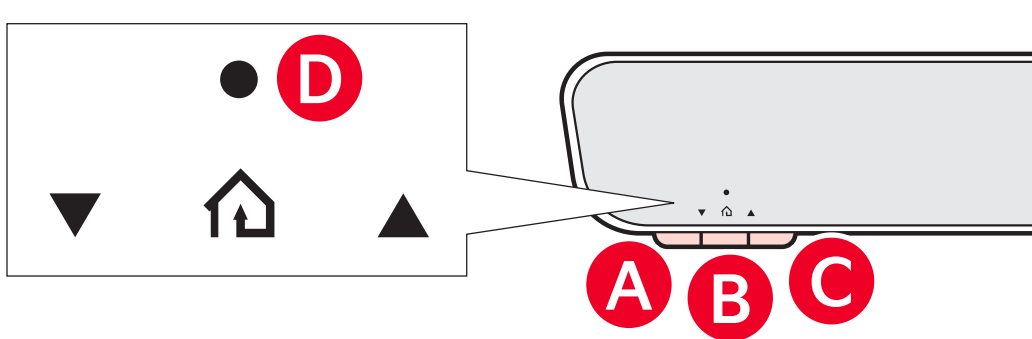

[Continued on next page](#)

# HomeLink<sup>®</sup> †3 with Auto-Dimming Rearview Mirror\*

[Continued from previous page](#)

- 7. Firmly press and release the “Learn”, “Smart”, “Set” or “Program” button. You now have up to 30 seconds to complete the next step
- 8. Return to the vehicle and firmly press and hold the HomeLink<sup>®</sup> button slowly, for two seconds, up to three times in a row. Do not press the HomeLink<sup>®</sup> button rapidly. As soon as you see the garage door start to move, stop pressing any buttons until a few seconds after the garage door has come to a complete stop, regardless of position. At this point programming is complete and your device should operate when the HomeLink<sup>®</sup> Channel button is pressed

- A

HomeLink<sup>®</sup> button

B

HomeLink<sup>®</sup> button

C

HomeLink<sup>®</sup> button

D

Garage Door Opener Status Indicator: Closing or Closed

E

HomeLink Operation Indicator

F

Garage Door Opener Status Indicator: Opening or Opened


G

HomeLink User Interface Indicator

[Continued on next page](#)

For illustrative purposes only. Your actual display, buttons and/or features may vary.

126

 | **SPORTAGE PHEV**

FEATURES & FUNCTIONS GUIDE

 
† LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED

# HomeLink<sup>®</sup> †<sup>3</sup> with Auto-Dimming Rearview Mirror\*

[Continued from previous page](#)

## Operating HomeLink<sup>®</sup>

Press and release the desired programmed HomeLink<sup>®</sup> Channel button **A**, **B** or **C**. The HomeLink<sup>®</sup> User Interface Indicator **D** should light green, solid or flashing, and your programmed device should operate. If your device does not operate, the HomeLink<sup>®</sup> programming was not successful, and you'll need to reprogram the button(s).

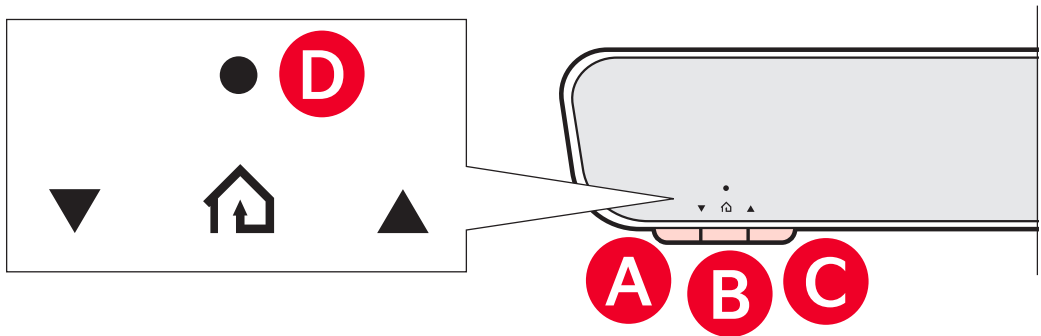

### QUICK TIPS

- If your garage door opener has the “myQi™”†<sup>20</sup> logo on its side, it has two-way communication capability to display “Closing” or “Opening” status message on Homelink<sup>®</sup> mirror. Refer to section 4 in the Owner’s Manual on how to set this up or for more information
- When programming, park outside of the garage door
- The Engine Start/Stop button needs to be in the accessory (ACC) position
- Replace the hand-held garage door transmitter for quicker and accurate programming

[Continued on next page](#)

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

 
† LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED

# HomeLink<sup>®</sup> †<sup>3</sup> with Auto-Dimming Rearview Mirror\*

[Continued from previous page](#)

## Erasing a Programmed Button:

1. Press and hold the desired HomeLink<sup>®</sup> Channel button **A**, **B** or **C** you want to re-program. DO NOT release the button
2. The HomeLink<sup>®</sup> User Interface Indicator **D** will illuminate solid green. Release the button as soon as the HomeLink<sup>®</sup> User Interface Indicator **D** begins to flash orange, usually about 20 seconds
3. Proceed with the steps in the “Programming a New HomeLink<sup>®</sup> Button” section

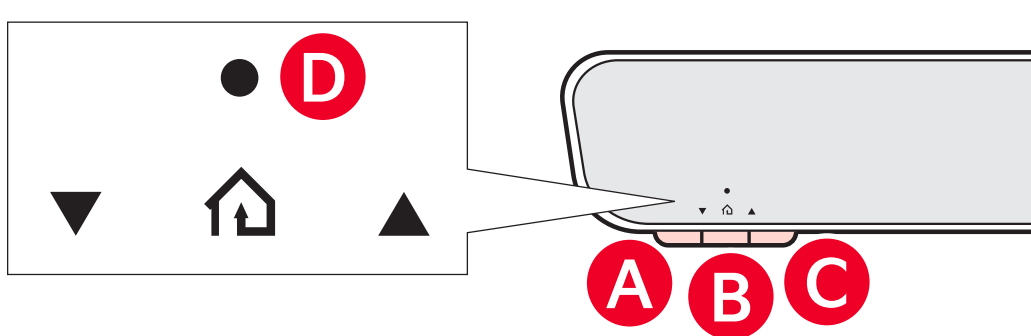

## REMINDERS:

- Erasing programmed buttons will delete all trained transmitters
- A ladder may be needed to access the garage door opener
- A second person may be needed to help
- Some of the steps are time sensitive

For more information, go to [HomeLink.com](https://www.homelink.com) or call (800) 355-3515.

See section 5 in the Owner's Manual for more information.



## Power Liftgate<sup>\*†17</sup>

### Opening from Outside the Vehicle:

To open Power Liftgate automatically, press the Rear Hatch Release button **A** on exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **B**.

### Opening from Inside the Vehicle:

**Open:** Press and briefly hold the Power Liftgate Open/Close button **C** to automatically open the Liftgate.

 
 
**Close:** Press and hold the button **C** until liftgate is completely closed. If the button **C** is released while closing, the power liftgate will stop and a warning chime will sound.



Power Liftgate,  
Key Fob & Opening  
Height/Speed  
Adjustment



Settings - Power  
Liftgate

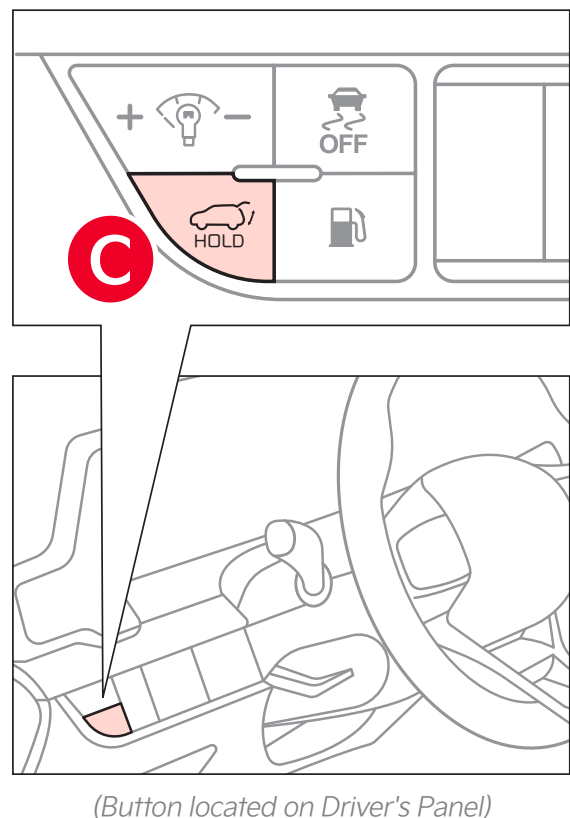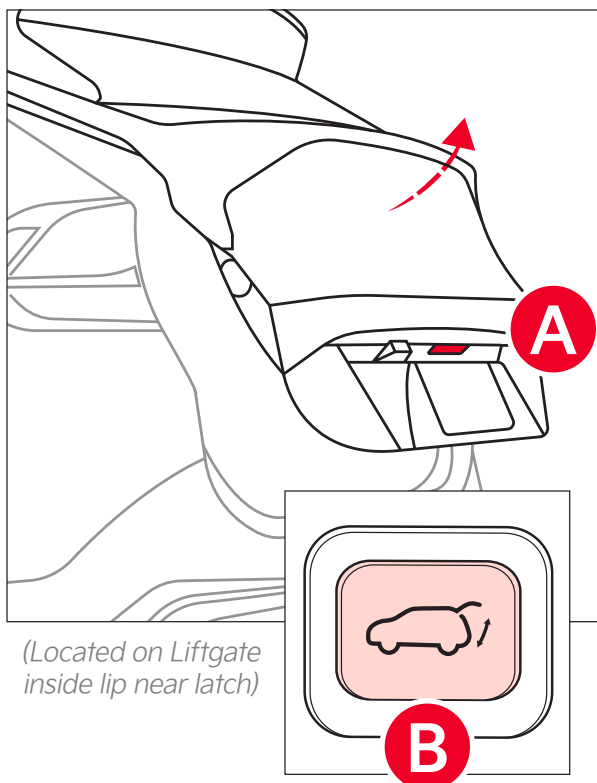

[Continued on next page](#)

## Power Liftgate<sup>\*†17</sup>

[Continued from previous page](#)

**Smart Key:** To open the Power Liftgate, press and hold the Liftgate button **A** until the Liftgate begins opening. Press and hold to close, and until the liftgate is closed completely. If button is released while closing, the liftgate will stop and a chime will sound.

### REMINDERS:

- Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate
- When closing, be mindful of any objects or persons

### Power Liftgate Opening Height Adjustment:

Set the opening height in Vehicle Settings. Press the SETUP key/button on the Infotainment System, select VEHICLE, DOOR, then POWER LIFTGATE OPENING HEIGHT. Select the desired option.

To manually set the opening height, do the following steps:



1. Position the liftgate manually to the preferred height
  2. Press and hold Power Liftgate Close button **B** more than 3 seconds
  3. A system beep will sound twice indicating the height setting has been saved
- The liftgate will then open to the set height. To change setting again, repeat steps 1-3.

**REMINDER:** Ensure objects and people are out of the way when operating the power liftgate.

*Images are for illustrative purposes only. Actual image or feature may vary. See section 5 in the Owner's Manual for more information.*



  Smart Key with  
Remote Start /  
Remote Smart  
Parking Assist (RSPA)

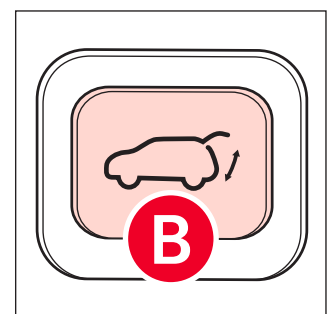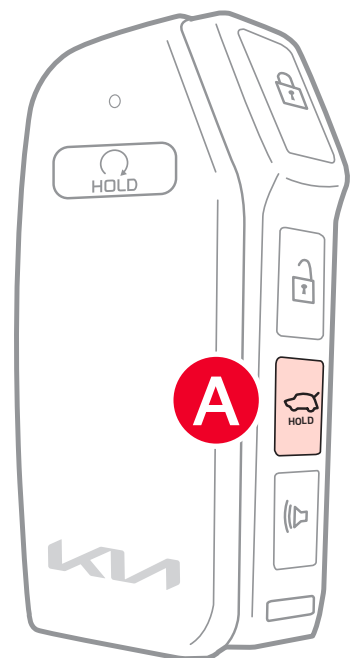

(Located on Liftgate  
inside lip near latch)



### Smart Power Liftgate<sup>\*†17</sup>

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.



Smart Liftgate  
Operation, Opening  
Height/Speed  
Adjustment



Settings - Power  
Liftgate

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to Vehicle Settings in the Infotainment System. Press the **SETUP** key or onscreen button, then VEHICLE. Select DOOR, then SMART LIFTGATE

#### QUICK TIPS

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob
- The open height can be adjusted. For information on how to set open height, see your Owner's Manual

#### REMINDERS:

- All doors are closed and locked after about 15 seconds for the system to operate
- The Smart Power Liftgate feature will not operate when:
  - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
  - A door is not locked or closed
  - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function
- Ensure obstacles and people are out of the way of the liftgate





 
## OTHER KEY FEATURES

### Manual Liftgate\* / Liftgate Release Button

Located underneath the rear Liftgate Hatch. With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.



**Manual Liftgate & Key Fob Controls**

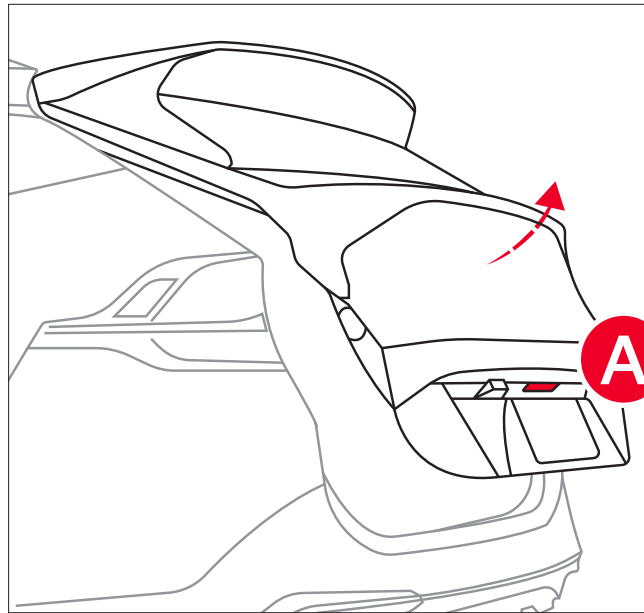

*Refer to section 5 in the Owner's Manual for more information.*

#### QUICK TIPS

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The liftgate unlocks automatically and can then be opened, when the Smart Key fob\* is within close proximity to the vehicle

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



 
# Map/Room Lamps

### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button is OFF.

### Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/ Room Lamps ON/OFF
- Press button **C** to turn the Map/ Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF.

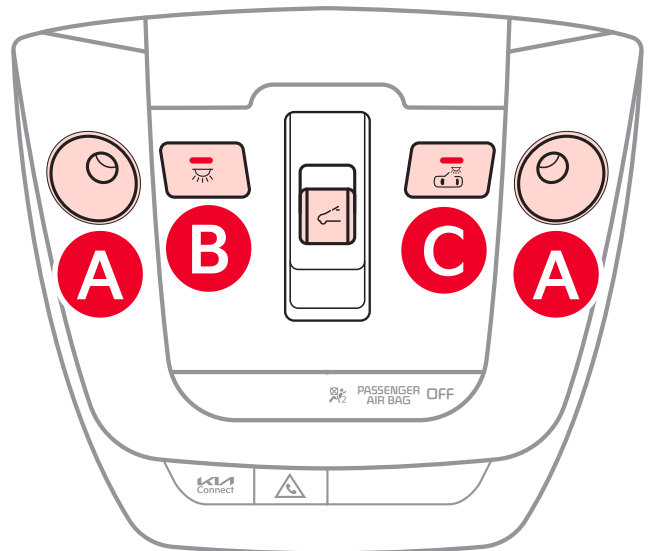

(Type B; panel located overhead center of the front row)

### QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.



## Panoramic Sunroof Operation with Power Sunshade\*

The sunroof operation is controlled through a multidirectional switch. The ignition or Engine Start/Stop button needs to be in the ON position to operate the sunroof.

### To slide the power sunshade and sunroof:

- Auto Open: Slide the switch **A** backward to the farthest position and release
- Auto Close: Slide the switch **A** forward to the farthest position and release

### To slide the power sunshade only:

- Auto Open: Slide the switch **A** partially backward to the first detent position and release
- Auto Close: Slide the switch **A** partially forward to the first detent position and release

### To slide the sunroof (with power sunshade open):

 
- Open: Slide the switch **A** backward to the first detent position and release
- Close: Slide the switch **A** forward to the first detent position and release to close sunroof glass only. Slide the lever backward to the farthest position and release to close sunroof glass and sunshade

### To tilt the sunroof:

- Raise: Push switch **A** upward
- Lower: Pull switch **A** downward



Sunroof Operation

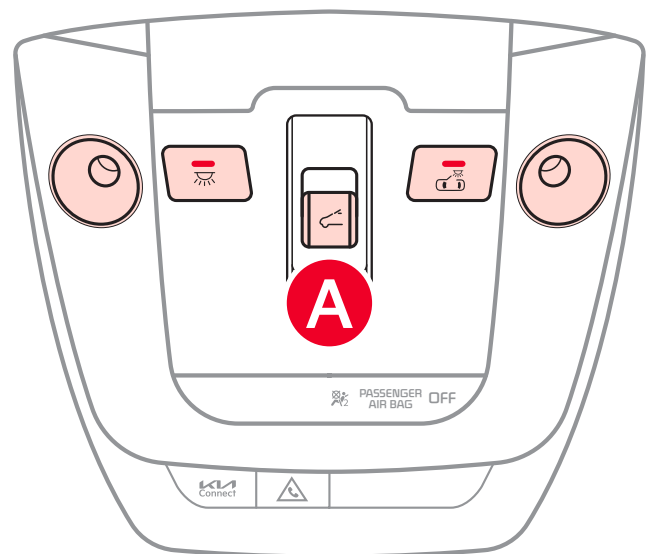

[\*Continued on next page\*](#)



# Panoramic Sunroof Operation with Power Sunshade\*

[Continued from previous page](#)

### QUICK TIP

To stop the sunroof/sunshade at any position, push or pull the sunroof control switch in any direction.

### REMINDERS:

- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster will display a warning message and a chime will sound for a few seconds
- Power sunshade needs to remain OPEN while sunroof is open
- Power sunshade cannot slide when the sunroof is in the tilt position or tilt while in an open or slide position
- Do not adjust the power sunroof or sunshade while driving. This could result in loss of control of the vehicle
- When closing, be mindful of any objects or persons


*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



## OTHER KEY FEATURES

### Sun Visors<sup>†19</sup>

 Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

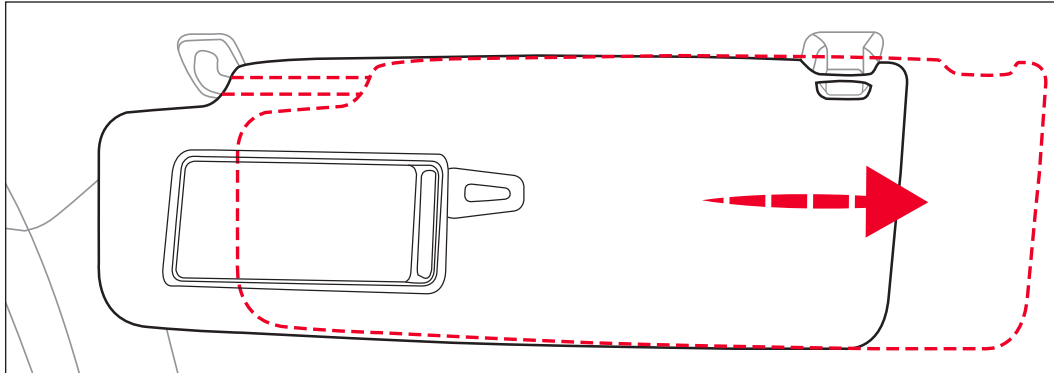

#### REMINDERS:

- Sun Visor may not shield all direct light
- The Sun Visor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sun Visor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sun Visor around to or from the front or side windows



*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



# Hood Release Lever and Latch

### Opening the Hood:

  1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left and lift the Hood

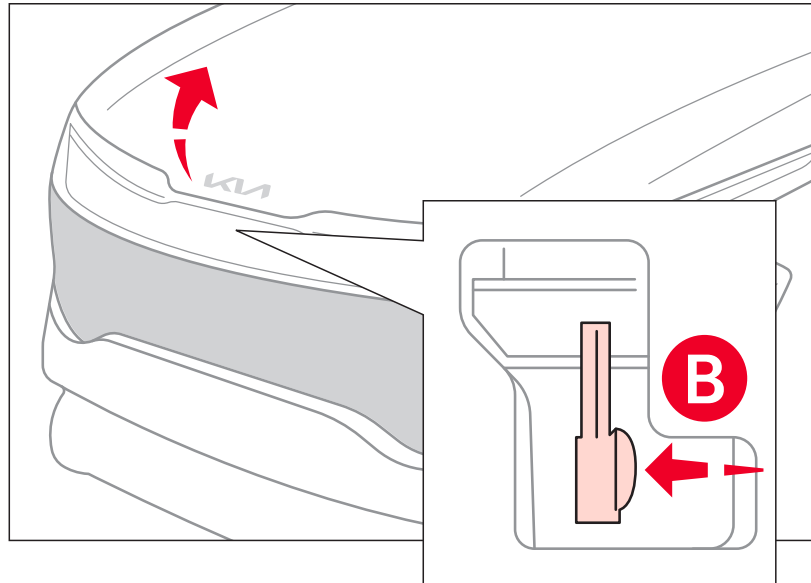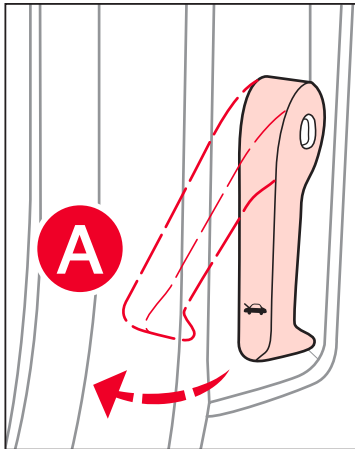

### Closing the Hood:

Lower the Hood first to about 12 inches away from being closed. Then, press down to securely lock in place.

### REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



## OTHER KEY FEATURES

### Tire Mobility Kit\*

 
The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.



Tire Mobility Kit

- A** Sealant Bottle
- B** Compressor

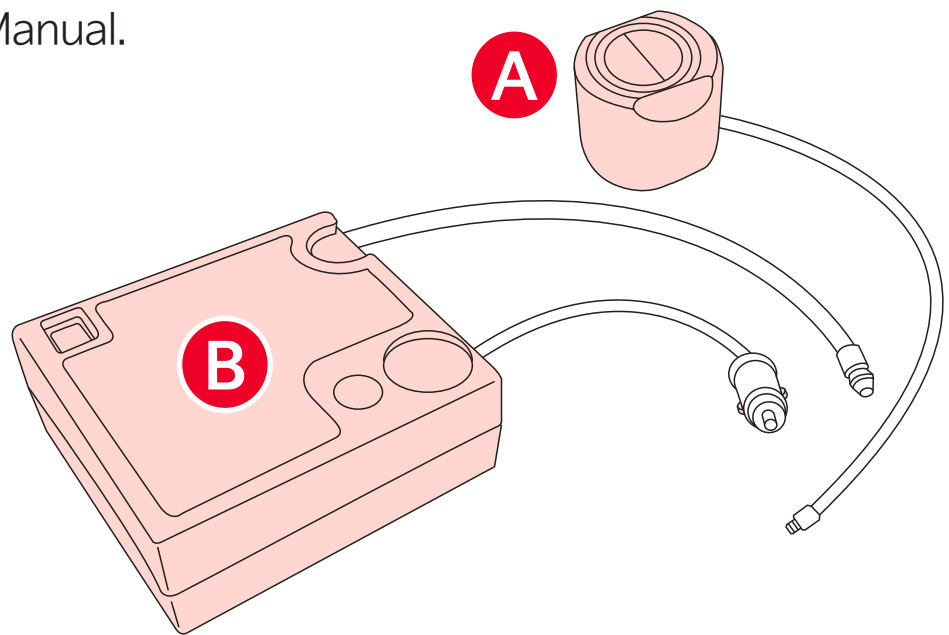

#### QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

#### REMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet port area
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for no longer than a maximum distance of 120 miles

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 8 in the Owner's Manual for more information.*

 




### Seat Belts<sup>†14</sup>

To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

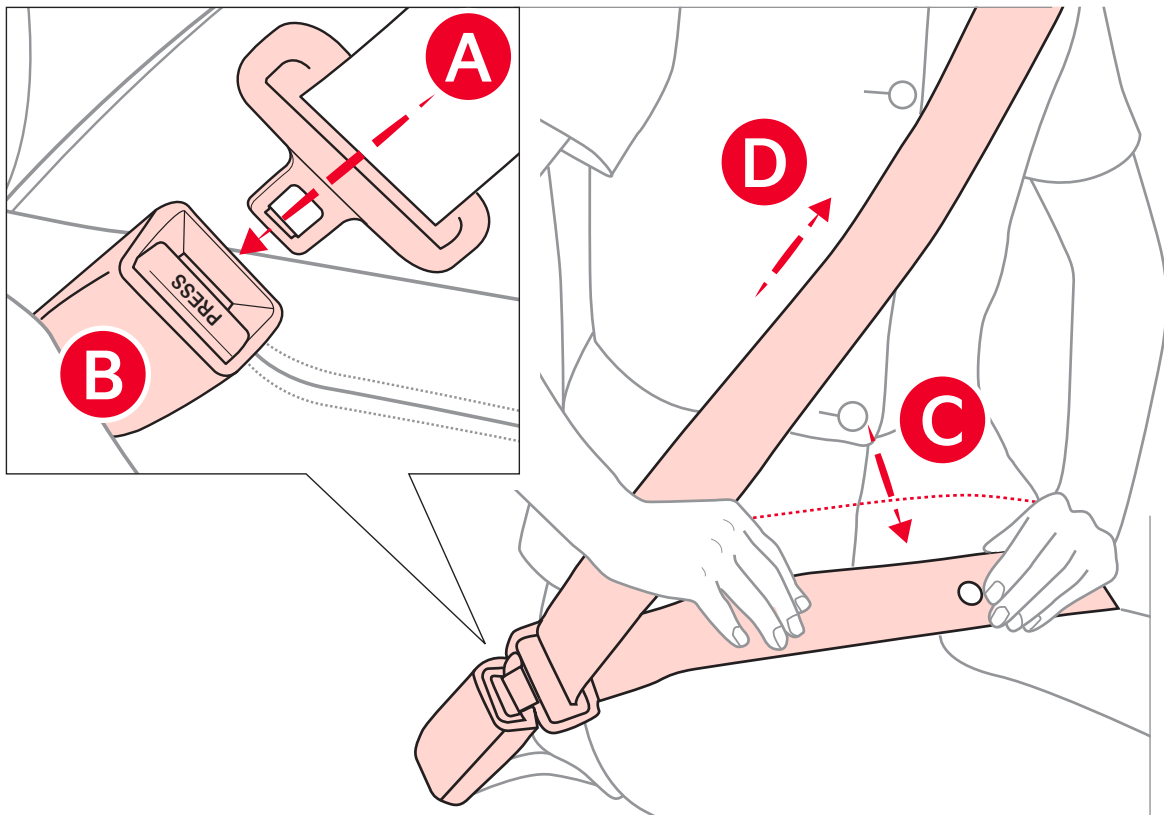

### Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort. During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors are designed to automatically lock the belts to reduce the risk of potential injury.

#### QUICK TIP

- The seat belt warning chime operates for driver's seat only.

**REMINDER:** For maximum protection, always wear your seat belt.

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 4 in the Owner's Manual for more information.*

 


# Child-Protector Rear Door Lock

Insert the ignition key into the hole and turn the key towards the LOCK position to activate the child-protector lock which is designed to disable the inner door handles from opening the rear doors.

### REMINDERS:

- Child-Protector Rear Door Lock is located on rear passenger's door jamb
- To open the Rear Door, pull the outside door handle
- To allow the door to be opened from inside the vehicle, unlock the Child-Protector Rear Door Lock

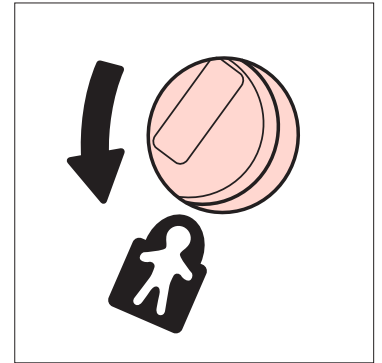

*(Located on rear edge of rear passenger doors)*

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 5 in the Owner's Manual for more information.*



# Occupant Detection System (ODS)<sup>†11</sup> / Passenger Airbag Off Indicator<sup>†14</sup>

ODS is designed to detect the presence of the front passenger and turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Deactivated)
- If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” indicator will illuminate.

**REMINDER:** Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.



(Type B; overhead lamp console)

*Images are for illustrative purposes only. Actual image or feature may vary. Refer to section 4 in the Owner's Manual for more information.*

	MAINTENANCE INTERVALS (UP TO 64,000 MILES) <sup>A</sup>							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Rotate tires (every 8,000 miles)	P	P	P	P	P	P	P	P
Add fuel additive <sup>1</sup>	P	P	P	P	P	P	P	P
Engine oil and filter (full synthetic oil)	R	R	R	R	R	R	R	R
Climate control air filter (Front/Rear Seats)	I	R	I	R	I	R	I	R
Air cleaner filter (Engine)	I	I	R	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
Spark plugs	I	I	I	I	I	R	I	I
12V Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hoses	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Steering gear rack, linkage and boots	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
HSG (Hybrid Starter & Generator) belt	I	I	I	I	I	I	I	R
Intercooler in/out hose, air intake hose	I		I		I		I	
Drive shaft and boots		I		I		I		I
Propeller shaft (AWD)		I		I		I		I
Fuel tank and fuel cap		I		I		I		I
Fuel tank air filter <sup>†2</sup>		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Drive belts (Engine) <sup>3</sup>						I	I	I
Differential oil (rear) (AWD)					I			
Transfer case oil (AWD)					I			

**P** = Perform

**R** = Replace

**I** = Inspect<sup>B</sup>



Full

Synthetic

Oil

† If equipped

A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

F. The drive belt should be replaced when cracks occur or tension is reduced excessively.

See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule.

Warranty may be voided if maintenance schedule is not followed.

### QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect<sup>†1</sup> account by logging into your Kia Access App<sup>†2</sup> or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect<sup>†1</sup> only). See [page 86](#) for setup information.

† LEGAL DISCLAIMERS ON [PAGE 143](#) | \*IF EQUIPPED



# DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

**Safety Features:** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at [owners.kia.com/us/en/privacy-policy.html](https://owners.kia.com/us/en/privacy-policy.html)) and Terms of Service (available at [owners.kia.com/us/en/terms-of-service.html](https://owners.kia.com/us/en/terms-of-service.html)). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit [www.kia.com](https://www.kia.com) or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
2. **Kia Access app** for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model, model year and trim.
3. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
4. **Driver Assist Features: Blind-spot Collision-Avoidance Assist (BCA), Blind-spot View Monitor (BVM), Safe Exit Assist (SEA), Rear Cross-traffic Collision Avoidance Assist (RCCA), Lane Following Assist (LFA), Lane Keeping Assist (LKA), Forward Collision-Avoidance Assist (FCA), Highway Driving Assist (HDA), Intelligent Speed Limit Assist (ISLA), Forward/Reverse Parking Distance Warning (PDW), Rear View Monitor (RVM), Surround View Monitor (SVM), Rear Occupant Alert with Ultrasonic Sensors (ROA), Leading Vehicle Departure Alert (LVDA), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Cruise Control (CC), Remote Smart Parking Assist (RSPA), Reverse Parking Collision-Avoidance Assist (PCA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
5. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
6. **Electronic Stability Control (ESC), Traction Control System (TCS), Hill-start Assist Control (HAC), Downhill Brake Control (DBC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
7. **Engine Start/Stop Button Smart Key with Remote Start:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
8. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
9. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
10. **Rear Occupant Alert (ROA) with Ultrasonic Sensors:** When engaged, ROA with Ultrasonic Sensors is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
11. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
12. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
13. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
14. **Seat belts/Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
15. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
16. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](https://www.siriusxm.com). Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2022 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
17. **Smart Power Liftgate\*:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
18. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
19. **Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
20. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
21. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.

\*IF EQUIPPED