


# Features & Functions Guide



**Niro EV**

# Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**Getting Started  
With Your  
New Kia**

## Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

[www.kia.com](http://www.kia.com)

Consumer Affairs - Roadside Assistance<sup>†12</sup>: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 145](#) | <sup>\*</sup>IF EQUIPPED



## Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

[www.youtube.com/KiaFeatureVideos](http://www.youtube.com/KiaFeatureVideos)


**This document is interactive:** from the Table of Contents (page 5), you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.


**REMINDER:** When accessing videos on your mobile device, standard cellular data rates may apply.

# Getting Started


As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia’s most used features:



Getting Started  
With Your  
New Kia

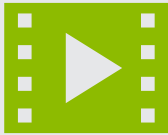

Your New Kia  
Important Care  
Tips



Vehicle Cameras  
Important Tips

1	<a href="#">Smart Key with Remote Start</a>	127
2	<a href="#">Driver Position Memory System</a>	117
3	<a href="#">Front Seat Headrest Adjustment</a>	118
4	<a href="#">Seat Warmers / Ventilated Seats*</a>	113
5	<a href="#">Folding Rear Seats</a>	120
6	<a href="#">Windshield/Rear Wipers &amp; Washers</a>	86
7	<a href="#">Navigation-based Smart Cruise Control (NSCC)*</a>	54
8	<a href="#">Maintenance Schedule</a>	144
9	<a href="#">User Settings* - Instrument Cluster</a>	20
10	<a href="#">Vehicle Settings* - Infotainment System</a>	22
11	<a href="#">Bluetooth® Wireless Technology</a>	88
12	<a href="#">Kia Connect Activation*</a>	96
13	<a href="#">Kia Connect Assistance*</a>	97
14	<a href="#">Kia Access App Download</a>	102
15	<a href="#">Kia Access App Features Guide</a>	103
16	<a href="#">Kia Connect w/Navigation Infotainment System</a>	98
17	<a href="#">Android Auto™ Setup</a>	92
18	<a href="#">Apple CarPlay® Setup</a>	94

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

\*IF EQUIPPED



# Table Of Contents

<b>WELCOME TO THE KIA FAMILY!</b>	<b>02</b>
<b>VIDEOS &amp; NAVIGATION</b>	<b>03</b>
<b>GETTING STARTED</b>	<b>04</b>
<b>INSTRUMENT CLUSTER</b>	
<a href="#">Instrument Cluster Overview</a>	<a href="#">08</a>
<a href="#">Indicators &amp; Warning Lights</a>	<a href="#">09</a>
<a href="#">Electric Vehicle (EV) Indicators</a>	<a href="#">10</a>
<a href="#">Energy Consumption</a>	<a href="#">12</a>
<a href="#">Charge Warning Messages on LCD Display</a>	<a href="#">13</a>
<a href="#">Tire Pressure Monitoring System (TPMS)</a>	<a href="#">15</a>
<a href="#">Drive Mode Integrated Control System</a>	<a href="#">17</a>
<b>VEHICLE SETTINGS</b>	
<a href="#">Instrument Cluster LCD Modes</a>	<a href="#">18</a>
<a href="#">Trip Modes / Trip Computer</a>	<a href="#">19</a>
<a href="#">User Settings* - Instrument Cluster</a>	<a href="#">20</a>
<a href="#">Vehicle Settings* - Infotainment System</a>	<a href="#">22</a>
<a href="#">Service Interval Mode</a>	<a href="#">23</a>
<b>ELECTRIC VEHICLE (EV) FEATURES</b>	
<a href="#">Charging Connector Lock Mode</a>	<a href="#">24</a>
<a href="#">Scheduled Charging*</a>	<a href="#">25</a>
<a href="#">EV Mode - Infotainment System</a>	<a href="#">26</a>
<a href="#">Charging the EV</a>	<a href="#">27</a>
<a href="#">Regenerative Braking with Paddle Switches</a>	<a href="#">31</a>
<a href="#">EV Charge Transfer / Vehicle to Load (V2L)*</a>	<a href="#">35</a>
<b>ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)</b>	
<a href="#">Forward Collision-Avoidance Assist (FCA) (Sensor Fusion)</a>	<a href="#">37</a>
<a href="#">Blind-spot Collision-Avoidance Assist (BCA)*</a>	<a href="#">41</a>
<a href="#">Lane Keeping Assist (LKA)</a>	<a href="#">44</a>
<a href="#">Driver Attention Warning (DAW)</a>	<a href="#">47</a>
<a href="#">Leading Vehicle Departure Alert (LVDA)</a>	<a href="#">49</a>
<a href="#">Smart Cruise Control (SCC)*</a>	<a href="#">51</a>
<a href="#">Navigation-based Smart Cruise Control - (NSCC)*</a>	<a href="#">54</a>
<a href="#">Intelligent Speed Limit Assist (ISLA)</a>	<a href="#">57</a>
<a href="#">Head-Up Display (HUD)*</a>	<a href="#">59</a>
<a href="#">Lane Following Assist (LFA)</a>	<a href="#">62</a>
<a href="#">Highway Driving Assist 2 (HDA2)*</a>	<a href="#">64</a>
<a href="#">Rear View Monitor (RVM)</a>	<a href="#">66</a>
<a href="#">Safe Exit Warning (SEW)</a>	<a href="#">67</a>
<a href="#">Remote Smart Parking Assist (RSPA)*</a>	<a href="#">68</a>
<a href="#">Reverse Parking Collision-Avoidance Assist (PCA)</a>	<a href="#">71</a>
<a href="#">Forward/Reverse Parking Distance Warning (PDW)*</a>	<a href="#">72</a>
<a href="#">Rear Cross-traffic Collision-Avoidance Assist (RCCA)</a>	<a href="#">74</a>

**CONTINUED ON NEXT PAGE >>>**

# Table Of Contents

[<<< CONTINUED FROM PREVIOUS PAGE](#)

## DRIVER’S PANEL

<a href="#">Instrument Cluster Control</a>	<a href="#">76</a>
<a href="#">Electronic Stability Control (ESC)</a>	<a href="#">76</a>
<a href="#">Hill-start Assist Control (HAC)</a>	<a href="#">77</a>
<a href="#">Power Button</a>	<a href="#">78</a>
<a href="#">Power Windows, Window Lock &amp; Central Door Lock</a>	<a href="#">79</a>
<a href="#">Automatic Door Lock</a>	<a href="#">80</a>
<a href="#">Heated Outside Mirrors</a>	<a href="#">80</a>
<a href="#">Manual Folding Mirrors*</a>	<a href="#">80</a>
<a href="#">Power Folding Outside Mirrors*</a>	<a href="#">81</a>

## STEERING WHEEL CONTROLS

<a href="#">Headlights &amp; High Beams</a>	<a href="#">82</a>
<a href="#">High Beam Assist (HBA)</a>	<a href="#">83</a>
<a href="#">Turn Signals &amp; Fog Lights*</a>	<a href="#">84</a>
<a href="#">Tilt/Telescoping Steering Wheel</a>	<a href="#">85</a>
<a href="#">Windshield/Rear Wipers &amp; Washers</a>	<a href="#">86</a>

## INFOTAINMENT SYSTEM

<a href="#">Bluetooth® Wireless Technology</a>	<a href="#">88</a>
<a href="#">Audio Controls</a>	<a href="#">91</a>
<a href="#">Android Auto™ Setup</a>	<a href="#">92</a>
<a href="#">Apple CarPlay® Setup</a>	<a href="#">94</a>
<a href="#">Kia Connect Activation*</a>	<a href="#">96</a>
<a href="#">Kia Connect Assistance*</a>	<a href="#">97</a>
<a href="#">Kia Connect w/Navigation Infotainment System</a>	<a href="#">98</a>
<a href="#">Kia Access App Download</a>	<a href="#">102</a>
<a href="#">Kia Access App Features Guide</a>	<a href="#">103</a>

## CENTER PANEL

<a href="#">Digital Clock - Infotainment System</a>	<a href="#">104</a>
<a href="#">USB-C Charger Ports</a>	<a href="#">104</a>
<a href="#">Multimedia USB Ports, Charger Ports &amp; Power Ports</a>	<a href="#">105</a>
<a href="#">Wireless Smartphone Charging System</a>	<a href="#">106</a>
<a href="#">Rotary Dial Shifter</a>	<a href="#">108</a>
<a href="#">Heated Steering Wheel*</a>	<a href="#">108</a>
<a href="#">Automatic Climate Control</a>	<a href="#">109</a>
<a href="#">Seat Warmers* / Ventilated Seats*</a>	<a href="#">113</a>
<a href="#">Electronic Parking Brake (EPB)</a>	<a href="#">114</a>
<a href="#">Auto Hold</a>	<a href="#">115</a>

## SEATING

<a href="#">Power Adjustable Front Seats</a>	<a href="#">116</a>
<a href="#">Driver Position Memory System*</a>	<a href="#">117</a>
<a href="#">Front Seat Headrest Adjustment</a>	<a href="#">118</a>
<a href="#">6-Way Manual Adjustable Front Seats</a>	<a href="#">119</a>
<a href="#">Folding Rear Seats</a>	<a href="#">120</a>
<a href="#">Rear Occupant Alert (ROA) with Door Monitoring</a>	<a href="#">121</a>

[CONTINUED ON NEXT PAGE >>>](#)

# Table Of Contents

[<<< CONTINUED FROM PREVIOUS PAGE](#)

**OTHER KEY FEATURES**

<a href="#">Hood Release Lever and Latch</a>	<a href="#">122</a>
<a href="#">Sun Visor</a>	<a href="#">122</a>
<a href="#">Digital Key 2 Touch</a>	<a href="#">123</a>
<a href="#">Smart Key with Remote Start</a>	<a href="#">127</a>
<a href="#">Double-Turn Lock/Unlock All</a>	<a href="#">129</a>
<a href="#">Map/Room Lamps</a>	<a href="#">130</a>
<a href="#">Sunroof Operation*</a>	<a href="#">131</a>
<a href="#">Smart Power Liftgate*</a>	<a href="#">133</a>
<a href="#">Liftgate Release Button*</a>	<a href="#">136</a>
<a href="#">Electrochromic Rearview Mirror with Homelink® System</a>	<a href="#">137</a>
<a href="#">Tire Mobility Kit</a>	<a href="#">138</a>
<a href="#">Child-Protector Rear Door Lock</a>	<a href="#">141</a>

**SAFETY FEATURES**

<a href="#">Occupant Detection System (ODS) / Passenger Airbag Off Indicator</a>	<a href="#">142</a>
<a href="#">Seat Belts</a>	<a href="#">143</a>

<a href="#">MAINTENANCE CHART</a>	<a href="#">144</a>
-----------------------------------	---------------------

<a href="#">LEGAL DISCLAIMERS</a>	<a href="#">145</a>
-----------------------------------	---------------------

 
\*IF EQUIPPED




## INSTRUMENT CLUSTER

### Instrument Cluster Overview


- A** Electric energy economy
- B** Power/Charge gauge - The energy consumption rate of the vehicle and the charge/discharge status of the regenerative brakes
- C** Regenerative Braking Level
- D** Speedometer
- E** Warning and indicator lights
- F** LCD display
- G** Distance to Empty (DTE)
- H** Battery State of Charge (SOC) gauge

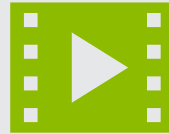

**EV Instrument Cluster Overview**

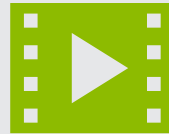 

**EV Distance to Empty (DTE)**

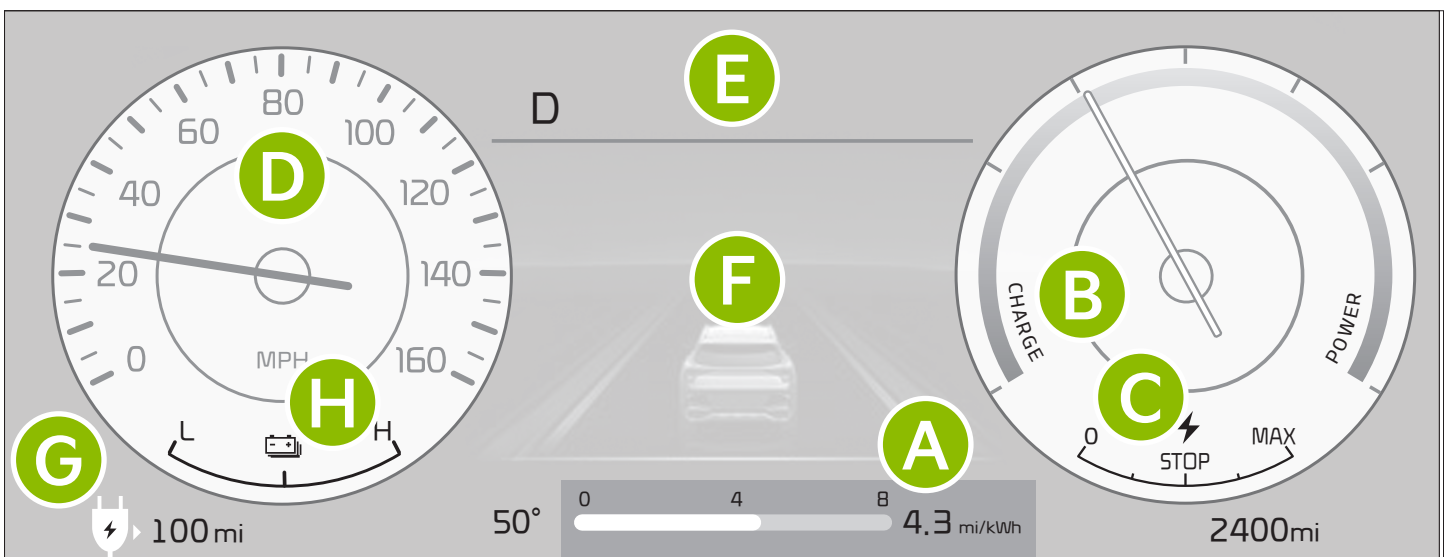 

#### QUICK TIPS

- Distance to Empty displayed on the Instrument Cluster after a recharge may vary depending on previous driving patterns, high voltage battery charge amount, weather, temperature, durability of the battery and geographical features
- Energy consumption is increased in cold or hot weather. When using the heater, more energy will be consumed, which reduces the Distance to Empty

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster and the function of all indicator and warning lights, please refer to Section 5 in the Owner's Manual.

Illustrations are for demonstration purposes only. Some indicators and warning lights may not appear in illustrations. On the vehicle, they may appear in the LCD.



## INSTRUMENT CLUSTER

### Indicators & Warning Lights

	High Beam Indicator		Cruise Indicator*
	Light ON Indicator		LED Headlamp Warning Indicator*
	Low Beam Indicator Light		Electronic Parking Brake (EPB)
	AUTO HOLD Indicator Light		Forward Safety Warning Indicator
	Master Warning Light		Lane Safety Indicator*
	Electronic Brakeforce Distribution (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)		Highway Lane Change Assist Indicator Light*
	Icy Road Warning Indicator Light*		Lane Following Assist Indicator
	Immobilizer Indicator*		EV Service Warning Light
	Seat Belt Warning Indicator		READY Indicator
	Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator*		EV Temperature Warning*
	Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator		Charging System Warning Indicator
	Electronic Stability Control (ESC) OFF Indicator		Regenerative Brake Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)
	Parking Brake & Brake Fluid Warning Indicator		Charging Cable Connection Indicator
	Motor Driven Power Steering (MDPS) Warning Indicator		Power Down Warning Light
	Airbag Warning Indicator		High Voltage Battery Level Warning Light
	Anti-lock Braking System (ABS) Warning Indicator		12V Battery
			SNOW Mode Indicator
			ECO Mode Indicator
			SPORT Mode Indicator

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster and the function of all indicator and warning lights, please refer to Section 5 in the Owner's Manual.

Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.



## Electric Vehicle (EV) Indicators

### **A** Battery State of Charge (SOC) gauge

The State of Charge gauge displays the high-voltage battery charge status.

- L (low) position on the gauge indicates that the driving battery energy is low
- H (high) position on the gauge indicates that the driving battery is fully charged



 
**EV Instrument Cluster Overview**

### **B** Electric Energy Economy

### **C** Regenerative Braking Level

### **D** Remaining Distance

Remaining Distance is the estimated distance the vehicle can be driven with the remaining high-voltage battery level. It is displayed differently according to the selected drive mode and Climate Control settings.

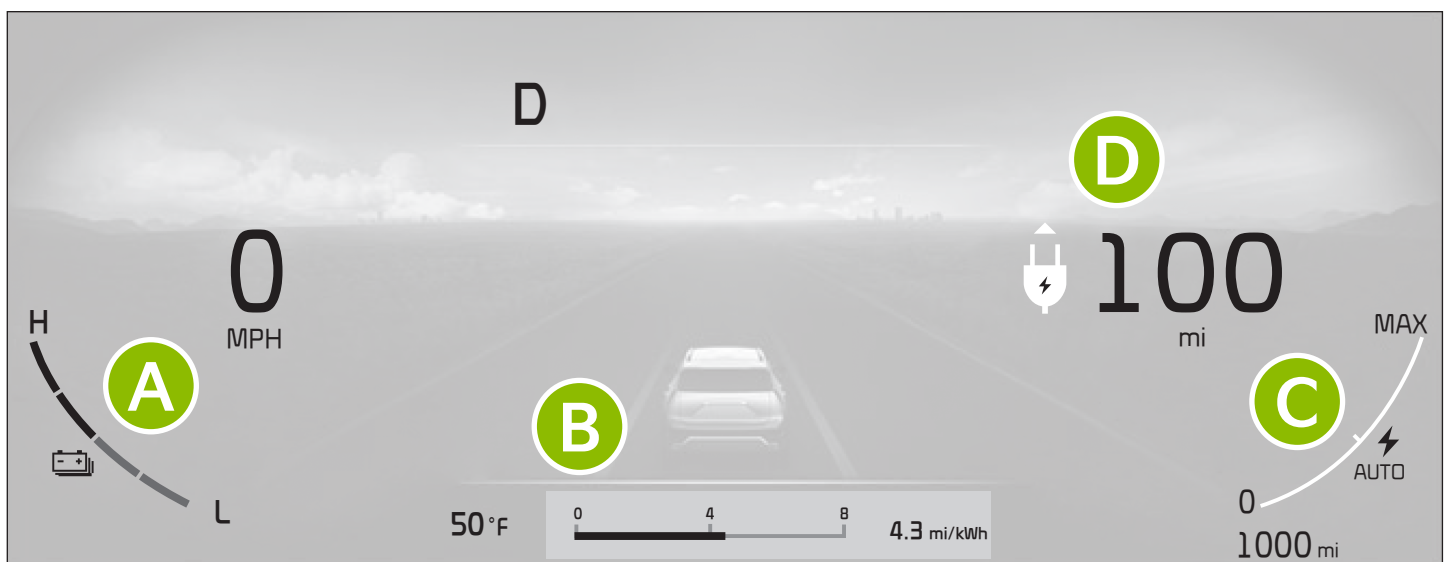

[Continued on next page](#)

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster and the function of all indicator and warning lights, please refer to Section 5 in the Owner's Manual.

Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.



# Electric Vehicle (EV) Indicators

[Continued from previous page](#)

READY

**Ready indicator light** - Illuminates when the vehicle is ready to drive. When the ready indicator light is blinking, the vehicle has detected a possible malfunction. Have an authorized Kia dealer address the concern as soon as possible.



**EV Service warning light** - Illuminates when there is a malfunction related to the electric vehicle control system. Have an authorized Kia dealer address the concern as soon as possible.



**Power down warning light** - Illuminates when the vehicle's speed and performance are limited for the safety of the electric vehicle.



**Charging indicator light** - Shows the charging status of the high-voltage battery. When charging, the red indicator turns on. The indicator turns off when not charging.



**High-voltage battery level warning light** - Illuminates when the high-voltage battery charge level is insufficient.



**Regenerative brake warning lights (when both indicators are lit)** - Illuminates when the regenerative brake system is not functioning correctly.

*Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. For more information on the Instrument Cluster and the function of all indicator and warning lights, please refer to Section 5 in the Owner's Manual.*

*Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.*





# Energy Consumption

There are several factors that contribute to your Electric Vehicle's energy consumption, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics.



**EV Energy  
Consumption**

Below are tips on how to help reduce energy consumption:

- Keep your vehicle in good condition with regular maintenance
- Don't "ride" the brake pedal
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Ensure wheels are aligned correctly
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

*For more information, refer to Section 5 of the Owner's Manual.*





## Charge Warning Messages on LCD Display

Low EV Battery



**Low Battery Warning** - When the high-voltage battery level reaches 8% or less, this warning message appears on the LCD and the warning indicator light on the Instrument Cluster illuminates. Charge the high-voltage battery immediately.

Charge immediately.  
Power limited



**Charge immediately. Power limited** - When the high-voltage battery level reaches 3% or less, this warning message appears on the LCD, the warning indicator light on the Instrument Cluster illuminates and the power down warning light turns ON simultaneously.

The vehicle's power will be reduced to minimize the energy consumption of the high-voltage battery. Charge the high-voltage battery immediately.

Power limited



**Power limited** - This warning message appears when the vehicle's power is limited due to the following reasons:

1. When the high-voltage battery is below a certain level, or voltage is decreasing
2. When the temperature of the motor or high-voltage battery is too high or too low
3. When there is a problem with the cooling system or a failure that may interrupt normal driving

[Continued on next page](#)

*These illustrations are for demonstration purposes only. Some messages may appear differently. See Section 1 in your Owner's Manual for more information.*

# Charge Warning Messages on LCD Display

[Continued from previous page](#)

Power limited  
due to low EV battery  
temperature.  
Charge battery

## Power limited due to low EV battery

**temperature. Charge battery** - When the outside temperature is low and you turn the vehicle on or off, this warning message may appear on the LCD. If the battery level is low and the vehicle is parked outside for a long time, vehicle power may be limited. Charging battery before driving helps increase power.

EV Battery Overheated!  
Pull over safely  
and leave the vehicle



## EV Battery Overheated! Stop Vehicle -

When the high-voltage battery temperature is too high, this warning message will appear on the LCD. Stop the vehicle and turn off the Power button so that the battery temperature decreases.

Stop safely and  
check power supply



## Stop vehicle and check power supply -

When there is a failure in the power supply system, this warning message appears on the LCD. Park the vehicle in a safe location and have it towed to the nearest Kia dealer for inspection.

### REMINDERS:


 
- When these warning messages are displayed, do not accelerate or start the vehicle suddenly
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected




*These illustrations are for demonstration purposes only. Some messages may appear differently. See Section 1 in your Owner's Manual for more information.*




## Tire Pressure Monitoring System (TPMS)<sup>†20</sup>



 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator. The indicator  will illuminate if it detects one or more tires are significantly underinflated, the vehicle has a tire installed without TPMS or the outside temperature becomes significantly lower.


- The LCD screen in the Instrument Cluster will display the Low Tire Pressure indicator  showing which tire(s) is underinflated. Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light . See front driver's door jamb for PSI specification.
- When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute then illuminate - see dealer for service.

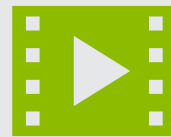

### Tire Pressure Monitoring

**A**
 
#### Low Tire Pressure

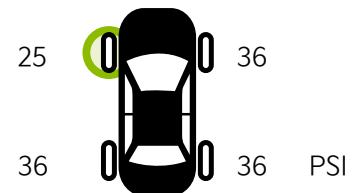

[Continued on next page](#)

Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

Images are for illustrative purposes only and may not reflect actual feature or operation. See Section 8 in the Owner's Manual for more information.



# Tire Pressure Monitoring System (TPMS)<sup>†20</sup>

[\*Continued from previous page\*](#)

### QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once per month. Only adjust tire pressure on “cold tires” that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature may cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

### REMINDERS:

- Check the recommended tire pressure label located on the left side of driver’s door jamb, visible when the door is open
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)

*For more information, refer to Section 8 in the Owner’s Manual.*



## Drive Mode Integrated Control System

There are four distinct driving modes.

Press the Drive Mode button **A** to select the desired mode.



**Drive Mode  
Integrated Control  
System**

 
**ECO** - This mode can help enhance electric energy efficiency by managing battery usage. The acceleration response may be slightly reduced in this mode

**NORMAL** - This mode balances drivability and efficiency


**SPORT** - This mode provides enhanced acceleration and dynamic drivability. The electric energy efficiency may decrease in this mode

**SNOW** - Press and hold the Drive Mode button to enter Snow mode

An indicator in the Instrument Cluster will illuminate to show which drive mode you have selected (no indicator will appear for the NORMAL mode).

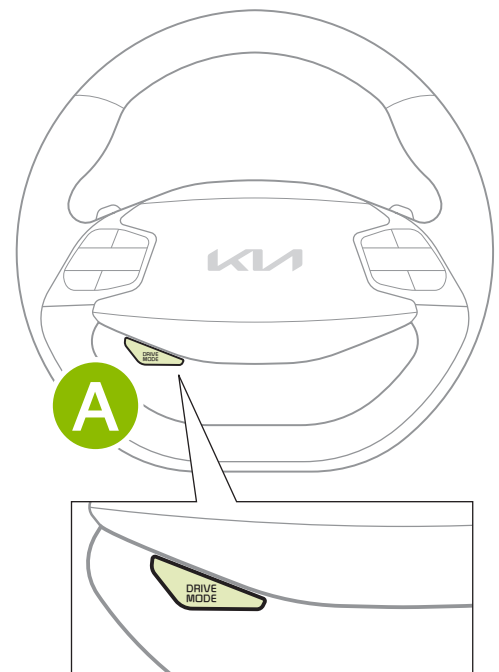

 (Button located bottom left center of steering wheel)

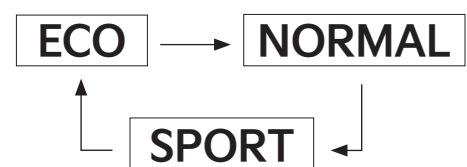

### QUICK TIP

- To help reduce energy consumption:
  - Drive at a moderate speed, accelerating smoothly and at a moderate rate
  - Keep tires inflated to the recommended pressure and wheels aligned properly

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*For more information on driving modes, refer to Section 6 in the Owner's Manual or contact your local dealership.*



## Instrument Cluster LCD Modes

Press Mode button **A** to scroll through different Instrument Cluster LCD Modes.



**Driving Assist:** Displays information for Forward Collision-Avoidance Assist, Lane Keeping Assist, Blind-spot Collision-Avoidance Assist, Smart Cruise Control, Lane Following Assist, Highway Driving Assist



**Trip Computer Mode:** Displays Drive Information, After recharging\*, Accumulated Info, Energy Flow, Digital Speedometer



 
**Turn-by-Turn Mode\*:** Displays the route guidance, destination info



**User Settings Mode\*:** Change settings for driver assistance, Head-Up Display\*, Cluster, Lights\*, Door\*, Convenience\*, Units, Language, Reset




**Information/Master Warning\*:** Displays information on TPMS, coolant temperature and warning messages related to the vehicle when one or more systems is not operating normally

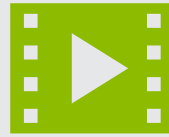

**Instrument Cluster's LCD Display**



 **Steering Wheel Controls**

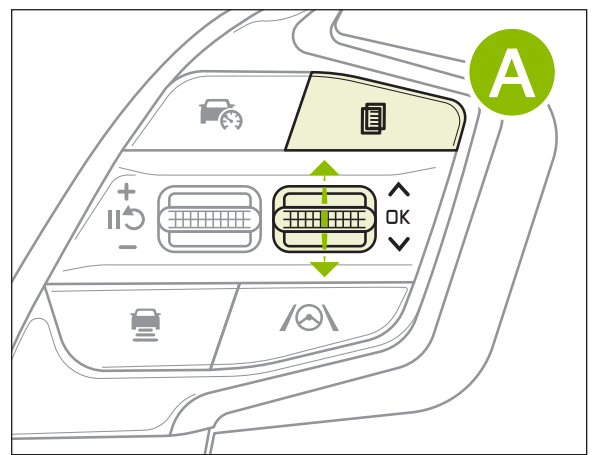

(Buttons located on Steering Wheel - Type A shown)


Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.




## Trip Modes / Trip Computer

 The Trip Computer is a driver information system that displays information related to driving, such as Average and Instant accumulated info, drive info, driving style and energy flow. It appears on the display when the Power button is in the ON position.

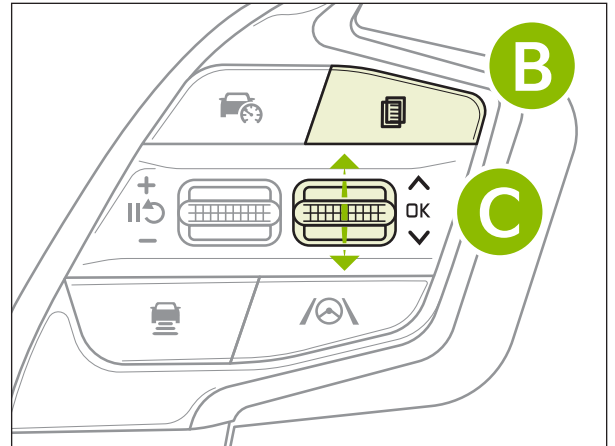


(Buttons located on Steering Wheel  
- Type A shown)

To cycle through the Instrument Cluster modes **A**, press the Mode button **B**.

When in the Trip Computer mode , press the OK button **C** to cycle through the screens. When displaying ACCUMULATED INFO or DRIVE INFO screens, press and hold the OK button **C** to reset to zero.

### REMINDERS:

 - Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

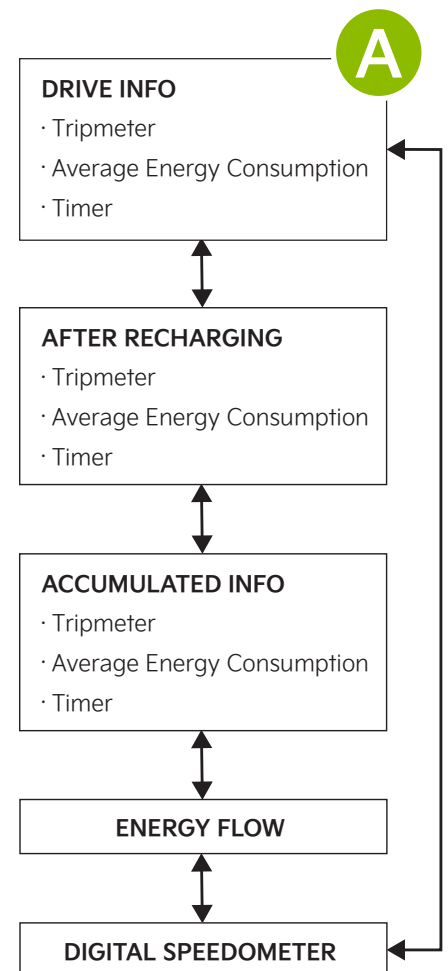


Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.





## User Settings\* - Instrument Cluster

To enter the User Settings in the Instrument Cluster, press the Mode button **A** when the vehicle is at a standstill, Rotary Dial Shifter Knob in Park while the Power button is in the ON position. Then select User Settings  by pressing the OK button.

You can navigate the selections on the display by pressing the OK button **B** up/down, and then selecting the item by pressing the OK button **B** again.

### Driver Assistance\*:

- Driving Convenience
- Speed Limit
- Warning Methods
- Driver Attention Warning
- Driving Safety
- Parking Safety

### Cluster:

- Theme Selection
- Wiper/Lights Display
- Traffic Signs
- Icy Road Warning
- Cluster Voice Guidance Volume
- Welcome Sound

### Lights\*:

 
- Illumination
- One Touch Turn Signal
- Ambient Brightness
- Ambient Light Color
- Headlight Delay
- High Beam Assist



**Vehicle & User Settings**



**Ambient Mood & Theme Lighting**

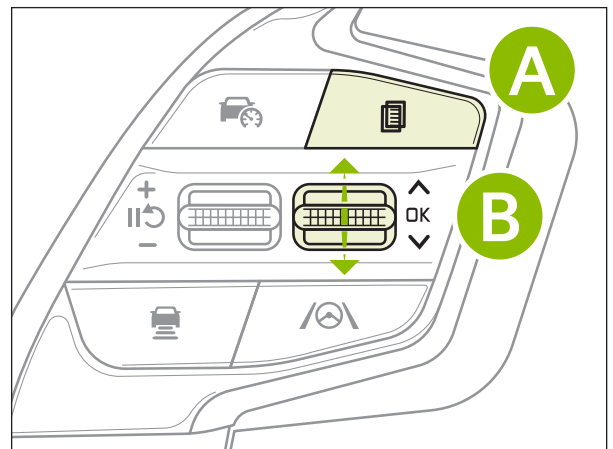

(Buttons located on Steering Wheel - Type B)

[Continued on next page](#)

*Images are for illustrative purposes only.*

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*





## User Settings\* - Instrument Cluster

[\*Continued from previous page\*](#)

### Door\*:

 
- Automatically Lock
- Automatically Unlock
- 2 Press Unlock
- Horn Feedback
- Power Liftgate
- Power Liftgate Opening Height/Speed
- Smart Liftgate
- Remote Window Control\*

### Convenience\*:

- Seat Easy Access
- Rear Occupant Alert
- Service Interval
- Welcome Mirror/Light
- Wireless Charging System\*
- Auto Rear Wiper
- Passenger Airbag

### Head-Up Display\*:

- Enable Head-Up Display
- Display Height
- Rotation
- Brightness
- Content Selection

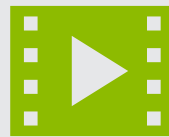

**Vehicle & User  
Setting**



**Ambient Mood  
& Theme Lighting**

### Language:

- To select the language

### Units:

- Speed Unit
- Temperature Unit
- Fuel Economy Unit
- Tire Pressure Unit Reset


### Reset:

- Reset all settings

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*

 


## Vehicle Settings\* - Infotainment System


To enter the Vehicle Settings in the Infotainment System **A**, press the SETUP button on the Infotainment System. Then press Vehicle  onscreen, which will take you to Vehicle Settings. Use the touch-screen to navigate through the menus.

### Vehicle Settings menus:


- Driver Assistance
- Drive Mode
- Cluster
- Climate
- Seat
- Lights
- Door
- Digital Key
- Convenience

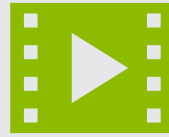

**Vehicle & User Settings**

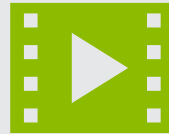 

**Vehicle Settings - Infotainment System**

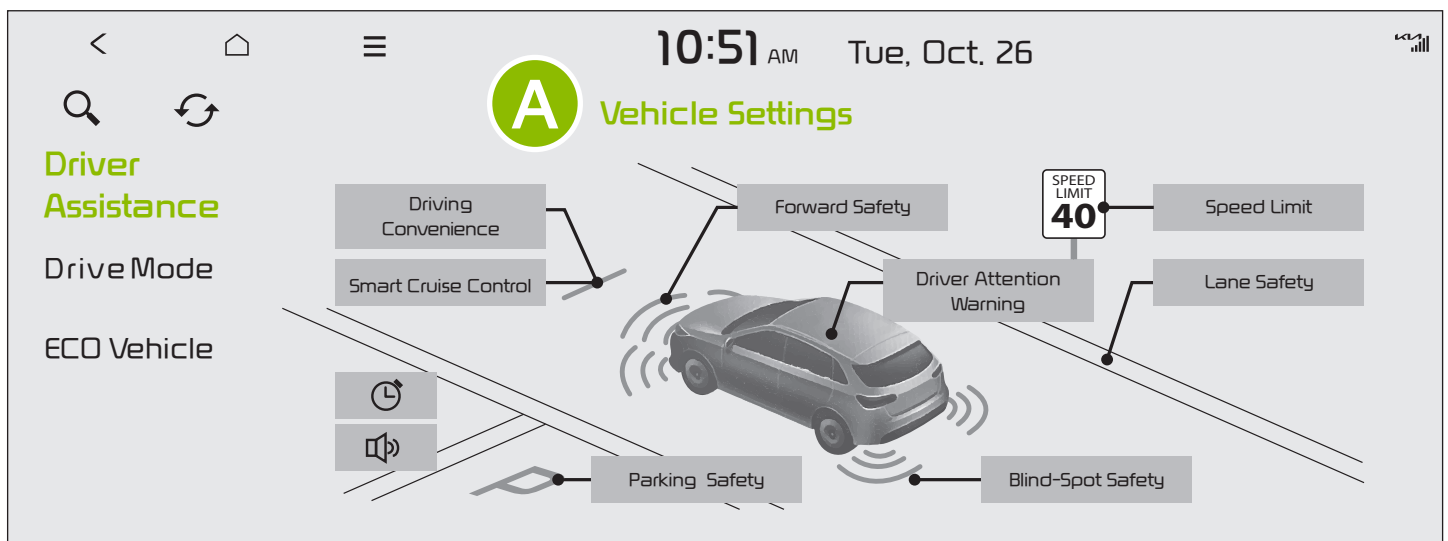 

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*

*Illustrations are for demonstration purposes only. Some information may appear differently.*




## Service Interval Mode

 To enter Service Interval mode settings, press the SETUP button **A** on the Infotainment System. Then press VEHICLE, CLUSTER, and SERVICE INTERVAL MODE. The system will display the number of miles remaining until next service is due, as well as type of service. When service is required, the following will be displayed: **Service Required**.



**Vehicle Settings -  
Infotainment  
System**

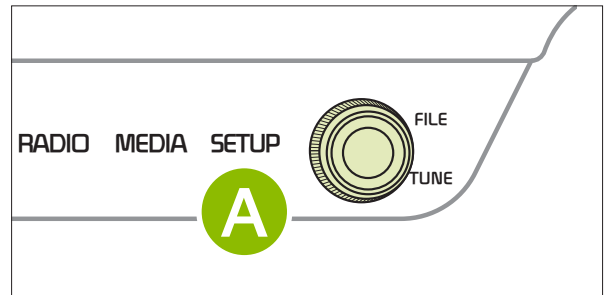

*Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.*

*Illustrations are for demonstration purposes only. Some information may appear differently.*




# Charging Connector Lock Mode

 The Charging Connector can be set to be locked or unlocked while in the charging inlet and charging. Go to the Vehicle Settings\* in the Infotainment System to set the connector to Lock Mode.

Press SETUP, ECO Vehicle or EV and then Charging Connector Locking Mode.

Select the preference: Always Lock, Lock While Charging, Do Not Lock.

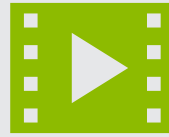

**EV Scheduled Charging**



**EV Charging**

### QUICK TIPS

- If in lock mode & the doors are unlocked, the charging connector unlocks, but if the charging cable is not disconnected within 10 seconds, the connector will be automatically locked again
- If the charging connector is unlocked but all the doors are locked, the connector will be automatically locked
- If charging does not work, disconnect the connector and try charging again

### REMINDERS:

- If the connector cannot be unlocked, refer to Section 1 in the Owner's Manual on how to unlock the connector in an emergency
- To prevent charging cable theft, the charging connector cannot be disconnected from the inlet when the doors are locked or the charging connector is in the LOCK mode. Unlock all doors to disconnect the charging connector from the inlet. If the release button does not work even after the all doors are unlocked, pull the emergency lift cable in the engine compartment or refer to Section in the Owner's Manual on how to unlock the connector in an emergency

*Actual Vehicle Settings steps may vary by model. Refer to Section 1 in the Owner's Manual for more information.*



## Scheduled Charging\*

 
Charging times can be set using the Infotainment System screen. You can also use the Scheduled Charging\* feature on the Kia Access app<sup>†2</sup>.



**EV Scheduled Charging**

### Charging with the Kia Access app<sup>†2</sup>:

The Kia Access app<sup>†2</sup> can help you find the nearest charging station, and also displays charging status and Scheduled Charging information. On your smartphone, go to an app store or marketplace to download the Kia Access app<sup>†2</sup>.

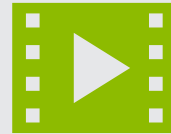


**EV Charging**

**REMINDER:** When Scheduled Charging is set and the charger is plugged in, charging of the electric vehicle will not begin until the time and date set.

### Deactivate Scheduled Charging -

 Depress the Deactivate Scheduled Charging button **A** to temporarily disable the scheduled charging feature when immediate charging is required.

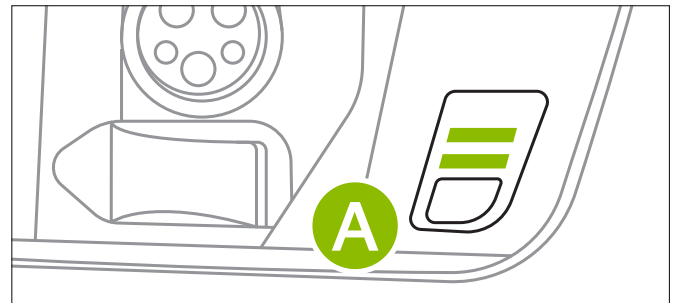

(Located at exterior charging port)

### QUICK TIP

- When you press the Deactivate Scheduled Charging button the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting from the Infotainment System, or the smartphone Kia Access app<sup>†2</sup>.

### REMINDERS:

- For more detail and/or subsequent steps in charging your vehicle, including safety precautions that should be taken, please see the Owner's Manual
- Reserved charging may not be available at public chargers

*Images are for illustrative purposes only.*



 
## EV Mode - Infotainment System

EV Mode on the Infotainment System screen allows you to navigate through menus that include information on available driving range, energy usage, energy information, charging and climate settings, and EV settings.



**EV Mode on the Infotainment System**

- Energy Information
- Next Departure
- Scheduled Charging and Climate
- Vehicle to Load (V2L)
- Nearby Stations
- Settings

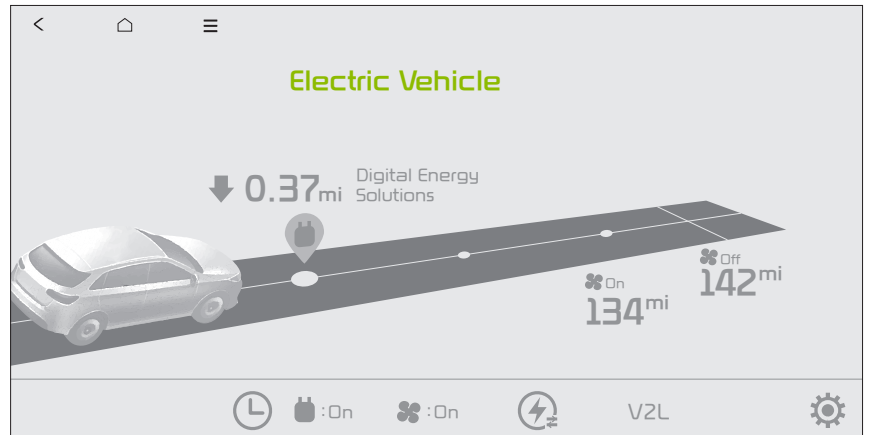

See the Car Infotainment System Quick Reference Guide for more detailed information on screens.

These illustrations are for demonstration purposes only.

Some items may appear different or vary in illustrations.



## Charging the EV

### AC Charger Level 1 Charging - “Trickle” Charge

An AC Charger Level 1 or “trickle” charger is the most common type of charging system for an EV. This type of charger uses 110 volts of household electricity and approximately 9 hours for a full charge.

#### Indicators:

 
- A** ICCB plug
- B** Power - When the charger and AC plug is plugged in and functioning normally, the indicator will turn green. Indicator is red if plug temperature sensor warning is present
- C** Charge - Indicates that the vehicle is charging
- D** Fault - Indicates charge failure
- E** Charge Level - Indicates the level of charge: 6A, 8A, 10A, 12A
- F** ICCB - In-Cable Control Box

#### REMINDER:

- Do not use an extension cord. Plug trickle charger directly into wall socket. Do not charge to a receptacle that is old, damaged, corroded or cracked. When using outdoors, be careful not to expose it to external environments such as rain, snow, and high temperatures.



EV Charging

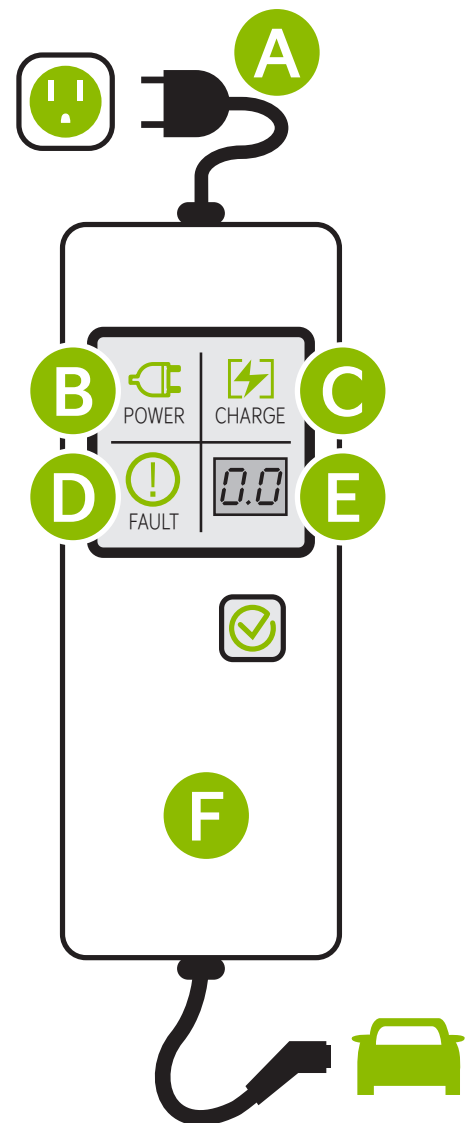

[Continued on next page](#)


*Illustrations are for demonstration purposes only. Some information may appear differently. Refer to Section 1 in the Owner's Manual for more information.*



## Charging the EV

 [Continued from previous page](#)

### AC Charger Level 2 Charging - “Normal” Charge

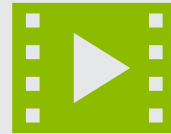

EV Charging

An AC Charger Level 2 or “normal”

240-volt charger is the recommended charging system for the EV. This type of charger uses 240 volts of electricity and takes approximately 2.5-3 hours for a full charge (Based on Kia Corporation testing with SAE J1772 charger performed at 3.3kW). This charger may be able to be installed at your home by a qualified electrician or found at a public charging station.

#### QUICK TIP

- A Level 2 or “normal” 240-volt charger is recommended for regular charging of the vehicle.

#### REMINDERS:

- Shape of charger and how to use the charger may be different for each manufacturer. Please see Owner’s Manual for more information
- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style
- Operating the air conditioner or heater excessively may reduce the distance to empty
- If the charger is worn out, exposed, or there exists any type of damage, charging may reduce or stop for your safety. Use another charger that works normally

[Continued on next page](#)

*For more detail and/or subsequent steps in charging your vehicle, please see Section 1 in the Owner’s Manual.*






## Charging the EV

 
 
[Continued from previous page](#)

**To charge the EV using a normal/trickle charger:**




EV Charging

1. Connect the ICCB **A** plug to an electrical outlet
2. Check if the power light (green) **B** on the ICCB turns on
3. Press the brake pedal and engage the parking brake
4. Turn off all switches, put the shift lever in **P** (Park), and turn off the vehicle
5. Open the charging door **C** by pressing the charging door (Ensure doors are unlocked)
6. Remove any dust or water on the charging connector and charging inlet **D**
7. Hold the charging connector handle **E** and connect it to the vehicle's charging inlet **D** by pushing the connector until you hear a clicking sound
8. Charging begins automatically (Ensure the charge indicator light  is illuminated on your Instrument Cluster, indicating the vehicle is charging)

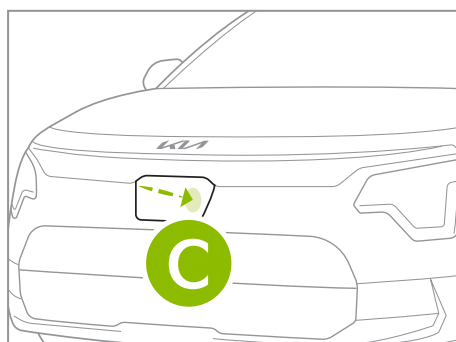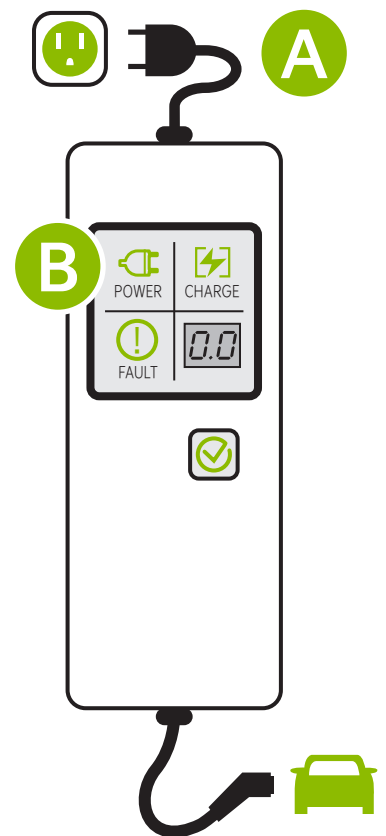

(Door located at front of vehicle)

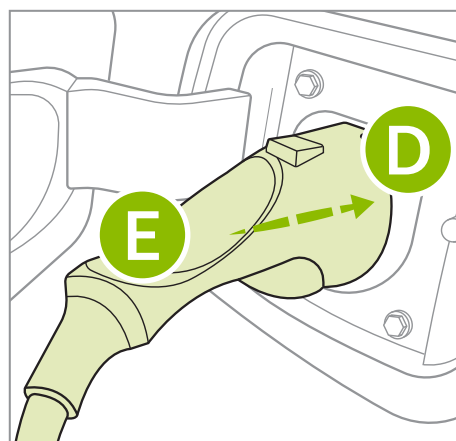 

[Continued on next page](#)

Images are for illustrative purposes only. Refer to Section 1 in the Owner's Manual for more information.



## Charging the EV

[Continued from previous page](#)

 
### Checking the Charging Status

The charging status can be checked by viewing the charging status indicator on the dash panel. The lights will progressively become lit as the vehicle approaches a full charge.

After charging has started, the light turns green and the estimated charging time is displayed on the Instrument Cluster **F** for about 1 minute. It is also displayed when the driver's door is opened with charging in progress. When fully charged, the light turns off.



EV Charging

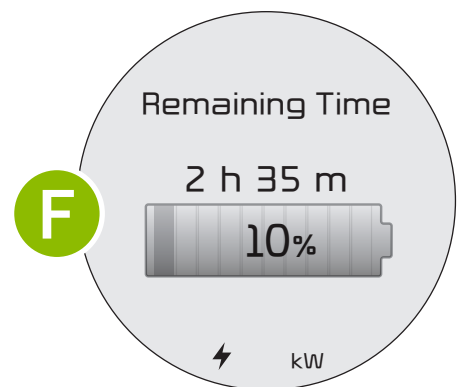

(Message on Cluster Display)

### REMINDER:

- For more detail and/or subsequent steps in charging your vehicle, please see Section 1 in the Owner's Manual.

*For more detail and/or subsequent steps in charging your vehicle, please see Section 1 in the Owner's Manual.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



## Regenerative Braking with Paddle Switches

The regenerative braking system charges the battery when coasting or when you use the brakes to stop the vehicle. Use the paddle switches to adjust the regenerative braking level from 0 to 3 during decelerating or braking. The level will be displayed on the Instrument Cluster **A**.

 
 
- Pull the left paddle switch **B** to increase regenerative braking and deceleration
- Pull the right paddle switch **C** to decrease regenerative braking and deceleration

The paddle switches do not operate when:

- Both paddle switches are pulled at the same time
- The vehicle is decelerating by depressing the brake pedal
- Cruise Control or Smart Cruise Control (SCC)<sup>†4</sup> is active



### Regenerative Braking - Paddle Switches, Drive Mode

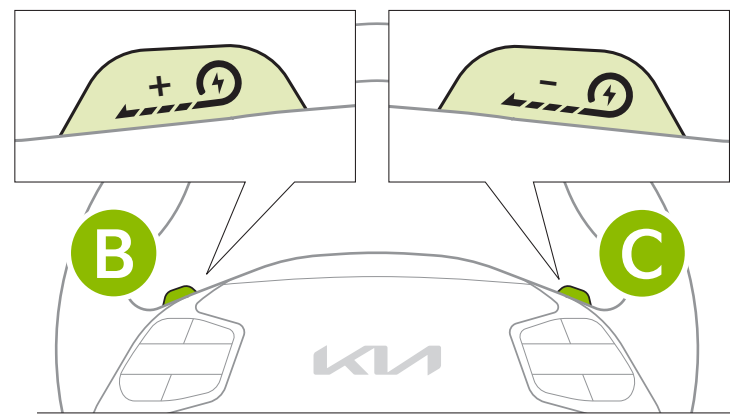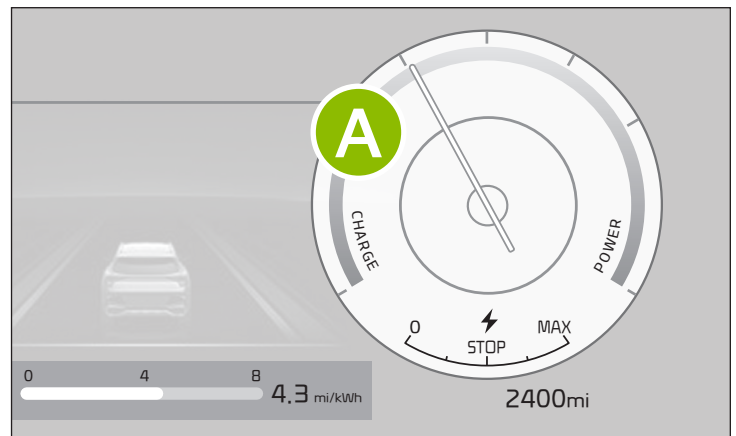

[\*Continued on next page\*](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*For more information on regenerative braking, one-pedal driving or the Smart Regeneration System, please refer to Section 6 in your Owner's Manual.*



## Regenerative Braking with Paddle Switches

 
[Continued from previous page](#)

### i-Pedal

i-Pedal driving controls the vehicle speed by the accelerator pedal, both acceleration and deceleration. To activate i-Pedal:

- Pull the left side paddle switch **A** to Level 3 regenerative braking (see indicator on Instrument Cluster)
- Then pull the left side paddle switch **A** once again when the regenerative braking level is set to Level 3


The i-Pedal indicator symbol will be illuminated on the Instrument Cluster.

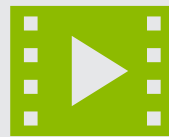

Regenerative Braking - i-Pedal



 Regenerative Braking - Paddle Switches, Drive Mode

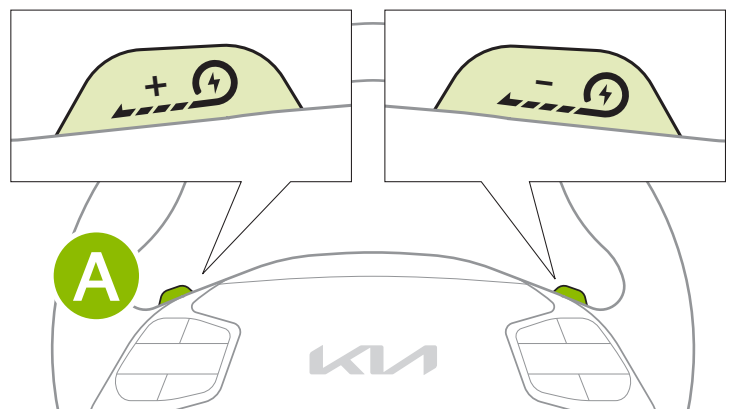

### QUICK TIP

- Each of the different Drive Modes allows the regenerative braking level to be set at the driver's preference.

**REMINDER:** The driver's seat belt must be fastened to operate i-Pedal driving.

[Continued on next page](#)

*Images are for illustrative purposes only.*

*Do not solely rely on i-Pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Always use pedal braking when necessary. Pay attention to the road condition ahead and apply the brake if necessary.*

*For more information on regenerative braking, one-pedal driving or the Smart Regeneration System, please refer to Section 6 in your Owner's Manual.*



 
 
## Regenerative Braking with Paddle Switches

[Continued from previous page](#)

### One pedal driving

One pedal driving increases the regenerative braking amount to above level 3 and enables you to come to a full stop by pulling down the left paddle.

- Pull and hold the left paddle switch **A** while coasting
- When the vehicle speed is above 2 mph, release the left paddle switch **A** for less than 0.5 seconds to return to the previously set level of regenerative braking
- When the vehicle speed is below 2 mph, the brake and hold system stops the vehicle even though the left paddle switch is released
- While one-pedal driving is active, the driver can stop the vehicle by pulling the paddle switch

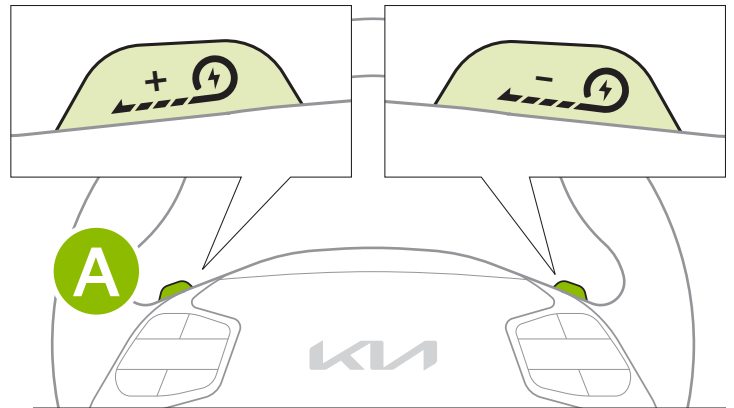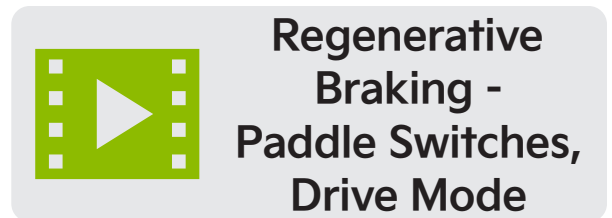

**REMINDER:** The driver's seat belt must be fastened to operate one-pedal driving.

[Continued on next page](#)

*Images are for illustrative purposes only.*

*Do not solely rely on one-pedal driving to stop the vehicle, as it may not be able to stop the vehicle depending on vehicle and road conditions. Pay attention to the road condition ahead and apply the brake if necessary.*

*For more information on regenerative braking, one-pedal driving or the Smart Regeneration System, please refer to Section 6 in your Owner's Manual.*



## Regenerative Braking with Paddle Switches

[Continued from previous page](#)

 
### Smart Regeneration System

This system automatically adjusts the regenerative braking level based on a vehicle being detected in front of the Niro EV.


- Activate Smart Regeneration in the User Settings\* or the Vehicle Settings\* mode. AUTO **A** will be displayed on the Instrument Cluster. AUTO regenerative brake adjusts regenerative braking based on the distance with the vehicle in front and its speed
- Pull and hold the right paddle switch **B** for more than 1 second to turn on/off the automatic change of the regenerative braking. This system is designed to automatically adjust AUTO mode by using the left and right paddle switch



Regenerative Braking - Smart Regeneration

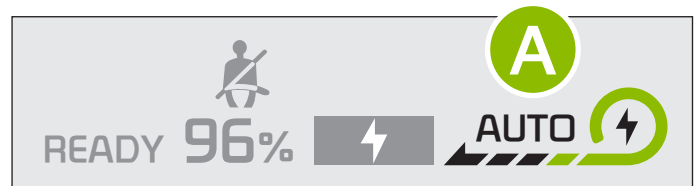

 (Indicator on lower left corner of Instrument display)

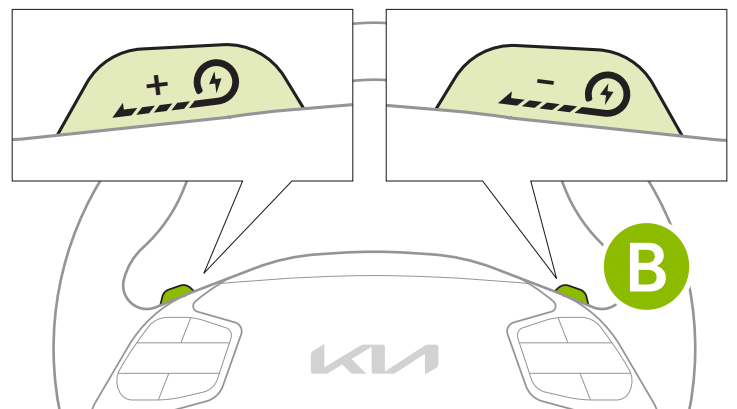

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Smart Regeneration is a supplemental system for the driver's convenience. Do not solely rely on this system to stop the vehicle or avoid collisions. Always cautiously look ahead to prevent unexpected or sudden situations.*

*For more information on regenerative braking, one-pedal driving or the Smart Regeneration System, please refer to Section 6 in your Owner's Manual.*



## EV Charge Transfer / Vehicle to Load (V2L)\*

 
EV Charge Transfer / Vehicle to Load (V2L) allows you to use the vehicle's high voltage battery to power electrical devices like home appliances or other electronic devices. V2L can also be used to charge items like electric bikes or another electric vehicle.

If equipped, there are two ports in the interior and exterior. The interior port **A** is under the rear seat and the other is the charging port for your EV.


If your EV's high-voltage battery discharges to the limit set, the system will automatically stop supply to the ports. You can set your EV's battery discharge limit from the EV screen.

From the Infotainment System home screen, press the EV button. Then press EV Charge Transfer.

**Interior Port** - The EV Power button needs to be on to operate the port. Use the Smart Key fob mechanical key to unlock the power outlet cover **B**. Check the indicators on the port to ensure power is on.

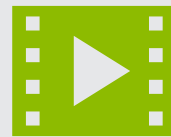

**EV Charge Transfer / Vehicle to Load (V2L)**

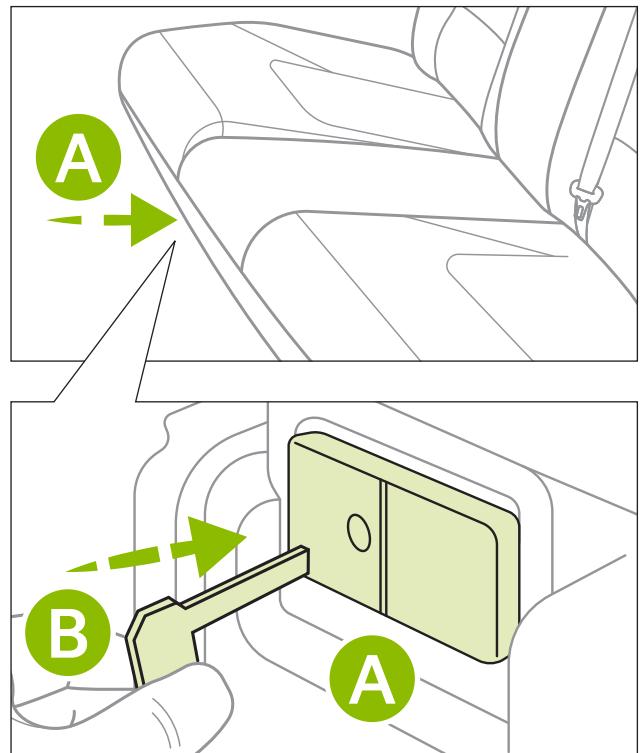 

[Continued on next page](#)

Refer to Section 1 in the Owner's Manual for more information.

These illustrations are for demonstration purposes only. Some items may appear different or vary in illustrations.







# EV Charge Transfer / Vehicle to Load (V2L)\*

 [Continued from previous page](#)

**Exterior Port** - Open the cover of the V2L connector **A** and connect your appliance or electronic device. Connect the V2L connector to the charging inlet on the EV, and press the button **B** on the connector.

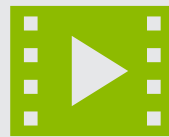

**EV Charge Transfer / Vehicle to Load (V2L)**

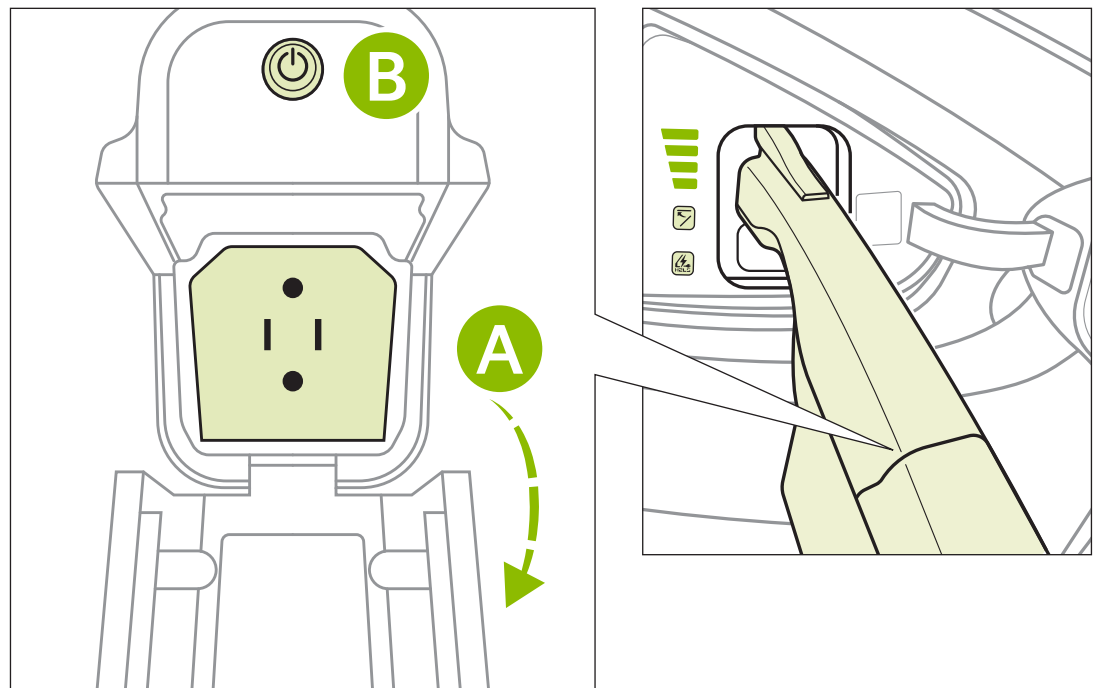 

(Trickle / normal charge shown)

Refer to Section 1 in the Owner's Manual for more information.

These illustrations are for demonstration purposes only. Some items may appear different or vary in illustrations.





# Forward Collision-Avoidance Assist (FCA) (Sensor Fusion)<sup>†4</sup>

Forward Collision-Avoidance Assist is designed to detect a vehicle, a powered two-wheeler, a pedestrian, or a cyclist ahead on the road and may warn the driver of a possible collision with a warning message **A** on the Instrument Cluster and a warning sound. If FCA detects an increased risk of collision, it may automatically apply the brakes to potentially reduce the effects of a possible collision **B**.

With the turn signal on, if it detects a potential collision, **Junction Turning** **C** may help to avoid or reduce the risk of a collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.

 
 
 
**Junction Crossing\*** **D** may help avoid a collision with oncoming vehicles detected on the left or right side when crossing an intersection by applying emergency braking.

**Direct Oncoming Response** **E** may reduce the vehicle speed and temporarily apply braking when FCA detects a vehicle is approaching directly in front.


[Continued on next page](#)




## Forward Collision-Avoidance Assist (FCA)

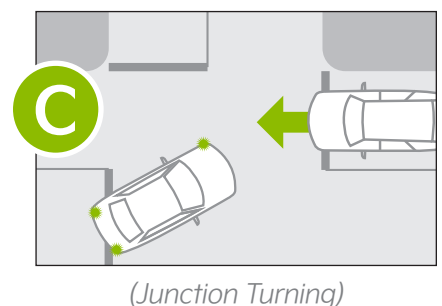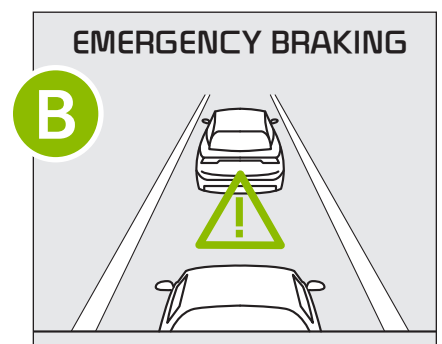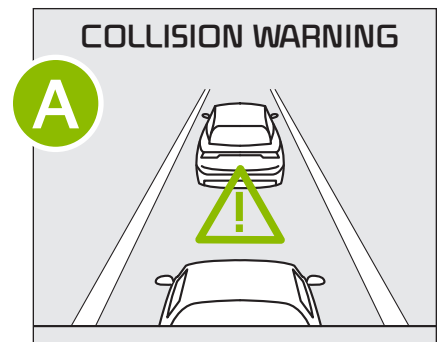

(Junction Turning)

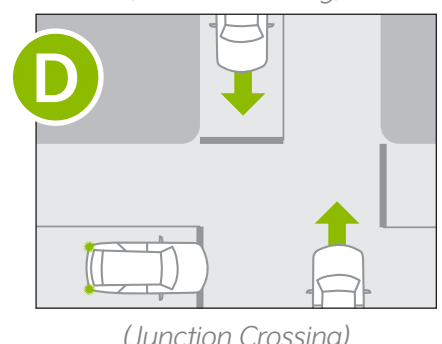 

(Junction Crossing)

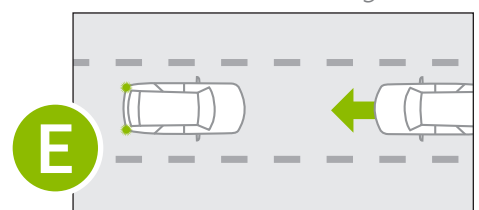 

(Direct Oncoming Response)

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.



## Forward Collision-Avoidance Assist (FCA) (Sensor Fusion)<sup>†4</sup>

 
[Continued from previous page](#)

**Lane-Change Oncoming\*** **A** may help avoid a possible collision with a detected oncoming vehicle when changing lanes by assisting the driver's steering.


**Lane-Change Side\*** **B** may help avoid a possible collision with the vehicle detected ahead in the next lane when changing lanes by assisting the driver's steering.

**Evasive Steering Assist\*** **C** may help avoid a possible collision with a vehicle, pedestrian or cyclist detected ahead in the same lane. When a risk of collision is detected, Evasive Steering Assist function is designed to warn the driver and if the driver steers to avoid collision it may assist the driver's steering.

**REMINDER:** Once the risk factors are not detected, these functions will deactivate, and the driver must steer the vehicle.

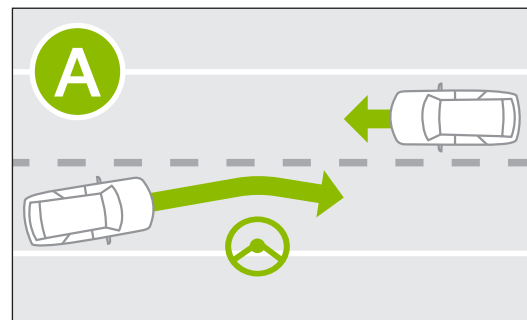

(Lane Changing - Oncoming Traffic)

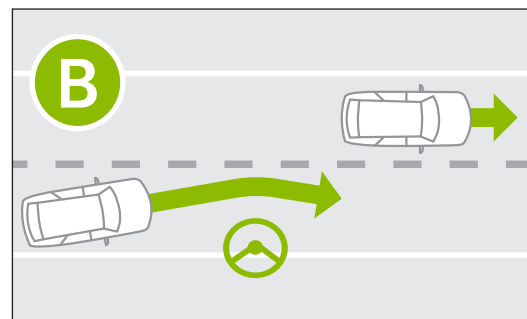 

(Lane Changing - Side)



(Evasive Steering Assist)

[Continued on next page](#)

Refer to Section 7 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.




## Forward Collision-Avoidance Assist (FCA) (Sensor Fusion)<sup>†4</sup>

 [Continued from previous page](#)

### FCA Settings:

- FCA is on by default in most Kia models. FCA can be turned on/off by going to the User Settings in the Instrument Cluster or the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button\* is in the on position
- To access User Settings in the Instrument Cluster** - Press the Mode button  **A** on the Steering Wheel to toggle to User Settings. Press the OK button **B** up/down to toggle to Driver Assistance, Driving Safety and Forward Safety. Under Driving Safety, you can also activate Forward cross-traffic safety\* and Forward/side safety\*
- To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety and Forward Safety. Under Driving Safety, you can also activate Forward cross-traffic safety\* and Forward/side safety\*
- To adjust the Forward Safety Warning Timing, under Driving Safety, select Forward Safety Warning Timing, then select Standard or Late, depending on your Kia model:
  - Standard:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
  - Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

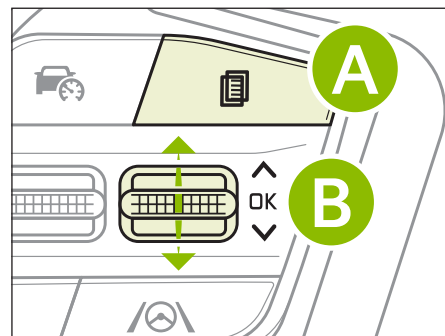

(Buttons located on Steering Wheel)

[Continued on next page](#)

*Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Image is for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*



# Forward Collision-Avoidance Assist (FCA) (Sensor Fusion)<sup>†4</sup>

[Continued from previous page](#)


**FCA/FCW will become active when the:**

- Power button is ON
- Vehicle is driving faster than 6 mph
- Electronic Stability Control (ESC) is ON




**Forward Collision-Avoidance Assist (FCA)**

### QUICK TIP

- The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings\* on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume.

### REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- FCA may warn the driver if the vehicle ahead is decelerating to turn or to pass a speed bump
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster 

*Refer to Section 7 in the Owner's Manual for more information.*

 


## Blind-spot Collision-Avoidance Assist (BCA)\*†4

Blind-spot Collision-Avoidance Assist is designed to help detect approaching vehicles in the driver's blind spot areas and may warn the driver of a possible collision with a visual alert on the outside rearview mirrors and a warning sound. If the system detects there is a collision risk when exiting a parallel space, BCA may assist with braking to help avoid a collision. Initially, BCA provides Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, BCA can help avoid a collision by applying the brakes.



### Blind-spot Collision-Avoidance Assist (BCA)

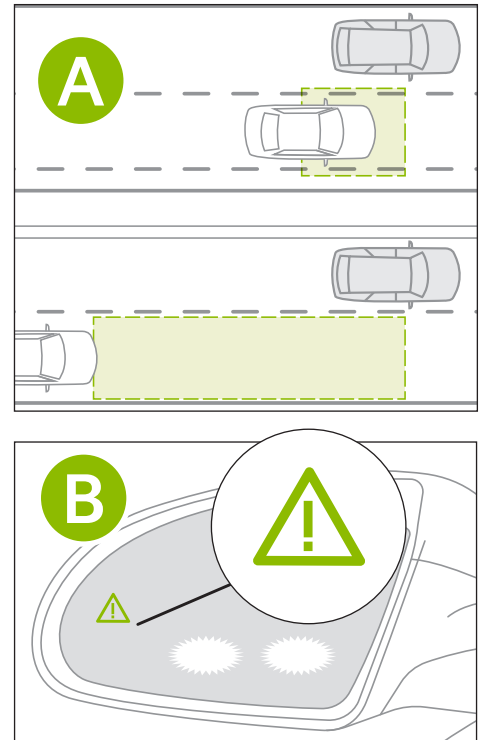

**Vehicle detection:** When another vehicle is detected within the BCA warning boundary **A**, vehicle speed is above 12 mph and the approaching vehicle is above 7 mph, an indicator will illuminate on the outside rearview mirrors **B**.

**Collision warning:** When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning. Your vehicle speed must be above 25 mph and the approaching vehicle must be above 7 mph.

**Collision-avoidance assist (parallel exit):** When collision warning has already occurred, and the system detects that the risk of a collision has increased, BCA can help avoid a collision by applying the brakes. Your vehicle needs to be traveling slower than 2 mph, and the approaching vehicle is traveling faster than 3 mph.

[Continued on next page](#)


*The images on this page are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*



## Blind-spot Collision-Avoidance Assist (BCA)<sup>\*†4</sup>

 
[Continued from previous page](#)

### BCA Settings:

- BCA can be turned on/off by going to the User Settings\* in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button is in the on position
- **To access User settings\* ⚙️ in the Instrument Cluster** - Press the **MODE** button  **A** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **B** up/down to toggle to Driver Assistance, Driving Safety, then Blind-spot Safety
- **To access Vehicle settings\* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Blind-spot Safety



Blind-spot  
Collision  
Warning

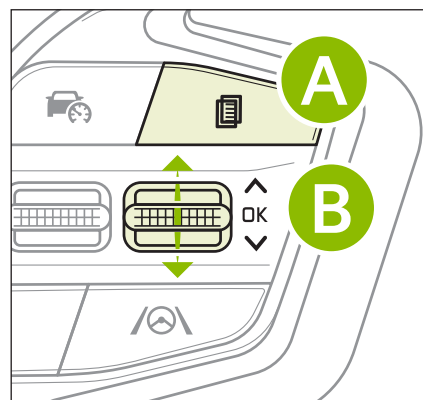

(Buttons are located left of the Steering Wheel)

[Continued on next page](#)

*When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*The images on this page are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 7 in the Owner's Manual for more information.*






# Blind-spot Collision-Avoidance Assist (BCA)<sup>\*†4</sup>

[Continued from previous page](#)

### QUICK TIP

The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings\* on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume

### REMINDERS:

- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is on and the ignition is cycled, BCA returns to its previous state
- If the turn signal is activated for a left turn at an intersection, the Blind-spot Collision-Avoidance Assist (BCA) system may issue a warning, regardless of whether the driver intends to complete the turn. Maintain a proper distance from oncoming vehicles


*When engaged, BCA is a supplemental function. Do not solely rely on this function and always pay attention to the road and its conditions.*

*Refer to Section 7 in the Owner's Manual for more information.*



## Lane Keeping Assist (LKA)<sup>†4</sup>

Lane Keeping Assist is designed to detect the lane markers on the road, and in certain circumstances may assist with steering to help prevent the vehicle

from departing the lane. When turned on, the Instrument Cluster indicator  will initially illuminate gray. It will remain gray when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.



**Lane Keeping Assist (LKA)**

If the LKA detects that you are moving outside of your lane, without using the turn signal, LKA may give an audible warning and steering wheel vibration and display Lane Departure Warning on the Instrument Cluster or LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

**Hands-Off Warning** - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and if hands on the Steering Wheel is not detected continually, LKA will be turned off with additional emergency warning.

[\*Continued on next page\*](#)

*Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.*

*Actual User Settings steps may vary by model. Refer to Section 7 in the Owner's Manual for more information.*





 


## Lane Keeping Assist (LKA)<sup>†4</sup>

[Continued from previous page](#)

### LKA Settings:

- Press and hold the Lane Driving Assist button **A** to turn LKA on or off, when it is first enabled in the User Settings\* in the Instrument Cluster or Vehicle Settings\* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button in the on position
- **To access User settings\* in the Instrument Cluster** - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings . Press the OK button **C** up/down to toggle to Driver Assistance and then Lane Safety
- **To access Vehicle settings\* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety and then Lane Safety

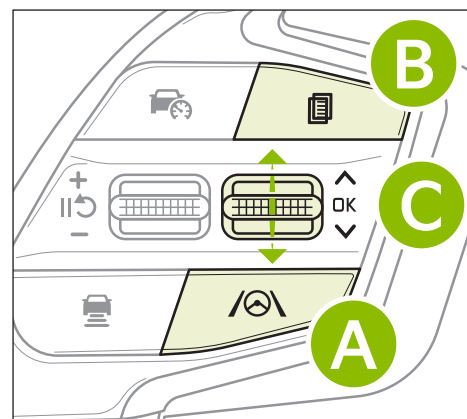

(Buttons are located left of the Steering Wheel)

LKA will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA detects both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

[Continued on next page](#)

*Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.*


*Actual Vehicle Settings steps may vary by model. Refer to Section 7 in the Owner's Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




# Lane Keeping Assist (LKA)<sup>†4</sup>


 
[Continued from previous page](#)

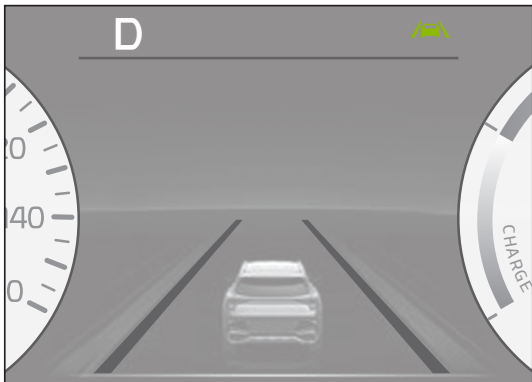

 When LKA detects the lane markers, both lanes are displayed gray

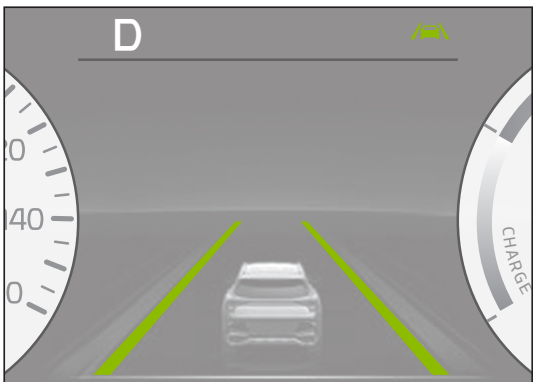

  
When LKA does not detect the lane markers, the lanes are displayed green

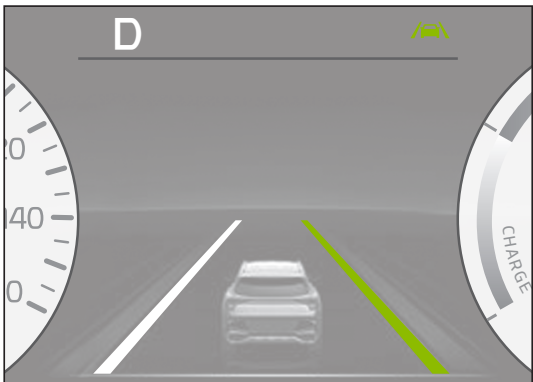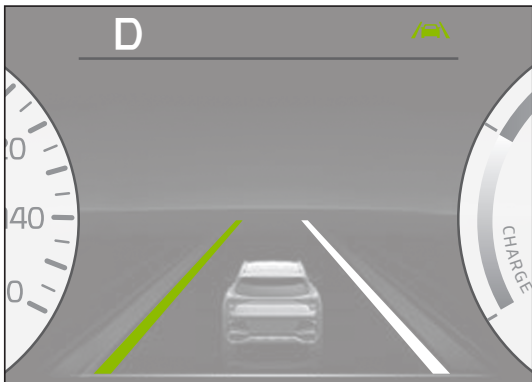

When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)

QUICK TIPS

- The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings\* on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume
- Adjusting the Warning Volume will adjust settings for other driver assistance systems

## REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner’s Manual for more information.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 145](#) | <sup>\*</sup>IF EQUIPPED



## Driver Attention Warning (DAW)<sup>†5</sup>

Driver Attention Warning is designed to alert the driver if it detects inattentive driving patterns and, in certain situations, can give a warning signal to take a break.

A message, "Consider taking a break,"  appears on the LCD and a warning sounds to suggest the driver take a break when DAW detects that the driver's attention level has become low.



**Driver Attention Warning (DAW)**

Consider taking a break



### DAW Settings:

- DAW can be turned on/off by going to the User Settings\* in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button is in the on position

[Continued on next page](#)

*When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*




*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*



## Driver Attention Warning (DAW)<sup>†5</sup>

 
[Continued from previous page](#)

### DAW Settings:

- To access User settings\*  in the **Instrument Cluster** - Press the **MODE** button  **A** on the Steering Wheel to toggle to User Settings . Press the OK button **B** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Inattentive Driving Warning
- To access **Vehicle settings\*** in the **Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Inattentive Driving Warning



Driver Attention Warning (DAW)

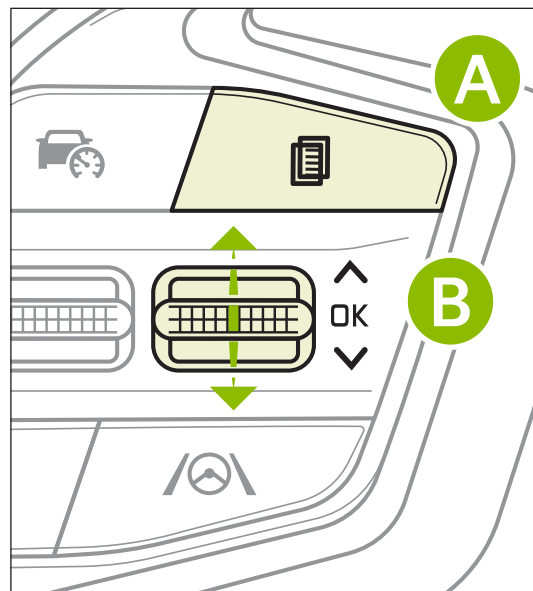

(Steering Wheel buttons on left side)

*When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.*


*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*




## Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>


 
Leading Vehicle Departure Alert is designed to alert the driver if the LVDA system detects the vehicle directly in front start to move or depart from a stop. When LVDA is on, your vehicle is stopped and detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster.

### LVDA User Settings:

- To turn LVDA on, press the Mode button **B** on the Steering Wheel, and go to User Settings  in the Instrument Cluster. Press the OK button **C** up/down and select Driver Assistance, then press the OK button **C** to select. Go to Driver Attention Warning and then Leading Vehicle Departure Alert

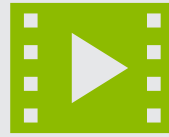

### Leading Vehicle Departure Alert (LVDA)

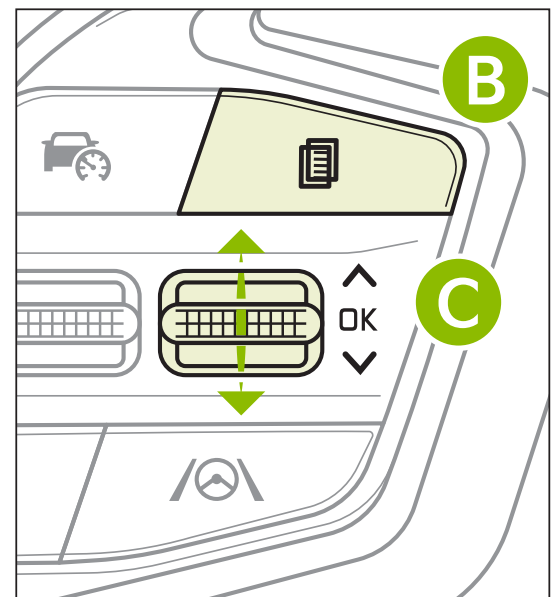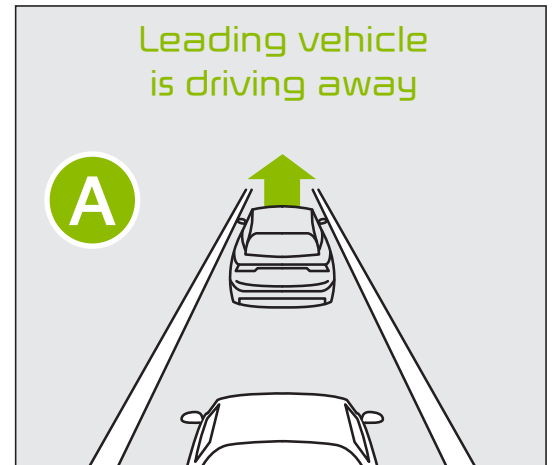  

(Steering Wheel buttons on left side)

[Continued on next page](#)

The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.




# Leading Vehicle Departure Alert (LVDA)<sup>†4</sup>

 [Continued from previous page](#)

### LVDA User Settings:

- To access the Vehicle Settings\* in the Infotainment System, press the SETUP key or the onscreen SETUP button, then press Vehicle  to enter Vehicle Settings. Press Driver Attention Warning, then Leading Vehicle Departure Alert

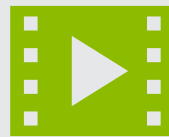

Leading Vehicle  
Departure Alert  
(LVDA)

### REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

*The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*



## Smart Cruise Control (SCC)\*†4

SCC is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed. When traffic



Smart Cruise Control  
with Overtaking  
Acceleration Assist

is detected, the vehicle will automatically slow to maintain a set distance from traffic without depressing the accelerator or brake pedal.

With SCC on and activated and the vehicle distance set, it can bring the vehicle to a complete stop, when SCC detects a vehicle ahead slowing or stopping. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than three (3) seconds, press the accelerator pedal or press the +/- or buttons on the Steering Wheel to start moving the vehicle.

Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

**Based on driving style\*:** SCC may also be able to operate based on the driver's driving style, modifying for preferred vehicle distance, acceleration and reaction speed. To activate, in User Settings on the Instrument Cluster or Vehicle Settings on the Infotainment System, select Driver Assistance, Driving Convenience, Smart Cruise Control and then Based on Driving Style.

### QUICK TIP

If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph.

[\*Continued on next page\*](#)

*Refer to Section 7 in the Owner's Manual for more information.*



 


# Smart Cruise Control (SCC)\*†4


[Continued from previous page](#)

**To set/adjust the set speed:** Press the Driving Assist button\* **A** to turn SCC on and set the current speed (One-Touch Set). The SCC indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front. Then press the +/- switch **B** up/down to increase/decrease the set speed.

**To set the vehicle distance:** Press the Vehicle Distance button **C** on the steering wheel. The image on the LCD screen **D** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **E**.

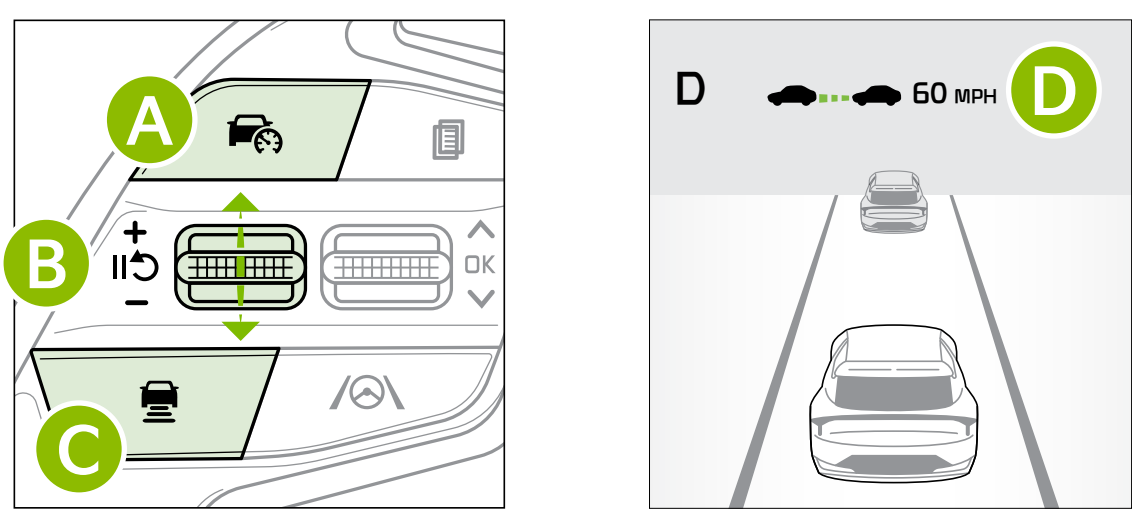

(Displays on LCD screen)

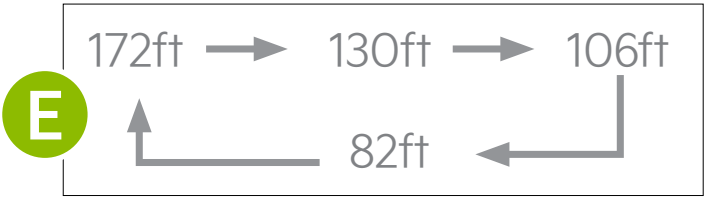 

(Distances are approximate and vary depending on vehicle speed)

[Continued on next page](#)

When engaged, SCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See Section 7 in the Owner’s Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

†LEGAL DISCLAIMERS ON [PAGE 145](#) | \*IF EQUIPPED






### Smart Cruise Control (SCC)\*†4

 [Continued from previous page](#)

**To pause/resume SCC operation:** Press the Pause/Resume switch **A**. The SCC indicator on the Instrument Cluster will change.

**To turn SCC off:** Press the brake pedal, or press the Driving Assist button **B**. The SCC indicator on the Instrument Cluster will turn OFF.

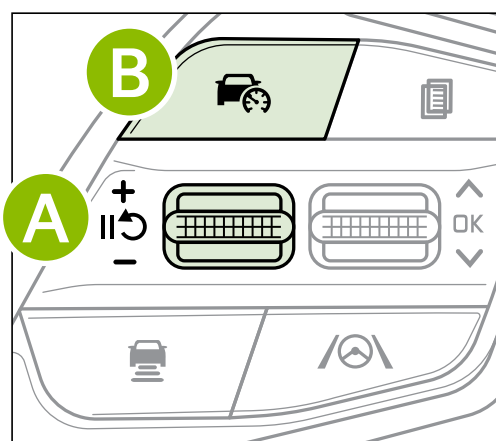

#### REMINDERS:

- SCC will not activate until the brake pedal has been depressed at least once after the ignition is ON or engine started
- When following a vehicle, SCC will automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- It is the responsibility of the driver to always check the speed and distance to the vehicle ahead
- SCC may decelerate if surrounding vehicle intervenes in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your speed. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead


*When engaged, SCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See Section 7 in the Owner's Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*




## Navigation-based Smart Cruise Control (NSCC)\*†4

 
Navigation-based Smart Cruise Control may automatically adjust vehicle speed when driving on certain highways by using road information from the navigation function.

When NSCC is on and operating, and the vehicle is driving on limited/controlled access highways, the **NAV** icon  will illuminate white on the Instrument Cluster.


### Highway Curve Zone Auto

**Slowdown:** When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, and the

NAV icon changes to AUTO and turns green  in the Instrument Cluster. When the vehicle passes the curved road, the vehicle may return to its previously set speed.

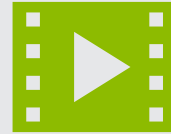

 Navigation-based  
Smart Cruise  
Control (NSCC)

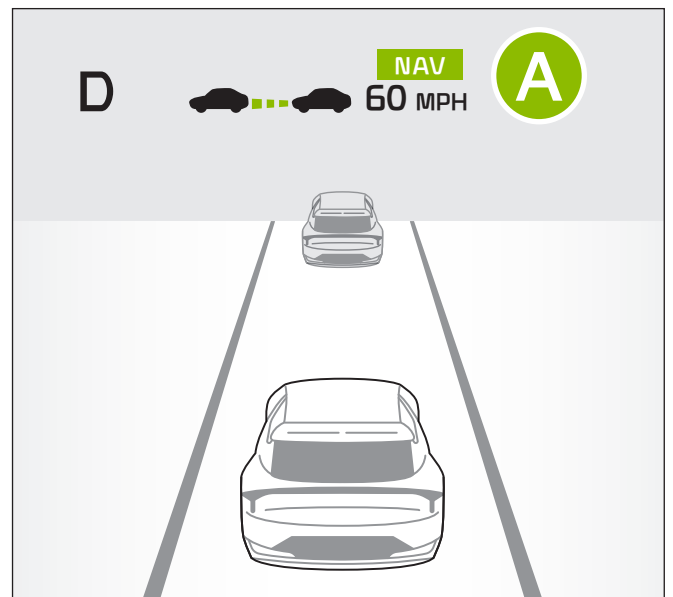

(Displays on LCD screen)

[Continued on next page](#)

*NSCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

*See Section 7 in the Owner's Manual for more information.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Navigation-based Smart Cruise Control (NSCC)<sup>\*†4</sup>

[Continued from previous page](#)

## NSCC Settings:

- NSCC can be turned on/off by going to the Vehicle Settings\* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button is in the on position
- **To access Vehicle settings\* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance > Driving Convenience > Highway Auto Speed Change



Smart Cruise Control  
with Overtaking  
Acceleration Assist

[Continued on next page](#)

NSCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See Section 7 in the Owner's Manual for more information.



# Navigation-based Smart Cruise Control (NSCC)<sup>\*†4</sup>

[Continued from previous page](#)



Navigation-based  
Smart Cruise  
Control (NSCC)

### QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn NSCC on, the set speed will be set to 20 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the +/- switch up/down to start the vehicle
- NSCC will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

### REMINDERS:

- NSCC is only available on certain controlled access roads and highways
- The navigation part of Smart Cruise Control does not function when a destination is not set on the Infotainment Navigation System

*NSCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.*

*See Section 7 in the Owner's Manual for more information.*




## Intelligent Speed Limit Assist (ISLA)<sup>†4</sup>

Intelligent Speed Limit Assist is designed to use information from the detected road signs and the navigation system data to inform the driver of the speed limit and to help maintain within the speed limit.

 
 
When ISLA is on and active, the speed limit information will display on the Instrument Cluster of the detected speed limit **A**. When driving at a speed higher than the displayed speed limit, the speed limit is displayed in red.

### ISLA Settings:

- To enable ISLA on, press the MODE button  **B** on the Steering Wheel. You can also press the **SETUP** key/button on the Infotainment System. Select the VEHICLE button to enter the Vehicle Settings\*. Select DRIVER ASSISTANCE, then SPEED LIMIT.



Intelligent Speed Limit Assist (ISLA)

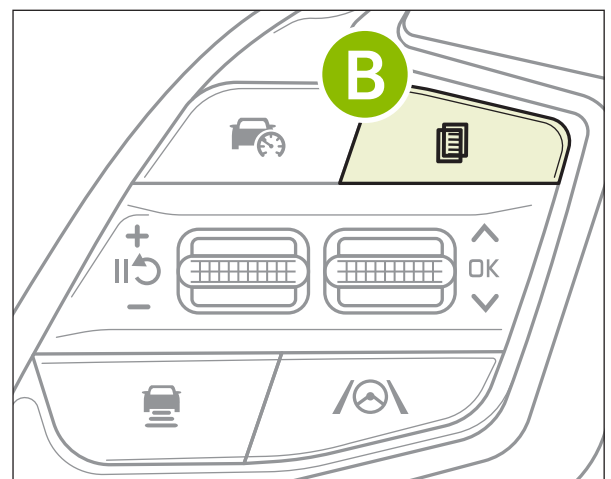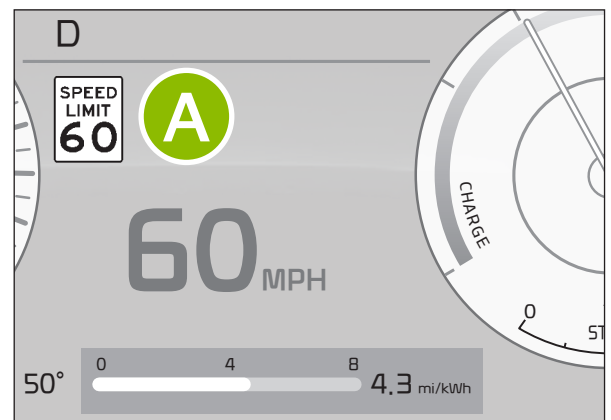

(Buttons located on Steering Wheel - Type B)

[Continued on next page](#)

*ISLA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. See Section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



## Intelligent Speed Limit Assist (ISLA)<sup>†4</sup>

 
[Continued from previous page](#)

**ISLA Settings:** Select one of the three modes:



**Intelligent Speed Limit Assist (ISLA)**

- **Country Selection:** If the vehicle is not equipped with navigation system, a settings menu will be provided to select the country manually
- **Speed Limit Offset:** The offset for Speed limit can be adjusted. The vehicle will warn the speed limit or adjust the driving speed when the current driving speed is higher than the recognized speed limit added with set tolerance value
- **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message to change the speed to help the driver stay within the posted speed limit, and informs the driver to change set speed of Manual Speed Limit Assist or Smart Cruise Control to help the driver stay within the speed limit
- **Speed Limit Warning:** Informs the driver of the posted speed limit **A** and warns the driver when the vehicle is traveling faster than the posted speed limit
- **Speed Limit Information:** Provides additional road sign information in addition to speed limit
- **Off:** ISLA is disabled

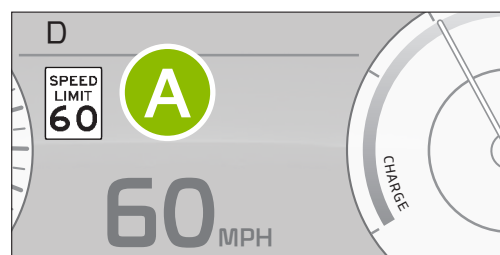

### QUICK TIP

You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on

### REMINDERS:


- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected
- Speed Limit Assist operates when the posted speed limit is 20 mph or higher

*Image is for illustrative purposes only. See section 7 in the Owner's Manual for more information.*



## Head-Up Display (HUD)\*†4

The Head-Up Display is a semi-transparent display that is designed to project a snippet of information from the Instrument Cluster and navigation system\* onto the windshield glass.

 
To enable HUD, press the MODE button  **A** on the Steering Wheel to enter the User Settings\* on the Instrument Cluster then press VEHICLE.

The HUD displays:


- Turn By Turn (TBT) navigation information\*
- Road signs\*
- Speedometer
- SCC set speed information
- SCC Vehicle Distance information
- Blind-spot Safety information\*
- Lane Safety information\*
- Highway Driving Assist information\*
- Lane Following Assist information\*
- Highway Auto Speed Change information\*
- Warning lights (low fuel)
- AV mode information



### Head-Up Display (HUD)

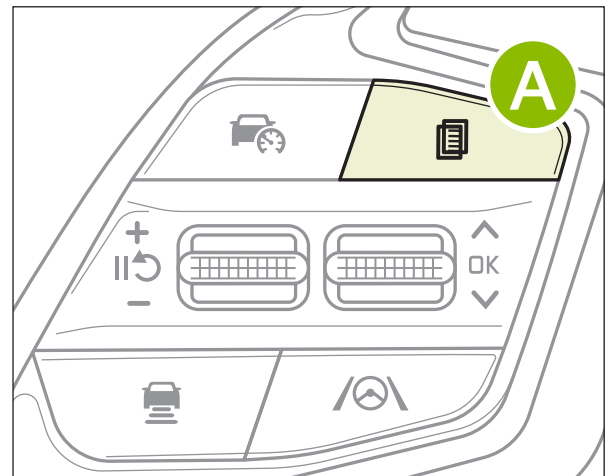

 (Buttons located on Steering Wheel - Type B)

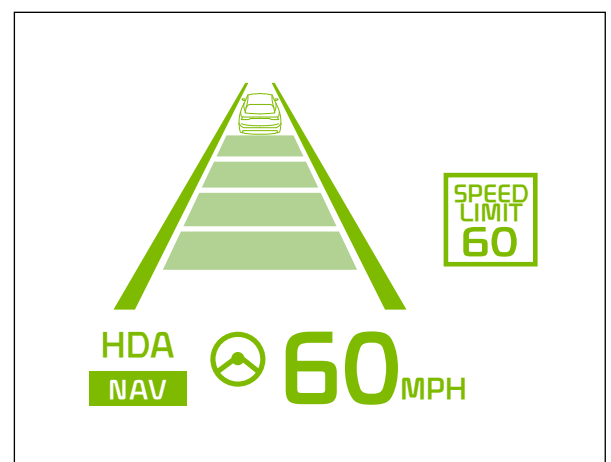

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See Section 5 in the Owner's Manual for more information.*





## Head-Up Display (HUD)\*†4

[Continued from previous page](#)

### Head-Up Display (HUD) User Settings:

 
Drivers can adjust the HUD settings from Vehicle Settings\* in the Infotainment System. Press SETUP, VEHICLE and HEAD UP DISPLAY.

The HUD displays:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Selection: Activate or deactivate HUD content
- Displaying options for Turn by Turn, Driving Convenience, Blind-spot Safety, Radio/Media Info



Head-Up Display (HUD)

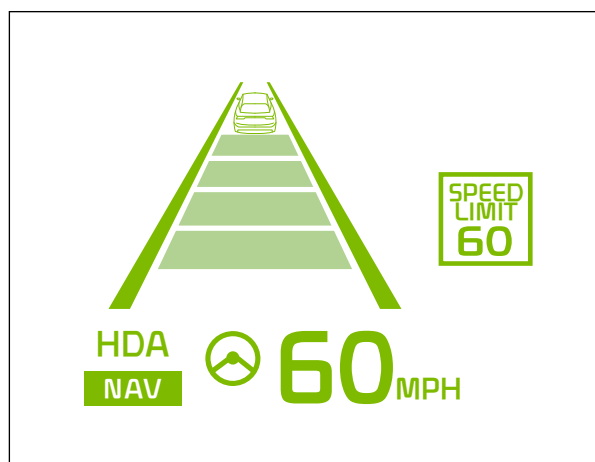

[Continued on next page](#)

*The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*See Section 5 in the Owner's Manual for more information.*





# Head-Up Display (HUD)\*†4

[Continued from previous page](#)

**REMINDERS:** The HUD image on the windshield glass may not be visible in these cases:

- If the driver has poor sitting posture
- If the driver is wearing polarized sunglasses
- If there is an object covering the HUD
- When driving on a wet road
- When there is excessive lighting inside or outside the vehicle
- If there are modifications made to the windshield, such as tinting or other aftermarket treatments. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
- If TBT navigation information is selected as HUD content, TBT information will not be displayed on the LCD




**Head-Up Display (HUD)**

*The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.*

*See Section 5 in the Owner's Manual for more information.*



## Lane Following Assist (LFA)<sup>†4</sup>

 
 
Lane Following Assist is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead. The Instrument Cluster indicator will initially illuminate gray  when turned ON. It will remain gray when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the Lane Following Assist icon will illuminate green **B**.

**Hands-Off Warning** - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. If hands on the Steering Wheel is not detected continually, LFA will be turned off with additional emergency warning.

- Press the Lane Safety button **C** to turn LFA on or off, when it is first enabled in the User Settings\* in the Instrument Cluster or Vehicle Settings\* in the Infotainment System
- LFA will operate only when these conditions are met:
  - LFA detects both sides of the lane markers the vehicle is traveling in
  - The vehicle is traveling slower than 100 mph



### Lane Following Assist (LFA)

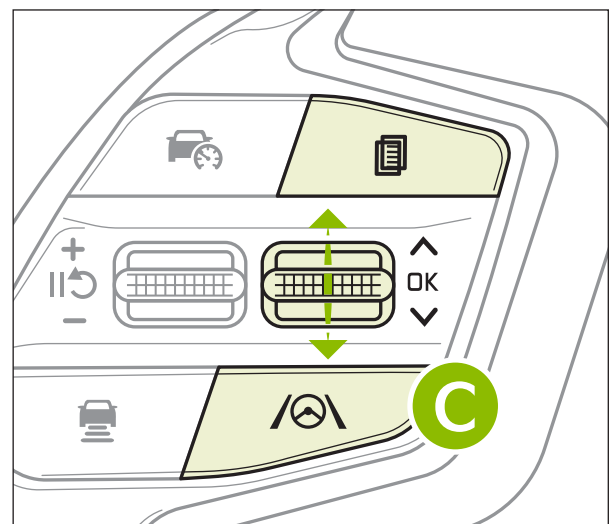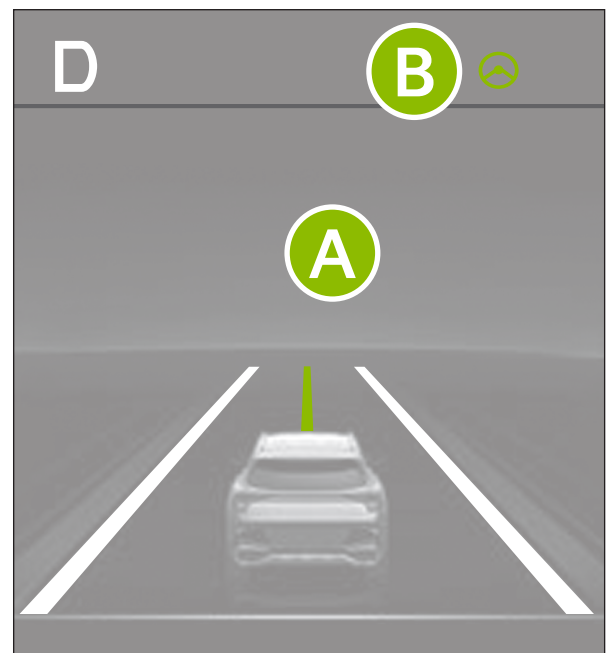

(Buttons located on steering wheel)

[Continued on next page](#)

*LFA is a supplemental system. Do not solely rely on LFA and always pay attention to the road and its conditions. Images are for illustrative purposes only and may not reflect actual feature or operation. See Section 7 in the Owner's Manual for more detailed information.*



# Lane Following Assist (LFA)<sup>\*†4</sup>

[Continued from previous page](#)

### QUICK TIPS

- The Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings\* on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume
- Adjusting the Warning Volume will adjust settings for other driver assistance systems

**REMINDER:** LFA is not a substitute for safe and proper driving. Always drive safely and use caution.

*LFA is a supplemental system. Do not solely rely on LFA and always pay attention to the road and its conditions.*

*Actual User Settings steps may vary by model. See Section 7 in the Owner's Manual for more detailed information, limitations and conditions.*



 
## Highway Driving Assist 2 (HDA2)\*†4

While driving on a highway, Highway Driving Assist 2 is designed to help detect lanes and vehicles ahead, maintain the distance from the vehicle ahead, maintain the set speed, and center the vehicle in the lane.

The Highway Lane Change Assist function is designed to help change lanes to the direction of the turn signal if the function determines that lane change is possible.

When HDA is activated and the conditions are met, the HDA indicator **A** will illuminate green. If proper conditions are not met, HDA will be in standby mode and the indicator light **A** will illuminate gray.

When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **B**.

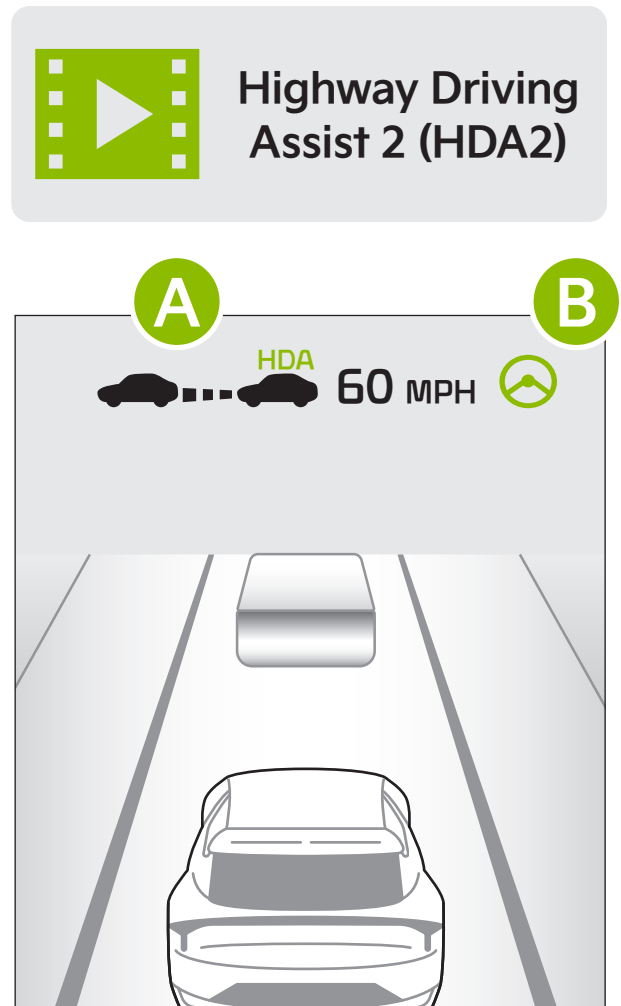

[Continued on next page](#)

*Images are for illustrative purposes only.*

*See Section 7 in the Owner's Manual for more detailed information, limitations and conditions.*

*When engaged, HDA2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.*



# Highway Driving Assist 2 (HDA2)<sup>\*†4</sup>

[Continued from previous page](#)

### HDA User Settings:

To enable HDA, access settings through the **Vehicle Settings\*** in the Infotainment

**System** - Press the **SETUP** key, then press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Convenience and then Highway Driving Assist.



Highway Driving Assist 2 (HDA2)

### HDA will operate when these conditions are met:

- Driving on the main road of highways, and turning on Highway Driving Assist by pressing the Driving Assist button
- Entering the main road of highways while Lane Following Assist and Smart Cruise Control are operating

**REMINDER:** When the vehicle is turned off, the system returns to its previous state, on or off.

*When engaged, HDA2 is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.*

*See Section 7 in the Owner's Manual for more detailed information, limitations and conditions.*

 


### Rear View Monitor (RVM)<sup>†4</sup>

Rear View Monitor displays the area behind the vehicle to assist when parking or backing up.

#### The Rear View Monitor activates when the:

- POWER button is in the ON/READY position
- Rotary Dial Shifter Knob is in the R (Reverse) position

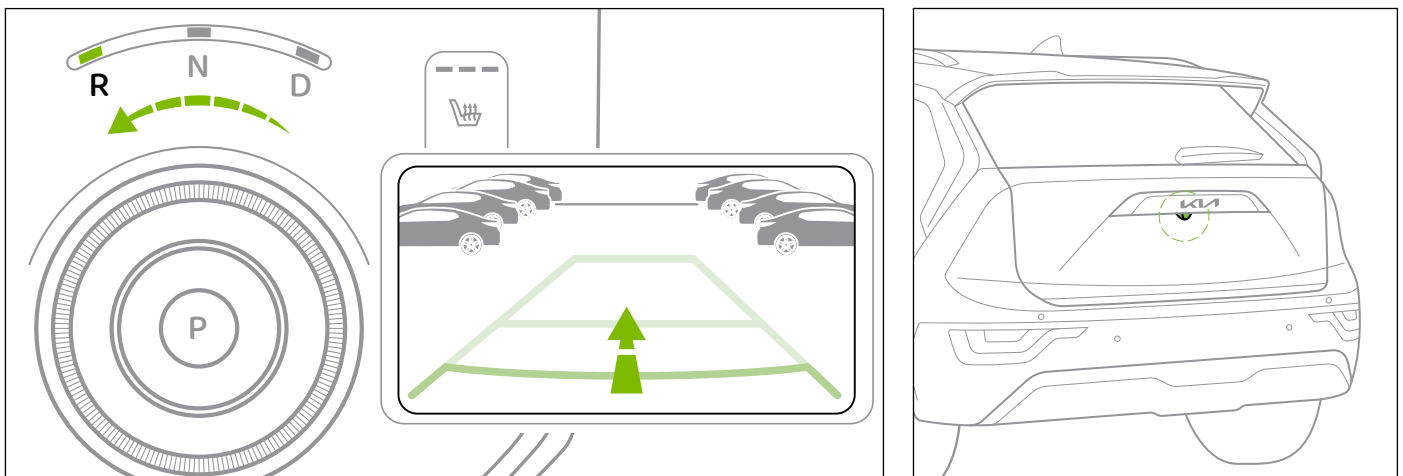

**REMINDER:** While camera is active, only the Audio System can be operated on the Steering Wheel and Infotainment System. All other features are disabled.

*Images are for illustrative purposes only and may not reflect actual operation.*

*Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.*

*Refer to Section 7 in the Owner's Manual for more information.*





## Safe Exit Warning (SEW)<sup>†4</sup>

 
 
While the vehicle is stopped, and if Safe Exit Warning detects a vehicle approaching the rear corner of the vehicle and the driver or passenger opens a door, SEW may warn the driver with a message and sound a warning to help avoid a collision.



**Safe Exit Warning (SEW)**

### SEW Settings:

- SEW can be turned on/off by going to the User Settings\* in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button\* is in the on position
- **To access User settings\* in the Instrument Cluster** - Press the Mode button  **A** on the Steering Wheel to toggle to User Settings . Press the OK button **B** up/down to toggle to Driver Assistance, Driving Safety, then Exit Safety
- **To access Vehicle settings\* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Exit Safety

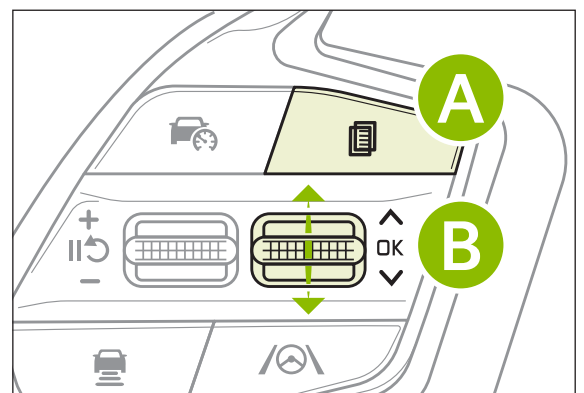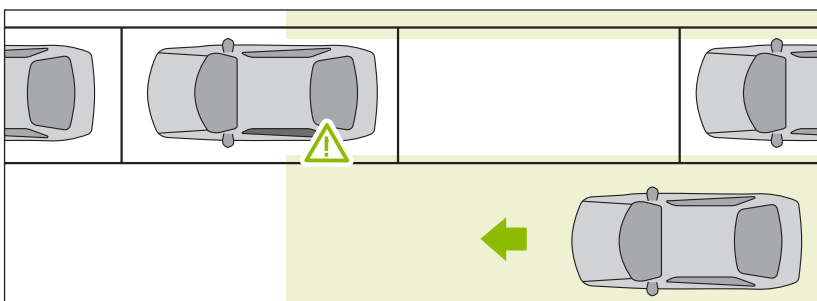

(Buttons located on steering wheel)

**REMINDER:** The setup of SEW will be maintained, as selected, when the ignition is cycled.

*Images are for illustrative purposes only.*

*When engaged, SEW is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle. Refer to Section 7 in the Owner's Manual for more information.*





## Remote Smart Parking Assist (RSPA)\*†4

 
Remote Smart Parking Assist is designed to use the vehicle sensors to help park and exit parking spaces remotely from inside or outside the vehicle.



**Remote Smart  
Parking Assist  
(RSPA)**

### To park with Smart Parking (from inside the vehicle):

- Press and hold the Parking/View button **A** to turn on Remote Smart Parking Assist
- Drive until you find your preferred parking spot, and come to a complete stop
- Operating instructions will be displayed on the Infotainment System screen
- Take your hands off the steering wheel to allow RSPA to operate
- Then press and hold the Parking/View button **A** for RSPA to operate and park the vehicle - hold the button until the vehicle has finished parking. The transmission will automatically shift into Park and the parking brake will be engaged

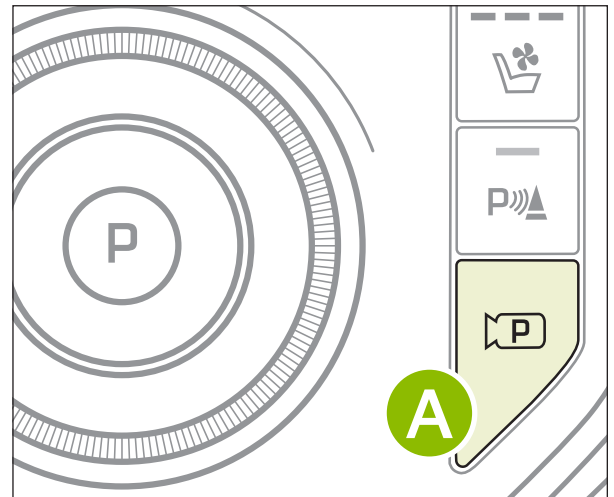

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 7 in the Owner's Manual for more information.*





## Remote Smart Parking Assist (RSPA)\*†4

 
 
 
[Continued from previous page](#)

To park and exit with Remote Parking Assist (from outside the vehicle), you will use the Smart Key:

- While in the vehicle, with the vehicle stopped in front of the parking space, vehicle aligned, and the transmission in Park, press and hold the Parking/View button **A**. Select REMOTE on the Infotainment System screen. When the message UNDER REMOTE CONTROL appears, exit the vehicle with the Smart Key on hand. Ensure all doors are closed
- The emergency lights will blink when the system is ready to be activated
- Press and hold either the Forward **B** or Backward **C** button on the Smart Key, depending on how you want to park, and the vehicle will move in the direction of whichever button you press



Remote Smart Parking Assist (RSPA)

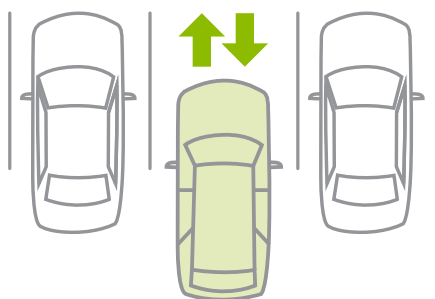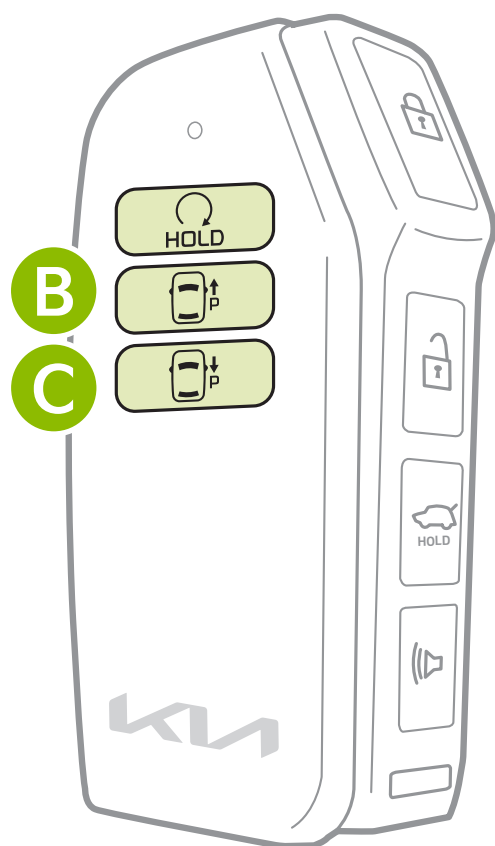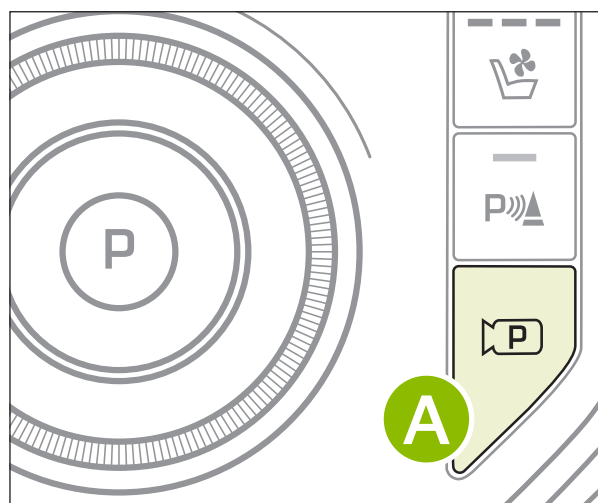

Remotely moving forward or backward

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.




# Remote Smart Parking Assist (RSPA)\*†4

 [Continued from previous page](#)

### REMINDERS:

- Remote Smart Parking Assist will only operate if you are within 13 feet of the vehicle, with the Smart Key in your possession
- Remote Smart Parking Assist will not function when:
  - There is a parking space open, with a vehicle on one side only
  - When trying to park in a diagonal space
  - When the parking space is too narrow or near a wall

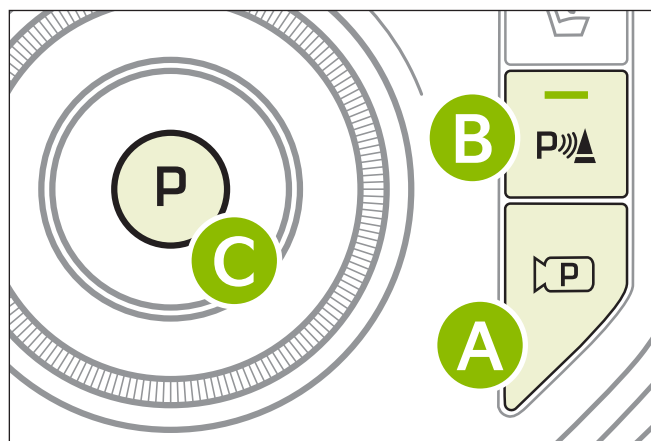

To turn off RSPA at any point while it's operating, press the Parking/View button **A** or Parking Safety button **B**, press the Park button on the Rotary Dial Shifter **C** or press the Remote Start button **D** on the Smart Key.

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME
- Adjusting the Warning Volume will adjust settings for other driver assistance systems



*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*



## Reverse Parking Collision-Avoidance Assist (PCA)<sup>†4</sup>

Reverse Parking Collision-Avoidance Assist is designed to detect pedestrians or objects behind the vehicle and may warn the driver or assist with braking to help avoid a collision while the vehicle is backing up. When Reverse Parking Collision Avoidance Assist activates, a line appears behind the vehicle image **A** on the Instrument Cluster.

 
### PCA User Settings:

To turn PCA on, press the SETUP key/button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY. Select:

- **Rear Safety** - PCA will sound an alert and may apply temporary braking

### REMINDERS:

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING
- Adjusting the Warning Volume will adjust settings for other driver assistance systems

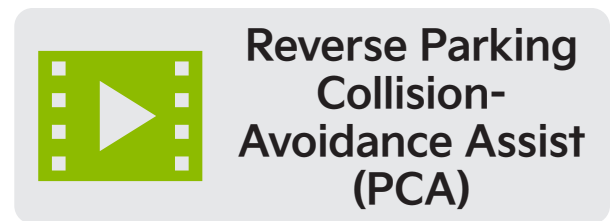

(Message on Cluster Display)

*Reverse Parking Collision-Avoidance Assist (PCA) is not a substitute for safe driving practices and may not detect all objects surrounding the vehicle. Always drive safely and use caution.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 7 in the Owner's Manual for more information.*



## Forward/Reverse Parking Distance Warning (PDW)\*†4

 
### Forward/Reverse Parking Distance

Warning (PDW) is a supplemental system that is designed to warn the driver by chiming if an object is detected within the sensing area to the front and rear of the vehicle when moving forward or backing up.



**Forward/Reverse  
Parking Distance  
Warning (PDW)**

- To turn PDW on, press the Parking Safety button **A** (LED illuminated).  
To turn PDW off, press again **A** (LED not illuminated)
- PDW will activate when the ignition is on/ready and the vehicle is in D (Drive) or R (Reverse)
- **Parking Distance Warning Auto On** - To set the parking distance warning to be on at low speeds, enable it in the User Settings\* in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System

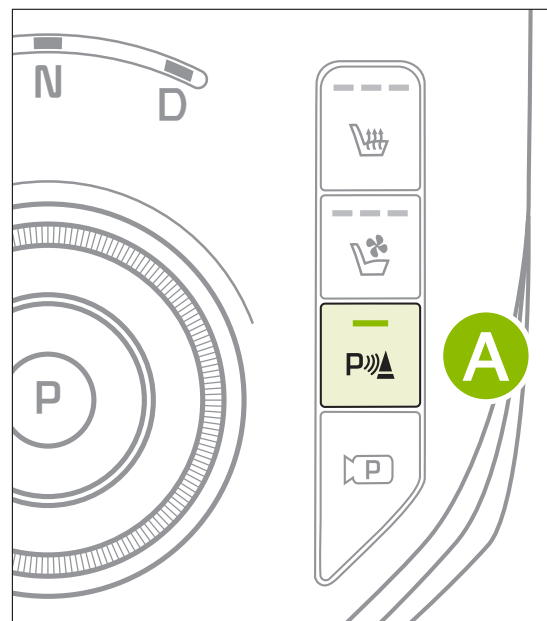

[Continued on next page](#)



*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 7 in the Owner's Manual for more information.*




## Forward/Reverse Parking Distance Warning (PDW)<sup>\*†4</sup>

 [Continued from previous page](#)

- To enable in User settings\* in the Instrument Cluster - Press the MODE button  **A** on the Steering Wheel to toggle to User Settings . Press the OK button **B** up/down to toggle to Driver Assistance, then Parking Safety, and select Parking Distance Warning Auto On
- To enable in Vehicle settings\* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Parking Distance Warning Auto On



Forward/Reverse Parking Distance Warning (PDW)

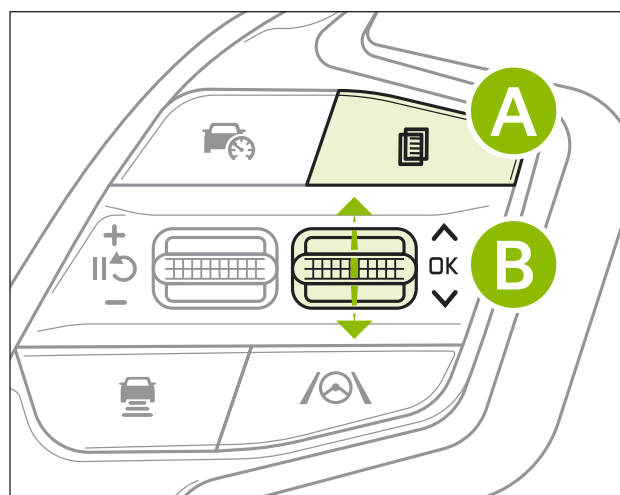

(Buttons located on steering wheel)

### QUICK TIPS

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME
- Adjusting the Warning Volume will adjust settings for other driver assistance systems

### REMINDERS:

- If the vehicle is moving at speeds over 6 mph, PDW does not operate
- When more than two objects are sensed at the same time, the closest one will be recognized first



*PDW is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.*

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 7 in the Owner's Manual for more information.*



## Rear Cross-traffic Collision-Avoidance Assist (RCCA)<sup>†4</sup>

  Rear Cross-traffic Collision-Avoidance Assist is designed to detect vehicles approaching from the rear left or right while the vehicle is backing up. RCCA may warn the driver of a possible collision with a warning message and a warning sound. Also, RCCA may assist with braking to help avoid a collision. When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

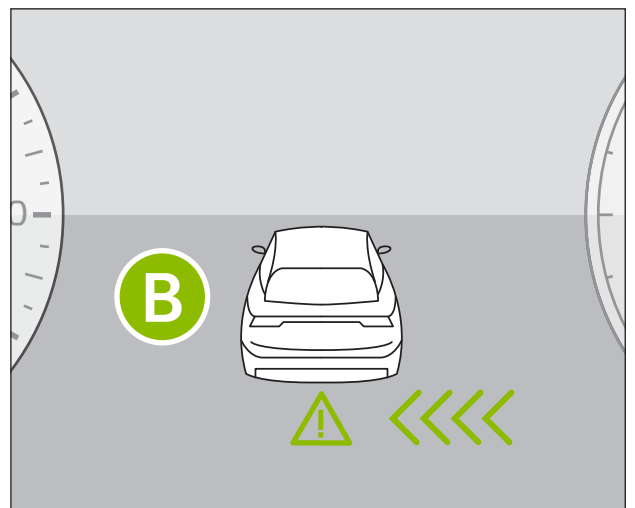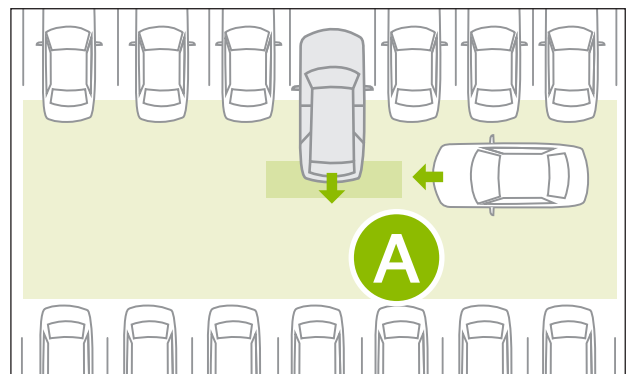

### RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

[Continued on next page](#)

*When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*

*Images are for illustration purposes only and may not reflect actual operation.*

*Refer to Section 7 in the Owner's Manual for more information.*







 


# Rear Cross-traffic Collision-Avoidance Assist (RCCA)<sup>†4</sup>

[Continued from previous page](#)

### RCCA Settings:

- RCCA can be turned on/off by going to the User Settings\*  in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Power button in the on position
- **To access User settings\*  in the Instrument Cluster** - Press the MODE button  **A** on the Steering Wheel to toggle to User Settings  Press the OK **B** up/down to toggle to Driver Assistance, then Parking Safety. Select Rear Cross-traffic Safety and press the OK button **B**
- **To access Vehicle settings\* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross-traffic Safety

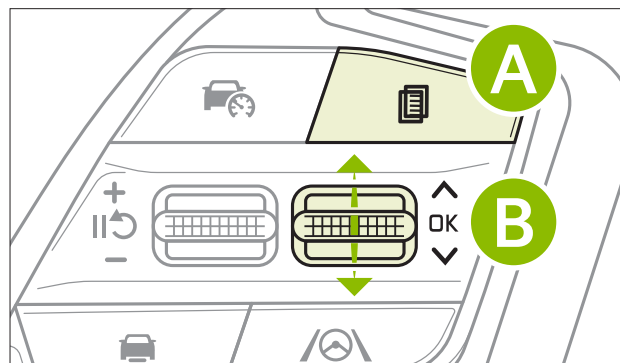

(Buttons located on steering wheel)

### QUICK TIP

- To adjust the WARNING VOLUME: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn HAPTIC WARNING on or off
- Adjusting the Warning Volume will adjust settings for other driver assistance systems

### REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

*When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.*


*Images are for illustration purposes only and may not reflect actual operation. Refer to Section 7 in the Owner's Manual for more information.*





# Instrument Cluster Control

 Press switch **A** up or down to adjust display brightness of the Instrument Panel illumination.

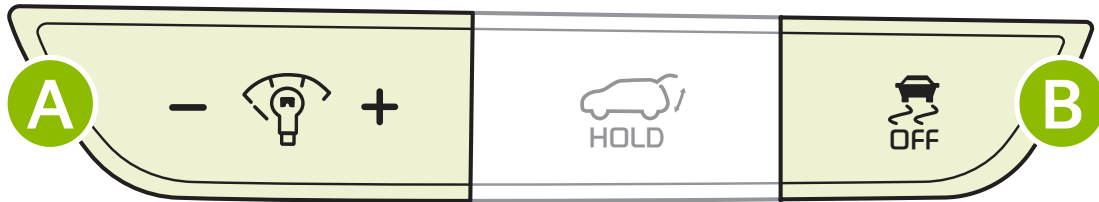

*(Buttons are located left of the Steering Wheel)*


## Electronic Stability Control (ESC)<sup>†6</sup>

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep ESC turned ON whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

### REMINDERS:

- ESC is active by default at vehicle startup
- The ESC Indicator Light  in the Instrument Cluster will illuminate whenever the ESC is in operation

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to Section 6 in the Owner's Manual for more information.*



# Hill-start Assist Control (HAC)<sup>†6</sup>

The HAC system is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC system automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

### QUICK TIPS

- When HAC is active (e.g. accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a two-second delay before the vehicle may start rolling backward

### REMINDERS:

- The HAC system does not operate when the Rotary Dial Shifter Knob is in the P (Park) or the N (Neutral) position
- In the event of an HAC system malfunction, see an Authorized Kia Dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

*Refer to Section 6 in the Owner's Manual for more information.*



 
# Power Button<sup>†10</sup>

### To start the vehicle:


1. Depress the brake pedal
2. Press the Power button while the gear shift is in Park or Neutral

To turn the vehicle power OFF, press the POWER button.

To use the POWER button, you must have the Smart Key fob on your person.

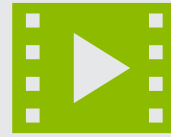

EV Power Button

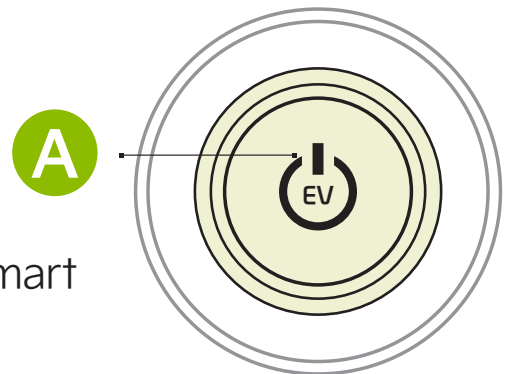 

## QUICK TIPS

- To use electrical accessories:

### ACC position

- When in the OFF position and without depressing the brake pedal, press the POWER button once (amber light **A**)

### ON position

- When already in the ACC position (amber light **A**) and without depressing the brake pedal, press the POWER button again (red light **A**)
- When in the OFF position (not illuminated) and without depressing the brake pedal, press the POWER button twice (red light **A**)

## REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the vehicle off and to the ACC position by pressing the POWER button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the POWER button (Lock button side closest) and press to start vehicle
- Do not turn the vehicle off by pushing the POWER button while the vehicle is in motion. If the vehicle has been turned off the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to Section 6 in the Owner's Manual for more information.*



# Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down\*

 
### QUICK TIP

- Press the button again to stop Auto Up/Down function.

- B** Press to Unlock/Lock All Doors
- C** Press to disable rear passenger window controls and rear door handle operation

### QUICK TIPS

- While driving with the rear windows down or with the sunroof\* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

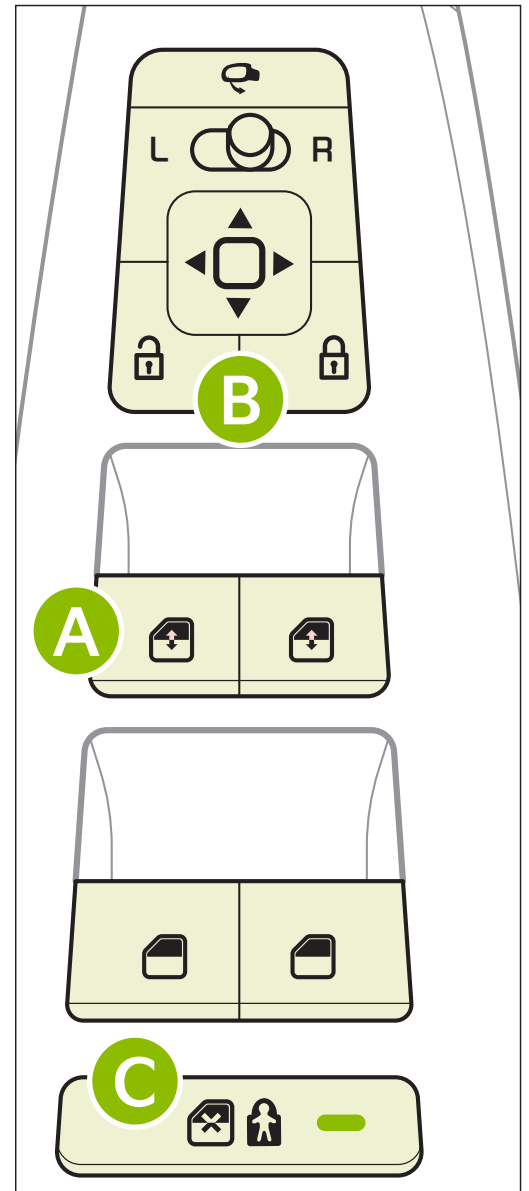

### REMINDERS:

- When pressed **C**, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

*Button configuration may vary depending on vehicle model. Refer to Section 5 in the Owner's Manual for more information.*



### Automatic Door Lock

Auto Door Lock will engage when the Rotary Dial Shifter Knob is moved into or out of the **P** (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

### Heated Outside Mirrors

 
Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button\* is located on climate control system panel.

### Manual Folding Mirrors\*

To fold the mirrors in manually, pull the mirror towards the window.

#### QUICK TIP

- If needed, pull the mirror firmly until it folds.

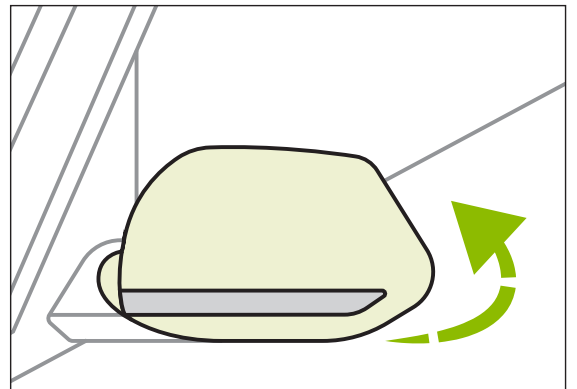

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

*Refer to Section 5 in the Owner's Manual for more information.*




# Power Folding Outside Mirrors\*

 Press L or R buttons **A** (left or right) to select mirrors. Then press arrows **B** to adjust mirror position.

To fold and unfold both the outside rearview mirrors, press the folding mirror button **C** as pictured:

- **Left** – The mirrors will unfold
- **Right** – The mirrors will fold
- **Center** – The mirrors will fold/unfold automatically when doors are locked/unlocked with the Smart Key or a door handle button is pressed. Also, the mirrors will unfold when approaching the vehicle with the Smart Key fob in proximity

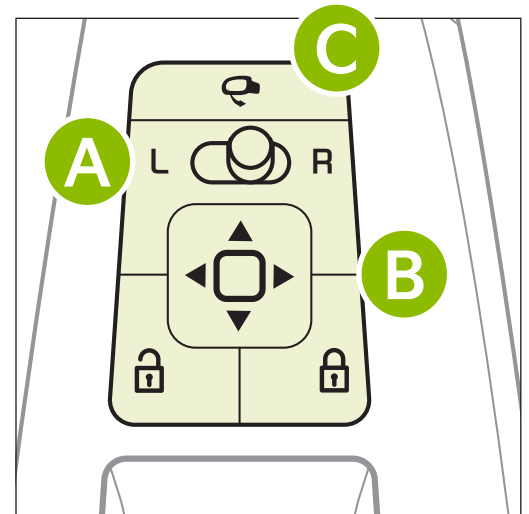

### QUICK TIP

- To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key.

### REMINDER:

- To lock position of mirrors, toggle switch to the neutral (center) position.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

 
*Refer to Section 5 in the Owner's Manual for more information.*



## Headlights & High Beams

### To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

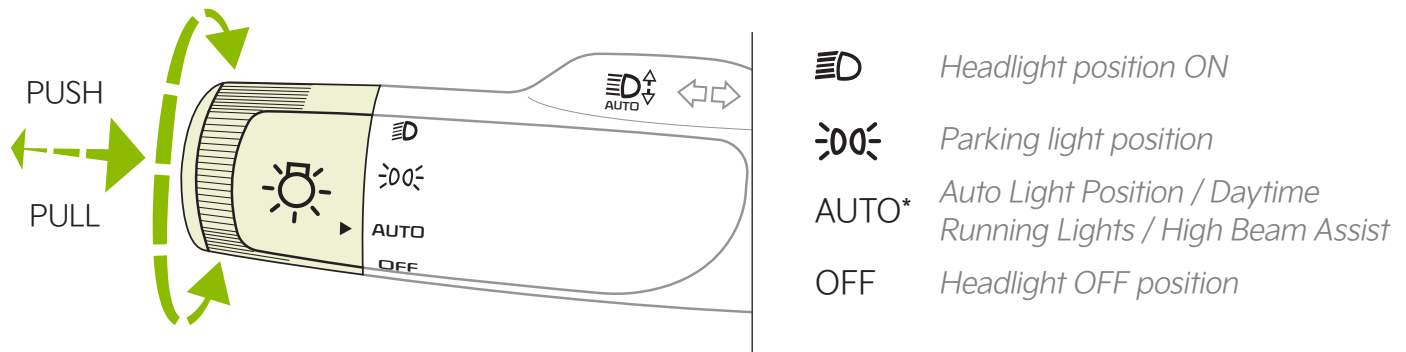

**AUTO Light position** - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

**Daytime Running Lights (DRL)** - DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Power button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Power is turned off

### REMINDERS:

- DRL only operates during the daytime
- The DRL system turns off when the headlights are ON, parking brake is applied or the front fog lights are turned on

Refer to Section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.





### High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.



**High Beam Assist  
(HBA)**

When switch is in the AUTO position and the vehicle's ignition or the Power button is on, the High Beam Assist will operate. To turn HBA off, change the switch setting.

#### REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle while using the high beams
- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

*Refer to Section 5 in the Owner's Manual for more information.*



 
### Turn Signals & Fog Lights\*

To operate:

**Turn Signals** - Move lever Up/Down for Right/Left Turn Signal

**One-touch lane change signal** is activated by briefly pressing the Turn Signal Lever slightly up or down for less than 1 second and then releasing. The lane change signal will blink 3-7 times.

To change how many times (3/5/7 times) the Lane Change Signal blinks, go to User Settings\* in the Instrument Cluster.

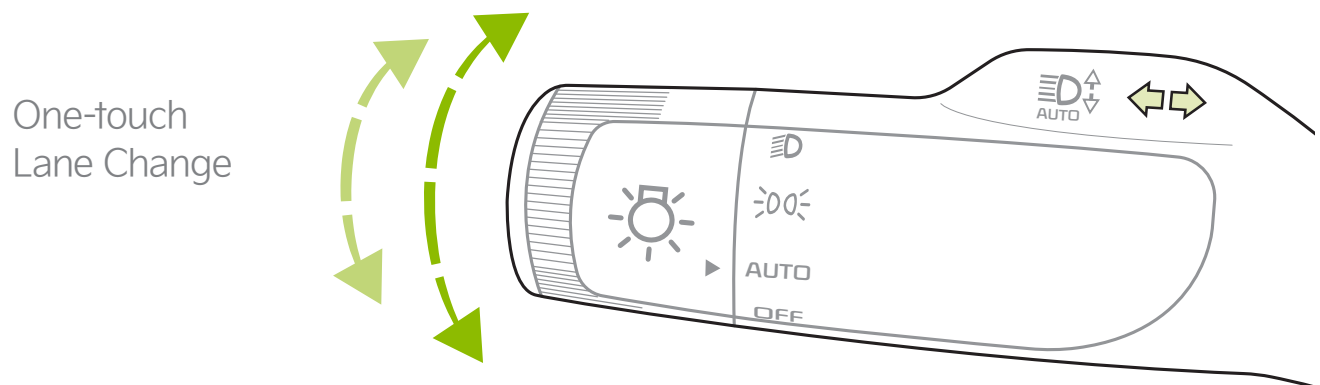

#### REMINDER:

- Headlights must be in the ON/AUTO position for Fog Light operation.

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*

 
*Refer to Section 5 in the Owner's Manual for more information.*




### Tilt/Telescoping Steering Wheel<sup>†19</sup>

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock the Steering Wheel in place.

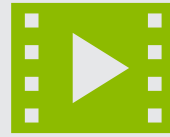

 **Tilt/Telescoping/  
Heated Steering  
Wheel**

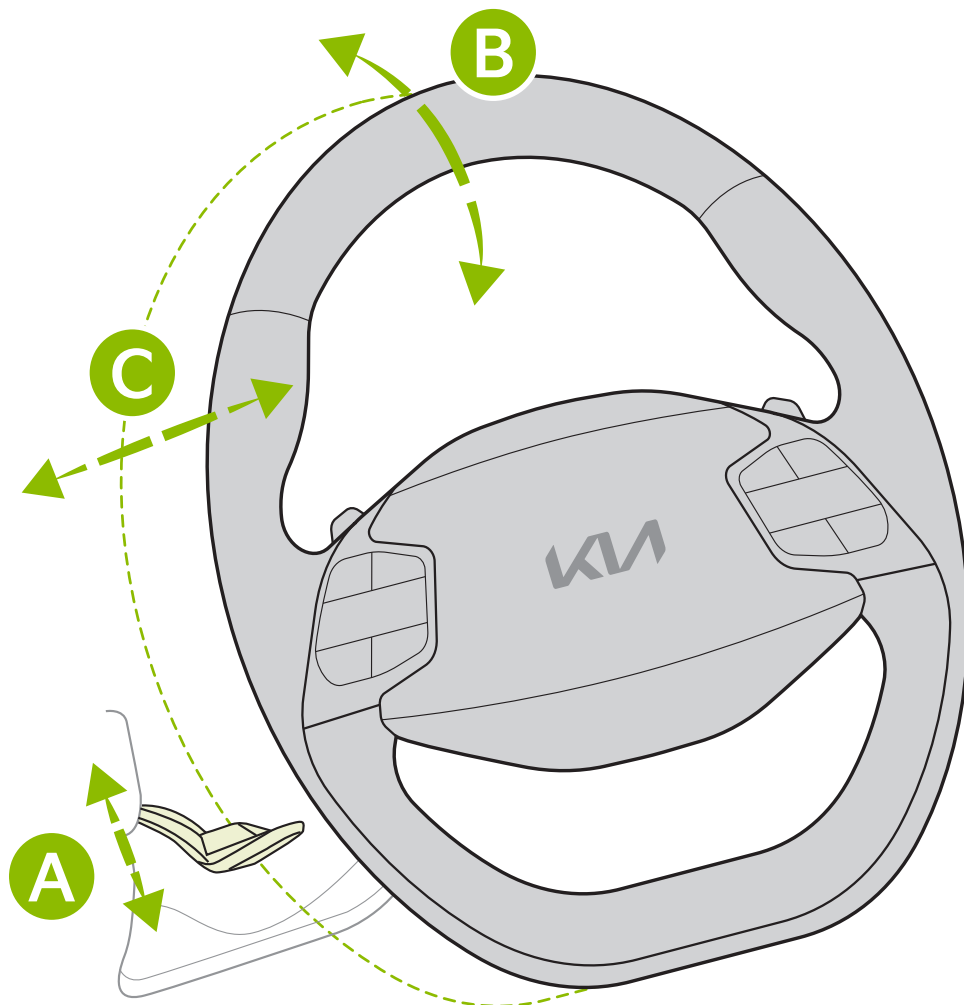

#### QUICK TIP

- It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.*

*Refer to Section 5 in the Owner's Manual for more information.*



 
## Windshield/Rear Wipers & Washers

### To operate Windshield Wipers and Washers:

- Move lever Up/Down **A** to change front Wiper modes
- Press switch **B** Up (fast) / Down (slow) to adjust Intermittent Wipe Speed
- Pull lever **C** to spray and wipe front windshield
- Push lever **D** to spray and wipe rear glass



**Wipers and Wiper Stalk**

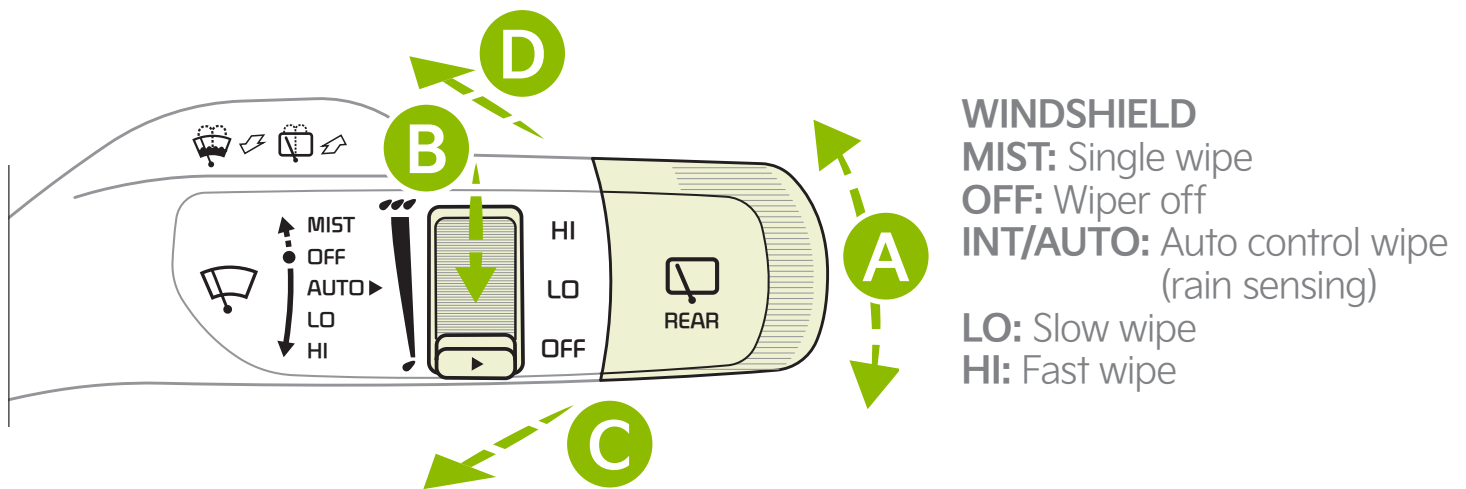

**WINDSHIELD**  
**MIST:** Single wipe  
**OFF:** Wiper off  
**INT/AUTO:** Auto control wipe (rain sensing)  
**LO:** Slow wipe  
**HI:** Fast wipe

### Rain Sensing (Auto Control Wipe):

- The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops
- To vary the speed setting, press the Wiper Switch **B** up/down
- If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system

[\*Continued on next page\*](#)

*Images are for illustrative purposes only.*

*Refer to Section 5 in the Owner's Manual for more information.*



 
## STEERING WHEEL CONTROLS

# Windshield/Rear Wipers & Washers

[Continued from previous page](#)

### To operate Rear Wiper & Washer:

- Rotate Rear Wiper switch **A** LO - Intermittent / HI - Continuous to change Wiper modes
- Push lever **B** to spray and wipe

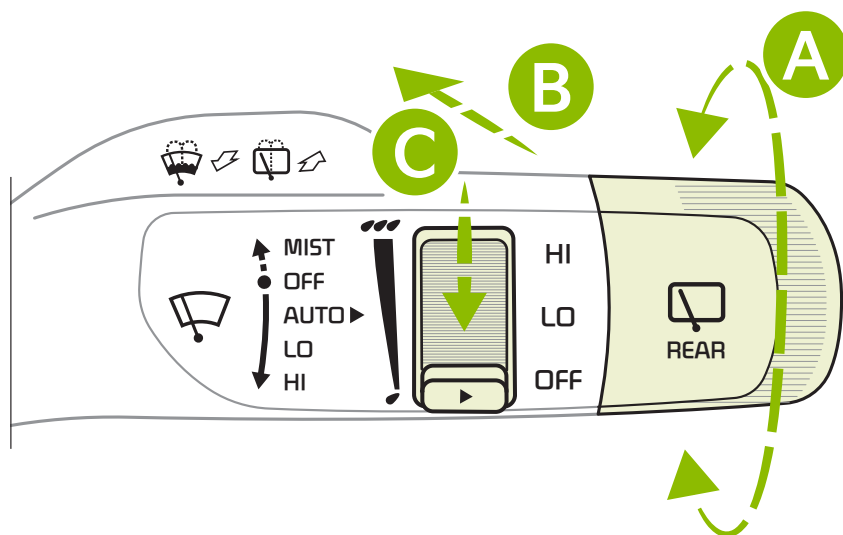

#### WINDSHIELD

**MIST:** Single wipe

**OFF:** Wiper off

**INT/AUTO:** Auto control wipe (rain sensing)

**LO:** Slow wipe

**HI:** Fast wipe

### QUICK TIPS

- Pressing switch **C** up increases Intermittent wipe frequency and wipe speed. Pressing switch **C** down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use
- On Rear Wipers, the intermittent wipe function only has one speed and is not adjustable

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 5 in the Owner's Manual for more information.*



## Bluetooth® Wireless Technology<sup>† 3,17</sup>

 
**A Volume button:** Press up/down to raise/lower speaker volume  
Mute button: Push to mute the microphone during a call

**B Voice Recognition button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition. When enrolled with a Kia Connect<sup>†1</sup> subscription, press this button to activate the Kia Connect Assist to use navigation guidance and search destinations

**C Call/End Call button:** Press to receive/place calls. In vehicles with navigation, if no phone is paired, press button to pair a phone



Steering Wheel Controls

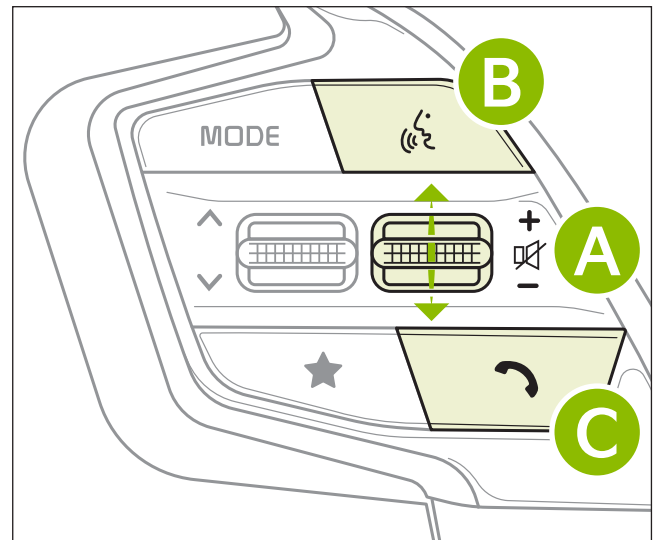

(Type B shown)

### QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- When using the voice command feature, wait for the system to BEEP before speaking the command
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple Bluetooth® devices. See the Car Multimedia System User's Manual for more information on setup and limitations

[Continued on next page](#)

Images are for illustrative purposes only.

Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device (sold separately).

# Bluetooth® Wireless Technology† 3,17

[Continued from previous page](#)

 
## Pairing a Phone:

For instructions on how to pair a phone, refer to the Car Multimedia System User’s Manual or your vehicle’s Quick Start Guide.

## How to Place a Call:

There are two options for placing a call:

- **Option 1:** Press the Call/End Call button **A** (displays the phone screen with call history)
- **Option 2:** Press the Voice Recognition button **B**. Then say the command “Call {name}” or “Dial {number}” followed by contact name or number

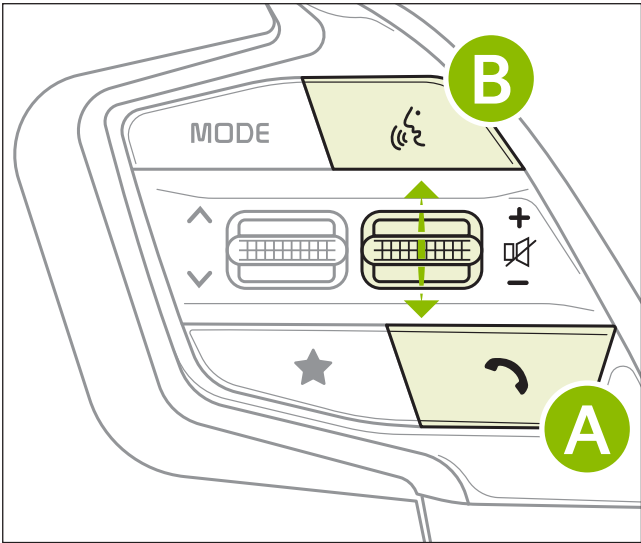

QUICK TIPS

- During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future *Bluetooth®* connection requests.
- When using the voice command feature, wait for the system to BEEP before speaking the command.

[Continued on next page](#)

*Bluetooth® wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device (sold separately).*

*Your vehicle’s steering wheel buttons may differ from those in the illustrations. See your Owner’s Manual for more details.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), Owners Section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner’s Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.*

†LEGAL DISCLAIMERS ON [PAGE 145](#) | \*IF EQUIPPED



Bluetooth® Wireless Technology† 3,17

[Continued from previous page](#)

Voice Recognition & Phone Contact Tips



Voice Recognition  
Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (e.g., “John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (e.g., @, &, #, /, -, \*, +, etc.)
- Avoid using acronyms (e.g., “In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (e.g., “Doctor Smith” vs. “Dr. Smith”)

QUICK TIPS

- Bluetooth® Music Streaming - If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and turn off A/C - Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the Voice Recognition button and say “Help” to get a list of available commands
- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

†LEGAL DISCLAIMERS ON [PAGE 145](#) | \*IF EQUIPPED



## Audio Controls<sup>†17</sup>

**A Audio MODE button:** Press to cycle through FM/AM/SiriusXM®/Media modes

**B Seek/Preset button:**  
FM/AM/SiriusXM® Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek

**Media Mode:** Press up/down to move Track Up/Down. Press & hold up/down to fast forward/rewind (except for *Bluetooth*® Audio)

**C Volume button:** Press up/down to raise/lower volume

**Mute button:** Press to mute/unmute all audio (Media pauses in some Media modes when pressed)

 
**D Custom button ★:** Press to access user-selected feature. Press and hold the button to select one of the features available



Steering Wheel Controls



Star, Favorite & Radio Presets Buttons

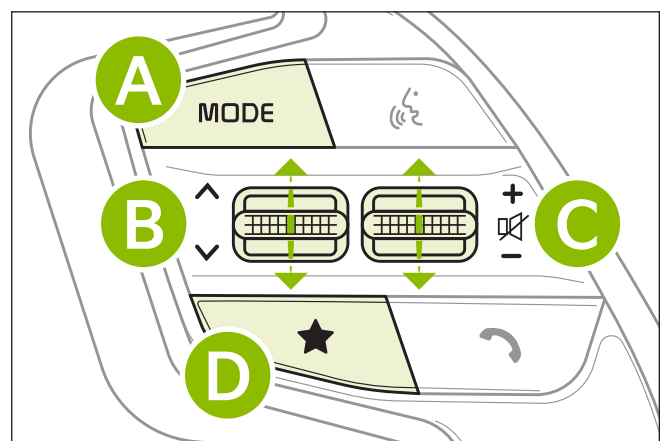

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.*

*Your vehicle's steering wheel buttons may differ from those in the illustrations. See Section 5 in the Owner's Manual or the Car Infotainment System Quick Reference Guide. For further audio system operation, refer to pages 88-103.*



## Android Auto™ Setup<sup>† 3</sup>

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

### Cable Connection setup for Android Auto™ :

1. Press the SETUP key on the Infotainment System
2. Press DEVICE CONNECTIONS, PHONE PROJECTION SETTINGS, select Android Auto™ and then select ENABLE ANDROID AUTO™. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the Infotainment System screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

### QUICK TIPS

- If Android Auto™ randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer.
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the phone manufacturer's website for Android Auto™ app concerns

[Continued on next page](#)

Android Auto and Apple CarPlay run on your smartphone cellular data service. Normal data rates will apply.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.



# Android Auto™ Setup<sup>†3</sup>

[\*Continued from previous page\*](#)

### REMINDERS:

- Android Auto™ compatibility requirements for connection:
  - USB cable connection only: OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

*Android Auto and Apple CarPlay run on your smartphone cellular data service. Normal data rates will apply.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to Section 5 in your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.*



## Apple CarPlay® Setup<sup>†3</sup>

### Cable Connection setup for Apple CarPlay®:

1. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
2. Press the SETUP key on the Infotainment System
3. Press DEVICE CONNECTIONS, PHONE PROJECTION SETTINGS, select Apple CarPlay® and then select Enable Apple CarPlay®
4. Select ENABLE APPLE CARPLAY®. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the audio head unit home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

### QUICK TIPS

- If Apple CarPlay® randomly disconnects:
  - Ensure the USB cable is certified by the phone manufacturer for both power and data
  - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer.
  - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
  - Visit the phone manufacturer's website for Apple CarPlay® app concerns

[Continued on next page](#)

*Android Auto and Apple CarPlay run on your smartphone cellular data service. Normal data rates will apply.*

*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*Refer to the Car Infotainment System Quick Reference Guide for more information.*

*iPhone is a registered trademark of Apple Inc.*



# Apple CarPlay® Setup<sup>†3</sup>

[\*Continued from previous page\*](#)

### REMINDERS:

- Apple CarPlay® compatibility requirements for connection:
  - USB cable connection only: iOS® software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release

*Android Auto and Apple CarPlay run on your smartphone cellular data service. Normal data rates will apply.*

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.*

*For Bluetooth® Wireless Technology FAQs, go to [www.kia.com](http://www.kia.com), or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to Section 7 in your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.*

*iPhone is a registered trademark of Apple Inc.*



## Kia Connect Activation<sup>\*†1</sup>

Follow these steps to activate your Kia Connect on your Infotainment System:

1. Enter the activation screen on your Infotainment System:
  - a. Press the **SETUP** key
  - b. Press the Kia Connect icon
  - c. Press Activate
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter number or email address to receive a verification code, then press SUBMIT
4. Click on the link and a page will open requesting you to create an account
5. Provide the information needed and select SAVE to create the account
6. A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
7. On your phone, select I HAVE ENTERED MY VERIFICATION CODE and a link will be provided to download the Kia Access App. After installing the app, log in and enjoy



**Kia Connect  
Activation**



**Kia Connect & Kia  
Access app**

**Note:** If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code.

*For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide. Kia Connect may be unavailable for model year 2022 vehicles sold or purchased in Massachusetts.*

 





## Kia Connect Assistance<sup>\*†1</sup>

**Kia Connect** **A** - Press to connect to the Kia Connect Call Center

**Roadside Assist**  **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services.

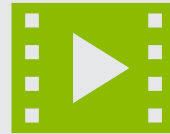

**Kia Connect Assistance**

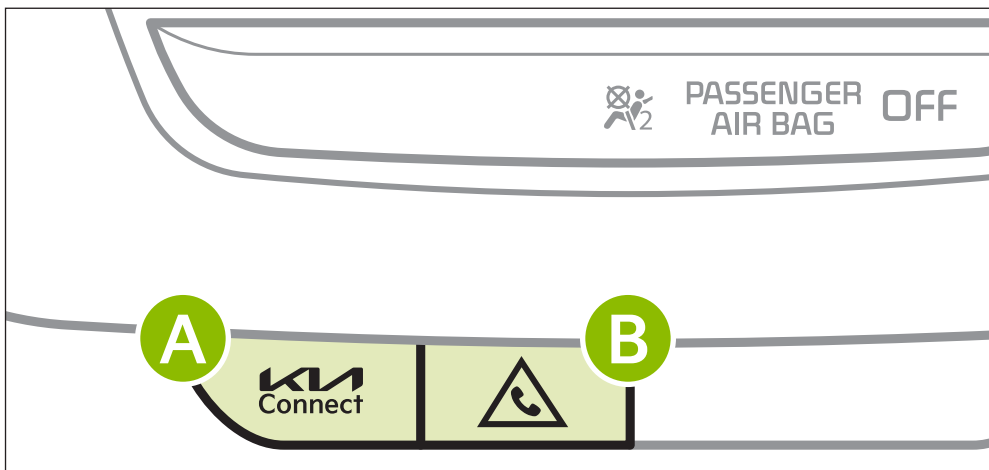 

(Buttons on overhead console\*)

### REMINDER:

- These buttons may be located in the rearview mirror or the overhead console.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

 
*Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.*

*For further Kia Connect link operation, refer to the Car Infotainment System Quick Reference Guide. For further audio system operations, refer to pages 89-104.*



# Kia Connect w/ Navigation Infotainment System<sup>†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

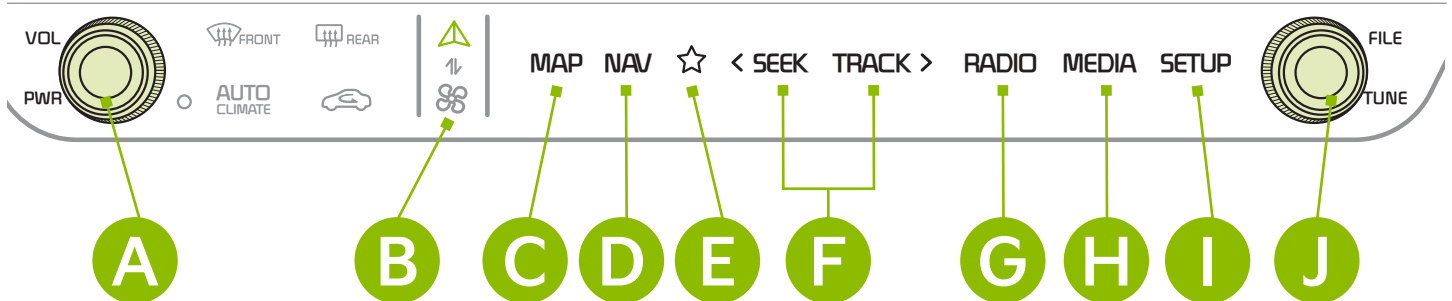

- A** Press to Power ON/OFF. Rotate to adjust Volume
- B** Infotainment System / Climate Control mode switching button
- C** Press to display the Map screen for the current position/Voice mode
- D** Press to display the Nav screen
- E** Press to go to Custom (Set) Menu
- F** Press briefly to do the following:
  - FM/AM mode: Play the previous/next frequency
  - SiriusXM<sup>®</sup> mode: Change the channel
  - MEDIA mode: Change the track, file or title (except for AUX)Press and hold to do the following (over 0.8 seconds):
  - FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
  - MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*<sup>®</sup> Audio)
- G** Press to change Radio/SiriusXM<sup>®\*</sup> Station mode
- H** Press to select MEDIA mode
- I** Press to display SETUP/Settings mode
- J** In Radio/SiriusXM<sup>®</sup>/ Media modes, rotate knob to search for stations/channels/tracks/songs/files

[\*Continued on next page\*](#)

*Images are for illustrative purposes only.*




# Kia Connect w/ Navigation Infotainment System<sup>†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

 
[Continued from previous page](#)

**Switchable Controller:** Press the Infotainment/climate control mode switching button **A** to toggle between Infotainment System and Climate Control Modes. Press and hold the Infotainment/climate control mode switching button **A** to set the default button display mode.

**Sound Settings:** To adjust the sound settings, Press the **SETUP** key on the Infotainment System. Select the onscreen SOUND button, then select the menu item. Use the onscreen buttons to adjust settings. Press the return button  to save settings.


**Radio Presets:** To save a Preset, press and ADD STATION. This saves the current station to the bottom of the presets list.

**SiriusXM<sup>®</sup> Smart Favorites:** In Radio mode, choose SiriusXM<sup>®</sup>, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

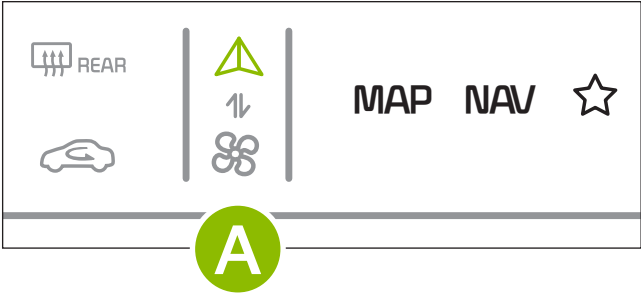




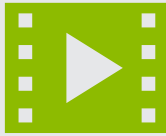
AC & Infotainment System - Switchable Controller

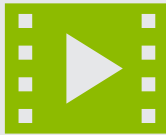

EV Kia Connect with Navigation



Kia Connect with Navigation



Infotainment System Driver Profiles

[Continued on next page](#)

Images are for illustrative purposes only.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 145](#) | <sup>\*</sup>IF EQUIPPED



## Kia Connect w/ Navigation Infotainment System<sup>†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

[Continued from previous page](#)

**Custom Key** ☆: To program, press and hold the Custom Button. Select one of the available features you would like the Custom Button to open.



**Navigation System  
Important Tips**

### QUICK TIPS

- Volume level between different audio modes:
  - When switching between audio modes (AM, FM, *Bluetooth*<sup>®</sup> Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*<sup>®</sup> Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
  - When using *Bluetooth*<sup>®</sup> Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ **USB connection only** and Apple CarPlay® **USB connection only**
- At any time, you can interrupt Command Feedback by pressing the Voice Recognition button

[Continued on next page](#)



# Kia Connect w/ Navigation Infotainment System<sup>†1,8</sup>

- FM/AM/SiriusXM<sup>®†16</sup>/Media (USB, *Bluetooth*<sup>®†3</sup> Audio)

[\*Continued from previous page\*](#)

### QUICK TIPS

- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio system in ACC mode may drain the vehicle's battery

*Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.*

*Kia Connect is currently unavailable for model year 2022 or later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at [owners.kia.com](https://owners.kia.com) for more information. For further operational information, refer to the Car Infotainment System Quick Reference Guide.*



## Kia Access App<sup>†2</sup> Download

Go to an app marketplace to download the Kia Access App.

Once you download the app,



**Download the  
Kia Access App**

make sure you register your vehicle and

start an account (refer to Kia Connect<sup>†1</sup> Activation page). Get to know your new Kia and the available convenient features on the app.

### QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect<sup>†1</sup>. If these conditions are not met, remote commands may not execute or may take longer to execute. It will also affect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect<sup>†1</sup> app will stay connected to the vehicle, as long as the vehicle has been started within seven days. To reconnect the Kia Connect<sup>†1</sup> app, restart the vehicle

*For further Kia Connect link operations, refer to the Car Infotainment System Quick Reference Guide.*



## Kia Access App Features Guide

The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

PDF

**Kia Access App  
Features Guide**





# Digital Clock - Infotainment System

 
Press SETUP, then select General, then select Date/Time from the menu to adjust.

### QUICK TIPS


- Press the Return button on the audio head unit to ensure changes are saved
- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings

## USB-C Charger Ports

The USB-C Charger Ports **A** are located on the center panel and on the side of the seats. Devices can be recharged using a USB cable. The Power button needs to be in the ACC/ON/RUN/START position to operate the USB Charger Ports.

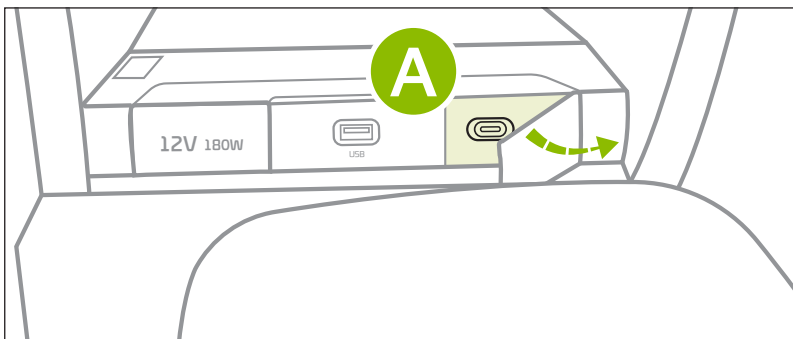

 (Located in Center Console in front of gear shift)

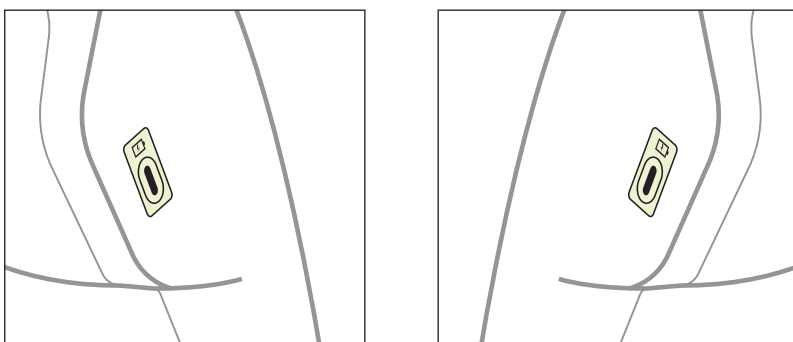

(Located on upper side of both front seats)

Images are for illustrative purposes only and may not reflect actual feature or operation. See Section 5 in the Owner's Manual for more information.




# Multimedia USB Ports, Charger Ports & Power Ports

 **Multimedia USB Port A:** Use the USB port to connect USB audio devices and smartphone devices.



**Multimedia USB Port,  
Power Outlets &  
USB Charger Port**

**Power Outlets B:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

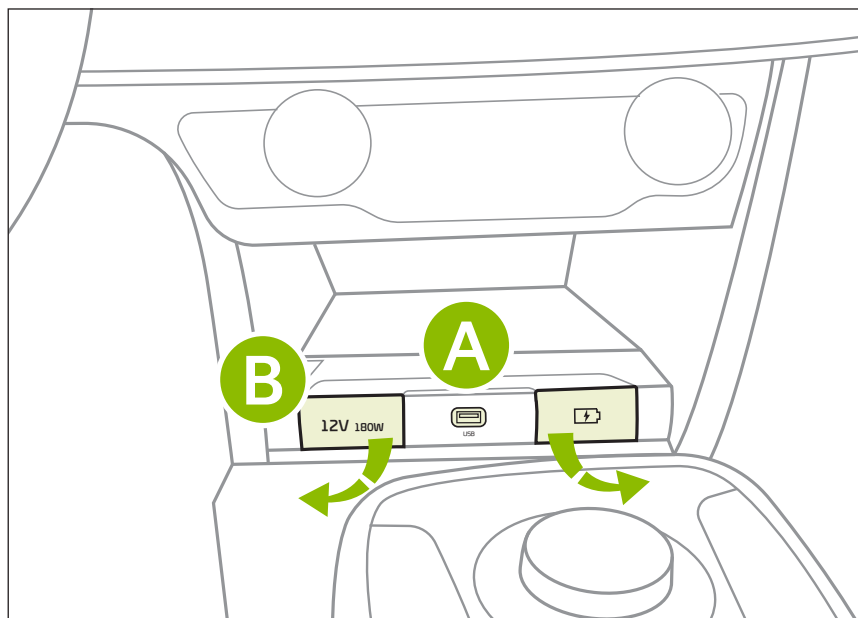

### QUICK TIP

- The power outlets are inactive when ignition Power button is in the OFF position.

### REMINDERS:

- Only use cables made by your device manufacturer. Third party cables may damage your device
- The Multimedia USB data port is located between the Power Outlet and USB Charger Port. The USB Charger Port does not support data transfer

*Refer to Section 5 in the Owner's Manual for more information.*

*For illustrative purposes only. Your actual display, buttons and/or features may vary.*



## Wireless Smartphone Charging System<sup>†21</sup>

 
Charge a compatible Qi<sup>™</sup> Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.



**Wireless  
Smartphone  
Charging**

1. Enable Wireless Charging in the User Settings\* in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System, select Convenience, then Wireless Charging System
2. Place a compatible smartphone on the center of the charging pad **A**  
Indicator light **B** may change to amber once the wireless charging begins
3. Once charging is complete, the amber light may change to green

*Requires Qi<sup>™</sup> enabled device or Qi<sup>™</sup> enabled case*

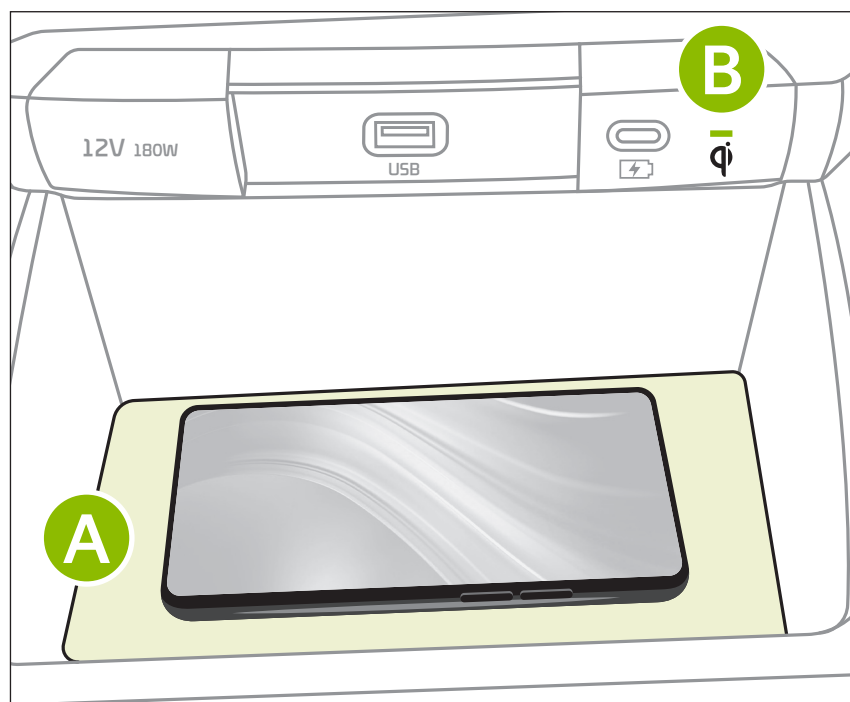

*(Located in front of Gear Shift)*

[\*Continued on next page\*](#)

*Charging system only works with select devices. Refer to the Section 5 in the Owner's Manual for warnings and instructions.*

*Images are for illustrative purposes only and may not reflect actual feature or operation.*



# Wireless Smartphone Charging System<sup>†21</sup>

[Continued from previous page](#)

### QUICK TIPS

- The smartphone must be a compatible phone with Qi<sup>™</sup> function available
- Wireless charging must be enabled in user settings
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging so as to not to impede the charging area
- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle and driver's seat belt on

### REMINDERS:

- The smartphone must be a compatible Qi<sup>™</sup> certified phone with Qi<sup>™</sup> function available. Some smartphone models are not Qi<sup>™</sup> certified, which may affect the availability, speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable. As a result, higher device operating temperatures may be experienced during use
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened or if there are foreign objects on the charging pad

*Charging system only works with select devices. Refer to Section 5 in the Owner's Manual for warnings and instructions.*



## Rotary Dial Shifter

Rotate dial for the following:

P: Park - Press to place in Park.

To release the Parking Brake, rotate dial to R, D or N

R: Reverse

N: Neutral

 
D: Drive

**REMINDER:** The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.

*Refer to Section 6 in the Owner's Manual for more information.*



### Rotary Dial Shifter

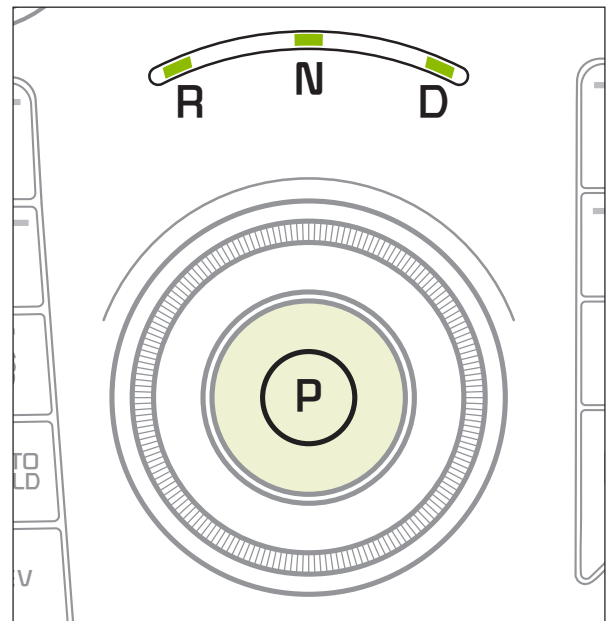


*(Located on center console below Power button)*

## Heated Steering Wheel\*

 Press button **A** to turn ON/OFF the steering wheel heater, while the POWER button is in the ON or READY position. The steering wheel heater will turn off automatically after 30 minutes, or when button is pressed again to deactivate.

### QUICK TIP

- The power outlets are inactive when ignition is in the OFF position.

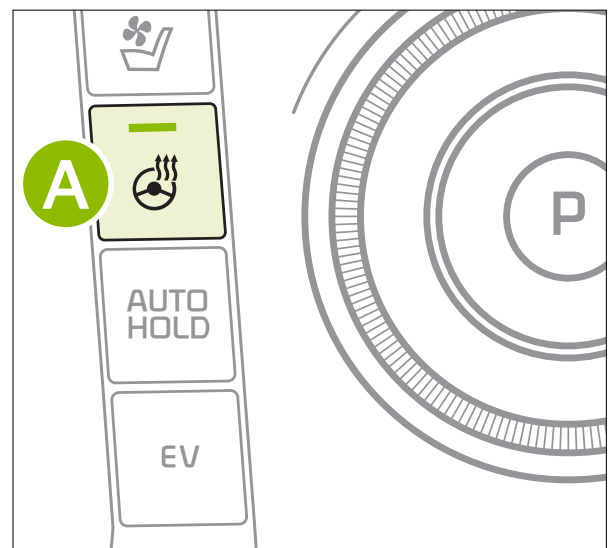

*(Located beside gear shift dial)*

**REMINDER:** If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

*Images are for illustrative purposes only. Refer to Section 5 in the Owner's Manual for more information.*



# Automatic Climate Control

- A** Driver Temperature Control knob
- B** Front Windshield Defroster
- C** Rear Windshield Defroster
- D** AUTO Climate
- E** Recirculated Air button
- F** **Switchable Controller:** Toggle between Climate and Infotainment Controls; Press and hold to set the default mode displayed
- G** Driver Only Climate display
- H** Fan Speed Control knob
- I** Mode Display
- J** A/C On-Off
- K** SYNC (Dual Zone)
- L** Passenger Climate display
- M** Passenger Climate Control knob

A/C & Infotainment System Switchable Controller

Automatic Climate Control - Touch-Sensitive Control Panel



[Continued on next page](#)

Your Automatic Climate Control system may differ from those in the illustration. Refer to Section 5 in the Owner's Manual for more information.

\*IF EQUIPPED




# Automatic Climate Control System

[Continued from previous page](#)

## Climate Control Auto Function

Press AUTO to select Full Auto Operation.  
The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected.  
Turn temperature control knob **A** to the desired temperature.





Automatic Climate Control - Touch-Sensitive Control Panel





## Air Flow Modes **B**:

To select Air Flow Modes, press the Mode selection buttons:


 Face-Level

 Floor-Level

 Bi-Level

 Floor/Defrost-Level

### QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve defog performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

[Continued on next page](#)

Your Automatic Climate Control system may differ from those in the illustration. Refer to Section 5 in the Owner's Manual for more information.

\*IF EQUIPPED





# Automatic Climate Control System

 
[Continued from previous page](#)

## REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the A/C and heater may allow the Energy Consumption to increase, especially excessive use of the heater



**A/C & Infotainment  
System Switchable  
Controller**

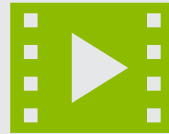



**Automatic Climate  
Control -  
Touch-Sensitive  
Control Panel**



**Auto Defogging  
System (ADS)**

**Auto Defogging System:** Auto Defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press and hold the Front Defrost button  for three seconds, when the ignition is on (the defrost button light will flash three times and the ADS OFF icon will illuminate). To turn Auto Defogging on again, press and hold the Front Defrost button  again for three seconds and the defrost button light will flash 6 times and ADS OFF icon will turn off.

[Continued on next page](#)

Refer to Section 5 in the Owner's Manual for more information.



# Automatic Climate Control System


[Continued from previous page](#)

**Driver Only Ventilation:** Driver Only Ventilation restricts air flow to the driver’s side vents only. This can help to optimize driving range by limiting the power drawn from the battery. Press DRIVER ONLY button to enable air flow through the driver’s side vents only.



Auto Defogging System (ADS)

## Defrost Outside and/or Inside Windshield

- 1. Set Front Fan Speed **A** to the highest position
- 2. Set **Temperature** to **Hot** **B**
- 3. Press the **Front Defrost** button  **C**



Your Automatic Climate Control system may differ from those in the illustration. Refer to Section 5 in the Owner’s Manual for more information.

\*IF EQUIPPED



# Seat Warmers<sup>\*†15</sup> / Ventilated Seats<sup>\*</sup>

## A Seat Warmers

 
- Press the button once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



Seat Warmers /  
Ventilated Seats

## B Ventilated Seats

- Press the button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

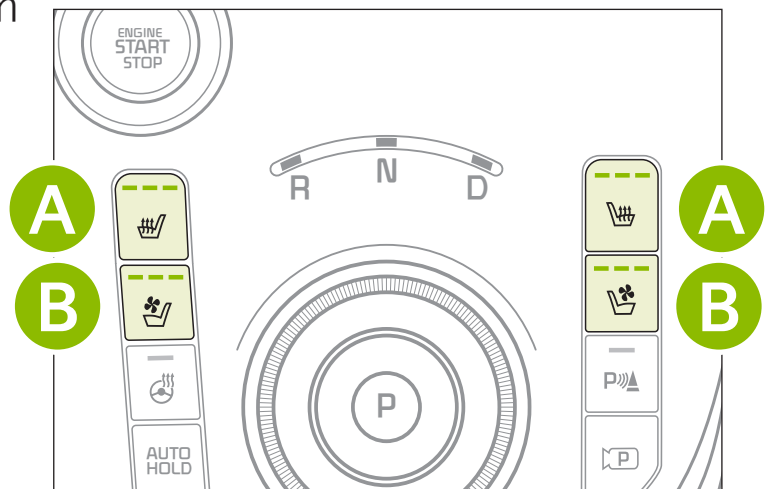

(Rear seat warmer button located on passenger door panel)

## QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default
- Rear seat warmers only have two settings: high and low

## REMINDER:

- Use extreme caution when using the seat warmers to avoid burns.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 5 in the Owner's Manual for more information.*



# Electronic Parking Brake (EPB)

The Electronic Parking Brake system utilizes an electric motor to engage the parking brake.

 
**Applying the Parking Brake:** Pull up the EPB switch **A**. Ensure that the indicator light **(P) BRAKE** is illuminated on the Instrument Cluster.

**Releasing the Parking Brake:** The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

Manually, depress the brake pedal, then press the EPB switch **A** down, with the ignition switch in the ON position. Ensure that the indicator light **(P) BRAKE** is OFF.



**Electronic Parking Brake (EPB) / Auto Hold**

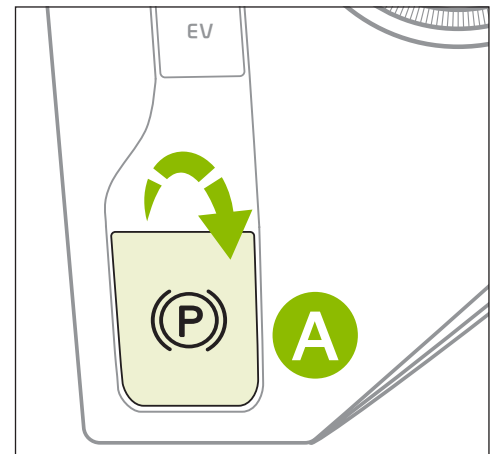

(Located on Center Panel)

### QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline

### REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 6 in the Owner's Manual for more information.*



### Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is released. Auto Hold can be turned ON/OFF using the AUTO HOLD switch **A** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and trunk must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator has four states:

- **Standby (white):** With vehicle in Park and at a standstill, and AUTO HOLD switch **A** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.
- **Engaged (green):** When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.
- **OFF (not illuminated):** The indicator will turn OFF when the AUTO HOLD switch **A** is turned OFF or when the EPB is manually turned ON.
- **Malfunction (yellow):** When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

#### REMINDERS:


- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold turns off when power is cycled
- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 6 in the Owner's Manual for more information.*



 **Electronic Parking Brake (EPB) / Auto Hold**

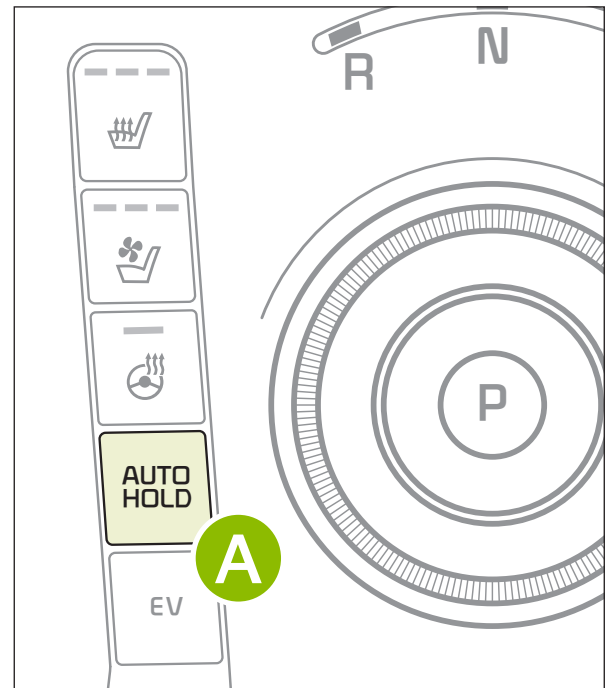

*(Located on Center Panel)*





## Power Adjustable Front Seats<sup>† 13</sup>

  Move/Press the controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar forward/backward.



**Power Adjustable Driver's Seat with Memory Settings**

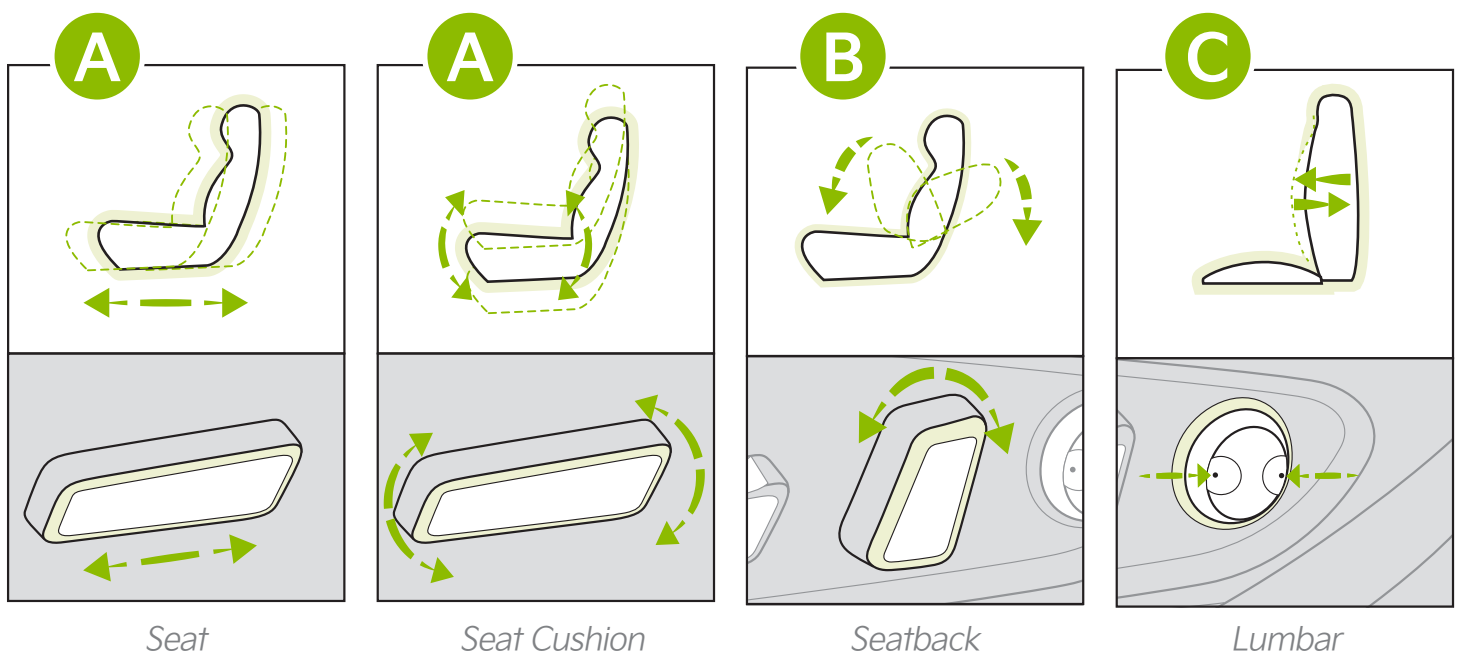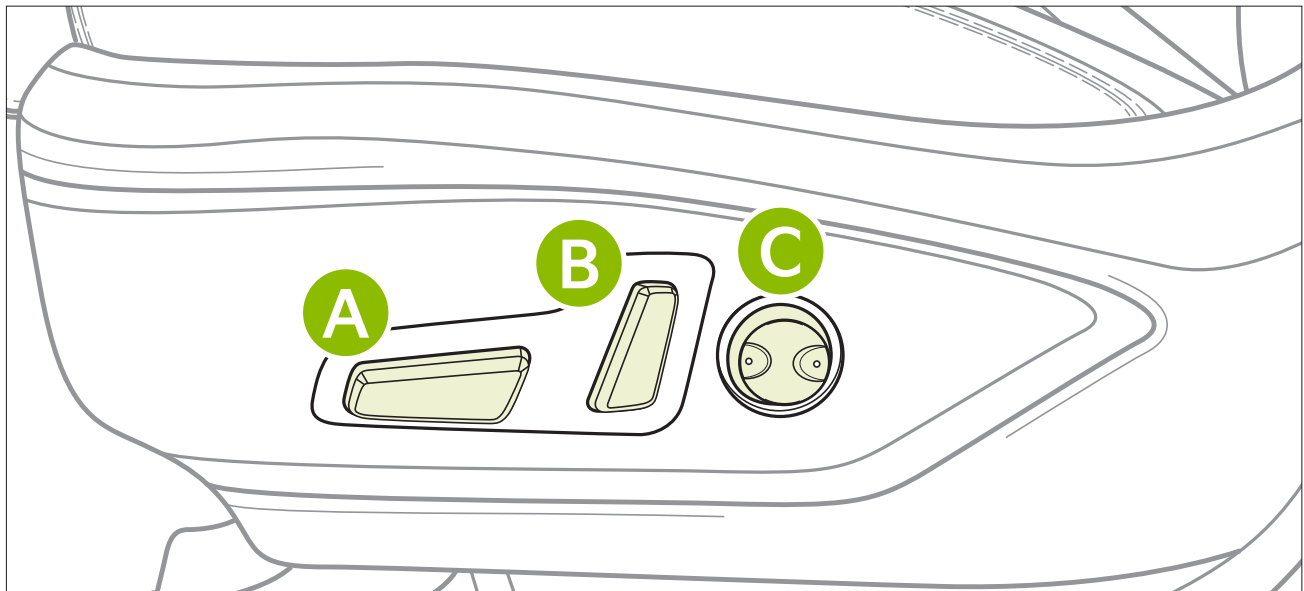

**REMINDER:** Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 4 in the Owner's Manual for more information.*




# Driver Position Memory System<sup>\*† 13</sup>

 To store a seating position into memory, first place the shifter into P (Park) while the ignition switch is ON. Then:



**Power Adjustable Driver's Seat with Memory Settings**

1. Adjust the driver's seat
2. Press one of the memory buttons **A** within 5 seconds. The system will beep twice when memory has been stored
3. "Driver (1 or 2) set is memorized" will appear on the Instrument Cluster screen

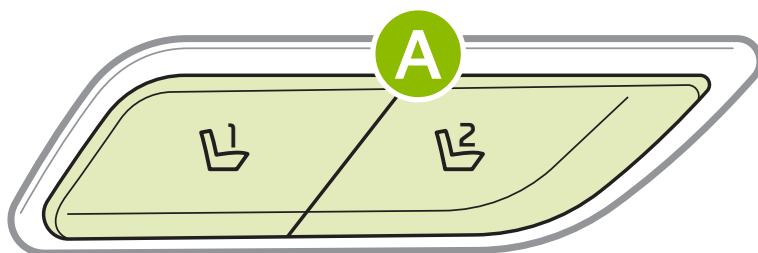

(Located on driver's door control panel)

**REMINDER:** Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in a loss of control of the vehicle.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 5 in the Owner's Manual for more information.*






# Front Seat Headrest Adjustment<sup>†7</sup>

 **To raise headrest:** Pull headrest up.

**To lower headrest:** Press lock **A**, then press the headrest down.

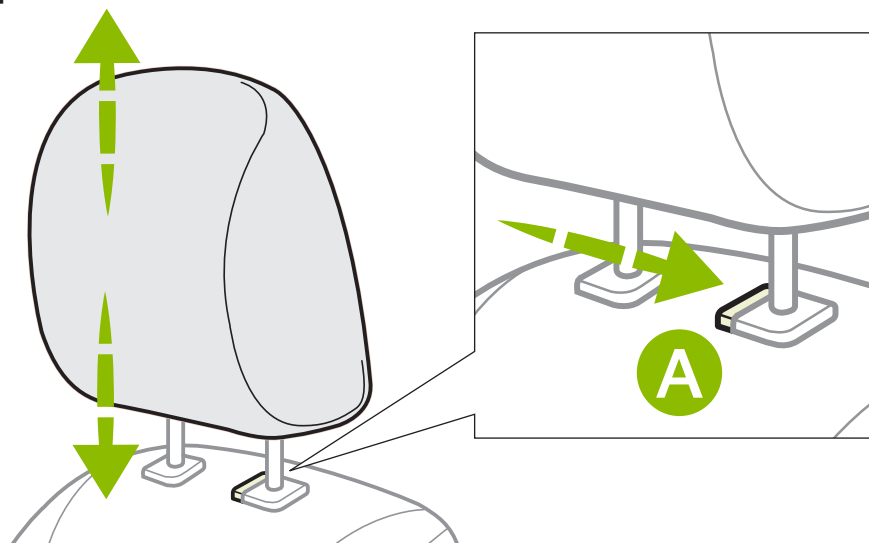

### QUICK TIP

- For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

### REMINDER:

- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 4 in the Owner's Manual for more information.*



# 6-Way Manual Adjustable Front Seats<sup>† 13</sup>

 
Pull lever **A** to slide Seat forward/backward.

Pull/press lever **B** up/down one or more times to adjust Seat height\*.

Pull lever **C** to adjust Seatback recline.



**Manual Seat Adjustment**

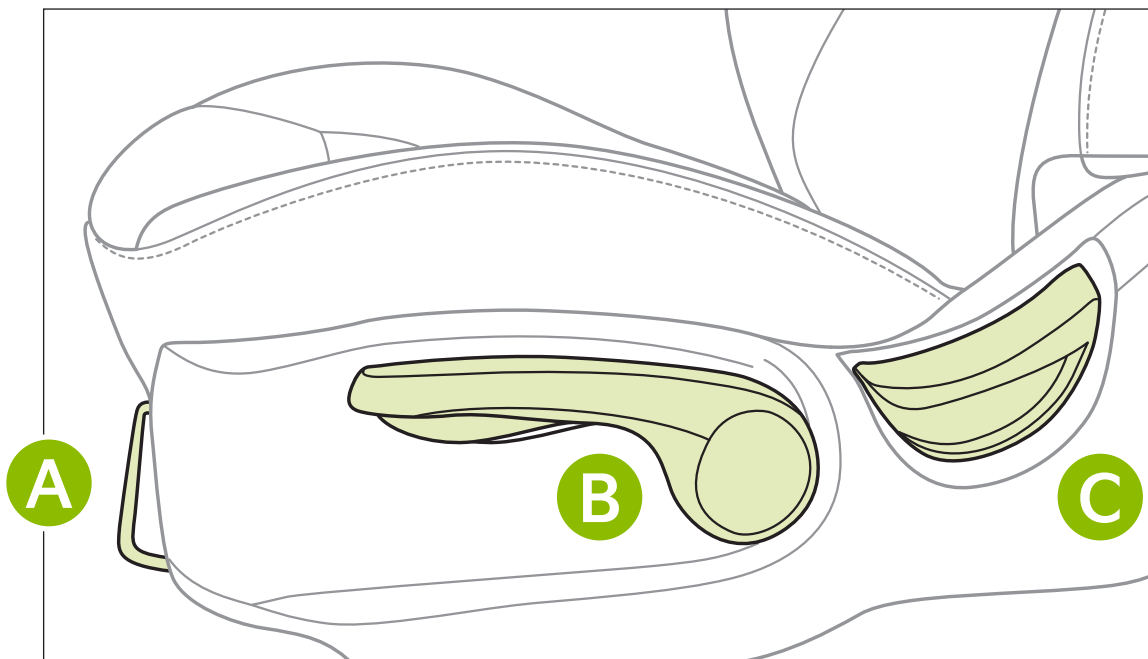

### QUICK TIP

- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

### REMINDER:

- Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 4 in the Owner's Manual for more information.*



 
## Folding Rear Seats

### To Fold:

1. Ensure the belt strap is out of way of the Seatback folding **A**.  
Insert the metal seat belt tab into the holder **B**
2. Adjust the Front Seatback to the upright position and lower the rear headrest to the lowest position
3. Pull on the Rear Seatback lock release lever **C**, then fold the seat toward the front

### To Unfold:

1. Pull the lock release lever **A** and lift the Seatback backward until it clicks firmly in place
2. Return the rear seat belt to the proper position

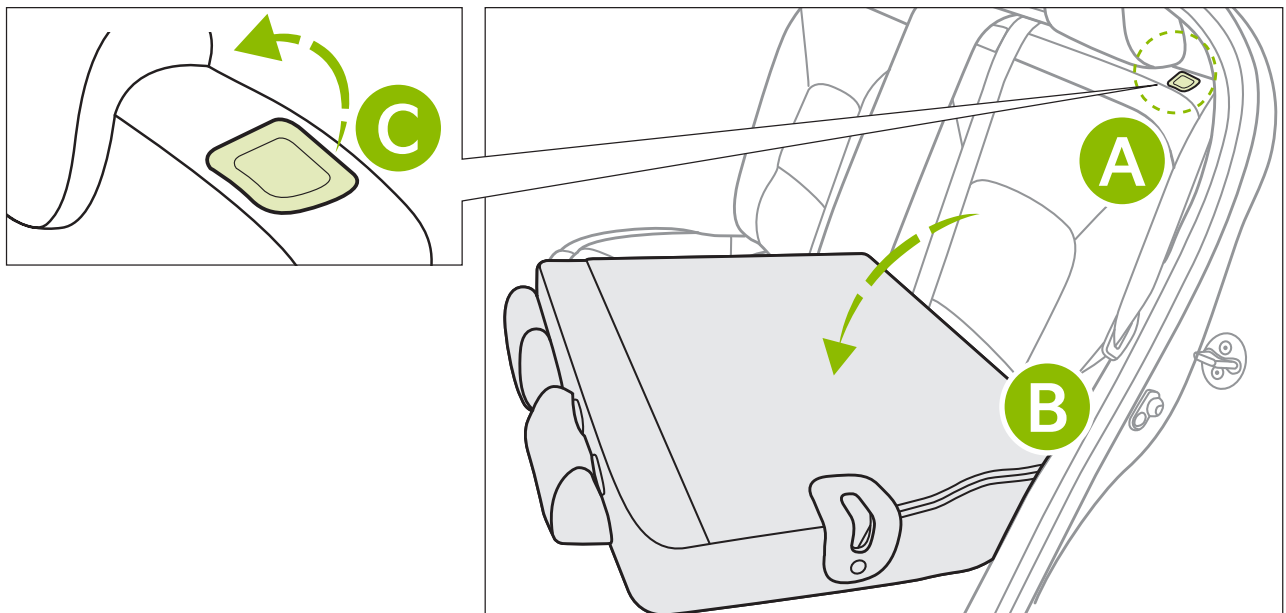

### QUICK TIPS

- It may be necessary to adjust the Front Seatbacks to fully lower rear seats
- Ensure seat is locked by pressing down on Seatback and ensuring red line is NOT visible on bottom of Folder Lever

### REMINDERS:

- Before unfolding Seatback, ensure the seat belt is placed into the holder
- Always make sure the Seatback is locked in place when unfolded

*For illustration purposes only. Actual vehicle might be slightly different. Refer to Section 4 in the Owner's Manual for more information.*



# Rear Occupant Alert (ROA) with Door Monitoring<sup>†4</sup>

The Rear Occupant Alert with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats” **A** and a chime will sound.

The factory default is set to ON. To turn the system ON or OFF, go to User Settings\* in the Instrument Cluster or Vehicle

Settings\* on the Infotainment System, select Convenience, then Rear Occupant Alert and check/uncheck the box.

### REMINDER:

- Always be sure to check the passenger areas before leaving the vehicle.



Rear Occupant Alert (ROA) with Door Monitoring

### Check rear seats



**OK** : Alarm Off

*Rear Occupant Alert is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.*

*Image is for illustrative purposes only and may not reflect actual feature or operation.*

*See Section 5 in the Owner's Manual for more information.*

 


# Hood Release Lever and Latch

### Opening the Hood:

Pull the Secondary Hood Release Lever **A** to unlatch the Hood.


In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** inside of the Hood's center to the left and lift the Hood.

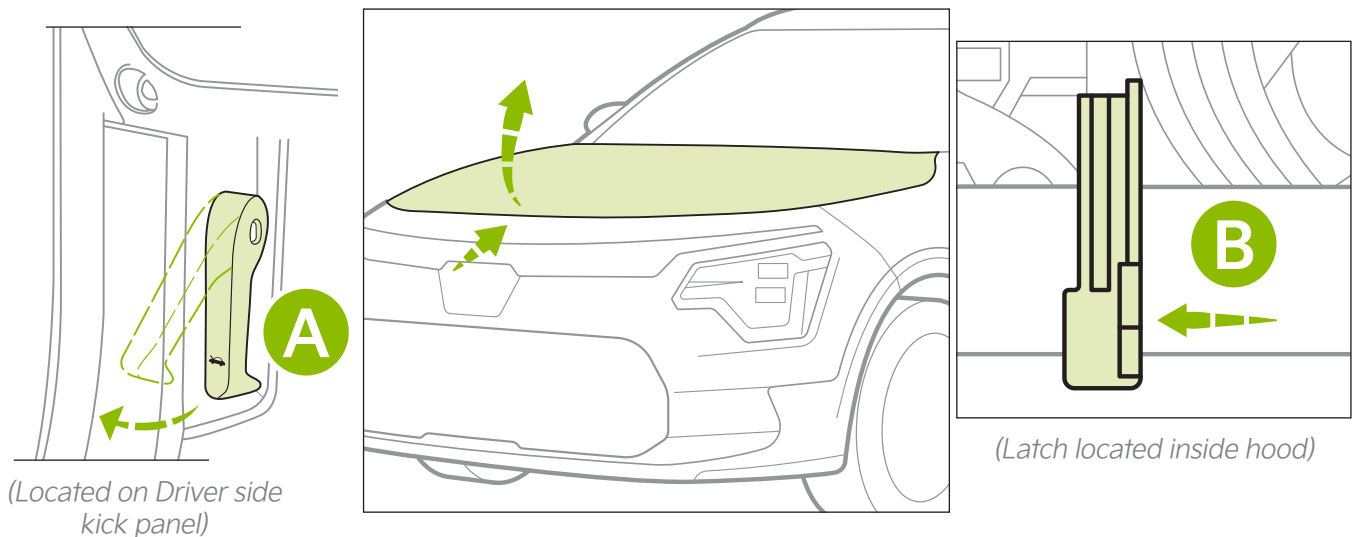

**Closing the Hood:** Lower the Hood about halfway and then press down to securely lock in place.

## Sun Visor<sup>†18</sup>

 Use the Sun Visor to shield direct light through the front or side windows. Move the Sun Visor out and adjust as needed.

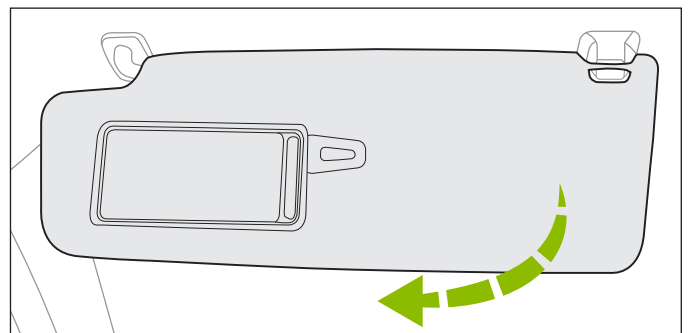

### REMINDERS:

- Sun Visor may not shield all direct light
- Do not operate the vehicle if Sun Visor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sun Visor around from the front or side windows

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 5 in the Owner's Manual for more information.*



 
# Digital Key 2 Touch

Digital Key 2 Touch, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.




## Digital Key 2 Touch Setup:

- 1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
- 2. Download the Kia Access App<sup>†2</sup> and activate Kia Connect<sup>†1</sup> in your vehicle's Infotainment System (see page 104)
- 3. Register your smartphone by going to the Vehicle Settings\* on the Infotainment System:
  - Press SETUP, VEHICLE, DIGITAL KEY **A**, SMARTPHONE KEY and then MY SMARTPHONE KEY

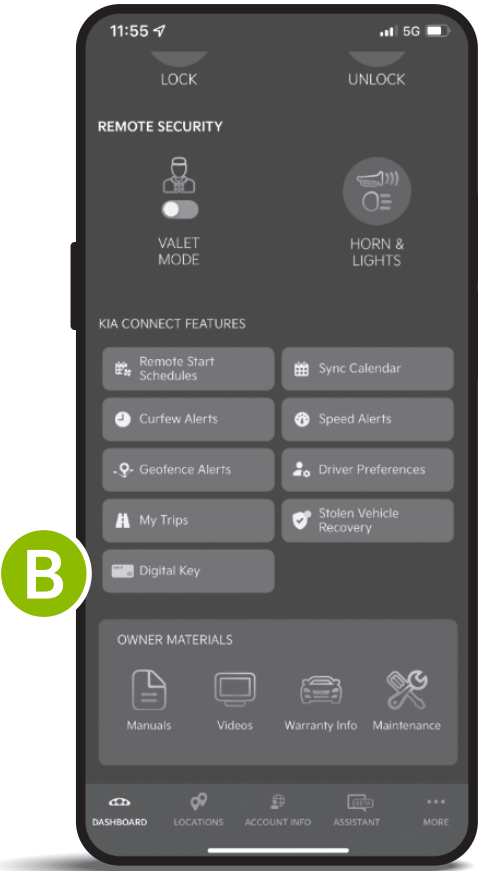

 - 4. On your smartphone, press DIGITAL KEY **B**, CONTINUE TO WALLET APP, then CONTINUE again, which will open the Wallet app. Follow the prompts to complete the registration/pairing of your smartphone (actual steps may vary between apps/smartphones).

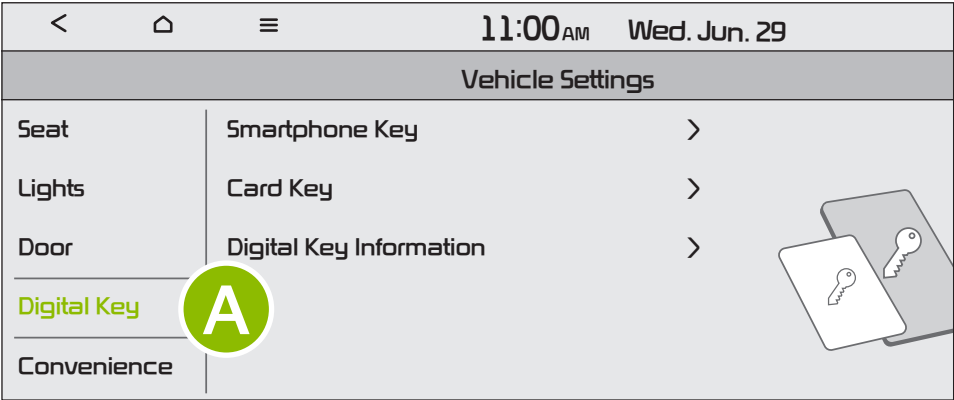

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 5 in the Owner's Manual for more information.

<sup>†</sup>LEGAL DISCLAIMERS ON [PAGE 145](#) | \*IF EQUIPPED


## Digital Key 2 Touch

 [Continued from previous page](#)

5. Place your smartphone on the authentication pad (wireless charging pad) to complete registration. Click **Save** on the Infotainment System screen and a message will appear showing the process is in place
6. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the **Digital Key** in your iPhone® Wallet or Samsung™ Wallet
7. When in the Wallet app, click on the **Digital Key** and select the menu icon to adjust other settings or use other features

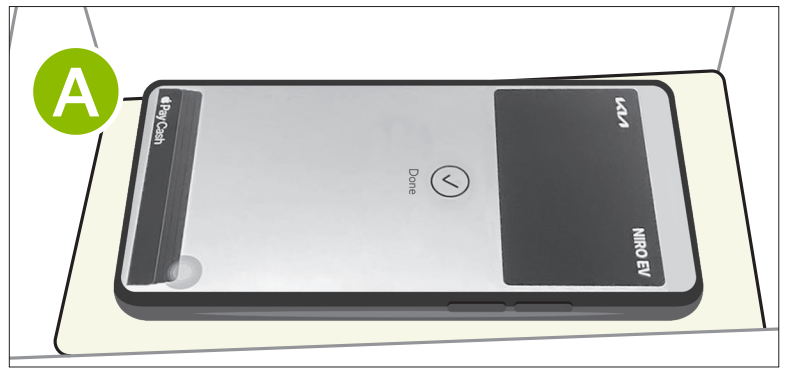

 (Charging pad located in center console)

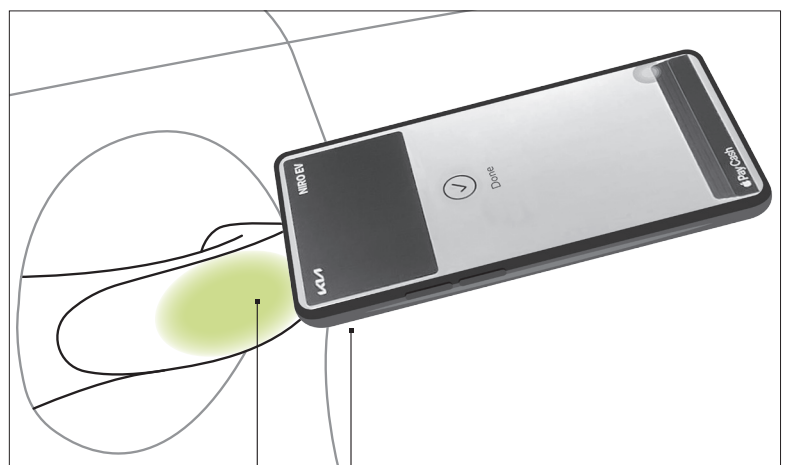

Door handle authentication pad

NFC antenna (backside of smartphone). Antenna position differs depending on models

### Using your Digital Key 2 Touch:

1. To lock or unlock your vehicle with Digital Key, position smartphone to door handle until smartphone vibrates
2. To start your vehicle with Digital Key 2 Touch, place registered smartphone on the authentication pad **A** (wireless charging pad), press the brake pedal and the Power button

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 5 in the Owner's Manual for more information.*





## Digital Key 2 Touch

[Continued from previous page](#)

### Sharing your Digital Key 2 Touch:

1. Open the Wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Under People, click on **Invite** and follow the prompts to share your Digital Key with one of your contacts Apple iPhone/iWatch® or Samsung™ phone (actual steps may vary between apps/smartphones)

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung™ to Samsung™.

**Revoking shared Digital Key access:** You can also delete a key using the Wallet app on your smartphone. Open the Wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Under People, click on the contact to revoke. Then click on **Revoke Access** (actual steps may vary between apps/smartphones).

**To delete shared keys and the owner key:** Go to the Vehicle Settings\* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEY and SMARTPHONE KEY. Then press DELETE.

### QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

[Continued on next page](#)

*Refer to Section 5 in the Owner's Manual for more information.*

## Digital Key 2 Touch

[\*Continued from previous page\*](#)

### REMINDERS:

- Digital Key 2 Touch is currently only compatible with Apple iPhone & iWatch® and Samsung™ smartphones
- Your iPhone® Wallet or Samsung™ Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 Touch setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
  - The smart phone is removed from the in-vehicle authentication pad
  - Changing the Infotainment System screen
  - The vehicle is powered off or the gear is shifted
  - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung™ smartphones
- Currently compatible devices:
  - For **Apple iPhone®** (Ensure the device has the latest version of iOS®):
    - iPhone® XS or later.
    - iPhone® 11 Pro or later (for passive entry or remote features on compatible cars)
  - For **Apple Watch®** (Ensure the device has the latest version of watchOS®):
    - Apple Watch® Series 5 or later
    - Apple Watch® Series 6 or later (for passive entry or remote features on compatible cars)
  - For **Samsung™ Phones:** Ensure the device has the latest version of Android OS™ and latest application version of Samsung™ Wallet)
    - Galaxy™ S20 or later
    - Galaxy™ Note20 5G or later
    - Galaxy™ Z Flip 5G or later
    - Galaxy™ Fold 2 or later

*Refer to Section 5 in the Owner's Manual for more information.*

 


## Smart Key with Remote Start<sup>†10</sup>



- A** Press to lock All Doors; Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate. Then lift the Liftgate handle to manually open Liftgate

### REMINDER:

- The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle Liftgate.
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key (on reverse side of fob)
- F Driver's Door Lock/Unlock button:**
  - Press button once to unlock Driver's Door
  - Press again within 4 seconds to unlock All Doors
  - Press again to lock All Doors
- G Mechanical Key:**
  - Use to lock/unlock Driver's Door by turning once or all doors by turning twice
  - Use to enable/disable Child Safety Locks
  - Use to unlatch rear center seatbelt lower anchor

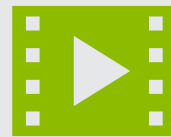

Remote Start -  
Smart Key

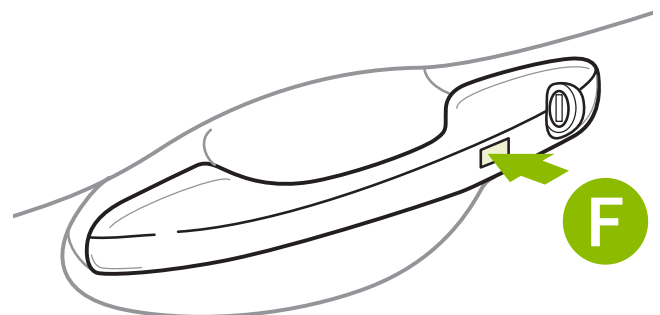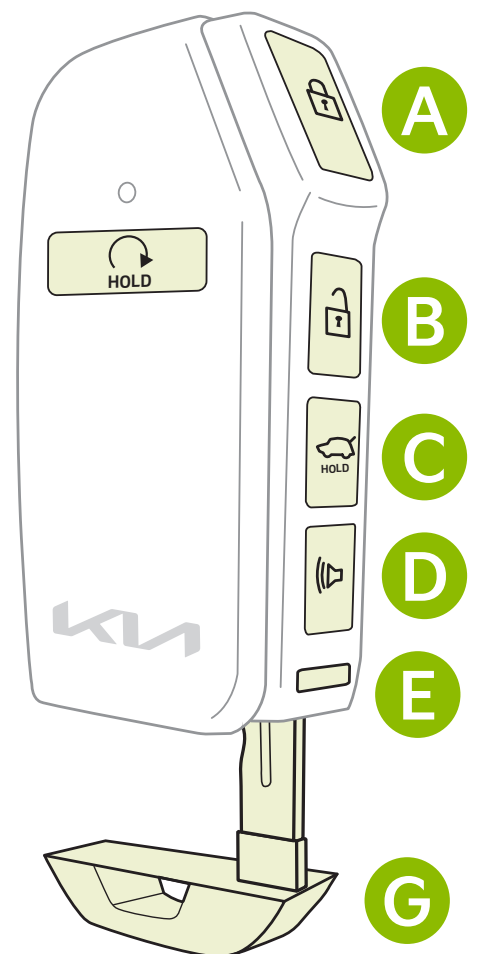  

[Continued on next page](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*


*Refer to Section 5 in the Owner's Manual for more information.*



# Smart Key with Remote Start<sup>†10</sup>

 [Continued from previous page](#)

**A Remote Start\*:** Lock the doors by pressing the door lock button **B** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **B**, press and hold the Remote Start button **A** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver does not enter vehicle within three minutes of starting the vehicle, the vehicle will automatically turn off.

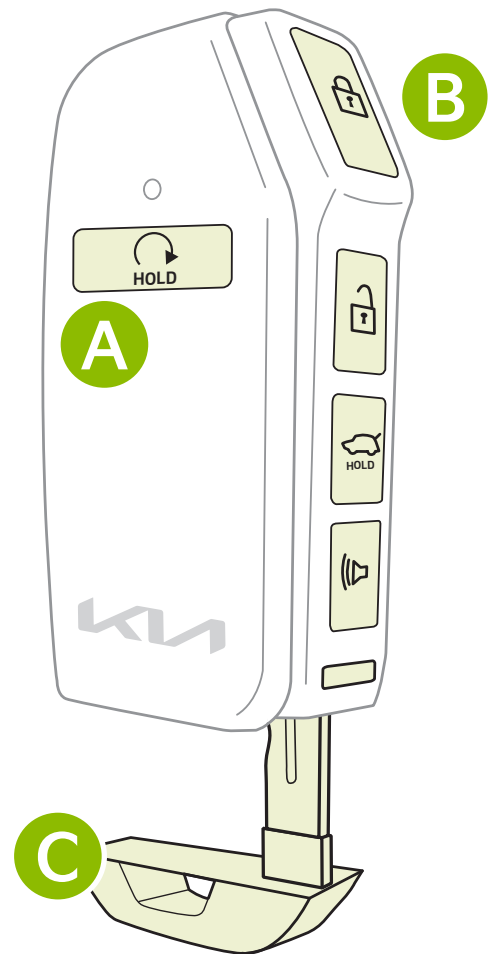

### QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the POWER button (Lock button side closest) and press to start vehicle
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

### REMINDERS:

- Remote button configuration may vary depending on vehicle options
- One/two button turn logic can be changed in User Settings\* or Vehicle Settings\*
- When reinserting the mechanical key **C**, make sure it is pushed all the way in until there is a click sound.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

 
*Refer to Section 5 in the Owner's Manual for more information.*



### Double-Turn Lock/Unlock All

Use the Mechanical Key **A** to lock/unlock Driver's Door.

- Turn counterclockwise once to unlock Driver's Door
- Turn counterclockwise again within 4 seconds to unlock All Doors
- Turn clockwise once to lock All Doors

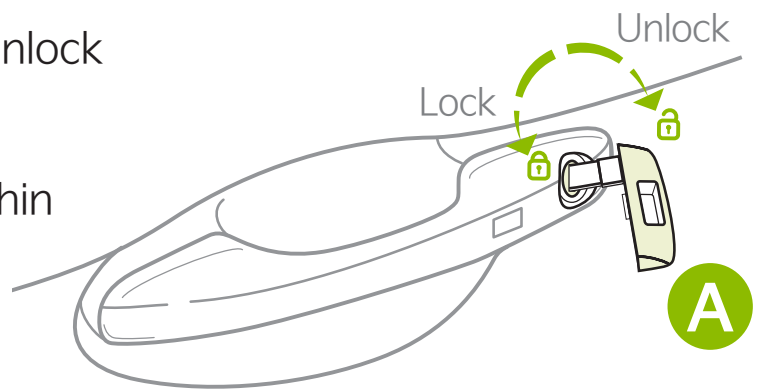

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 5 in the Owner's Manual for more information.*




### Map/Room Lamps
 
#### Automatic turn off function\*

The interior lights automatically turn off approximately 30 seconds after the POWER button is turned OFF.

#### Map Lamp/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/ Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

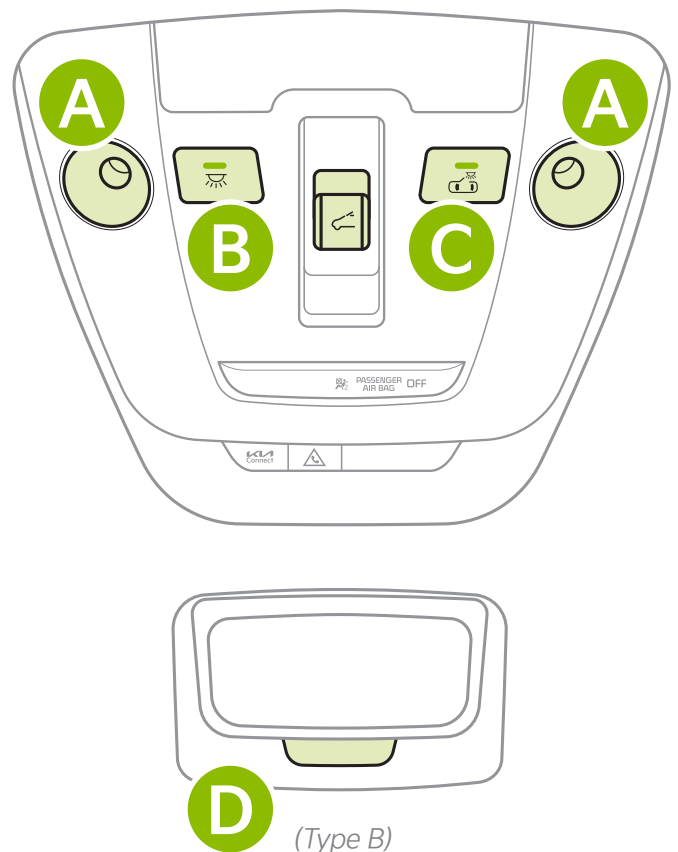

#### QUICK TIPS

- When doors are unlocked by the Smart Key\*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause 12V battery discharge

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 5 in the Owner's Manual for more information.*



## Sunroof Operation\*

 
The Sunroof glass and Sunshade operation is controlled by a multi-directional switch **A**, and the ignition needs to be in the ON position to operate the sunroof glass and sunshade.



**Sunroof Operation Video**

### To slide the sunroof glass and sunshade:

- **Auto Open:** Slide switch **A** backward to the farthest position and release (second detent)
- **Auto Close** (Sunroof only): Slide the switch **A** forward to the farthest position and release (second detent)

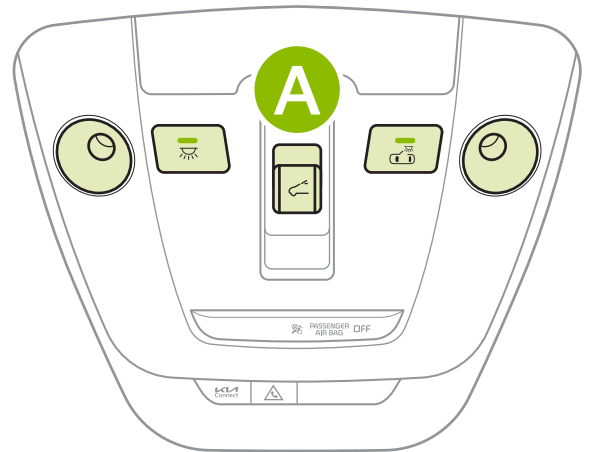

### Tilt the Sunroof:

- **Tilt open:** Press switch **A** upward
- **Tilt close:** Press switch **A** forward

### QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction
- Adjusting the sunroof past the first stop position (normal), in the fully opened position, may cause wind buffeting noise
- While driving with rear windows down or with the sunroof in an open or partially open position, a wind buffering or pulsation noise may be heard. This is a normal occurrence and can be reduced or eliminated by the following:
  - If the noise occurs with one of both of the rear windows down, partially lower both front windows approximately one inch
  - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

[\*Continued on next page\*](#)

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 5 in the Owner's Manual for more information.*





# Sunroof Operation\*

[\*Continued from previous page\*](#)

### REMINDERS:

- Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving
- When closing, be mindful of any objects or persons
- If the ignition is turned off with the sunroof not fully closed, the Instrument Cluster will display a warning message and a chime will sound for a few seconds
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

*Refer to Section 5 in the Owner's Manual for more information.*



### Smart Power Liftgate<sup>\*†11</sup>

#### Opening from Inside the Vehicle:

 
Press and hold the Smart Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.



Smart Liftgate  
Operation, Opening  
Height/Speed  
Adjustment

#### Smart Key:

To open the Smart Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

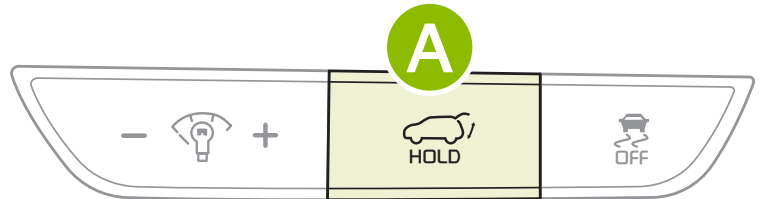


(Button located on Driver's Panel)

#### Opening from Outside the Vehicle:

 To open the Smart Power Liftgate automatically, press the Rear Hatch Release button **C** on the exterior of the Liftgate.


Automatically close by pressing the Power Liftgate Close button **D**.

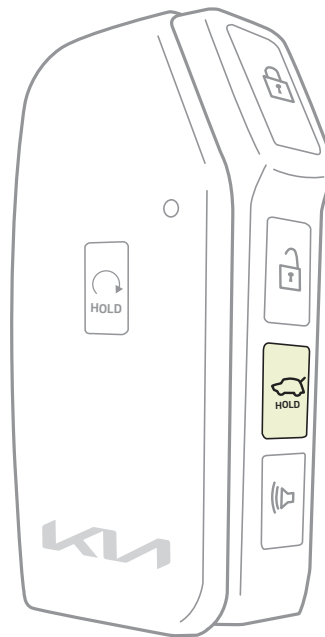

Remote button  
configuration may  
vary depending on  
vehicle options.

#### REMINDER:

 - Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

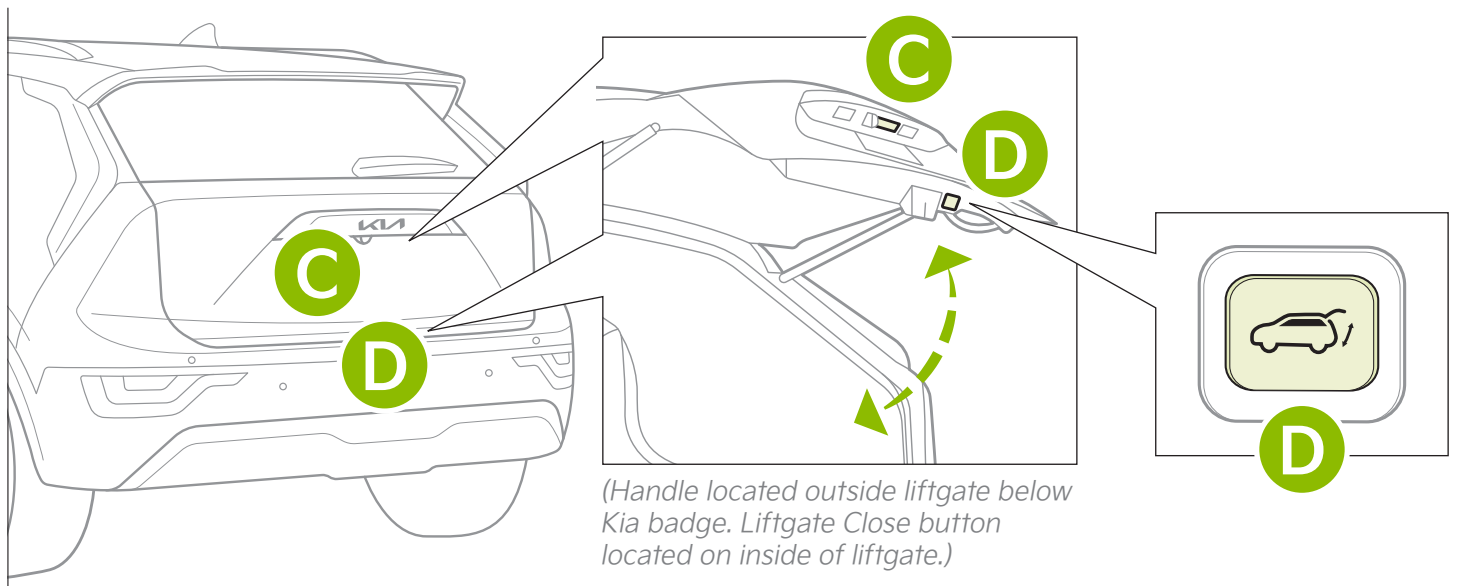

(Handle located outside liftgate below Kia badge. Liftgate Close button located on inside of liftgate.)

Images are for illustrative purposes only. Refer to Section 5 in the Owner's Manual for more information.


[Continued on next page](#)



# Smart Power Liftgate<sup>\*†11</sup>

 [Continued from previous page](#)

The Smart Power Liftgate with Auto Open can be operated from several controls to either open, close or lock the Liftgate. The Smart Power Liftgate will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

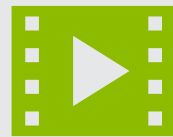

**Smart Liftgate  
Operation, Opening  
Height/Speed  
Adjustment**

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to User Settings\* in the Instrument Cluster or the Vehicle Settings\* in the Infotainment System.

## QUICK TIPS

- During the Smart Liftgate open alert, the Smart Liftgate can be deactivated with the Smart Key by pressing any button on the key fob or moving away from the detection area
- The open height and speed can be adjusted. For information on how to set the open height and speed, see your owner's manual

[Continued on next page](#)

Refer to Section 5 in the Owner's Manual for more information.



# Smart Power Liftgate<sup>\*†11</sup>

[\*Continued from previous page\*](#)

### REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when:
  - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
  - A door is not locked or closed
  - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage, or move out of the detection area, to deactivate the Smart Power Liftgate function
- When the power is on, the Smart Power Liftgate will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Liftgate with Auto Open to operate
- Ensure obstacles and people are out of the way of the Liftgate
- When closing, be mindful of any objects or persons nearby

*Refer to Section 5 in the Owner's Manual for more information.*



 
## OTHER KEY FEATURES

### Liftgate Release Button<sup>\*†11</sup>

The Liftgate Release button is located on the bottom of the Liftgate lid. With doors unlocked, press the Liftgate Release button **A** and pull the Liftgate up by the handle to open.



**Liftgate Button and Operation**

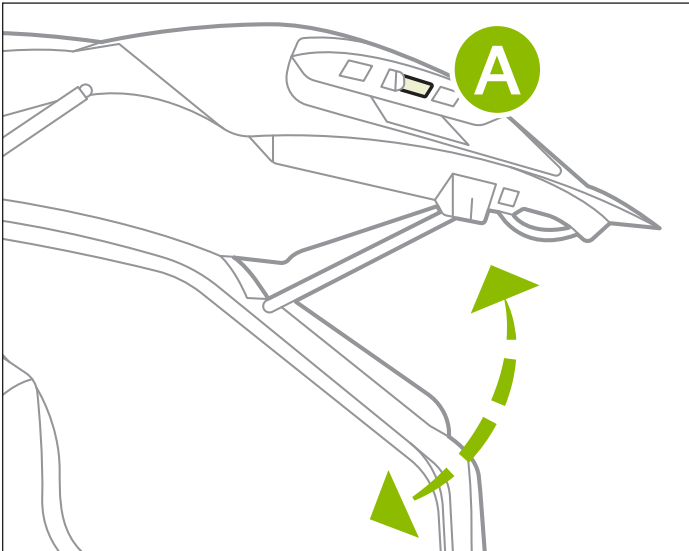

*(Handle located outside liftgate below Kia badge. Liftgate Close button located on inside of liftgate.)*

#### QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The Liftgate unlocks automatically and then can be opened manually when the Smart Key<sup>\*</sup> is within close proximity to the vehicle

#### REMINDER:

- Pressing the Smart Key remote Liftgate button only unlocks the Liftgate. To open Liftgate, also press the Liftgate Release button and pull the Liftgate up by the handle to open.

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*Refer to Section 5 in the Owner's Manual for more information.*



 
# Electrochromic Rearview Mirror with Homelink<sup>®†3</sup> System

The HomeLink<sup>®</sup> / Electric Chromic Rearview Mirror\* is designed to automatically detect and reduce rearview mirror glare during nighttime driving by monitoring light levels in the front and rear of the vehicle. It also allows you to connect up to three electronic transmitters into one location.



**HomeLink<sup>®</sup>**  
**Support Website**

- A** HomeLink<sup>®</sup> Channel 1
- B** HomeLink<sup>®</sup> Channel 2
- C** HomeLink<sup>®</sup> Channel 3
- D** Garage Door Opener Status Indicator: Closing or Closed
- E** HomeLink<sup>®</sup> Operation Indicator
- F** Garage Door Opener Status Indicator: Opening or Open
- G** HomeLink<sup>®</sup> User Interface Indicator

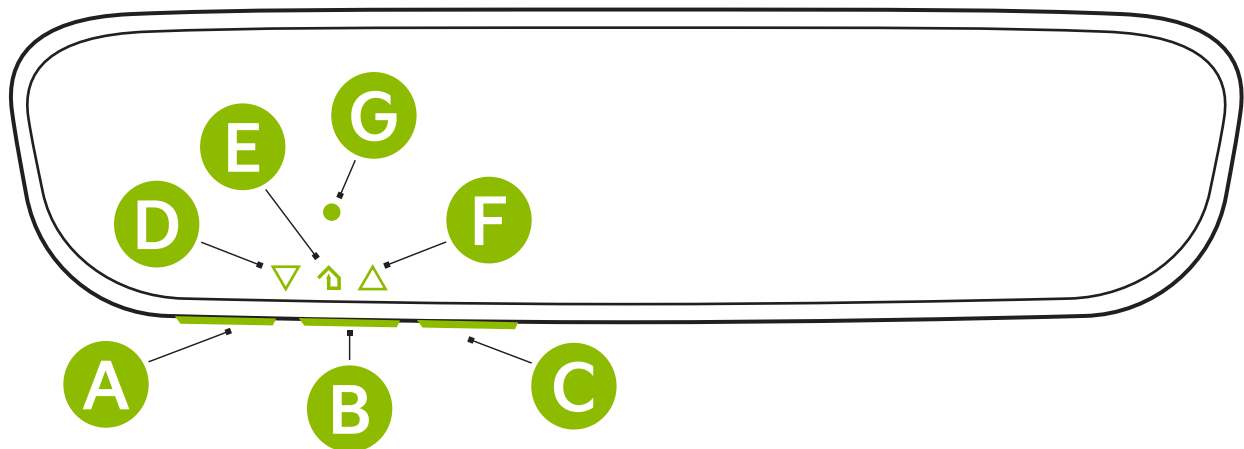

[Continued on next page](#)

*Images are for illustrative purposes only.*

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink<sup>®</sup> system, you may need to purchase a HomeLink Repeater Kit.*

*For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*

# Electrochromic Rearview Mirror with Homelink<sup>®†3</sup> System

[Continued from previous page](#)

## How to Sync Transmitter with HomeLink<sup>®\*</sup>

 


HomeLink<sup>®</sup>  
Support Website

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the **A** and **B** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **D** or **C** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink<sup>®</sup> Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

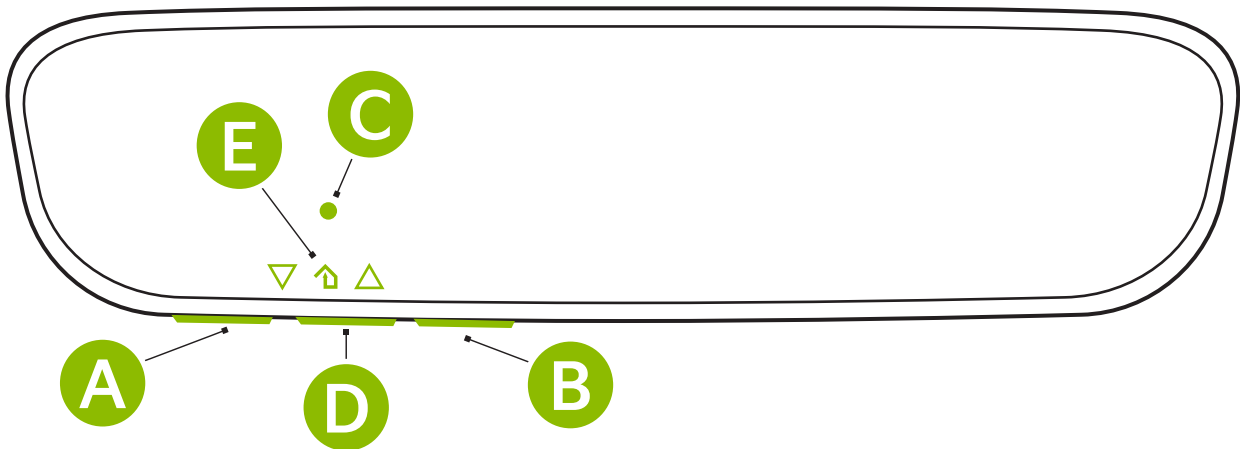

### QUICK TIPS

- You can reprogram a single HomeLink<sup>®</sup> button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters
- HomeLink<sup>®</sup> operates only while the Power button is in the ON position for security reasons. It is to prevent an unintentional HomeLink<sup>®</sup> operation when the vehicle is in IGN off and parked outside of the garage

Images are for illustrative purposes only.

[Continued on next page](#)

For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.

†LEGAL DISCLAIMERS ON [PAGE 145](#) | \*IF EQUIPPED



## Electrochromic Rearview Mirror with Homelink<sup>®†3</sup> System

[Continued from previous page](#)

To finish programming rolling code garage door openers, complete these steps:

 
3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink<sup>®</sup> button up to three times

### Operating HomeLink<sup>®</sup>:

Press one of the programmed HomeLink<sup>®</sup> buttons.

### Erasing programmed buttons:

Press and hold the **A** and **B** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

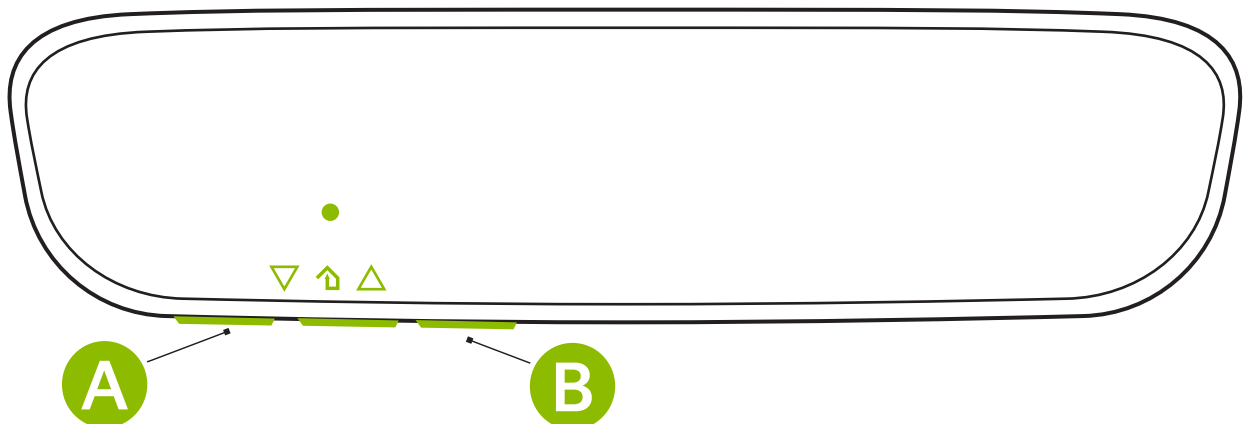

*Images are for illustrative purposes only and may not reflect actual feature or operation.*

*If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink<sup>®</sup> system, you may need to purchase a HomeLink Repeater Kit.*

*For more information, go to [www.HomeLink.com](http://www.HomeLink.com) or call (800) 355-3515.*



## OTHER KEY FEATURES

### Tire Mobility Kit

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

 
For operational information, please refer to the Owner's Manual.



**Tire Mobility Kit**

**A** Sealant Bottle

**B** Compressor

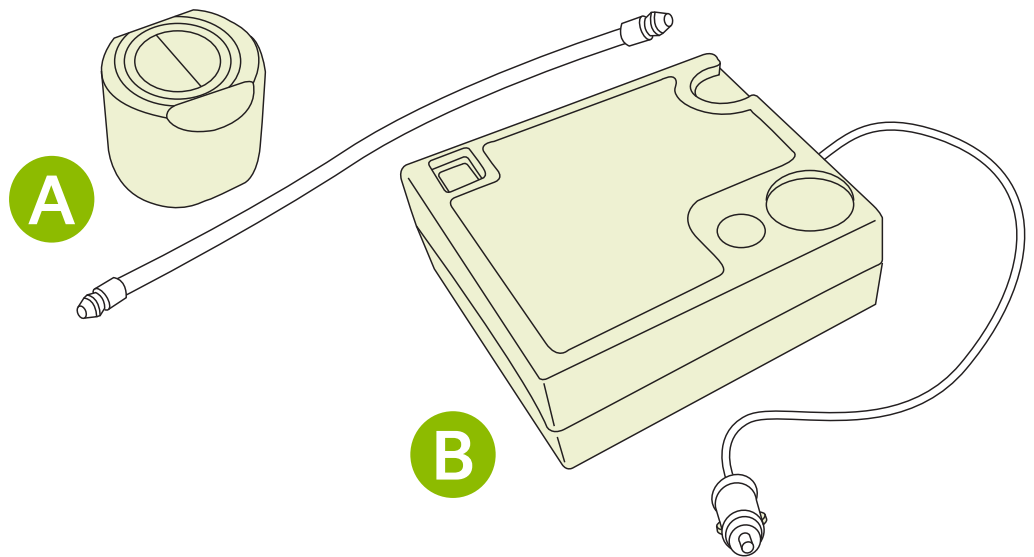

#### QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

#### REMINDERS:


- After tire is properly sealed, drive cautiously and never exceed 50 mph or 120 miles on a tire that has been properly sealed with the Tire Mobility Kit
- Accessory spare tire kit is available for purchase

*Images are for illustrative purposes only and may not reflect actual operation.*

*Refer to Section 8 in the Owner's Manual for more information.*



### Child-Protector Rear Door Lock

Locate these locks on the rear edge of the rear passenger doors. Move the Child-Protector Rear Door Lock, with the mechanical ignition key, to the lock position  to disable the inner door handles from opening the rear doors.



**REMINDER:** Child-Protector Rear Door Lock is located on rear passenger's door jamb.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 5 in the Owner's Manual for more information.*



 
# Occupant Detection System (ODS)<sup>†9</sup> / Passenger Airbag Off Indicator<sup>†14</sup>

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

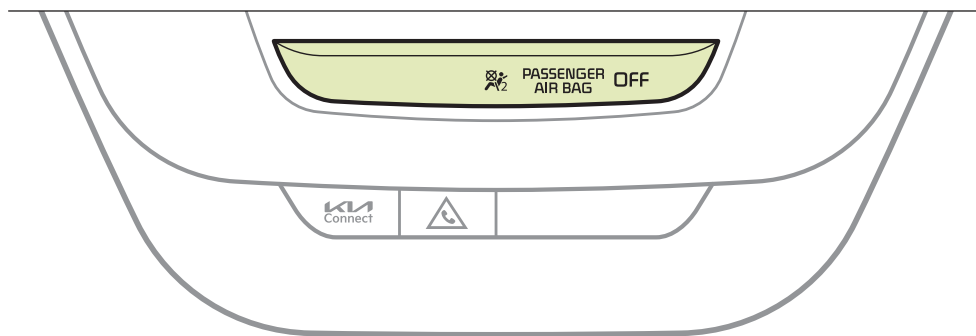

### REMINDERS:

- Do not allow a passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat, or move to another seat in the vehicle

*Images are for illustrative purposes only.*

*For more information on the Occupant Detection System/ Passenger Airbag Off Indicator, please refer to Section 4 in the Owner's Manual.*



## SAFETY FEATURES

### Seat Belts<sup>†14</sup>

To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks.
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**.

 
 


**Latch Anchors for the Child Restraint System**

#### Seat belt retractor locks:

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

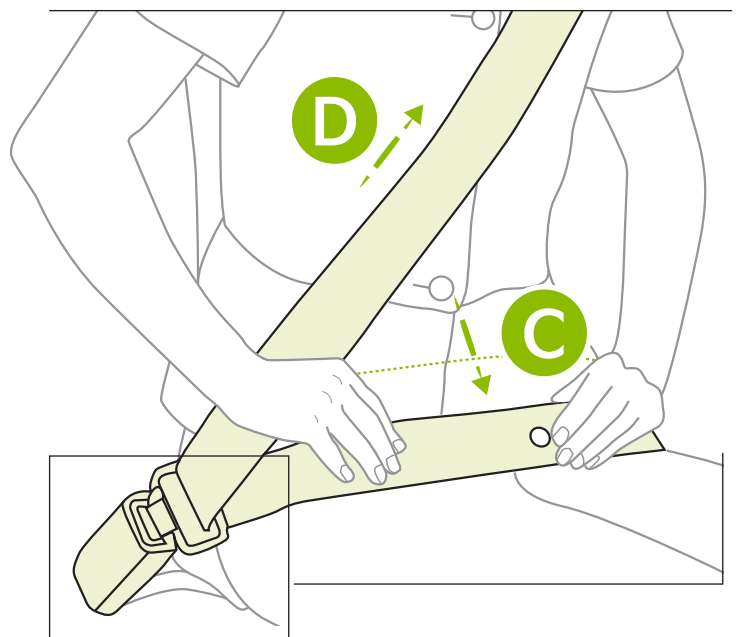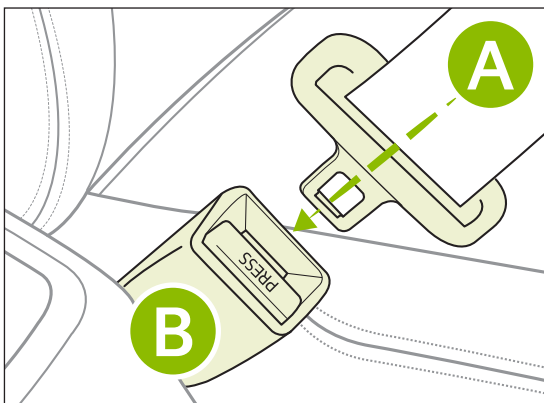


#### QUICK TIPS

- When the EV Power button is ON, the seat belt Warning Light appears on the Instrument Cluster if a seat belt is not fastened
- A warning indicator may appear on the Instrument Cluster and emit a chime when the vehicle is driving over 12mph and detects the seat belt is not fastened for the driver and the front and rear passengers

**REMINDER:** For maximum protection, always wear your Seat Belt.

*Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to Section 4 in the Owner's Manual for more information*

 NIRO EV NORMAL MAINTENANCE SCHEDULE	MAINTENANCE INTERVALS (UP TO 64,000 MILES) <sup>A</sup>							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Check tire pressure and tread wear; Rotate tires	P	P	P	P	P	P	P	P
Climate control air filter	I	R	I	R	I	R	I	R
Brake fluid	I	I	I	I	I	R	I	I
12V Battery condition	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Reduction gear fluid				I			I	

**P** = Perform  
**R** = Replace  
**I** = Inspect<sup>†B</sup>

A. See the Owner's Manual for complete maintenance schedule.  
 B. If necessary, adjust, correct, clean or replace

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect<sup>†1</sup> account by logging into your Kia Access App<sup>†2</sup> or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect<sup>†1</sup> only).

© 2025 Kia America, Inc.  
All rights reserved.

Consumer - Roadside Assistance<sup>†11</sup>:  
1-800-333-4KIA (4542)

Part Number: SGEV260-PS-004

†LEGAL DISCLAIMERS ON [PAGE 145](#) | \*IF EQUIPPED



# DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at [owners.kia.com/us/en/privacy-policy.html](https://owners.kia.com/us/en/privacy-policy.html)) and Terms of Service (available at [owners.kia.com/us/en/terms-of-service.html](https://owners.kia.com/us/en/terms-of-service.html)). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit [www.kia.com](https://www.kia.com) or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.

2. **Kia Access app for smartphone and smartwatch** requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model, model year and trim.

3. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.

4. **Driver Assist Features - Blind-spot Collision-Avoidance Assist (BCA), Cruise Control (CC), Forward Collision-Avoidance Assist (FCA), Forward/Reverse Parking Distance Warning (PDW), Highway Driving Assist (HDA), Highway Driving Assist 2 (HDA2), Head-Up Display (HUD), Intelligent Speed Limit Assist (ISLA), Lane Following Assist (LFA), Lane Keeping Assist (LKA), Leading Vehicle Departure Alert (LVDA), Navigation-based Smart Cruise Control (NSCC), Rear Cross-traffic Collision-Avoidance Assist (RCCA), Rear Occupant Alert (ROA) with Door Monitoring, Rear Parking Collision Avoidance (PCA), Rear View Monitor (RVM), Remote Smart Parking Assist (RSPA), Safe Exit Warning (SEW) and Smart Cruise Control (SCC):** When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.

5. **Driver Attention Warning (DAW):** When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

6. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.

8. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.

9. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.

10. **Power Button / Smart Key with Remote Start:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.

11. **Smart Power Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle.

12. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.

13. **Seat Adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.

14. **Seat Belts / Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.

15. **Seat Warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

16. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at [www.siriusxm.com](https://www.siriusxm.com). Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2022 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

17. **Steering-Wheel-Mounted Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

18. **Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.

19. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.

20. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



\*IF EQUIPPED