


Features & Functions Guide

Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.



**Getting Started
With Your New
Kia Video**

Using This Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner’s Manual. In the interest of your safety and that of the vehicle’s occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner’s Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

www.kia.com
Consumer Affairs - Roadside Assistance†12: 1-800-333-4KIA (800-333-4542)

Always check the Owner’s Manual for complete operating information and safety warnings.

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



Videos & Navigation

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by clicking or tapping the video links at the top of pages in this document. If the video does not automatically load, copy the URL and paste it into a browser window to access the video.

You can also view the videos by visiting the following website:

www.youtube.com/KiaFeatureVideos


This document is interactive: from the [Table of Contents](#) page, you can click or tap on any subject to immediately access that page. To return to the Table of Contents, click/tap the home icon at the top left of the page (🏠). For longer sections that cover more than one page, you can navigate between pages using the arrows (◀▶).

This document is a PDF designed to be viewed on a smart device and/or downloaded to a desktop computer. Pages can be printed using legal (8.5" x 14") paper.


REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

The video resources should not be accessed while you are operating your Kia vehicle.


Getting Started




Getting Started
With Your New
Kia Video



Your New Kia
Important Care
Tips Video



Vehicle Cameras
Important Tips
Video



Navigation System
Important Tips
Video

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia’s most used features:

1

[Smart Key with Remote Start*](#)

108

2

[Fuel Filler Door Release](#)

118

3

[Power Adjustable Driver’s Seat*](#)

102

4

[Front Seat Headrest Adjustment](#)

106

5

[Seat Warmers*](#)

101

6

[Folding Rear Seats](#)

104

7

[Windshield Wipers & Washers](#)

66

8

[Navigation-based Smart Cruise Control \(NSCC\)*](#)

41

9

[Normal Maintenance Schedule](#)

132

10

[User Settings* - Instrument Cluster](#)

19

11

[Vehicle Settings* - Infotainment System](#)

21

12

[Bluetooth® Wireless Technology](#)

67

13

[Kia Connect^{†1} Activation* / Kia Connect^{†1} Assistance*](#)

79

14

[Display Audio System*](#)

76

15

[Kia Access App Download](#)

81

16

[Kia Access App Features Guide](#)

82

17

[Android Auto™ / Apple CarPlay® Setup](#)

73

18

[Kia Connect^{†1} with Navigation*](#)

83

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver’s primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver’s eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

*IF EQUIPPED

Table Of Contents

VIDEOS & NAVIGATION

GETTING STARTED

INSTRUMENT CLUSTER

Instrument Cluster Overview

Indicators & Warning Lights

Tire Pressure Monitoring System (TPMS)

Fuel Economy / Tips for Economical Driving.

Drive Mode Integrated Control System.

VEHICLE SETTINGS

Instrument Cluster LCD Modes

Average / Instant Fuel Economy.

Trip Modes / Trip Computer

Service Interval Mode*

Ambient Light and Sound Mood Lamp*

User Settings* - Instrument Cluster.

Vehicle Settings* - Infotainment System

Vehicle Auto-Shut Off.

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Forward Collision-Avoidance Assist (FCA)

Lane Keeping Assist (LKA)

Blind-spot Collision-Avoidance Assist (BCA)*.

Safe Exit Warning (SEW)*.

Lane Following Assist (LFA)

Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)*

Cruise Control (CC)

Smart Cruise Control (SCC)*

Navigation-based Smart Cruise Control (NSCC)*

Intelligent Speed Limit Assist (ISLA)*

Highway Driving Assist (HDA)*

Rear View Monitor (RVM)

Rear Cross-traffic Collision-Avoidance Assist (RCCA)*

Reverse Parking Distance Warning (PDW)*

DRIVER'S PANEL

Instrument Cluster Control*

Electronic Stability Control (ESC)

Idle, Stop & Go (ISG) System*

Hill-start Assist Control (HAC)

Engine Start/Stop Button*

Power Windows, Window Lock & Central Door Lock

Rear Door Locks - Double Pull to Open

Automatic Door Lock/Unlock

Power Outside Mirrors

Heated Outside Mirrors*

Continued on next page

*IF EQUIPPED

Table Of Contents

[Continued from previous page](#)

STEERING WHEEL CONTROLS

Tilt/Telescoping Steering Wheel	61
Headlights & High Beams	62
Daytime Running Lights (DRL)*	62
High Beam Assist (HBA)	63
Turn Signals & Fog Lights*	64
Windshield Wipers & Washers	65
Rear Wiper & Washer*	66

INFOTAINMENT SYSTEM

Bluetooth® Wireless Technology	67
Steering Wheel Audio Controls	71
Android Auto™ / Apple CarPlay® Setup	73
Display Audio System*	76
Kia Connect⁺1 Activation*	79
Kia Connect⁺1 Assistance*	80
Kia Access App Download	81
Kia Access App Features Guide	82
Kia Connect⁺1 with Navigation*	83

CENTER PANEL

Digital Clock (Infotainment System)	86
Multimedia USB Port, Power Outlets & USB-C Charger Ports*	87
Wireless Smartphone Charging System*	89
Automatic Climate Control*	91
Manual Climate Control*	94
Automatic Gear Shift with Sportmatic® Shifting	96
Electronic Parking Brake (EPB)*	97
Auto Hold*	98
Downhill Brake Control (DBC)	99
All Wheel Drive (AWD) System*	100
Seat Warmers* / Ventilated Seats*	101

SEATING

Power Adjustable Driver's Seat*	102
6-Way Manual Adjustable Driver's Seat*	103
Folding Rear Seats	104
Rear Occupant Alert (ROA) with Door Monitoring	105
Front Seat Headrest Adjustment	106
Unfastening Center Seat Belt	107

[Continued on next page](#)

*IF EQUIPPED

Table Of Contents

[Continued from previous page](#)

OTHER KEY FEATURES

[Smart Key with Remote Start*](#)

[Digital Key 2 Touch*](#)

[Remote Keyless Entry \(Folding Key\)*](#)

[Fuel Cap / Malfunction Indicator \(Check Engine Light\)](#)

[Fuel Filler Door Release](#)

[Hood Release Lever and Latch](#)

[Map/Room Lamps](#)

[Sunroof Operation*](#)

[Sun Visor](#)

[Manual Liftgate* / Liftgate Release Button](#)

[Power Liftgate*](#)

[Smart Power Liftgate with Auto Open*](#)

SAFETY FEATURES

[Seat Belts](#)

[Occupant Detection System \(ODS\) / Passenger Airbag Off Indicator](#)

[Child-Protector Rear Door Lock](#)

2.0L NON-TURBO NORMAL MAINTENANCE CHART

1.6L TURBO GDI NORMAL MAINTENANCE CHART

LEGAL DISCLAIMERS

108

111

116

117

118

119

120

121

123

124

125

127

129

130

131

132

133

134

*IF EQUIPPED




Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Coolant Temperature Gauge
- E** Indicator & Warning Lights
- F** Gear Shift Position Indicator, Odometer, Trip Modes / Trip Computer
- G** Fuel Gauge



Instrument
Cluster LCD
Display Video

◀▶ Arrow direction indicates the side of the vehicle where the fuel door is located

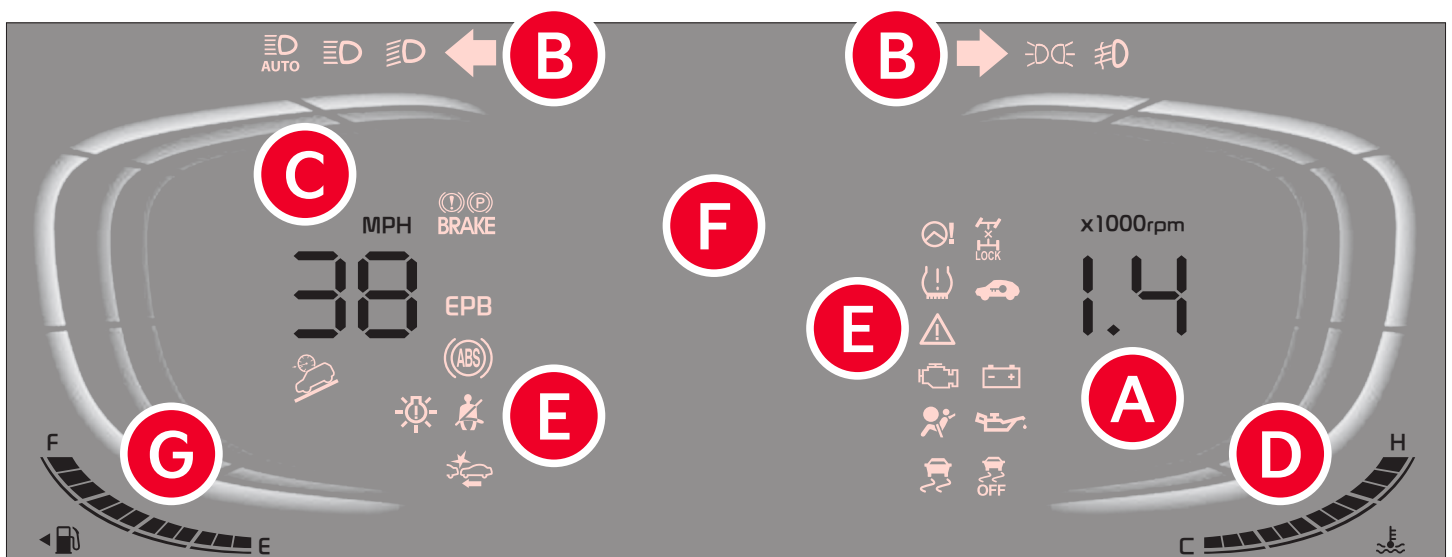

(Type A Cluster)

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations.

For more information on the Instrument Cluster and the function of all indicator and warning lights, please refer to section 4 in the Owner's Manual.



INSTRUMENT CLUSTER

Indicators & Warning Lights

	Turn Signal Indicator Lights		Forward Safety Warning Light*		Downhill Brake Control (DBC) Indicator Light
	Low Engine Oil Level Warning Light		Lane Safety Indicator Light*		Cruise Indicator Light*
	SPORT Mode Indicator Light*		Electric Power Steering (MDPS) Warning Indicator		Anti-lock Braking System (ABS) Warning Light
	High Beam Assist Indicator Light*		Charging System Warning Light		Electronic Stability Control (ESC) Indicator Light
	High Beam Indicator Light		Engine Oil Pressure Warning Light		Electronic Stability Control (ESC) OFF Indicator Light
	Low Beam Indicator Light*		Parking Brake & Brake Fluid Warning Light		AWD Lock Indicator Light*
	Light ON Indicator Light		Seat Belt Warning Light		Low Fuel Level Warning Light
	Front Fog Light Indicator		Airbag Warning Light		LED Headlamp Warning Light*
	Master Warning Light*		Electric Parking Brake (EPB) Warning Light*		Icy Road Warning Indicator Light*
	SMART Mode Indicator Light*		Malfunction Indicator Light		Immobilizer Indicator Light*
	Electronic Brakeforce Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at the same time)		Low Tire Pressure Light /Tire Pressure Monitoring System (TPMS) Malfunction Indicator		Idle, Stop & Go (ISG)
					AUTO HOLD Indicator*


This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.


Your vehicle's Instrument Cluster & indicator light locations may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.






Tire Pressure Monitoring System (TPMS)^{†19}



The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The indicator  will illuminate if it detects one or more tires is significantly underinflated, a spare tire without a TPMS sensor is installed on the vehicle, or the tire pressure drops due to outside temperature becoming significantly lower.


Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Indicator . See front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.



Tire Pressure Monitoring System Video

Low Tire Pressure

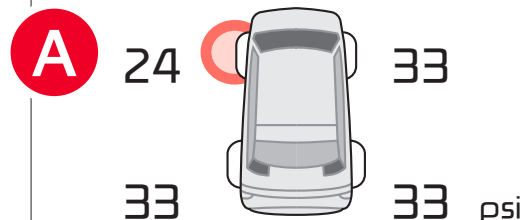

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on “cold tires” that have been sitting stationary for at least 3 hours or driven less than 1 mile during that 3 hour period, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TMPS light. Manually confirm tire pressures after significant changes in temperature or altitude

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 7 in the Owner's Manual for more information.



Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:



**Tips for
Economical
Driving Video**

- Use the climate control system less often. Use the Driver Only* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

Refer to section 5 in the Owner's Manual for more information or snap the QR Code above to view a video.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Drive Mode Integrated Control System

The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the DRIVE MODE knob **B**.




Drive Mode
Integrated
Control System
Video

When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster (except for NORMAL). The system's default mode is NORMAL mode and when selected, the indicator will not be illuminated.

- **NORMAL and SPORT Mode**

- **SMART Mode** - When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited)

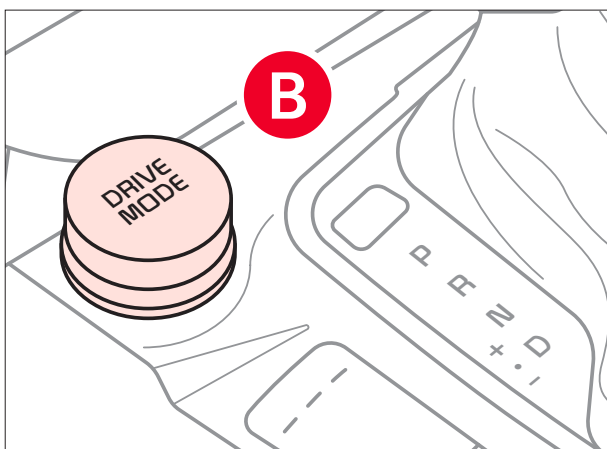

(Type A shown. Located above gear shift)

QUICK TIP

When vehicle is turned off while in SPORT or SMART Mode, the system will default to NORMAL mode. SPORT or SMART mode would need to be selected again once the vehicle is restarted.

REMINDERS:

- Steering effort may be slightly increased in SPORT mode
- When SPORT mode is selected, fuel economy may decrease

Image is for illustrative purposes only and may not reflect actual feature or operation. Your vehicle's buttons may differ from those in the illustrations. Refer to section 5 in the Owner's Manual for more information.



Instrument Cluster LCD Modes*

Press the Mode button **A** on the right side of the Steering Wheel to cycle through different Instrument Cluster LCD Modes:



Instrument Cluster LCD Display Video



Driving Assist: Displays Lane Keeping Assist, Smart Cruise Control*, Lane Following Assist, Highway Driving Assist*



Trip Computer Mode: Displays driving information for fuel economy, accumulated info, auto stop* and speedometer



Turn-by-Turn Mode*: Displays the route guidance and destination info




User Settings Mode*: Change settings for Driver Assistance, cluster, lights, door, convenience, units, language and reset



Information Mode: Displays information on driving force distribution (AWD), Tire Pressure



Master Warning Mode: Displays warning messages related to the vehicle only when one or more systems is not operating normally

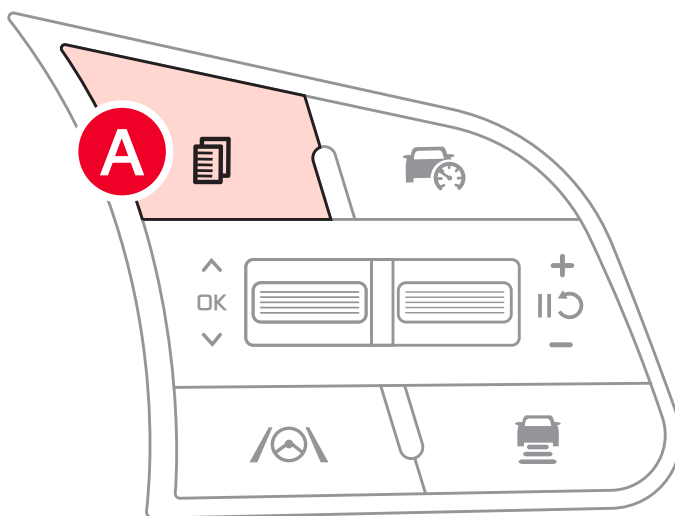

(Type A; Controls located on right side of Steering Wheel)

Images are for illustrative purposes only and may not reflect actual feature or operation.


Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. Refer to section 4 in the Owner's Manual for more information.



Average / Instant Fuel Economy

Press the Mode button **A** and cycle to the Fuel Economy screen in the Trip Computer to display Average/Instant Fuel Consumption. The average fuel economy is calculated by the total driving distance and fuel consumption since the last reset. Instant fuel economy displays the fuel economy during the last few seconds, when the vehicle speed is faster than approximately 6 mph.

REMINDER: If the vehicle speed exceeds 6.2 mph after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (----).

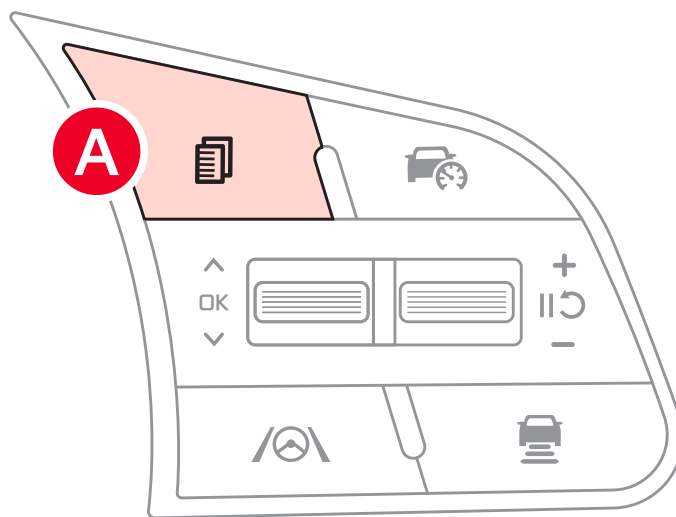

(Type A; Controls located on right side of Steering Wheel)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Trip Modes / Trip Computer


The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the Engine Start/ Stop button* is in the ON position.

To cycle through the different LCD Instrument Cluster modes, press the Mode button **A**.

When in Trip Computer mode , press the OK button **B** up/down to cycle through the screens. When displaying the tripmeter screens, press and hold the OK button **B** to reset the trip distance to zero.

REMINDERS:

- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

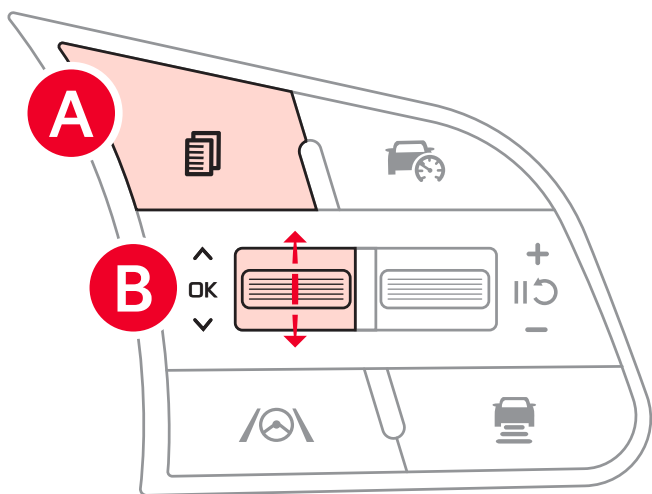


(Type A; Controls located on right side of Steering Wheel)

Your vehicle's steering wheel buttons may differ from those in the illustrations.
Refer to section 4 in the Owner's Manual for more information.



Steering Wheel Controls Video

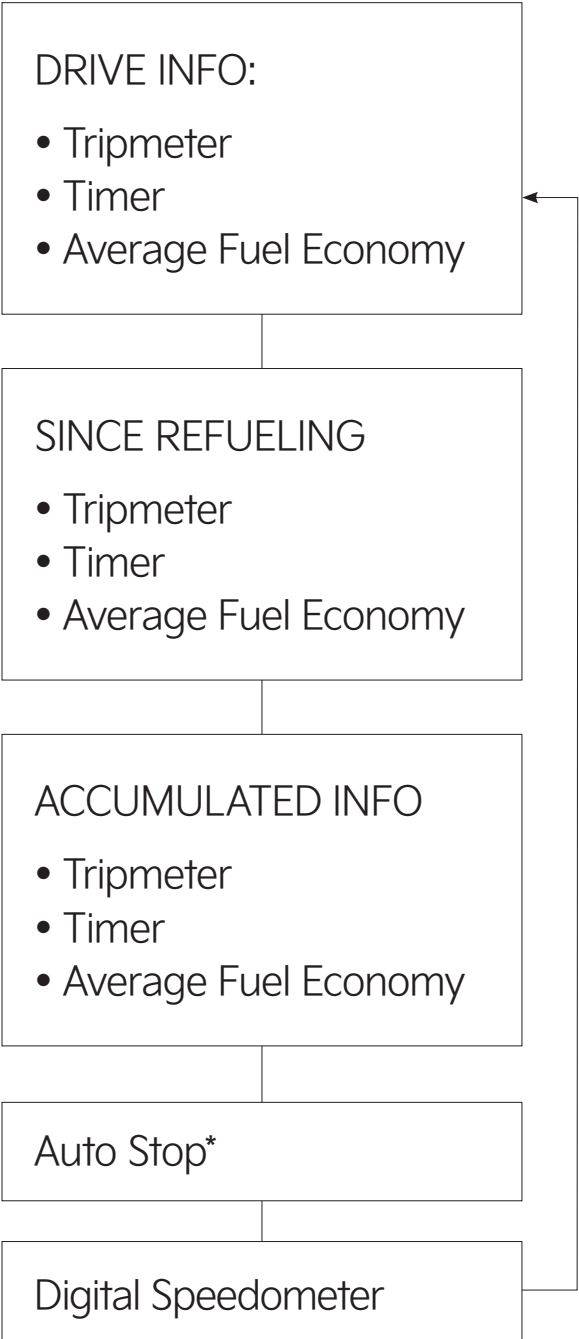


(Type B)

*IF EQUIPPED




Service Interval Mode*

To enter Service Interval Mode, press the Mode button  **A** to go to User Settings* in the Instrument Cluster or go to the Vehicle Settings* in the


Infotainment System. When in Service Interval Mode, the system will display the tire pressure status, number of miles remaining until next service is due, as well as the type of service due.

When service is required, the following will be displayed: **Service Required**.

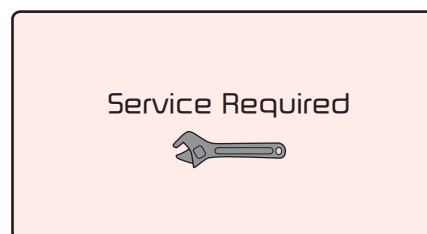

When in User Settings*, to reset the Service Interval Mode system, press and hold the OK button **B** for more than 1 second.

To turn **Service Interval** reminders off, uncheck Service Interval.

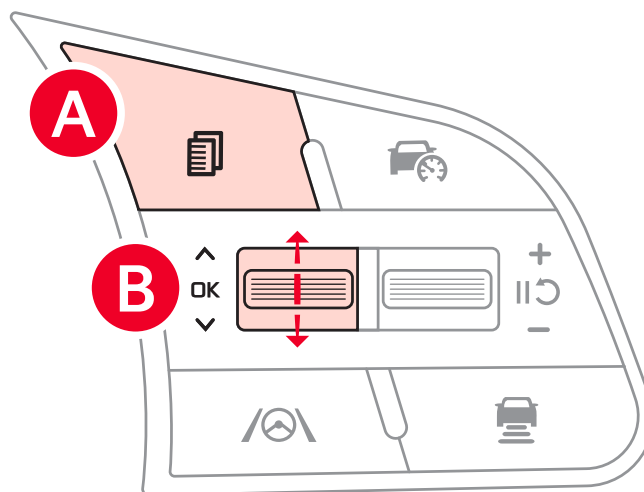

(Type A; Controls located on right side of Steering Wheel)

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation.


Service Interval Mode*

[Continued from previous page](#)

Service Interval Setting

When in the User Settings*, in the **Service Interval** screen, set the service interval:

- Press the Mode button **A** to cycle to User Settings*
- Scroll down to Service Interval mode  and select
- If Service Interval is not checked, press the OK button **B** to turn ON
- Press the OK button **B** up/down to select/change the interval setting
- Press the OK button **B** to select the interval

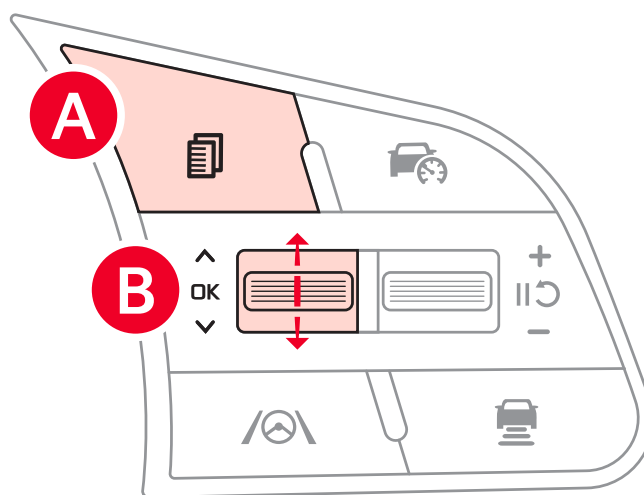

(Type A; Controls located on right side of Steering Wheel)

QUICK TIPS


- When engine oil life reaches 5% or below, an “Engine Oil Change Due Soon” message will appear on the instrument cluster. After completing the oil change, be sure to reset the reminder in the User Settings. Go to Convenience, select Oil Change Reminder then press and hold the OK button **B** for more than one second
- Resetting the reminder ensures that your next oil change interval is tracked accurately
- Engine oil life is estimated based on driving conditions and time, and may not directly indicate the actual condition of the oil

Images are for illustrative purposes only and may not reflect actual feature or operation.



Ambient Light and Sound Mood Lamp*

The vehicle’s speaker lights can be customized, including setting the lights to change according to the mood of the music playing.




Ambient, Theme,
Mood Lighting
Video

To change the settings, go to Vehicle Settings* in the Infotainment System. Select Sound Mood Lamp and adjust the different settings.

REMINDERS:

- Sound Mood Lamp cannot be changed while vehicle is moving
- Park vehicle in a safe location before changing the settings
- When any door is opened, the lighting turns off

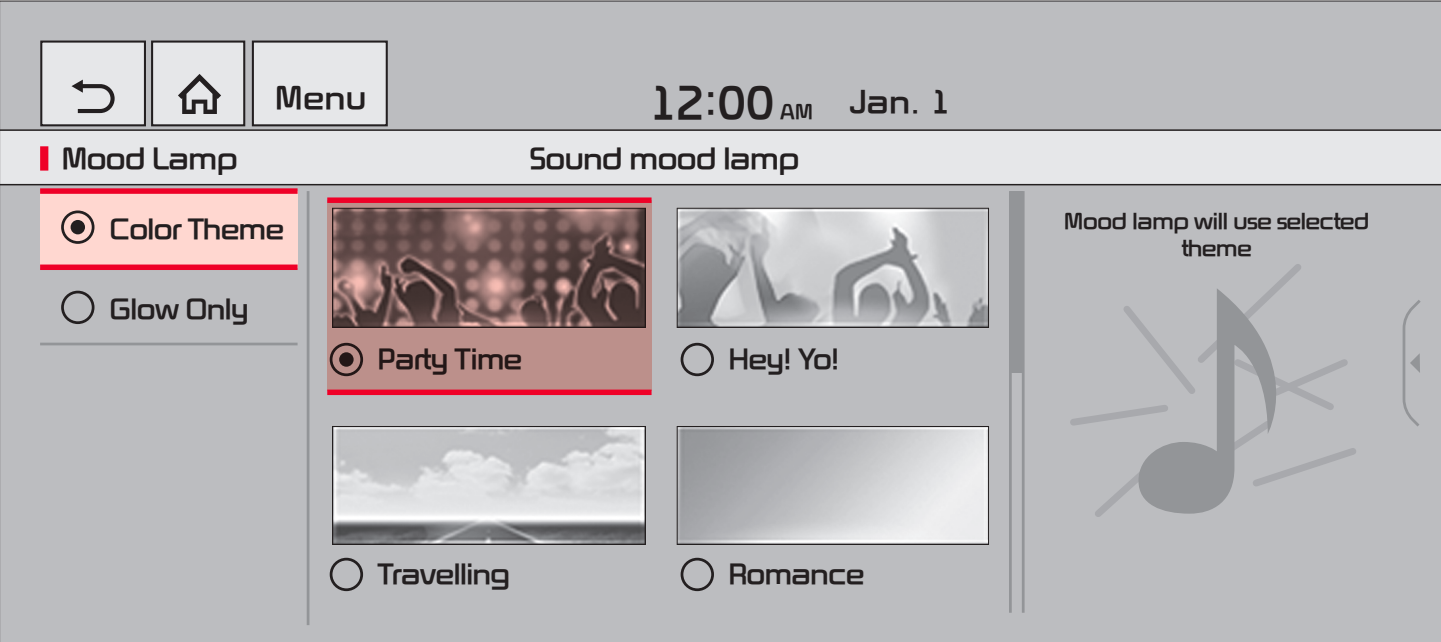

Refer to the Car Infotainment System Quick Start Guide for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

*IF EQUIPPED




User Settings* - Instrument Cluster

To enter the User Settings in the Instrument Cluster, ensure that the vehicle is at a standstill, shift lever is in Park, and the Engine Start/Stop button or

Key is in the ON position. Then press the Mode button **A** and select User Settings*  by pressing the OK button **B** up/down. Select the item by pressing the OK button **B**.



Vehicle & User Settings Video

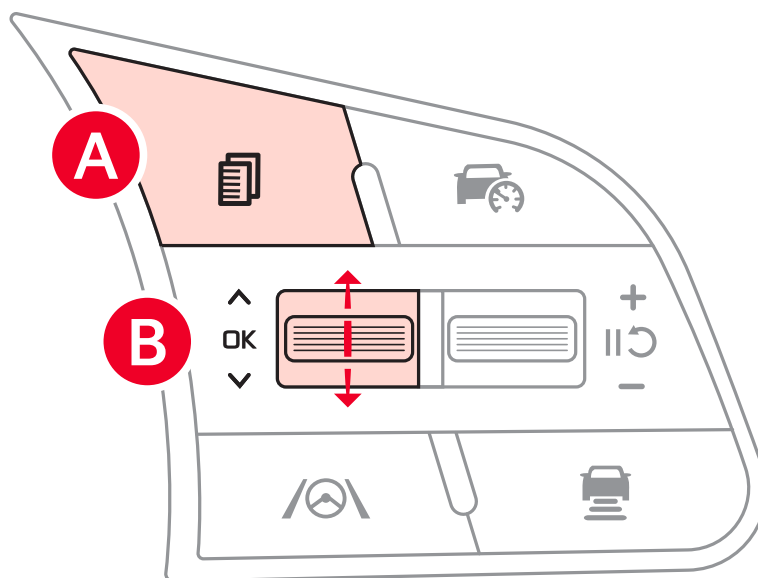

(Type A; Controls located on right side of Steering Wheel)

REMINDER: Some settings appear in Vehicle Settings* in the Infotainment System. Check your Car Infotainment System Quick Start Guide for more information or section 4 in the Owner's Manual.

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



User Settings* - Instrument Cluster

[Continued from previous page](#)

User Settings Modes:

Driver Assistance*:

- Driving Convenience
- Driving Safety
- Driver Attention Warning
- Speed Limit
- Parking Safety
- Warning Methods

Cluster*:

- Illumination
- Cluster Theme Selection
- Reset Fuel Economy
- Content Selection
- Welcome Sound

Lights:

- One-Touch Turn Signal
- Headlight Delay
- High Beam Assist

Door:

- Auto Lock
- Auto Unlock
- 2 Press Unlock
- Power Liftgate
- Power Liftgate Opening Speed
- Power Liftgate Opening Height
- Smart Liftgate
- Remote Window Control

Convenience*:

- Rear Occupant Alert
- Service Interval
- Oil Change Reminder
- Wireless Charging System for Mobile Devices
- Auto Rear Wiper (in R)
- Vehicle Auto-Shut Off

Digital Key:

- Smartphone Key
- NFC Card Key
- Digital Key Information

Climate:

- Recirculate Air
- Automatic Ventilation
- Defog/Defrost Options

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.



Vehicle Settings* - Infotainment System

(Vehicles with navigation system)

To enter the Vehicle Settings* mode in the Infotainment screen, press the **SETUP** key on the audio head unit or the **SETUP** icon on the Infotainment System screen.



Vehicle & User Settings Video

Then press the **VEHICLE** icon, which will take you to the Vehicle Settings screen. Use the touchscreen to navigate through the menus.

Driver Assistance*:

- Driving Convenience
- Driving Safety
- Speed Limit
- Warning Method*
- Driver Attention Warning
- Parking Safety

Head-Up Display:

- Parking Safety
- Head-Up Display
- Display Control
- Content Selection

Cluster*:

- Illumination
- Cluster Theme Selection
- Reset Fuel Economy
- Content Selection
- Welcome Sound

Lights:

- One Touch Turn Signal
- Headlight Delay
- High Beam Assist

Door:

- Auto Lock
- Auto Unlock
- 2 Press Unlock
- Power Liftgate*
- Power Liftgate Opening Speed*
- Power Liftgate Opening Height*
- Smart Liftgate*
- Remote Window Control*

Convenience*:

- Rear Occupant Alert
- Service Interval
- Oil Change Reminder
- Wireless Charging System for Mobile Devices
- Auto Rear Wiper (in R)
- Vehicle Auto-Shut Off

Digital Key:

- Smartphone Key
- NFC Card Key
- Digital Key Information

REMINDER: Some settings appear in User Settings* in the Instrument Cluster.

Check section 4 in the Owner's Manual or the Car Infotainment System Quick Start Guide for more information.



Vehicle Auto Shut-off*

The Vehicle Auto Shut-off system, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes) in the User or Vehicle Settings.



Vehicle Auto Shut-off Video

A warning on the Instrument Cluster will appear stating the “Vehicle will be turned off automatically in...” and a chime will sound when the timer starts **A**. When the timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

Auto Shut-off Settings - The system is on by default and timer is pre-set to 30 minutes. To change the pre-set time settings, go to Vehicle Settings* in the Infotainment System. Then Convenience and select 30 minutes, 60 minutes or OFF.

QUICK TIP

The timer that appears on the Instrument Cluster’s LCD can be reset using the OK button on the right side of the Steering Wheel.

Vehicle will be turned off automatically in

59:01



OK : Reset

REMINDERS:

- When the vehicle is turned off then on again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
 - The vehicle is in (P) Park
 - The driver’s seat belt is unfastened
 - The driver’s door is opened
 - The passenger seat is not occupied

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner’s Manual for more information. Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.



Forward Collision-Avoidance Assist (FCA)^{†4}


Forward Collision-Avoidance Assist is designed to detect a vehicle, pedestrian, or cyclist ahead on the road and can warn the driver of a possible collision with a warning message on the Instrument Cluster **A** and a warning sound. Also, FCA can assist with braking your vehicle to help reduce collision speed or avoid a collision.

The **Junction Turning function*** **B** may help avoid a collision with an oncoming vehicle in an adjacent lane when turning left at a crossroad with the turn signal on by applying emergency braking.





Forward Collision-Avoidance Assist (FCA) Video

Collision Warning

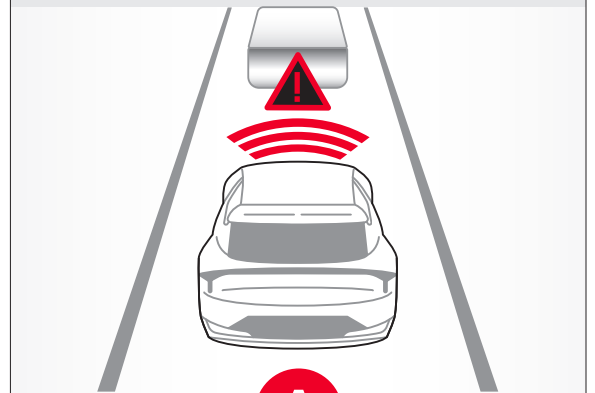

Emergency Braking

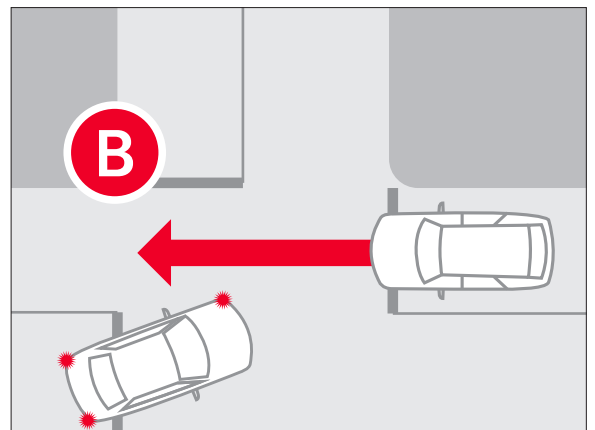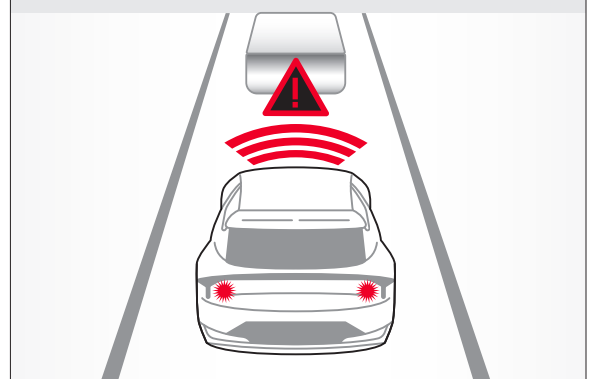

(Junction Turning)


[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation.

Forward Collision-Avoidance Assist (FCA)^{†4}

[Continued from previous page](#)

FCA Settings:

- FCA is on by default. FCA can be turned on/off by going to User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is stopped, gear shift is in Park and the ignition is on or the Engine Start/Stop button* is in the ON position
- **To enable/disable in User settings* ⚙️ in the Instrument Cluster:**
Press the Mode button  **A** on the Steering Wheel to toggle to User Settings ⚙️. Press OK **B** up/down to toggle to Driver Assistance, Driving Safety, then Forward Safety

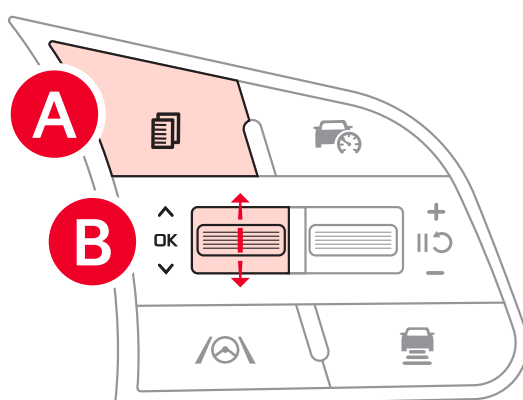

(Type A; Controls located on right side of Steering Wheel)

- **To enable/disable in Vehicle settings* in the Infotainment System:**
Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Forward Safety
- **Forward Safety Warning Timing:** When in Driver Assistance menu, select Forward Safety Warning Timing and select one of the following:
 - **Standard:** This setting allows for a nominal amount of distance between vehicles before initial warning occurs
 - **Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

[Continued on next page](#)



Forward Collision-Avoidance Assist (FCA)^{†4}


[Continued from previous page](#)

- **To adjust the warning volume:** To adjust the Warning Volume: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off

QUICK TIPS

- FCA will become active when the:
 - Ignition is on or the Engine Start/Stop button* is ON
 - Vehicle is traveling faster than 6 mph
 - Electronic Stability Control (ESC) is ON
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- When the FCA system is off, the FCA warning indicator is on in the Instrument Cluster 
- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF


When engaged, FCA is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

Actual User/Vehicle Settings steps may vary by model. Refer to section 6 in the Owner's Manual for more information.




Lane Keeping Assist (LKA)^{†4}

Lane Keeping Assist is designed to detect lane markings (or road edges) and can warn the driver if the vehicle leaves the lane without using the turn signal or


may assist with steering to prevent the vehicle from departing from its lane. When turned on, the Instrument Cluster indicator  will initially illuminate gray. It will remain gray when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When LKA detects the lane markers and can assist with steering, the LKA icon will illuminate green.

If LKA detects that you are moving outside of your lane, LKA may provide steering assistance to prevent the vehicle from moving outside its lane. If the vehicle continues to move outside of the lane, LKA may give a warning sound and display Lane Departure Warning on the Instrument Cluster.



Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster.

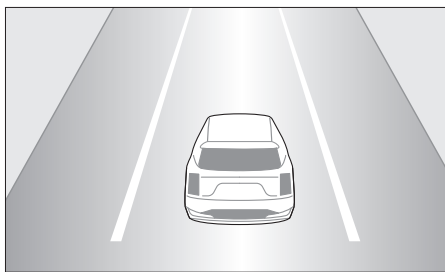

When LKA detects the lane markers, both lanes are displayed white

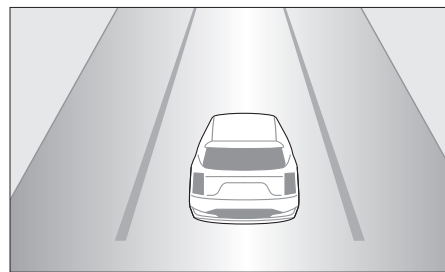

When LKA does not detect the lane markers, the lanes are displayed gray

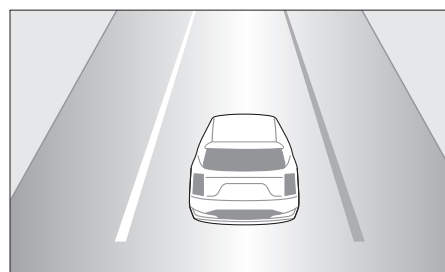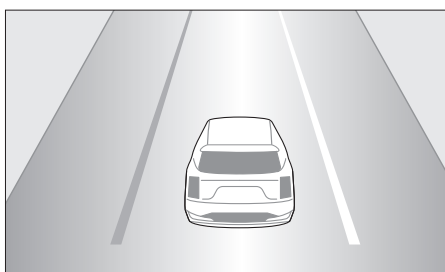

When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)


[*Continued on next page*](#)




Lane Keeping Assist (LKA)^{†4}

[Continued from previous page](#)

LKA Settings:

- Press and hold the Lane Safety button **A** to turn LKA on or off when it is first enabled in User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* is in the ON position
- **To access User Settings* ⚙️ in the Instrument Cluster** - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **C** up/down to toggle to Driver Assistance, Driving Safety and select Lane Safety

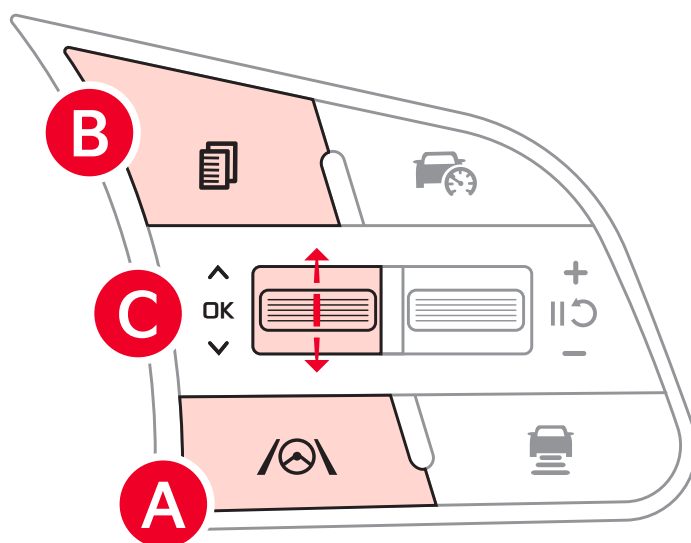

(Type A; Controls located on right side of Steering Wheel)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Lane Keeping Assist (LKA)^{†4}

[Continued from previous page](#)

- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety and select Lane Safety
- **To adjust the Warning Volume:** Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state
- LKA operates when vehicle speed is over 40 mph
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

Actual User Settings steps may vary by model. Refer to section 6 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)*†4

Blind-spot Collision-Avoidance Assist is designed to detect approaching vehicles in the driver's blind spots and warn the driver of a possible collision with a warning indicator and a warning sound. If it detects that there is a collision risk when exiting a parallel parking space, BCA may assist with braking the vehicle to help avoid a collision.





Blind-spot
Collision-
Avoidance Assist
(BCA) Video

Vehicle detection: When another vehicle is detected within the BCA warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When the vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

Collision-Avoidance Assist* (while departing): When you are driving forward out of a parking space, if BCA determines that there's a collision risk with an approaching vehicle in the blind spot, it can help avoid collision by applying the brake. Your vehicle needs to be traveling slower than 2 mph and the approaching vehicle is traveling faster than 3 mph.

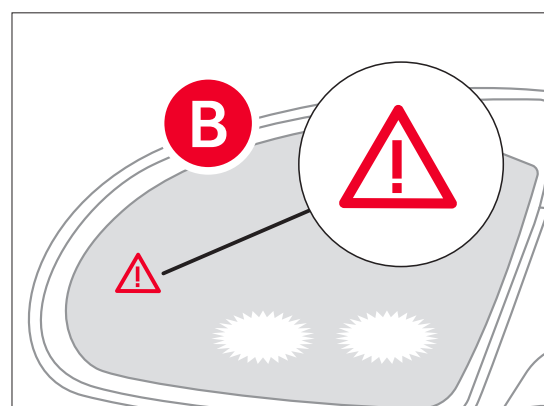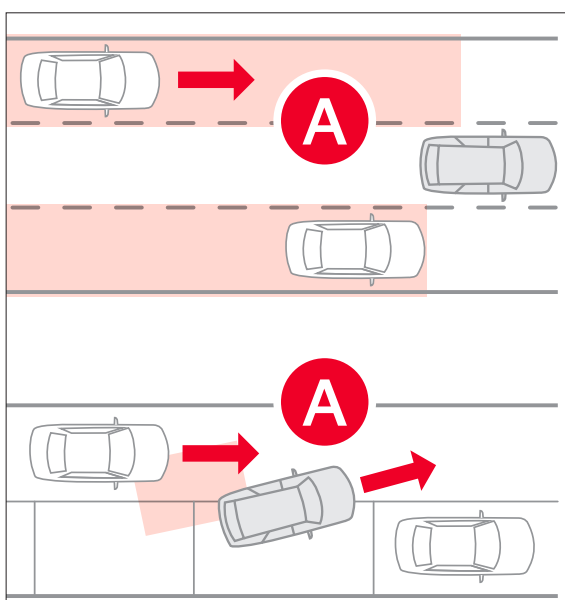

[Continued on next page](#)




Images are for illustrative purposes only and may not reflect actual feature or operation.




Blind-spot Collision-Avoidance Assist (BCA)^{*†4}

[Continued from previous page](#)

BCA Settings:

- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button is in the ON position
- **To enable/disable in User Settings*  in the Instrument Cluster -**
Press the Mode button  **A** on the Steering Wheel to toggle to User Settings . Press the OK **B** up/down to toggle to Driver Assistance, then Driving Safety and select Blind-spot Safety
- **To enable/disable in Vehicle Settings* in the Infotainment System -**
Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driving Safety and select Blind-spot Safety
- **To adjust the Warning Volume:** Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off

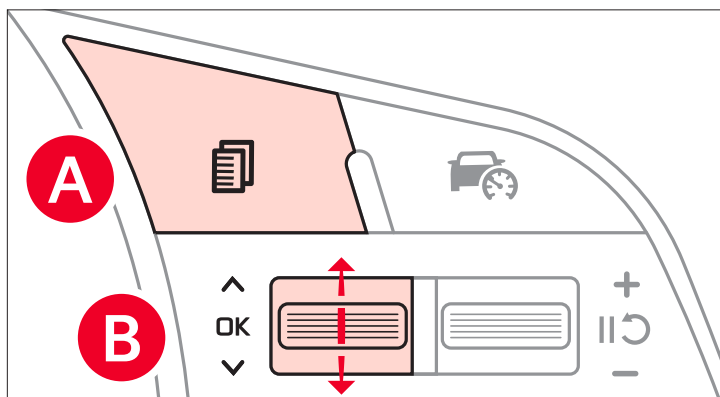

(Buttons located on right side of steering wheel)

[Continued on next page](#)

When engaged, BCA is a supplemental system. Do not solely rely on this system. Always pay attention to the road and drive safely. When engaged, BCA is not a substitute for safe and proper driving.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 6 in the Owner's Manual for more information.



Blind-spot Collision-Avoidance Assist (BCA)^{*†4}

[Continued from previous page](#)

QUICK TIPS

- When activating BCA or restarting the vehicle with BCA enabled, the warning light on the side mirrors will appear for approximately 3 seconds. When the vehicle is restarted with BCA disabled, the warning message will appear on the cluster
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Vehicle speed is above approximately 12 mph

REMINDERS:

- If the turn signal is operated to make a left turn in an intersection, BCA may warn the driver regardless of the driver's intention
- BCA will not issue a warning if the approaching vehicle's speed is calculated to be under 6 mph
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems



Safe Exit Warning (SEW)*†4

While your vehicle is stopped, and if Safe Exit Warning detects a vehicle approaching the rear corner of your vehicle and a passenger opens a door, SEW can warn

the driver with a warning message, a blinking warning light on the side view mirror, and a warning sound to help avoid a collision.





Safe Exit Warning (SEW) Video

SEW Settings:

Only adjust settings when the vehicle is at a standstill, gear shift is in Park, the ignition is on, or the Engine Start/Stop button* is in the ON position.

To enable/disable SEW in User settings* in the Instrument Cluster -

Press the Mode button  on the Steering Wheel to toggle to User Settings . Press the OK button up/down to toggle to Driver Assistance, Driving Safety, then Safe Exit.

To enable/disable SEW in Vehicle settings* in the Infotainment System

- Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Exit Safety.

QUICK TIPS

- To adjust the Warning Volume: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems


REMINDERS:

- SEW may not detect all objects and the occupants should always be mindful of their surroundings
- After the engine is turned off, SEW operates for approximately for 3 minutes but turns off immediately if the doors are locked

When engaged, SEW is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle. See section 6 in the Owner's Manual for more information.





Lane Following Assist (LFA)^{†4}

Lane Following Assist (LFA) is designed to help the vehicle stay centered in its lane **A** by detecting lane markings and vehicles on the road and providing steering inputs in certain circumstances. The Instrument Cluster indicator will initially illuminate gray  when turned ON. It will remain gray when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon will illuminate green.



Lane Following Assist (LFA) Video

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster and an audible warning will sound. If hands on the Steering Wheel are not detected, LFA will cancel.

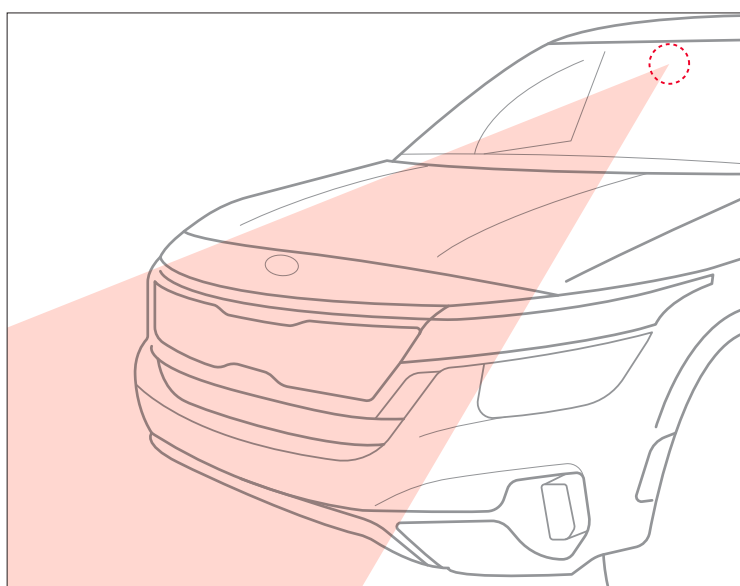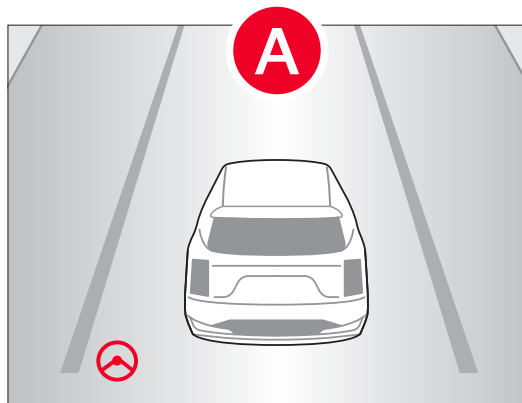

Images are for illustrative purposes only and may not reflect actual feature or operation.

[Continued on next page](#)




Lane Following Assist (LFA)^{†4}

[Continued from previous page](#)

LFA Settings:

- Press the Lane Driving Assist button **A** briefly to turn LFA on or off
- **To adjust the Warning Volume:** Press the **SETUP** button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- LFA will operate only when these conditions are met:
 - LFA detects both sides of the lane markers the vehicle is traveling in
 - The vehicle is traveling slower than 110 mph

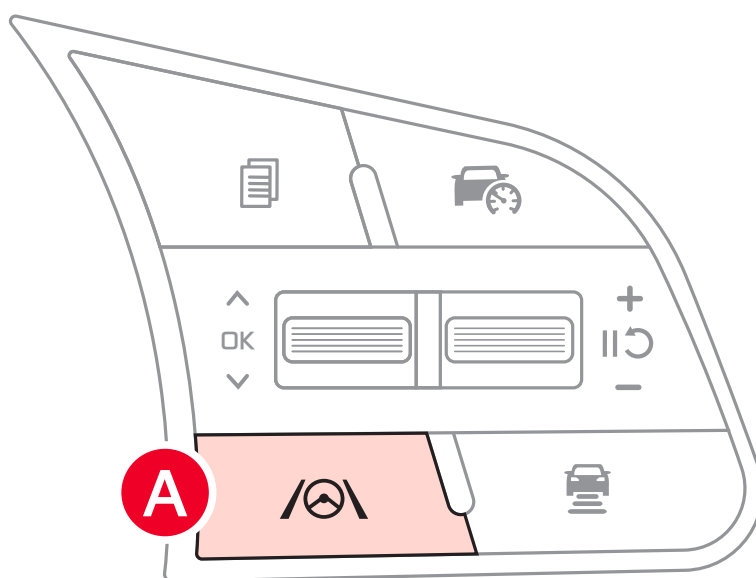

(Controls on right side of Steering Wheel if LFA/SCC equipped)

REMINDER: Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems.

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions. When engaged, Lane Following Assist is not a substitute for safe driving and may not detect all objects around the vehicle. Always drive safely and use caution. Actual Settings steps may vary by model. See section 6 in the Owner's Manual for more detailed information, limitations and conditions.



Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)*†4

Driver Attention Warning is designed to monitor the driver's driving pattern. If DAW detects that the driver's attention level becomes low, DAW may display a message on the Instrument Cluster, "Consider taking a break," **A** and a warning sound to recommend the driver take a break.




Driver Attention
Warning (DAW)
Video



Leading Vehicle
Departure Alert
(LVDA) Video

If the vehicle is stopped and Leading Vehicle Departure Alert (LVDA) is enabled, when a detected vehicle in front starts to depart, LVDA can inform the driver by sounding an alert and displaying a message **B** on the Instrument Cluster.

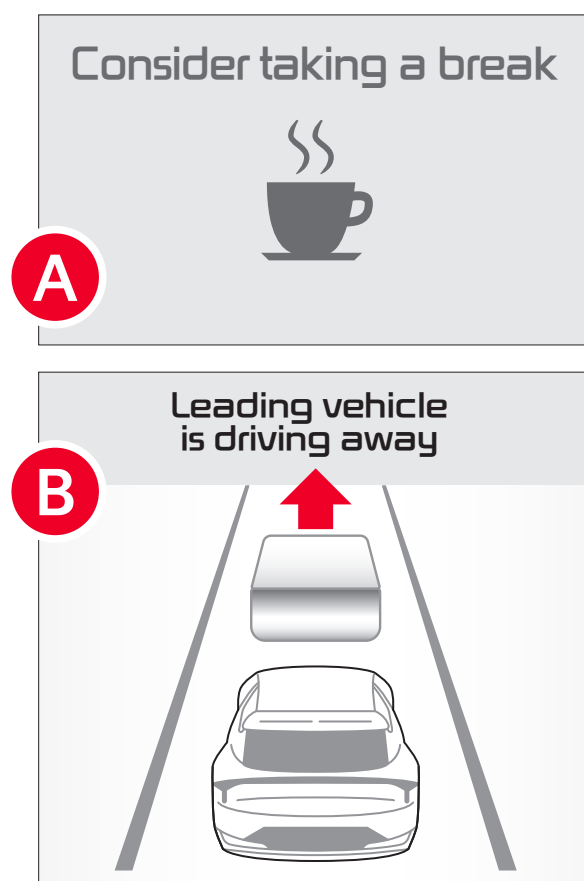

[Continued on next page](#)





Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)*†4

[Continued from previous page](#)

DAW Settings:


Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* is in the ON position.

To enable/disable LVDA in User Settings*  in the Instrument

Cluster - Press the Mode button  **A** on the Steering Wheel to toggle to User Settings . Press the OK **B** up/down to toggle to Driver Assistance, then Driver Attention Warning. Select Leading Vehicle Departure Alert to enable it.

To enable/disable LVDA in Vehicle settings* in the Infotainment

System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning. Select Leading Vehicle Departure Alert to enable it.

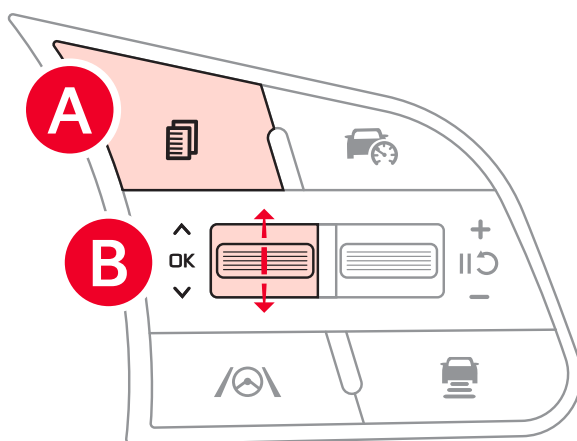

(Buttons located on right side of steering wheel)

REMINDER: When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 4 minutes.

When engaged, DAW and LVDA are not substitutes for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution. Refer to section 6 in the Owner’s Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Cruise Control (CC)^{†4,16}

A Driving Assist button: Press to turn the Cruise Control ON/OFF


B + button: Press up to increase set speed

- button: Press down to decrease set speed

To pause Cruise Control:

- Depress the brake pedal
- Press the  button **C**
- Shift the gear to **N** (Neutral)
- Decrease vehicle speed to less than 20 mph
- Cruise Control will pause if ESC is operating
- Cruise Control will pause if vehicle speed exceeds 110 mph

The set speed will turn off but the cruise indicator will stay on.

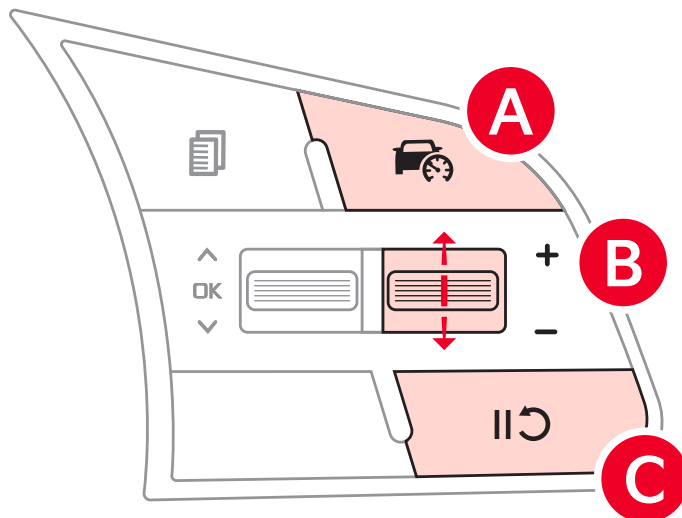

(Type A; buttons located on right side of Steering Wheel)

QUICK TIPS

- Cruise Control is designed to function at above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting
- You can also set speed by accelerating to the desired speed and then pressing the Driving Assist button

Refer to section 6 in the Owner's Manual for more information.



Smart Cruise Control (SCC)*†4,16

Smart Cruise Control is designed to detect a vehicle ahead and help maintain the set speed and the distance from the vehicle ahead.



**Smart Cruise Control
with Overtaking
Acceleration
Assist Video**

With SCC on and activated and the vehicle distance set, when SCC detects a vehicle slowing or stopping, it can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than three seconds, press the accelerator pedal or press the **+/-** buttons on the Steering Wheel to start moving the vehicle. Smart Cruise Control will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

QUICK TIP

If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn SCC on, the set speed will be set to 20 mph.

[*Continued on next page*](#)





Smart Cruise Control (SCC)*†4,16

[Continued from previous page](#)

To set/adjust the set speed:

- Press the Driving Assist button **A** to turn SCC on and set the current speed (One-Touch Set). The SCC indicator will illuminate on the Instrument Cluster. SCC may decrease the speed to maintain the distance with the vehicle in front
- Press the +/- button **B** up/down to increase/decrease the set speed

To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. The image on the LCD screen **D** will change when scrolling through the settings. Each time the button is pressed, the vehicle distance changes **E**.

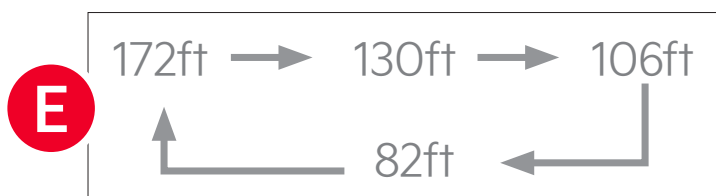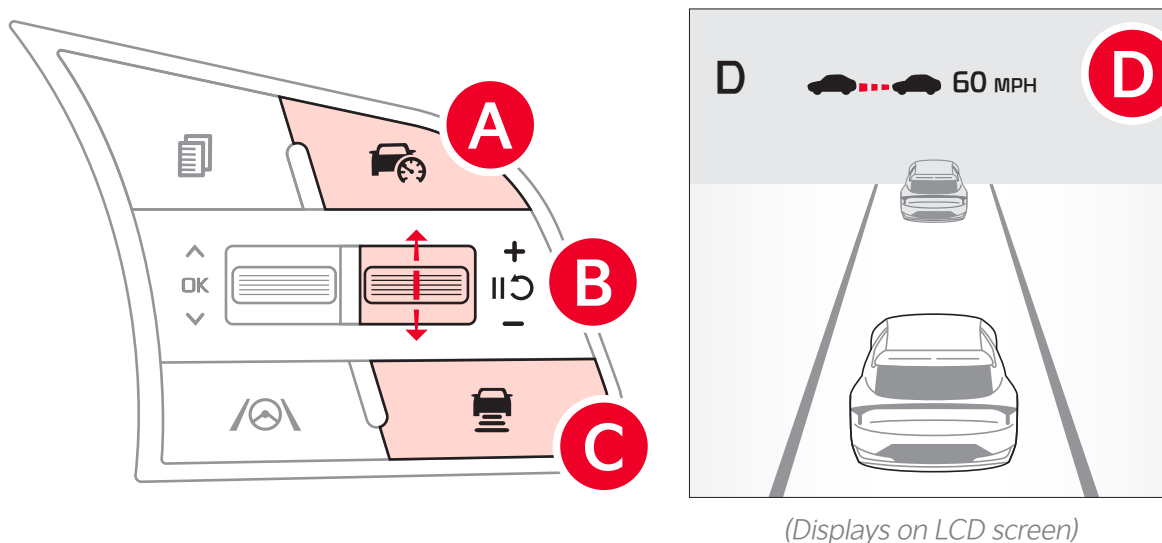

[Continued on next page](#)

The distance settings are approximations and may vary depending on the vehicle speed at the time. See Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Cruise Control (SCC)*†4,16


[Continued from previous page](#)

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume button **B**. The SCC indicator on the Instrument Cluster will change.

To turn SCC off: Press the Driving Assist button **A**. The SCC indicator on the Instrument Cluster will turn OFF.

REMINDERS:

- When stopped behind another vehicle, the driver may depress the brake pedal to turn on SCC
- When following a vehicle, SCC is designed to automatically adjust your vehicle speed based on the vehicle detected in front
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See the Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep SCC off when not in use to avoid setting a speed that the driver is not aware of
- SCC may decelerate if it detects that a surrounding vehicle intervenes in front of your vehicle
- SCC may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead

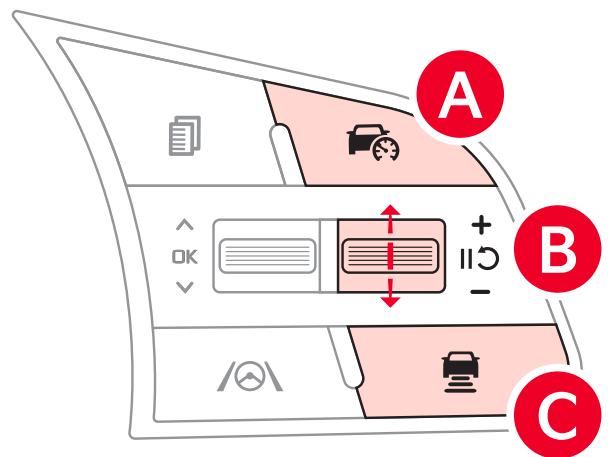

When engaged, SCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See section 6 in the Owner's Manual for more information.





Navigation-based Smart Cruise Control (NSCC)^{*†4}

Navigation-based Smart Cruise Control can automatically adjust the vehicle speed depending on the road conditions by using information from the navigation system when driving on highways while Smart Cruise Control is operating.

To turn on NSCC, go to Vehicle Settings* in the Infotainment System by selecting Driving Convenience, Highway Auto Speed Change.

When SCC is on and operating, the vehicle is driving on limited/controlled access highways, and NSCC is turned on, NSCC is enabled and the NAV icon **A** will illuminate gray on the Instrument Cluster.

When NSCC detects a curve ahead, activates, and reduces the vehicle speed, the green NAV icon **A** will blink. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

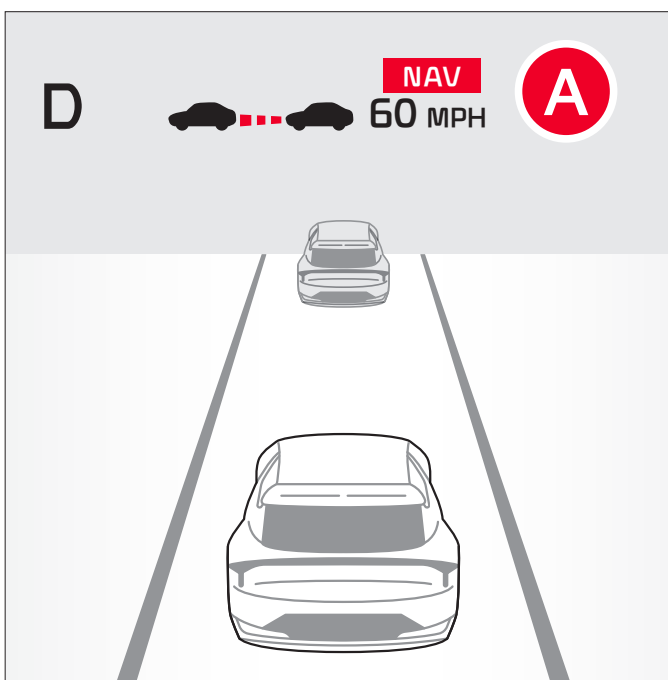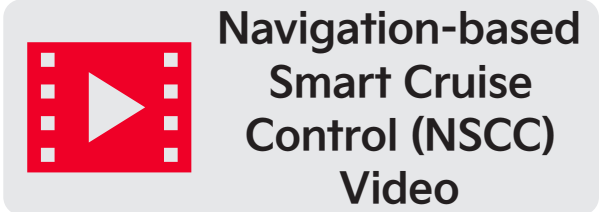

(Displays on LCD screen)

REMINDER: NSCC is only available on certain controlled access roads and highways.

NSCC is a supplemental function and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 6 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.



Intelligent Speed Limit Assist (ISLA)*†4


Intelligent Speed Limit Assist is designed to use speed limit information from the navigation system to inform the driver of the detected speed limit.



Intelligent Speed Limit Assist (ISLA) Video


When ISLA is on and active, ISLA will display an alert on the Instrument Cluster of the detected speed limit **A**. If the vehicle's current speed exceeds the detected speed limit, the vehicle's current speed will blink red on the LCD.

REMINDER: Additional information may be displayed if additional road sign information is detected.

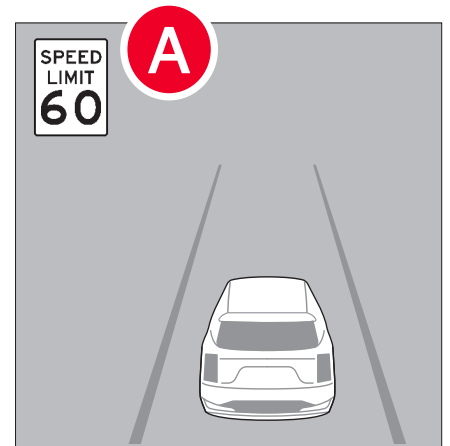

ISLA Settings:

- **To access User settings* in the Instrument Cluster:** Press the Mode **B** button on the Steering Wheel to toggle to User Settings. Press the OK **C** up/down to toggle to Driver Assistance, then Speed Limit
- **To access Vehicle settings* in the Infotainment System:** Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Speed Limit

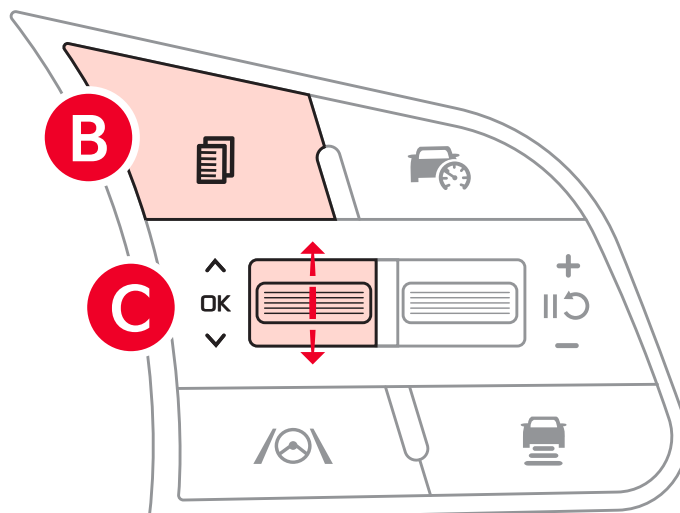

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation.



Intelligent Speed Limit Assist (ISLA)*†4

[Continued from previous page](#)

- Select one of the three modes:
 - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message to change the speed to help the driver stay within the posted speed limit, and informs the driver to change set speed of Manual Speed Limit Assist or Smart Cruise Control to help the driver stay within the speed limit
 - **Speed Limit Warning:** Informs the driver of the posted speed limit **A** and warns the driver when the vehicle is traveling faster than the posted speed limit
 - **Off:** ISLA is disabled
- **Speed Limit Offset:** You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to “0” if you want the vehicle to travel at the posted speed limit when ISLA is on
- **Auto Set Speed Change:** If the set speed is set to the current speed limit on the highway during SCC or MSLA operation, the set speed is changed automatically whenever the speed limit changes. This feature functions on roads with a speed limit of 45 mph or higher. When it’s active, the set speed will appear in green on the instrument cluster, indicating that the system is engaged

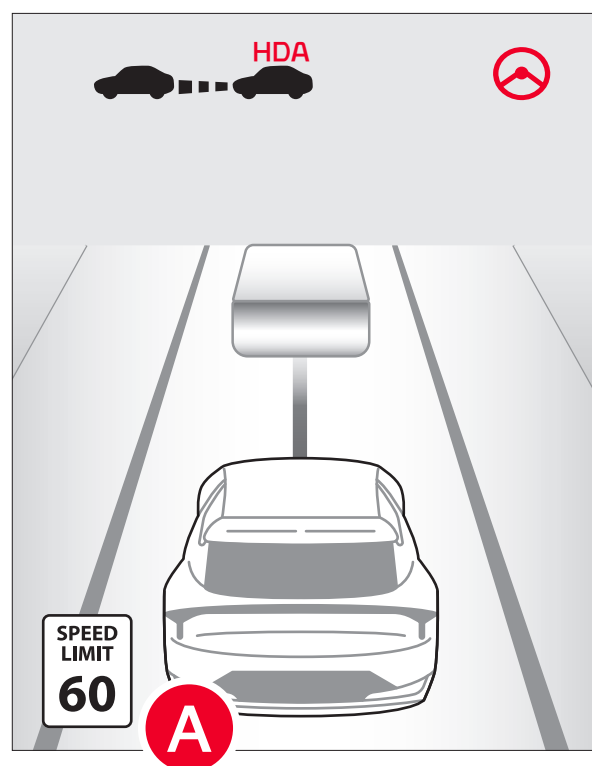

Refer to section 6 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Highway Driving Assist (HDA)*†4

Highway Driving Assist is designed to detect lanes and vehicles ahead, help maintain the distance from the vehicle ahead and the set speed, and center the vehicle within detected lane markers while driving on certain highways/freeways.



Highway Driving Assist (HDA) Video

When HDA is activated and the conditions are met, the Instrument Cluster indicator will illuminate green **A**. If conditions are not met, HDA will be in standby mode and the indicator will illuminate gray. When HDA is operating, and if both lanes are recognized, the Instrument Cluster image will show the lanes illuminated gray **B** and the HDA indicator **A** illuminated green.

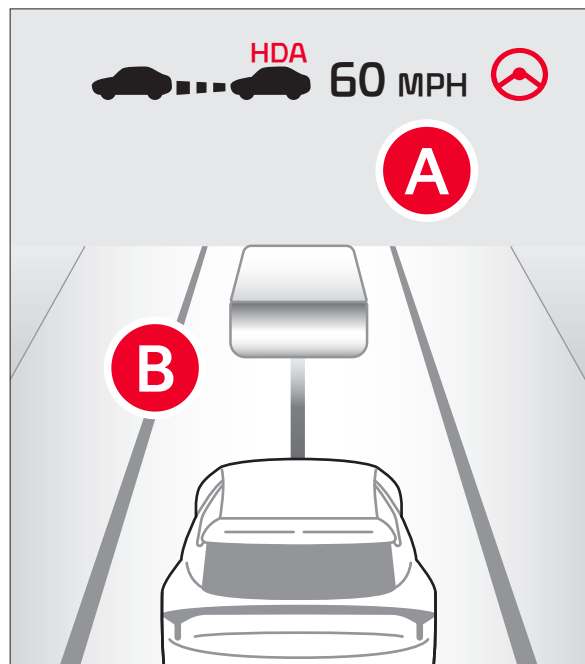

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Highway Driving Assist (HDA)*†4

[Continued from previous page](#)

HDA Settings:

To enable HDA in the Vehicle Settings* in the Infotainment System:

Press the **SETUP** key, then press **VEHICLE** on the screen to enter Vehicle Settings. Select Driver Assistance, Driving Convenience and then Highway Driving Assist.

HDA will operate only when these conditions are met:

- The vehicle is traveling slower than 110 mph or the highway speed limit
- When driving on certain limited/controlled access highways/freeways
- When the SCC is on and operating
- When the SCC speed is set to current posted highway speed or slower



QUICK TIPS

- **To adjust the Warning Volume:** Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME, and turn DRIVER SAFETY PRIORITY on or off
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDER: When the ignition is cycled, HDA returns to its previous state.


When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways.

Always drive safely and use caution. See section 6 in the Owner's Manual for more detailed information, limitations and conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear View Monitor (RVM)^{†4}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the Infotainment System screen while the vehicle is in R (Reverse). Press the Parking/View button* **A** to turn RVM on. Press again to turn off.

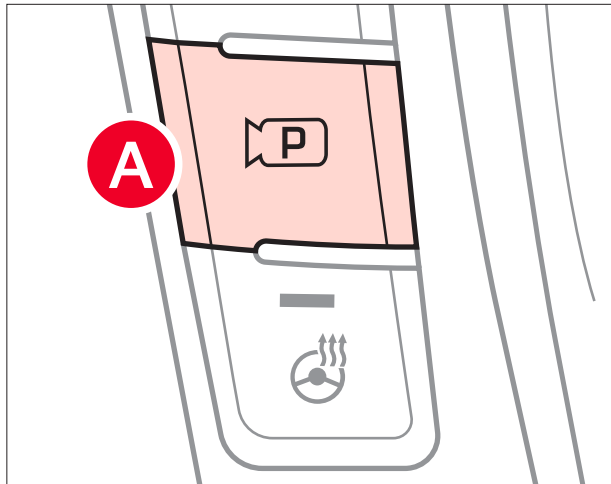

(Button located on center panel.)

REMINDERS:

- Through normal use and after inclement weather or washing, the rear camera may become dirty or obstructed. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While Rear View Monitor is active, the volume will be lowered only if Parking Safety Priority setting is enabled

[Continued on next page](#)

When engaged, Rear View Monitor is not a substitute for proper and safe backing-up procedures. The Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.



Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 6 in the Owner's Manual for more information.



Rear View Monitor (RVM)^{†4}


[Continued from previous page](#)

RVM Camera Settings - Press the onscreen settings button   to adjust the display contents and display settings.


- You can also go to Vehicle Settings* in the Infotainment System - Press the **SETUP** button or key, **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY and CAMERA SETTINGS

Rear View Monitor activates when the:

1. Engine Start/Stop button* is in the ON (Red light) position
2. Gear Shift Lever is in the R (Reverse) position

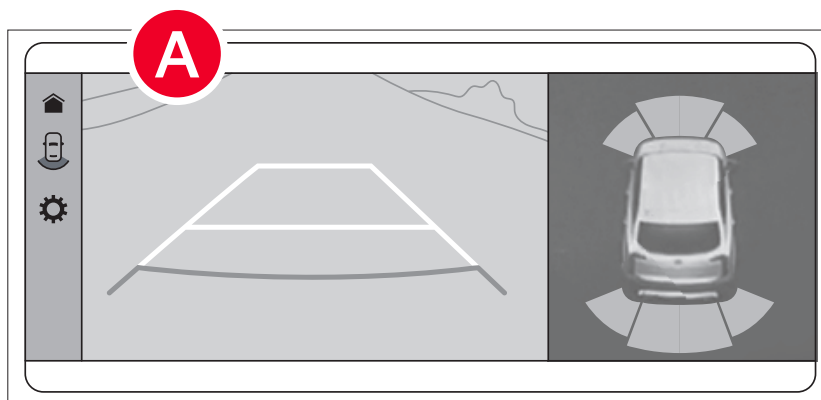

(Rear View Camera Display)

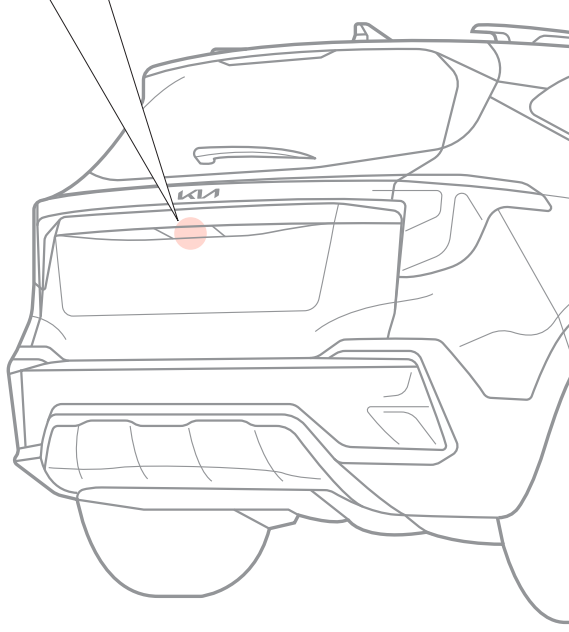

Images are for illustrative purposes only and may not reflect actual feature or operation.





Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver under certain conditions. It may temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.



Rear Cross-traffic Collision Avoidance Assist (RCCA) Video

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA is designed to automatically apply the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

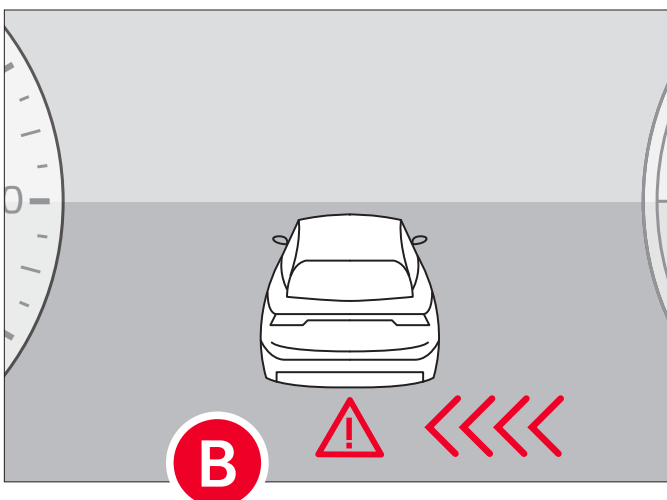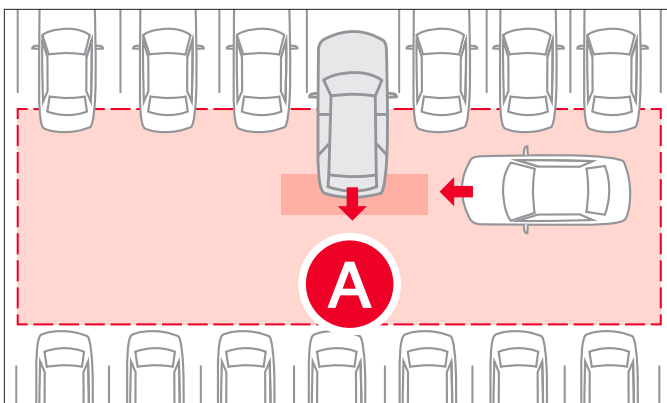

QUICK TIPS

- **To adjust the Warning Volume:** Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

[*Continued on next page*](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Rear Cross-traffic Collision-Avoidance Assist (RCCA)*†4

[Continued from previous page](#)

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

RCCA Settings:

- RCCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* is in the ON position
- **To access Vehicle Settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross-traffic Safety

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range and traveling faster than 3 mph, the RCCA system will show a warning

When engaged, RCCA is a supplemental system and is not a substitute for safe driving. RCCA may not detect all objects behind vehicle. Always drive safely and use caution. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 6 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Reverse Parking Distance Warning (PDW)^{*†4}

Parking Distance Warning helps alert the driver with auditory warnings if an obstacle is detected within a certain range while the vehicle is moving forward or in reverse at low speeds.

To turn PDW on, press the Parking Safety button **A** (LED illuminated).

To turn PDW off, press again **A** (LED not illuminated). PDW will activate when the ignition is ON/READY and the vehicle is in **R** (Reverse).

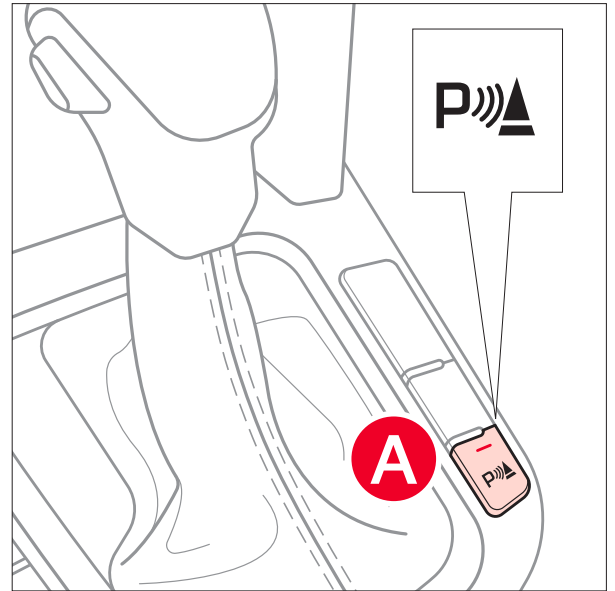

(Located on Center Console)

To enable in Vehicle Settings* in the Infotainment System: Press the **SETUP** key or the onscreen **SETUP** button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY.

QUICK TIPS

- To adjust the Warning Volume: Press the SETUP button to go to VEHICLE SETTINGS on the Infotainment System. Press VEHICLE, DRIVER ASSISTANCE, and under WARNING METHODS, you can adjust WARNING VOLUME
- Adjusting the Warning Methods or Volume will adjust settings for other driver assistance systems

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Reverse Parking Distance Warning (PDW) may not detect every object around the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.




Instrument Cluster Control

With parking lights/headlights ON, toggle switch **A** up (+) or down (-) to adjust the brightness of the Instrument Panel illumination.

REMINDER: This control does not adjust brightness on the Infotainment System* screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

See section 4 in the Owner's Manual for more information.

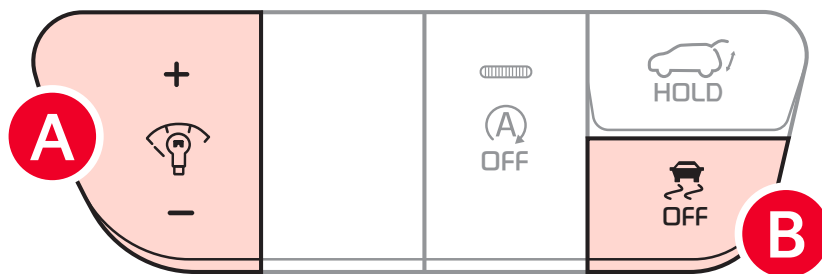

(Buttons located on left of Steering Wheel)

Electronic Stability Control (ESC)^{†6}

ESC is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible. Press the ESC OFF button **B** to turn ESC OFF.



Electronic Stability Control (ESC) Video

REMINDERS:

- ESC is turned ON by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the Instrument Cluster will illuminate whenever the ESC is in operation

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.



Idle, Stop & Go (ISG) System*


- The ISG system is designed to help reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill
- When the ISG system is ON and the vehicle is at a standstill, the engine may stop, and the AUTO STOP indicator **(A)** on the Instrument Cluster will illuminate green
- The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) or P (park) position or to Manual Shift mode. When the engine restarts, the green AUTO STOP indicator on the Instrument Cluster will turn off
- To deactivate the ISG System, press the ISG OFF button **(B)**. If you press again, the system will be activated



Idle, Stop & Go
(ISG) Video



(Cluster B shown)

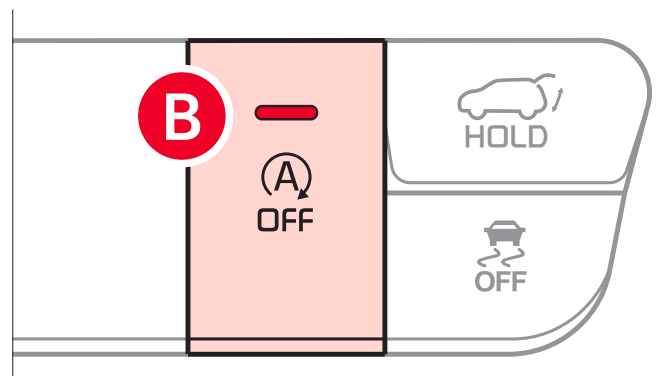

(Buttons located on left of Steering Wheel)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.


Idle, Stop & Go (ISG) System*

[Continued from previous page](#)

QUICK TIPS

- The ISG system will not activate when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is not adequate
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

REMINDERS:

- When the ISG system is on and the vehicle is at a standstill, the engine may not stop and the AUTO STOP indicator on the Instrument Cluster will illuminate YELLOW. This indicates the system is functional but not all enabling criteria have been met.
- ISG is active by default at vehicle startup. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator  is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Hill-start Assist Control (HAC)^{†6}

HAC is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline. HAC provides a 2-second delay before the vehicle may start rolling backward by keeping the brakes momentarily engaged even after you depress the accelerator.

HAC automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator—this is normal operation
- HAC provides a two-second delay before the vehicle may start rolling backward

REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

See section 5 in the Owner's Manual for more information.



Engine Start/Stop Button^{*†7}

To start the engine:

- Depress the brake pedal
- Press the Engine Start/Stop button **A** while in P (Park) or N (Neutral)




Engine Start/Stop
Button Video

To turn the engine OFF, press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob on your person or inside the vehicle.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key fob battery is dead, with the lock button facing the Engine Start/Stop button, hold the fob up against the Engine Start/Stop button and press and hold until the engine starts
- With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

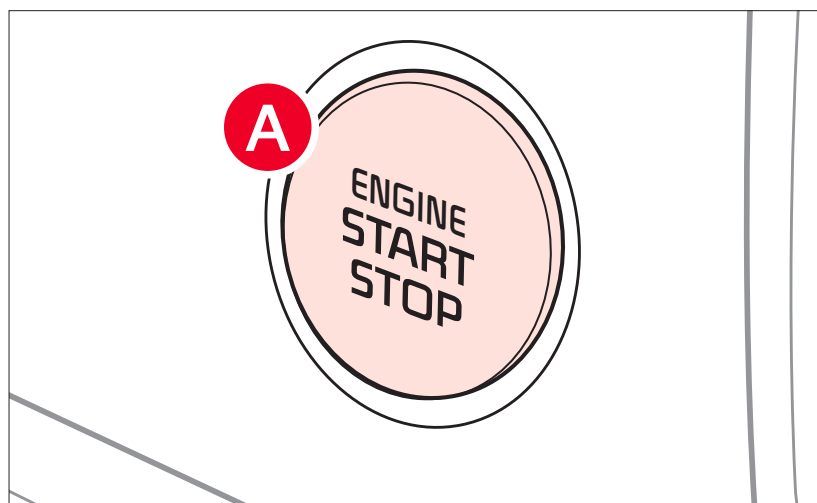

(Button located to the right of steering wheel)

[Continued on next page](#)





Images are for illustrative purposes only and may not reflect actual feature or operation.


Engine Start/Stop Button^{*†7}

[Continued from previous page](#)

QUICK TIPS

To use electrical accessories:

- ACC position
 - When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once (amber light )
- On position
 - When already in the ACC position (amber light ) and without depressing the brake pedal, press the Engine Start/Stop button again (red light )
 - Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery
 - When in the OFF position (no light) and without depressing the brake pedal, press the Engine Start/Stop button twice (reddish-orange light )

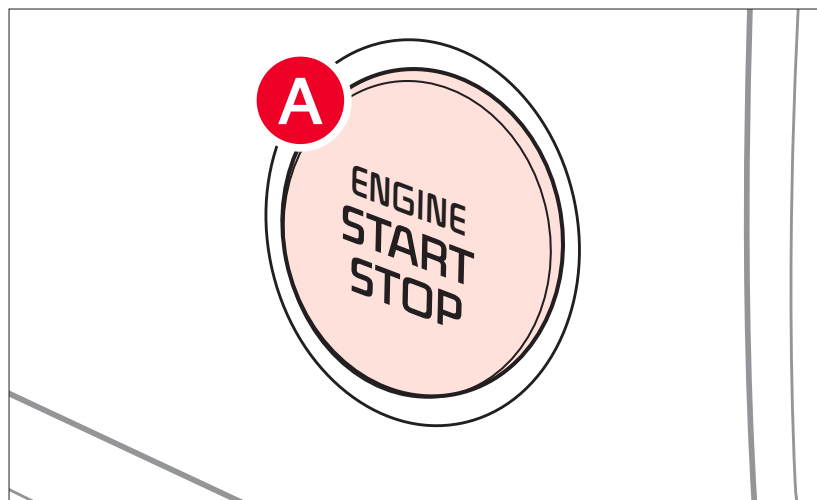

(Button located to the right of steering wheel)

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's Window Auto Up/Down*

QUICK TIP

Press the button again to stop Auto Up/Down function.

- B** Press to Lock/Unlock All Doors
- C** Press to disable Rear Passenger Windows

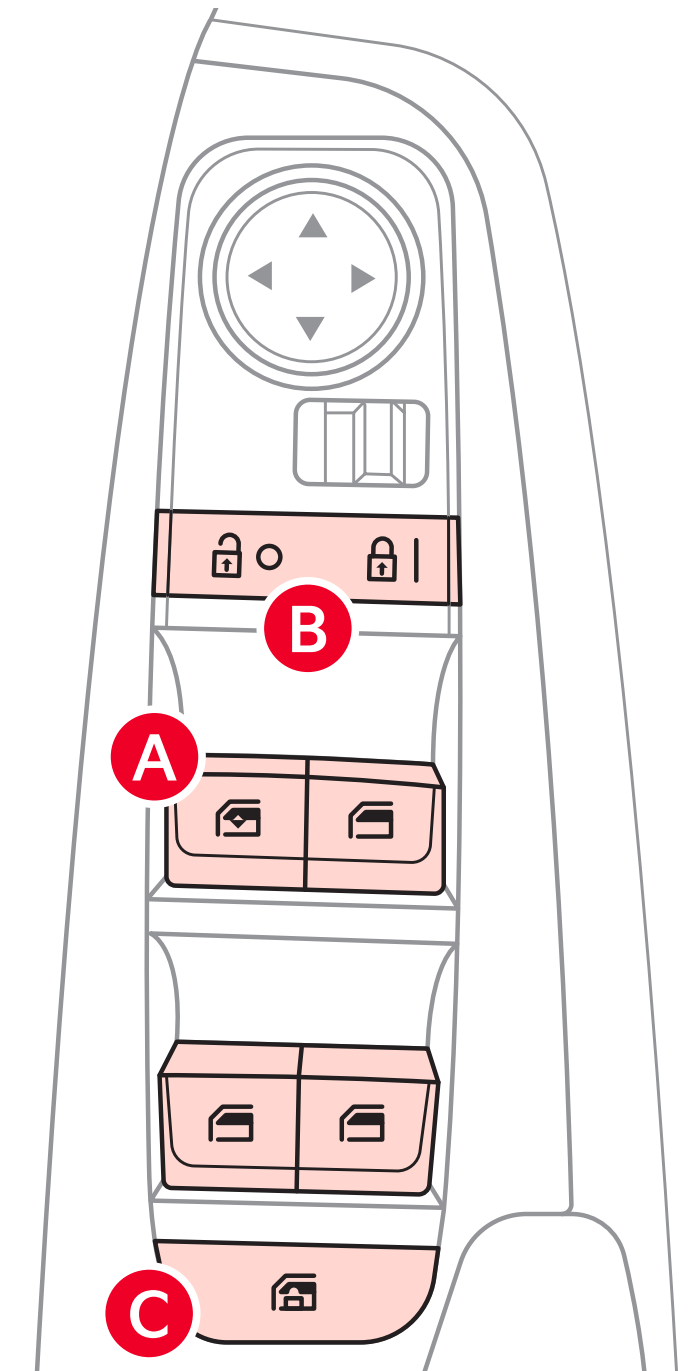

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Power Windows, Window Lock & Central Door Lock

[Continued from previous page](#)


QUICK TIPS

While driving with the rear windows down or with the Sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- When the button **A** is pressed, the rear passengers cannot operate the window controls
- If the inner rear door handle is pulled once when the door is locked, the door will unlock. If the inner rear door handle is pulled once more, the door will open
- When closing, be mindful of any surrounding objects or persons

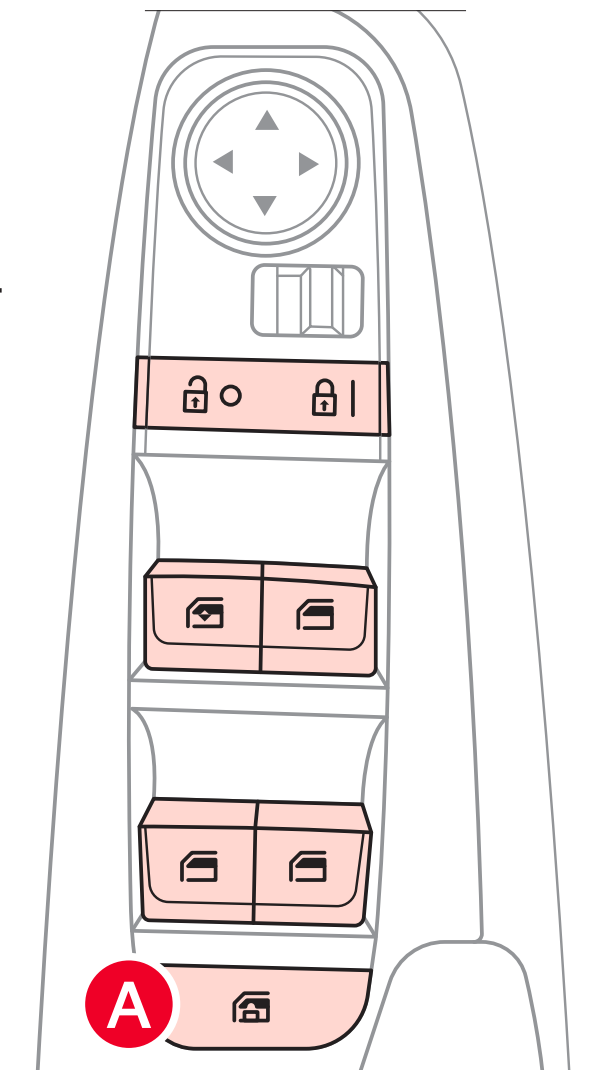

Images are for illustrative purposes only and may not reflect actual feature or operation.

Button configuration may vary depending on vehicle model.

Refer to section 4 in the Owner's Manual for more information.



Rear Door Locks - Double Pull to Open

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.



**Rear Door Locks
- Double Pull to
Open Video**

QUICK TIP

To open the Rear Doors, pull the inner door handles two times.

Refer to section 4 in the Owner's Manual for more information.

Automatic Door Lock/Unlock

Auto Door Lock will engage when the gear shift is moved into or out of the **P** (Park) position or when the vehicle reaches a predetermined speed.

Auto unlock can be disabled or enabled to unlock the doors when gear shift is moved into park or when the vehicle is turned off.

Refer to User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System on how to turn Auto Door Unlock ON/OFF.


REMINDER: All driver and passenger doors must be closed for doors to auto-lock.

Refer to section 4 in the Owner's Manual for more information.



Power Outside Mirrors

- A** Press the L or R buttons to select the mirror to adjust
- B** Press button arrows left/right or up/down to adjust mirror position

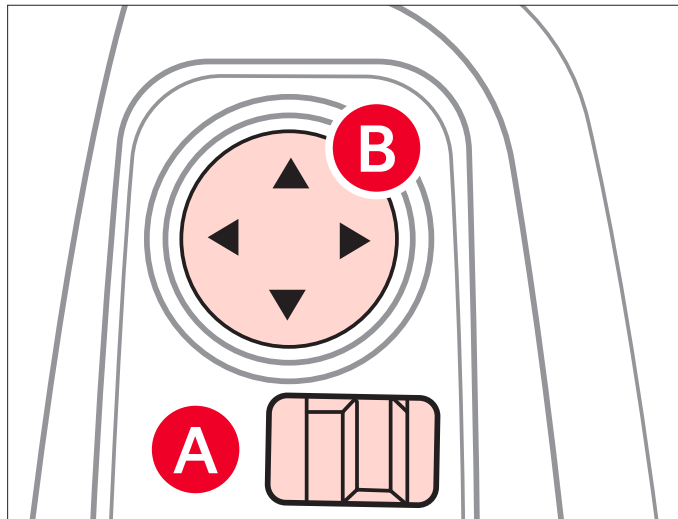

Refer to section 4 in the Owner's Manual for more information.

Heated Outside Mirrors*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button* is located on the climate control system panel.

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Tilt/Telescoping Steering Wheel^{†18}

To adjust the Steering Wheel, press the lock-release lever **A** down and adjust to the desired angle **B** and distance **C**.


When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.



**Tilt/Telescoping
Steering Wheel
Video**

QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle.

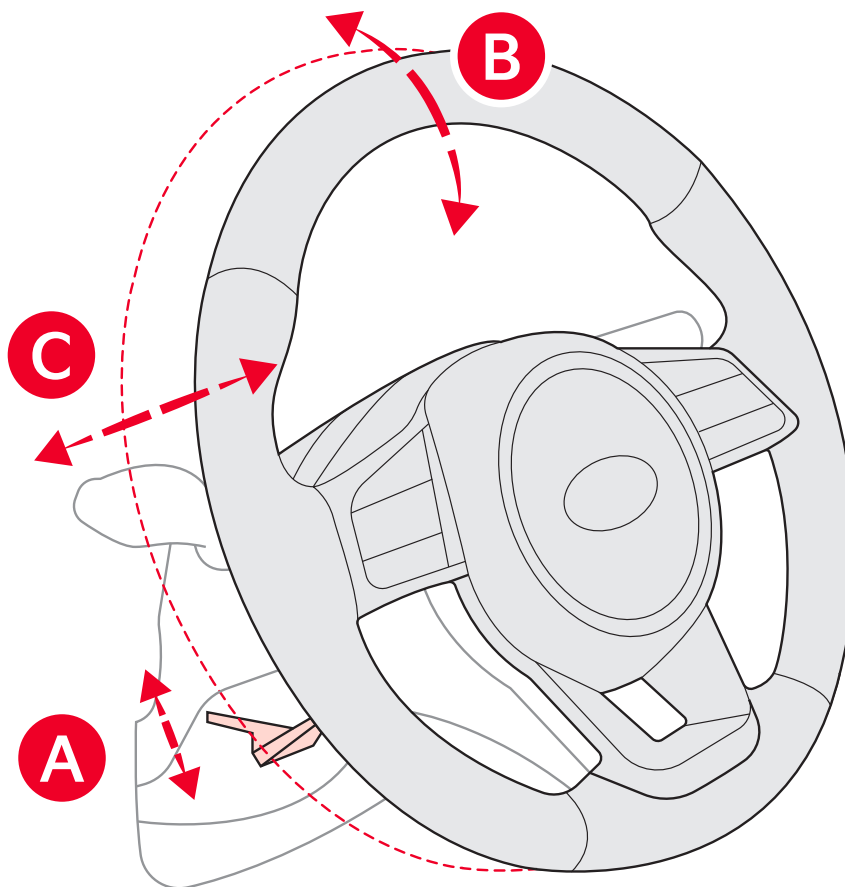

Images are for illustrative purposes only and may not reflect actual feature or operation.

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.


See section 4 in the Owner's Manual for more information.



Headlights & High Beams

To operate:

- Rotate lever switch to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

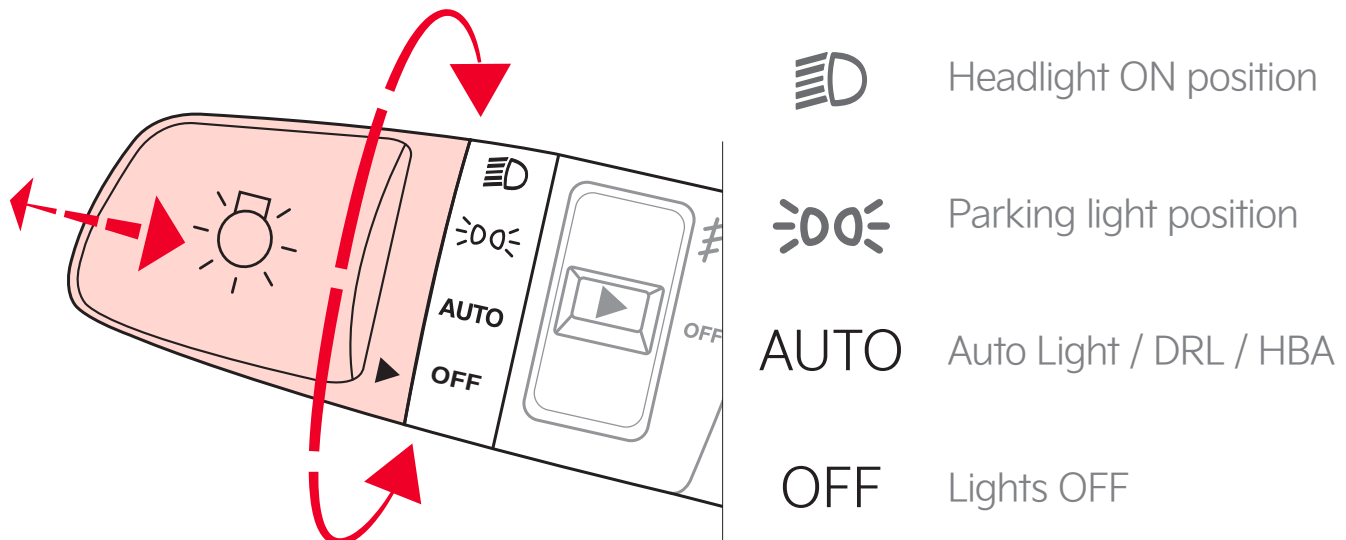

AUTO Light - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light detected outside the vehicle.

Refer to section 4 in the Owner's Manual for more information.

Daytime Running Lights (DRL)*

DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Fog lights are on
- Switch is in the OFF position
- Parking brake is applied
- Engine is turned off

Images are for illustrative purposes only and may not reflect actual feature or operation. Refer to section 4 in the Owner's Manual for more information.






High Beam Assist (HBA)


High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.



High Beam Assist (HBA) Video

To activate HBA when in User Settings*  in the Instrument Cluster, select LIGHTS and HIGH BEAM ASSIST. When in Vehicle Settings* in the Infotainment System, select SETUP, VEHICLE, LIGHTS and HIGH BEAM ASSIST.

To activate HBA, toggle the light switch to the AUTO Light position  and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator  will illuminate.

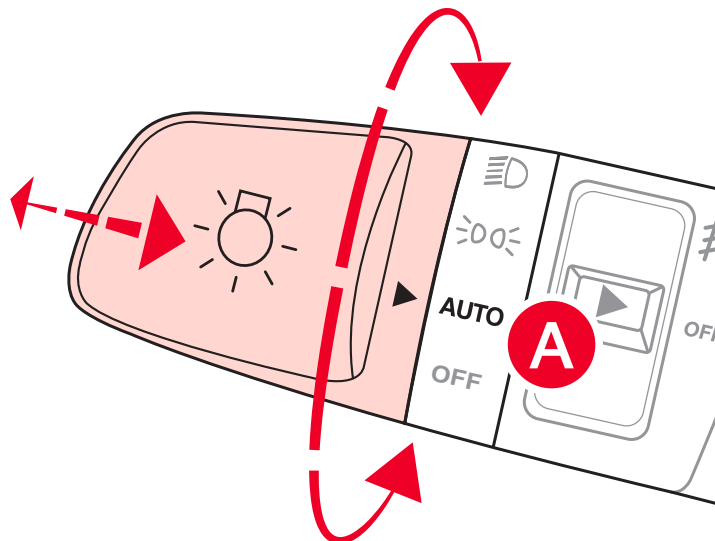

REMINDERS:

- HBA will operate when vehicle speed exceeds 20 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and the low beams will be on continuously
- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams


Images are for illustrative purposes only and may not reflect actual feature or operation.



Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

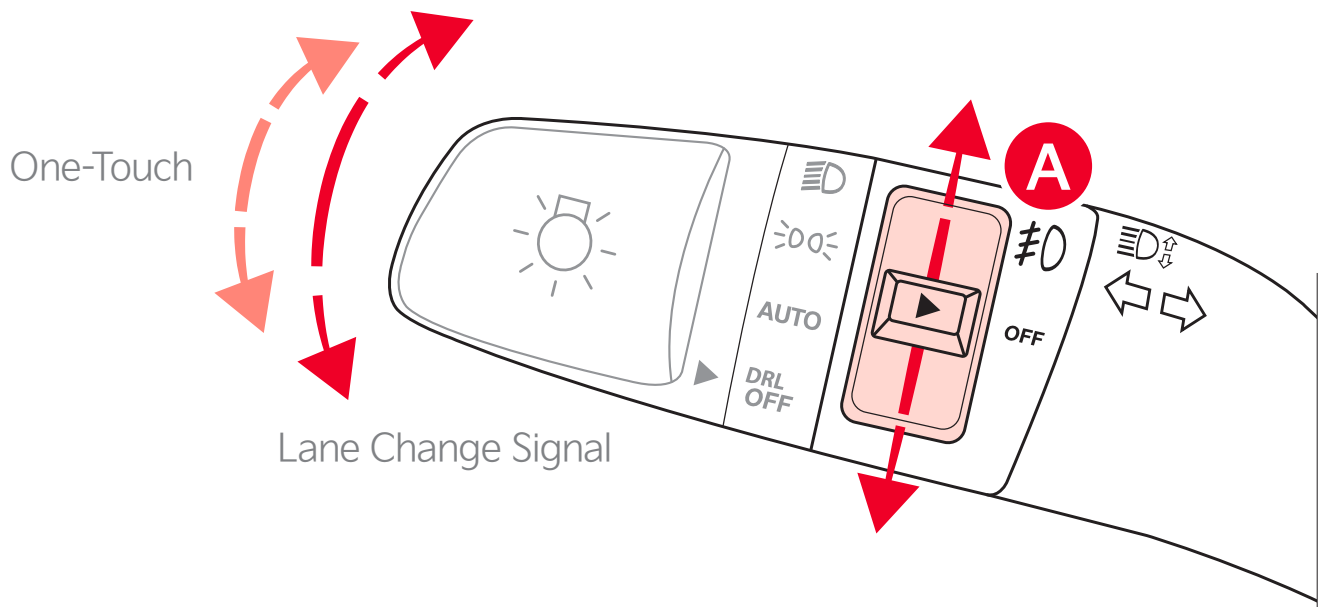

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

Lane Change Signal Settings: To active/deactivate or change how many times the Lane Change Signal blinks (3/5/7), go to User Settings* in the Instrument Cluster. Select LIGHTS and ONE TOUCH TURN SIGNAL. On some models, go to Vehicle Settings* in the Infotainment System, press SETUP, VEHICLE, LIGHTS and ONE TOUCH TURN SIGNAL.

REMINDER: Headlights must be ON for fog light operation.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.



Windshield Wipers & Washers

To operate front wipers and washers:

- Move lever Up/Down to change Wiper modes
- Press INT switch **A** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe




Wipers and Wiper Stalk Video

QUICK TIPS

- Moving switch **A** up increases intermittent wipe frequency and wipe speed
- Moving switch **A** down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

See section 4 in the Owner's Manual for more information.

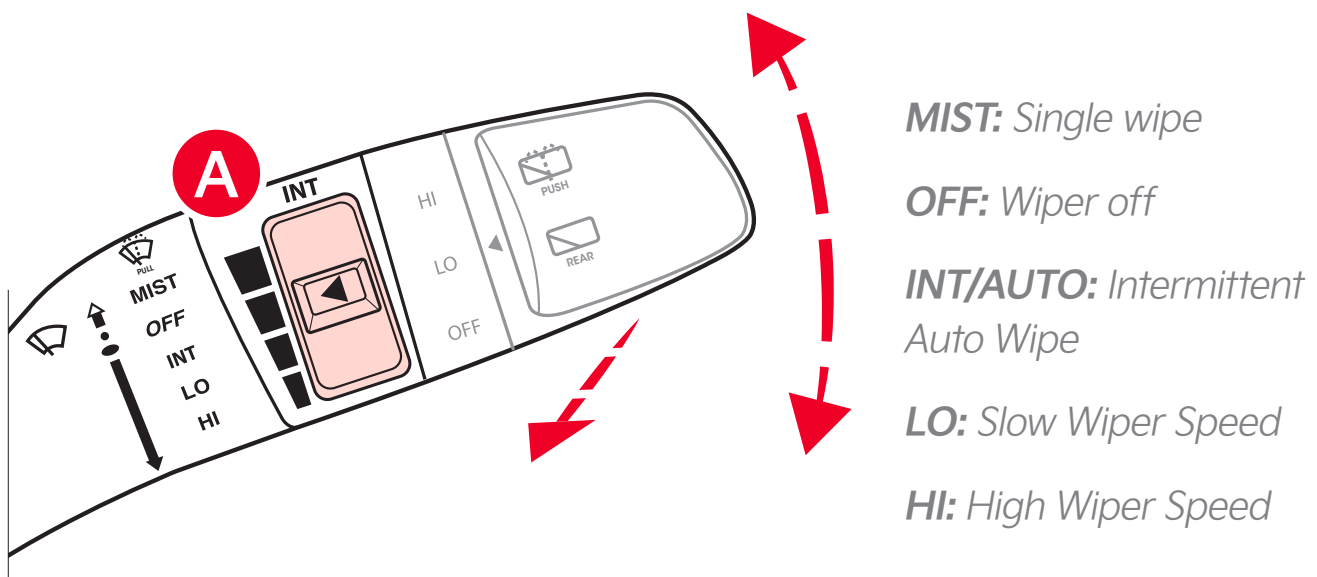

Images are for illustrative purposes only and may not reflect actual feature or operation.




Rear Wiper & Washer*

To operate rear wipers and washers:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

QUICK TIP

LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers.

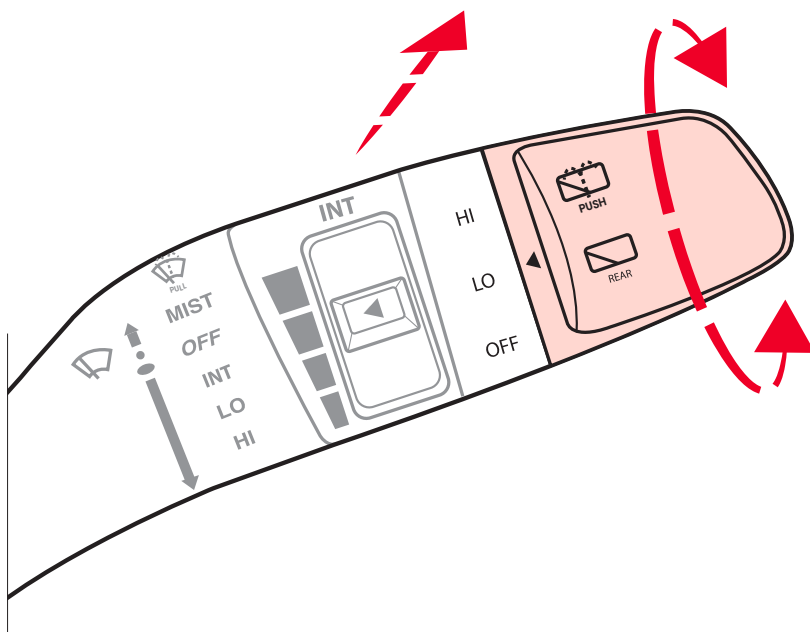

HI: Continuous wipe

LO: Slow wipe

OFF: Wiper off

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.



Bluetooth® Wireless Technology^{†3,16}


- A Voice Recognition button:** Press to activate voice recognition*/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition



Steering Wheel Controls Video

Kia Connect^{†1} with Navigation* - When enrolled with a Kia Connect^{†1} subscription, press this button to activate the Kia Connect^{†1} Voice Assist to use navigation guidance and search destinations

- B Volume button:** Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call and to mute the audio system speakers, or to pause *Bluetooth®* streaming media
- C Call/End Call button:** Press to place/receive incoming calls. Press to pair a phone (If no phone is paired)

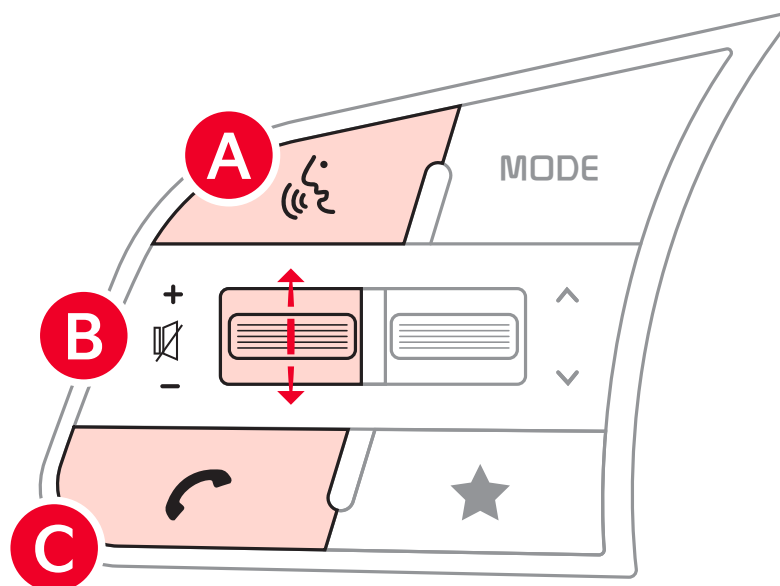

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Bluetooth® Wireless Technology^{†3,16}

[Continued from previous page](#)

QUICK TIPS

- The system can register or pair multiple *Bluetooth®* devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries

REMINDERS:

- *Bluetooth®* Wireless Technology audio and calling functions are supported when connected to a *Bluetooth®* enabled device
- Because of differences in phone quality, service providers and *Bluetooth®* Wireless Technology chip programming, functionality may differ from one phone to another

[Continued on next page](#)

For more information, refer to the Car Infotainment System Quick Reference Guide. For *Bluetooth®* wireless technology FAQs, go to www.kia.com, Owners section.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Bluetooth® Wireless Technology^{†3,16}

[Continued from previous page](#)

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System’s Quick Reference Guide or your vehicle’s Quick Start Guide.

QUICK TIP


During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call

When using the voice command feature, wait for the system to BEEP before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

- Option 1: Press the Call/End Call button **A** (system displays the call history with the most recent calls)
- Option 2*: Press the Voice Recognition button **B** (system will BEEP to indicate it is ready for call placement). Then say the command “Call {name}” or “Dial {number}”

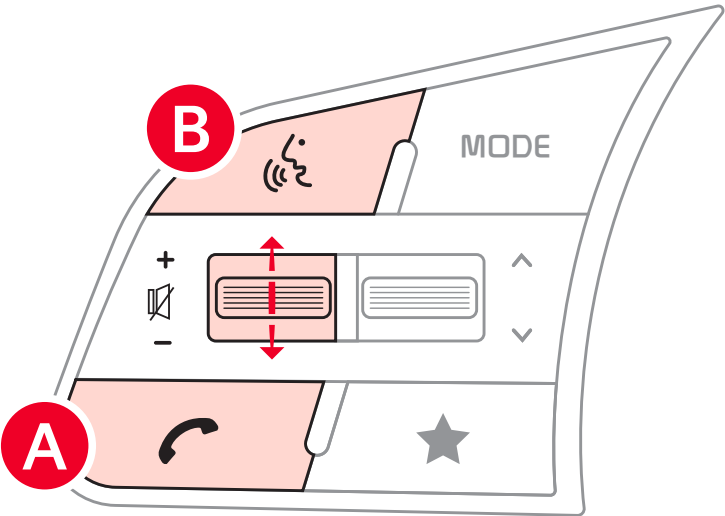

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED

Bluetooth® Wireless Technology*†3,16

[Continued from previous page](#)

Voice Recognition* and Phone Contact Tips



Voice Recognition
Tips Video

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)

QUICK TIPS

- Bluetooth® Music Streaming: If the Bluetooth® music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C. The noise from an A/C fan operating at higher speeds or wind noise from open windows or sunroof can interfere with Voice Recognition
- Press the Voice Recognition button and say “Help” to get a list of available commands

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



Steering Wheel Audio Controls^{†16}

A Audio Mode button: Press to cycle through FM/AM/SiriusXM[®]/ Media modes. Press to turn power on. Press and hold to go to Button Setting / Steering Wheel mode (Kia Connect^{†1} with Navigation)



Steering Wheel Controls Video

B Seek/Preset button


Radio Mode (FM/AM/SiriusXM[®]): Press to advance through Preset Stations. Press and hold to Auto Seek

Media Modes: Press to move track Forward/Back. Press and hold to Fast Forward/Rewind (except for *Bluetooth*[®] Audio)

C Volume button: Press up/down to raise/lower volume

Mute button: Press to mute all audio (Media pauses in some media modes when pressed)

D Custom button ★: Press to access user-selected features. Press and hold the button to set to one of the features available

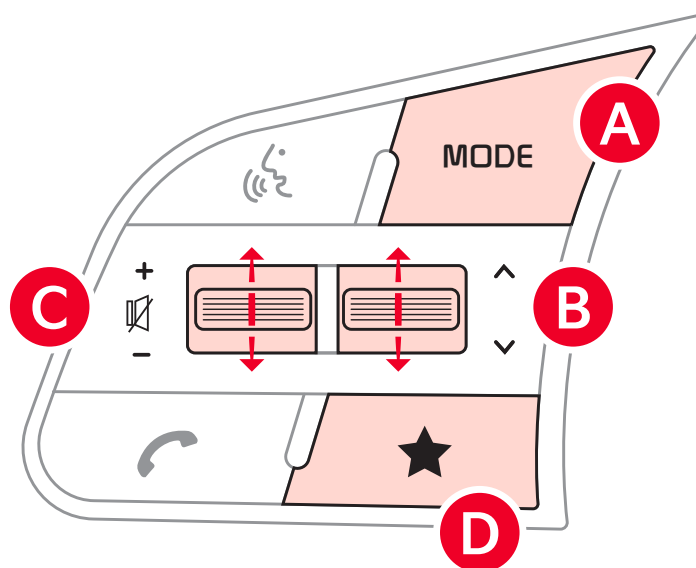

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Steering Wheel Audio Controls^{†16}

[Continued from previous page](#)

QUICK TIPS

- The MODE button is initially set to radio mode
- In the SETUP menu on the Infotainment System screen, select which Media Modes to include in the MODE button menu rotation. Press and hold the MODE button to enter this setting menu



Star, Favorite &
Radio Presets
Buttons Video

For more information, refer to the Car Infotainment System Quick Reference Guide.

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

[†] LEGAL DISCLAIMERS ON [PAGE 134](#) | ^{*}IF EQUIPPED



Android Auto™ †3 / Apple CarPlay® Setup †3

Android Auto™ compatible

smartphone setup - Download the Android Auto™ app from the Google Play™ Store†3. Open the Android Auto™

app and proceed with the onscreen instructions to complete setup on the mobile device.



**Wireless Apple
CarPlay® &
Android Auto™
Video**

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Display Audio System):

1. Press the SETUP key on the Infotainment System
2. Press DEVICE CONNECTIONS
3. Press DEVICE CONNECTIONS, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System & Kia Connect with Navigation):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTIONS, select PHONE PROJECTION SETTINGS and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

[Continued on next page](#)



Android Auto™†³ / Apple CarPlay® Setup†³

[Continued from previous page](#)

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

[Continued on next page](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Refer to the Car Infotainment System Quick Reference Guide for more information.



Android Auto™†3 / Apple CarPlay® Setup†3

[*Continued from previous page*](#)

Cable Connection setup for Apple CarPlay® (Kia Connect†1 with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
2. Press the SETUP key on the audio head unit
3. Press DEVICE CONNECTION on the screen
4. Select PHONE PROJECTION SETTINGS and then select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - Kia Connect†1 with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Display Audio System (USB cable & wireless connection):
 - **USB cable connection:** OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - **Wireless connection:** OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - Kia Connect†1 with Navigation (USB cable connection only): iOS® software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Display Audio System (Wireless connection only): iOS® software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android™ models. Use the manufacturer's USB cable when wireless feature is not available




Display Audio System* - FM/AM/Media (USB, *Bluetooth*[®] †^{3,16} Audio)*



Display Audio
System



Display Audio
System Updates
Video

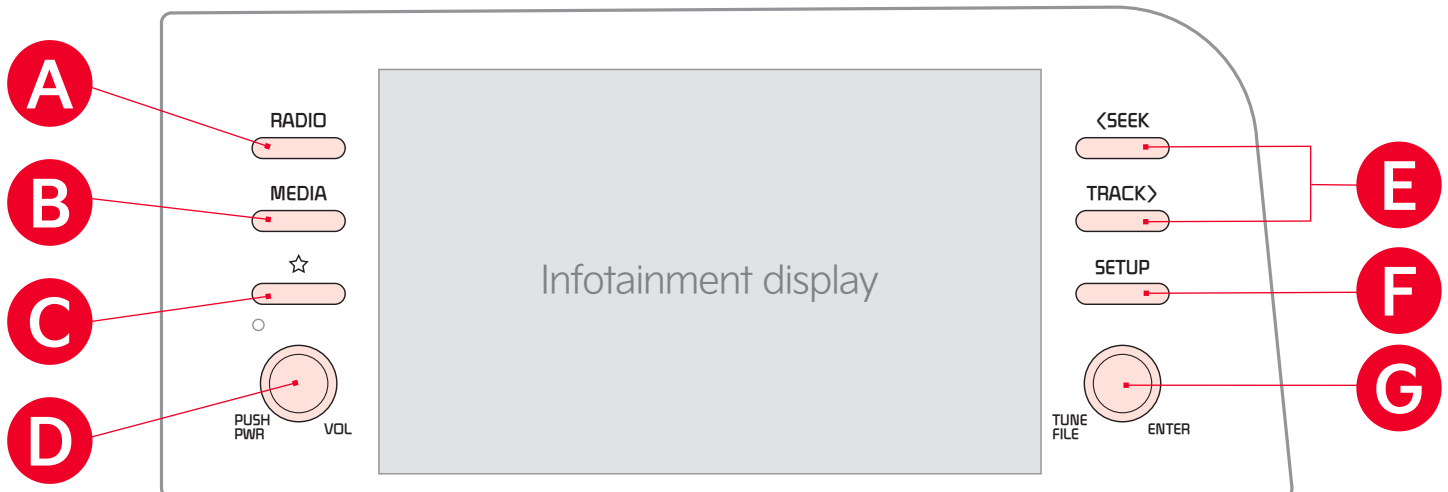

- A** Press to select FM/AM mode
- B** Press to go to MEDIA mode
- C** Press to go to CUSTOM (SET) menu ☆
- D** Press to Power ON/OFF. Rotate to adjust Volume
- E** Press briefly to do the following:
 - FM/AM mode: Play the previous/next frequency
 - MEDIA mode: Change the track, file or titlePress and hold (over 0.8 seconds) to do the following:
 - FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
 - MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*[®] Audio)
- F** Press to display Setup/Settings mode
- G** In Radio/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file

[*Continued on next page*](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Display Audio System* - FM/AM/Media (USB, *Bluetooth*^{® †3,16} Audio)*

[*Continued from previous page*](#)

Radio Presets: You can listen to FM and AM radio and save frequently used stations. To save a Preset, press the star icon next to the station. This saves the current station in the selected slot.

Custom Key ☆ - To program the Custom Key, press the **SETUP** button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

Software updates - To keep your map and software up to date, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>.

Note: Visiting a dealer for software update may include an additional charge.

To adjust the sound settings, press the **SETUP** key on the audio control unit or the onscreen MENU button, when in MEDIA mode. Select the onscreen SOUND button, then select the menu item. Using the touchscreen, press arrows to adjust the settings.

[*Continued on next page*](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Display Audio System* - FM/AM/Media (USB, *Bluetooth*[®] †^{3,16} Audio)*

[*Continued from previous page*](#)

QUICK TIPS

- The system can register or pair multiple *Bluetooth*[®] devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay[®] (wireless connection only)
- When connected to Android Auto™ or Apple CarPlay[®] on your smartphone, the smartphone's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge

REMINDERS:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park
- It is recommended to always update your phone to the latest operating system release
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

For more information, refer to the Car Infotainment System Quick Reference Guide.

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 72-79.



Kia Connect^{†1} Activation

Follow these steps to activate your Kia Connect^{†1} system:

1. Enter the activation screen on your Infotainment System:

- Press **SETUP** key
- Press Kia Connect^{†1} icon
- Press Activate



**Kia Connect
Activation Video**



**Kia Connect &
Kia Access
app Video**

- Read and agree to Terms of Service and Privacy Policy and press SUBMIT
- Enter number or email address to receive a verification code. Press SUBMIT
- Click on the link and a page will open requesting you to create an account
- Provide the information needed and select SAVE to create the account
- A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again
- A page will open displaying your verification code. Enter this code on the Infotainment System screen. Press OK and SUBMIT, then press OK again


Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.




Kia Connect^{†1} Assistance


Kia Connect^{†1}  Voice Local

Search **A** (systems with navigation) -
Press to connect to the search function
to find points of interest or other
locations, like “cafe”.

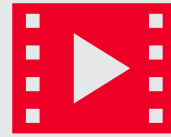

**Kia Connect
Assistance Video**

Roadside Assist  **B** - Press to connect to a Roadside Assistant where
you can request vehicle towing services.

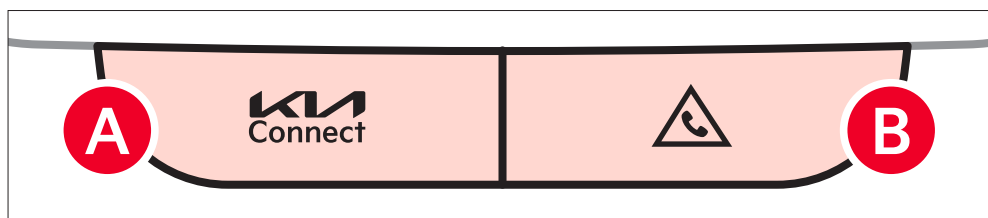

(Buttons on overhead console*)

Images are for illustrative purposes only and may not reflect actual feature or operation.

For more information, refer to the Car Infotainment System Quick Reference Guide.



Kia Access App^{†2} Download

Go to an app marketplace to download the new Kia Access App. Once downloaded, make sure you register your vehicle and create an account (refer to Kia Connect^{†1} Activation page). Get to know your new Kia and the available convenient features on the app.



Download the Kia Access App

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect^{†1}. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- The Kia Connect^{†1} app will stay connected to the vehicle as long as the vehicle has been started within seven days. To reconnect the Kia Connect^{†1} app, restart the vehicle





Kia Access App^{†2} Features Guide

The Kia Access App Features Guide is a guide helping you utilize the app to its full potential by detailing each feature and how to adjust various settings.

Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles




**View/Download
Kia Access App
Features Guide**

For further Kia Connect^{†1} operations, refer to the Car Infotainment System Quick Reference Guide.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.



Kia Connect^{†1} with Navigation^{*†8} - FM/AM/ Media (USB, *Bluetooth*^{®†3,16} Audio)*

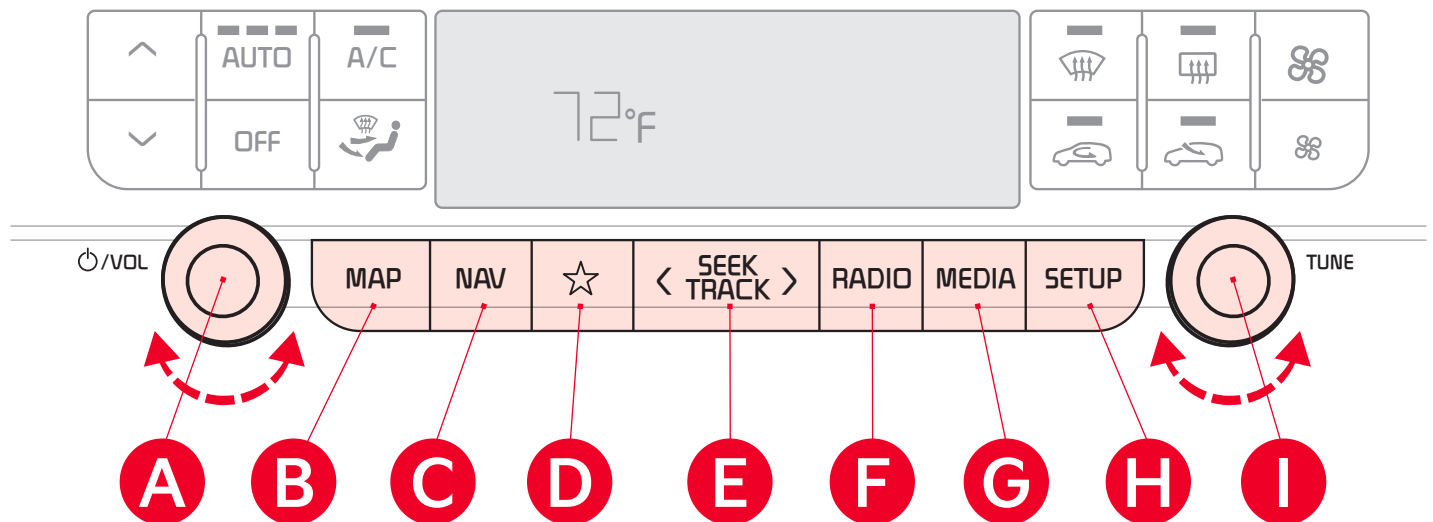

- A** Press to Power ON/OFF. Rotate to adjust Volume
- B** Press to display the MAP screen for the current position mode
- C** Press to select navigation mode
- D** Press to go to Custom (Set) Menu ☆
- E** Press briefly to do the following:
 - FM/AM mode: Play the previous/next frequency
 - SiriusXM[®] mode: Change the channel
 - MEDIA mode: Change the track, file or title
- Press and hold to do the following (over 0.8 seconds):
 - FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
 - MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*[®] Audio)
- F** Press to go to Radio/SiriusXM[®] modes
- G** Press to go to MEDIA mode
- H** Press to display the Setup/Settings mode
- I** In Radio/SiriusXM[®]/Media modes, rotate knob to search for stations/channels/tracks/songs/files. Press the knob to receive the selected channel/track/song/file

[*Continued on next page*](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Kia Connect^{†1} with Navigation^{*†8} - FM/AM/ Media (USB, Bluetooth[®] ^{†3,16} Audio)*

[*Continued from previous page*](#)

To adjust the sound settings, press the **SETUP** key on the Infotainment System or the onscreen **SETUP** button in ALL MENUS. Select the onscreen SOUND button, or SOUND SETTINGS. Select the menu item to change settings, then use the onscreen buttons to adjust settings.

Radio Presets: To save a preset, press the “Add Channel” button on the bottom of the preset list if there are less than 5 presets saved. If more, the button will be on top of the list.

SiriusXM™ Smart Favorites: In Radio mode, choose SiriusXM®, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆ - To program the Custom Key to one of the available features, press and hold the **SETUP** button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

Map/software updates - To keep your map and software up to date, Kia provides over-the-air updates. You can visit the official Kia update webpage at <https://update.kia.com>. **Note,** visiting a dealer for a software update may include an additional charge.

[*Continued on next page*](#)

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



Kia Connect^{†1} with Navigation^{*†8}

[Continued from previous page](#)

QUICK TIPS

- The system can register or pair multiple *Bluetooth®* devices
- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth®* Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth®* Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth®* Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ and Apple CarPlay® (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt the Voice Command Feedback by pressing the Voice Recognition button on the steering wheel



Kia Connect with Navigation



Navigation System Important Tips Video



Over The Air (OTA) Updates Video



Infotainment System Driver Profiles Video

For more information, refer to the Car Infotainment System Quick Reference Guide.

REMINDER: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.




Digital Clock (Infotainment System)

Press the **SETUP** button onscreen or the **SETUP** key **A** on the Infotainment System, then select General. Press the onscreen Date/Time button to enter the clock settings and use the knob **B** to adjust.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings

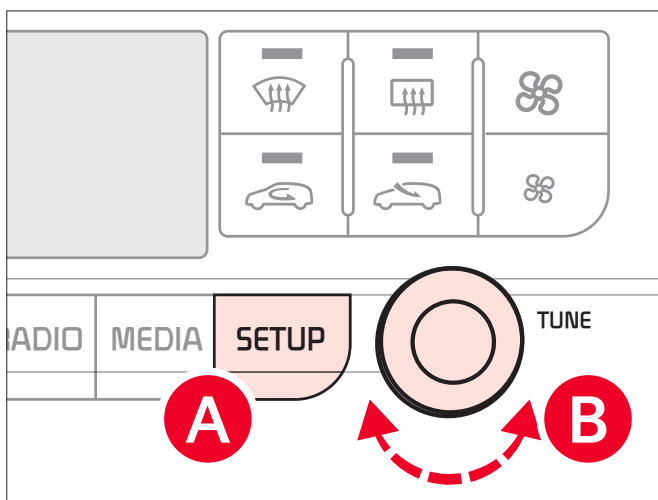

*Images are for illustrative purposes only and may not reflect actual feature or operation.
Refer to the Car Infotainment System Quick Reference Guide for more information.*



Multimedia USB Port, Power Outlets & USB-C Charger Ports*


Power Outlets **A:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet




Multimedia USB Port, Power Outlets & USB Charger Port Video

Multimedia USB Port **B:** Use Multimedia USB port to connect USB audio devices and smartphones


USB-C Charger Ports* **C:** Devices can be recharged using a USB-C cable. The Engine Start/Stop button* needs to be in the ACC/ON/START position to operate the USB-C Charger Ports.

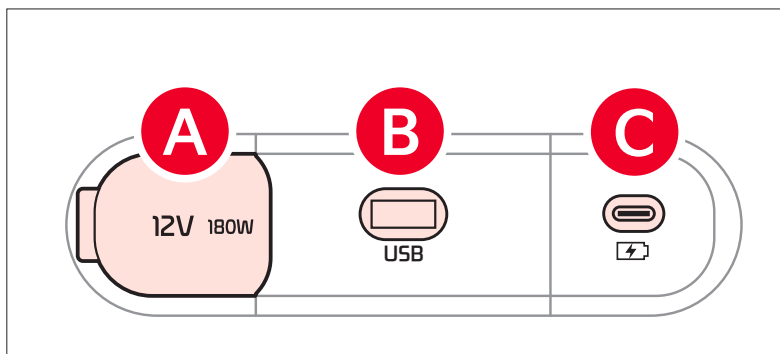

(Located on center panel in front of gear shift; only on certain models)

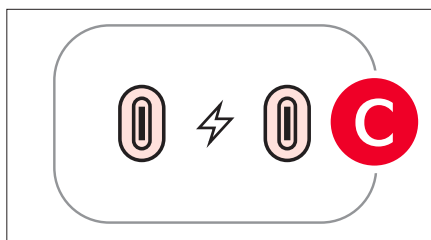

(Located on back of center console; only on certain models)

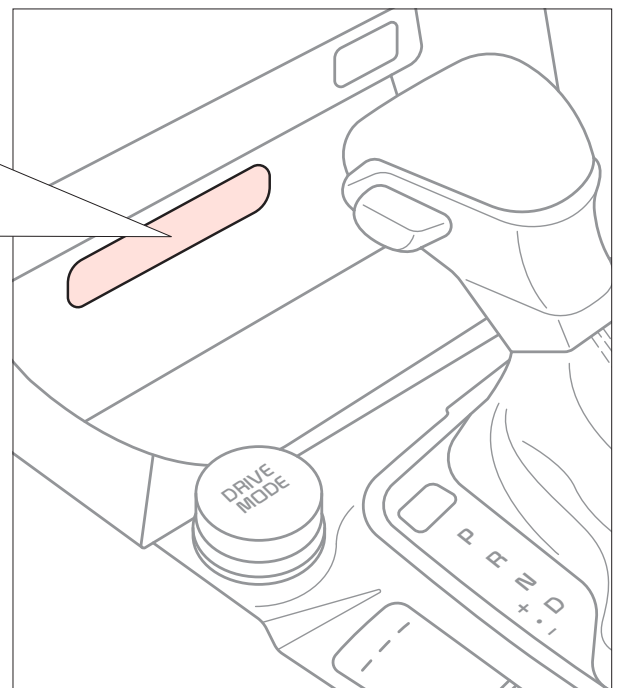

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Multimedia USB Port, Power Outlets & USB-C Charger Ports*

[*Continued from previous page*](#)

QUICK TIPS

- The power outlets are inactive when ignition is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets. The USB Charger Port does not support data transfer

REMINDERS:

- Using the power outlets and the USB ports for prolonged periods of time with the Engine Start/Stop button* in the ACC position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device
- The Multimedia USB Port in the center panel charges slower than the USB-C Chargers throughout the vehicle

For more information on the USB Ports and Power Outlets, refer to section 4 in the Owner's Manual.



Wireless Smartphone Charging System^{*†20}

Charge a compatible Qi[™] Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.




**Wireless
Smartphone
Charging System
Video**

To Enable Wireless Charging in the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System: Select SETUP, CONVENIENCE and select to enable WIRELESS CHARGING SYSTEM FOR MOBILE DEVICES.

To charge your mobile device: Place a compatible smartphone on the center of the charging pad. Indicator light **B** may change to amber once wireless charging begins. Once charging is complete, the amber light may change to green.

Requires Qi[™]-enabled device or Qi[™]-enabled case.

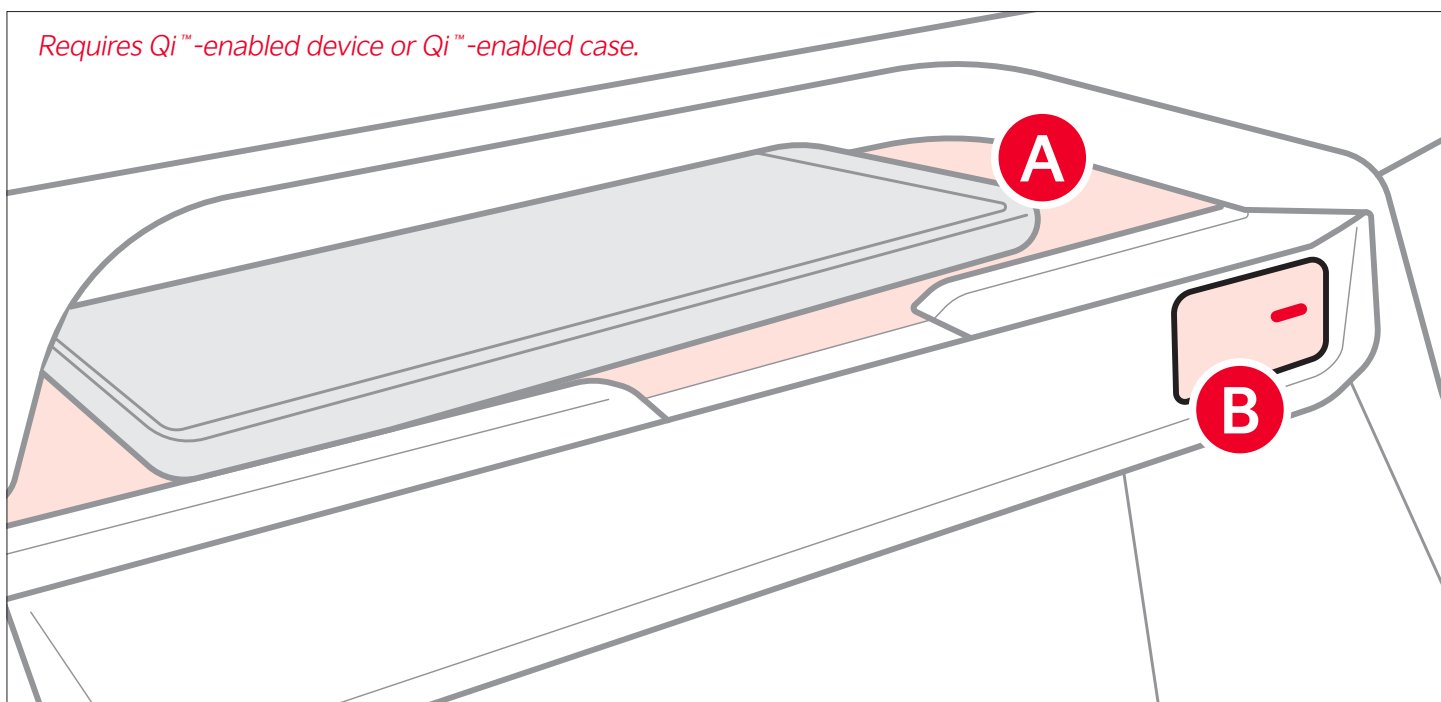

(Located in front of Gear Shift)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Wireless Smartphone Charging System^{*†20}

[Continued from previous page](#)

QUICK TIPS

- For wireless charging to occur, all doors must be closed, the Smart Key Fob must be detected inside the vehicle, and the ignition or Engine Start/Stop button* on
- For best results, place smartphone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging so as not to impede the charging area
- Removing the phone case may improve charging efficiency and ensure a secure connection

REMINDERS:

- The smartphone must be a compatible Qi™ certified phone with Qi™ function available. Some smartphone models are not Qi™ certified, which may affect the availability, speed or performance of wireless charging
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance:** The position of your device on the wireless charging pad can affect how efficiently it charges. Performance may also be reduced by foreign objects (such as coins or pens) or thick phone cases
- **Smartphone Temperature:** If you use certain smartphone applications while charging, your phone's self-heating system may activate, which can affect charging speed or performance
- **Charging Interruption:** Wireless charging will automatically stop if any door is opened

See section 4 in the Owner's Manual for more information.




Automatic Climate Control*

- A** Driver's temperature controls
- B** Automatic Climate Control button
- C** Air conditioning button*
- D** OFF button
- E** Mode selection button
- F** Front windshield defroster button
- G** Rear window defroster button
- H** Fan speed control buttons
- I** Air intake control buttons



**Automatic Climate
Control Operation
Video**

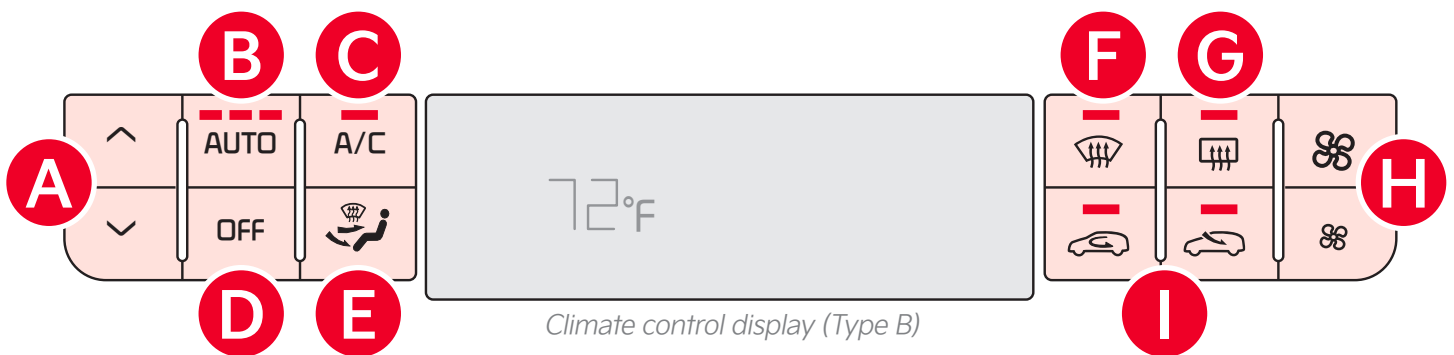

Climate Control Auto Function

1. Press AUTO to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected and the ambient condition. The first setting is high fan speed or air flow (Three LEDs lit). Press again for medium fan speed (Two LEDs lit). Press a third time for the lowest fan speed (One LED lit)
2. Set desired Temperature

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.




Automatic Climate Control*

[Continued from previous page](#)

Defrost Outside Windshield:

1. Set Temperature to Hot
2. Press the Front Defrost button  FRONT

Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button  FRONT



Air Flow Modes

To select Air Flow Modes, press the mode selection button to cycle to the desired mode:

- | | |
|--|---|
|  Face-Level |  Floor-Level |
|  Bi-Level |  Floor/Defrost-Level |

Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is turned ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  FRONT for three seconds when the ignition is in ON (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  FRONT for three seconds.


[Continued on next page](#)

See section 4 in the Owner's Manual for more information.

Automatic Climate Control*

[*Continued from previous page*](#)

QUICK TIPS


- Defrost  FRONT mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control



Manual Climate Control*

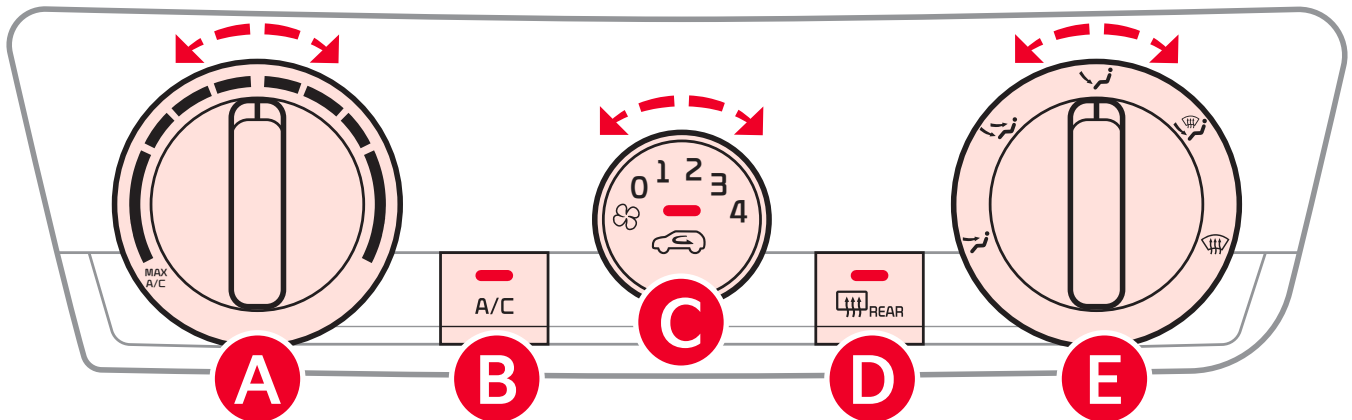

- A** Temperature Control knob
- B** Air Conditioning ON/OFF button
- C** Fan Speed Control knob
- D** Rear Window Defroster button
- E** Air flow mode knob

Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set Temperature to Hot
3. Press the Front Defrost button

Defog Inside Windshield:

1. Set Fan Speed to desired position
2. Set Temperature to desired position
3. Press the Front Defrost button

Air Flow Modes

To select Air Flow modes, press the Mode selection buttons:

- Face-Level
- Bi-Level
- Floor-Level
- Floor/Defrost-Level
- Defrost-Level

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation.



Manual Climate Control*

[*Continued from previous page*](#)

QUICK TIPS

- Set the mode to the desired position. Defrost  mode activates A/C and opens the Fresh Air vent to help dehumidify the air and improve Defroster performance
- MAX A/C mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

See section 4 in the Owner's Manual for more information.



Automatic Gear Shift with Sportmatic^{®†3} Shifting

P: Park

R: Reverse

N: Neutral

D: Drive

[+]: Manual Mode Upshift

[-]: Manual Mode Downshift



Automatic Transmission - Sportmatic Shifting with Paddle Shifters Video




Intelligent Variable Transmission (IVT) Driving Experience Video

Manual Mode:

To enter Manual mode, move shift lever from D to left gate **A**

To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift **A**

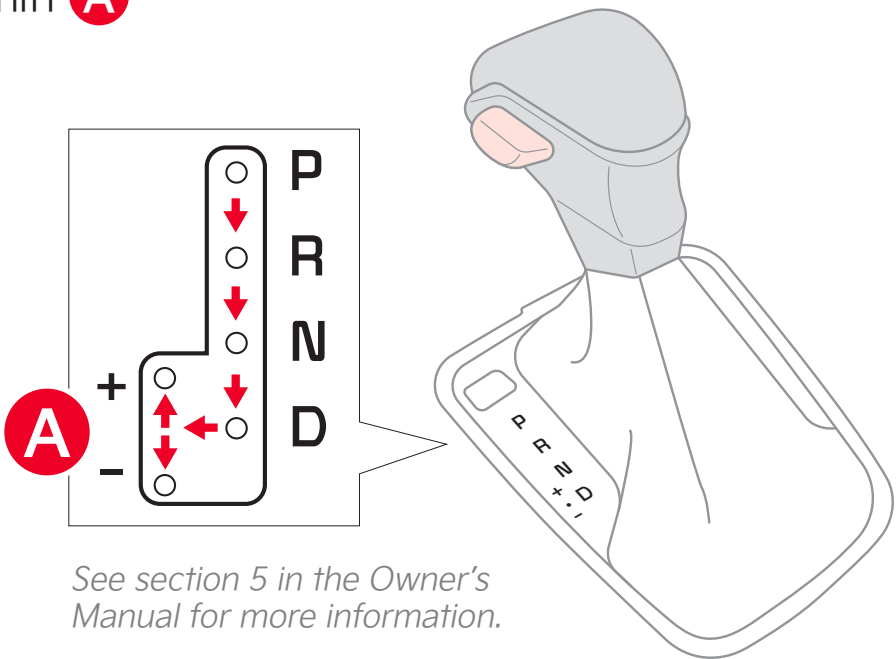

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from **N** to **P**, **N** to **R** or from **P** to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected
- If going through a car wash, remind the attendant to keep the vehicle in **N** (Neutral) and keep the engine running

Images are for illustrative purposes only and may not reflect actual feature or operation.



Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.



Electronic Parking Brake (EPB) / Auto Hold Video

Applying the Parking Brake


Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the Instrument Cluster. If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application.

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of **P** (Park) to **R** (Reverse) or shifted out of **N** (Neutral) to **R** (Reverse) or **D** (Drive). To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIP

When leaving your keys with parking lot attendants or valet, make sure to tell them how to operate the EPB.

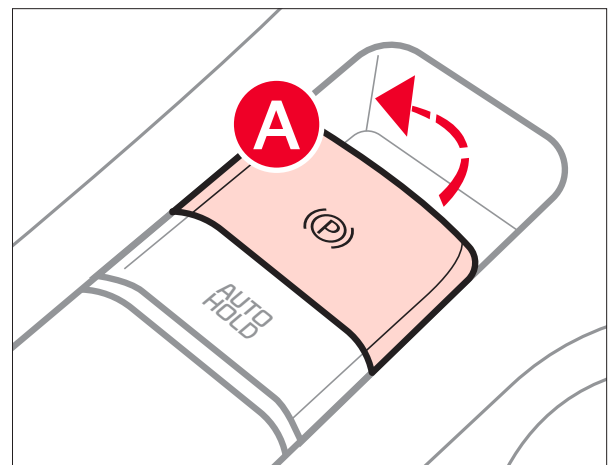

(Type B shown. Located below gear shift)

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.




Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed, and the driver's seat belt must be fastened.



Electronic Parking Brake (EPB) / Auto Hold Video

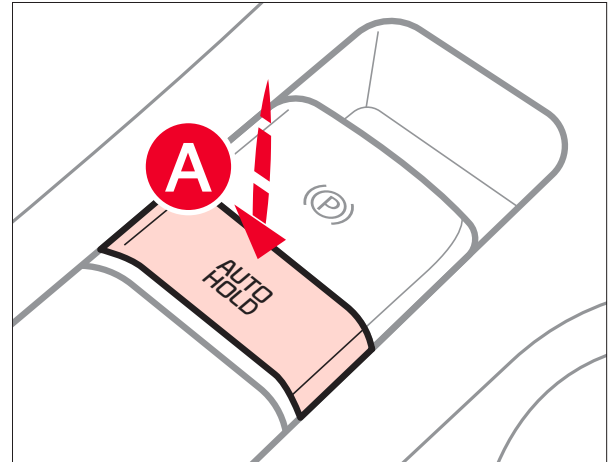

(Type B shown. Located below gear shift)

The AUTO HOLD indicator on the Instrument Cluster has four states:

White: Standby - With vehicle at a standstill and AUTO HOLD button **A** pressed on, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn off when the AUTO HOLD button **A** is manually pressed off or when the EPB is manually turned on.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive or Neutral
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.



Downhill Brake Control (DBC)*†6

DBC helps drivers maneuver down steep hills by automatically applying braking inputs, allowing drivers to concentrate more on steering.

Press button **A** to turn DBC ON/OFF. When on, the DBC indicator will illuminate



(Type A shown. Located below gear shift)

QUICK TIPS

- When on, DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

REMINDER: DBC defaults to OFF when ignition is cycled.



Images are for illustrative purposes only and may not reflect actual feature or operation.

The DBC system is a supplemental system and does not replace the need for the driver to apply the brakes. Pay attention to road and traffic conditions and be prepared to depress the brakes.

See section 5 in the Owner's Manual for more information.




All Wheel Drive (AWD) System

When you select AWD LOCK mode  (indicator is illuminated on the Instrument Cluster) by pressing the AWD LOCK button , the AWD LOCK mode is designed to increase the drive power when driving on wet pavement, snow-covered roads and/or on unpaved roads.



All Wheel Drive System and AWD Lock Video

This mode is used for climbing or descending sharp grades, driving on unpaved roads, driving on sandy and muddy roads, etc., to improve traction. When the AWD LOCK mode is deactivated with the AWD LOCK button , a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.



(Type A shown. Located below gear shift)

The AWD system is a supplemental system only. It is the driver's responsibility to drive carefully depending on road and traffic conditions.

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Seat Warmers* / Ventilated Seats*†15

A Seat Warmers:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF



Seat Warmers/
Ventilated Seats
Video


B Ventilated Seats:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

(Buttons located on center panel.
Passenger side shown.)

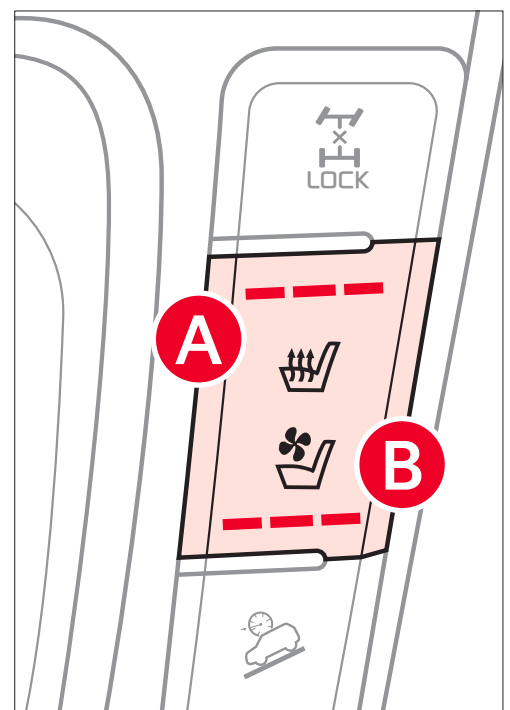

REMINDERS:

- Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information
- If the Auto Climate Control is on, the seat warmers or ventilated seats may turn on automatically based on the set temperature and ambient temperature



See section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Power Adjustable Driver's Seat*†13

Move/Press controls to adjust the seat forward/backward, seat cushion height, seatback recline or Lumbar* forward/backward.

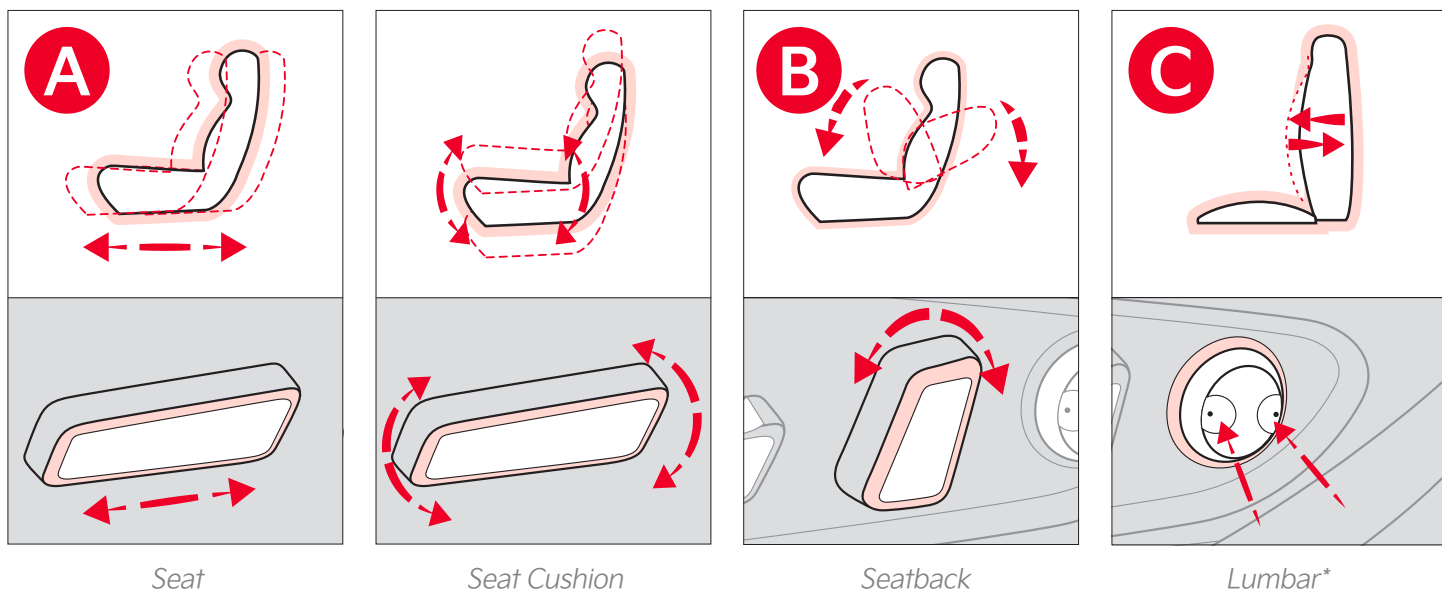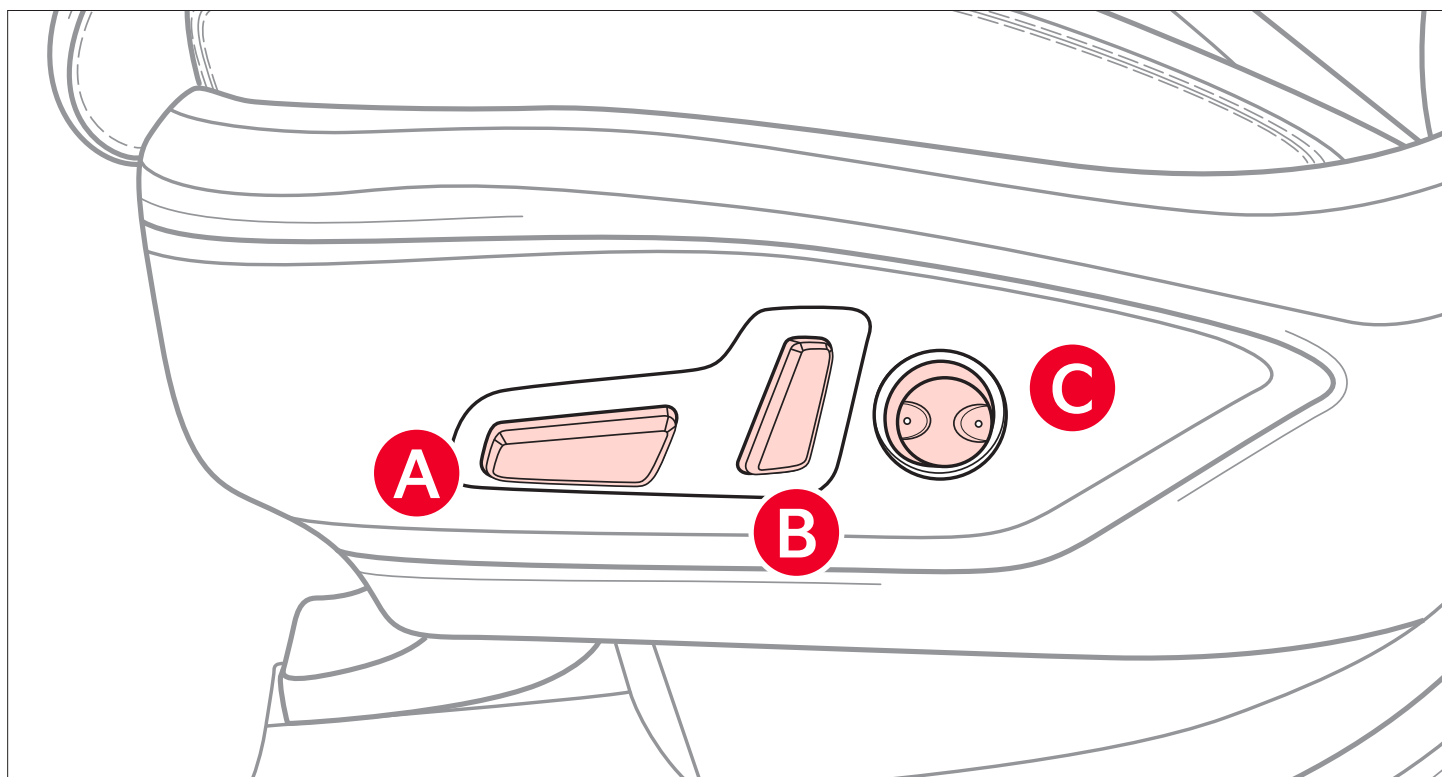

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 3 in the Owner's Manual for more information.




6-Way Manual Adjustable Driver's Seat*†13

1. Pull lever **A** to slide seat forward/backward
2. Pull lever **B** up several times to raise Seat Height. Push lever **B** down several times to lower Seat Height
3. Pull lever **C** to adjust seatback recline



Manual Seat Adjustment Video

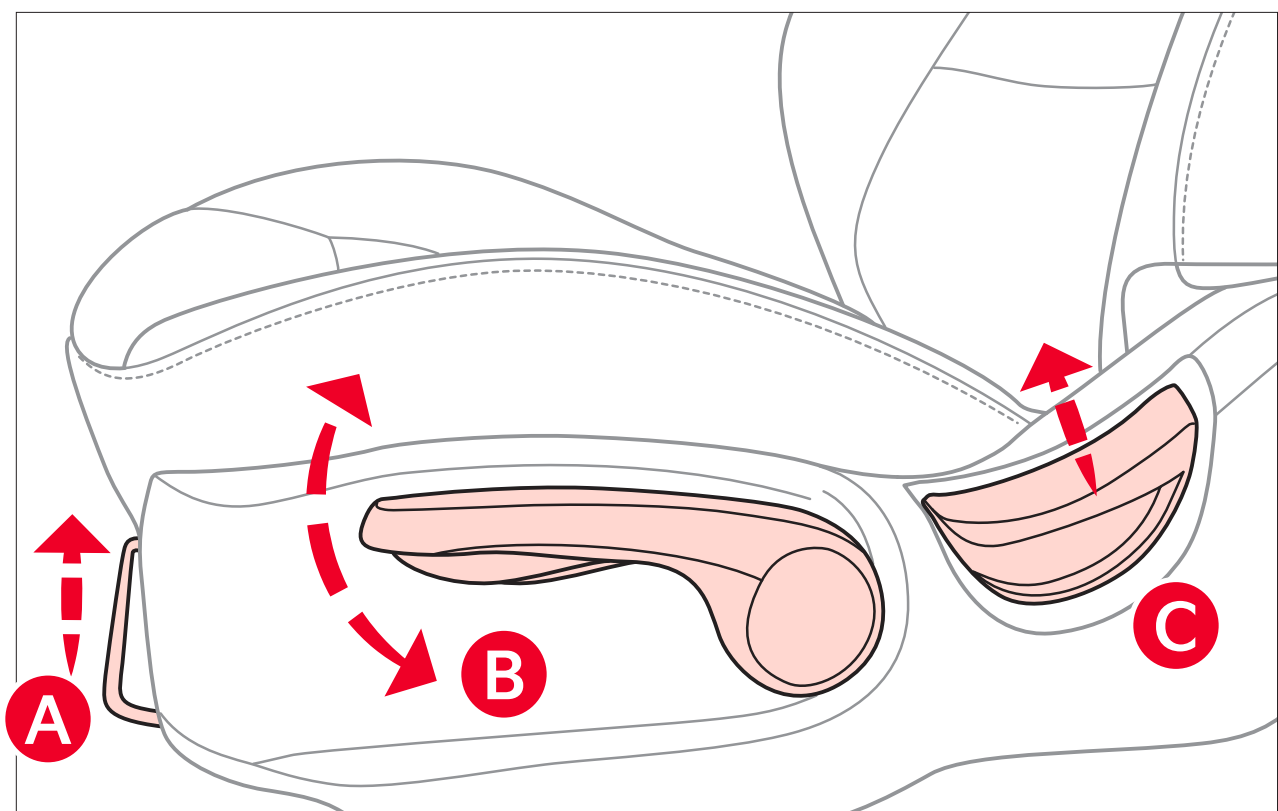

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 3 in the Owner's Manual for more information.




Folding Rear Seats^{†13}

To fold the Rear Seatback:

1. Set the front seatback in the most upright position and if needed, slide the seat forward.
2. Lower the headrest to the lowest position
3. Insert the rear seat belt buckle **A** into the pocket between the rear seatback and cushion. Insert the seatbelt webbing in the guide which prevents the seat belt from being damaged in the latch when seatbacks are placed back to the upright position
4. Pull the seatback folding lever **B** to unlock seat
5. Fold seatback toward the front of the vehicle

REMINDERS:

- When you return the seatback to its upright position, always be sure it has locked into position by pushing on the top of the seatback
- When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle

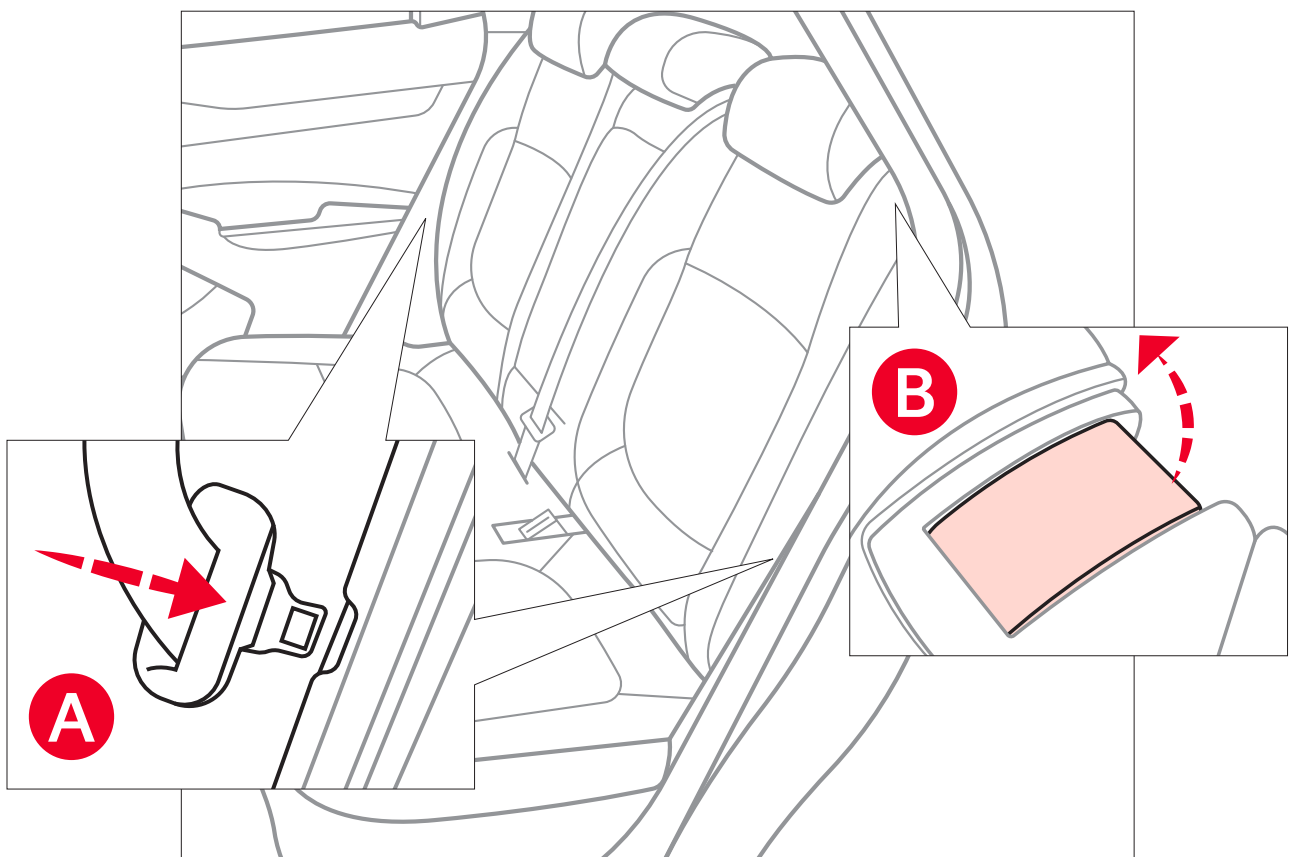


Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 3 in the Owner's Manual for more information.



Rear Occupant Alert (ROA)^{†11} with Door Monitoring


Rear Occupant Alert (ROA) can help alert the driver when ROA detects a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats” **A** and a chime will sound.



Rear Occupant Alert (ROA) with Door Monitoring Video

ROA Settings:

The factory default is set to ON. To turn the system ON or OFF, go to User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System, select SETUP, VEHICLE, CONVENIENCE, then REAR OCCUPANT ALERT and select to enable/disable.

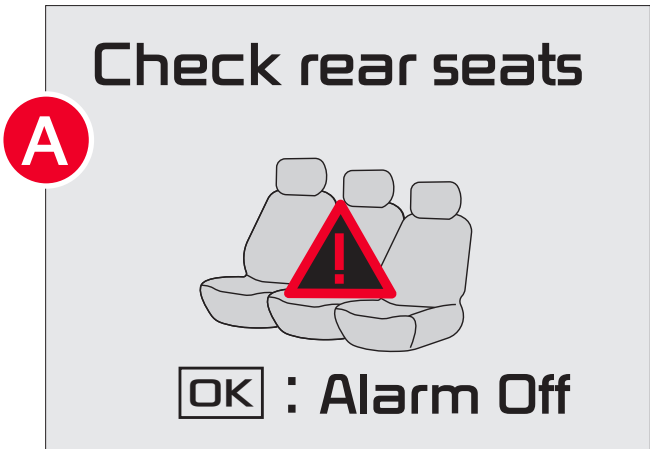

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

Rear Occupant Alert is not a substitute for one’s attention. Always check the vehicle’s interior before exiting.

See section 4 in the Owner’s Manual for more information.

Image is for illustrative purposes only and may not reflect actual feature or operation.


[†] LEGAL DISCLAIMERS ON [PAGE 134](#) | ^{*}IF EQUIPPED



Front Seat Headrest Adjustment^{†9}

To raise headrest — Pull headrest up to the desired position.

To lower headrest — Press lock **A**, then press the headrest down.

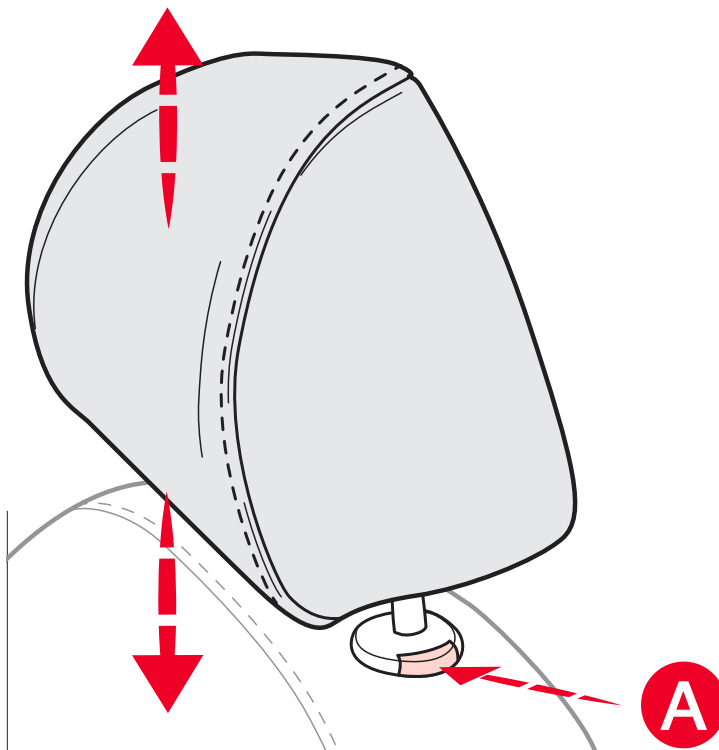

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 3 in the Owner's Manual for more information.



Unfastening Center Seat Belt


If the Seat Belt is buckled, press the release button on the buckle.

To **retract** the center seatbelt webbing

A in the 2nd row, use the lap belt tongue plate **B** to push the “release button” in the small slot on the center belt buckle **C**.



Unfastening
Center Seat Belt
Video

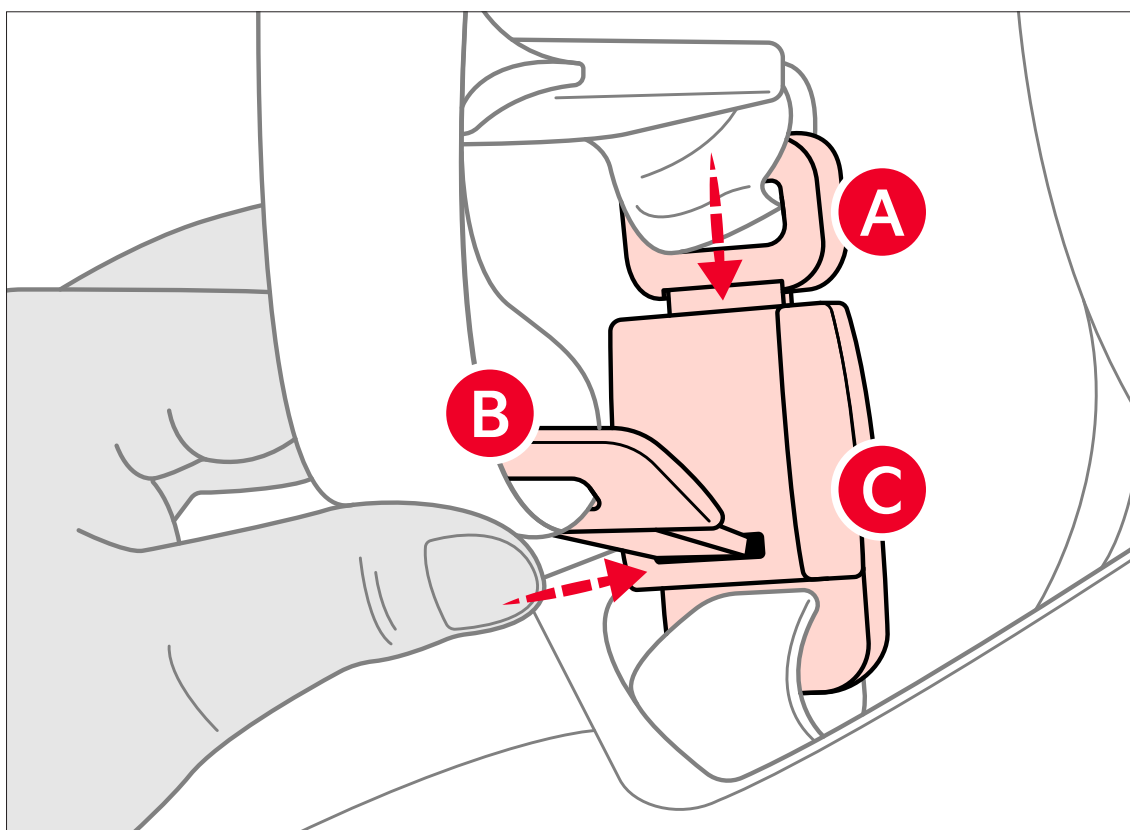

See section 3 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Smart Key with Remote Start*†7

- A** Press to lock All Doors (all doors must be closed to lock)
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Liftgate
- C** **Remote Start:** Lock the doors by pressing the door lock button **A** within 32 feet distance from the vehicle. Within 4 seconds of pressing the door lock button **A** press and hold the Remote Start button **C** for more than 2 seconds to start the vehicle. To stop the Remote Start operation, press the button **C** again. If the driver does not enter vehicle within ten minutes of starting the vehicle, the engine will automatically turn off
- D** Press and hold for more than a half-second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key



Remote Start -
Smart Key Video

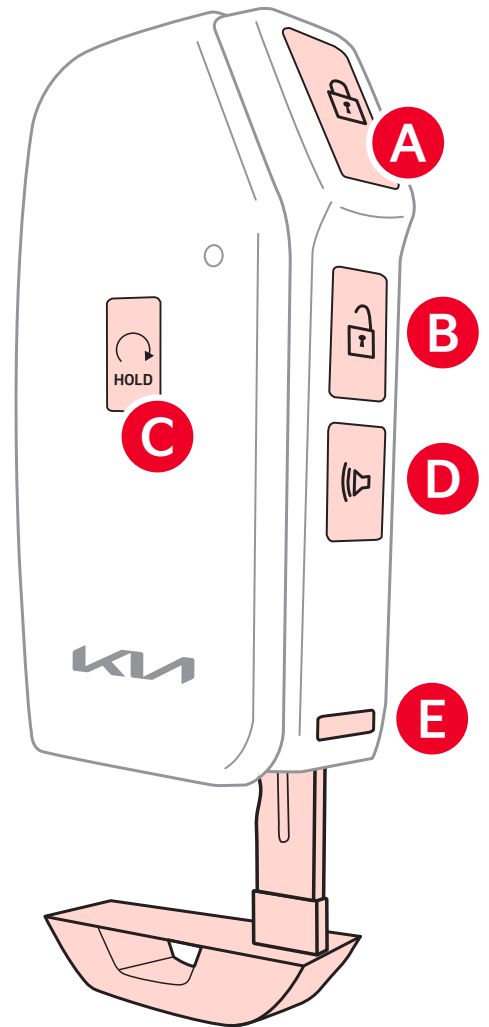

(Type A)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Remote button configuration may vary depending on vehicle options.

For more information on the Mechanical Key, please refer to section 4 in the Owner's Manual.




Smart Key with Remote Start^{*†7}

[Continued from previous page](#)

Driver's Door Lock/Unlock button **A**:

1. Press button once to unlock Driver's Door
2. Press again within 4 seconds to unlock all Doors
3. Press again to lock all Doors

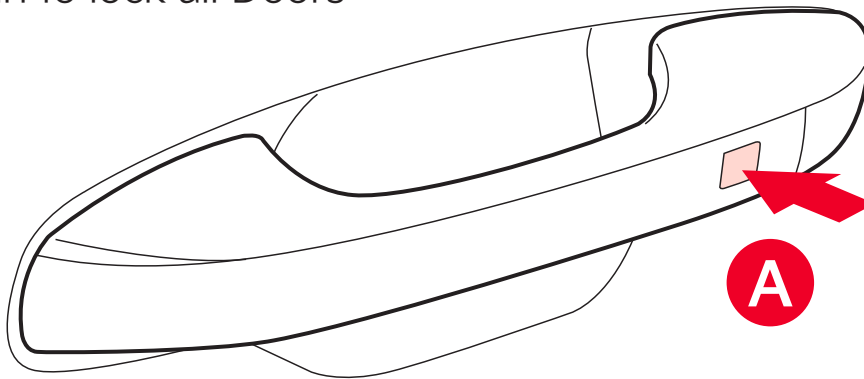

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button* (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.


Smart Key with Remote Start^{*†7}

[Continued from previous page](#)

Mechanical Key **A:** Use to unlock/lock driver's door:

1. Pull out door handle.
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **B**
3. Insert Mechanical Key **C** and turn right to unlock Driver's Door
4. Insert Mechanical Key and turn left to lock Driver's Door
5. Return keyhole cover to its original position

The Mechanical Key can also be used to turn Child-Protector Rear Door Lock.

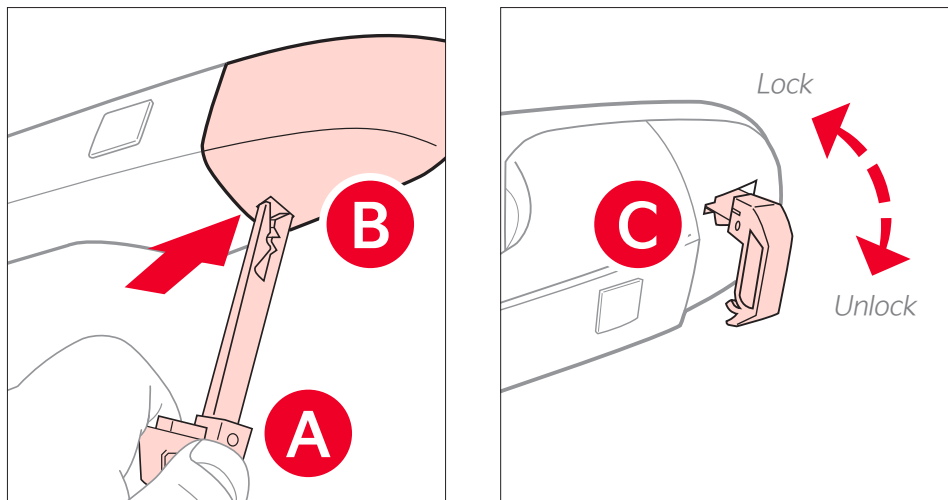

Images are for illustrative purposes only and may not reflect actual feature or operation.

Remote button configuration may vary depending on vehicle options.


Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

Digital Key 2 Touch^{*†3}


Digital Key 2 Touch, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Touch Setup:

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App and activate Kia Connect^{†1} in your vehicle’s Infotainment System (see [page 80](#))
3. Register your smartphone by going to the Vehicle Settings on the Infotainment System:
 - Press SETUP, VEHICLE, DIGITAL KEY **A**, SMARTPHONE KEY, MY SMARTPHONE KEY, and then SAVE

Digital Key 2 Touch - Part 1 Video

Digital Key 2 Touch - Part 2 Video

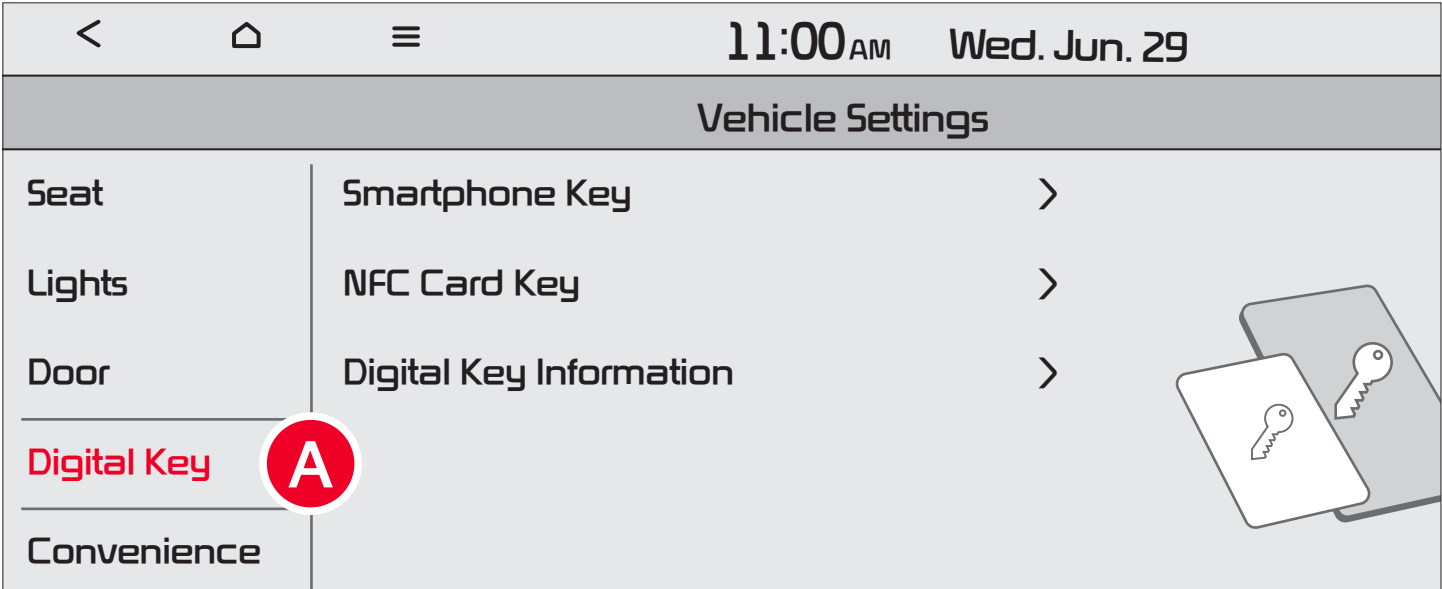

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.


† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



Digital Key 2 Touch^{*†3}

[Continued from previous page](#)

- On your smartphone, press **DIGITAL KEY A**, **CONTINUE TO WALLET APP**, then **CONTINUE** again, which will open the Wallet app. Follow the prompts to complete the registration/pairing of your smartphone (actual steps may vary between apps/smartphones)
- Place your smartphone in the authentication pad (wireless charging pad) to complete registration. Click **Save** on the Infotainment System screen and a message will appear showing the process is in place
- When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the **Digital Key** in your iPhone® Wallet or Samsung™ Wallet
- When in the Wallet app, click on the **Digital Key** and select the menu icon to adjust other settings or use other features

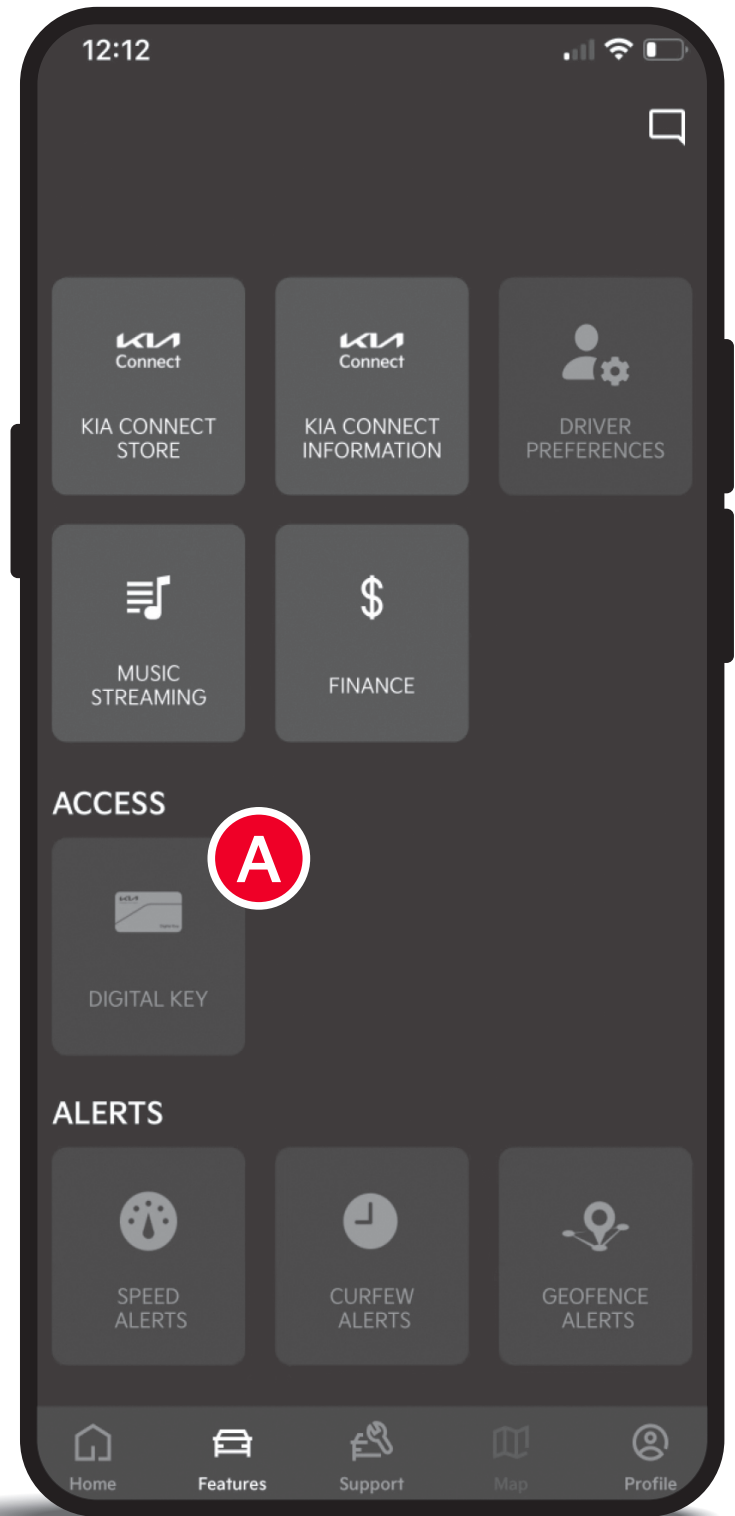

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Digital Key 2 Touch^{*†3}

[Continued from previous page](#)


Using your Digital Key 2 Touch:

1. To lock or unlock your vehicle with Digital Key, position smartphone to door handle until smartphone vibrates
2. To start your vehicle with Digital Key 2 Touch, place registered smartphone on the authentication pad **A** (wireless charging pad; see below), press the brake pedal and the Start/Stop button

Sharing your Digital Key 2 Touch:

1. Open the Wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Under PEOPLE, click on **Invite** and follow the prompts to share your Digital Key with one of your contacts on your Apple iPhone®/Watch® or Samsung® phone (actual steps may vary between apps/smartphones)

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple® to Apple® and Samsung® to Samsung®.

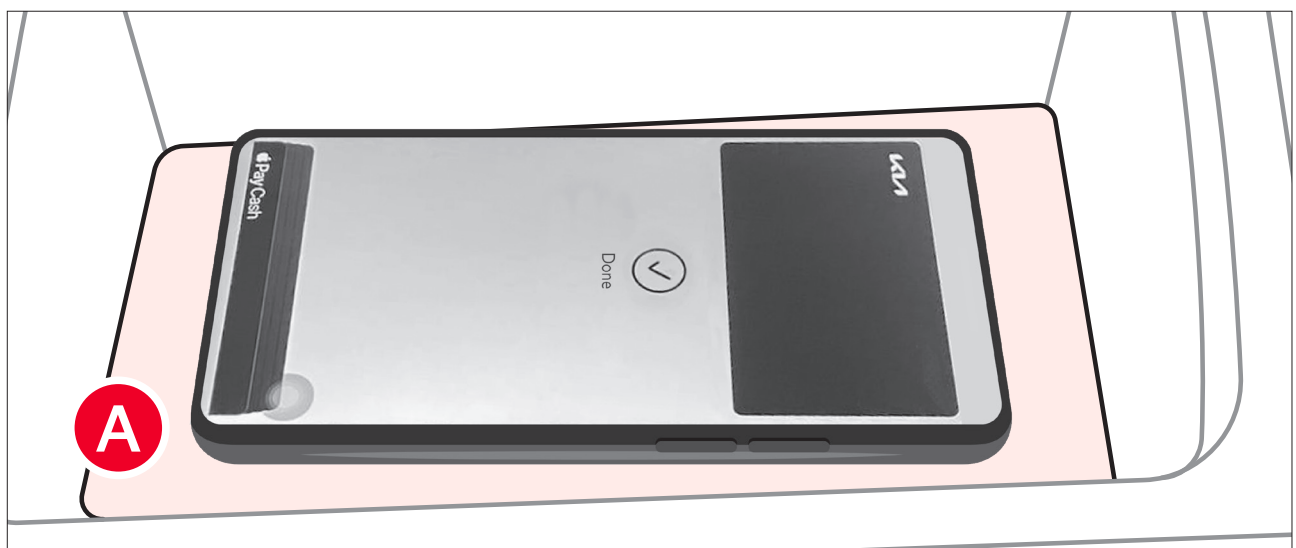

(Charging pad located in center console)

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.




Digital Key 2 Touch*†3

[Continued from previous page](#)

Revoking shared Digital Key access: You can also delete a digital key using the Wallet app on your smartphone. Open the Wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Under PEOPLE, click on the contact to revoke. Then click on **Revoke Access** (actual steps may vary between apps/smartphones).

To delete shared keys and the owner key: Go to the Vehicle Settings* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEY and SMARTPHONE KEY. Then press DELETE.

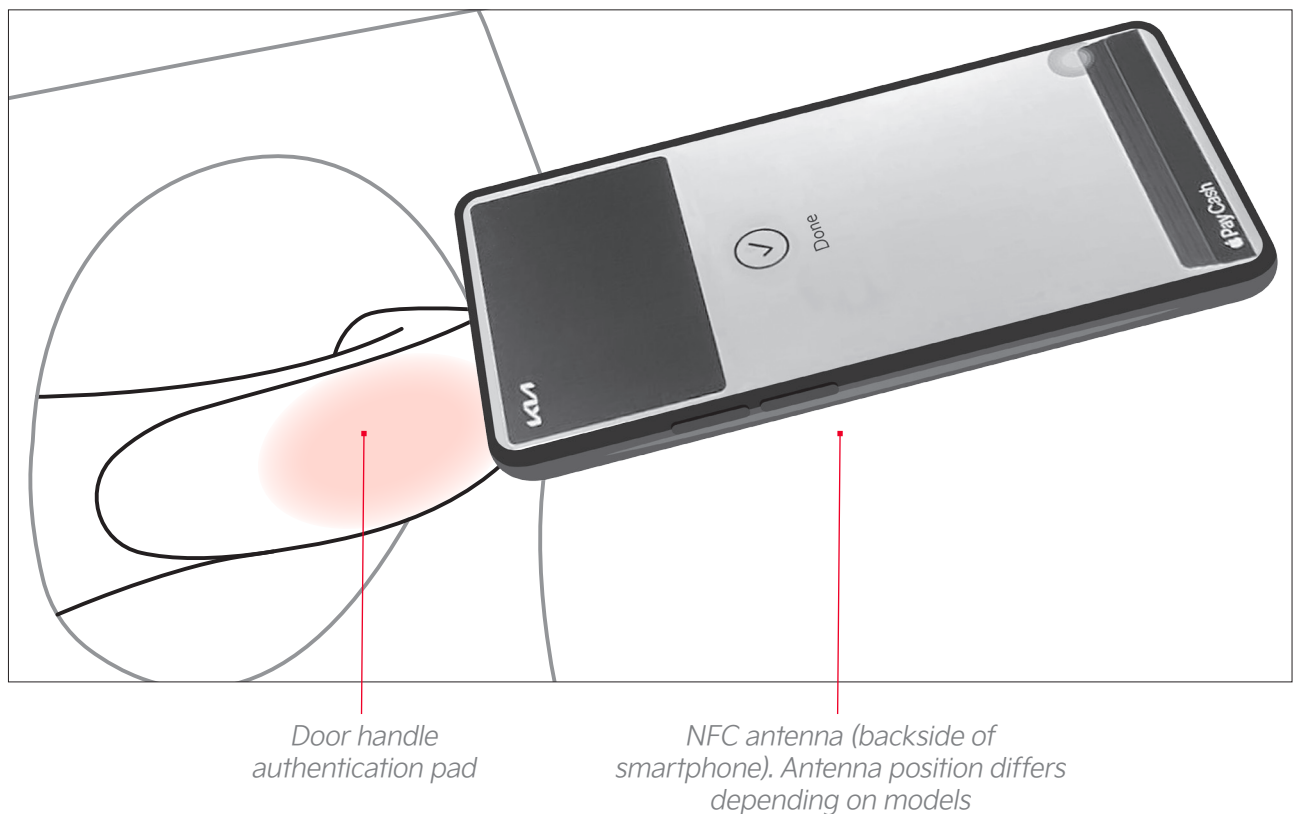

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Digital Key 2 Touch^{*†3}

[Continued from previous page](#)

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smartphone digital key does not operate, move the smartphone around the door handle slowly until it vibrates

REMINDERS:

- Digital Key 2 Touch is currently only compatible with Apple iPhone® & Watch® and Samsung® smartphones
- Your iPhone® Wallet or Samsung® Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 Touch setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smartphone is removed from the in-vehicle authentication pad
 - Changing the Infotainment System screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung® smartphones

Currently compatible devices:

- For **Apple iPhone®** (Ensure the device has the latest version of iOS):
 - iPhone® XS or later
- For **Apple Watch®** (Ensure the device has the latest version of watchOS):
 - Apple Watch® Series 5 or later
- For **Samsung® Phones:** Ensure the device has the latest version of Android® OS and latest application version of Samsung® Wallet)
 - Galaxy® S20 or later
 - Galaxy® Note20 5G or later
 - Galaxy® Z Flip 5G or later
 - Galaxy® Fold 2 or later



Remote Keyless Entry (Folding Key)*


- A** Press the release button to unfold the key
- B** Press to lock all doors (all doors must be closed to lock)
- C** Press to unlock driver's door.
Press twice in 4 seconds to unlock all doors and Liftgate
- D** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

REMINDERS:

- Remote button configuration may vary depending on vehicle options
- The Liftgate does not automatically open when the unlock button **C** is pressed; The liftgate will unlock, then lift manually to open the liftgate



Kia Smart & Folding Key Fobs Video

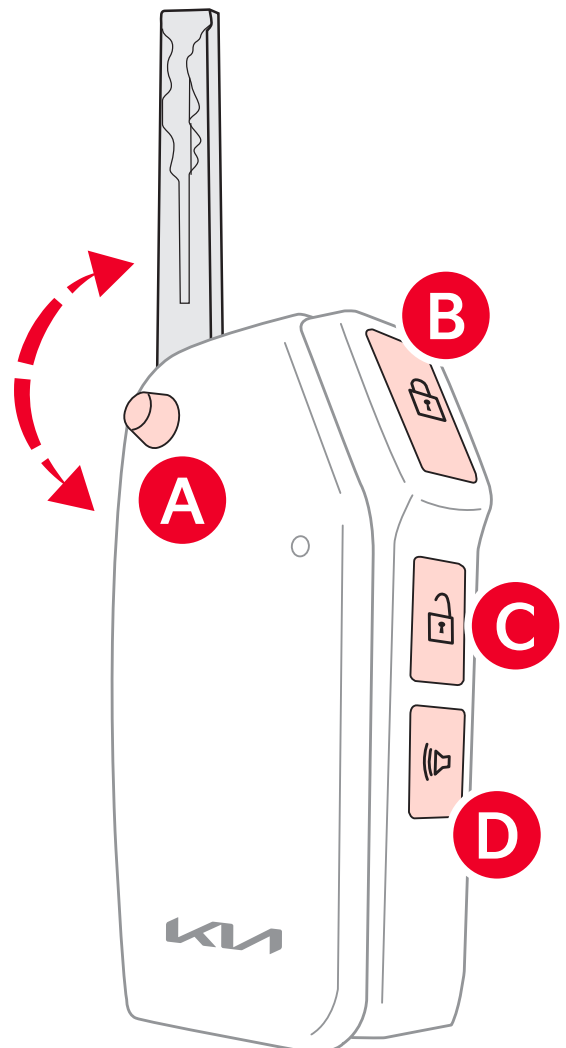


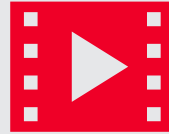
Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.





Fuel Cap / Malfunction Indicator (Check Engine Light)

To access the Fuel Cap, pull the Fuel Filler Door Open Lever **A** inside the vehicle (at floor level, left of Driver's Seat). Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.



**Kia Fuel
Cap Video**

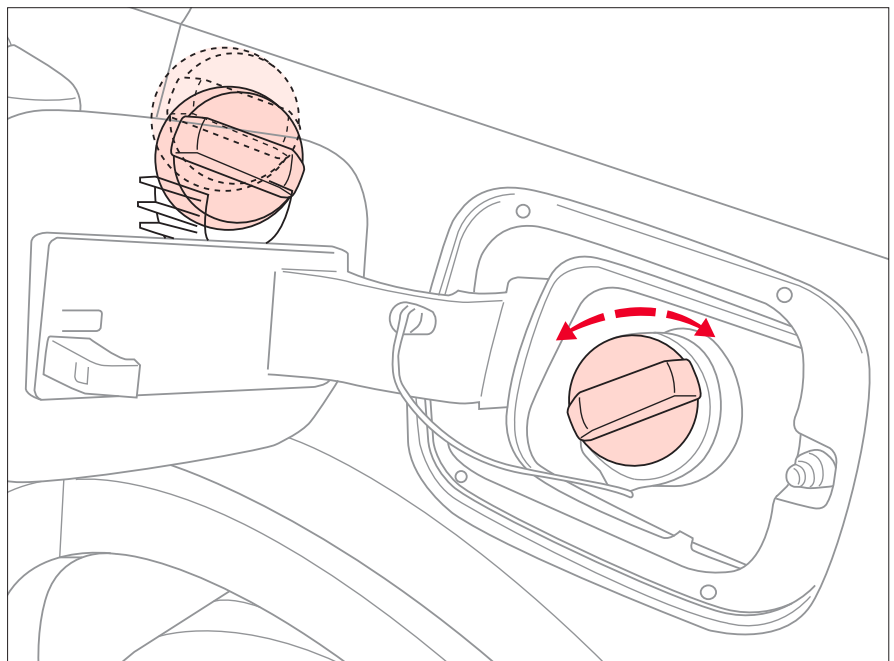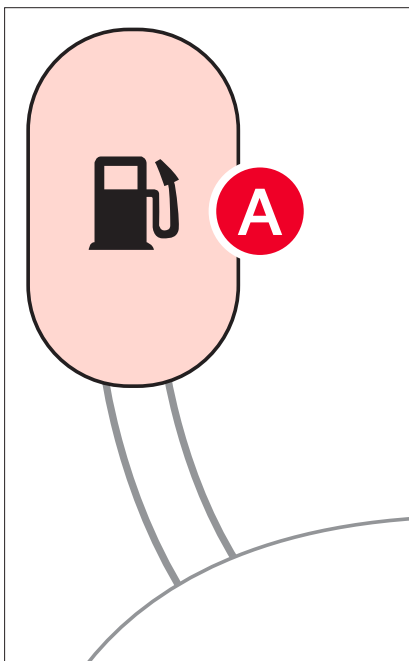

See section 4 in the Owner's Manual for more information.

REMINDER: It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back.

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Fuel Filler Door Release

To open the Fuel Filler door:


- Pull the Fuel Filler Door Open Lever **A** inside the vehicle (at floor level, left of Driver's Seat)
- Pull the Fuel Filler door to fully open **B**
- To open the Fuel Cap, turn it counterclockwise **C**




Fuel Filler Lid Release Video

QUICK TIP

Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **D**.

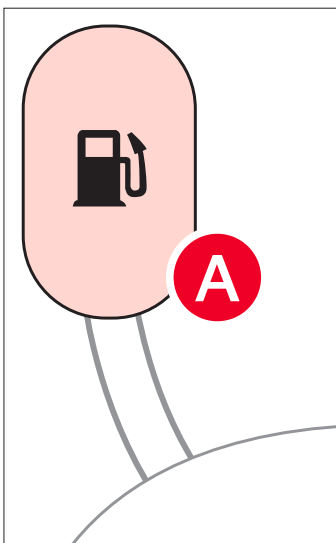

(Fuel Filler Door Release located at floor level, left of Driver's seat.)

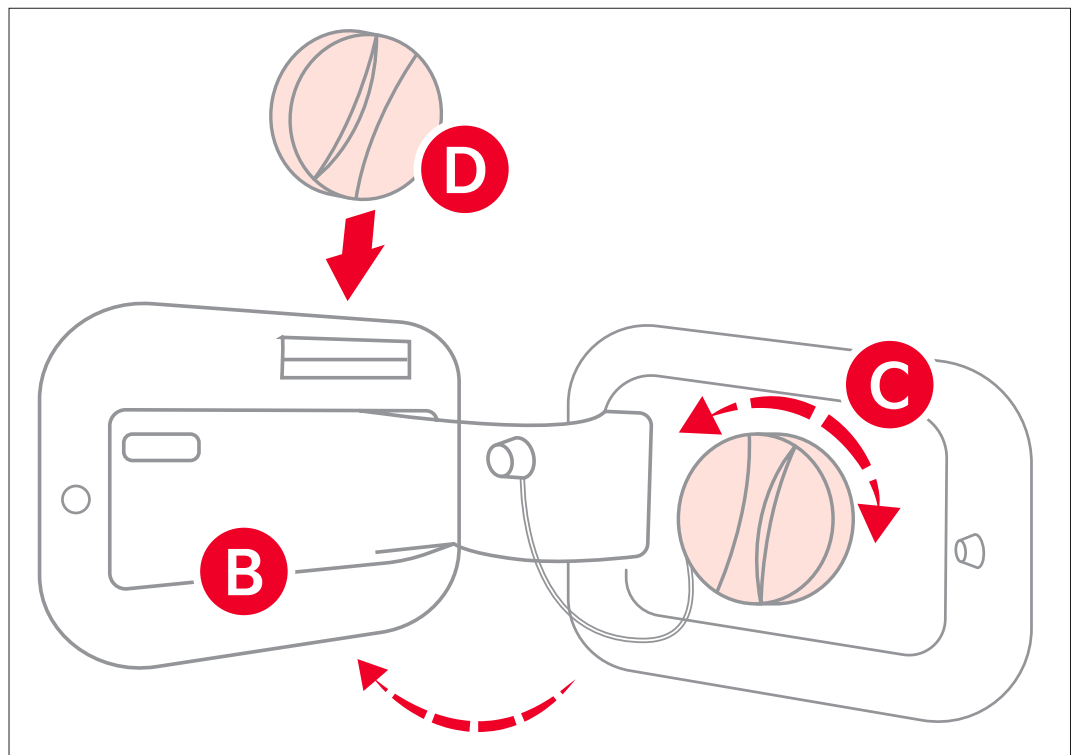

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.




Hood Release Lever and Latch

Opening the Hood:

- Pull the Hood Release Lever **A** to unlatch the Hood
- In the front of the vehicle, lift the Hood slightly, push the secondary Latch to the front inside of the Hood's center and lift the Hood
- Be aware that the engine may be hot

Closing the Hood:

Lower the Hood first to about 12 inches away from being closed. Then, press down to securely lock in place.

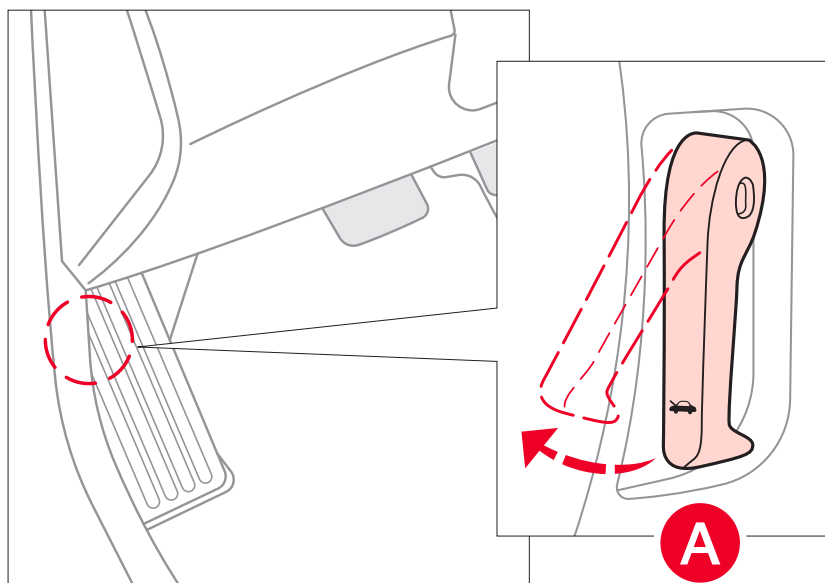

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.





Map/Room Lamps


Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button* is OFF.


Map/Room Lamp Operation

- Press the lens/ring **A** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger
- Press button  **B** to turn all the Map/Room Lamps ON/OFF
- Press button  **C** turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF

Rear Room Lamps - Press the button **D** to turn the rear passenger lamp ON/OFF.

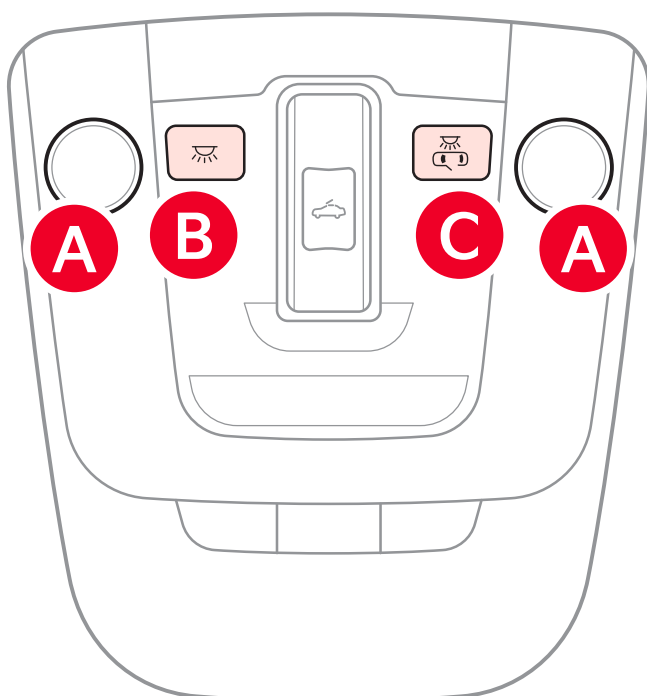

(Type B)

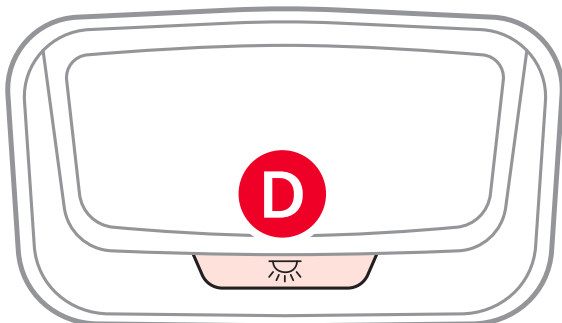

(Rear Room Lamp, Type A)

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Sunroof Operation*

The sunroof operation is controlled through a multidirectional switch. The Engine Start/Stop button* needs to be in the ON position to operate the sunroof glass and sunshade.



**Sunroof
Operation
Video**


To slide the sunroof glass and sunshade:

- Auto Open: Slide the switch rearward to the farthest position (second detent)
- Auto Close (sunroof glass only): Press the switch **A** forward to the farthest position (second detent)

To slide the sunshade only, manually slide the sunshade open and closed by hand.

To tilt the sunroof glass:

- Tilt open: Press switch **A** upward
- Tilt closed: Press switch **A** forward

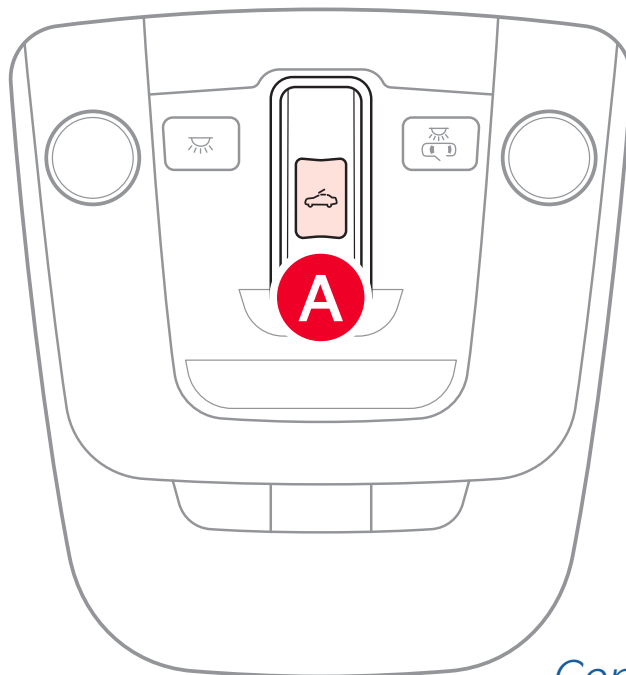

[Continued on next page](#)

Images are for illustrative purposes only and may not reflect actual feature or operation.



Sunroof Operation*

[Continued from previous page](#)

QUICK TIPS

- To stop the sunroof movement, press the sunroof switch in any direction
- While driving with the rear windows down or with the sunroof in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by partially lowering both front windows or partially closing the sunroof

REMINDERS:


- If the sunroof is open when ignition is turned off (Smart Key), ignition key removed or the driver's door opened, a warning will sound and display on the Instrument Cluster
- The sunshade cannot be closed while sunroof is open
- Do not adjust the sunroof glass or sunshade while driving. This could result in loss of control of the vehicle

Refer to section 4 in the Owner's Manual for more information.



Sun Visor^{†17}

Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.*

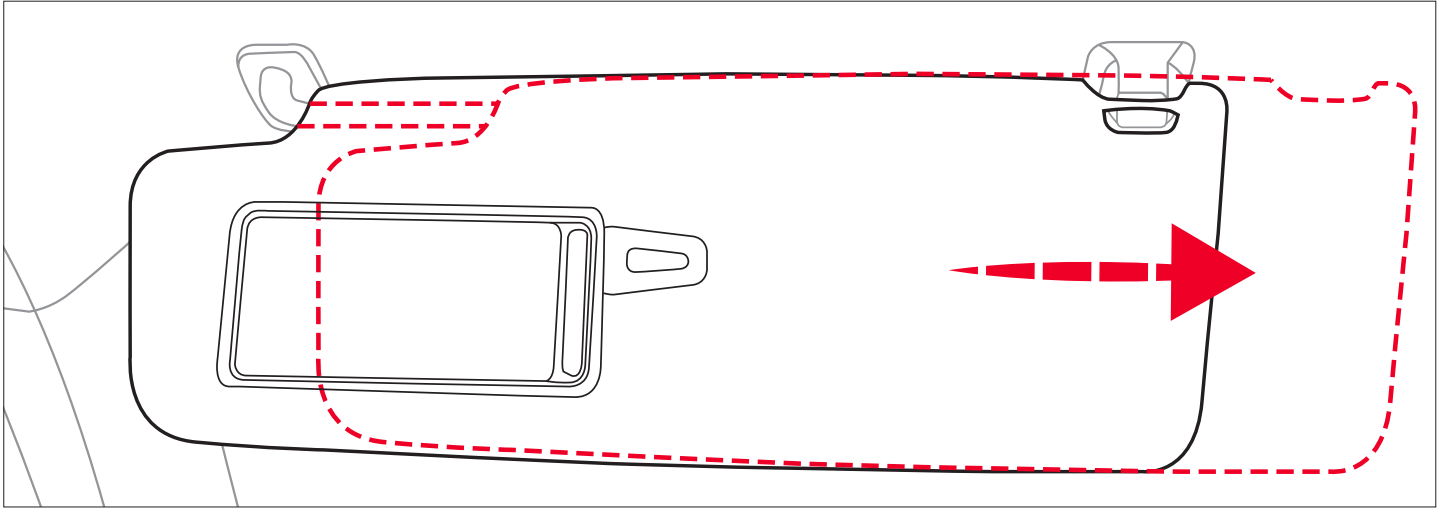

REMINDERS:

- The Sun Visor may not shield all direct light
- The Sun Visor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sun Visor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sun Visor around to or from the front or side windows
- When closing, be mindful of any objects or persons

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Manual Liftgate^{*†21} / Liftgate Release Button

Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.

QUICK TIP


The liftgate unlocks automatically when the Smart Key fob^{*} is within close proximity to the vehicle, then can then be opened manually.




Liftgate Buttons and Operation Video



Manual Liftgate & Key Fob Controls Video

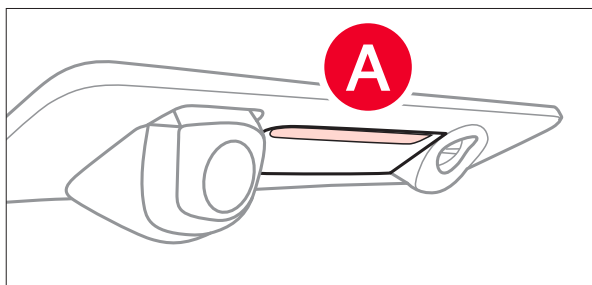

(Liftgate release)

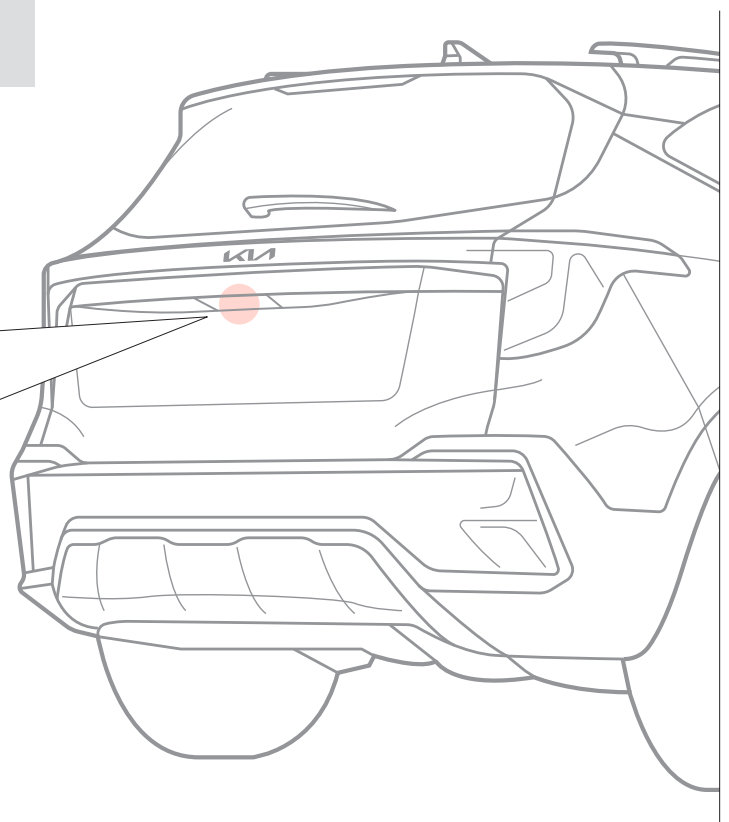



Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.




Power Liftgate^{*†21}

- **Smart Key:** To automatically open or close the Power Liftgate with the Smart Key fob, press and hold the Power Liftgate Open/Close button **A** for more than 1 second
- **Inside the vehicle:** To automatically open or close the Power Liftgate from inside the vehicle, press and hold the Power Liftgate Open/Close button **B**. If you release the button while in operation, the power liftgate operation will stop and a warning will sound for 5 seconds
- **Outside the vehicle:** To automatically open the Power Liftgate from the exterior of the vehicle, press the Power Liftgate Release Button **C**

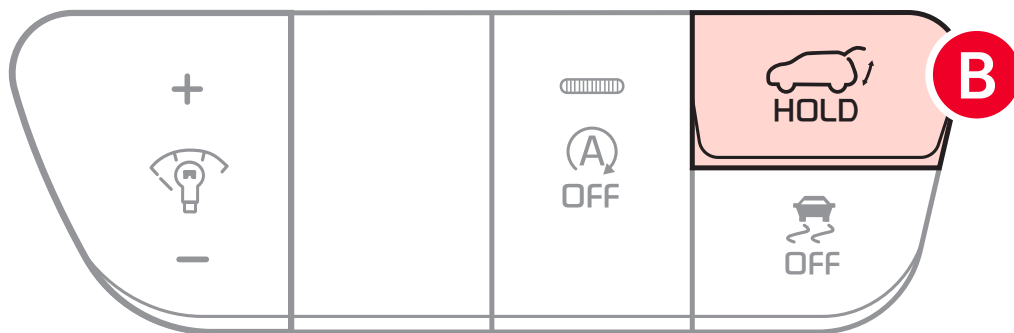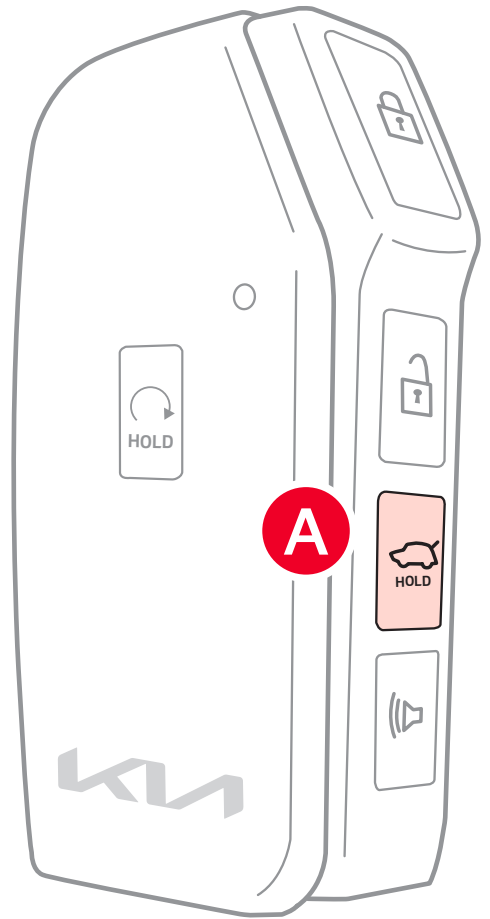

(Buttons located on left of Steering Wheel)

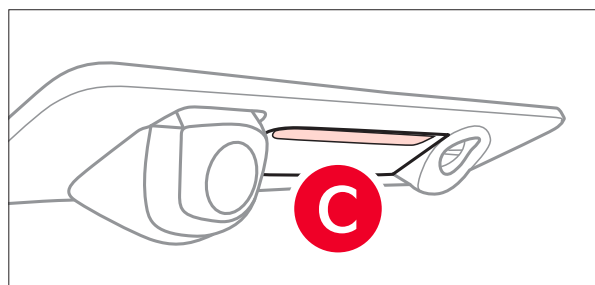

(External Liftgate release)

[Continued on next page](#)


Images are for illustrative purposes only and may not reflect actual feature or operation.



Power Liftgate^{*†21}

[Continued from previous page](#)

- **Outside the vehicle:** To automatically close the Power Liftgate from the rear of the vehicle, press the Power Liftgate Close Button **A** on the inside of the Liftgate lid. If you release the Power Liftgate button, the operation will stop

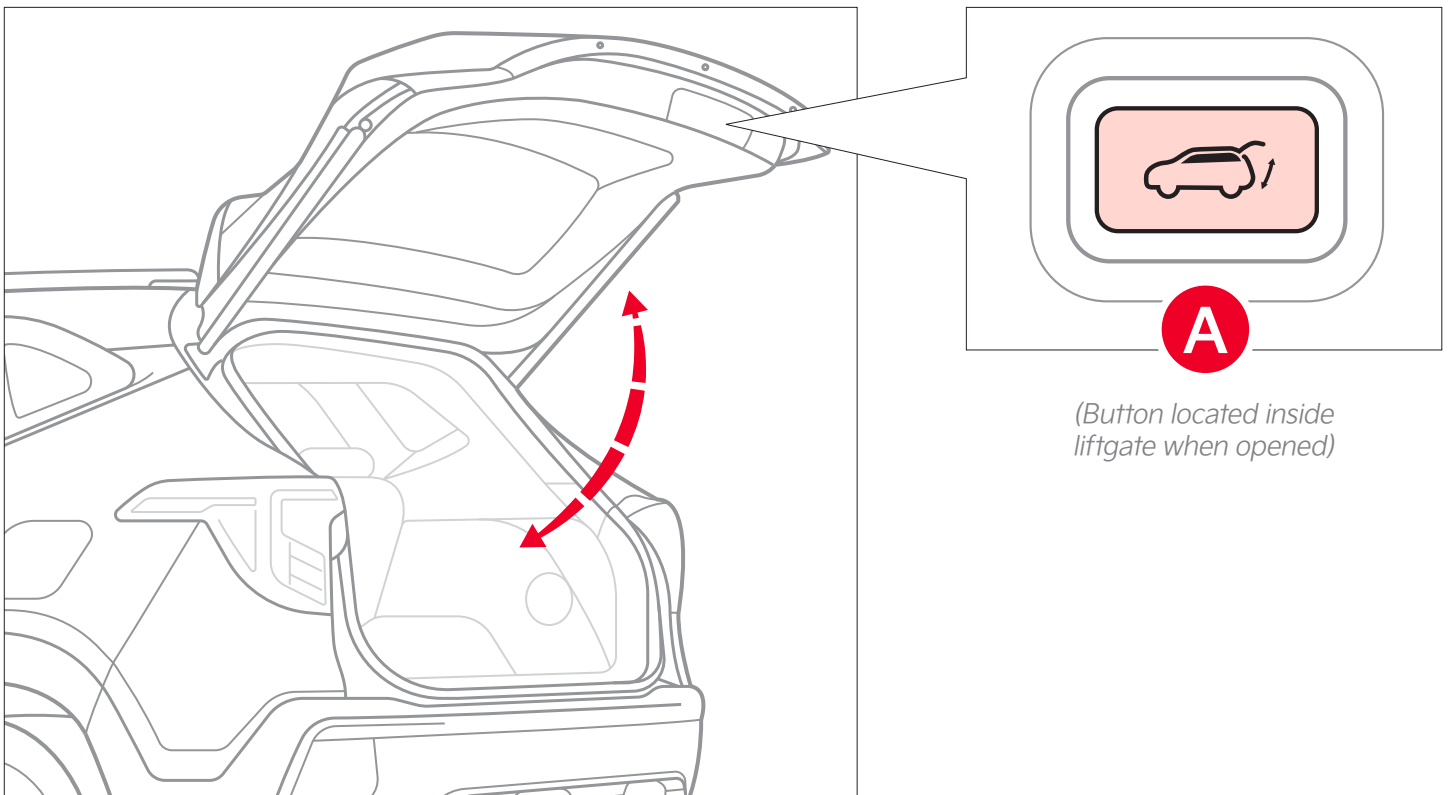


REMINDER: In some instances, the Power Liftgate may need be reset. Refer to section 4 in the Owner's Manual.

Images are for illustrative purposes only and may not reflect actual feature or operation.



Smart Power Liftgate with Auto Open^{*†21}

The Smart Liftgate with Auto Open can open the Liftgate automatically when the driver approaches or leaves the vehicle. For Smart Liftgate with Auto Open to operate, the Smart Key must be enabled.

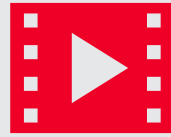

Smart Power Liftgate Operation, Opening Height/Speed Adjustment Video

Automatically open: When the Smart Key is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Liftgate.

The Smart Liftgate with Auto Open feature is off by default. To enable on certain models, go to User Settings in the Instrument Cluster modes. Select DOOR and SMART LIFTGATE. On other models, press the **SETUP** key on the Infotainment System, followed by pressing **VEHICLE** on the screen. Then press DOOR and SMART LIFTGATE.

QUICK TIPS

- During the Smart Liftgate with Auto Open alert, the Smart Liftgate with Auto Open can be deactivated with the Smart Key by pressing any button on the key fob or moving away from the detection area
- The open height and speed can be adjusted. For information on how to set the open height and speed, see your owner's manual


[*Continued on next page*](#)

Smart Power Liftgate with Auto Open^{*†21}

[Continued from previous page](#)

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Liftgate with Auto Open feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage, or move out of the detection area, to deactivate the Smart Liftgate with Auto Open function
- When the ignition is on, the Smart Liftgate with Auto Open will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Liftgate with Auto Open to operate
- Ensure obstacles and people are out of the way of the Liftgate

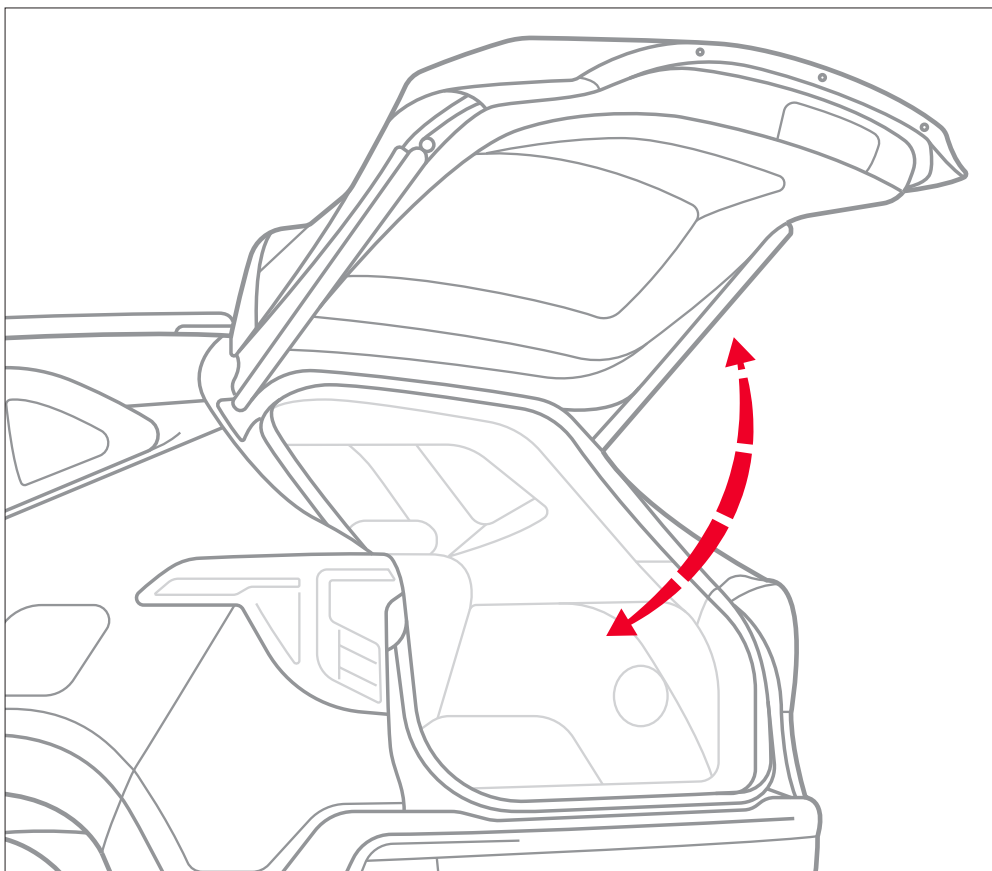

Images are for illustrative purposes only and may not reflect actual feature or operation.


See section 4 in the Owner's Manual for more information.



Seat Belts^{†14}

To properly fasten your seat belts:

- Insert the belt tongue plate **A** into the buckle **B** until it clicks
- Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

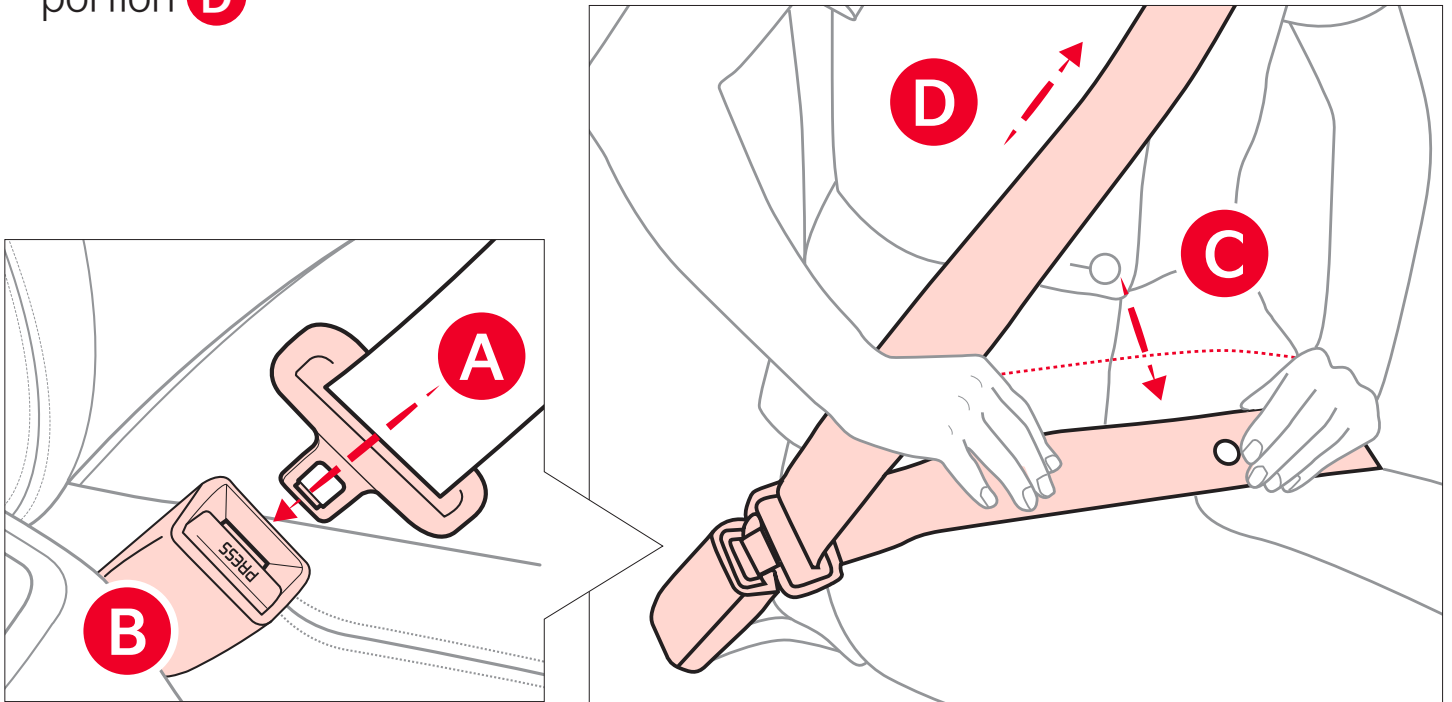

QUICK TIPS

The Seat Belt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

Refer to section 3 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation. For more information about the seat belts and airbags in the vehicle, please refer to the Owner's Manual.



Occupant Detection System (ODS)^{†10} / Passenger Airbag Off Indicator^{†14}

ODS is designed to detect the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” indicator will illuminate.



(Located on overhead console)

REMINDERS:

- Do not allow any passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat
- Do not place objects in the passenger seat, which may interfere with ODS operation and incorrectly detect a passenger

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 3 in the Owner's Manual for more information.




Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.



**LATCH Child
Restraint System
Video**

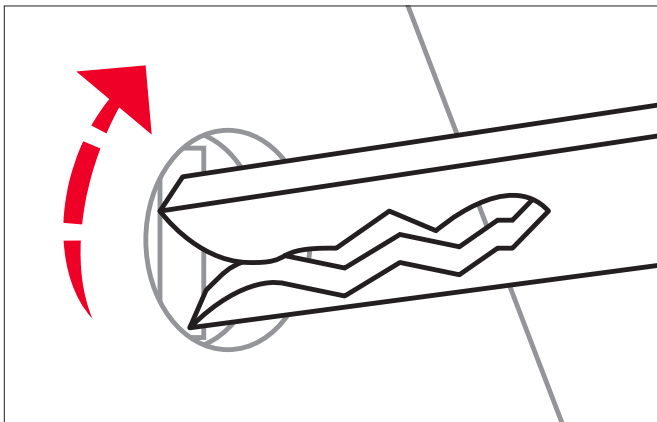

(Located on rear edge of rear passenger doors)

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 3 in the Owner's Manual for more information.

 SELTOS 2.0L NON-TURBO NORMAL MAINTENANCE SCHEDULE	MAINTENANCE INTERVALS (UP TO 64,000 MILES)^A							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Rotate tires	P	P	P	P	P	P	P	P
Engine oil & filter (Full Synthetic) ^C	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Air cleaner filter (engine)	I	I	R	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
12V Battery Condition	I	I	I	I	I	I	I	I
Vacuum hoses	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/ refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Cooling system	I	I	I	I	I	I	I	I
Parking brake (hand type)	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Propeller shaft (AWD)		I		I		I		I
Fuel tank air filter ^{†D}		I		I		I		I
Fuel cap and fuel tank		I		I		I		I
Drive belts ^E						I	I	I
Transfer case / rear differential oil (AWD) ^F					I			

P = Perform

R = Replace

I = Inspect^B

See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed. **For Turbo maintenance, see [page 133](#).**

- ‡ If equipped
- A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule. For Turbo Maintenance intervals, see inside.
- B. And, if necessary, adjust, correct, clean or replace.
- C. Engine oil and engine oil filter: As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions.

- D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- E. The drive belt should be replaced when cracks occur or tension is reduced excessively.
- F. If the vehicle has been submerged in water or in a flooded area, the fluids should be changed as a precaution.



**Kia Full
Synthetic
Oil Video**

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into the Kia Access app (Vehicles equipped with Kia Connect only - See [page 80](#) for setup information).

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED

<div>  <div> SELTOS 1.6L TURBO GDI NORMAL MAINTENANCE SCHEDULE </div> </div>	MAINTENANCE INTERVALS (UP TO 64,000 MILES) ^A							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil & filter (Full Synthetic) ^D	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Air cleaner filter (engine)	I	I	R	I	I	R	I	I
Brake fluid	I	I	I	I	I	R	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
12V Battery Condition	I	I	I	I	I	I	I	I
Vacuum hose	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/ refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Parking brake (hand type)		I		I		I		I
Cooling system	I	I	I	I	I	I	I	I
Intercooler in/out hose, air intake hose	I		I		I		I	
Drive shafts and boots		I		I		I		I
Fuel lines, hoses and connections		I		I		I		I
Propeller shaft (AWD)		I		I		I		I
Fuel tank air filter ^{†D}		I		I		I		I
Fuel cap and fuel tank		I		I		I		I
Drive belts ^F						I	I	I
Transfer case / rear differential oil (AWD) ^G					I			
Spark plugs						R		
Valve clearance ^E							I	

P = Perform

R = Replace

I = Inspect^B

See your Owner’s Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed. **For non-Turbo maintenance, see [page 132](#).**

- ‡ If equipped

A. See the Owner’s Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Engine oil and engine oil filter: As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of

- the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions.
- E. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. Have an authorized Kia dealer perform the operation.
- F. The drive belt should be replaced when cracks occur or tension is reduced excessively.
- G. If the vehicle has been submerged in water or in a flooded area, the fluids should be changed as a precaution.



Kia Full
Synthetic
Oil Video

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect^{†1} account by logging into the Kia Access app (Vehicles equipped with Kia Connect^{†1} only - See [page 80](#) for setup information).

† LEGAL DISCLAIMERS ON [PAGE 134](#) | *IF EQUIPPED



LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. Kia Connect:** Purchase/lease of certain 2025 and newer Kia vehicles with Kia Connect includes a complimentary 3-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 3-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- 2. Kia Access App:** Kia Access app for smartphone and smartwatch requires enrollment of vehicle in Kia Connect. Remote features require a KiaConnect subscription, a compatible smart device, and a wireless signal with good coverage to function. Normal cellular service rates may apply. Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command. Remote feature support varies by model, model year and trim; remote climate control not supported on 2019 Optima LX and 2020 Telluride LX and S and other vehicles not equipped with fully automatic temperature control.
- 3. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone®, SiriusXM®, Sportmatic®, Digital Key 2 Touch:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
- 4. Driver Assist Features: Blind-spot Collision-Avoidance Assist (BCA), Rear Cross-traffic Collision-Avoidance Assist (RCCA), Lane Following Assist (LFA), Lane Keeping Assist (LKA), Forward Collision-Avoidance Assist (FCA), Safe Exit Warning (SEW), Highway Driving Assist (HDA), Intelligent Speed Limit Assist (ISLA), Manual Speed Limit Assist (MSLA), Reverse Parking Distance Warning (PDW), Rear View Monitor (RVM), Surround View Monitor (SVM), Rear Occupant Alert (ROA), Leading Vehicle Departure Alert (LVDA), Navigation-based Smart Cruise Control (NSCC), Smart Cruise Control (SCC), Cruise Control (CC):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 5. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 6. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 7. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 8. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 9. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 10. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats.
- 11. Rear Occupant Alert (ROA) with Door Monitoring:** When engaged, ROA with Door Monitoring is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
- 12. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
- 13. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 14. Seat belts / airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
- 15. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 16. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 17. Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
- 18. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 19. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
- 20. The myQ logo** is a registered trademark of The Chamberlain Group, Inc.
- 21. Manual Liftgate/Smart Power Liftgate*:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.

© 2025 Kia America, Inc. All rights reserved.
Consumer - Roadside Assistance^{†12}: 1-800-333-4KIA (4542)

*IF EQUIPPED